
Operating Information

The P5150 Probe is a high impedance probe with 50X attenuation and a compensation range of 10 to 25 pF. The probe is designed for use with Tektronix TPS2000 series floating oscilloscopes with high input impedance (1 M Ω).

Connect the probe as shown in the illustrations below.

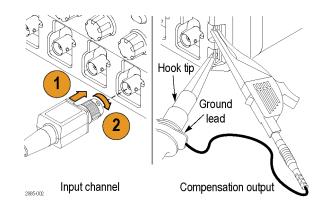

P5150 500 MHz 50X High Voltage Probe

Instructions



 
Compensating the Probe

Due to variations in oscilloscope input characteristics, the low-frequency compensation of the probe may need adjustment after you move the probe from one oscilloscope channel to another.

- 1. Connect the probe to the oscilloscope channel that you plan to use for your measurements.
- 2. Connect the probe to the probe compensation output terminals on the oscilloscope front panel.

WARNING. To avoid electric shock, only connect to the Probe Comp signal on the oscilloscope when making this adjustment. To avoid electric shock, only use the insulated adjustment tool when making compensation adiustments.

3. Push AUTOSET or otherwise adjust your oscilloscope to display a stable waveform.




4. Adjust the trimmer in the probe until you see a perfectly flat-top square wave on the display. (See illustration.)

Standard Accessories


The probe includes the accessories shown below.

WARNING. Do not substitute accessories from other products for use with this probe. Only use the accessories that are included with this probe.

To avoid electric shock when using the probe or accessories, keep your fingers behind the finger guard of the probe body and away from the shaded area shown in the accessory illustrations below.

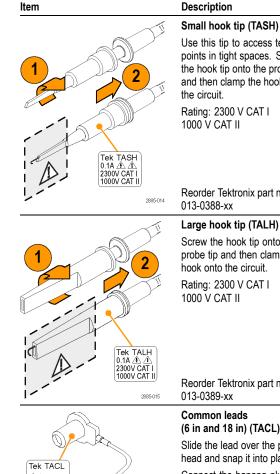

| 0.1A / 2885-011

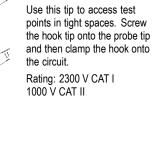

Reorder Tektronix part number 013-0388-xx


Large hook tip (TALH)

 
Screw the hook tip onto the probe tip and then clamp the hook onto the circuit. Rating: 2300 V CAT I 1000 V CAT II

Reorder Tektronix part number 013-0389-xx

Common leads (6 in and 18 in) (TACL) Slide the lead over the probe head and snap it into place.

Connect the banana plug end directly to your circuit common. or use the crocodile clip included with the probe. Reorder Tektronix part numbers: 6 inch: 196-3526-xx 18 inch: 196-3527-xx

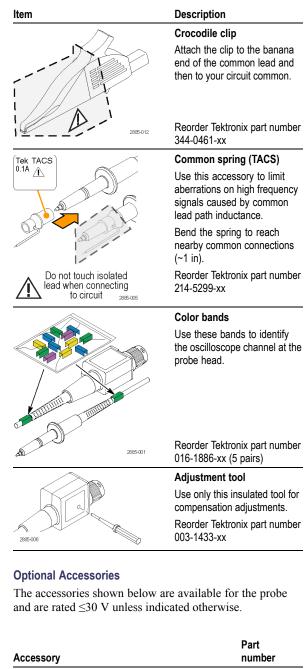







Service Information


Performance verification and adjustment procedures are available on the Tektronix Web site. Go to www.tektronix.com/manuals and enter P5150 in the search field.


Specifications

Table 1: Electrical and mechanical specifications

Bandwidth (–3 dB)	500 MHz
System rise time (typical)	<700 ps
System input capacitance	3.8 pF
Compensation range	10–25 pF
Propagation delay	~8.7 ns
System attenuation accuracy	50:1 ±1.75%
System input resistance @DC	40 ΜΩ
Cable length	2 m
Maximum input voltage (see Performance Graphs)	1000 V_{RMS} CAT II, 2500 V_{pk} Floating: 600 V_{RMS} CAT II

Performance Graphs

 

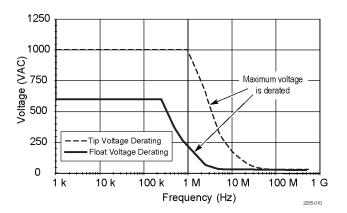

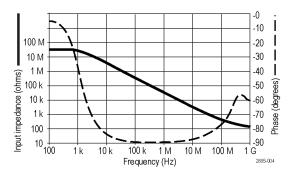


Table 2: Environmental energifications

Table 2: Environmental specifications		
Characteristics	Description	
Temperature		
Operating Nonoperating	0 °C to +50 °C (+32 °F to +122 °F) -40 °C to +71 °C (-40 °F to +159.8 °F)	
Humidity		
Operating	5% to 95% relative humidity (%RH) up to +30 °C, 5% to 75% RH above +30 °C up to +50 °C. Noncondensing	
Nonoperating	5% to 95% RH up to +30 °C, 5% to 75% RH above +30 °C up to +65 °C, 5% to 45% RH above +65 °C up to +71 °C Noncondensing	
Altitude	Operating: up to 3000 m (9842 ft) Nonoperating: up to 15420 m (50,000 ft)	

Table 3: Certifications and compliances . ..

_

. ..

Characteristics	Description
EC Declaration of Conformity	Compliance was demonstrated to the following specification as listed in the Official Journal of the European Communities: Low Voltage Directive 2006/95/EC: EN61010-031/A1: 2008
Additional Safety Standards	IEC61010-031; IEC 61010-031/A1:2008
Measurement Category Product Examples	CAT III: Distribution-level mains, fixed installation
	CAT II: Local-level mains, appliances, portable equipment
	CAT I: Circuits not directly connected to mains.

Characteristics Description

Pollution Do not operate in environments where cond-Degree 2 uctive pollutants may be present (as defined in IEC 61010-1). Rated for indoor use only.



Safety Summary

Review the following safety precautions to avoid injury and prevent damage to this product or any products connected to it. To avoid potential hazards, use this product only as specified. Using the probe or accessories in a manner not specified could result in a shock or fire hazard.

To Avoid Fire or Personal Injury

For Use With TPS2000 Series Oscilloscopes Only. Do not float the reference lead of this probe above the rated float voltage (600 V RMS CAT II).

Ground-Referenced Oscilloscope Use. Do not float the reference lead of this probe when using with ground referenced oscilloscopes (for example, DPO, MSO, and TDS series oscilloscopes). The reference lead must be connected to earth potential (0 V).

Connect and Disconnect Properly. Connect the probe output to the measurement instrument before connecting the probe to the circuit under test. Disconnect the probe input and the probe reference lead from the circuit under test before disconnecting the probe from the measurement instrument.

Avoid Electric Shock. To avoid injury or loss of life, do not connect or disconnect probes or test leads while they are connected to a voltage source.

Observe All Terminal Ratings. To avoid fire or shock hazard, observe all ratings and markings on the product. Consult the product manual for further ratings information before making connections to the product.

Avoid Electric Shock. When using probe accessories, never exceed the lowest rating of the probe or its accessory, whichever is less, including the measurement category and voltage rating.

Avoid Electric Overload. To avoid injury or fire hazard, do not apply potential to any input, including the reference inputs, that varies from ground by more than the maximum rating for that input.

Avoid Exposed Circuitry and Do Not Operate Without

Covers. Do not touch exposed connections and components when power is present.

Inspect The Probe and Accessories. Before each use, inspect probe and accessories for damage (cuts, tears, defects in the probe body, accessories, cable jacket, etc.). Do not use if damaged.

Do Not Operate in Wet/Damp Conditions.

Do Not Operate in an Explosive Atmosphere.

Keep Product Surfaces Clean and Dry.

Safety Terms and Symbols Terms in This Manual.

These terms may appear in this manual:

WARNING. Warning statements identify conditions or practices that could result in injury or loss of life.

CAUTION. Caution statements identify conditions or practices that could result in damage to this product or other property.

Symbols on the Product. These symbols may appear on the product:



Contacting Tektronix

Web site:	www.tektronix.com
Phone:	1-800-833-9200
Address:	Tektronix, Inc. Department or name (if known) 14200 SW Karl Braun Drive P.O. Box 500 Beaverton, OR 97077 USA
Email:	techsupport@tektronix.com

Warranty Information

For warranty information, go to www.tektronix.com/warranty.