SLAVE (+VOUT-24V) FROM J3082 PIN 2 (RED) LOCATED ON MAIN BOARD AT Q302'S COLLECTOR TAB