

TYPE 310A  
MOD 119F

The instrument for which this manual was prepared has been modified to replace all binding posts and UHF connectors with BNC connectors except the rear-panel CRT CATHODE input and ground post. The following connectors have been changed.

Front Panel: INPUT, EXT. TRIG. INPUT and CAL. OUT.  
Rear Panel: EXT. HORIZ. INPUT and GND.

MECHANICAL PARTS LIST

CONNECTOR, BNC Chassis Mounting	Add	5	131-126
CONNECTOR, UHF Chassis Mounting	Delete	1	
POST, Binding	Delete	4	

NOTICE

This insert is for reference use only.

TYPE 310A

MOD 119F