

# Tektronix®

## **465B OSCILLOSCOPE**

WITH OPTIONS  
(B060000 AND UP)  
**SERVICE**

INSTRUCTION MANUAL

Tillhör  
**TEKTRONIX AB**  
Service  
08/83 00 80



## **WARNING**

THE FOLLOWING SERVICING INSTRUCTIONS ARE FOR USE BY QUALIFIED PERSONNEL ONLY. TO AVOID PERSONAL INJURY, DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN OPERATING INSTRUCTIONS UNLESS YOU ARE QUALIFIED TO DO SO. REFER TO THE OPERATORS SAFETY SUMMARY AND THE SERVICE SAFETY SUMMARY PRIOR TO PERFORMING ANY SERVICE.

**PLEASE CHECK FOR CHANGE INFORMATION  
AT THE REAR OF THIS MANUAL.**

# **465B OSCILLOSCOPE**

**WITH OPTIONS  
(B060000 AND UP)  
SERVICE**

## **INSTRUCTION MANUAL**

**Tektronix, Inc.  
P.O. Box 500  
Beaverton, Oregon 97077**

070-4273-00  
Product Group 40

Serial Number \_\_\_\_\_

First Printing MAR 1982  
Revised JUL 1987

Copyright © 1982 Tektronix, Inc. All rights reserved.  
Contents of this publication may not be reproduced in any  
form without the written permission of Tektronix, Inc.

Products of Tektronix, Inc. and its subsidiaries are covered  
by U.S. and foreign patents and/or pending patents.

TEKTRONIX, TEK, SCOPE-MOBILE, and  are  
registered trademarks of Tektronix, Inc. TELEQUIPMENT  
is a registered trademark of Tektronix U.K. Limited.

Printed in U.S.A. Specification and price change privileges  
are reserved.

### INSTRUMENT SERIAL NUMBERS

Each instrument has a serial number on a panel insert, tag,  
or stamped on the chassis. The first number or letter  
designates the country of manufacture. The last five digits  
of the serial number are assigned sequentially and are  
unique to each instrument. Those manufactured in the  
United States have six unique digits. The country of  
manufacture is identified as follows:

B000000	Tektronix, Inc., Beaverton, Oregon, USA
100000	Tektronix Guernsey, Ltd., Channel Islands
200000	Tektronix United Kingdom, Ltd., London
300000	Sony/Tektronix, Japan
700000	Tektronix Holland, NV, Heerenveen, The Netherlands

# TABLE OF CONTENTS

	Page		Page
<b>LIST OF ILLUSTRATIONS</b> .....	iv	<b>Section 3</b>	<b>THEORY OF OPERATION</b>
<b>LIST OF TABLES</b> .....	vi	INTRODUCTION .....	3-1
<b>OPERATORS SAFETY SUMMARY</b> .....	vii	SECTION ORGANIZATION .....	3-1
<b>SERVICE SAFETY SUMMARY</b> .....	ix	INTEGRATED CIRCUIT	
<b>Section 1</b>	<b>INTRODUCTION AND SPECIFICATION</b>	DESCRIPTIONS .....	3-2
INTRODUCTION .....	1-1	GENERAL DESCRIPTION .....	3-2
SPECIFICATION .....	1-1	DETAILED DESCRIPTION .....	3-4
<b>Section 2</b>	<b>OPERATION INSTRUCTIONS</b>	CHANNEL 1 PREAMP .....	3-4
INSTALLATION .....	2-1	CHANNEL 2 PREAMP .....	3-6
PREPARATION FOR USE .....	2-1	VERTICAL SWITCHING LOGIC ...	3-6
Safety Considerations .....	2-1	VERTICAL MODE SWITCH .....	3-10
Line Voltage Selection .....	2-1	VERTICAL OUTPUT AMPLIFIER ..	3-10
Regulating Range Selection ....	2-2	A AND B TRIGGER GENERATORS	3-11
Instrument Cooling .....	2-3	SWEEP AND Z AXIS LOGIC	
Rackmounting .....	2-3	CIRCUIT .....	3-12
CONTROLS, CONNECTORS, AND		A AND B SWEEP GENERATORS ..	3-16
INDICATORS .....	2-3	HORIZONTAL DISPLAY LOGIC ...	3-18
VERTICAL .....	2-3	HORIZONTAL AMPLIFIER .....	3-19
DISPLAY AND CALIBRATOR .....	2-4	CRT CIRCUIT .....	3-20
TRIGGER .....	2-5	CALIBRATOR .....	3-24
HORIZONTAL AND POWER .....	2-6	LOW-VOLTAGE POWER	
REAR PANEL .....	2-7	SUPPLY .....	3-25
LEFT SIDE PANEL .....	2-8	FAN MOTOR CIRCUIT .....	3-27
RIGHT SIDE PANEL .....	2-8	<b>Section 4</b>	<b>PERFORMANCE CHECK PROCEDURE</b>
BASIC OSCILLOSCOPE DISPLAYS ..	2-9	INTRODUCTION .....	4-1
PRESET INSTRUMENT		TEST EQUIPMENT REQUIRED ...	4-1
CONTROLS .....	2-9	SPECIAL FIXTURES .....	4-1
NORMAL SWEEP DISPLAY .....	2-9	LIMITS AND TOLERANCES .....	4-2
MAGNIFIED SWEEP DISPLAY .....	2-9	PREPARATION .....	4-2
DELAYED SWEEP DISPLAY .....	2-9	INDEX TO PERFORMANCE CHECK	
ALTERNATE SWEEP DISPLAY .....	2-10	PROCEDURE .....	4-4
SINGLE SWEEP DISPLAY .....	2-10	VERTICAL .....	4-5
X-Y DISPLAY .....	2-10	TRIGGERS .....	4-11
RACKMOUNTING .....	2-11	HORIZONTAL .....	4-14
DIMENSIONS .....	2-11	<b>Section 5</b>	<b>ADJUSTMENT PROCEDURE</b>
SLIDE-OUT TRACKS .....	2-11	INTRODUCTION .....	5-1
MOUNTING PROCEDURE .....	2-11	TEST EQUIPMENT REQUIRED ...	5-1
ALTERNATIVE REAR MOUNTING		LIMITS AND TOLERANCES .....	5-1
METHODS .....	2-17	PARTIAL PROCEDURES .....	5-1
REMOVING OR INSTALLING THE		SPECIAL FIXTURES .....	5-1
INSTRUMENT .....	2-18	PREPARATION FOR ADJUSTMENT	5-1
SLIDE-OUT TRACK LUBRICATION	2-18		

# TABLE OF CONTENTS (cont)

	Page		Page
<b>Section 5</b>		<b>Section 7</b>	
<b>ADJUSTMENT PROCEDURE (cont)</b>		<b>OPTIONS (cont)</b>	
INTERNAL ADJUSTMENTS AND ADJUSTMENT INTERACTION . . . . .	5-2	OPTION 05 TV SYNC SEPARATOR . . .	7-5
INDEX TO ADJUSTMENT PROCEDURE . . . . .	5-4	INTRODUCTION . . . . .	7-5
POWER SUPPLY . . . . .	5-6	GENERAL INFORMATION . . . . .	7-5
DISPLAY AND Z-AXIS . . . . .	5-8	Specification . . . . .	7-6
VERTICAL . . . . .	5-10	Furnished Accessories . . . . .	7-6
TRIGGERS . . . . .	5-23	OPERATING INSTRUCTIONS . . . . .	7-7
HORIZONTAL . . . . .	5-35	Vertical Calibration for CCIR and NTSC Video Graticules . . . . .	7-7
GATES, CALIBRATOR, AND Z AXIS	5-44	Operation of the Sync Separator	7-7
		Triggering the Sweep . . . . .	7-7
		Vertical Operating Modes— Special Considerations . . . . .	7-8
		Typical Operation . . . . .	7-8
		Special Measurements . . . . .	7-9
		Identifying Fields, Frames, and Lines in 525/60 and 625/50 TV Systems . . . . .	7-9
<b>Section 6</b>		<b>THEORY OF OPERATION . . . . .</b>	<b>7-10</b>
<b>MAINTENANCE</b>		Introduction . . . . .	7-10
INTRODUCTION . . . . .	6-1	Switching . . . . .	7-10
CABINET AND RACK ADAPTER		Trigger Pickoff . . . . .	7-10
REMOVAL AND REPLACEMENT . . .	6-1	Trigger Amplifier . . . . .	7-11
PREVENTIVE MAINTENANCE . . . . .	6-3	Sync Separator . . . . .	7-11
Introduction . . . . .	6-3	Field Selection . . . . .	7-12
Cleaning . . . . .	6-3	<b>OPTION 05 REPLACEABLE</b>	
Visual Inspection . . . . .	6-4	<b>ELECTRICAL PARTS LIST . . . . .</b>	<b>7-15</b>
Lubrication . . . . .	6-4	<b>OPTION 05 REPLACEABLE</b>	
Semiconductor Checks . . . . .	6-4	<b>MECHANICAL PARTS LIST . . . . .</b>	<b>7-17</b>
Readjustment . . . . .	6-4	<b>OPTION 07 EXTERNAL DC</b>	
<b>TROUBLESHOOTING . . . . .</b>	<b>6-5</b>	<b>OPERATION . . . . .</b>	<b>7-19</b>
Introduction . . . . .	6-5	INTRODUCTION . . . . .	7-19
Troubleshooting Aids . . . . .	6-5	SPECIFICATION . . . . .	7-19
Troubleshooting Equipment . . . . .	6-8	CONTROLS AND CONNECTORS . . .	7-19
Troubleshooting Techniques . . . . .	6-8	OPERATION AND INSPECTION . . .	7-19
Selectable Components . . . . .	6-11	THEORY OF OPERATION . . . . .	7-20
<b>CORRECTIVE MAINTENANCE . . . . .</b>	<b>6-12</b>	General Description . . . . .	7-20
Introduction . . . . .	6-12	Turn-Off Level Circuit . . . . .	7-20
Maintenance Precautions . . . . .	6-12	Turn-Off Circuit . . . . .	7-21
Static Sensitive Components . . . . .	6-12	Start Circuit . . . . .	7-22
Obtaining Replacement Parts . . . . .	6-13	Inverter Circuit . . . . .	7-22
Soldering Techniques . . . . .	6-13	DC Input . . . . .	7-23
Component Removal and Replacement . . . . .	6-14	Start-Stop Switch . . . . .	7-23
Readjustment After Repair . . . . .	6-22	Power-Mode Switch (S1665) . . . . .	7-23
Instrument Repackaging . . . . .	6-22	<b>MAINTENANCE . . . . .</b>	<b>7-23</b>
Required Reshipment Information	6-22	<b>ADJUSTMENT . . . . .</b>	<b>7-24</b>
		<b>OPTION 07 REPLACEABLE</b>	
		<b>ELECTRICAL PARTS LIST . . . . .</b>	<b>7-28</b>
		<b>OPTION 07 REPLACEABLE</b>	
		<b>MECHANICAL PARTS LIST . . . . .</b>	<b>7-31</b>
		<b>OPTION 78 TYPE P11 PHOSPHOR . . .</b>	<b>7-33</b>
<b>Section 7</b>			
<b>OPTIONS</b>			
GENERAL OPTION INFORMATION . . .	7-1		
OPTION 04 . . . . .	7-3		
INTRODUCTION . . . . .	7-3		
OPTION 04 REPLACEABLE			
ELECTRICAL PARTS LIST . . . . .	7-4		
OPTION 04 REPLACEABLE			
MECHANICAL PARTS LIST . . . . .	7-4		

# TABLE OF CONTENTS (cont)

Section 8 REPLACEABLE ELECTRICAL PARTS  
LIST

Section 9 DIAGRAMS

Section 10 REPLACEABLE MECHANICAL PARTS  
LIST

ACCESSORIES TAB PAGE

CHANGE INFORMATION

# LIST OF ILLUSTRATIONS

Fig. No.	Page	Fig. No.	Page
1-1	465B Oscilloscope . . . . .	x	
2-1	Commonly used power plugs . . . . .	2-2	
2-2	Regulating range selector and line fuse . . . . .	2-2	
2-3	Vertical controls, connectors, and indicators . . . . .	2-3	
2-4	Display controls and calibrator . . . . .	2-5	
2-5	Trigger controls, connectors, and indicators . . . . .	2-6	
2-6	Horizontal and power connectors, controls, and indicators . . . . .	2-7	
2-7	Rear panel and left side panel controls, connectors, and indicators . . . . .	2-8	
2-8	Dimensional drawing . . . . .	2-12	
2-9	Dimensional drawing (cont) . . . . .	2-13	
2-10	Slide-out track assemblies . . . . .	2-14	
2-11	Hardware needed to mount the instrument in the cabinet rack . . . . .	2-14	
2-12	Rear support kit . . . . .	2-15	
2-13	Installing the support block on the instrument . . . . .	2-15	
2-14	Methods of mounting the stationary section to the front rails . . . . .	2-16	
2-15	Locating the mounting holes for the left stationary section. Same dimensions apply to right stationary section . . . . .	2-17	
2-16	Supporting the rear stationary sections: (A) Dimensions necessary, (B) Completed installation . . . . .	2-18	
2-17	Procedure for inserting or removing the instrument after the slide-out tracks have been installed . . . . .	2-19	
2-18	Alignment adjustment for correct operation . . . . .	2-20	
2-19	Alternative method of installing the instrument using rear support brackets . . . . .	2-20	
3-1	Basic block diagram of the 465B Oscilloscope . . . . .	3-1	
3-2	Detailed block diagram of the Channel 1 Pre-amplifier circuit . . . . .	3-4	
3-3	Detailed block diagram of the Vertical Switching Logic circuit . . . . .	3-7	
3-4	Switching waveform at the junction of R1903 and R1904 . . . . .	3-9	
3-5	Vertical Alt Sync Pulse at U1705 pin 9 . . . . .	3-9	
3-6	Detailed block diagram of the Sweep and Z-Axis Logic circuit . . . . .	3-13	
3-7	Detailed block diagram of the A Sweep Generator circuit . . . . .	3-17	
3-8	Detailed block diagram of the Horizontal Amplifier circuit . . . . .	3-19	
3-9	Detailed block diagram of the CRT and Z-Axis Amplifier circuit . . . . .	3-21	
3-10	(A) Sinusoidal sample voltage at center tap of T4015. (B) Clamped sample voltage at the junction of CR4111 and CR4112 . . . . .	3-23	
3-11	(A) Z-Axis Amplifier output. (B) Clamped sample voltage at the junction of CR4111 and CR4112 . . . . .	3-24	
3-12	Detailed block diagram of the Calibrator circuit . . . . .	3-25	
3-13	Calibrator circuit waveform diagram . . . . .	3-25	
3-14	Detailed block diagram of the Low-Voltage Power Supply circuit . . . . .	3-26	
3-15	Foldover circuit action . . . . .	3-28	
5-1	Typical display when high-frequency compensation is correctly adjusted . . . . .	5-18	
6-1	Removing the wrap-around cabinet . . . . .	6-1	
6-2	Partial Table 6-1 . . . . .	6-6	
6-3	Color codes . . . . .	6-9	
6-4	Locations of power transformer secondary wires . . . . .	6-18	
7-1	465B Option 04 primary winding with power-line filter . . . . .	7-3	
7-2	Partial 465B Front Panel showing Option 05 features . . . . .	7-5	
7-3	Option 05 465B Vertical Input changes . . . . .	7-6	
7-4	Option 05 simplified block diagram . . . . .	7-11	
7-5	465B Option 05 Field selection timing diagram . . . . .	7-14	
7-6	Option 07 simplified block diagram . . . . .	7-20	
7-7	465B Option 07 DC Inverter . . . . .	7-21	
7-8	465B Option 07 primary winding . . . . .	7-22	
7-9	Typical battery pack discharge curves . . . . .	7-24	
7-10	Option 07 Inverter balance . . . . .	7-25	
7-11	Option 07 DC Inverter circuit board adjustment and test point locations . . . . .	7-26	
7-12	Option 07 DC Inverter idealized waveforms . . . . .	7-26	
7-13	Option 07 DC Inverter circuit board component locations . . . . .	7-27	

## NOTE

The following illustrations are located on foldout pages in Section 9 Diagrams & Circuit Board Illustrations.

9-1	Semiconductor lead configuration.
9-2	A3 Attenuator circuit board.
9-3	A1 Vertical Pre-amplifier circuit board.
9-4	A5 Vertical Mode Switch circuit board.
9-5	A2 Vertical Output circuit board.
9-6	A7 A and B Trigger Generator circuit board.
9-7	A4 Interface circuit board.
9-8	A6 Timing circuit board.

## LIST OF ILLUSTRATIONS (cont)

<b>Fig. No.</b>	
9-9	A8 Fan circuit board.
9-10	Option 05 A29 TV Sync Separator circuit board.
9-11	Option 05 A7 Trigger Switches and Trigger Pickoff circuit board.
9-12	Interface circuit board adjustment locations.
9-13	Vertical Preamplifier circuit board adjustment locations.
9-14	Vertical Output Amplifier circuit board adjustment locations.
9-15	Trigger Generator and Sweep Logic circuit board adjustment locations.
9-16	Timing circuit board adjustment locations.



# LIST OF TABLES

Table No.		Page
1-1	ELECTRICAL CHARACTERISTICS .....	1-2
1-2	ENVIRONMENTAL CHARACTERISTICS ..	1-10
1-3	PHYSICAL CHARACTERISTICS .....	1-11
2-1	POWER CORD CONDUCTOR IDENTIFICATION .....	2-1
2-2	REGULATING RANGE .....	2-2
2-3	FUSE SELECTION .....	2-3
4-1	TEST EQUIPMENT REQUIRED .....	4-2
4-2	DEFLECTION FACTOR LIMITS .....	4-7
4-3	LOW-FREQUENCY COMPENSATION SET-UP .....	4-8
4-4	A AND B TIMING ACCURACY .....	4-15
4-5	A AND B MAGNIFIED ACCURACY .....	4-16
4-6	DELAY OR DIFFERENTIAL TIME ACCURACY .....	4-17
5-1	ADJUSTMENT INTERACTIONS .....	5-3
5-2	LOW VOLTAGE POWER SUPPLY LIMITS	5-6
5-3	TYPICAL LOW VOLTAGE POWER SUPPLY RIPPLE .....	5-7
5-4	VERTICAL DEFLECTION ACCURACY ...	5-13
5-5	MAXIMUM OVERSHOOT OR ROUNDING	5-15
5-6	VERTICAL OUTPUT LOW-FREQUENCY COMPENSATION .....	5-15
5-7	CH 1 LOW-FREQUENCY COMPENSATION	5-16
5-8	CH 2 LOW-FREQUENCY COMPENSATION	5-16
5-9	VOLTS/DIV COMPENSATION .....	5-17
5-10	A AND B TIMING ACCURACY .....	5-39
5-11	A AND B MAGNIFIED ACCURACY .....	5-40
5-12	DIFFERENTIAL TIME ACCURACY .....	5-41
6-1	READ-ONLY MEMORY U1605 LOGIC ...	6-7
6-2	RELATIVE SUSCEPTIBILITY TO STATIC DISCHARGE DAMAGE .....	6-12
6-3	MAINTENANCE AIDS .....	6-23
6-4	SUGGESTED TROUBLESHOOTING EQUIPMENT .....	6-24
7-1	LINE SWITCH AND OPTION 07 MODE SWITCH SETTINGS .....	7-19
7-2	OPTION 07 TEST EQUIPMENT REQUIRED	7-23

## OPERATORS SAFETY SUMMARY

The general safety information in this part of the summary is for both operating and servicing personnel. Specific warnings and cautions will be found throughout the manual where they apply, but may not appear in this summary.

### TERMS

#### In This Manual

**CAUTION** statements identify conditions or practices that could result in damage to the equipment or other property.

**WARNING** statements identify conditions or practices that could result in personal injury or loss of life.

#### As Marked on Equipment

**CAUTION** indicates either a personal injury hazard not immediately accessible as you read the marking, or a hazard to property including the equipment itself.

**DANGER** or **WARNING—HIGH VOLTAGE** indicates a personal injury hazard immediately accessible as you read the marking.

### SYMBOLS

#### In This Manual



This symbol is used on schematic diagrams having static-sensitive components.

#### As Marked on Equipment



**DANGER** — High voltage.



Protective ground (earth) terminal.

## PRECAUTIONS

### Power Source

This product is intended to operate from a power source that will not apply more than 250 V rms between the supply conductor and ground. A protective ground connection by way of the grounding conductor in the power cord is essential for safe operation.

### Grounding the Product

This product is grounded through the grounding conductor of the power cord. To avoid electrical shock, plug the power cord into a properly wired receptacle before connecting to the product input or output terminals. A protective ground connection by way of the grounding conductor in the power cord is essential for safe operation.

### Use the Proper Power Cord

Use only the power cord and connector specified for your product.  
Use only the power cord that is in good condition.

For detailed information on power cords and connectors, see Installation instructions in Section 2 of this manual.

Refer cord and connector changes to qualified service personnel.

### Use the Proper Fuse

To avoid fire hazard, use only the fuse specified in the parts list for this product and having identical type, voltage rating, and current rating characteristics (see Installation instructions in Section 2 of this manual).

Refer internal fuse replacement to qualified service personnel.

### Do Not Operate in Explosive Atmospheres

To avoid explosion, do not operate this product in an atmosphere of explosive gases unless it has been specifically certified for such operation.

### Do Not Remove Covers or Panels

To avoid personal injury, do not remove the product covers or panels. Do not operate the product without the covers and panels properly installed.

# **SERVICE SAFETY SUMMARY**

## ***FOR QUALIFIED SERVICE PERSONNEL ONLY***

*Refer also to the preceding Operators Safety Summary.*

### **Do Not Service Alone**

Do not perform internal service or adjustment of this product unless another person capable of rendering first aid and resuscitation is present.


### **Use Care When Servicing With Power On**

Dangerous voltages may exist at several points in this product. To avoid personal injury, do not touch exposed connections and components while power is on.

Disconnect power before removing protective panels, soldering, or replacing components.

### **Power Source**

This product is intended to operate from a power source that will not apply more than 250 V rms between the supply conductors or between either supply conductor and ground. A protective ground connection by way of the grounding conductor in the power cord is essential for safe operation.

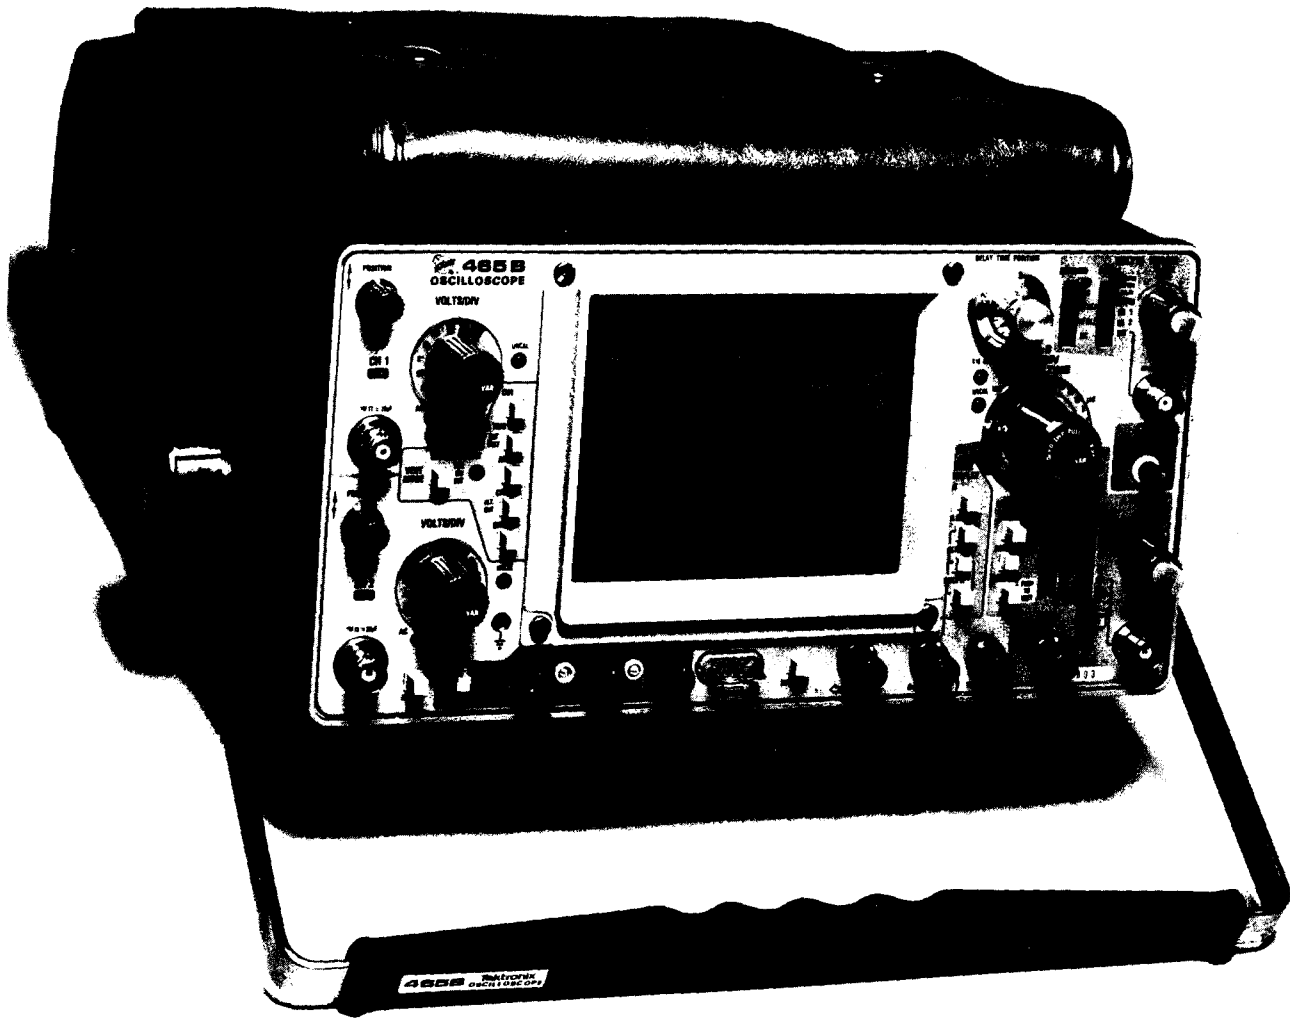

2757-03

Figure 1-1. 465B Oscilloscope.

# INTRODUCTION AND SPECIFICATION

## INTRODUCTION

The TEKTRONIX 465B Oscilloscope is a dual-channel, four-trace portable instrument, providing traces for two input channels, a trigger view from an external trigger input, and an add function. Calibrated deflection factors from 5 mV/div to 5 V/div are provided by the dc-to-100 MHz vertical system for the input channels and add function. Sweep trigger circuits are capable of stable triggering over the full bandwidth capabilities of the vertical deflection system. The horizontal deflection system provides calibrated sweep rates from 0.5 s/div to 0.02  $\mu$ s/div along with delayed sweep features for accurate relative-time measurements. A X10 magnifier extends the calibrated sweep rate to 2 ns/div. The instrument operates over a wide variation of line voltages and frequencies with maximum power consumption of approximately 100 watts.

Increased measurement capabilities are achieved by the 465B when it is equipped with an optional TEKTRONIX

DM44 Digital Multimeter. The DM44 measures 0 to 20 M $\Omega$  resistance, 0 to 1200 dc V (+ or -), and -55°C to +150°C temperature (using a temperature probe). Measurement values are displayed on a 3 1/2-digit LED readout while the oscilloscope continues normal operation.

The digital multimeter and oscilloscope combine to provide a digital readout of time difference between any two points on the oscilloscope display. Both time measurement points are displayed simultaneously on the crt. Direct measurement of frequency is provided by a 1/TIME function.

This manual provides service information only for the 465B Oscilloscope. Service information for the DM44 Digital Multimeter is contained in a separate DM44 Service manual.

## SPECIFICATION

The following electrical characteristics (Table 1-1) are valid only if the instrument has been calibrated at an ambient temperature between +20°C and +30°C, the instrument is operating at an ambient temperature between -15°C and +55°C (unless otherwise noted), and the instrument has had a warmup period of about 20 minutes.

Environmental characteristics of the 465B are presented in Table 1-2, and physical characteristics listed in Table 1-3.

Table 1-1  
ELECTRICAL CHARACTERISTICS

Characteristics	Performance Requirements	Supplemental Information
VERTICAL SYSTEM		
Deflection Factor		
Range	5 mV/div to 5 V/div in 10 steps, with a 1-2-5 sequence.	
Uncalibrated (VAR) Range	Continuously variable between settings. Extends deflection factor to at least 12.5 V/div.	
Accuracy	Within 3%.	Gain set at 5 mV/div.
Low-Frequency Linearity		0.1 div or less compression or expansion of a 2-div signal at center screen with waveform positioned to upper and lower extremes of graticule.
Frequency Response		5-div reference signal centered vertically from a 25 $\Omega$ source with VAR VOLTS/DIV Control in calibrated detent position.
Bandwidth		
–15°C to +40°C	Dc to at least 100 MHz.	
+40°C to +55°C	Dc to at least 85 MHz.	
AC Coupled Lower –3 dB Point		
1X Probe	10 Hz or less.	
10X Probe	1 Hz or less.	
Step Response		5 div reference signal centered vertically, dc coupled at all deflection factors, from a 25 $\Omega$ source with VAR VOLTS/DIV control in calibrated detent position.
Rise Time (0°C to +40°C)	3.5 ns or less.	
Positive-Going Step (Excluding ADD Mode)		
Aberrations (0°C to +40°C)		+4%, –4%, 4% p-p or less (5 mV to 2 V). +6%, –6%, 6% p-p or less (5 V setting only).
Position Effect (0°C to +40°C)		Total aberrations less than +6%, –6%, 6% p-p; checked at 5 mV/div.
Negative-Going Step		Add 2% to all positive-going step specifications; checked at 5 mV/div.
ADD Mode Operation		Add 5% to all aberration specifications; checked at 5 mV/div.
Common-Mode Rejection Ration (ADD Mode with Channel 2 Inverted)		At least 10:1 at 20 MHz for common mode signals of 6 div or less, with GAIN adjusted for best CMRR at 50 kHz.

Table 1-1 (cont)

Characteristics	Performance Requirements	Supplemental Information
VERTICAL SYSTEM (cont)		
Trace Shift as VAR VOLTS/DIV is Rotated		1.0 div or less.
Inverted Trace Shift		Less than 2 div when switching from noninverted to inverted.
Input Gate Current		
+20°C to +30°C		0.5 nA or less (0.1 div at 5 mV/div).
-15°C to +55°C		4 nA or less (0.8 div at 5 mV/div).
Channel Isolation		At least 100:1 at 25 MHz.
Position Range		At least +12 and -12 div from graticule center.
Chopped Mode Repetition Rate	Approximately 500 kHz.	Within 20%
Input R and C		
Resistance	1 M $\Omega$	Within 2%
Capacitance	Approximately 20 pF.	
R and C Product (+20°C to +30°C)		Aberrations 2% or less using a P6105 probe.
Maximum Input Voltage		
DC Coupled	250 V (dc + peak ac). 500 V (p-p ac at 1 kHz or less).	
AC Coupled	250 V (dc + peak ac). 500 V (p-p ac at 1 kHz or less).	
Cascaded Operation		CH 1 VERT SIGNAL OUT into CH 2 input; AC coupled; using 50 $\Omega$ , 42-inch, RG 58 C/U cable terminated in 50 $\Omega$ at CH 2 input.
Bandwidth	Dc to at least 50 MHz.	
Sensitivity	At least 1 mV/div.	
TRIGGER SYSTEM		
Sensitivity		When in EXT/10, multiply performance requirement by 10.
AC Coupled Signal	0.3 div internal or 50 mV external from 30 Hz to 10 MHz, increasing to 1.5 div internal or 150 mV external at 100 MHz.	
LF REJ Coupled Signal	0.5 div internal or 100 mV external from 50 kHz to 10 MHz, increasing to 1.5 div internal or 300 mV external at 100 MHz.	Attenuates signals below approximately 50 kHz.



Table 1-1 (cont)

Characteristics	Performance Requirements	Supplemental Information
<b>TRIGGER SYSTEM (cont)</b>		
HF REJ Coupled Signal	0.5 div internal or 100 mV external from 30 Hz to 50 kHz.	Attenuates signals above approximately 50 kHz.
DC Coupled Signal	0.3 div internal or 50 mV external from dc to 10 MHz, increasing to 1.5 div internal or 150 mV external at 100 MHz.	
Trigger Jitter	0.5 ns or less at 100 MHz at 2 ns/div with X10 MAG depressed.	
External Trigger Inputs		
Maximum Input Voltage	250 V (dc + peak ac). 250 V (p-p ac at 1 kHz or less).	
Input Resistance	1 M $\Omega$	Within 10%.
Input Capacitance		Approximately 20 pF, within 10%.
LEVEL Control Range		
EXT	At least +2 and -2 V; 4 V p-p.	
EXT/10	At least +20 and -20 V; 40 V p-p.	
Trigger View (A TRIGGER)		
Deflection Factor		DC trigger COUPLING only; checked with 1 kHz signal.
EXT	100 mV/div $\pm$ 5%.	
EXT/10	1 V/div $\pm$ 5%.	
Rise Time	5 ns or less	20 MHz BW LIMIT at full bandwidth (button out).
Delay Difference	$\leq \pm 0.15$ div ( $\leq \pm 300$ ps at 2 ns/div)	With a 5-div signal having a 5-ns rise time or less from a 25 $\Omega$ source, centered vertically, with equal 50 $\Omega$ cable lengths from signal sources to vertical channel and external trigger inputs terminated in 50 $\Omega$ at each input.
Centering of Trigger Point		Within 1.0 div of center screen.
Flatness and Aberrations		+10%, -10%, 10% p-p.
<b>HORIZONTAL DEFLECTION SYSTEM</b>		
Sweep Rate		
Calibrated Range		
A Sweep	0.5 s/div to 0.02 $\mu$ s/div in 23 steps in a 1-2-5 sequence. X10 MAG extends maximum sweep rate to 2 ns/div.	
B Sweep	50 ms/div to 0.02 $\mu$ s/div in 20 steps in a 1-2-5 sequence. X10 MAG extends maximum sweep rate to 2 ns/div.	

Table 1-1 (cont)

Characteristics	Performance Requirements		Supplemental Information
HORIZONTAL DEFLECTION SYSTEM (cont)			
Accuracy	<b>Unmagnified</b>	<b>Magnified</b>	Accuracy specification applies over the full 10 div.  In X10 MAG, at TIME/DIV switch setting of 2-ns, 5-ns, 10-ns, and 20-ns, exclude the first and last 50 ns of the sweep; and at a TIME/DIV switch setting of .5 $\mu$ s, exclude the first 100 ns of the sweep.
	+20°C to +30°C	Within $\pm 2\%$ .	
	-15°C to +55°C	Within $\pm 3\%$	Within $\pm 4\%$ .
Two-Division Linearity Check			$\pm 5\%$ over any 2-div (or less) portion of the full 10 div. When in 10X MAG, exclude first and last magnified divisions when checking 2-ns, 5-ns, and 10-ns/div rates.
Alternate Sweep Trace Separation			$\geq \pm 4$ div.
Variable Range (A Only)	Continuously variable between calibrated settings. Extends slowest A Sweep rate to at least 1.25 s/div.		At least 2.5:1.
Sweep Length (A Only)			10.5 to 11.5 div.
A Trigger Holdoff Variable	Increases A Sweep holdoff time by at least a factor of 10.		
X10 Magnifier Registration			Within 0.2 div from graticule center (X10 MAG on to X10 MAG off).
Position Range			Start of sweep must position to right of graticule center. End of sweep must position to left of graticule center.
Differential Time Measurement Accuracy	<b>For Measurements of <math>\geq 1</math> Major Dial Division</b>	<b>For Measurements of <math>&lt; 1</math> Major Dial Division</b>	With the A TIME/DIV switch at 0.5 $\mu$ s and 0.2 $\mu$ s the differential time measurement accuracy limit is valid only for DELAY TIME POSITION dial settings between 1.50 and 8.50.
	+15°C to +35°C	Within $\pm 1\%$ .	
	-15°C to +55°C	Within $\pm 2.5\%$ .	Within $\pm 0.03$ major dial division.
Delay Time Jitter	One part (or less) in 50,000 (0.002%) of ten times the A TIME/DIV switch setting, when operating on power-line frequencies other than 50 Hz. One part (or less) in 20,000 (0.005%) of A TIME/DIV switch setting, when operating on 50 Hz power-line frequency.		
Calibrated Delay Time	Continuous from 0.2 $\mu$ s to at least 5 s after start of the delaying (A) sweep.		With VAR control in calibrated detent.

Table 1-1 (cont)

Characteristics	Performance Requirements	Supplemental Information
HORIZONTAL DEFLECTION SYSTEM (cont)		
X-Y Operation		With TIME/DIV switch set to extreme counterclockwise position.
X-Axis		
Deflection Factor	Same as vertical channel.	With X10 MAG off.
Bandwidth	Dc to at least 4 MHz.	10-div reference signal.
Variable Range	Continuously variable between settings. Extends deflection factor to at least 12.5 V/div.	
Input R and C		
Resistance	1 M $\Omega$ .	Within 2%
Capacitance	Approximately 20 pF.	Within 3%.
Maximum Usable Input Voltage		
DC Coupled	250 V (dc + peak ac). 500 V (p-p ac at 1 kHz or less).	
AC Coupled	250 V (dc + peak ac). 500 V (p-p ac at 1 kHz or less).	
Phase Difference Between X and Y Axis Amplifiers		Within 3°, from dc to 50 kHz.
Deflection Accuracy	Within $\pm 4\%$ when CH 1 VERT SIGNAL OUT connector is unterminated.	
CALIBRATOR <sup>a</sup>		
Output Voltage (0°C to +40°C) (-15°C to +55°C)	0.3 V, within 1%.	0.3 V, within 1.5%.
Repetition Rate	Approximately 1 kHz.	Within 25%.
Output Resistance		Approximately 10.3 $\Omega$ .
Output Current		
+20°C to +30°C	30 mA, within 2%.	
-15°C to +55°C		30 mA, within 2.5%.
Z-AXIS INPUT <sup>a</sup>		
Sensitivity	5-volt p-p signal causes noticeable modulation at normal intensity.	Positive-going signal decreases intensity.
Usable Frequency Range	Dc to 50 MHz.	
Maximum Input Voltage		25 V (dc + peak ac).

Table 1-1 (cont)

Characteristics	Performance Requirements	Supplemental Information
SIGNAL OUTPUTS <sup>a</sup>		
Channel 1 Output		
Voltage	At least 50 mV/div into 1 M $\Omega$ . At least 25 mV/div into 50 $\Omega$ .	
Resistance		Approximately 50 $\Omega$ .
Bandwidth	Dc to at least 50 MHz into 50 $\Omega$ .	
A and B Gates		
Output Voltage		Approximately 5.5 V positive-going. Starts within 500 mV of 0 V.
Output Resistance		Approximately 500 $\Omega$ .
POWER SOURCE		
Line Voltage Ranges		
115 V Nominal		
(High)	108 V to 132 V.	
(Medium)	104 V to 126 V.	
(Low)	99 V to 121 V.	
230 V Nominal		
(High)	216 V to 250 V.	
(Medium)	208 V to 250 V.	
(Low)	198 V to 242 V.	
Line Frequency	48 Hz to 440 Hz.	
Power consumption		
Typical	65 W at 115 V, 60 Hz, medium range.	
Maximum	85 W at 115 V, 60 Hz, medium range.	
CATHODE-RAY TUBE		
Display Area	8 X 10 cm.	
Geometry		0.1 div or less of tilt or bowing.
Trace Rotation Range		Adequate to align trace with horizontal center line.
Raster Distortion		0.1 div or less.
Standard Phosphor	P31.	
Optional Phosphor	P11.	
Nominal Accelerating Potential		$\approx$ 18,500 V.

Table 1-1 (cont)

Characteristics	Performance Requirements	Supplemental Information
DM44		
Dc Voltage		
Ranges	0 to 1.2 kV in 5 steps: 200 mV, 2 V, 20 V, 200 V, and 1.2 kV.	
Resolution	100 $\mu$ V.	
Accuracy	Within 0.1% of reading, $\pm 1$ count.	
Input Resistance	10 M $\Omega$ , all ranges (user has option to remove an internal wire strap to increase input resistance to 1000 M $\Omega$ on the 200 mV and 2 V ranges).	
Rejection Ratio		
Normal Mode	At least 60 dB at 50 and 60 Hz.	
Common Mode	At least 100 dB at dc; 80 dB at 50 and 60 Hz.	
Recycle Time	Approximately 3.3 measurements/s.	
Response Time	Within 0.5 s.	
Temperature Dependence	45 parts/million/ $^{\circ}$ C.	
Maximum Safe Input Voltage, All Ranges	$\pm 1200$ V (dc + peak ac) between + and COM inputs or between + input and chassis.	
COM (Common) Floating Voltage	$\pm 500$ V (dc + peak ac) to chassis.	
Resistance		
Ranges	0 to 20 M $\Omega$ in six steps; 200 $\Omega$ , 2 k $\Omega$ , 20 k $\Omega$ , 200 k $\Omega$ , 2M $\Omega$ , and 20 M $\Omega$ .	
Resolution	0.1 $\Omega$ .	
Accuracy		
200 $\Omega$ and 2 k $\Omega$ Ranges	Within 0.25% $\pm 1$ count, + probe resistance.	
20 k $\Omega$ , 200 k $\Omega$ , and 2 M $\Omega$ Ranges	Within 0.25%, $\pm 1$ count.	
20 M $\Omega$ Range	Within 0.30%, $\pm 1$ count.	
Recycle Time	Approximately 3.3 measurements/s.	
Response Time		
200 $\Omega$ through 200 k $\Omega$ Ranges	Within 1 s.	
2 M $\Omega$ and 20 M $\Omega$ Ranges	Within 5 s.	
Maximum Safe Input voltage	120 V rms between + and COM inputs for an indefinite time.	220 V rms between + and COM inputs for 1 minute or less.

Table 1-1 (cont)

Characteristics	Performance Requirements			Supplemental Information
DM44 (cont)				
Temperature Dependence				
20 k $\Omega$ through 2 M $\Omega$				250 parts/million/ $^{\circ}$ C.
200 $\Omega$ , 2 k $\Omega$ , and 20 M $\Omega$ Ranges				350 parts/million/ $^{\circ}$ C.
Approximate current supplied to unknown resistance				<b><math>\Omega</math> Range</b>
				<b>Current</b>
				200 $\Omega$ and 2 k $\Omega$
				1 mA
				20 k $\Omega$
				100 $\mu$ A
			200 k $\Omega$	
			10 $\mu$ A	
			2 M $\Omega$	
			1 $\mu$ A	
			20 M $\Omega$	
			100 nA	
Temperature				
Range	-55 $^{\circ}$ C to +150 $^{\circ}$ C in one range.			
Accuracy (with constant temperature and infinite heat source)	<b>Ambient Temperature (<math>^{\circ}</math>C)</b>	<b>Probe Tip Temperature (<math>^{\circ}</math>C)</b>	<b>Accuracy (<math>^{\circ}</math>C)</b>	
	+15 to +35	-55 to +150	±2	
	-15 to +55	-55 to +125	±3	
	-15 to +55	+125 to +150	±4	
	+15 to +35	-55 to +150	±6	
	-15 to +55	-55 to +150	±8	
Probe Calibrated to DM44				
Probe Not Calibrated to DM44				
Time (Differential Delay)				
Accuracy				
+15 $^{\circ}$ C to +35 $^{\circ}$ C	Within 1% of reading, ±1 count.			
-15 $^{\circ}$ C to +55 $^{\circ}$ C	Within 2.5%, ±1 count.			
1/TIME				
Accuracy				
+15 $^{\circ}$ C to +35 $^{\circ}$ C	Within 2% of reading, ±1 count.			
-15 $^{\circ}$ C to +55 $^{\circ}$ C	Within 3.5%, ±1 count.			

<sup>a</sup> Checked only in Adjustment Procedure

Table 1-2  
ENVIRONMENTAL CHARACTERISTICS

Characteristics	Description
NOTE: All of the following tests meet the requirements of MIL-T-28800B, Type III Class 3, Style D equipment.	
Temperature	
Operating	-15°C to +55°C.
Non-operating	-62°C to +85°C.
Altitude	
Operating	To 15,000 ft.
Non-operating	To 15,000 m (50,000 ft).
Humidity (Operating and Non-operating)	Five cycles (120 hr) referenced to MIL-T-28800B, para 3.9.2.2. 95% to 97% relative humidity.
Vibration (Operating)	15 minutes along each of three major axes at a total displacement of 0.025 inch p-p (4 g at 55 Hz) with frequency varied from 10 Hz to 55 Hz to 10 Hz in one minute sweeps. After sweep vibration in each axis, frequency held steady at each major resonance for 10 minutes, or if no such resonances found, held at 55 Hz for 10 minutes.
Shock (Operating and Non-operating)	30 g, half-sine, 11-ms duration, 3 shocks per axis each direction, for a total of 18 shocks.
EMI	Meets MIL-STD-461A/462.

Table 1-3  
PHYSICAL CHARACTERISTICS

Characteristics	Description
Weight	
With Panel Cover, Accessories, and Accessory Pouch	11.5 kg (25.3 lb).
Without Panel Cover, Accessories and Accessory Pouch	10.4 kg (22.8 lb).
Domestic Shipping Weight	14.9 kg (32.7 lb).
Export Shipping Weight	Approximately 22 kg (48 lb).
Height	
With Feet and Pouch	19.1 cm (7.5 in).
Without Pouch	15.7 cm (6.2 in).
Width	
With Handle	32.8 cm (12.9 in).
Without Handle	29.2 cm (11.5 in).
Depth	
Including Panel Cover	46.0 cm (18.1 in).
With Handle Extended	51.6 cm (20.3 in).



# OPERATING INSTRUCTIONS

This section of the manual provides information on instrument installation and power requirements and describes the functions of controls, connectors, and indicators. In addition, it includes procedures intended to familiarize the op-

erator with obtaining basic oscilloscope displays. For more complete operating information, refer to the 465B/DM44 Operators Manual.

## INSTALLATION

The 465B is shipped in its carton with the standard accessories listed on the Accessories tab page at the end of this manual. At installation time, save the shipping carton and packaging materials for repackaging. Refer to the Maintenance section of this manual for repackaging information.

### Line Voltage Selection

#### WARNING

*This instrument is designed for operation from a power source with its neutral at or near earth (ground) potential with a separate safety-earth conductor.*

## PREPARATION FOR USE

### Safety Considerations

#### CAUTION

*This instrument may be damaged if operated with the Line Voltage Selector switch or the Regulating Range Selector bar set for the wrong applied line voltage or if the wrong line fuse is used.*

Refer to the Safety Summary in the front of this manual for power source, grounding, and other safety considerations pertaining to use of the instrument. Before connecting the instrument to a power source, verify that the Line Voltage Selector switch and the Regulating Range Selector bar are both set for the line voltage being used, that the proper line fuse is installed, and that the line cord plug matches the power source to be used.

The 465B is designed to be used with a three-wire ac power system. If a three-to-two-wire adapter is used to connect this instrument to a two-wire ac power system, be sure to connect the ground lead of the adapter to earth (ground). Failure to complete the ground system may allow the chassis of this instrument to be elevated above ground potential, thus posing a shock hazard.

This instrument operates from either a 115 V or a 230 V nominal line voltage source at 48 Hz to 440 Hz. To convert the instrument for operation from one line voltage range to the other, move the Line Voltage Selector switch located on the right side panel to the position indicating the correct nominal voltage.

The power cord plug may require replacement with a type matching the power source. If necessary, change the line cord plug. Refer to Table 2-1 for power cord conductor identification and to Figure 2-1 for illustrations of commonly-used power plug.

Table 2-1  
POWER CORD CONDUCTOR IDENTIFICATION

Conductor	Color	Alternate Color
Ungrounded (Line)	Brown	Black
Grounded (Neutral)	Blue	White
Grounding (Earthing)	Green-Yellow	Green-Yellow

**Operation Instructions**  
**465B Service (SN B060000 & UP)**

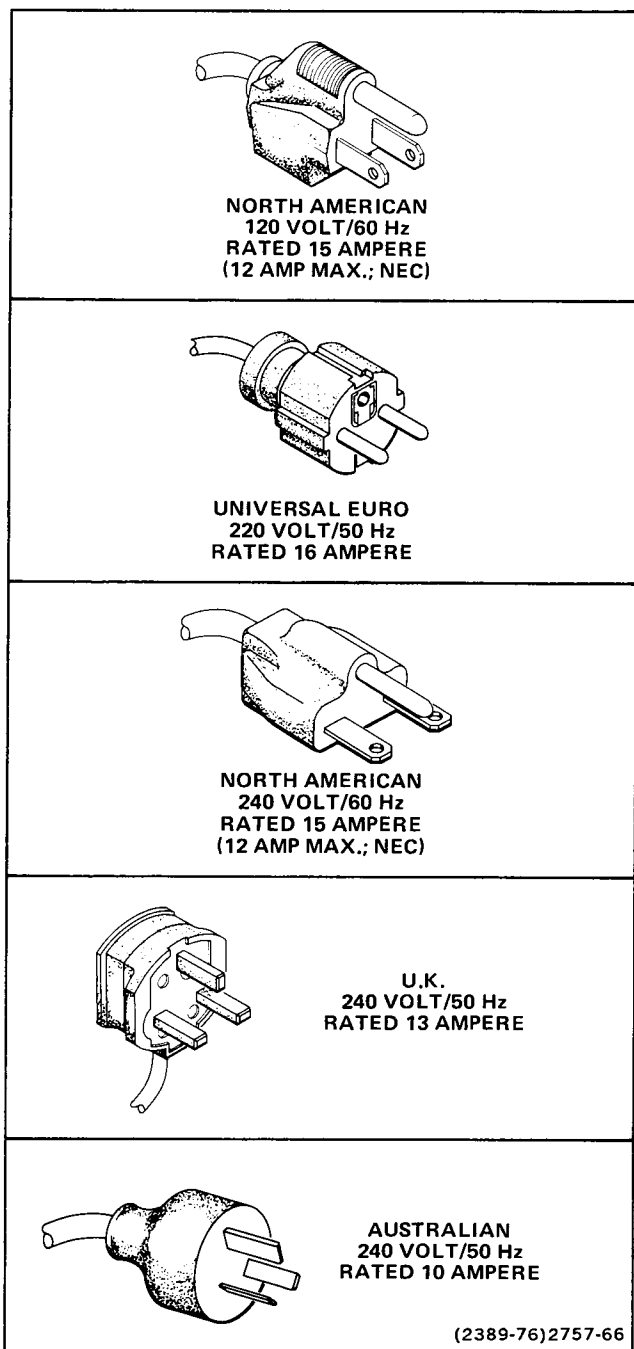


Figure 2-1. Commonly used power plugs.

**Regulating Range Selection**

The Regulating Range Selector assembly located on the rear panel contains the Regulating Range Selector bar and the line fuse. Verify that the selector bar is set for the average line voltage being used and that the proper line fuse is installed. To change the regulating range.

1. Disconnect the instrument from its power source.

2. Loosen the two captive screws that hold the cover on the selector assembly; then pull to remove the cover.
3. Pull out the selector bar (see Figure 2-2). Select a range from Table 2-2 centered about the average line voltage, and plug the selector bar into the desired position.
4. Insert the proper fuse (selected from Table 2-3) into its holder.
5. Gently push the cover on and tighten the captive screws.
6. Before applying power to the instrument, verify that the Line Voltage Selector switch and the indicating tab on the Regulating Range Selector assembly are in their correct positions for the desired nominal line voltage and regulating range.

**Table 2-2**  
**REGULATING RANGE**

Regulating Range Selector Bar Position	Regulating Range	
	115-Volt Nominal	230-Volt Nominal
Upper Holes	108 to 132 volts	216 to 250 volts
Middle Holes	104 to 126 volts	208 to 250 volts
Lower Holes	99 to 121 volts	198 to 242 volts

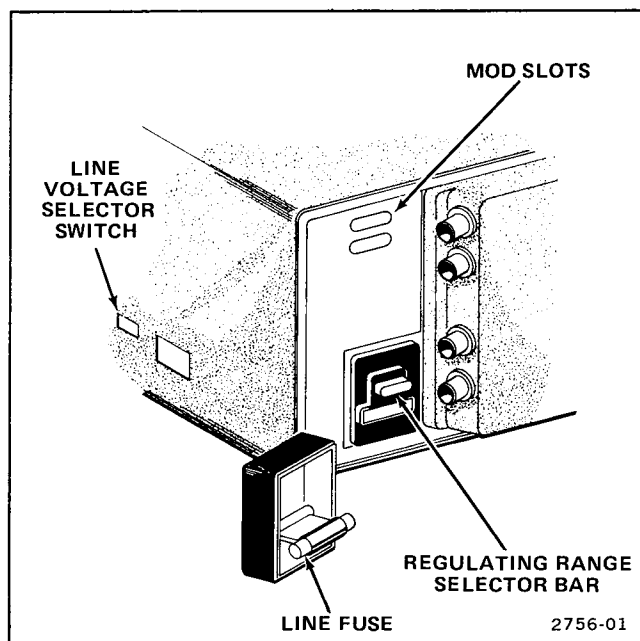


Figure 2-2. Regulating range selector and line fuse.

Table 2-3  
FUSE SELECTION

Line Voltage Selector Switch Position	Fuse Size
115 V Nominal	1.5 A, 3AG, Fast-blow
230 V Nominal	0.75 A, 3AG, Fast-blow

### Instrument Cooling

To maintain adequate instrument cooling, the ventilation holes in the equipment cabinet must remain open, and the air filter must be cleaned or replaced when it gets dirty.

### Rackmounting

For rackmounting details refer to the rackmounting installation instructions at the end of this section.

## CONTROLS, CONNECTORS, AND INDICATORS

The major controls, connectors, and indicators for operation of the 465B are located on the front panel of the instrument. A few auxiliary functions are provided on the rear panel. Figures 2-3 through 2-7 show the front and rear panels of the instrument with the controls, connectors, and indicators called out. The circled numbers correspond to the discussions about particular controls, connectors, and indicators. If your instrument is equipped with a DM44 Digital Multimeter, refer to either the 465B/DM44 Operators Manual or the DM44 Service Manual for descriptions of DM44 controls, connectors, and indicators.

⑥ **CH 1 OR X and CH 2 OR Y bnc Connectors**—Provide for application of external signals to the inputs of the vertical amplifier. In the X-Y mode, the signal connected to the CH 1 OR X connector provides horizontal deflection, and the signal connected to the CH 2 OR Y connector provides vertical deflection. These connectors each include a coding ring that activates the scale-factor-switching circuit whenever a 10X scale-factor-switching probe is connected.

### VERTICAL

Refer to Figure 2-3 for location of items 1 through 11.

- ① **VOLTS/DIV Switches**—Select the vertical deflection factor for Channel 1 and Channel 2 in a 1-2-5 sequence. VAR control must be in the calibrated detent to obtain a calibrated deflection factor.
- ② **VOLTS/DIV Readouts**—Consist of two light emitting diodes (LED) for each channel, located beneath the skirt of each VOLTS/DIV knob. One LED or the other will light to indicate the correct deflection factor. The 10X LED is illuminated only when a 10X probe with a scale-switching coding-ring contact is connected to the input of the oscilloscope; otherwise, the 1X LED is illuminated.
- ③ **VAR**—Provides continuously variable uncalibrated deflection factors between the calibrated settings of the VOLTS/DIV switches.
- ④ **UNCAL Indicator**—A LED that lights when the VAR VOLTS/DIV control is out of the calibrated detent, and the vertical deflection factor is uncalibrated.
- ⑤ **POSITION Controls**—Determine the vertical position of the display on the crt. In the X-Y mode, the Channel 2 POSITION control moves the display vertically (Y-axis), and the Horizontal POSITION control moves the display horizontally (X-axis).

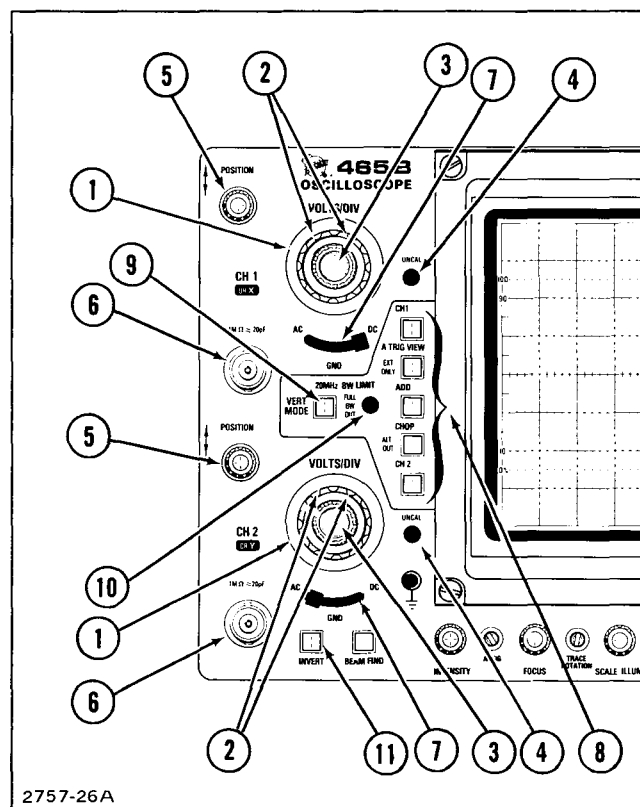


Figure 2-3. Vertical controls, connectors, and indicators.

**Operation Instructions**  
**465B Service (SN B060000 & UP)**

- 7 **AC-GND-DC Switch**—Selects the method used to couple a signal to the input of the vertical amplifier.

**AC position**—Signals are capacitively coupled to the vertical amplifier. The dc component of the input signal is blocked.

**GND position**—The input of the vertical amplifier is grounded to provide a ground reference and to allow the input coupling capacitor to precharge.

**DC position**—All frequency components of the input signal are passed to the vertical input amplifier.

- 8 **VERT MODE Switches**—Select mode of operation for vertical amplifier system. When either CHOP or ALT mode is selected, display of any combination of CH 1, CH 2, ADD, and A TRIG VIEW (EXT ONLY) is allowed. When all buttons are out, a single trace will be displayed, provided that either TRIG MODE is in AUTO or TRIG MODE is in NORM with a triggerable signal applied to a vertical input connector. This trace will not display intelligence and is unaffected by position controls.

**NOTE**

*Four display traces may simultaneously be observed on the 465B crt. Each VERT MODE push button must be depressed and released a second time to remove the signal from the corresponding displays.*

**CH 1**—Displays Channel 1 signals when push button is pressed in.

**A TRIG VIEW**—Displays the A external trigger input signal when push button is pressed in and when the A TRIGGER SOURCE switch is set to EXT or EXT/10.

**ADD**—Displays the algebraic sum of the Channel 1 and Channel 2 input signals when ADD push button is pressed in. The INVERT switch in Channel 2 allows the display to be either CH 1 plus CH 2 or CH 1 minus CH 2. The ADD capability is useful for common-mode rejection to remove an undesired signal or dc offset.

**CHOP ALT: OUT**—The 465B “chops” (switches) between two or more of the display modes at a 500 kHz rate when CHOP ALT: OUT button is pressed in. When released, the 465B “alternates” between two or more of the four display modes at the end of each trace sweep. CHOP and ALT functions are disabled if only one VERT MODE push button (CH 1, CH 2, ADD, or A TRIG VIEW) is selected or if the X-Y mode is selected.

**CH 2**—Displays Channel 2 signals when push button is pressed in.

- 9 **20 MHz BW LIMIT (FULL BW OUT) Switch**—Limits the bandwidth of the vertical amplifier to approximately 20 MHz when pressed in. Push button must be pressed and released a second time to regain full 100 MHz bandwidth operation.

- 10 **20 MHz BW LIMIT Indicator**—This LED is illuminated whenever the 20 MHz BW LIMIT push button is pressed in, and bandwidth is limited to 20 MHz.

- 11 **INVERT**—Inverts Channel 2 display when push button is pressed in. Push button must be pressed and released a second time to present a noninverted display.

## DISPLAY AND CALIBRATOR

Refer to Figure 2-4 for location of items 12 through 19.

- 12 **Internal Graticule**—Eliminates parallax. Risettime and amplitude measurement points are indicated at the left edge of the graticule.

- 13 **BEAM FIND Switch**—Compresses the display to within the graticule area and provides a visible viewing intensity to aid in locating off-screen displays.

- 14 **INTENSITY Control**—Determines overall brightness of the A Sweep and B Sweep crt displays. Interacts with B INTENSITY control on B Sweep crt displays.

- 15 **FOCUS Control**—Adjusts for optimum display definition.

- 16 **CALIBRATOR Loop**—A combination 30 mA current loop and 0.3 V square-wave voltage output (approximately 1 kHz) that permits the operator to compensate voltage probes and to check oscilloscope vertical operation. It is not intended to verify precise time-base calibration.

- 17 **SCALE ILLUM Control**—Adjusts graticule illumination.

- 18 **ASTIG Control**—Screwdriver control used in conjunction with the FOCUS control to obtain a well-defined display. It does not require readjustment during normal use of the instrument.

- 19 **TRACE ROTATION Control**—Screwdriver control used to align trace with the horizontal graticule lines.

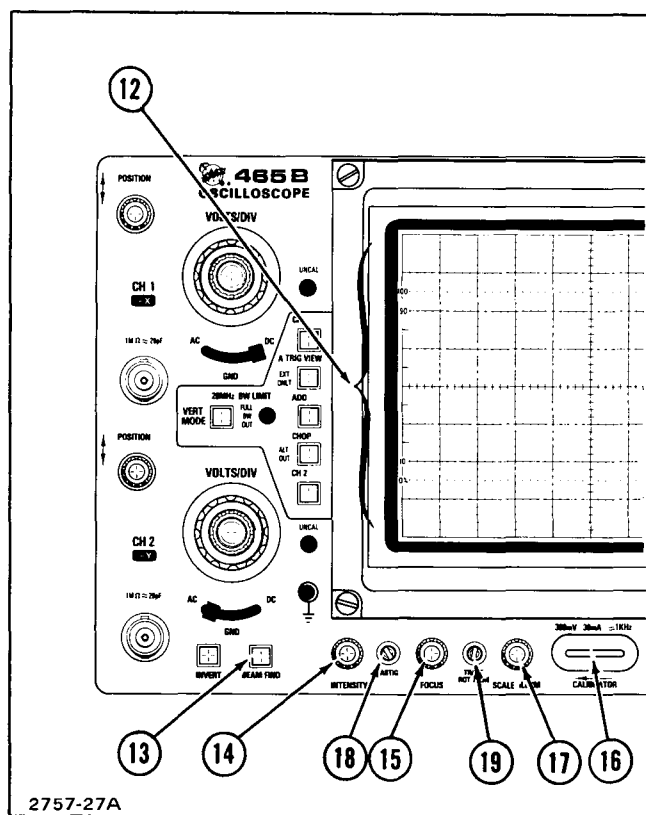


Figure 2-4. Display controls and calibrator.

## TRIGGER (A and B where applicable)

Refer to Figure 2-5 for location of items 20 through 28.

- 20 **TRIG MODE Switches**—Three push button switches determine the mode of trigger operation for the A Sweep.

**AUTO**—Sweep is initiated by the applied trigger signal. In the absence of an adequate trigger signal, or if the trigger repetition rate is less than about 20 Hz, the sweep free runs and provides a bright reference trace.

**NORM**—Sweep is initiated by the applied trigger signal. In the absence of an adequate trigger signal, there is no trace. When the trigger rate is too low for AUTO, use NORM.

**SINGLE SWP**—When this push button is pressed, the A Sweep operates in the single-sweep mode. After a single sweep is displayed, further sweeps cannot be presented until the SINGLE SWP push button is again pressed. SINGLE SWP is useful in displaying and photographing either non-repetitive signals or signals that cause unstable conventional displays (e.g., signals that vary in amplitude, shape, or time).

- 21 **READY Indicator**—LED illuminates to indicate that A Sweep is "armed" and will present a single-sweep display upon receipt of an adequate trigger signal.
- 22 **TRIG Indicator**—LED illuminates to indicate that A Sweep is triggered and will produce a stable display. It is useful for setting up the trigger circuits when a trigger signal is available without a display on the crt (for example, when using external triggers).
- 23 **A TRIGGER HOLDOFF Control**—Provides continuous control of time between sweeps. Allows triggering on aperiodic signals (such as complex digital words). In the fully clockwise position (B ENDS A), the A Sweep is automatically terminated at the end of the B Sweep to provide the fastest possible sweep repetition rate for delayed-sweep presentations and low-repetition rate signals. In this position, Holdoff is approximately ten times NORM. Use the A trigger controls for most stable triggering before setting the A TRIGGER HOLDOFF control to a position other than NORM.
- 24 **COUPLING Switch**—Determines method used to couple signals to the trigger generator circuit.

**AC**—Signals are capacitively coupled to the input of the trigger circuit. Dc is rejected, and signals below about 30 Hz are attenuated. Triggering is allowed only on the ac portion of the vertical signal.

**LF REJ**—Signals are capacitively coupled to the input of the trigger circuit. Dc is rejected, and signals below about 50 kHz are attenuated. It is useful for providing a stable display of the high-frequency components of a complex waveform.

**HF REJ**—Signals are capacitively coupled to the input of the trigger circuit. Dc is blocked, and signals below about 30 Hz and above 50 kHz are attenuated. It is useful for providing a stable display of the low-frequency components of a complex waveform.

**DC**—All frequency components of a trigger signal are coupled to the input of the trigger circuit. It is useful for providing a stable display of low-frequency or low-repetition rate signals.

- 25 **SLOPE Switch**—Selects the slope of the signal that triggers the sweep.
- + : Sweep can be triggered from the positive-going portion of a trigger signal.
- : Sweep can be triggered from the negative-going portion of a trigger signal.
- 26 **LEVEL Control**—Selects the amplitude point on the trigger signal at which the sweep is triggered. It is usually adjusted for the desired display after trigger

## Operation Instructions 465B Service (SN B060000 & UP)

SOURCE, COUPLING, and SLOPE have been selected.

- 27 SOURCE Switch**—Determines the source of the trigger signal coupled to the input of the trigger circuit.

**NORM**—Trigger source is a sample of the signal displayed on the crt.

**CH 1**—A sample of the signal applied to the Channel 1 input is used as a trigger signal. Channel 2 signal is unstable if it is not time-related.

**CH 2**—A sample of the signal applied to the Channel 2 input is used as a trigger signal. Channel 1 crt display is unstable if it is not time-related.

**LINE (A Trigger Circuit Only)**—A sample of the power-line sinusoidal waveform is used as a trigger signal. It is useful when the input signal is time-related (multiple or submultiple) to the line frequency or when it is desirable to provide a stable display of a line-frequency component in a complex waveform.

**EXT**—Signals connected to the External Trigger input connectors are used for triggering. External signals must be time-related to the displayed signal for a stable display. It is useful when the internal signal is either too small or contains undesired signals that could cause unstable triggering. It is also useful when operating in the CHOP mode. EXT and EXT/10 trigger signals may be viewed on the crt by selecting A TRIG VIEW on the VERT MODE switch.

**EXT/10 (A Trigger Circuit Only)**—External trigger signal is attenuated by a factor of 10.

**STARTS AFTER DELAY (B Trigger Circuit Only)**—B Sweep starts immediately after the delay time selected by the DELAY TIME POSITION control and is independent of the B Trigger signal. When making differential time measurements, you must use this mode to obtain valid measurements. On instruments equipped with a DM44, you must use this mode to obtain valid measurements when using the TIME or 1/TIME functions.

- 28 External Trigger Input Bnc Connectors**—Connect external trigger input signals for A TRIGGER and B (DLY'D) TRIGGER circuits, when either EXT or EXT/10 (A Trigger only) SOURCE is selected.

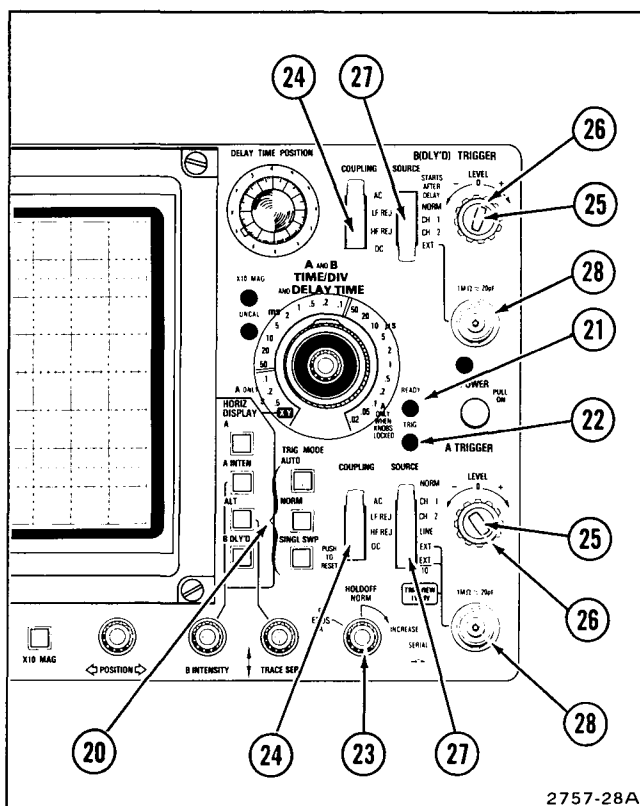


Figure 2-5. Trigger controls, connectors, and indicators.

## HORIZONTAL AND POWER

Refer to Figure 2-6 for location of items 29 through 40.

- 29 A AND B TIME/DIV AND DELAY TIME Switches**—A TIME/DIV (clear plastic skirt) selects the sweep rate of the A Sweep circuit for A Sweep operation only. Also selects the basic delay time (used in conjunction with the DELAY TIME POSITION control) for delayed sweep operation. B TIME/DIV switch (pull out and rotate to unlock) selects the sweep rate for the B Sweep circuit for delayed sweep operation only. VAR control must be in the calibrated detent for calibrated A Sweep rates. When the A TIME/DIV switch is rotated fully counterclockwise to the X-Y position, the horizontal (X-axis) deflection is controlled by the Channel 1 input signal.

- 30 POSITION Control**—Positions the display horizontally for A Sweep and B Sweep, or on the X-axis (horizontally) in the X-Y mode. Provides both coarse and fine control action. Reverse the direction of rotation to actuate fine positioning action.
- 31 X10 MAG Switch**—When pressed in, increases displayed sweep rate by a factor of 10. Extends fastest sweep rate to 2 ns/div. The magnified sweep expands the center division of the unmagnified display (0.5 div either side of the center graticule line).
- 32 VAR Control**—Provides continuously variable sweep rates between the calibrated settings of the A TIME/DIV switch. It extends the slowest A Sweep rate to at least 1.25 s/div. The A Sweep rate is calibrated when the control is set fully clockwise to the calibrated detent. It must be in the detent position to make accurate differential time measurements. On instruments equipped with a DM44, the VAR control must be in the detent position to make accurate measurements in the TIME and 1/TIME functions.
- 33 UNCAL Indicator**—LED illuminates to indicate that the A Sweep rate is uncalibrated (VAR control is out of the calibrated detent).
- 34 X10 MAG Indicator**—LED illuminates to indicate that the X10 magnifier is on.
- 35 DELAY TIME POSITION Control**—Selects the amount of delay time between the start of A Sweep and start of B Sweep. Delay time is variable to at least 10 times the time indicated by the A TIME/DIV switch.
- 36 POWER Switch**—PULL ON turns instrument power on; button pushed in turns power off.
- 37 POWER ON Indicator**—LED illuminates when power is applied to the instrument.
- 38 HORIZ DISPLAY Switches**—Four push button switches determine the mode of operation for the horizontal deflection system.

**A**—Horizontal deflection is provided by A Sweep at a sweep rate determined by the setting of the A TIME/DIV switch. Only A Sweep is displayed; B Sweep is inoperative.

**A INTEN**—Displays the A Sweep at a rate determined by the A TIME/DIV switch. An intensified portion can appear on the display during the B Sweep time. This switch position provides an indication of both the duration and position of the B Sweep (delayed sweep) with respect to the A Sweep (delaying sweep).

**ALT**—Alternates the displays between the A INTEN and B DLY'D Sweeps. In ALT operation, use

TRACE SEP to vertically position B Trace; use B INTENSITY control to adjust B Trace intensity.

**B DLY'D**—Displays only the B Sweep. The B Sweep rate is determined by the B TIME/DIV switch, with the delay time determined by the setting of both the A TIME/DIV switch and the DELAY TIME POSITION control.

- 39 TRACE SEP Control**—Positions the B Sweep vertically when the ALT HORIZ DISPLAY mode is selected.
- 40 B INTENSITY Control**—Determines the intensity of the B Trace (interacts with INTENSITY control).

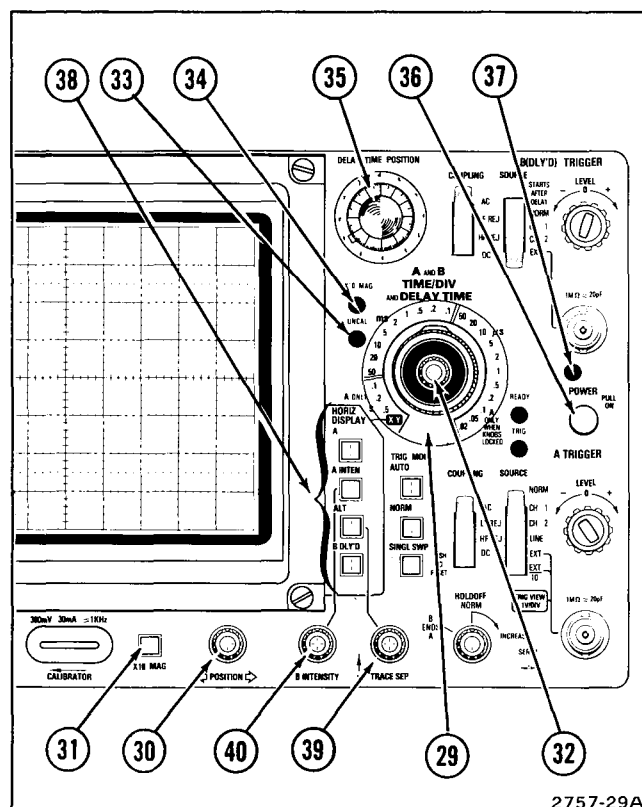


Figure 2-6. Horizontal and power connectors, controls, and indicators.

## REAR PANEL

Refer to Figure 2-7 for location of items 41 through 50.

- 41 A + GATE**—Output bnc connector provides a positive-going pulse coincident with the A Sweep time.
- 42 B + BATE**—Output bnc connector provides a positive-going pulse coincident with the B Sweep time.
- 43 CH 1 VERT SIGNAL OUT**—Output bnc connector provides a sample of the signal applied to the Channel 1 preamplifier via the input connector.

Operation Instructions  
465B Service (SN B060000 & UP)

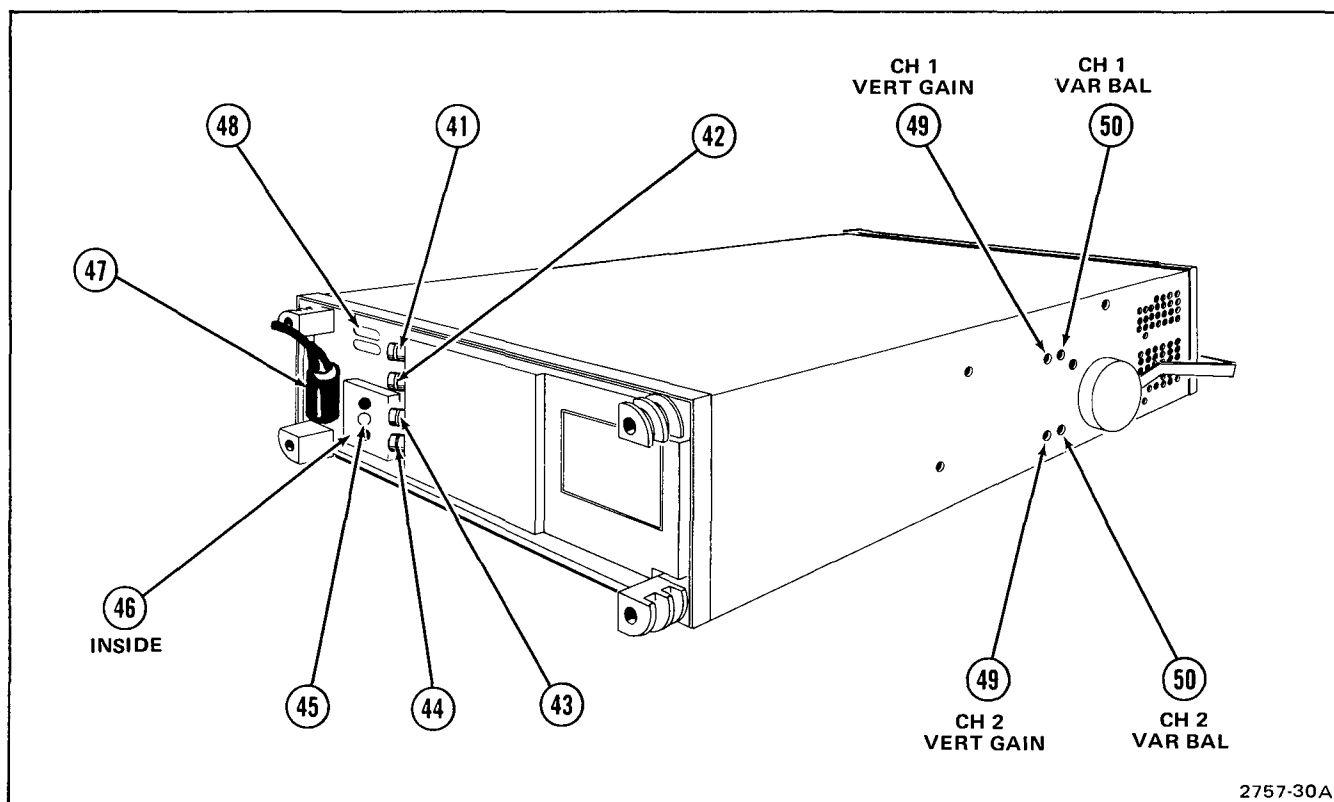


Figure 2-7. Rear panel and left side panel controls, connectors, and indicators.

44 **EXT Z-AXIS**—Input bnc connector permits the application of an external signal to intensity modulate the crt display. Does not affect display wave-shape. Signals with fast rise time and fall time provide the most abrupt intensity change. Signals must be time-related to the display for a stable presentation on the crt. The connector is useful for adding time markers in uncalibrated modes of operation.

45 **Regulating Range Selector Bar**—Selects the regulating range of the 465B power supplies to match the available power input source. It is shown on Figure 2-2 in the Medium regulating range. See Table 2-2 for change information.

46 **Line Fuse Holder**—Contains the line fuse and the regulating range selector. See Table 2-3 for change information.

47 **Line Cord**—Makes the connection between the oscilloscope and the power source. The cord may be conveniently stored by wrapping around the feet on rear panel.

48 **MOD Slots**—A number in either slot indicates the instrument contains an option or other modification.

### LEFT SIDE PANEL

49 **Vertical Gain Controls (accessible through left side panel)**—Screwdriver adjustments to set the gain of the vertical channels.

50 **Variable Balance Controls (accessible through left side panel)**—Screwdriver adjustments to set balance of the vertical channels.

### RIGHT SIDE PANEL

51 **Line Voltage Selector Switch**—Selects either 115-V or 230-V nominal line voltage. Refer to Table 2-2 for ranges and to Figure 2-2 for location of the switch. Change the fuse to match the range selected.



## BASIC OSCILLOSCOPE DISPLAYS

The procedures in this subsection will allow you to set up and operate your instrument to obtain the most commonly used basic oscilloscope displays. Before proceeding with these instructions, verify that the Line voltage Selector switch and the Regulating Range Selector bar are placed in the proper positions and that the correct fuse is installed for the line voltage being used. Refer to the preceding Preparation for Use for the information and procedures relating to line voltage, regulating range, and fuse selection. Verify that the POWER switch is off (push button pressed in) before plugging the power cord into the line voltage socket.

### PRESET INSTRUMENT CONTROLS

Preset the instrument controls as follows:

#### Vertical

VERT MODE	CH 1
VOLTS/DIV	Proper setting determined by amplitude of signal to be applied
VOLTS/DIV VAR	Calibrated detent
AC-GND-DC	AC
POSITION	Midrange
20 MHz BW LIMIT	Not limited (push button out)
INVERT	Off (push button out)

#### Display

INTENSITY	Fully counterclockwise
FOCUS	Midrange
SCALE ILLUM	Midrange

#### Horizontal

TIME/DIV Switches	Locked together at 1 ms
A TIME/DIV VAR	Calibrated detent
HORIZ DISPLAY	A
X10 MAG	Off (push button out)
POSITION	Midrange

#### Trigger

(Both A and B if applicable)

SLOPE	+
LEVEL	0
SOURCE	NORM
COUPLING	AC
TRIG MODE (A only)	AUTO
HOLD OFF	NORM

### NORMAL SWEEP DISPLAY

1. Preset instrument controls and pull the POWER switch (on). After allowing the instrument to warm up, connect a signal to the CH 1 input connector.

#### NOTE

*Instrument warm-up time required to meet all specification accuracies is 20 minutes.*

2. Adjust the INTENSITY control for the desired display brightness. If the display is not visible with the INTENSITY control at midrange, press the BEAM FIND push button and hold it in while adjusting the CH 1 VOLTS/DIV switch to reduce the vertical display size. Center the compressed display using the vertical and horizontal POSITION controls; release the BEAM FIND push button. Adjust the LEVEL control if necessary.

3. Set the CH 1 VOLTS/DIV switch and the vertical and horizontal POSITION controls to locate the display within the graticule area.

4. Adjust the A TRIGGER LEVEL control for a stable display.

5. Set the A TIME/DIV switch for the desired number of cycles of displayed signal; then adjust the FOCUS control as necessary.

### MAGNIFIED SWEEP DISPLAY

1. Preset instrument controls and obtain a Normal Sweep Display.

2. Adjust the horizontal POSITION control to move the area to be magnified to within the center graticule division of the crt (0.5 div on each side of the center vertical graticule line). Change the TIME/DIV switch setting as desired.

3. Push the X10 MAG switch (on) and adjust the horizontal POSITION control for precise positioning of the magnified display. Divide the TIME/DIV setting by 10 to determine the magnified sweep rate.

### DELAYED SWEEP DISPLAY

1. Preset instrument controls and obtain a Normal Display.

#### NOTE

*Differential time measurements and measurements using the TIME or 1/TIME functions of the DM44 are invalid when the B TRIGGER SOURCE switch is not set to STARTS AFTER DELAY.*

### Operation Instructions 465B Service (SN B060000 & UP)

2. Set the HORIZ DISPLAY switch to A INTEN and the B TRIGGER SOURCE switch to STARTS AFTER DELAY.

3. Pull out the B TIME/DIV knob and turn clockwise from counterclockwise stop until the intensified zone is the desired length. Adjust the INTENSITY and B INTENSITY controls as needed to make the intensified zone distinguishable from the rest of the display. If your instrument is equipped with a DM44, select a function other than TIME or 1/TIME for a single delayed sweep.

4. Adjust the DELAY TIME POSITION control to move the intensified zone to cover the portion of the display that will be displayed in delayed form.

5. Set the HORIZ DISPLAY switch to B DLY'D. The intensified zone adjusted in step 3 and 4 is now displayed in delayed form. The delayed sweep rate is indicated by the dot on the B TIME/DIV knob.

6. To obtain a delayed display with less jitter, set the B TRIGGER SOURCE switch to the same position as the A TRIGGER SOURCE switch and adjust the B TRIGGER LEVEL control for a stable display.

### ALTERNATE SWEEP DISPLAY

1. Preset instrument controls and obtain a Normal Sweep Display.

2. Pull out on the B TIME/DIV knob to unlock it and turn clockwise to the desired sweep rate.

3. Set the HORIZ DISPLAY switch to ALT. Set B (DLY'D) TRIGGER SOURCE to STARTS AFTER DELAY. Adjust Channel 1 POSITION and TRACE SEP as required to display A Sweep above B Sweep. This will provide a display that alternates between A INTEN trace (upper) and B DLY'D trace (lower). Adjust B INTENSITY as necessary to view the B DLY'D trace.

4. The start of B Sweep may be changed by adjusting the DELAY TIME POSITION controls.

5. If the instrument is equipped with a DM44 and a time difference (or period) measurement is desired, select the TIME function and adjust the  $\Delta$  TIME control to move the time-measurement point with respect to the reference point.

6. The display now contains a second intensified zone on the A INTEN trace (upper) and a second signal, which may be partially or fully superimposed, on the B DLY'D trace (lower).

7. The DELAY TIME POSITION control will change the position of both delayed displays (reference and time measurement), while the  $\Delta$  TIME control will position only the second (measurement point) delayed display.

### SINGLE SWEEP DISPLAY

1. Preset instrument controls and obtain a Normal Sweep Display. For random signals, set the trigger circuit to trigger on a signal that is approximately the same amplitude and frequency as the random signal.

2. Press the SINGL SWP push button on the A TRIG MODE switch. The next trigger pulse starts the sweep and displays a single trace. If no triggers are present, the READY indicator should illuminate, indicating that the A Sweep Generator circuit is set and waiting for a trigger.

3. When the sweep is complete, the circuit is "locked out", and the READY indicator turns off.

4. Press the SINGLE SWP push button again to prepare the circuit for another Single Sweep Display.

### X-Y DISPLAY

1. Preset instrument controls and pull the POWER switch (on). Allow the instrument to warm up.

2. Set the A TIME/DIV switch fully counterclockwise to X-Y. Apply the vertical signal to the CH 2 OR Y input connector and the horizontal signal to the CH 1 OR X input connector.

3. Advance the INTENSITY control until the display is visible. If the display is not visible with the INTENSITY control at midrange, press and hold in the BEAM FIND push button while adjusting the CH 1 and CH 2 VOLTS/DIV switches until the display is reduced in size, both vertically and horizontally. Center the compressed display with the POSITION controls (Channel 2 POSITION control for vertical movement, and horizontal POSITION control for horizontal movement). Release the BEAM FIND push button. Adjust the FOCUS control for a well-defined display.

# RACKMOUNTING

## WARNING

*During rackmount installation, interchanging the left and right slide-out track assemblies defeats the extension stop (safety latch) of the tracks. Equipment could, when extended, come out of the slides and fall from the rack, possibly causing personal injury and equipment damage.*

*When mounting the supplied slide-out tracks, inspect both assemblies to find the LH (left hand) and RH (right hand) designations to determine correct placement. Install the LH assembly to your left side as you face the front of the rack and install the RH assembly to your right side.*

The TEKTRONIX R465R Oscilloscope is designed to mount in a 19-inch rack. When mounted in accordance with the following mounting procedure, the instrument will meet all electrical and environmental characteristics given in Section 1 of this manual.

## DIMENSIONS

Dimensional drawings of the R465B are shown in Figures 2-8 and 2-9.

### Rack Height

At least seven inches of vertical space is required to mount this instrument in a rack.

### Rack Width

Minimum width of the opening between the left and right front rails of the rack must be 17 5/8 inches. This allows room on each side of the instrument for the slide-out tracks to operate freely, permitting the instrument to move smoothly in and out of the rack.

### Rack Depth

Total depth necessary to mount the R465B in a cabinet is 18 inches. This allows room for air circulation, power cord and signal connections and the necessary mounting hardware.

## SLIDE-OUT TRACKS

The slide-out tracks provided with the R465B permit it to be extended out of the rack for maintenance or calibration without removing the instrument from the rack. In the fully extended position, the R465B can be tilted up so the bottom of the instrument can be reached for maintenance or calibration. To operate the R465B in the extended position, be sure the power cord and any interconnecting cables are long enough for this purpose.


The slide-out tracks consist of two assemblies—one for the left side of the instrument and one for the right side. Figure 2-10 shows the complete slide-out track assemblies. The stationary section of each assembly attaches to the front and rear rails of the rack, and the chassis section is attached to the instrument. The intermediate section slides between the stationary and chassis sections and allows the R465B to be extended out of the rack. When the instrument is shipped, the stationary and immediate sections of the tracks are packaged as matched sets and should not be separated. To identify the left or right assembly, note the position of the automatic latch (see Figure 2-10). When mounted in the rack, the automatic latch should be at the top of both assemblies. The chassis sections are installed on the instrument at the factory.

The hardware needed to mount the slide-out tracks is shown in Figure 2-11. Since the hardware supplied is intended to make the tracks compatible with a variety of cabinet racks and installation methods, not all of it will be needed for this installation. Use only the hardware that is required for the mounting method used.

## MOUNTING PROCEDURE

The following mounting procedure uses the rear support kit, p/n (016-0096-00) (see Figures 2-12 and 2-13) to meet the environmental characteristics of the instrument (shock and vibration). Two alternative mounting methods are described at the end of this procedure. However, when mounted according to these alternative methods, the instrument may not meet the given environmental characteristics for shock and vibration.

Operation Instructions  
465B Service (SN B060000 & UP)

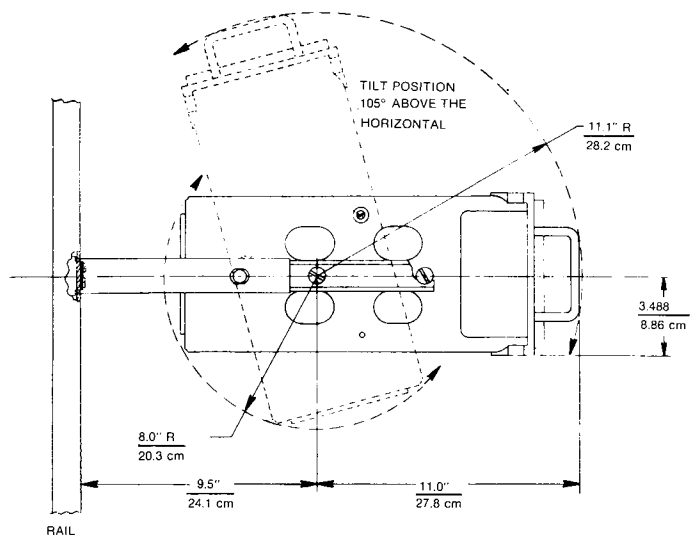

NOTES:  
1. ALL DIMENSIONS ARE REFERENCE DIMENSIONS EXCEPT AS NOTED




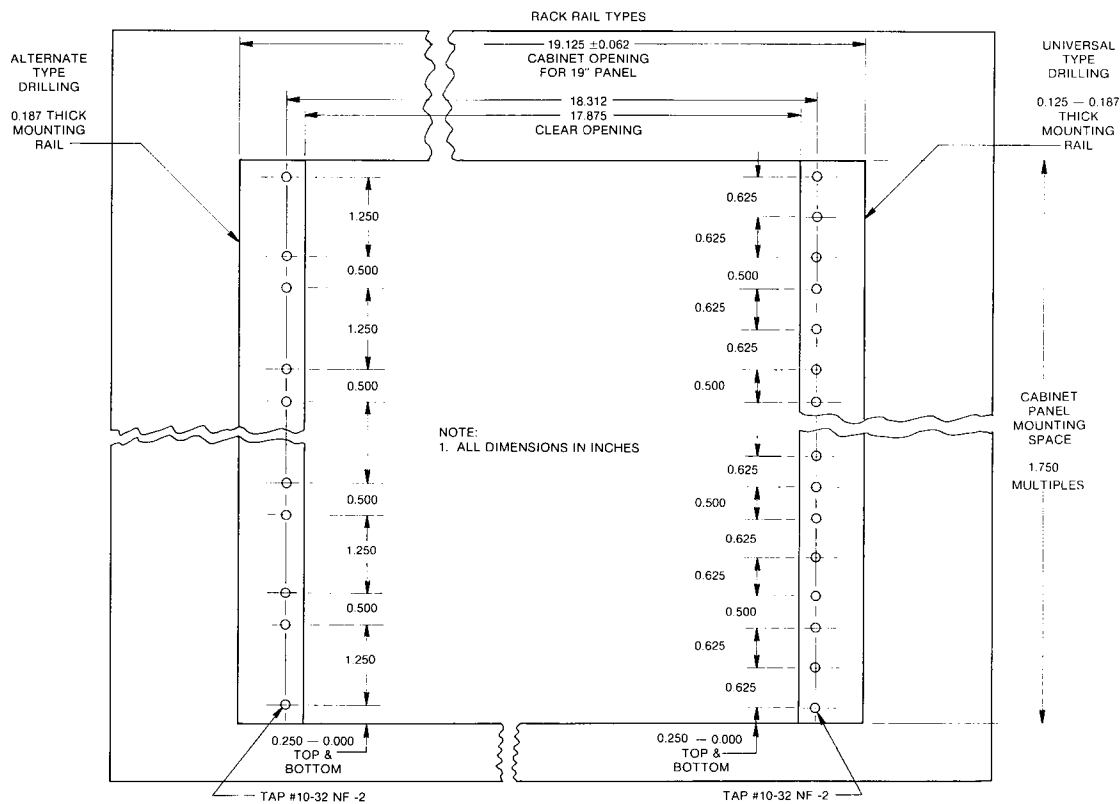


Figure 2-8. Dimensional drawing.

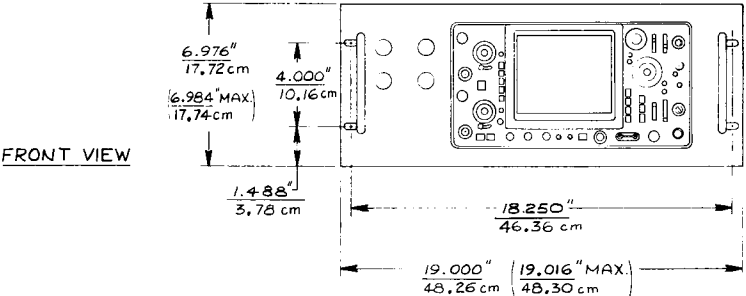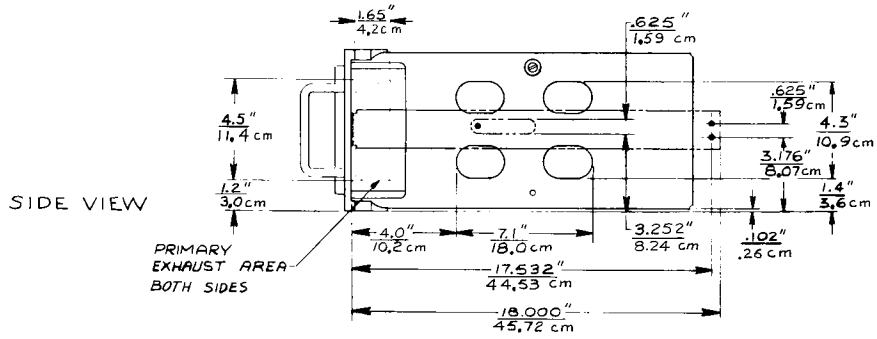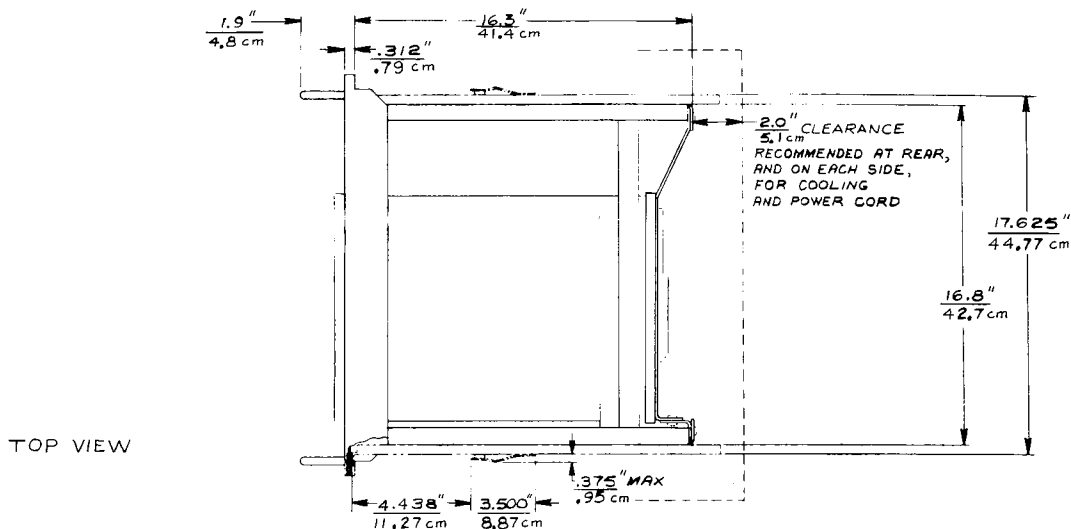

NOTE:  
1. ALL DIMENSIONS ARE REFERENCE  
ONLY UNLESS OTHERWISE NOTED.

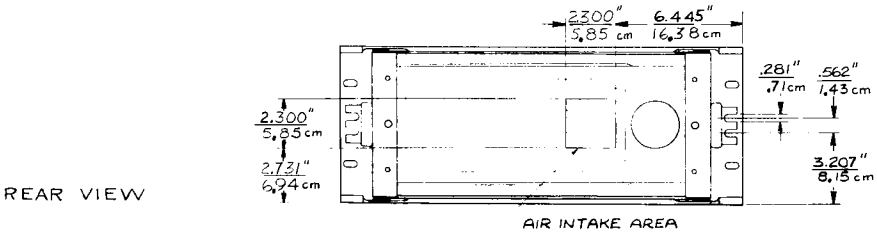


Figure 2-9. Dimensional drawing (cont).

2162-50

Operation Instructions  
465B Service (SN B060000 & UP)

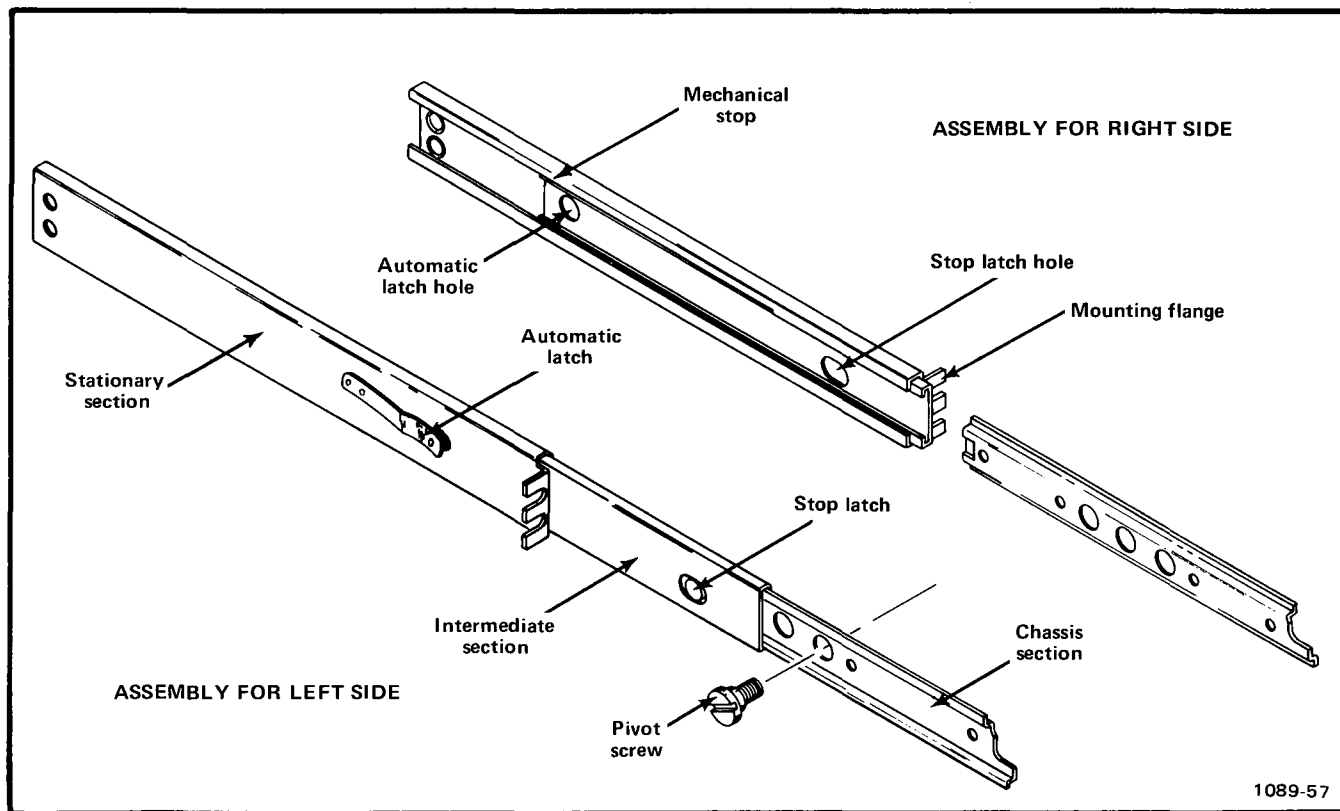


Figure 2-10. Slide-out track assemblies.

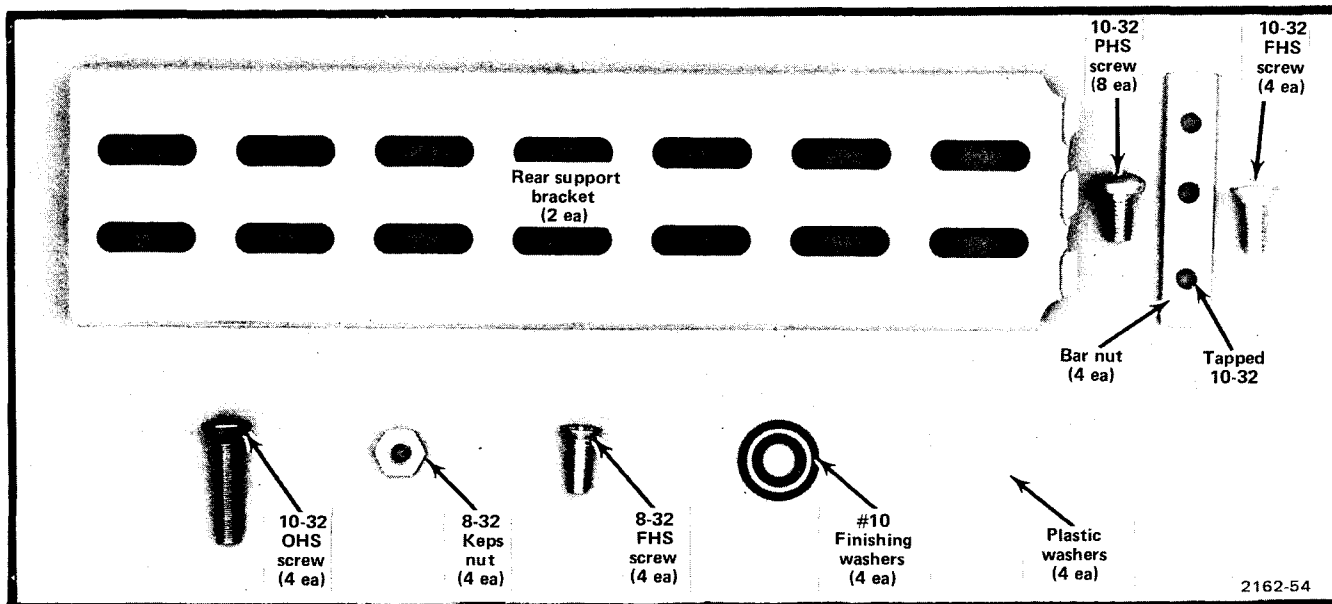


Figure 2-11. Hardware needed to mount the instrument in the cabinet rack.

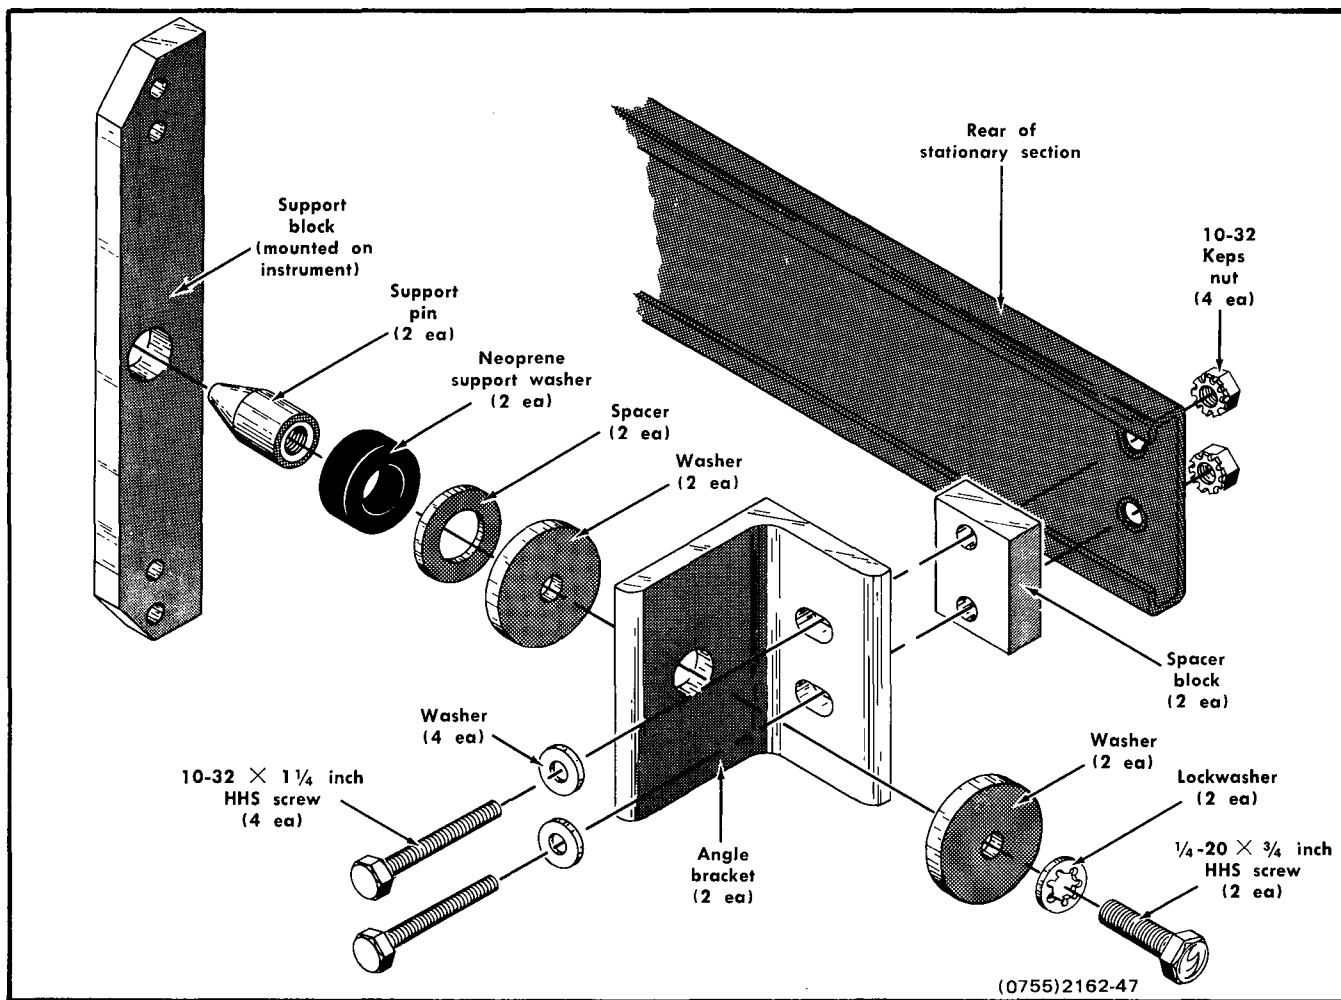


Figure 2-12. Rear support kit.


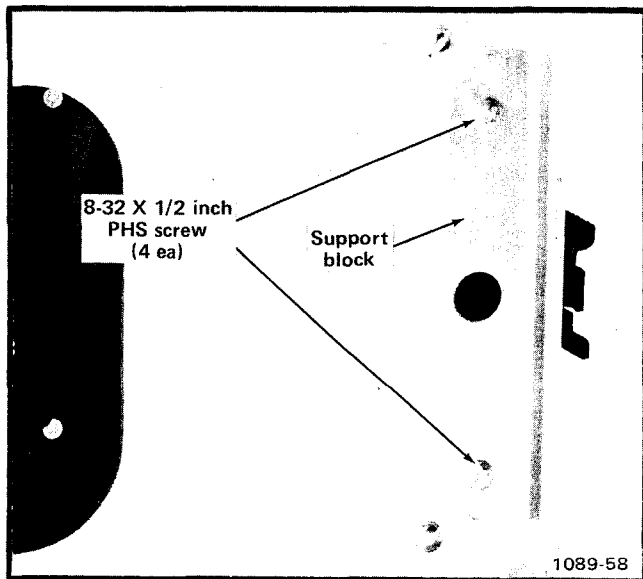


Figure 2-13. Installing the support block on the instrument.

The mounting flanges of the stationary sections may be mounted in front of or behind the front rails of the rack depending on the type of rack. If the front rails of the rack are tapped for 10-32 screws, the mounting flanges are placed in front of the rails. If the front rails of the rack are not tapped for 10-32 screws, the mounting flanges are placed behind the front rail and a bar nut is used. Figure 2-14 shows these methods of mounting the stationary sections.

The rear of the stationary sections must be firmly supported to provide a shock-mounted installation. This rear support must be located 17.471 inches,  $\pm 0.031$  inch, from the outside surface of the front rail when the mounting flange is mounted outside of the rail, or 17.531 inches,  $\pm 0.031$  inch, from the rear surface of the front rail when the mounting flange is mounted behind the front rail. If the cabinet rack does not have a strong supporting member located the correct distance from the front rail, and additional support must be added. The instrument will not meet the environmental specifications unless firmly supported at this point. Figure 2-14 illustrates a typical rear installation using the rear support kit and gives the necessary dimensions.

**Operation Instructions**  
**465B Service (SN B060000 & UP)**

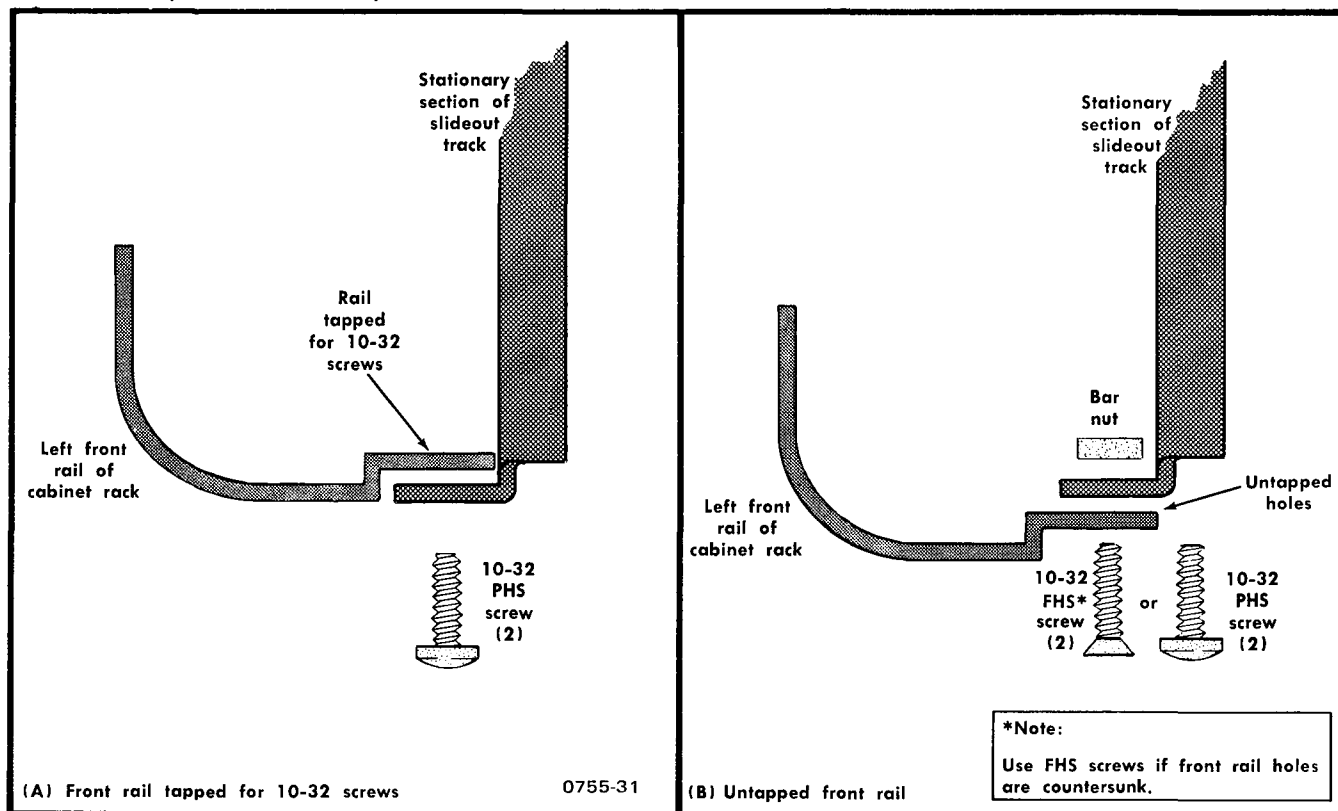

**Figure 2-14. Methods of mounting the stationary section to the front rails.**

Use the following procedure to install the R465B in a rack.

1. Select the proper front-rail mounting holes for the stationary section using the measurements shown in Figure 2-15.

2a. If the mounting flanges of the stationary sections are to be mounted in front of the front rails (rails tapped for 10-32 screws), mount each stationary section as shown in Figure 2-16(A).

2b. If the mounting flanges of the stationary sections are to be mounted behind the front rails (rails not tapped for 10-32 screws), mount each stationary section as shown in Figure 2-16(B).

3. Attach an angle bracket to both rear rails of the rack through the spacer block, stationary section, and into the rear rail of the rack. Note that the holes in the spacer block are not centered. Be sure to mount the block with the narrow edge toward the front of the rack; otherwise, the instrument may not slide all the way into the rack. Do not tighten the mounting screws. Figure 2-12 shows the parts in the rear support kit and the order in which they are assembled.

4. Assemble the support pin to the angle bracket in the order shown in Figure 2-12. Leave the spacer (washer) off, but install the neoprene washer.

5. Install a support block on each side of the instrument as shown in Figure 2-13.

6. Refer to Figure 2-17 to insert the instrument in the rack. Do not connect the power cord or install the securing screws until all adjustments have been made.

7. With the instrument pushed all the way into the rack, adjust the angle brackets so the neoprene washers on the support pins are seated firmly against the rear of the instrument and the support pins are correctly positioned in the support block on the rear of the instrument. Tighten all screws.

8. Pull the instrument partially out of the rack.

9. Remove the neoprene washers from the support pins and place the spacers on the pins. Replace the neoprene washers.



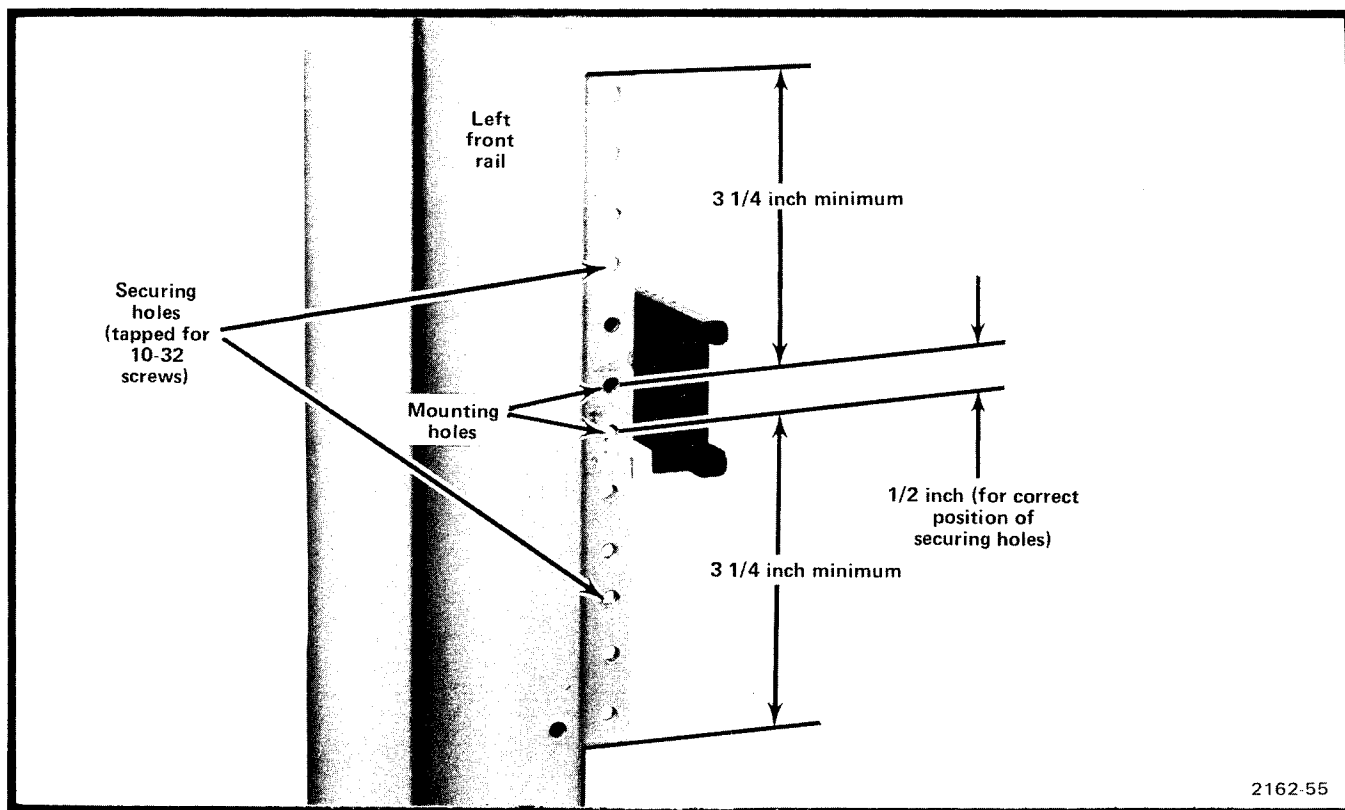


Figure 2-15. Locating the mounting holes for the left stationary section. Same dimensions apply to right stationary section.

10. Position the instrument so the pivot screws (widest part of the instrument) are approximately even with the front rails.

11. Adjust the alignment of the stationary sections according to the procedure outlined in Figure 2-18. (If the rear alignment is changed, recheck the rear support pins for correct alignment.)

12. After the tracks operate smoothly, connect the power cord to the power source.

13. Push the instrument all the way into the rack and secure it to the rack with the securing screws and washers as shown in Figure 2-17.

#### NOTE

*The securing screws are an important part of the shock-mounted installation. If the front rails are not tapped for the 10-32 securing screws, other means must be provided for securing the instrument to the rack.*


## ALTERNATIVE REAR MOUNTING METHODS

### CAUTION

*Although the following methods provide satisfactory mounting under normal conditions, they do not provide solid support at the rear of the instrument. If the instrument is subjected to severe shock or vibration when mounted using the following methods, it may be damaged.*

An alternative method of supporting the rear of the instrument is shown in Figure 2-19. The rear support brackets supplied with the instrument allow it to be mounted in a rack that has a spacing between the front and rear rails of 11 to 24 inches. Figure 2-19(A) illustrates the mounting method if the rear rails are tapped for 10-32 screws, and Figure 2-19(B) illustrates the mounting method if the rear rails are not tapped for 10-32 screws. The rear support kit is not used for this installation.

**Operation Instructions**  
**465B Service (SN B060000 & UP)**

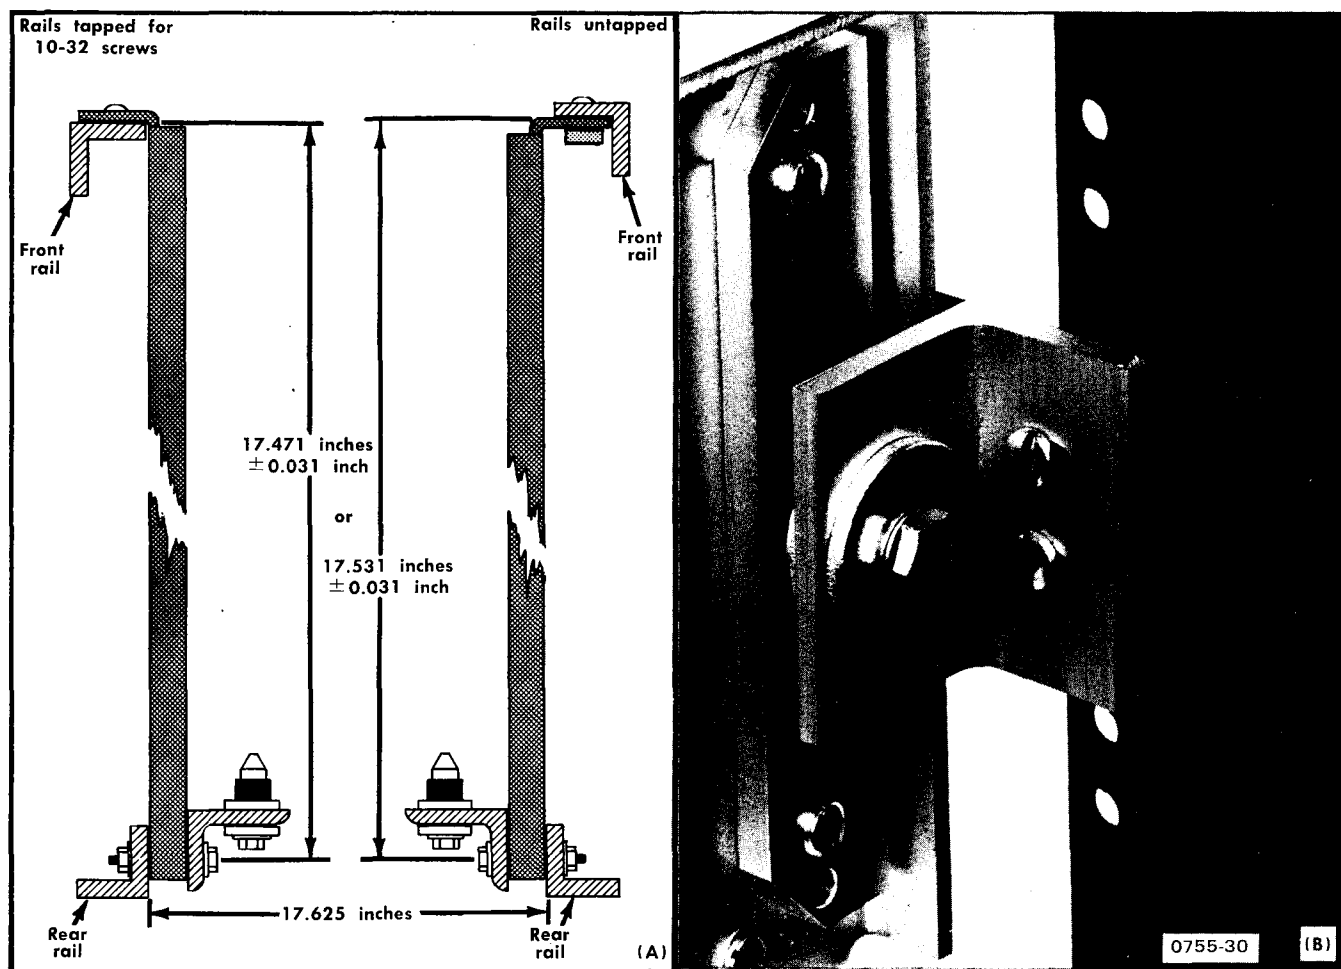

**Figure 2-16. Supporting the rear stationary sections: (A) Dimensions necessary; (B) Completed installation.**

If the rack does not have a rear rail, or if the distance between the front and rear rails is too large, the instrument may be mounted without the use of the slide-out tracks. Fasten the instrument to the front rails of the rack with the securing screws and washers. This mounting method should be used only if the instrument will not be subjected to shock or vibration and if it is installed in a stationary location.

## REMOVING OR INSTALLING THE INSTRUMENT


After initial installation and adjustment of the slide-out tracks, the R465B can be removed or installed by following the instructions given in Figure 2-17. No further adjustments are required under normal conditions.

## SLIDE-OUT TRACK LUBRICATION


The slide-out tracks normally require no lubrication. The special finish on the sliding surfaces provides permanent lubrication. However, if the tracks do not slide smoothly even after proper adjustment, a thin coating of paraffin rubbed onto the sliding surfaces may improve operation.

**TO INSERT THE R465:**


1. Pull the intermediate section (A) of each slide-out track out to its fully extended position.
2. Insert the chassis section (B) (on instrument) into the intermediate sections.
3. Press both stop latches (C) and push the instrument into the rack until the latches snap into the stop latch holes (D).

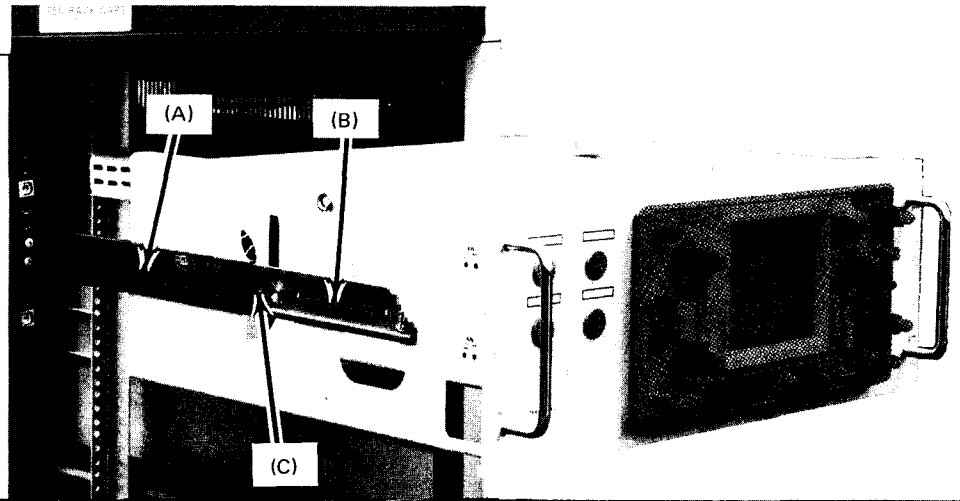

4. Connect the power cord to the power source.
5. Again press the stop latches (D) and push the instrument all the way into the rack.
6. To secure the R465 to the rack, insert the 4 securing screws (E), with finishing washers and teflon washers, through the slots in the instrument front panel and screw them into the front rails of the rack.

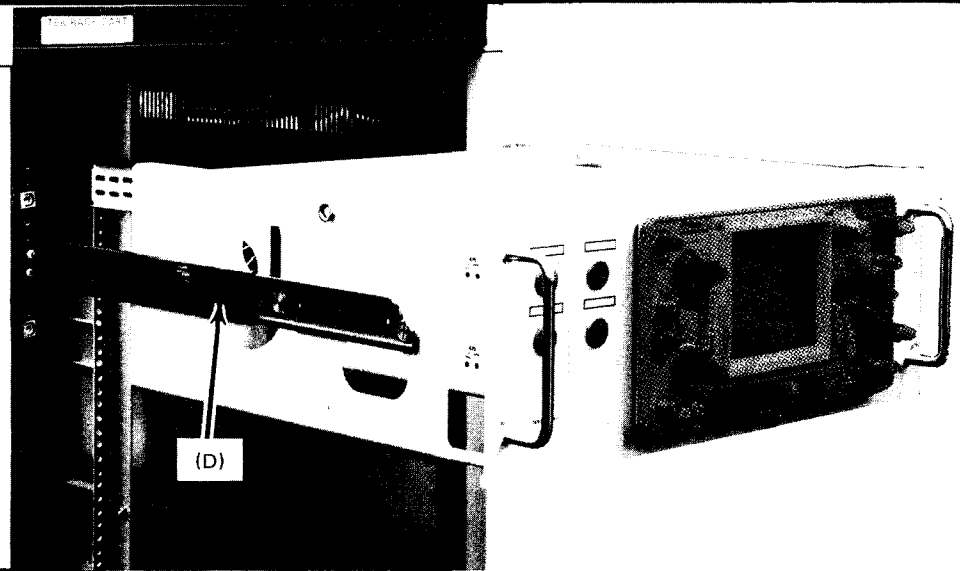**TO REMOVE THE R465:**

1. Remove the securing screws and washers (E).
2. Pull the instrument outward until the stop latches snap into the stop latch holes.
3. Disconnect the power cord.
4. Press both stop latches (D) and pull the instrument out of the rack.

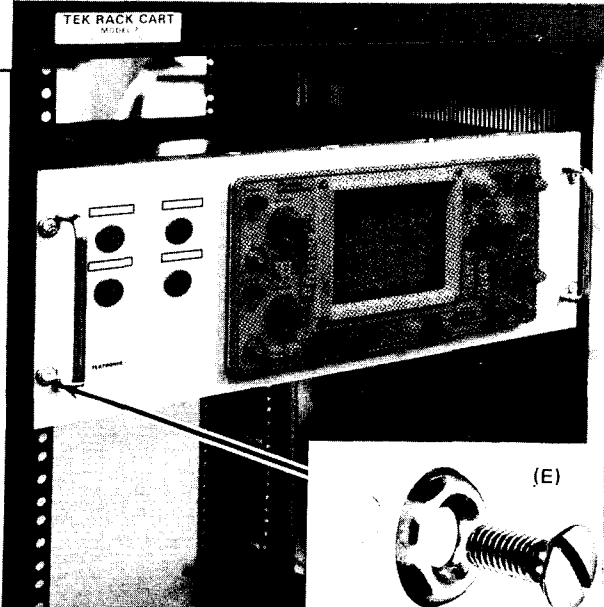

1861-32

Figure 2-17. Procedure for inserting or removing the instrument after the slide-out tracks have been installed.

Operation Instructions  
465B Service (SN B060000 & UP)

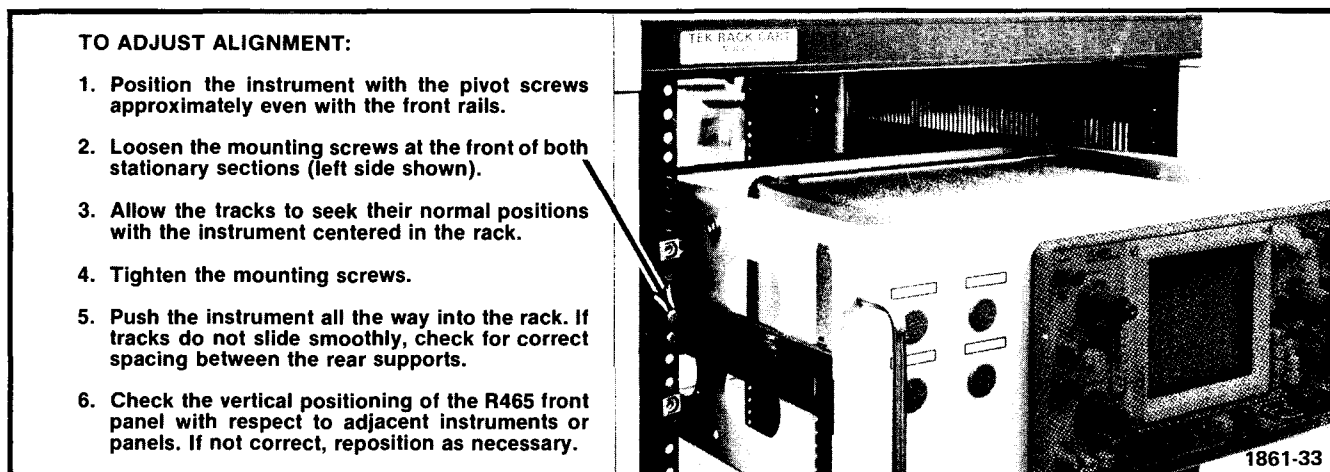


Figure 2-18. Alignment adjustment for correct operation.

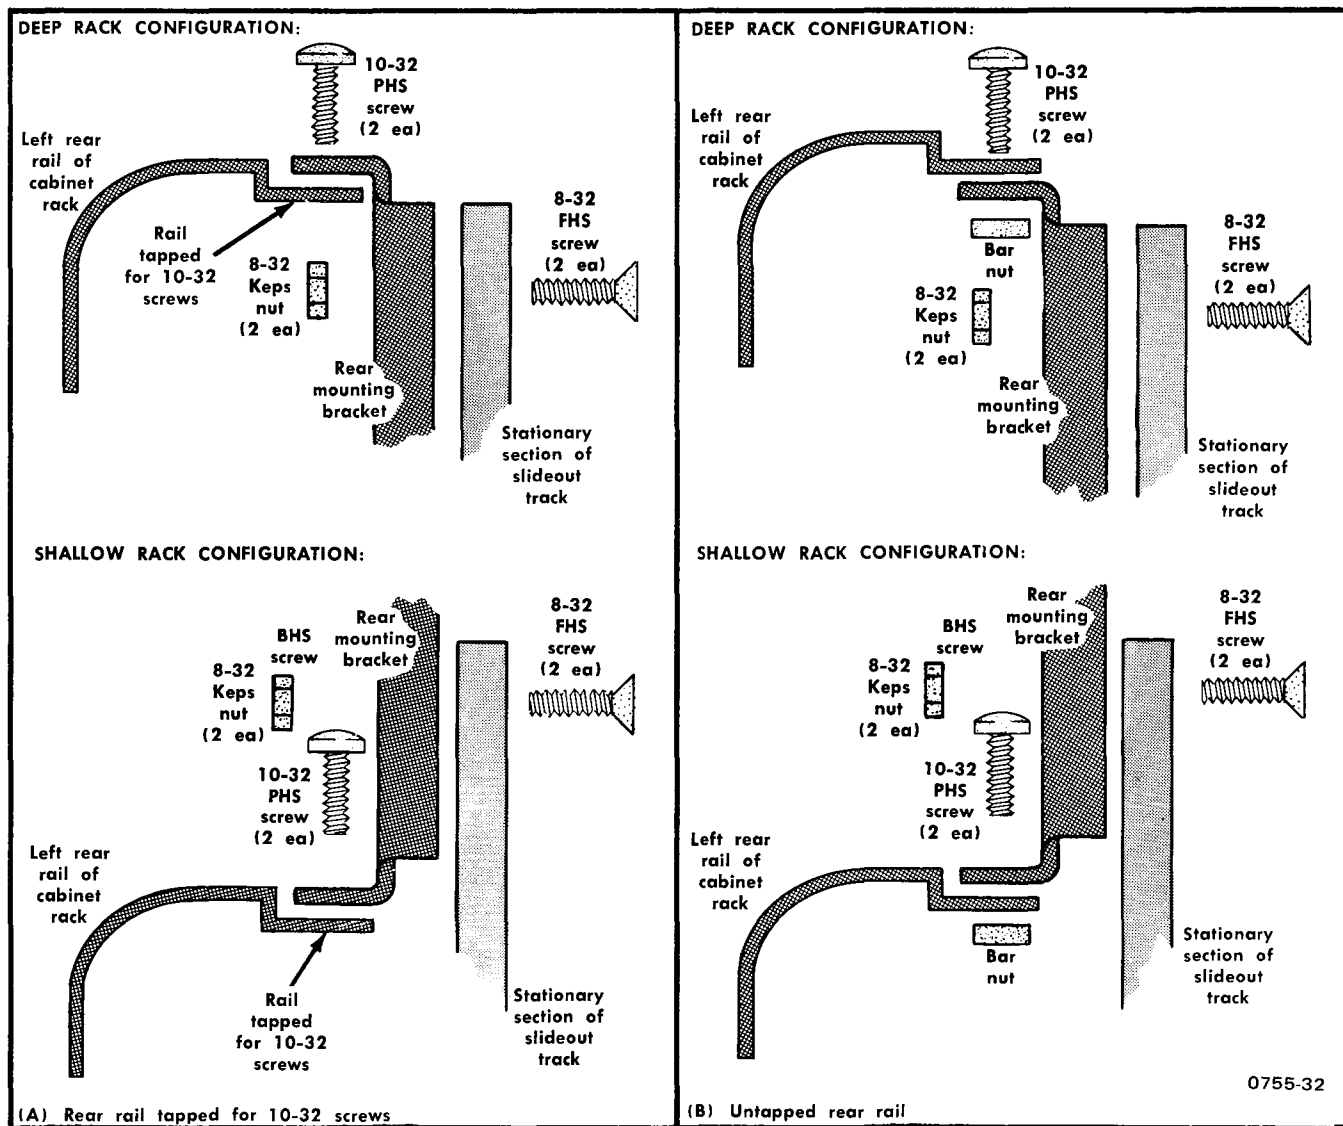


Figure 2-19. Alternative method of installing the instrument using rear support brackets.

# THEORY OF OPERATION

## INTRODUCTION

### SECTION ORGANIZATION

This section of the manual contains a functional description of the circuitry used in the 465B Oscilloscope. It begins with a general summary of the instrument, using the basic block diagram shown in Figure 3-1. As an additional reference, a comprehensive overall block diagram is provided in the tabbed Diagrams section at the back of this manual.

Each major circuit is explained in detail, using additional functional block diagrams to show the interconnections between parts comprising the circuit, to indicate circuit components, and to identify interrelationships with front-panel controls. Schematic diagrams also are provided in the Diagrams section of the manual and are keyed to their respective circuit descriptions by numbered diamond symbols. For optimum understanding of the circuit being described, you should refer to both the appropriate schematic diagram and functional block diagram.

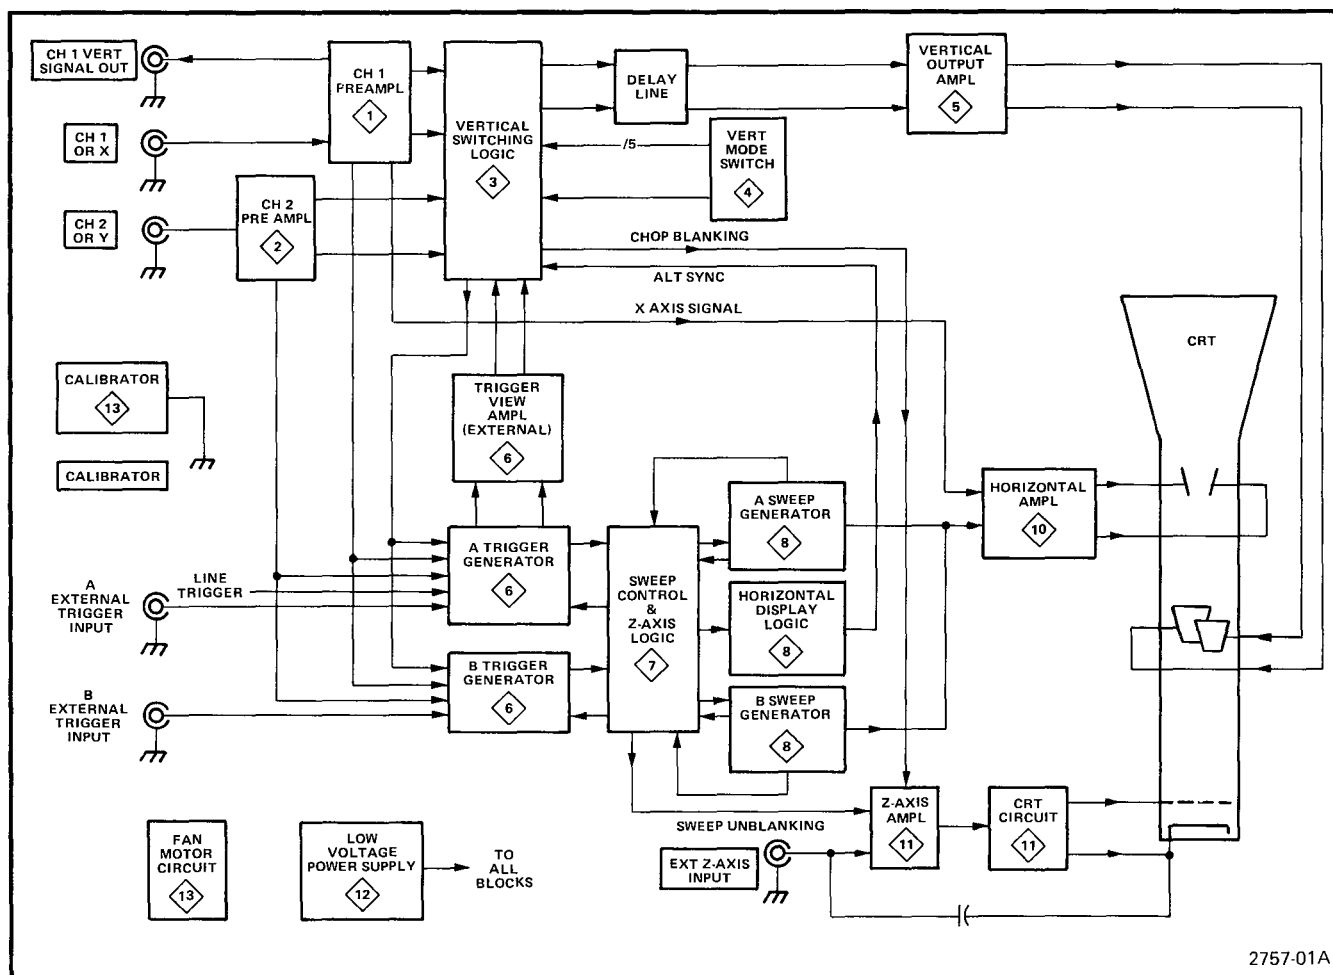


Figure 3-1. Basic block diagram of the 465B Oscilloscope.

**Theory of Operation**  
**465B Service (SN B060000 & UP)**

## INTEGRATED CIRCUIT DESCRIPTIONS

### Digital Logic Conventions

Digital logic techniques are used to perform many functions within this instrument. Function and operation of the logic circuits are represented by logic symbology and terminology. All logic functions are described using the positive logic convention. Positive logic is a system of notation whereby the more positive of two levels is the true, or 1 state; the more negative level is the false, or 0 state. In the

logic description the true state is referred to as LO. The specific voltages that constitute a HI or a LO state vary between specific devices.

### Linear Devices

The functioning of individual linear integrated circuit devices is described in this section using waveforms or other techniques to illustrate their operation.

## GENERAL DESCRIPTION

The following discussion provides an overall functional description of the 465B Oscilloscope. Refer to the basic block diagram, Figure 3-1, and to the detailed block diagram located in the Diagrams section of this manual. Each major block in these diagrams represent a major circuit within the instrument. The numbered diamond symbol on each block refers to the appropriate schematic diagram also located in the Diagrams section.

Signals to be displayed on the crt are applied to the CH 1 OR X input connector or the CH 2 OR Y input connector. These input signals then are amplified by the Preamplifiers. Each channel includes separate vertical deflection factor, input coupling, balance, gain, and variable attenuation switches or controls. A trigger pickoff stage in each Vertical Preamplifier supplies a sample of that channel's signal to the Trigger Generator circuit. A sample of the Channel 1 signal is also supplied to the CH 1 VERT SIGNAL OUT connector on the instrument rear panel.

In the X-Y mode of operation the Channel 1 signal is connected to the input of the Horizontal Amplifier circuit to provide the X-axis deflection. The Channel 2 signal is amplified by the Vertical Output Amplifier circuit to provide the Y-axis deflection. The Channel 2 Vertical Preamplifier circuit contains an invert feature to allow the operator to invert the Channel 2 signal displayed on the crt.

The outputs of both Vertical Preamplifier circuits and the output of the A Trigger View Amplifier circuit are connected to the Vertical Switching circuit. The Vertical Mode Switch circuit uses the inputs from the VERT MODE switches and the X-Y position of the A TIME/DIV switch to set the Vertical Switching circuit into the chosen Vertical Mode of operation. The Vertical Switching circuit then will select the input(s) to be displayed on the crt.

The Chopped Blanking signal, used to blank the switching transients between channels when the chopped mode of operation is selected, is produced in the Vertical Switching circuit and fed to the Z-Axis Amplifier circuit. A Normal Trigger pickoff stage at the output of the Vertical Switching circuit provides a sample of the displayed signal(s) to the Trigger Generator circuits.

The output of the Vertical Switching circuit is connected to the Vertical Output Amplifier through the Delay Line. The Vertical Output Amplifier circuit provides final amplification of the signal before it is connected to the vertical deflection plates of the crt. This circuit includes part of the BEAM FINDER switch, which, when activated, limits vertical deflection to within the graticule area so that location of off-screen displays is facilitated.

The A and B Trigger Generator circuits each create an output pulse that initiates the sweep produced by either the A or B Sweep Generator circuits. The input signal to the A and B Trigger Generator circuits can be individually selected from any of the following sources: Channel 1 signal, Channel 2 signal, signal(s) displayed on the crt (Normal), signal(s) connected to the External Trigger Input connectors, or a line voltage sample (A Trigger only). Each trigger circuit contains level, slope, coupling, and source controls. The A External Trigger input is also fed to the A Trigger View Amplifier where it is amplified and made available to the Vertical Switching circuit for selection to be viewed on the crt.

The A Sweep Generator circuit, when activated by the A Trigger Generator circuit, produces a linear sawtooth output signal, the slope of which is controlled by the A TIME/DIV switch. The TRIG MODE switches control the operating mode of the A Trigger Generator circuit. When AUTO is selected, the absence of an adequate trigger signal for ap-

proximately 100 ms after the end of holdoff causes an A Sweep start gate to be generated. When NORM is selected, a horizontal sweep is presented only when triggered by an adequate trigger signal. Pushing the SINGL SWP push button sets the Sweep Logic to initiate one sweep after a trigger pulse is received.

The Z-Axis logic circuit produces a gate signal to unblank the crt so that the display can be presented. This gate signal is coincident with the sawtooth produced by the A Sweep Generator circuit. The A gate signal, which is also coincident with the sawtooth, is available at the A +GATE connector on the instrument rear panel. The Sweep Control Logic circuit also produces a Horizontal Alternate Sync pulse. This pulse is fed to the Horizontal Display Logic circuit to switch the display between A Intensified and B Delayed sweeps when the ALT Horizontal Display mode is selected.

The B Sweep Generator circuit is basically the same as the A Sweep Generator circuit. However, this circuit only produces a sawtooth output signal when a delay time period, determined by the DELAY TIME POSITION dial has lapsed, or when a trigger pulse is received from the B Trigger Generator circuit. If the B TRIGGER SOURCE switch is set to the STARTS AFTER DELAY position, the B Sweep Generator begins to produce the sweep immediately following the selected delay time. If the SOURCE switch is in one of the remaining positions, the B Sweep Generator circuit does not produce a sweep until it receives a trigger pulse from the B Trigger Generator circuit.

The output of either the A or B Sweep Generator is amplified by the Horizontal Amplifier circuit to produce horizontal deflection for the crt, except when the A TIME/DIV switch is in the fully counterclockwise (X-Y) position. The Horizontal Amplifier circuit contains a X10 magnifier that may be selected to increase the sweep rate 10 times in any A or B TIME/DIV switch position. Other deflection signals may be connected to the Horizontal Amplifier by using the X-Y mode of operation. When the TIME/DIV switch is set to X-Y, the X signal is connected to the Horizontal Amplifier circuit through the Channel 1 Vertical Preamplifier circuit.

The Z-Axis Amplifier circuit determines the crt intensity and blanking. The Z-Axis Amplifier circuit sums the current inputs from the INTENSITY control, Vertical Switching circuit (chopped blanking), Z-Axis Logic circuit (unblanking), and the EXT Z-AXIS Input connector. The output level of the Z-Axis Amplifier circuit controls the trace intensity through the CRT circuit. The CRT circuit provides the voltages and contains the controls necessary for operation of the cathode-ray tube.

The Power Supply circuit provides the low voltage power necessary for operation of the 465B. Low voltage power is distributed to all circuits in the instrument.

The Calibrator circuit produces a square-wave output (with both accurate voltage and current amplitudes) that is useful for both checking the calibration of the instrument and compensating probes. The CALIBRATOR current loop provides an accurate current source for calibration of current-measuring probe systems.

# DETAILED DESCRIPTION

## CHANNEL 1 PREAMP 1

### Introduction

The Channel 1 Preamplifier circuit, shown in Figure 3-2, provides control of input coupling, vertical deflection factor, gain, and dc balance. Input signals for vertical deflection on

the crt are connected to the CH 1 OR X input connector. When the TIME/DIV switch is set to the X-Y mode, the input signal applied to the CH 1 OR X connector provides the horizontal (X-axis) deflection.

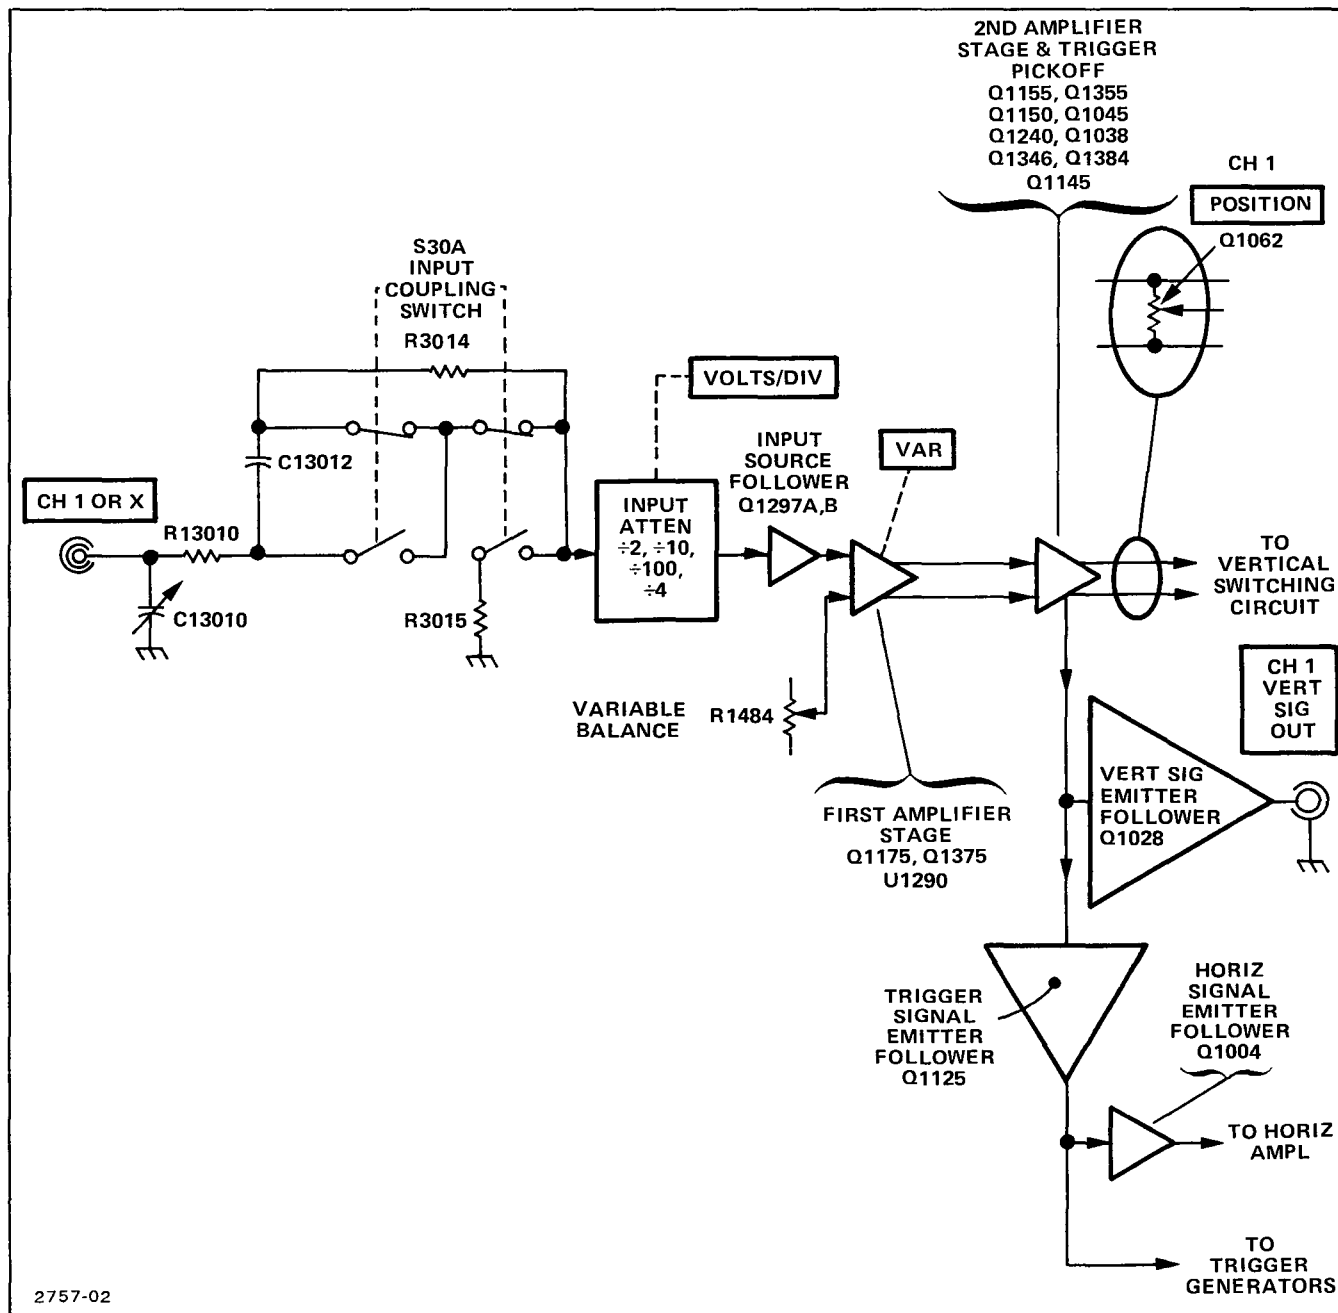


Figure 3-2. Detailed block diagram of the Channel 1 Preamplifier circuit.



## Input Coupling

Signals applied to the input connector can be either ac coupled or dc coupled, or they can be internally disconnected from the input to the Vertical Input Amplifier stages. When Input Coupling switch S30A is set for dc coupling, the input signal is coupled directly to the Input Attenuator stage. When ac coupled, the input signal passes through capacitor C13012, which prevents the dc component of the input signal from passing to the amplifier. In the GND position of S30A, the signal path is opened and the input of the amplifier is connected to ground through R3015. This provides a ground reference without the need to disconnect the applied signal from the input connector. Resistor R3014 is a high resistance connected across Input Coupling switch S30A, which allows C13012 to be precharged when the switch is in the GND position. Therefore, the trace remains within the viewing area of the crt when the switch is placed in the AC position.

## Input Attenuator

The effective overall deflection factor of each vertical channel of the 465B is determined by the setting of the Channel VOLTS/DIV switch. The basic deflection factor of the Vertical Deflection System is 5 mV/div of crt deflection. To achieve the deflection factor values marked on the front panel, precision attenuators are switched into the input of the Vertical Preamplifier circuit.

For VOLTS/DIV switch positions above 5 mV, frequency compensated-voltage dividers (attenuators) are switched into the circuit to produce the vertical deflection factors indicated on the front panel. Each channel has a 2X, 4X, 10X, and 100X attenuator that may be selected in various combinations. A constant attenuation is provided at all frequencies within the bandwidth range of the instrument. The Input Attenuators are designed to maintain the same input characteristics (1 M $\Omega$  and approximately 20 pF) for each setting of the VOLTS/DIV switch. Each attenuator contains an adjustable series capacitor to provide correct attenuation at high frequencies and an adjustable shunt capacitor to provide correct input capacitance.

### NOTE

*Each attenuator is a hybrid encapsulated plug-in assembly; therefore, replacement of individual components within the attenuator is not possible. Should defects occur, the attenuator must be replaced as a unit.*

## Source Follower

The Channel 1 signal from the input attenuator is connected to Source Follower Q1297A through R3042, C3042,

and R3045. Resistor R3039 provides the input resistance and resistor R3045 functions as a damping resistor. Transistor Q1297B is a constant current source for Q1297A. Transistors Q1297A and B provide a high input impedance for the attenuators and the current drive needed for the First Amplifier.

In the event that excessively high-amplitude signals are applied to Source Follower Q1297A, the signal will be limited by CR1298 and the gate-source junction of Q1297A. If the negative signal amplitude causes CR1298 to become forward biased, Q1297A gate is clamped to approximately -8.7 V. Excessive positive signal amplitude will forward bias the gate-source junction of Q1297A. As soon as gate current flows, the gate voltage will cease increasing. Gate current is limited to a safe value by the high resistance of R3042.

## First Amplifier

The First Amplifier stage is an integrated emitter-coupled, push-pull, cascode amplifier, U1290. The input signal on pins 13 and 16 is converted from a single-ended signal to a push-pull signal by a paraphase amplifier and then is fed to the common base output stage to produce the current drive to Q1175 and Q1375. The CH 1 VAR VOLTS/DIV control, which is connected to pin 11 of U1290, varies the gain of the First Cascode Amplifier stage. This control provides variable vertical deflection at each position of the VOLTS/DIV switch. With the VAR control in its calibrated detent (wiper at ground), the A and D output transistors of U1290 are conducting. The B and C output transistors are biased off. Thus, the signal current available to the following amplifier stage is the collector current flowing in output transistors A and D.

When the VAR control is rotated out of its calibrated detent, the B and C output transistors of U1290 begin to conduct by an amount determined by the position of the VAR control. This causes two events to occur.

1. The signal current flowing in the A and D output transistor is reduced by the amount of signal current flowing in the B and C output transistors.

2. Output transistors A and C and output transistors B and D conduct current of opposite polarity. The output of transistor C is added to the output of transistor A to reduce the signal current available at pins 5 and 6, and the output current of transistor B is added to the output current of transistor D to reduce the signal current available at pins 8 and 9.

## Theory of Operation 465B Service (SN B060000 & UP)

The component values selected for the variable function provide a variable attenuation ratio of approximately 2.5 to 1. Channel 1 Variable Balance adjustment R1484 is adjusted so that no trace shift in the display occurs when rotating the VAR control. When the Channel 1 VAR control is out of its calibrated detent, the Channel 1 UNCAL LED is illuminated. The components connected between pins 2 and 3 of U1290 provide frequency compensation for the stage.

Transistors Q1175 and Q1375 are common-base amplifiers that convert the output current signals from U1290 into voltage signals to be amplified in the Second Amplifier circuit. Gain adjust R1482 allows setting of the overall gain of the Channel 1 Vertical Preamp by adjusting the signal voltage to the bases of Q1155 and Q1355.

### Second Amplifier

Transistors Q1155 and Q1355, in conjunction with Q1344 and Q1346 in the Vertical Switching circuit, form a push-pull cascode amplifier. Diodes CR1263, CR1264, and thermister RT1267 provide temperature compensation for the high-frequency gain amplifier to ensure constant gain in the presence of varying ambient temperature. As temperature increases, the resistance value of RT1267 decreases, and the reverse bias on both CR1263 and CR1264 decreases. Both CR1263 and CR1264 are voltage-variable capacitors whose capacitance increases as reverse bias decreases. The increase in capacity at higher temperatures provides additional high-frequency peaking to counteract the effects of increased temperature on the amplifier's gain.

The push-pull signals at the emitters of Q1155 and Q1355 are converted to a single-ended signal by Q1150, Q1250, Q1045, and Q1145. The current signal from Q1145 is converted to a voltage signal by common-base amplifier stage Q1038 and applied to the bases of Q1125 and Q1028. Transistor Q1028 provides the output signal to the CH 1 VERT SIGNAL OUT output connector located on the instrument rear panel. Diodes CR1014, CR1024, CR1023, and CR1013 protect the emitter circuit of Q1028 in the event large signal levels are accidentally connected to the CH 1 VERT SIGNAL OUT connector. The output signal at the emitter of Q1125 is used as the trigger signal source in the CH 1 positions of the Trigger SOURCE switches and as the signal source for emitter follower Q1004. Potentiometer R1126 adjusts the dc level of the CH 1 trigger source signal. When in the X-Y mode, Q1004 provides the X-axis signal from the Channel 1 Preamp to the Horizontal Amplifier.

Potentiometer R1055 is the Channel 1 Vertical POSITION control. When set to its mid-position, the constant current supplied by Q1062 flows equally through each side of R1055 into the collectors of Q1155 and Q1355. As the POSITION control is rotated off its mid-point, one side of the amplifier receives more current while the other side of

the amplifier receives less current. This proportionally changes the amount of current flowing into the Delay Line Drivers, causing the trace to be positioned vertically on the crt. The mid-range operating point of the POSITION control is set by adjusting R1135.

## CHANNEL 2 PREAMP

### Introduction

The Channel 2 Preamp circuit (diagram 2) is similar to the Channel 1 Preamp circuit. Only the differences between the two circuit are described in this part. Input signals for vertical deflection on the crt are connected to the CH 2 OR Y input connector. When the TIME/DIV switch is set to the X-Y mode, the Channel 2 input signal provides the vertical (Y-axis) deflection.

### First Amplifier

Basically, the First Amplifier stage in Channel 2 operates the same as the First Amplifier stage in Channel 1. However, the Channel 2 circuit also contains the INVERT switching function. This allows the Channel 2 crt display to be inverted. When pushed in, the INVERT switch changes the biasing on the output transistors of U1790 so that the normally inactive transistors (B and C) now carry the signal. Since their outputs are cross-coupled from side to side, the output signal is of opposite polarity from the signal available when the INVERT switch is in the normal (button out) position. Channel 2 Invert Balance potentiometer R1975 allows the dc balance of the stage to be adjusted to eliminate baseline shift in the display when switching from a normal to an inverted display.


## VERTICAL SWITCHING LOGIC

### Introduction

The Vertical Switching Logic (Figure 3-3) determines the input signal or combination of input signals to be connected to the Vertical Output Amplifier. Possible input signal combinations that may be displayed are selected by a read-only memory (ROM) integrated circuit that is controlled by the VERT MODE switches and the X-Y position of the TIME/DIV switch.

### Diode Gates

The Channel 1, Channel 2, and Trigger View Diode Gates, consisting of four diodes each, act as switches that are controlled by the Vertical Switching Logic circuit. Outputs  $Q_0$ ,  $Q_1$ , and  $Q_2$  of U1705 (pins 2, 7, and 10) control the switching transistors that switch the Diode Gates on or off. These output signals also are fed into the  $A_0$ ,  $A_1$ , and  $A_2$  inputs of ROM U1605 (pins 5, 6, and 7), to indicate the state of the switches. (Refer to the Maintenance section of this manual for a Logic Table of the ROM functions.) A LO indi-

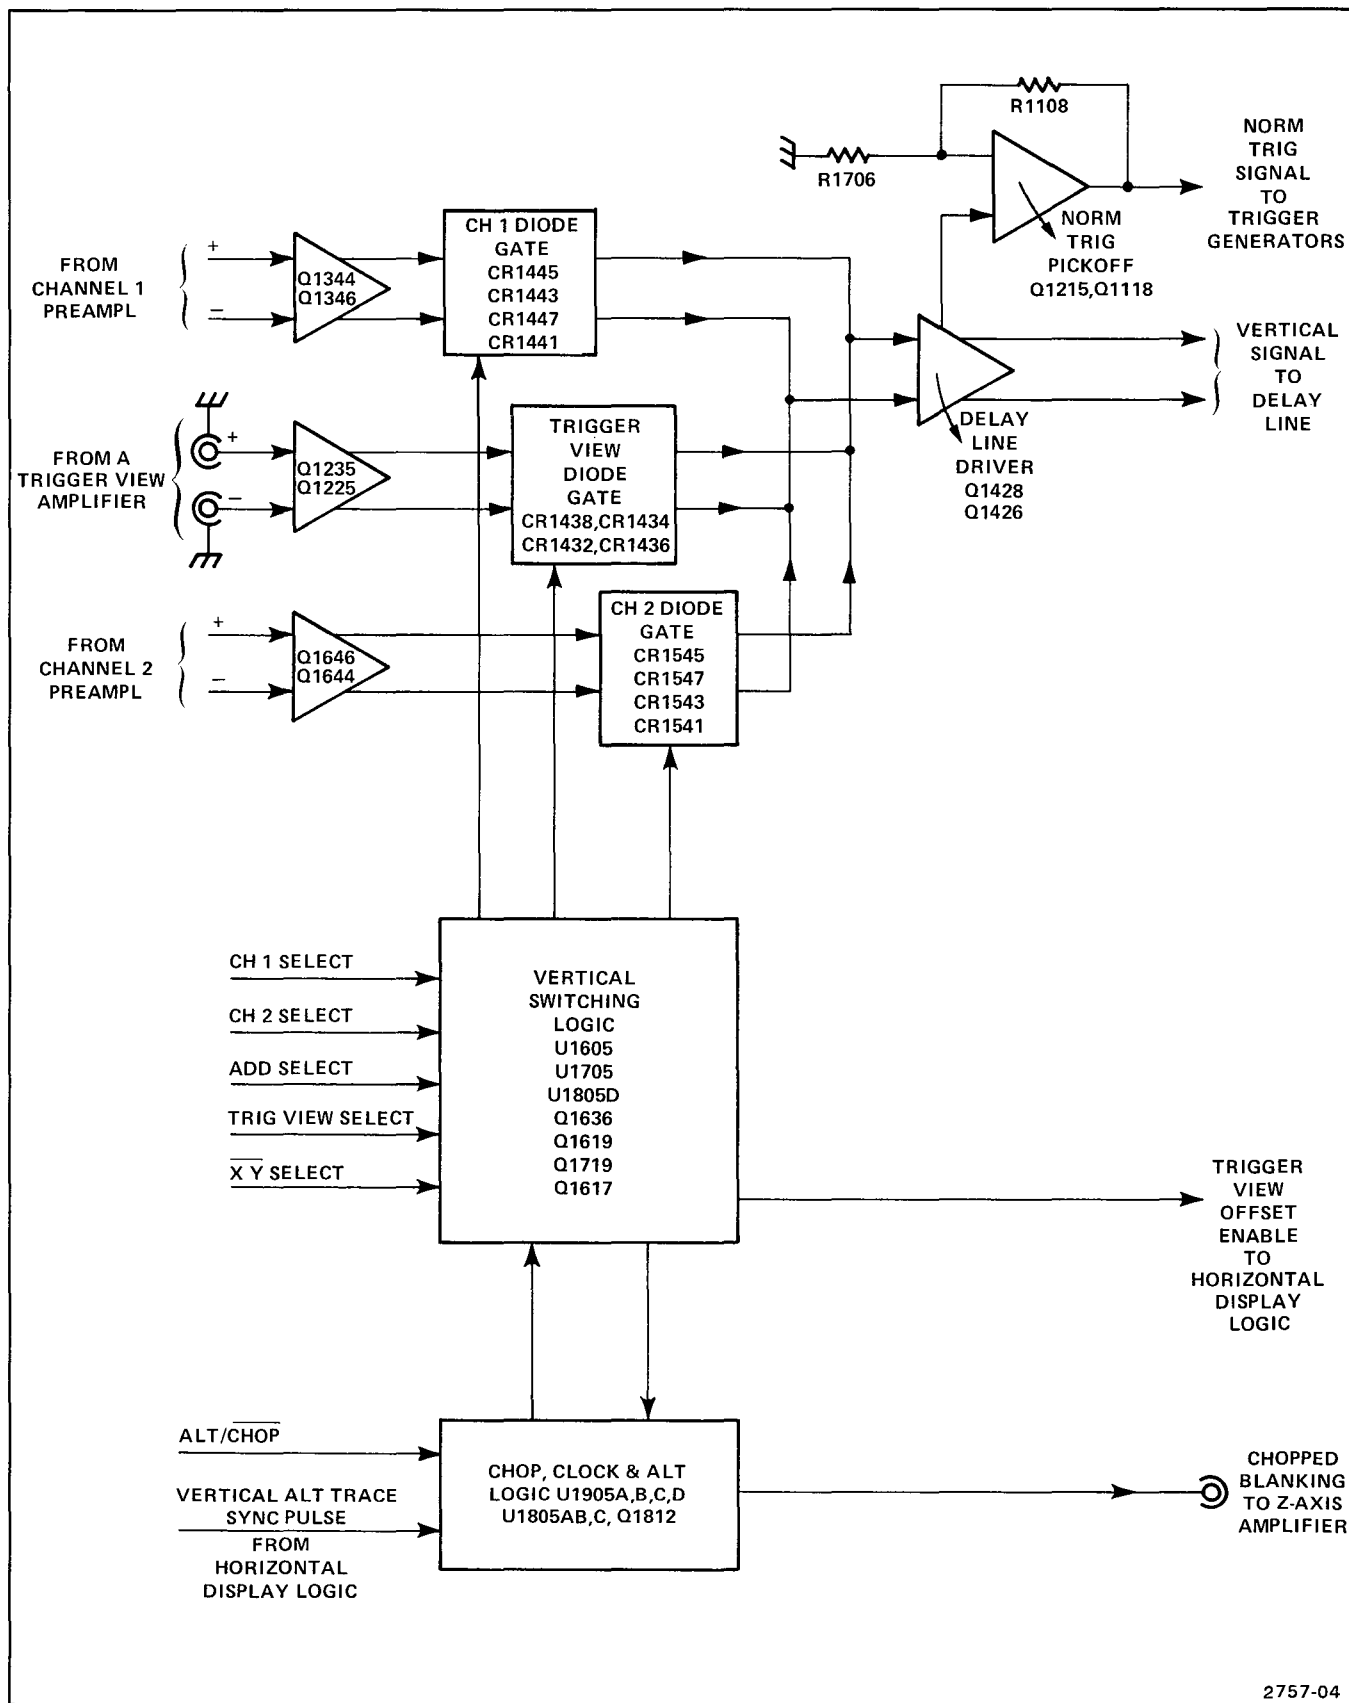

2757-04

Figure 3-3. Detailed block diagram of the Vertical Switching Logic circuit.

## Theory of Operation 465B Service (SN B060000 & UP)

cates that a particular switch is on, and a HI indicates it is off. The ROM is programmed to use the state indicators from U1705 and the selected VERT MODE inputs to U1605  $A_3$  through  $A_7$  (pins 4,3,2,1 and 15) to turn on the correct Diode Gates for obtaining the selected signal, or combination of signals, to be displayed.

**CHANNEL 1 DISPLAY ONLY.** When the CH 1 VERT MODE push button is pressed, a HI is applied to the  $A_3$  input of U1605. The  $A_4$ ,  $A_5$ , and  $A_6$  inputs will be LO and the  $A_7$  input (controlled by the X-Y position of the A TIME/DIV switch) will be HI. This combination of inputs is decoded to switch transistor Q1619 on, which turns on the Channel 1 Diode Gate. The  $O_1$  output of U1605 will be LO, the  $O_2$  and  $O_3$  outputs will be HI. The  $O_4$  output, which controls the CHOP oscillator, will be low. A LO will disable the CHOP clock and U1705 will remain in a state that allows the Diode Gates to pass only the Channel 1 input signal to the Delay Line Driver.

With Channel 1 only selected, the  $Q_0$  output of U1705 will be LO. The LO will turn on transistor Q1619 and the junction of CR1447 and CR1443 will be returned to the +5 V supply through R1625 and Q1619. This raises the junction voltage to reverse bias CR1447 and CR1443. Then, CR1445 and CR1441 are forward biased and the Channel 1 input signal passes through CR1441 and CR1445 to the Delay-Line Driver.

Diodes CR1432 and CR1434 in the Trigger View Diode Gate and CR1547 and CR1543 in the Channel 2 Vertical Signal Diode Gate remain forward biased through the pull-down resistors to the -8 V power supply. Trigger View signals and the Channel 2 input signals are shunted to the -8 V supply and are blocked from the Delay Line Driver because CR1438 and CR1436 in the Trigger View Diode Gate and CR1545 and CR1541 in the Channel 2 Vertical Signal Diode Gate are reverse biased.

**CHANNEL 2 DISPLAY ONLY.** When CH 2 VERT MODE is selected, Q1719 turns on; Q1619 and Q1617 remain off. The center diodes of the Channel 1 Diode Gate and the center diodes of the Trigger View Diode Gate are forward biased, and the center diodes of the of the Channel 2 Diode Gate are reverse biased. Trigger view and Channel 1 signals are blocked from the Delay Line Driver, and the Channel 2 input signal is connected to the Delay Line Driver.

**A TRIGGER VIEW (EXT ONLY).** When A TRIG VIEW is selected, the Channel 1 and Channel 2 DIODE Gates are biased off, and the Trigger View Diode Gate is biased on to allow the External Trigger signal to be connected to the Delay Line Driver. In all single input selections (CH 1 only, CH 2 only, or A TRIG VIEW only) the clock is disabled and U1705 remains in a state to select only the single input chosen to be displayed.

**ADD VERTICAL MODE.** Integrated circuit U1605 is programmed to turn on transistors Q1619 (CH 1) and Q1719 (CH 2). The logic from U1705 will turn on Q1636 (ADD) at the same time, if ADD VERT MODE is selected. It is not necessary to select Channel 1 or Channel 2 to obtain the ADD display. With ADD selected, the  $Q_0$  and  $Q_1$  outputs of U1705 will be LO, and the  $\bar{Q}_0$  and  $\bar{Q}_1$  outputs will be HI. This will cause both Channel 1 and Channel 2 Diode Gates to be on. With  $\bar{Q}_0$  and  $\bar{Q}_1$  HI, U1805D will be enabled to turn on Q1636. The junction of R1532 and R1534 will have -8 V applied to provide sufficient additional current to keep both Diode Gates turned on without altering the dc levels associated with the Delay Line Driver. By selecting additional VERT MODEs, it is possible to view the Channel 1 input, the Channel 2 input, the A External Trigger input, and ADD MODE on the crt during one display cycle on four separate traces.

**X-Y MODE.** When the A TIME/DIV switch is set to X-Y, a LO is applied to pin 15 of U1605. The ROM is programmed to produce outputs that turn on Channel 2 switching transistor Q1719 and disable the CHOP clock. This action causes the Channel 2 input to be connected to the Delay Line Driver for the Y-axis signal. It is not necessary to select Channel 2 VERT MODE, since the ROM will not respond to any other input while the X-Y mode is selected.

### Chop Clock and Alternate Logic

Integrated circuit U1905B, U1805A, resistors R1904, R1903, and capacitor C1804 make up the Chop Clock Oscillator circuit. When the  $O_4$  output of U1605 is HI and the CHOP MODE is selected, a HI is present on pin 5 of U1905B and IC U1805A will alternately put a HI and then a LO on pin 4 of U1905B. Assume an initial LO on pin 4 of U1905B, IC U1905B is a NAND gate, so its output will be HI. Capacitor C1804 charges toward a HI and as soon as its charge reaches the threshold level of U1805A; U1805A will switch to a HI output. The HI output of U1805A on pin 3 will assert a HI on U1905B, pin 4. This HI is NANDed with the HI already present on pin 5 of U1905B to produce a LO at pin 6 of U1905B. Now C1804 has to discharge toward a LO. As soon as the charge on C1804 reaches the LO threshold of U1805B, U1805B will switch to a LO output and the cycle will repeat. The Chop Clock oscillator frequency is approximately 1 MHz and depends on the RC-time constant of R1903 and C1804, as well as the threshold level of U1805A (see Figure 3-4).

When CHOP is selected, pin 2 of U1905A will be LO. Pin 3 of U1905A will be HI, which enables U1805C to pass the CHOP clock oscillator frequency to pin 9 of U1705. IC U1705 changes state for every positive transition of the clock oscillator (once each cycle) effectively performing a divide-by-two. Therefore, the CHOP frequency is approximately 500 kHz. The CHOP clock oscillator will not be enabled unless more than one input is selected. As stated previously, a single-input VERT MODE selection will cause

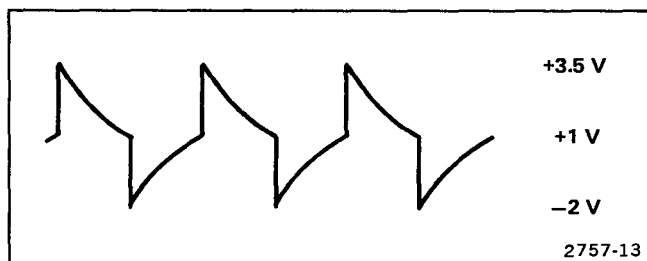


Figure 3-4. Switching waveform at the junction of R1903 and R1904.

U1705 to remain in a state that will allow only the selected input to be passed on to the Delay Line Driver.

If multiple inputs are selected for display, U1705 will be clocked to select the appropriate inputs programmed for display. Transistors Q1619, Q1719, Q1617, and Q1636 (if ADD is selected) are being switched at the Chop clock frequency (CHOP Mode). As the displays are being incremented, the  $Q_0$ ,  $Q_1$ , and  $Q_2$  outputs of U1705 are being used as state indicators to the  $A_0$ ,  $A_1$ , and  $A_2$  inputs of ROM U1605 to indicate the next input to be selected for display. The order of priority of the switching is: CH 1, CH 2, ADD, then TRIG VIEW.

**ALTERNATE TRACE SYNC.** With ALT Vertical Mode selected, a HI will be present at U1905D, pin 12. If more than a single-input display is selected, a HI will also be present at pin 13. The CHOP clock will then be disabled. IC U1905A will be enabled to pass the Alternate Trace Sync pulse to U1805C, pin 9, and U1805C will be enabled to pass the pulse to U1705, pin 9 (clock input). IC U1705 will now be switching between selected inputs at a rate determined by the Alternate Trace Sync pulse from the Horizontal Display Logic circuit.

If a single input is selected for display, U1805B, pin 5 will be LO and the Chop clock will remain disabled. The Alternate Trace Sync pulse will be present at U1705, pin 9; but, with only one input selected by the VERT MODE switches, U1705 will not change state and the switching transistor for the selected input to be displayed will remain on.

When Alternate Horizontal Display is chosen, the Alternate Trace Sync input becomes a square wave with a period equal to twice the time between Alternate Trace Sync pulses. This will allow the display of the A sweep and the B sweep before switching to the next vertical input signal to be displayed (see Figure 3-5).

### Chopped Blanking Amplifier

When CHOP Mode is selected, a LO on U1905D, pin 12 holds U1905D, pin 11 HI. This enables U1905C to pass the Chop pulse to C1813. Capacitor C1813 and R1916 differentiate the Chop pulse to produce positive and negative spikes having sufficiently fast rise times necessary for the Chopped Blanking. Diode CR1918 limits the positive spike and R1815 limits the base current of Q1812. The positive portion of the waveform reverse biases Q1812, but when the waveform switches from the positive portion to the negative portion, Q1812 is driven rapidly into conduction. The blanking time is determined by the charging time of C1813 through R1916 and R1815. The positive-going output pulse, which is coincident with trace switching, is connected to the Z-Axis Amplifier circuit through R1914.

### Delay-Line Driver

The output from the Diode Gates is applied to the Delay Line Driver composed of Q1426 and Q1428. Transistors Q1426 and Q1428 are connected as feedback amplifiers, with R1328 and R1522 providing feedback from the collector to the base of their respective transistors. A sample of the signal in the collector circuit of R1426 is used for triggering in the Normal mode of trigger operation. Bandwidth Limit switch S1414 connects a pi filter (composed of C1306, C1405, L1412, and L1512) between the output signal lines of the Delay Line Driver to reduce the upper -3 dB bandwidth limit of the Vertical Amplifier system to approximately 20 MHz. Resistors R1314 and R1514 provide reverse termination for any reflections in the delay line.

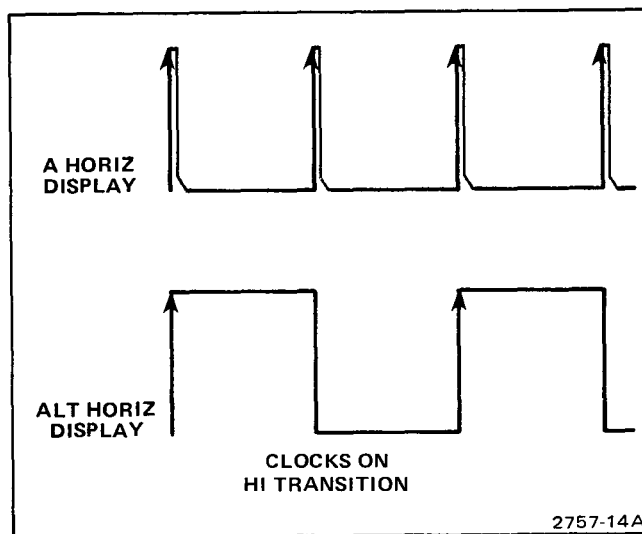


Figure 3-5. Vertical Alt Sync Pulse at U1705 pin 9.

## Theory of Operation

### 465B Service (SN B060000 & UP)

#### Normal Trigger Pickoff Amplifier

The trigger signal for Normal trigger operation is obtained from the collector of Q1426. Normal Trigger DC Balance Adjustment R1202 sets the dc level of the normal trigger output signal such that the sweep is triggered at the zero level of the displayed signal whenever the trigger LEVEL control is set to zero. Transistors Q1215 and Q1118 are connected as a feedback amplifier, with the signal applied to the base of Q1215 and the feedback connected between the output and emitter of Q1215 through R1108.

## VERTICAL MODE SWITCH

### Introduction

The Vertical Mode Switch circuit produces the logic necessary for placing the Vertical Switching Logic circuit into the correct state for the Vertical Mode selected. The Scale-Factor Switching circuit selects the correct scale-factor LED to be illuminated with each Vertical Mode selection.

### Exclusive-NOR Switching Circuit

The Exclusive-NOR Switching circuits produce a LO pulse on the ALT/CHOP select line whenever a VERT MODE push button is either pressed or released. While the ALT Vertical Mode is selected, the LO pulse will enable the Chop oscillator, momentarily producing clock pulses that enable the Vertical Switching Logic circuit to select the correct Vertical Mode for the next display.

Assume that the CH 1 VERT MODE push button has been pressed. The condition of Exclusive-NOR circuit U5235D is as follows: A HI is on pins 12 and 13 of U5235D, and a HI is present at output pin 11; C5135 has charged to a HI level through R5135. When the push button is released, a LO is immediately applied to pin 12, but C5135 is still charged to a HI level, so the HI remains on pin 13. These input conditions to the Exclusive-NOR circuit will produce a LO at output pin 11 to enable the Chop oscillator. Then C5135 discharges toward a LO level through R5135, and when the LO threshold voltage is reached, both inputs to the Exclusive-NOR circuit will be LO. The output of U5235D will switch back to HI, turning off the Chop oscillator.

When the X-Y Horizontal Display is selected,  $-8\text{ V}$  is applied through R5212 to the  $\overline{XY}$  select input of the Vertical Switching Logic circuit (placing it in the X-Y Mode of operation) and through the series combination of R5211 and R5214 to the ALT/CHOP select to enable the Chop oscillator if the Alternate Vertical Mode is selected.

### Scale-Factor Switching Circuit

The vertical deflection factor for each channel is indicated by back-lighting the appropriate figures imprinted on the

flange of each VOLTS/DIV knob. Because the operation of the Channel 1 and Channel 2 Scale-Factor Switching circuits are similar, only the circuit action of the Channel 1 Scale-Factor Switching circuits is described.

When CH 1 or ADD Vertical Mode is selected, or when X-Y Horizontal Display Mode is selected,  $-8\text{ V}$  is applied to the Q5017 base biasing voltage divider network composed of R5114 and R5015. The base of Q5017 will be biased negative, saturating Q5017. When Q5017 is saturated, the X10 and X1 scale-factor LED DS9040 and DS9060 will have a return path to ground through the transistor and are enabled. (10X LED or 1X LED is lighted depending on the type of probe or cable attached to the CH 1 OR X input connector.)

The X-Y position of A TIME/DIV switch S6111 puts  $-8\text{ V}$  on both Channel 1 and Channel 2 scale-factor LED-enabling transistors Q5017 and Q5241 through blocking diodes CR5115 and CR5116. This allows the appropriate scale-factor LED to be illuminated on both CH 1 and CH 2 (10X or 1X).

With either a coaxial cable or 1X probe attached to the CH 1 OR X input connector, the probe-coding ring portion of the input connector is not contacted. Transistor Q5057 will be biased off by the  $-8\text{ V}$  through R5055. A voltage divider network composed of R5053, R5041, R5042, and R5052 between Q5017 and the  $-8\text{ V}$  supply will bias Q5056 into conduction; the 1X LED in series with Q5056 will be on. The 10X LED is in parallel with R5053, and the voltage drop across R5053 will not be sufficient to cause the 10X LED to light.

When a 10X probe equipped with a scale-factor-switching connector is attached to the CH 1 OR X input connector, the probe coding ring will be contacted. The base of Q5057 will now be connected to ground through R15102 and an internal resistor located within the probe connector body. A bias voltage divider is formed, biasing Q5057 into saturation. The collector of Q5057 will drop to about  $-7.2\text{ V}$ . This voltage level is enough to light the 10X LED, and when it is applied to the Q5056 base bias voltage divider composed of R5042 and R5052, it is sufficient to bias Q5056 off and turn off the 1X LED.

## VERTICAL OUTPUT AMPLIFIER

### Introduction

The Vertical Output Amplifier circuit provides the final amplification for the vertical deflection signal. The circuit includes the Delay Line, part of the Beam Finder circuitry, and part of the Trace Separation circuitry. Pushing the BEAM FIND button compresses an overscanned display to within

the viewing area. The Trace Separation circuit provides vertical positioning of the B trace when the ALT Horizontal Display mode is selected.

### Delay Line

Delay line DL11405 (Diagram 3) provides approximately 120 ns delay of the vertical signal to allow the Sweep Generator circuits sufficient time to initiate a sweep before the vertical signal reaches the deflection plates of the crt. When using internal triggering, the instrument is allowed to display the leading edge of the signal originating the trigger pulse. Resistors R2214 and R2218 provide forward termination for the Delay Line.

### Input Amplifier

The Input Amplifier consists of integrated circuit amplifier U2225 and the frequency compensation network connected across pins 2 and 3. Gain Adjust R2205 sets the gain of the amplifier. BEAM FIND switch S4075, when pressed, reduces the dynamic swing capabilities of the stage, thereby limiting the display to within the display area on the crt.

### Trace Separation

During B sweep, the Trace Separation circuit (Q2115, Q2306, and Q2308) is enabled by the alternate pulse on the base of Q2115. This switches Q2115 on and Q2105 off. This switching action allows the B trace to be vertically positioned independently of the A trace. Normally, Q2105 provides a constant amount of current to U2225; however, when in ALT mode, turning Q2115 on supplies current through Q2306 and Q2308. The TRACE SEP control supplies the variable voltage at the base of Q2308 and determines the position of the B sweep display relative to the A sweep display.

The current supplied to U2225 must remain constant so that the A sweep display positioning is not affected. Operational amplifier U2005 senses the voltage at the base of Q2308 and compensates by raising or lowering the voltage at the base of Q2306. Potentiometer R2117 centers the B trace around the A trace so that the B trace moves equally above and below the A trace.

### Output Amplifier

Integrated circuit U2255 is a multi-stage cascode amplifier cell that provides the final amplification for the vertical signal. The input signal is applied push-pull between pins 1 and 5, and the output signal is taken from pins 9 and 12. Integrated circuit amplifier U2385 monitors the emitter currents of the output transistors and automatically sets the dc levels of the output stage to obtain the maximum undistorted gain from U2255.

## A AND B TRIGGER GENERATORS 6

### Introduction

The Trigger Generator circuits produce trigger pulses to start the Sweep Generator circuits. These trigger pulses are derived either from the internal trigger signal (sampled from the vertical deflection system), an external signal connected to the external trigger connectors, or a sample of the line voltage applied to the instrument. Controls are provided in each circuit to select trigger level, slope, coupling, and source.

An A Trigger View Amplifier is provided which amplifies the external A Trigger signal for application to the Trigger View Diode Gate where it may be selected for viewing. The trigger view display provides a method of making a quick and convenient check of the external trigger signal being used to trigger the A Sweep Generator. The external trigger input signal may be continually monitored by selecting the A TRIG VIEW Vertical Mode.

Since the A and B Trigger Generator circuits are virtually the same, only the A Trigger Generator circuit action and the differences between the A and B Trigger Generator circuits are described.

### Trigger Source

Trigger SOURCE switch S7312 selects the source of the trigger signal. The sources available to the A Trigger Generator circuit are the signal(s) being displayed (NORM), Channel 1 (CH 1), Channel 2 (CH 2), LINE, and EXT. The EXT/10 (A trigger circuit only) position attenuates the external trigger signal by a factor of 10. The B Trigger SOURCE switch does not have a LINE or an EXT/10 position, but has a STARTS AFTER DELAY position.

The STARTS AFTER DELAY position of the B Trigger SOURCE switch is used in conjunction with the DELAY TIME POSITION control. When STARTS AFTER DELAY is selected as a trigger source for the B Sweep, the B Sweep will begin to run immediately after the delay time selected by the DELAY TIME POSITION control has elapsed.

In the LINE mode of triggering, a sample of the power line frequency is obtained from the secondary of power transformer T14500, located in the Low Voltage Power Supply circuit. To prevent unwanted attenuation of the trigger signal by the LF REJ circuit, the A Trigger COUPLING switch should not be in LF REJ when using line voltage as a trigger source.

## Theory of Operation 465B Service (SN B060000 & UP)

### Trigger Coupling

The Trigger COUPLING switches offer a means of accepting or rejecting certain components of the trigger signal. In the AC, LF REF, and HF REJ mode of trigger coupling, the dc component of the trigger signal is blocked by coupling capacitors C7313 or C7317. Frequency components below 60 Hz are attenuated when using AC coupling, and components below approximately 50 kHz are attenuated when using LF REJ coupling. The higher frequency components of the trigger signal are passed without attenuation. In the HF REJ mode of trigger coupling, the high-frequency components of the trigger signal (above approximately 50 kHz) and low-frequency components (below 60 Hz) are attenuated, while the remaining frequency components are passed with minimal attenuation. The dc mode of trigger coupling passes all signals from dc to at least 100 MHz without attenuation.

### Input Source Follower

Transistor Q7324A is a field-effect transistor (FET) source follower. It provides both a high input impedance for the trigger signal and isolation between the Trigger Generator circuit and the trigger signal source. Diode CR7322 provides input protection for Q7324A if an excessively high amplitude negative-going input signal is present. If a high-amplitude positive signal is applied, the source-gate junction of Q7324A becomes forward biased and clamps the voltage at that level. The second FET of the matched pair (Q7324B) is a high-impedance, constant-current source for Q7324A. Since both FETs are matched and mounted in the same heat sink, both will display equal temperature effects, and Q7324B will provide temperature compensation for Q7324A.

### Paraphase Amplifier

Integrated circuit U7331 is a paraphase amplifier stage that converts the single-ended input from Source Follower Q7324A into a push-pull output applied to the Tunnel Diode Driver stage. Trigger Level Centering adjustment R7224 sets the level at pins 14 and 15 of U7331 so that the display is correctly triggered when the LEVEL control is centered. LEVEL control R17305 varies the level at pins 14 and 15 of U7331 to select the point on a trigger signal where triggering occurs.

The slope of the input signal that triggers the Sweep Generator circuit is determined by the setting of SLOPE switch S17305. When the SLOPE switch is set to the + position, the output signal present at pin 8 of U7331 is in phase with the input signal, and the output signal at pin 9 is inverted with respect to the input signal. When the SLOPE switch is set to the - position, the output signal at pin 8 is inverted with respect to the input signal, and the output signal at pin 9 is in phase with the input signal.

### Tunnel Diode Driver

Transistors Q7344 and Q7345 are common-emitter amplifier stages that provide signal currents necessary to switch the Trigger Firing tunnel diodes. Diode CR7350 and CR7349 are approximately 4.7 mA tunnel diodes. Quiescently, CR7349 and CR7350 are biased into their low-voltage states. Transistor Q7344 cannot provide sufficient current to switch CR7349 to its high voltage state. However, Q7345 can provide sufficient current to bias CR7350 into its high voltage state. When Q7345 conducts triggering signal current, the anode of CR7350 steps positive to approximately +0.5 V. Since only approximately 1 mA of current is required to maintain CR7350 in its high-voltage state, this makes approximately 3 mA of additional current available with which to switch CR7349 to its high-voltage state. Thus, the next time Q7344 conducts signal current, CR7349 steps to its high-voltage state, sending a positive pulse to the logic circuit to initiate sweep action. The A Trigger Sensitivity adjustment, R7348, adjusts the tunnel diode bias to a level that will not allow CR7349 to be switched to its high-voltage state until CR7350 has been switched to its high-voltage state. At the end of the sweep time and during holdoff, a negative level is applied to the anode of CR7350, thereby resetting both CR7349 and CR7350 to their low voltage states. The reset level remains during holdoff time to ensure that a sweep gating signal will not be generated until the sweep circuit has returned to its quiescent state.

### Trigger View Amplifier

Transistors Q7424 and Q7422 make up half of a cascode, push-pull amplifier. In the Vertical Switching Logic circuit (Diagram 3), Q1235 and Q1225 form the rest of the Trigger View Amplifier. The Trigger View Amplifier requires that the A Trigger SOURCE switch be set to EXT or EXT/10 and the A TRIG VIEW Vertical Mode be selected before the amplifier is enabled to pass the external trigger signal to the Diode Gate and on to the Vertical Output Amplifier. If the Trigger View Display is selected, the Vertical Switching Logic circuit will turn on the Trigger View Diode Gate during the proper time to pass the signal on to the Delay Line Driver.


A sample of the the push-pull external trigger signal is taken from pins 1 and 16 of U7331 and amplified by Q7424 and Q7422. The Trigger View Centering control (R7526) is used to vertically position the trigger view display. Potentiometer R7439 is adjusted to set the gain of the Trigger View Amplifier, and C7425, L7525, C7529, and R7423 provide HF compensation. Diodes VR7520, CR7521, and CR7536 are used to clamp the collectors of Q7424 and Q7422 to approximately +5.7 V whenever Trigger View is disabled. Transistors Q1225 and Q1235 will be reverse biased during this time.

## SWEEP AND Z AXIS LOGIC CIRCUIT

### Introduction

The Sweep and Z-Axis Logic circuit, shown in Figure 3-6, develops the logic levels necessary to control the sequence



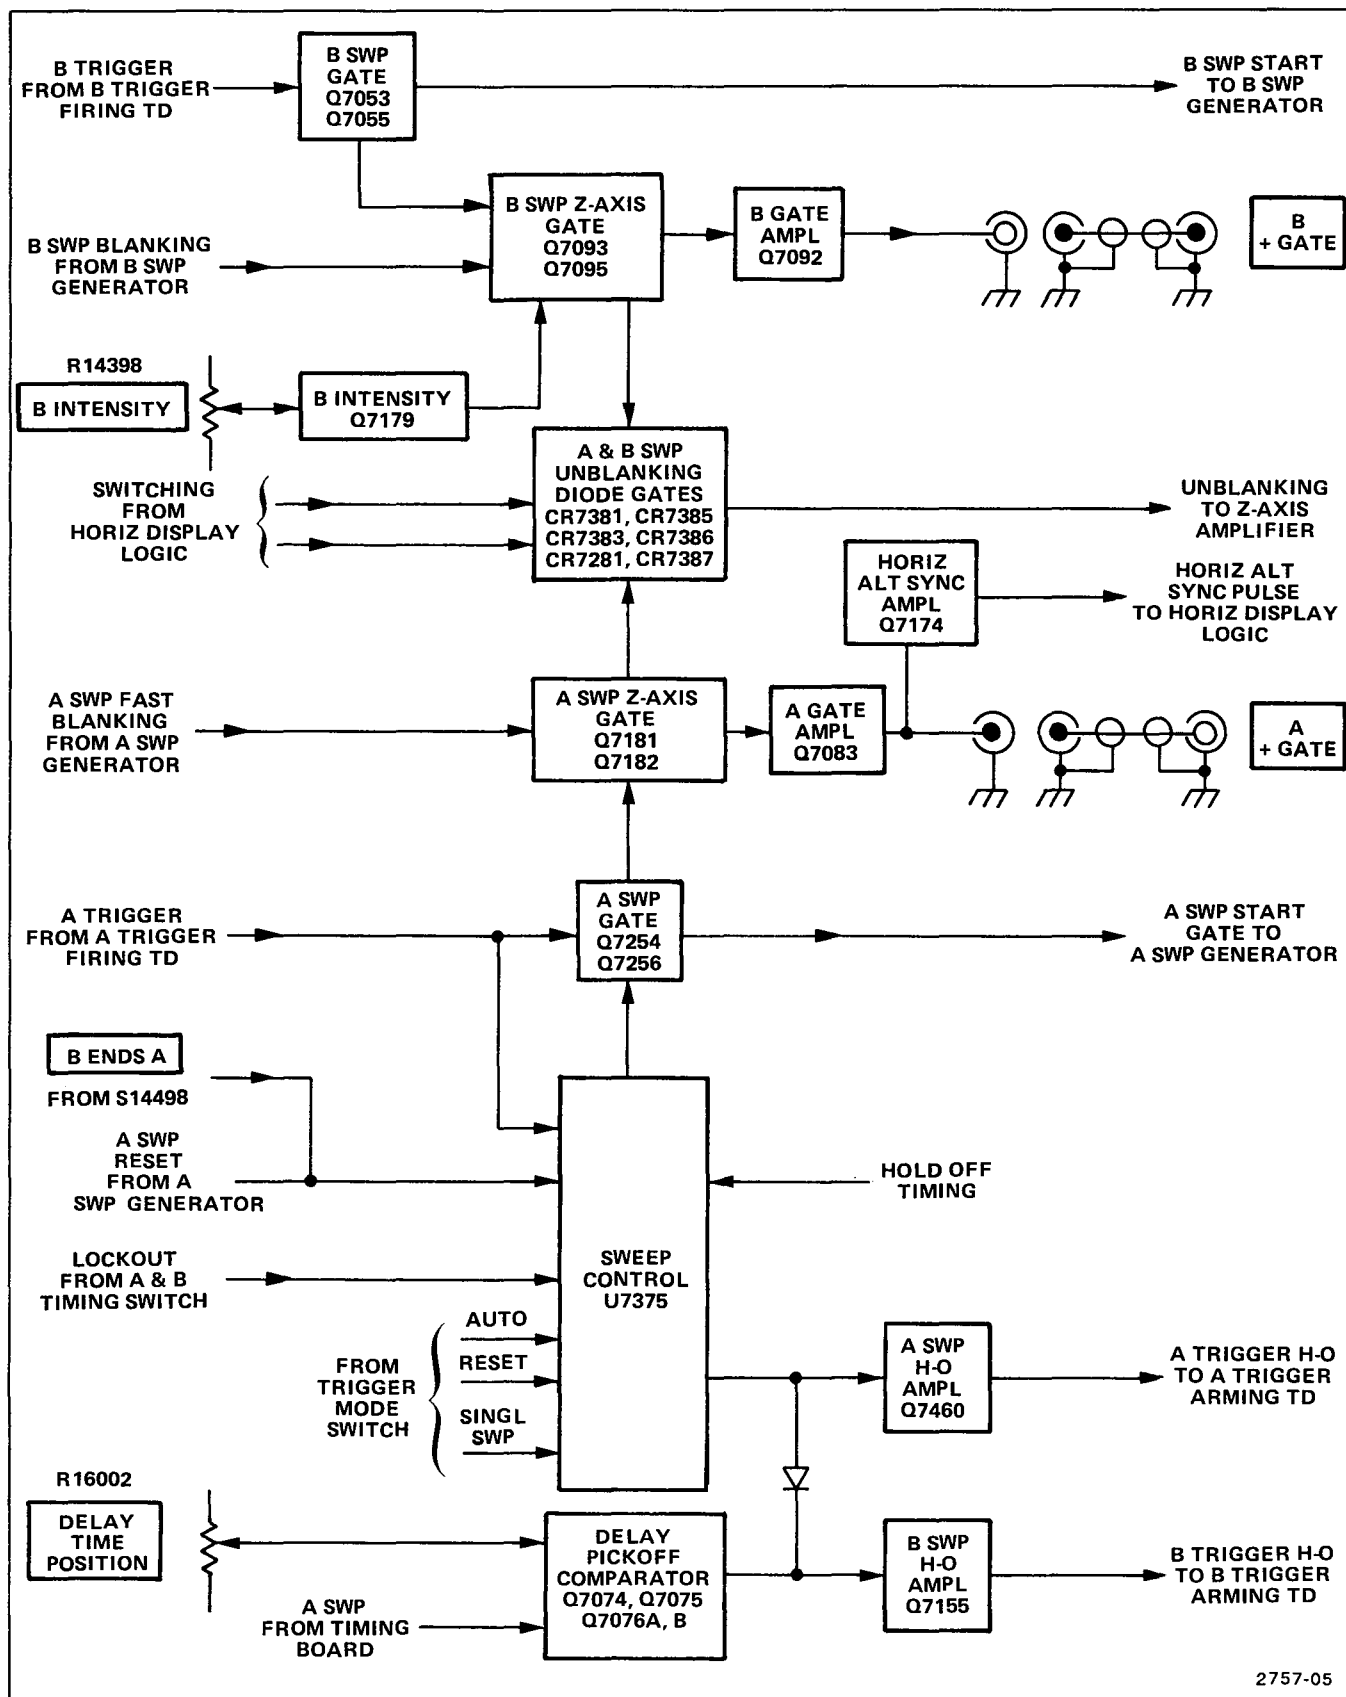

2757-05

Figure 3-6. Detailed block diagram of the Sweep and Z-Axis Logic circuit.

## Theory of Operation

### 465B Service (SN B060000 & UP)

of events associated with sweep generation and crt unblanking. The A and B +Gate signals are also generated in this circuit.

#### A Sweep Gate

The A Sweep Gate circuit is composed of Q7254 and Q7256. They form an emitter-coupled stage where only one transistor can be conducting at any time. The input signal to the stage is the positive-going trigger signal from the A Trigger Firing tunnel diode in the A Trigger Generator circuit. The signal at the collector of Q7254 is connected to the A Sweep Z-Axis Gate circuit to control the crt unblanking and to generate the A +Gate signal. The signal at the collector of Q7256 is connected to the emitter of Sweep Disconnect Amplifier Q4497 in the A Sweep Generator circuit to initiate A Sweep generation.

#### B Sweep Gate

The B Sweep Gate circuit is composed of Q7053 and Q7055. These transistors also form an emitter-coupled stage where only one transistor can be conducting at any time. The input signal to the stage is the positive-going trigger signal from the B Trigger Firing tunnel diode in the B Trigger Generator circuit. The signal at the collector of Q7053 is connected to the B Sweep Z-Axis Gate circuit (Q7093 and Q7095) to control crt unblanking and to generate the B +Gate signal. The signal at the collector of Q7055 is connected to the emitter of Sweep Disconnect Amplifier Q4565 in the B Sweep Generator circuit to initiate B Sweep generation.

#### Sweep Control Integrated Circuit

The Sweep Control integrated circuit is U7375. Several functions are performed in this stage, depending on the mode of operation of the instrument sweep generators. The following is a brief explanation of the function associated with each pin of the IC.

**Pin 1** is the positive Auto Sense input. The signal connected here comes from the A Trigger Firing tunnel diode.

**Pin 2** is a reference input to the Auto Sense circuit. A fixed dc level established by R7277 and R7276 is connected here.

**Pin 3** is the + auto gate terminal. In the AUTO mode of operation, if no trigger signals are applied to pin 1 of U7375 during the approximately 100 ms following the end of holdoff, the gate level at pin 3 steps LO to turn Q7256 on which initiates a sweep.

**Pin 4** is not used in this application.

**Pin 5** is the input terminal for negative voltage supply.

**Pin 6** is the auto gate timing terminal. Resistor R7272 and capacitor C7273 determine the amount of time between the end of holdoff and the generation of the auto gate.

**Pin 7** output lights the TRIG LED when a triggered gate has occurred.

**Pin 8** is the holdoff timing terminal. The RC network connected to this terminal (selected by the A TIME/DIV switch) determines the length of holdoff time.

**Pin 9** is the ground terminal.

**Pin 10** is the holdoff output terminal. The gate level present here is LO during sweep holdoff time and HI otherwise.

**Pin 11** output lights the READY LED when operating in the single sweep mode.

**Pin 12** is the single sweep mode terminal. When +5 V is applied to this terminal the sweep operates in the single sweep mode; when the terminal is left open or grounded the sweep operates in the repetitive mode.

**Pin 13** is not used in this operation.

**Pin 14 & 15** are the single sweep reset terminals. Pushing the SINGLE SWP button prepares the single sweep circuitry to respond to the next triggering event, and also causes the READY LED to come on.

**Pin 16** is the holdoff start input terminal. The HI sweep reset gate pulse from the sweep generators is applied here to initiate sweep holdoff.

**Pin 17** is the sweep disable output terminal. The gate level at this terminal is HI during holdoff and LO otherwise.

**Pin 18** is the sweep lockout input. All sweep action is disabled when +5 V is applied to this terminal.

**Pin 19** is the auto mode terminal. Grounding this terminal enables auto sweep operation.

**Pin 20** is the input terminal for positive voltage supply.

### Holdoff Timing

A resistor and capacitor network located in the A and B Timing Switch circuit connects to pin 8 of U7375 via pin 8 of J4571. Various resistor and capacitor combinations switch into the circuit, depending on the setting of the A TIME/DIV switch. At sweep end, pin 8 of U7375 is released, and the timing capacitors in the holdoff timing network start to charge. Transistor Q7465 is biased off during the sweep holdoff time by a LO at pin 10 of U7375, which allows the voltage at pin 8 to rise due to charging of the timing capacitors. When the charge on the capacitors rises to approximately +4 V at pin 8, pin 17 goes HI and pin 10 goes HI to turn on Q7465. The holdoff timing capacitors discharge rapidly through Q7465 as pin 8 goes LO. Capacitors C6121, C6122, and C6112, and resistors R6115 and R6114 in the A and B Timing Switch circuit comprise the holdoff timing circuits, which are switch selectable. A Trigger HOLDOFF R14498 is a variable resistor that allows lengthening of the time constant to increase holdoff time.

### A Sweep Holdoff Amplifier

The A Sweep Holdoff Amplifier is Q7460. The holdoff gate waveform from pin 17 of U7375 is applied to the base of Q7460 through R7461 and C7461. When Q7460 is turned off (during holdoff time), its collector is LO and CR7451 is forward biased, thus resetting both the Arm and Firing Trigger tunnel diodes in the A Trigger Generator. When Q7460 is turned on (any time other than holdoff time), its collector level is HI and CR7451 is reverse biased. This allows the trigger tunnel diodes in the A Trigger Generator to respond to the next adequate triggering signal.

### B Sweep Holdoff Amplifier

The B Sweep Holdoff Amplifier is Q7155. Its circuit action is identical to that described for the A Sweep Holdoff Amplifier with the exception that two gate signal sources control the state of the stage. The two sources are the holdoff gate from pin 17 of U7375 (through CR7363) and the collector of Q7075 in the Delay Pickoff Comparator. Both gate sources must be in their LO state for B Sweep to be triggerable. Either source in its HI state will disable the B Trigger Generator tunnel diodes.

### A Sweep Z-Axis Gate

Transistors Q7181 and Q7182 comprise the A Sweep Z-Axis Gate. They form an emitter-coupled stage where only one transistor can be conducting at any time. The control-

ling signals consist of inputs from the collector of Q7254 in the A Sweep Gate, the unblanking signal from Q4582 in the A Sweep Generator, and Q4492 in the Horizontal Display Logic circuit. The unblanking signal for use in the Z-Axis Amplifier is taken from the collector of Q7182 (through CR7387). The collector signal of Q7181 is applied to the A +Gate Emitter Follower (Q7083).

The Horizontal Display Logic circuit controls the bias voltage on CR7281. When the diode is reverse biased, as it is for all horizontal modes except for B DLY'D,  $-8\text{ V}$  is connected to the anode of CR7281 through Q4492. This allows the gate signal at the collector of Q7182 to pass through CR7387 creating the unblanking signal to the Z-Axis Amplifier. In the B DLY'D mode, Q4492 is turned off and CR7281 is forward biased through R7281 to the +5 V supply. Diode CR7387 will now be reverse biased, and the A unblanking signal is blocked from reaching the Z-Axis Amplifier. In the ALT Horizontal Display mode, CR7281 will be reverse biased during the A sweep and forward biased during the B sweep.

### B Sweep Z-Axis Gate

The B Sweep Z-Axis Gate is composed of Q7093 and Q7095. These transistors form an emitter-coupled stage where only one transistor can be conducting at any time. The controlling signals come from the collector of Q7053 (B Sweep Gate), and the blanking signal from the collector of Q4562 in the B Sweep Generator. The emitter current in the gate transistors is supplied partly by Q7195, which is controlled by B INTENSITY control R14398. The B INTENSITY control sets the level of the B Sweep unblanking signal to control the B Sweep intensity separately from the overall display intensity. The collector of Q7095 supplies the unblanking signal to the Z-Axis amplifier and the collector of Q7093 supplies the signal to the B +Gate Emitter Follower (Q7092).

When the A Horizontal display is selected,  $-8\text{ V}$  from Q4491 in the Horizontal Display Logic circuit is applied to the cathode of CR7381. This reverse biases CR7383 and allows the collector of Q7095 to be pulled positive through CR7385 and R7283 to the +5 V supply. Diode CR7386 will be reverse biased and the B Sweep Z-Axis Gate (Q7093 and Q7095) will not affect crt unblanking. When either A INTEN, ALT, or B DLY'D Horizontal Display is selected,  $-8\text{ V}$  is applied to the anode of CR7385 to reverse bias it and allow the Horizontal Display Logic circuit to control the B Sweep Z-Axis Gate.

In A Intensified Horizontal Display, CR7381 becomes reverse biased and CR7383 becomes forward biased. Diode CR7386 is still reverse biased, but when B Sweep starts, the collector of Q7095 steps negative enough to forward bias CR7386 and add a slight amount of unblanking to the A

## Theory of Operation 465B Service (SN B060000 & UP)

Sweep unblanking already present. This provides further intensification for the B Sweep portion of an A Intensified display. In ALT Horizontal Display, the Horizontal Display Logic circuit controls the A Sweep Z-Axis Gate (Q7181 and Q7182) and the B Sweep Z-Axis Gate (Q7093 and Q7095). The B Sweep unblanking signal is added to the A Sweep unblanking signal during the A intensified display, the A Sweep unblanking signal is blocked during the B DLY'D display. In B DLY'D Horizontal Display, the A Sweep Z-Axis Gate output diode, CR7387, is held reverse biased, and the only unblanking signal presented to the Z-Axis amplifier input is the B Sweep unblanking signal.

### A +Gate and B +Gate Emitter Followers

Emitter followers Q7083 and Q7092 provide the A +Gate and the B +Gate output signals available at the instrument rear panel. The output signals are positive-going rectangular waveforms, approximately +5.5 V in amplitude. The amplitude is set in the collectors of Q7181 and Q7093. For example, when Q7181 is conducting, the base of Q7083 can go no more negative than approximately  $-0.7$  V (limited by CR7078). When Q7181 is not conducting, the base of Q7083 rises to the +5 V power supply level through R7184. Diodes CR7084, CR7085, CR7097, and CR7098 provide protection against accidental application of damaging voltage levels to the A +Gate and B +Gate output connectors.

### Horiz Alt Sync Pulse Amplifier

The pickoff amplifier for the Horiz Alt Sync pulse is Q7174. It is biased into saturation, so its quiescent output voltage is approximately zero. A sample of the A +Gate is coupled to the base of Q7174 by C7174 where the positive-going gate is integrated by the action of C7174 and R7171. The positive-going portion of the integrated signal cannot increase the collector current of Q7174 beyond its saturation level, so no signal output is obtained. When the A +Gate negative-going edge occurs, C7174 cannot change its charge instantaneously so the entire negative transition is felt on the base of Q7174 across R7171. The negative peak of the signal is enough to cutoff Q7174, and the collector voltage rises in response to the base voltage decrease. The base voltage rapidly returns to a positive level, and the transistor again saturates, ending the Horiz Alt Sync pulse.

## A AND B SWEEP GENERATORS

### Introduction

The A and B Sweep Generators produce sawtooth voltages that are amplified by the Horizontal Amplifier circuit to provide horizontal deflection on the crt. These sawtooth voltages are produced on command (Sweep start gate) from the Sweep Logic circuits. The Sweep Generator circuits also produce gate waveforms that are used by the Z-Axis Logic circuit to unblank the crt during sweep time and by the Sweep Logic circuit to terminate sweep generation. Figure

3-7 shows a detailed block diagram of the A Sweep Generator circuit that will be described in the following discussion. Since the B Sweep Generator circuit is very similar to the A Sweep Generator, the only discussion of the B Sweep Generator will be on the differences in operation between the two.

### Disconnect Amplifier

After holdoff, but before the next sweep, Disconnect Amplifier Q4497 is biased on and conducts through R4587 and  $R_t$  back to  $+V_t$ . This sets the charge on  $C_t$  in preparation for the beginning of the next A Sweep and prevents current from the Miller Integrator circuit from changing the charge on  $C_t$ . When the positive-going A Sweep Start Gate is applied to the emitter of Q4497, CR4592 becomes forward biased and turns off Q4497. Now the A Sweep starts, and the Miller Integrator circuit begins to change the charge on  $C_t$ . Transistor Q4497 will remain off until retrace is initiated and the A Start Sweep Gate is removed. Then, Q4497 will become forward biased again, and  $C_t$  will rapidly charge to its quiescent value for the start of the next A Sweep.

### Sawtooth Generator

The Miller Integrator circuit is composed of Q4498 and Q4598. It works on the principle that if the charging current to a capacitor can be held constant, then the charging curve will be linear rather than exponential. The action starts when Disconnect Amplifier Q4497 is turned off by the A Sweep Start Gate. The selected capacitor for the chosen setting of the TIME/DIV switch ( $C_t$ ) begins to charge through the  $R_t$ . This causes the junction of  $C_t$  and  $R_t$  to start positive in the direction of  $+V_t$ , thereby causing the gate of Q4498 to start positive. The Q4498 source then starts in a positive direction and increases the forward bias on Q4598 causing the collector voltage to move in a negative direction (less positive). This couples back through  $C_t$  and opposes the positive change at the gate of Q4498. Capacitor  $C_t$  is attempting to charge toward  $+V_t$ , but the action of Q4498 gate being held virtually constant, and the collector of Q4598 going more negative, results in the reduction of the charge on  $C_t$  (it discharges). The gate of Q4498 rises positive approximately 10 mV over the entire sweep generation time. Since the voltage at the gate of Q4498 remains relatively constant, both the voltage across  $R_t$  and the current through  $R_t$  (the current discharging from  $C_t$ ) remain constant. The linear rate of discharge of  $C_t$  results in a linear ramp across it. The resultant output at the collector of Q4598 appears as a negative-going ramp, dropping from approximately +13 V to approximately +2 V.

When the ramp reaches +2 V, Q4581 sends a pulse to U7375 initiating retrace. Transistor Q4497 turns on, and its collector goes more negative. This moves the gate of Q4498 in the negative direction, causing the voltage on the base of Q4598 to go more negative, thereby causing its collector voltage to go more positive. Now  $C_t$  charges rapidly through

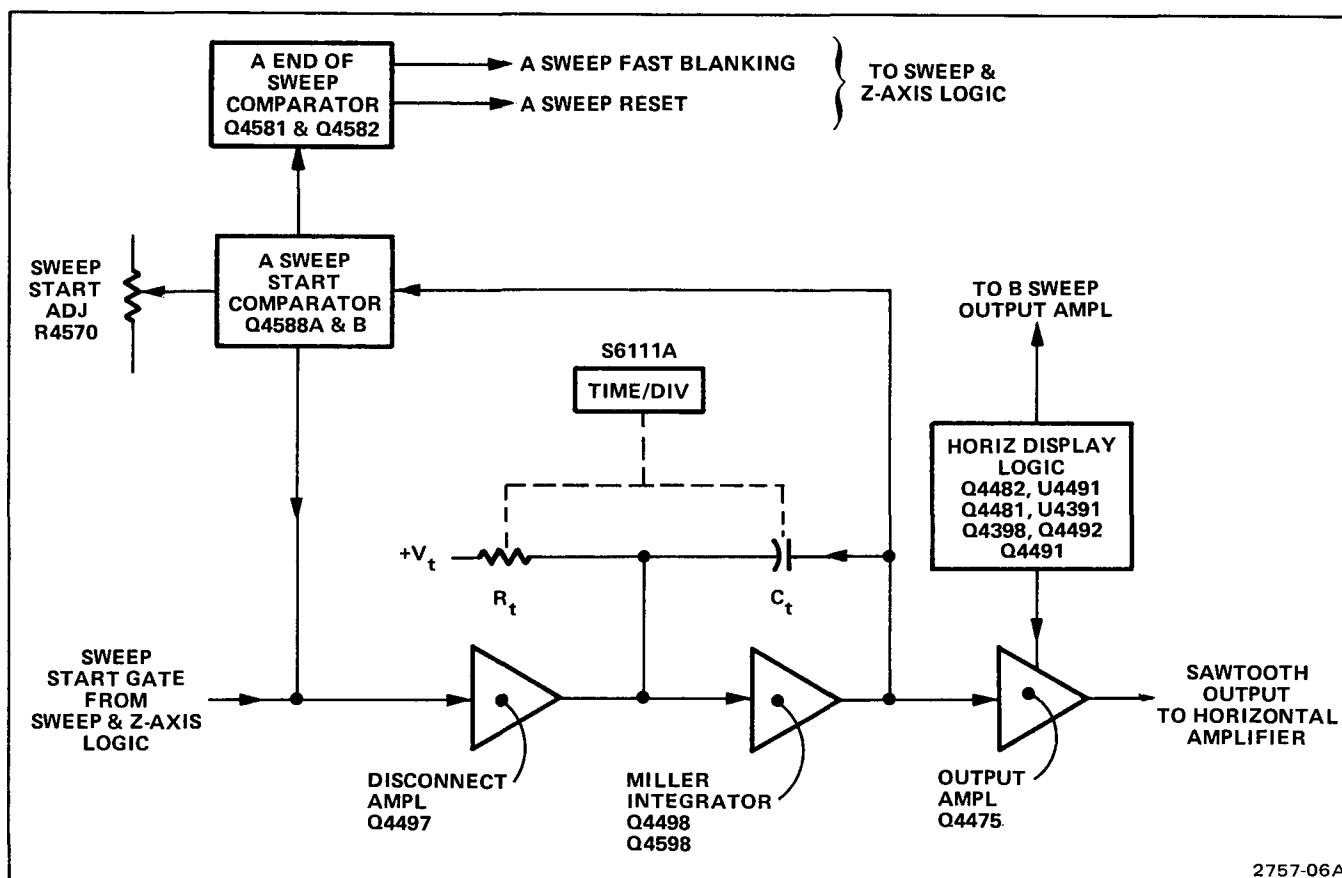


Figure 3-7. Detailed block diagram of the A Sweep Generator circuit.

Q4497 to its quiescent state in preparation for the next A Sweep start gate.

### Output Amplifier

The Output Amplifier is a common-base amplifier with the signal current-driven into the emitter. It provides the output sawtooth current signal to the Horizontal Amplifier and provides a measure of isolation between the Sawtooth Generator and the Horizontal Amplifier. The Horizontal Display Switching circuit connects to this stage and controls the A sawtooth output in the various horizontal modes of operation. In the A and A INTEN modes of operation, the A sweep signal passes through Q4475 to the Horizontal Amplifier. In the ALT mode, Q4475 is enabled for the A sweep and turned off for the B sweep by the Horizontal Display Logic circuit. In the B DLY'd mode, Q4475 is held off, and Q4465 in the B Sweep Generator is held on to pass the B sweep sawtooth to the Horizontal Amplifier.

### A Sweep Start Comparator

Just before the sweep starts to run down, the levels at the bases of Q4588A and Q4588B are approximately equal. When the sweep starts to run down, the base of Q4588B

goes negative, following the collector of Q4598. This increases the forward bias on CR4581, which in turn decreases the forward bias on CR4582. Very shortly after the start of the sweep, CR4582 becomes reverse biased and interrupts the current through Q4588A. The circuit remains in this condition until after the sweep retrace is complete. When the circuit returns to quiescence, Q4588A again begins to conduct through R4587. This sets the currents through Q4497, establishing the starting point for the sweep. Sweep Start adjustment R4570 sets the base level of Q4588A. This level is also connected to the base of Q4565 in the B Sweep Generator to ensure that the B sweep starts at the same level as the A sweep.

### A Sweep End of Sweep Comparator

The A Sweep End of Sweep Comparator is a switching circuit composed of Q4581 and Q4582. At quiescence, Q4582 is conducting and Q4581 is turned off. When the sweep starts to run, the negative-going ramp at the collector of Q4498 is coupled through the base of Q4588B and through CR4581 to the cathode of CR4577. When the collector of Q4498 reaches +2 V, the cathode of CR4577 reaches approximately +4 V. Diode CR4577 begins conducting and turns on Q4581, which then turns off Q4582. The resulting positive step at the collector of Q4581 is fed to

## Theory of Operation

### 465B Service (SN B060000 & UP)

pin 16 of U7375 where it is used to initiate retrace and holdoff. The negative-going pulse at the collector of Q4582 is applied to the A Sweep Z-Axis Logic Gate to blank the crt as soon as a sweep-end command is generated.

### B Sweep Generator Differences

There are two main differences between the A Sweep Generator and the B Sweep Generator. The first is that Q4545 is used as a constant current source in the B Sweep Start Comparator circuit. The second is that one of the outputs of the B Sweep Generator is controlled by the B ENDS A switch associated with the A Trigger HOLDOFF control. In the B ENDS A position, the end of the B sweep also ends the A display on the crt.

### Horizontal Display Switching

Switching transistors Q4482 and Q4481 are controlled by the Horizontal Display Logic circuit. They are switched off and on as required to allow A sweep output transistor Q4475 and B sweep output transistor Q4465 to pass the A or B sawtooth to the Horizontal Amplifier.

When HORIZ DISPLAY is set to A, a LO on the base of Q4481 keeps the transistor biased off. The A sawtooth is allowed to pass to the emitter of Q4475 to be amplified and sent to the Horizontal Amplifier. A HI on the base of Q4482 turns it on, and the B sawtooth passes to ground through the transistor, thereby preventing the B sawtooth from going to the Horizontal Amplifier. The same conditions exist when the HORIZ DISPLAY is set to A INTEN. Setting the HORIZ DISPLAY to ALT will cause the Horizontal Display Logic circuit to alternately turn Q4481 and Q4482 off and on to first pass the A sawtooth and then the B sawtooth to the Horizontal Amplifier. When the HORIZ DISPLAY is set to B DLY'D, Q4482 will be biased off and Q4481 will be on. The B sawtooth will go to the Horizontal Amplifier, and the A sawtooth will be shunted to ground.

## HORIZONTAL DISPLAY LOGIC

### Introduction

The Horizontal Display Logic circuit produces the signals that switch the A and B Sweep Generators and the A Sweep and B Sweep Z-Axis Gates. It also provides a Vertical Alt Sync pulse to the Vertical Switching circuit. Switching transistor Q4398 enables the TRACE SEP potentiometer (R14499) during ALT Horizontal Display.

### Vert Alt Sync Pulse

A gating circuit is formed by U4391B and U4391D to control the Vertical Alt Sync pulse. The pulse is used in the Vertical Switching circuit for clocking U1705 whenever the

ALT Vertical Mode is selected. In all Horizontal Display modes except ALT, a HI at pin 6 of U4391B will put a LO at pin 3 of U4391D. Pin 2 of U4391D has the positive-going Horiz Alt Sync pulse present. This pulse is inverted through U4391D and fed to the Vertical Switching circuit. In ALT Horizontal Display mode, pin 6 of U4391B will be LO, and the signal at pin 5 will control output pin 4. The signal present at pin 6 of U4491A, which changes state with every Horiz Alt Sync pulse, now controls U4391D, and the Vert Alt Sync pulse becomes a rectangular pulse having a period equal to twice the time between Horiz Alt Sync pulses.

### Trace Separation

Transistor Q4398 acts as a switch to control the enabling voltage to TRACE SEP potentiometer R14499. In the ALT Horizontal Display mode, the voltage is applied to the potentiometer during the B Sweep time to supply an offset signal to Q2140 and Q2130 in the Vertical Output Amplifier. This circuit allows control of the vertical separation between the A Sweep display and the B Sweep display on the crt. During B Sweep, in ALT Horizontal Display mode, a HI will be present on pin 4 of U4391B. The HI will raise the base voltage of Q4398 to turn it on and the  $-8$  V on the emitter will be supplied to the TRACE SEP potentiometer.

### A and B Sweep Switching

Flip-flop U4491A controls Horizontal Display Switching transistors Q4482 and Q4481 in the A and B Sweep Generators. The HORIZ DISPLAY switch, S6260, sets the flip-flop input to do one of the following:

1. turn off Q4481 and turn on Q4482 to allow the A Sweep signal to go to the Horizontal Amplifier;
2. turn off Q4482 and turn on Q4481 to allow the B Sweep signal to go to the Horizontal Amplifier; or
3. alternately turn the two transistors off and on to display both sweeps in ALT Horizontal Display mode.

Integrated circuit U4491A is clocked by the Horiz Alt Sync when the Horizontal Display is set to ALT. When the Horizontal Display is set to A, A INTEN, or B DLY'D, the state of the outputs of U4491A is determined by the logic levels present at pins 1 and 4. The HORIZ DISPLAY switches set these logic levels.

Flip-flop U4491B controls the A and B Sweep Z-Axis Gate switching transistors Q4492 and Q4491. These transistors switch the bias on CR7281 and CR7381 in the A and B Sweep Z-Axis Gates to either allow the unblanking gates to pass to the Z-Axis Amplifier or block them. Flip-Flop

U4491B is controlled by both the signal on pin 5 of U4491A and the A position of the HORIZ DISPLAY switch.

## HORIZONTAL AMPLIFIER

### Introduction

The Horizontal Amplifier circuit provides the output signals to the crt horizontal deflection plates. The signal applied to the input of the Horizontal Amplifier is determined by the TIME/DIV switch and the HORIZ DISPLAY switch. This signal can come from either the sweep generators within the instrument or some external signal applied to the CH 1 OR X input connector (X-Y Horizontal Display). Horizontal positioning, X10 magnifier circuitry, and the horizontal portion of the beam finder circuitry are also contained in the Horizontal Amplifier. Figure 3-8 shows a detailed block diagram of the Horizontal Amplifier circuit.

### X-Axis Amplifier

In all positions of the TIME/DIV switches except X-Y, the input signal to the base of U4269A will be sawtooth waveforms from the sweep generators. In the X-Y position, however, the sweeps are disabled, and the signal applied to Q4269A comes from the Channel 1 Preamp via the X-Axis Amplifier. This stage includes Q4284, Q4285, and associated circuitry.

Transistor Q4284 is connected as a feedback amplifier, with R4285 as the feedback element. The input resistance is made up of R4384 and the gain-setting adjustment of R4381. When not operating in the X-Y Horizontal Display,

the base of Q4284 rises toward the +15 V supply, but is clamped at approximately +5.7 V by CR4287 and R4287. This reverse biases the base-emitter junction of Q4284. The base of Q4285 also rises to approximately +5.7 V and with the junction of R4281-R4280 at approximately 0 V, Q4285 is biased off.

When the A TIME/DIV switch is set to X-Y position (fully counterclockwise), -8 V is applied to the junction of R4382 and R4383. In addition, +5 V is applied to the emitter circuit of Q4285 through CR4285. This biases the X-Axis Amplifier into conduction. The +5 V is also applied to pin 18 of U7375 in the Sweep and Z-Axis Logic circuit to disable sweep generation.

### Input Paraphase Amplifier

The Input Paraphase Amplifier is composed of U4269A and U4269B (part of a transistor array). This is an emitter-coupled amplifier stage that converts the single-ended input signal to a push-pull output signal. The signal at the collector of U4269A is opposite in phase to the input signal, while the signal at the collector of U4269B is in phase with the input signal. Thermistor RT4373 reduces its value with increases in ambient temperature to increase the gain of the stage. This compensates for slight changes in amplifier gain that occur as operating temperatures vary.

The Horizontal POSITION potentiometers, R14288A (Coarse) and R14288B (Fine), are mounted on the same shaft in a mechanical arrangement that allows R14288B to rotate about one-eighth turn in either direction before

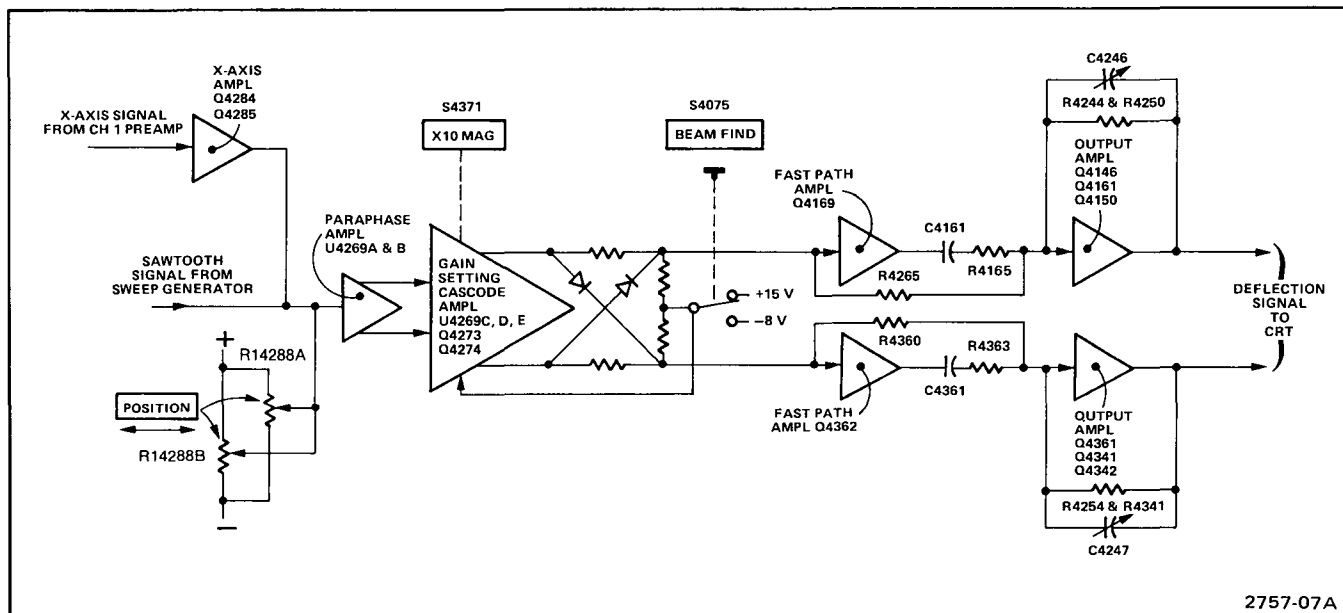


Figure 3-8. Detailed block diagram of the Horizontal Amplifier circuit.

## Theory of Operation

### 465B Service (SN B060000 & UP)

R14288A moves. The Fine Potentiometer has approximately one-tenth the range of the Coarse potentiometer.

### Gain Setting Cascode Amplifier

A cascode push-pull amplifier stage is made up of Q4273, Q4274, U4269C, and U4269D. The gain of the Horizontal Amplifier is controlled by adjusting the resistance connected between the emitters of Q4273 and Q4274. The X1 Gain adjustment, R4274, is used to adjust the unmagnified horizontal gain and the X10 Gain adjustment, R4373, is used to adjust the magnified horizontal gain. The Magnifier Registration adjustment, R4275, is used to balance the quiescent dc current in Q4273 and Q4274 so that a center screen display does not change positions when switching between magnified and unmagnified display.

When the BEAM FIND push button is pressed, +15 V is removed from the junction of R4167 and R4361, and -8 V is applied to the junction through R4075. The following actions occur.

1. The base voltage of Q4269C and Q4269D is lowered to decrease the current through the two transistors. The reduced current flow decreases the voltage drop across R4266 and R4267 and the diode clamps (CR4266 and CR4267) clamp at a much lower voltage. This action limits the horizontal deflection on the crt.

2. Resistors R4167 and R4361 are now no longer connected to +15 V, therefore less current flows through these resistors. This compensates for the decreased current flowing through Q4269C and Q4269D and maintains the output stage in a linear operating region.

### Output Amplifier

The push-pull signal from the Gain Setting Cascode Amplifier is connected to the bases of Q4169 and Q4362, through R4265 and R4360 and on to the bases of Q4161 and Q4361. At lower sweep frequencies, the signal path is through R4265 and R4360 to the bases of Q4161 and Q4361. These transistors are inverting amplifiers whose collector signals drive the emitters of complementary amplifiers Q4146-Q4150 and Q4341-Q4343, respectively. Capacitor C4262 provides emitter peaking for fast ac signals. Capacitors C4150 and C4341 transfer part of the high-frequency signal to the emitters of Q4146 and Q4342 to maintain the gain of the output stage at high sweep speeds. Resistors R4244-R4250 and R4254-R4341 are the feedback elements, with C4246 and C4247 providing high-frequency compensation. As frequency of the sweep signal increases, the reactance of C4246 and C4247 decreases and feedback current increases. To compensate for the increase in drive required to maintain the gain of the output stage, Q4169

and Q4362 (fast-path amplifiers) increase signal current to the bases of Q4161 and Q4361. High-frequency signal current is shunted around R4265 by C4165 and R1165, and C4361 and R4363 shunt high-frequency signal current around R4369. The Output Amplifiers are limited from being over-driven by CR4267 and CR4266. If the output signal from U4269D or U4269C becomes too large, the diodes become forward biased and prevent further increases in the signal level. These diodes operate mainly to clamp the signal whenever the X10 Magnification circuitry is operating. The signal level is limited to the forward drop across the diodes plus the drop across R4266 and R4267.

## CRT CIRCUIT

### Introduction

The CRT circuit provides the voltage levels and control circuitry necessary for operation of the cathode-ray tube (crt). Figure 3-9 shows a detailed block diagram of the CRT circuit.

### High-Voltage Oscillator

The high-voltage oscillator is composed of Q14009 and associated circuitry. It produces the drive for high-voltage transformer T4015. When the instrument is turned on, transistor Q4008 is forward biased and conducts through the base circuit of Q14009 to forward bias Q14009. The increasing collector current of Q14009, through the primary winding of T4015, induces a voltage across the feedback winding. Because the feedback winding is connected to the base of Q14009 and the feedback is positive, the collector current increases rapidly toward saturation. Soon the rate of increase slows to a point where the voltage induced in the feedback winding starts to decrease. This decreases the current through Q14009, further decreasing the feedback voltage. The cycle continues until Q14009 turns off, and the magnetic field around the primary winding of T4015 starts to collapse. Transistor Q14009 is held off until the field has collapsed sufficiently to allow the base of Q14009 to become biased into conduction and the cycle is repeated.

The voltage waveform at the collector of Q14009 is a sinusoidal wave at the resonant frequency of T4015. The amplitude of sustained oscillations depends on the average current delivered to the base of Q14009. Frequency of oscillation is approximately 50 kHz. Fuse F4508 protects the unregulated +15 V supply in the event the High-Voltage Oscillator stage becomes shorted. Capacitor C4006 and inductor L4006 decouple the unregulated +15 V supply to prevent current changes (present in the High-Voltage Oscillator) from affecting the +15 V supply.



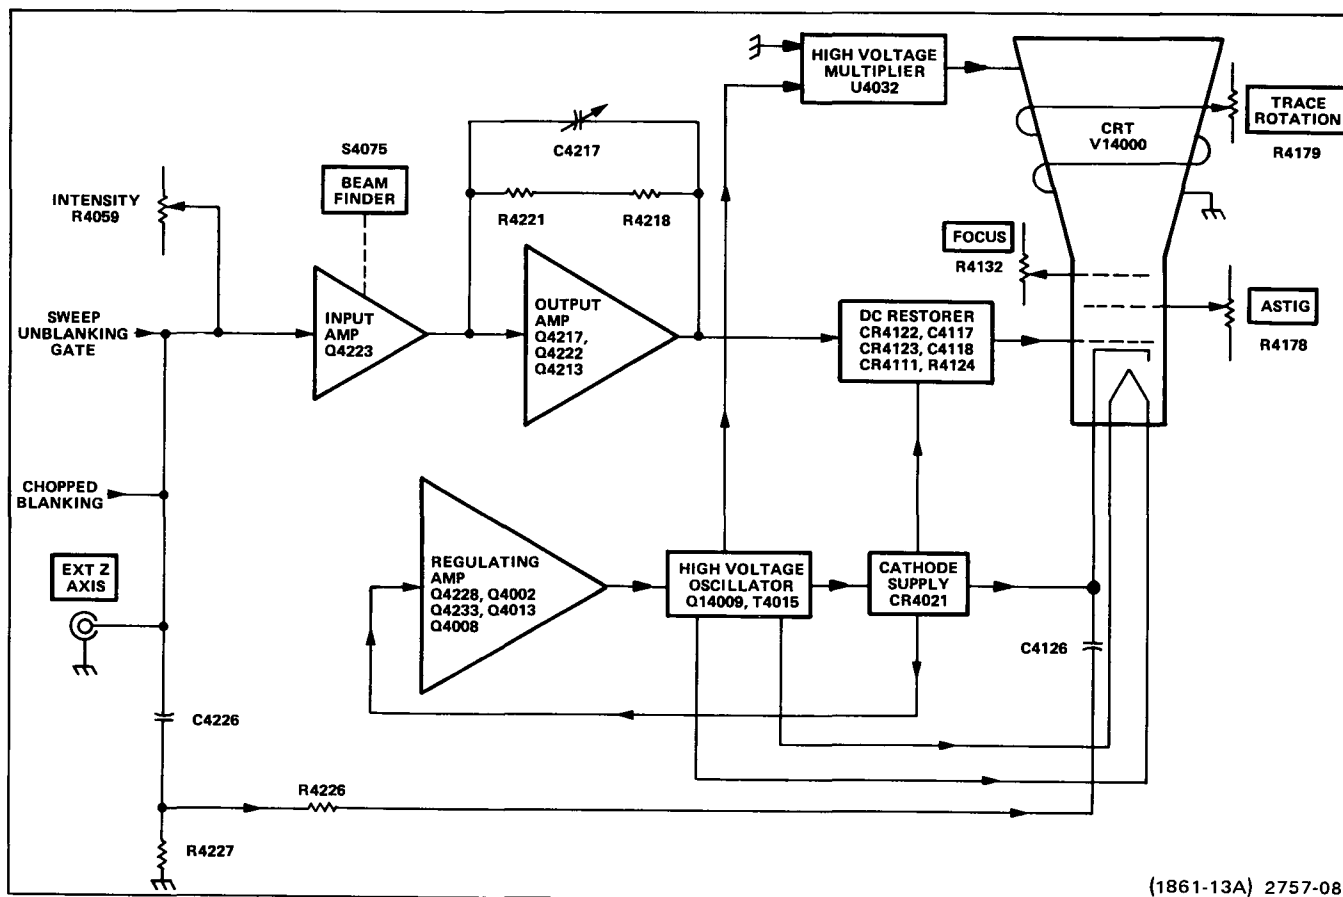


Figure 3-9. Detailed block diagram of the CRT and Z-Axis Amplifier circuits.

### High-Voltage Regulator

Once the output voltage from the High-Voltage Oscillator has reached its stable level after the instrument is turned on, regulation occurs as follows. A sample of the  $-2450$  V crt cathode supply is applied to the base of Q4228 through R4127D, which, with the voltage supplied by the bias network composed of R4332, R4127C, C4327, and CR4329, sets the forward bias on Q4228. Any change in the  $-2450$  V changes the conduction level of Q4228 to produce a proportional dc change on its collector.

Assume that the  $-2450$  V supply starts to go positive (less negative). The positive-going change is applied to the base of Q4228 and causes the collector current to increase, which, in turn, causes Q4233 and Q4008 to conduct harder. This results in greater bias current to the base of Q14009 through the feedback winding of T4015. Now, Q14009 is biased closer to its conduction level, and it will conduct sooner in the oscillation cycle of T4015 to increase the average current delivered to the primary of T4015. This increases the amplitude of oscillation and includes a larger voltage into the high-voltage secondary of T4015 to correct the original positive-going change. By sampling the output of the crt cathode supply in this manner, the total output of the High-Voltage Supply is held relatively constant.

Overvoltage protection is provided by Q4002, Q4103, and associated circuitry. Normally, Q4002 and Q4103 are biased off, but if the crt cathode supply voltage approaches approximately  $-3000$  V, the voltage level at the emitter of Q4008 will be approximately  $-6$  V. At this point, Q4002 will be biased into conduction, which, in turn, biases Q4103 into conduction to reduce the forward bias on Q4008. This reduces the base drive to Q14009 in order to limit the amplitude of oscillations in T4015, and the crt cathode supply is prevented from going more negative than approximately  $-3000$  V.

### High-Voltage Rectifiers and Output

High-voltage transformer T4015 has two secondary windings. One winding provides heater voltage for the cathode-ray tube. The heater voltage is supplied from the High-Voltage Supply, since the cathode-ray tube has a very low heater current drain, and this allows the cathode and heater of the crt to be connected together to prevent cathode-to-heater breakdown. The high-voltage winding is the source for the negative crt cathode potential and the source for High-Voltage Multiplier U4032. The crt grid bias voltage is derived by a dc-restorer circuit that uses a sample of the signal in the high-voltage winding in conjunction with dc levels supplies by both the Z-Axis Amplifier and the crt negative cathode potential.

## Theory of Operation 465B Service (SN B060000 & UP)

The positive accelerating potential is supplied by High-Voltage Multiplier U4032. Regulated output voltage is approximately +15,500 V. The negative cathode potential of -2450 V is supplied by half-wave rectifier CR4021. Voltage variations in this supply are monitored by the High-Voltage Regulator circuit to provide a regulated high-voltage output.

### CRT Control Circuits

Focus of the crt display is controlled by FOCUS control R4132. ASTIG adjustment R4178, which is used in conjunction with the FOCUS control to provide a well-defined display, varies the positive level on the astigmatism grid. Geometry adjustment R4069 varies the positive level on the horizontal deflection plate shields to control the overall geometry of the display.

Two adjustments control the trace alignment by varying the magnetic field around the crt. Y-Axis adjustment R4072 controls current through L14165, which affects the crt beam after vertical deflection but before horizontal deflection. Therefore, it affects only the vertical (Y) components of the display. TRACE ROTATION adjustment R4179 controls the current through L14176 and affects both vertical and horizontal rotation of the beam.

### Z-Axis Amplifier

The Z-Axis Amplifier circuit controls the crt intensity level from several inputs. The effect of these input signals is to either increase or decrease the trace intensity, or to completely blank portions of the display. Input transistor Q4223 is a current-driven, low input impedance amplifier. It provides termination for the input signals as well as isolation between the input signals and the following stages. Current signals from the various control sources are connected to the emitter of Q4223, and the algebraic sum of these signals determines the collector conduction level.

Transistors Q4222, Q4217, and Q4213 are configured in a feedback amplifier arrangement with R4218 and R4221 as feedback elements and with C4217 providing high-frequency compensation. Emitter follower Q4222 provides the drive to complementary amplifier Q4217-Q4213. Diodes CR4321, CR4218, and CR4115 provide protection in the event of high-voltage arcing.

The Z-Axis portion of the Beam Find circuit acts on the input to the Z-Axis Amplifier. When the BEAM FIND push button is pressed, two events occur. First, +15 V is applied to the anode of CR4144, which lifts the emitter of Q4223 sufficiently positive to ensure nonconduction of the transistor. Second, R4321 becomes connected to -8 V through R4314 to establish a fixed and predetermined unblanking level at the output of the amplifier. Thus, the INTENSITY

control and all of the input unblanking signals have no control over the intensity level of the crt display whenever the BEAM FIND Push button is pressed, and a bright trace will be displayed.

### DC Restorer

The DC Restorer circuit provides crt control grid bias and couples both dc and low frequency components of the Z-Axis Amplifier unblanking signal to the crt control grid. This circuit allows the Z-Axis Amplifier output to control the intensity of the crt display. The potential difference between the Z-Axis Amplifier output and the control grid (approximately 2465 V) prevents direct signal coupling.

The DC Restorer circuit's ac drive is taken from the center tap of T4015. Voltage on the center tap is approximately 300 V peak to peak at 50 kHz. A sample of this sinusoidal voltage is fed through C4010 and R4112 to the junction of CR4111, CR4112, and R4111. The Crt Bias Adjust (R4109) sets the voltage level on the cathode of CR4111 to approximately +100 V dc. When the ac sample voltage rises to +100 V, CR4111 becomes forward biased and clamps the junction of CR4111 and CR4112 to approximately +100 V.

The Z-Axis Amplifier output voltage level is applied via R4113 to the anode of CR4112. This voltage level varies between +15 V and +95 V, depending on the setting of the INTENSITY control. The sample voltage will hold CR4112 reverse biased until the voltage falls below the Z-Axis Amplifier output level. At that point, CR4112 becomes forward biased and clamps the junction of CR4111 and CR4112 to the Z-Axis Amplifier output level (see Figure 3-10). Clamping the sample between +100 V and the positive voltage level set by the INTENSITY control produces an approximate square-wave signal with a positive dc offset level.

The DC Restorer circuit is referenced to the -2450 V, present on the crt cathode, through R4126 and CR4123 to the junction of C4117 and CR4122. Initially, C4117 will charge to a level determined by the difference between the Z-Axis Amplifier output level and the -2450 V reference voltage. The charging path is from the -2450 V line, through R4126, CR4123, C4117, R4111, CR4112, and R4113 to the Z-Axis output.

Initially, C4118 will also be charged to approximately the same voltage as C4117 through R4126, CR4123, and CR4122 to the Z-Axis output.

When the sinusoidal sample voltage starts its positive transition from the lower clamped level (+15 V to +95 V) toward the higher clamped level (+100 V), the charge on C4117 increases due to the rising voltage at the anode of

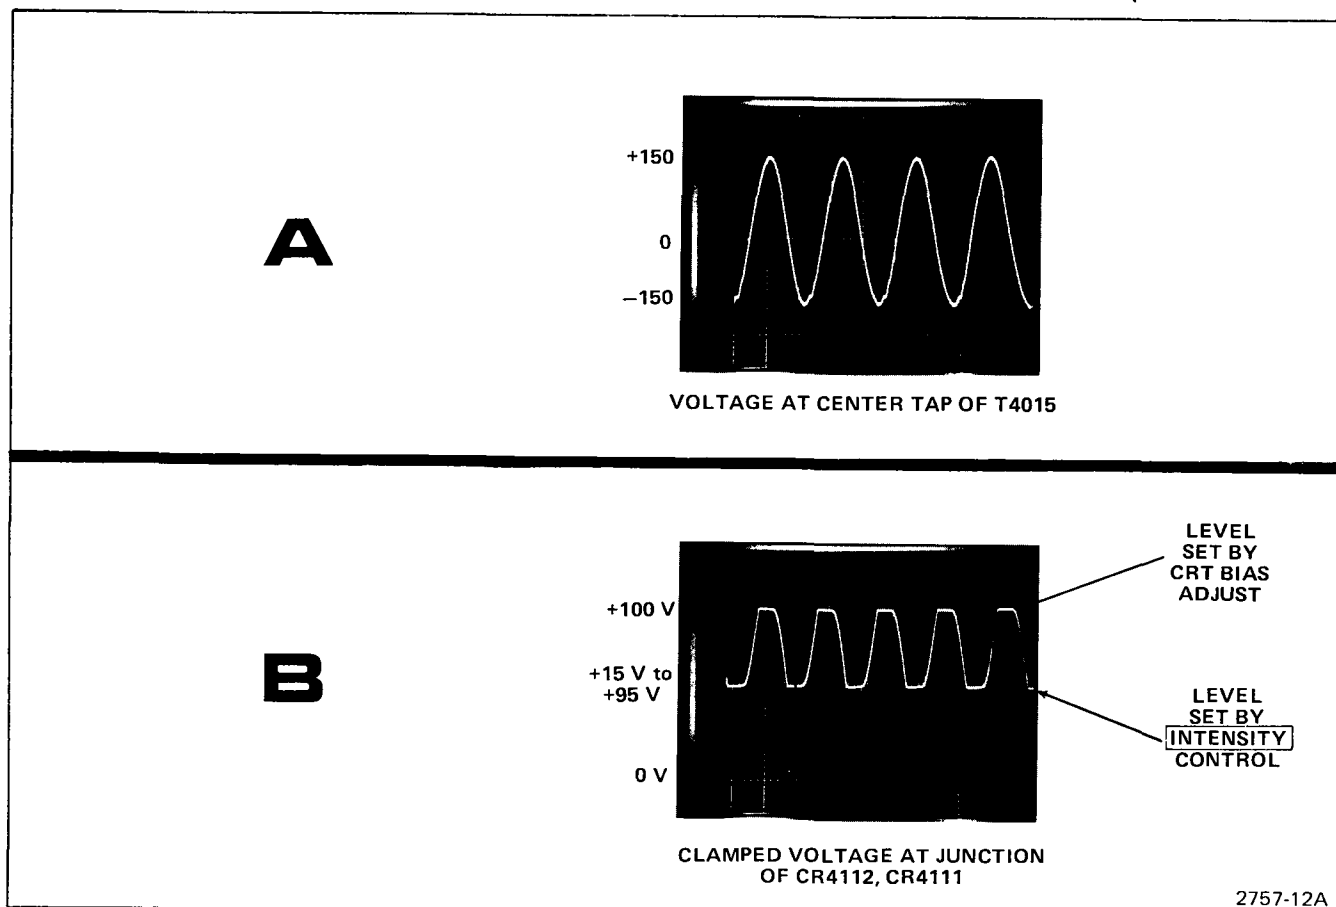


Figure 3-10. (A) Sinusoidal sample voltage at center tap of T4015. (B) Clamped sample voltage at the junction of CR4111 and CR4112.

CR4111. The additional charge acquired by C4117 is proportional to the amplitude of the positive transition of the clamped sample voltage.

When the sample voltage starts its negative transition from its upper clamped level toward its lower clamped level, the negative transition is coupled through C4117 to reverse bias CR4123 and forward bias CR4122. When CR4122 becomes forward biased, the charge on C4117 is transferred to C4118 as C4117 attempts to discharge to the Z-Axis output. The amount of charge that is transferred is proportional to the setting of the INTENSITY control, since the INTENSITY control sets the lower clamping level of the sample voltage from T4015 (see Figure 3-11).

If the INTENSITY control is set so the lower level of the sample voltage is clamped at +15 V, a voltage change of approximately 75 V is coupled through CR4122. The 75 V negative excursion is added to the charge already present on C4118. This causes the control grid to be sufficiently negative with respect to the crt cathode to keep the crt blanked. When the INTENSITY control is set to increase the display intensity, the lower clamping level of the sample volt-

age is moved toward the +100 V upper clamping level. This makes the swing of the negative transition less, therefore less charge will be added to C4118. The voltage on the crt control grid becomes less negative with respect to the cathode and allows more beam current to flow in the crt. The more positive the lower clamping level is made, the brighter the trace on the crt.

During periods that C4117 is charging, the voltage on the control grid is held constant by the filter action of C4118 as it discharges through R4124 back to the -2450 V line. Resistor R4124 is a very high resistance, so the RC time constant of C4118 and R4124 is long in respect to the frequency of the sample voltage from T4015. Whatever charge is leaked off of C4118 during the positive transitions of the sample voltage will be replaced by C4117 when the sample voltage makes its negative transitions.

The fast rise and fall of the unblanking pulses from the Z-Axis Amplifier are coupled by C4118 to the control grid to start the crt beam current change. The DC Restorer output level then follows the Z-Axis output level to set the new bias level on the control grid.

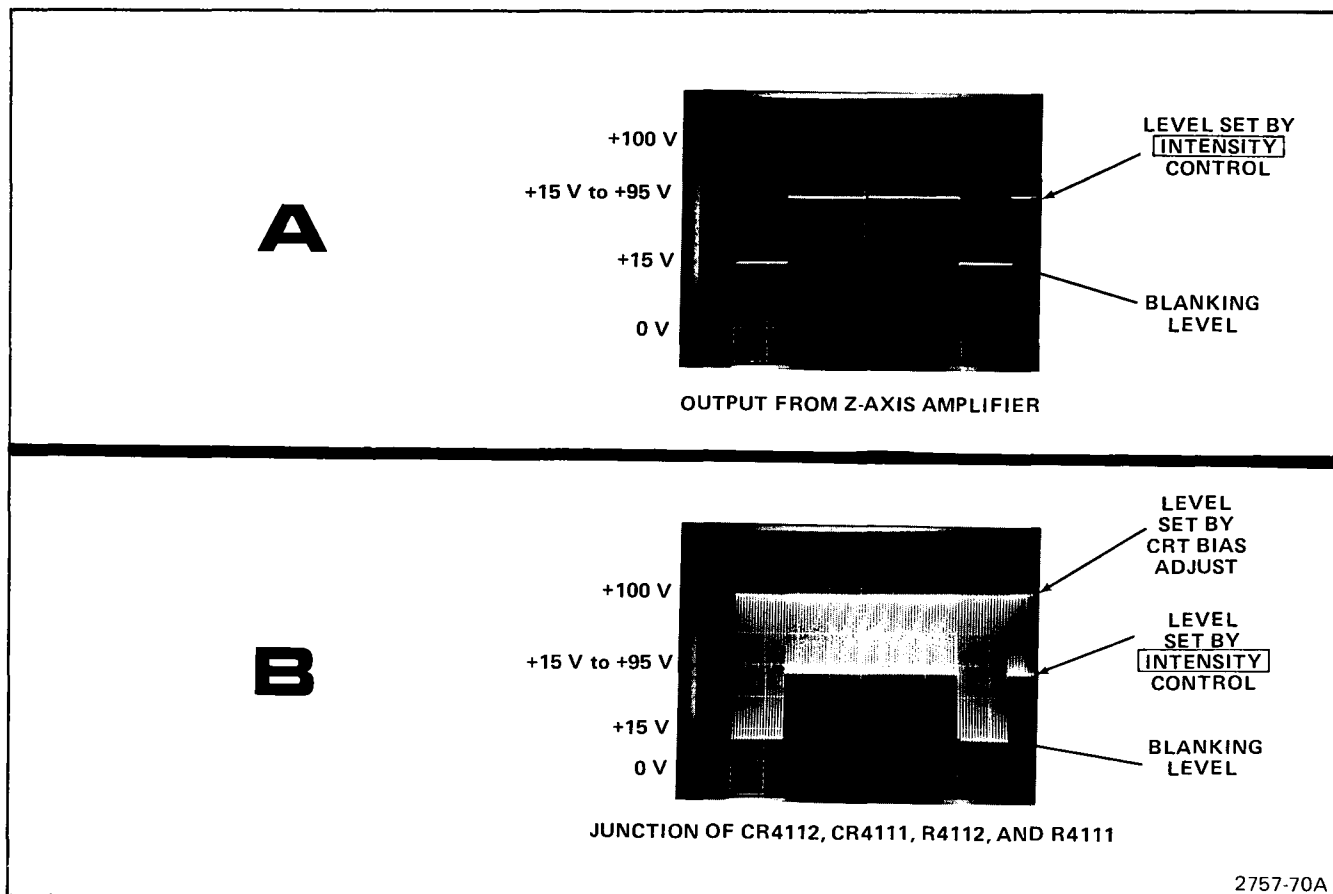


Figure 3-11. (A) Z-Axis Amplifier output. (B) Clamped sample voltage at the junction of CR4111 and CR4112.

In the event of a failure that causes a loss of potential on either the control grid or the cathode, protection against arching is provided by DS4124 and DS4125.

## CALIBRATOR

### introduction

The Calibrator circuit produces a square-wave output signal with accurate voltage and current amplitudes. This output is available as both a voltage and a current at the CALIBRATOR current loop on the instrument front panel. Figure 3-12 shows a detailed block diagram of the Calibrator circuit.

### Multivibrator

Transistors Q4182 and Q4196 and associated circuitry are configured as an astable multivibrator. The basic frequency of the multivibrator is approximately 1 kHz and is primarily determined by the resistance and capacitance of C4187, R4186, R4191, R4184, and R4185. Transistors Q4182 and Q4196 alternately conduct, producing a square-wave output signal. This output is taken from the collector of Q4196.

Refer to Figure 3-13 for the following discussion. At  $t_0$ , assume that the circuit is operating and has reached its normal operating conditions. Also, assume Q4182 is off and Q4196 is on. At  $t_0$ , the emitter of Q4182 is at approximately +9 V, and the emitter of Q4196 is at +7.5 V with its base at approximately +7.0 V. From  $t_0$  to  $t_1$ , C4187 charges toward the +55 V supply through R4186. When the emitter of Q4182 reaches +15.6 V, Q4182 becomes forward biased. At  $t_1$ , the collector of Q4182 rises to approximately +14.6 V, and since the base of Q4196 is directly connected to the collector of Q4182, Q4196 is cut off.

Now, C4187 charges in the opposite direction. At  $t_1$  as C4187 starts charging through R4191 and Q4182, the emitter of Q4196 rises from +7.6 V to approximately +14.6 V. When +14.6 V is reached at  $t_2$ , Q4196 begins to conduct, reducing both the charging current through C4187 and the collector current of Q4182. At  $t_2$ , the collector voltage of Q4182 drops in a negative direction and Q4196 conduction increases. The emitter of Q4196 drops from +14.6 V to +7.6 V. This negative transition is coupled through C4187 to the emitter of Q4182 to cut Q4182 off and the cycle repeats itself.

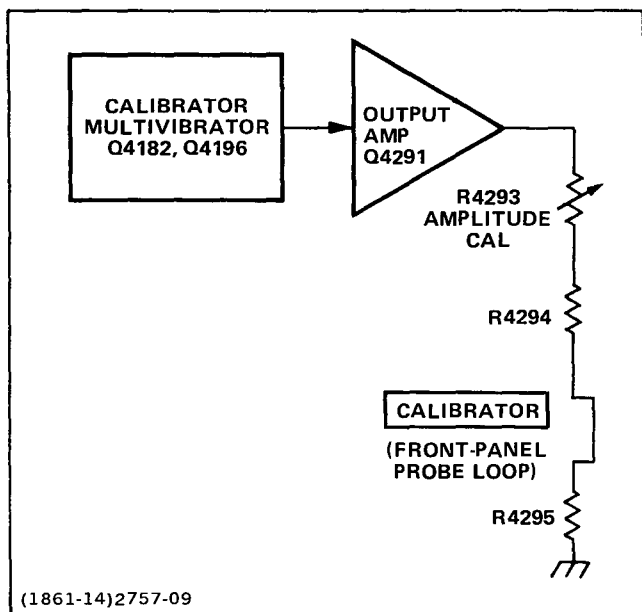


Figure 3-12. Detailed block diagram of the Calibrator circuit.

### Output Amplifier

The output signal from the Multivibrator drives Output Amplifier Q4291 to produce a square wave at the output. When the base of Q4291 goes positive, the transistor is cut off and its collector voltage drops to zero. When the base goes negative, Q4291 is biased into saturation, and the collector voltage rises in a positive direction to approximately +5 V. Amplitude adjustment R4293 is used to adjust the resistance between the collector of Q4291 and ground to control the amount of current allowed to flow. This, in turn, determines the voltage developed across R4295. The output voltage, at the calibrator current loop on the 465B oscilloscope, is 300 mV,  $\pm 1.0\%$  and the output current is 30 mA,  $\pm 2.0\%$ .

### LOW-VOLTAGE POWER SUPPLY 12

#### Introduction

The Low-Voltage Power Supply circuit provides the operating power for this instrument from five regulated supplies and one unregulated supply. Regulation provides stable, low-ripple output voltages. Figure 3-14 shows a detailed block diagram of the Power Supply circuit.


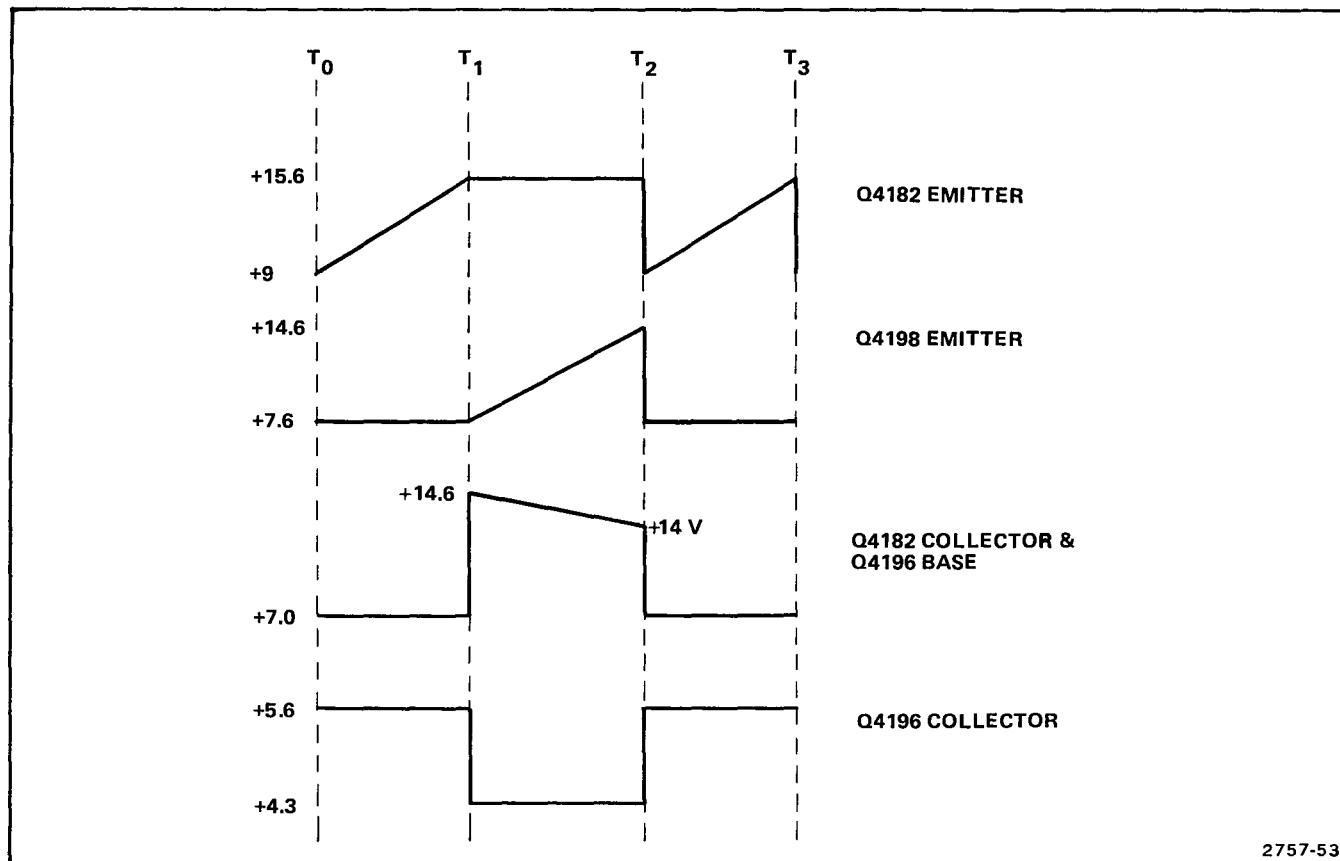


Figure 3-13. Calibrator circuit waveform diagram.

Theory of Operation  
465B Service (SN B060000 & UP)

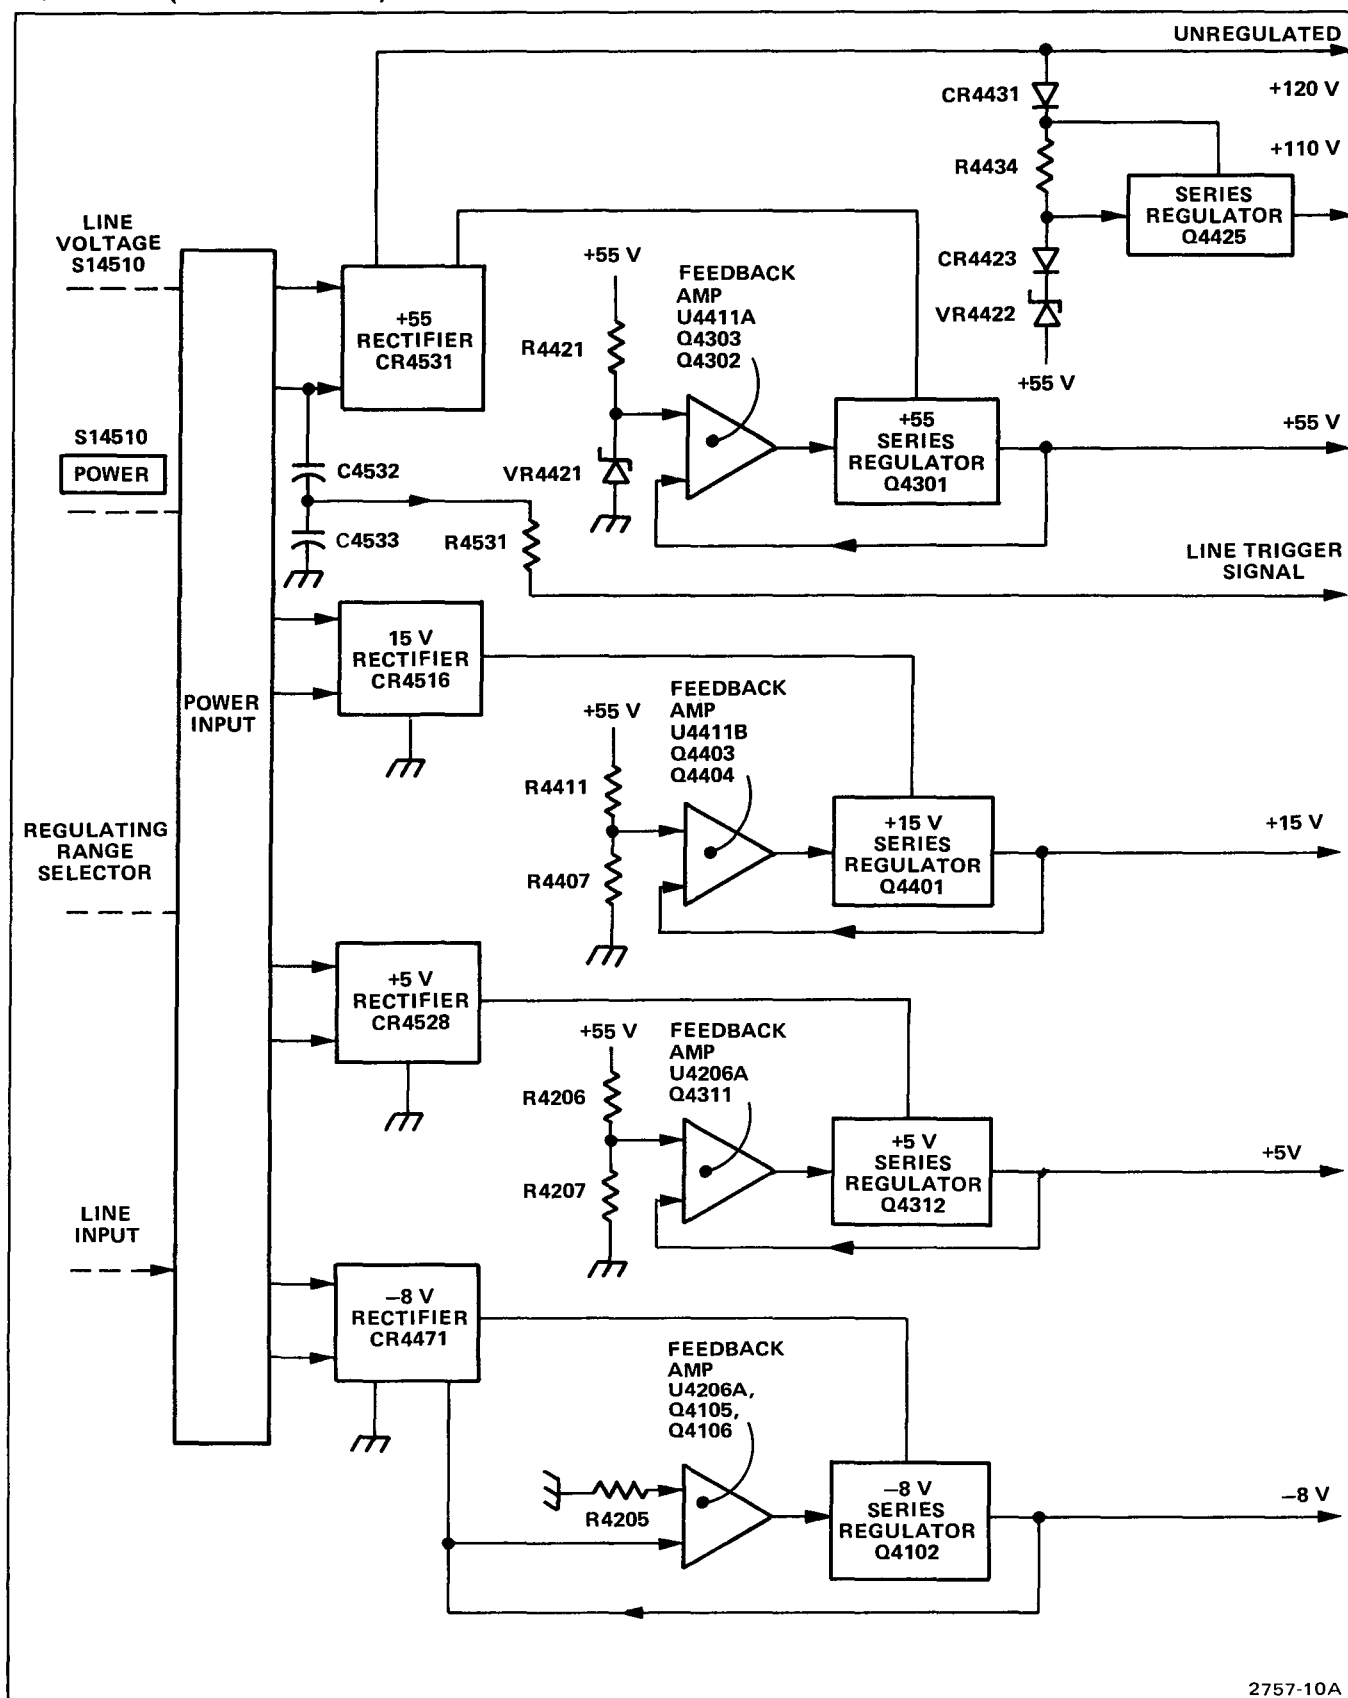

2757-10A

Figure 3-14. Detailed block diagram of the Low-Voltage Power Supply circuit.

## Power Input

Power is applied to the primary of transformer T14500 through line fuse F14500, POWER switch S14510, thermal cutout S14520, Line Voltage Selector switch S14500, and the Regulating Range Selector assembly. Line Voltage Selector switch S14500 connects the split primaries of T14500 either in parallel for 115 V nominal operation or in series for 230 V nominal operation. Line fuse F14500 value is selected to provide the required protection for each nominal line voltage. Refer to Replaceable Electrical Parts list for correct fuse values.

The unused windings between pins 10, 11, and 12 of T14500 are intended for use with the optional Inverter Circuit Board (Option 07) or DM-series Digital Multimeters. Option 07 allows the instrument to be operated from an external dc power source or an 1106 Power Supply. Option 07 and the DM-series Digital Multimeters cannot be used at the same time.

## Secondary Circuit

The  $-8$  V,  $+5$  V,  $+15$  V, and  $+55$  V power supplies are series-regulated supplies. Integrated circuits U4411A, U4411B, U4206A, and U4206B are two-channel, high-gain amplifier cells with differential inputs. These amplifiers monitor voltage variations in the output voltages and supply correction information to the series-regulating transistors. The  $+55$  V supply is the source of the reference voltage for the remaining supplies and its output must be correct or the  $-8$  V,  $+5$  V, and  $+15$  V supplies will not operate within their limits.

Current-limiting circuits provide short circuit protection for each of the regulated supplies. The following description applies only to the  $+55$  V current limiting circuit; the other current-limiting circuits operate in a similar manner.

In the  $+55$  V supply, Q4303 is normally biased off. Under normal conditions, the base of Q4303 sets at about  $+55$  V. Under conditions of power supply loading, when the supply current increases, the voltage drop across R4303 increases. This increasing voltage is coupled through the base of Q4301 to the voltage divider, composed of R4302 and

R4208, causing the base of Q4303 to go more positive. When the supply current increases sufficiently, Q4303 turns on. The collector of Q4303 moves in the negative direction and begins turning off Q4302 and Q4301. Transistor Q4301 will continue conducting some current, even when the supply is limited, in order to produce enough voltage drop across R4303 to keep Q4303 biased on. The limited supply output voltage can be any value between its regulated value and zero, depending on the extra load it is trying to supply (see Figure 3-15). The limiting transistors for the other supplies are:

$+15$ V	Q4404
$+5$ V	Q4311
$-8$ V	Q4106
$+110$ V	Q4431

Figure 3-15 also shows the action of the current limit (foldover) circuit. At point A, Q4303 begins conducting. At point B, the supply is directly shorted to ground through a current meter.

Components C4533, C4532, and R4527 are configured in a wave-shaping circuit arrangement that provides a sample of the ac voltage (present in the secondary of T14500) to the trigger circuitry for use in the LINE position of the A TRIGGER SOURCE switch.

## FAN MOTOR CIRCUIT

The fan motor used in the 465B is a brushless dc fan motor using Hall Effect devices. Motor circuitry varies the rotational speed of the fan with variations in operating temperature. When the ambient temperature increases, the value of thermistor RT8038 is reduced. This causes the forward bias on Q8067 to increase and Q8067 conducts more current through the Hall Effect devices. Higher currents through the Hall Effect devices cause the potential difference across them (e.g., between pins 6 and 8 of the fan) to increase. This potential difference biases one of a pair of transistors on and the other off. In the example, if fan pin 8 is more positive than pin 6, U8061A will be on and U8061D will be off. The higher the potential difference between pin 8 and pin 6, the harder the on transistor will conduct; the harder the transistor conducts, the faster the fan rotates.

Theory of Operation  
465B Service (SN B060000 & UP)

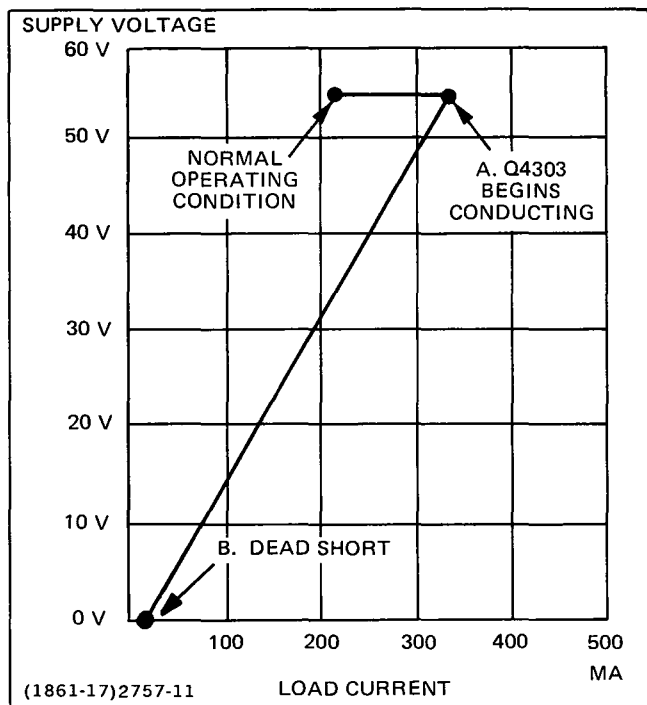


Figure 3-15. Foldover circuit action.



# PERFORMANCE CHECK PROCEDURE

## INTRODUCTION

The Performance Check Procedure is used to verify the instrument's Performance Requirements as listed in the Specification (Section 1) and to determine the need for readjustment. These checks may also be used as an acceptance test and as a preliminary troubleshooting aid.

This procedure does not check every facet of instrument operation; rather it is concerned with those portions of the 465B that are essential to measurement accuracy. Removing the instrument's cover is not necessary to perform this procedure. All checks are made using the operator accessible front-and rear-panel controls and connectors.

### NOTE

*If a complete check of every facet of the instrument's operation is desired, perform the Adjustment Procedure, eliminating the ADJUST portion of the Check/Adjust steps.*

## TEST EQUIPMENT REQUIRED

The test equipment listed in Table 4-1 is a complete list of the equipment required to accomplish both the Performance Check Procedure in this section and the Adjustment Procedure in Section 5.

In Table 4-1, the specifications given for the equipment are the minimum necessary to provide accurate results. Therefore, the equipment used must meet or exceed the listed specifications. Detailed operating instructions for the test equipment are not given in this procedure. Refer to the appropriate instruction manual if more test equipment operating information is required.

When equipment other than that recommended is used, control settings or test setup may need to be altered. If the exact item or equipment given as an example in the Test Equipment list is not available, first check the Minimum Specifications column carefully to see if any other equipment might suffice. Then, check the Usage column to see the purpose of this item. If used for a check that is of little or

no importance to your measurement requirements, the item and corresponding steps can be deleted.

The following is a list of test equipment required to perform a complete Performance Check only. For equipment specifications, usage, and recommended types, see Table 4-1.

1. Calibration Generator
2. Square-wave Generator
3. Leveled Sine-wave Generator
4. Time-mark Generator
5. 42-inch, 50  $\Omega$  Bnc Cable (2 required)
6. Dual-input Coupler (2 required)
7. GR-to-bnc-male Adapter
8. GR-to-bnc-female Adapter
9. 10X Bnc Attenuator
10. 2X Bnc Attenuator
11. 50  $\Omega$  Bnc Termination (2 required)
12. 50  $\Omega$  Signal Pickoff Unit (Type CT-3)
13. Bnc-to-miniature-probe-tip Adapter
14. Bnc T Connector
15. 10X Scale-factor-switching Probe or 11 k $\Omega$  resistor.

## SPECIAL FIXTURES

Special fixtures are used only where they simplify the test setup and procedure. These fixtures are available from Tektronix, Inc. Order by part number through your local Tektronix Field Office or representative.

**LIMITS AND TOLERANCES**

All limits and tolerance given in this procedure are performance guides and should not be interpreted as specifications unless they are found in the Specification section of this manual.

**PREPARATION**

Connect the test equipment and the instrument to be checked to an appropriate power input source. Turn on and

allow a 20-minute warm up period before commencing the Performance Check.

This procedure is for 115 V ac line, medium range. If a different range is to be used, set the Regulating Range Selector and Line Voltage Selector for the available line voltage (see Operating Voltage in the Installation Instruction of this manual).

**Table 4-1**  
**TEST EQUIPMENT REQUIRED**

<b>Description</b>	<b>Minimum Specifications</b>	<b>Usage</b>	<b>Examples</b>
Variable Autotransformer	Capable of supplying 1.2 A over a range of 104 V to 127 V.	Power supply regulation check.	General Radio W8MT3VM Variac Autotransformer.
Digital Voltmeter	Range, 0 V to 140 V; dc voltage accuracy, within 0.15%; display 4 1/2 digits.	Low-Voltage Power Supply checks and adjustments. CRT Grid Bias adjustment. Vertical and Horizontal Centering adjustments. Calibrator Output Voltage adjustment.	a. TEKTRONIX DM 501 Digital Multimeter <sup>a</sup> . b. Any digital voltmeter that meets minimum specifications.
DC Voltmeter and Test Leads	Range 0 V to 2500 V, calibrated to 1% accuracy at -2450 V	High Voltage Power Supply adjustment	a. Valhalla 4500 H.V. Digital Multimeter. b. Test Leads; Tektronix Part Number 003-0120-00
Test Oscilloscope with 10X probe and 1X probe. (1X probe is optional accessory)	Bandwidth, dc to 100 MHz; minimum deflection factor, 5 mV/div; accuracy, within 3%; dual trace. Scale-factor switching.	Power Supply Ripple Check. CRT Z-Axis Compensation; Vertical gain adjustment. A Trigger Holdoff check. A and B + Gate output signals check.	a. TEKTRONIX 465B Oscilloscope with 2 (included) 10X probes. b. TEKTRONIX 475 Oscilloscope with 2 (included) 10X probes. c. TEKTRONIX P6101 1X Probe. Tektronix Part Number 010-6101-03
Calibration Generator	Standard-amplitude accuracy, within 0.25%; signal amplitude, 2 mV to 50 V; output signal, 1 KHz square wave. Fast-rise repetition rate, 1 kHz to 100 kHz; rise time, 1 ns or less; signal amplitude, 100 mV to 1 V; aberrations, within 2%. High-amplitude output, 60 V pulse supplying at least 10 mA.	Vertical checks and adjustments. Trigger View checks and adjustments. X Gain adjustment. Z-axis check.	a. TEKTRONIX PG 506 Calibration Generator <sup>a</sup> . b. Standard Amplitude Calibrator (Amplitude Calibrator only). Tektronix Part Number 067-0502-01. c. TEKTRONIX Type 106 Square Wave Generator (Fast Rise and High Amplitude only).

Table 4-1 (cont)

Description	Minimum Specifications	Usage	Examples
Sine-wave Generator	Frequency, 350 kHz to above 100 MHz; output amplitude variable from 0.5 V to 5.5 V p-p; output impedance, 50 $\Omega$ ; reference frequency, 50 to 350 kHz; amplitude accuracy, constant within 3% of reference frequency as output frequency changes.	Vertical Centering, Bandwidth, and Isolation checks. Trigger checks and adjustments. X-Y Phase Difference. X Bandwidth check.	a. TEKTRONIX SG 503 Leveled Sine-wave Generator <sup>a</sup> . b. TEKTRONIX Type 191 Constant-amplitude Signal Generator.
Time mark Generator	Marker outputs, 2 ns to 0.5 s; marker accuracy, within 0.1%; trigger output, 1 ms to 0.1 $\mu$ s, time coincident with markers.	CRT Y-Axis and geometry adjustments. Auto Trigger check. Horizontal timing checks and adjustments.	TEKTRONIX TG 501 Time-Mark Generator <sup>a</sup> .
Low Frequency Generator	Frequency 60 Hz to 100 kHz output amplitude variable from 30 mV to 4 V p-p. Positive square-wave output amplitude 5 V.	Low Frequency Trigger checks Vertical Compensation.	TEKTRONIX SG 502 Oscillator <sup>a</sup> .
50 $\Omega$ Signal Pickoff	Frequency response, 50 kHz to 100 MHz; impedance, 50 $\Omega$ for signal input, signal output, and trigger output.	Trigger checks and adjustments.	TEKTRONIX CT-3 Signal Pickoff. Tektronix Part Number 017-0061-00.
Cable (2 Required)	Impedance, 50 $\Omega$ ; length, 42 inches, connectors, bnc	Signal interconnection.	Tektronix Part Number 012-0057-01.
Cable (2 Required)	Impedance, 50 $\Omega$ ; length, 18 inches; connectors, bnc	Signal interconnection.	Tektronix Part Number 012-0076-00.
Adapter	Connectors. GR874-to-bnc-female.	Signal interconnection.	Tektronix Part Number 017-0063-00.
Adapter	Connectors, GR874-to-bnc-male.	Signal interconnection.	Tektronix Part Number 017-0064-00.
Adapter	Connectors, bnc-female-to-bnc-female.	Signal interconnection.	Tektronix Part Number 103-0028-00.
Adapter	Connectors, bnc-female-to-coaxial cable connector.	Signal interconnection.	Tektronix Part Number 131-1315-01.
Adapter	Connectors, bnc-male-to-miniature probe tip.	Signal interconnection.	Tektronix Part Number 013-0084-01.
Dual Input Coupler (2 required)	Connectors, bnc-female-to-2-bnc male.	Vertical checks. Trigger checks and adjustments. X-Y Phase check.	Tektronix Part Number 067-0525-01.
T Connector	Connectors, bnc.	Signal interconnection.	Tektronix Part Number 103-0030-00.
10X Attenuator (2 required)	Ratio, 10X; impedance, 50 $\Omega$ ; connectors, bnc.	Vertical Compensation. Vertical Bandwidth check. Trigger adjustments.	Tektronix Part Number 011-0059-02.

Table 4-1 (cont)

Description	Minimum Specifications	Usage	Examples
5X Attenuator	Ratio, 5X; impedance, 50 Ω; connectors, bnc.	Vertical System Compensation adjustments. Trigger adjustments.	Tektronix Part Number 011-0060-02.
2X Attenuator	Ratio, 2X; impedance, 50 Ω; connectors, bnc.	Vertical System Compensation. Trigger adjustments.	Tektronix Part Number 011-0069-02.
Termination (2 required)	Impedance, 50 Ω; connectors, bnc.	Signal termination.	Tektronix Part Number 011-0049-01.
Screwdriver	Length, 3-inch shaft; bit size, 3/32 inch.	Adjust variable resistors.	Xcelite R-3323.
Low-Capacitance Screwdriver	Length, 1-inch shaft; bit size, 3/32 inch.	Adjust all variable capacitors.	J.F.D. Electronis Corp. Adjustment Tool Number 5284.
Shorting Strap		Calibrator adjustment.	

<sup>a</sup>Requires a TM 500-Series power module.

## INDEX TO PERFORMANCE CHECK PROCEDURE

Vertical	Page
1. Check TRACE ROTATION	4-5
2. Check ALT Mode	4-5
3. Check CHOP Mode	4-6
4. Check CH 1 Balance	4-6
5. Check CH 2 Balance	4-6
6. Check Vertical POSITION Range and Centering	4-7
7. Check BEAM FIND Operation	4-7
8. Check CH 1 and CH 2 Deflection Factor	4-7
9. Check CH 1 and CH 2 VOLTS/DIV VAR Range	4-7
10. Check ADD Mode	4-8
11. Check INVERT Mode	4-8
12. Check Vertical Low-Frequency Compensation	4-8
13. Check CH 1 and CH 2 Volts/Division Compensation	4-8
14. Check CH 1 and CH 2 Transient Response	4-9
15. Check CH 1 and CH 2 Bandwidth	4-9
16. Check Cascaded Gain and Bandwidth	4-9
17. Check Trigger View Centering and Gain	4-10
18. Check Trigger View Low-Frequency Compensation	4-10

19. Check Trigger View High-Frequency Compensation	4-10
20. Check Zero Trigger View Delay	4-10

### Triggers

1. Check A and B Internal Triggering	4-11
2. Check A and B External Triggering	4-12
3. Check A NORM TRIG Mode	4-12
4. Check SINGL SWP TRIG Mode	4-12

### Horizontal

1A. Check A and B TIME/DIV Accuracy	4-14
1B. Check A and B Magnified Timing Accuracy	4-15
2. Check A TIME/DIV VAR Range	4-15
3. Check Delay or Differential Time Linearity	4-15
4. Check Delay or Differential Time Accuracy	4-16
5. Check Delay or Differential Jitter	4-16
6. Check ALT Horizontal Display Trace Separation	4-17
7. Check A INTEN and B ENDS A Operation	4-17
8. Check X Gain	4-17
9. Check X Bandwidth	4-17

## VERTICAL

### Equipment Required

- |   |                              |
|---|------------------------------|
| 1. Calibration Generator                | 7. 5X Bnc Attenuator         |
| 2. Leveled Sine-wave Generator          | 8. 2X Bnc Attenuator         |
| 3. 42-inch, 50 Ω Bnc Cable (2 required) | 9. Bnc Connector             |
| 4. 10X Scale-factor-switching Probe     | 10. Bnc-to-probe Tip Adapter |
| 5. 50 Ω Bnc Termination (2 required)    | 11. Dual-input coupler       |
| 6. 10X Bnc Attenuator                   |                              |

### 465B Control Settings

POWER	ON
	<b>CRT</b>
INTENSITY	As desired
FOCUS	Best focused display
SCALE ILLUM	As desired

### Sweep (A and B)

HORIZ DISPLAY	A
TIME/DIV	1 ms
TIME/DIV VAR	Calibrated detent
DELAY TIME POSITION	Fully counterclockwise
X10 MAG	Off (button out)
POSITION (Horizontal)	Midrange

### Vertical (CH 1 and CH 2)

VERT MODE	CH 1
POSITION	Midrange
VOLTS/DIV	5 mV
VOLTS/DIV VAR	Calibrated detent
AC-GND-DC	GND
INVERT	Normal (button out)
20 MHz BW LIMIT	Full bandwidth (button out)

### 1. Check TRACE ROTATION

a. Position the trace to the center horizontal graticule line.

b. Check that the trace is parallel with the center horizontal graticule line. Readjust TRACE ROTATION if necessary (front-panel screwdriver adjustment).

### 2. Check ALT Mode

### Trigger (A and B)

COUPLING	AC
LEVEL	Midrange
SLOPE	+
A SOURCE	NORM
B SOURCE	STARTS AFTER DELAY
TRIG MODE	AUTO
A TRIGGER HOLDOFF	NORM

### NOTE

*VERT MODE switches are push-push switches that must be pressed to select a particular VERT MODE and pressed again to remove the trace from the crt display. For example, selecting CH 1 VERT MODE does not release any VERT MODEs previously selected, and the CH 1 VERT MODE switch must be pressed again to remove the CH 1 trace from the display.*

**Performance Check Procedure  
465B Service (SN B060000 & UP)**

a. Set:

VERT MODE	CH 1, CH 2, A TRIG VIEW, ADD, and ALT
AC-GND-DC (both)	GND
A TRIGGER SOURCE	EXT

b. Use the CH 1 and CH 2 Vertical POSITION controls to spread the CH 1, CH 2, and ADD traces approximately 2 div apart. Use A TRIGGER LEVEL to position on the A TRIG VIEW trace between the vertical channel traces.

c. CHECK—Sweeps alternate in all settings of the A TIME/DIV switch except X-Y. The order of alteration is as follows: CH 1, CH 2, ADD, then A TRIG VIEW.

d. Press the ADD and A TRIG VIEW VERT MODE switches to remove their traces from the crt display.

### 3. Check CHOP Mode

a. Set:

A TIME/DIV	1 $\mu$ s
A TRIGGER SOURCE	NORM
VERT MODE	CH 1, CH 2, and CHOP

b. Use the Channel 1 and Channel 2 Vertical POSITION controls to position the two traces about 4 div apart.

c. Adjust A TRIGGER LEVEL for a stable display.

d. CHECK—Period of one cycle is approximately 2  $\mu$ s.

e. Press the ADD and A TRIG VIEW VERT MODE switches.

f. CHECK—Chopped display has four levels.

g. CHECK—Display for blanking of switching transients.

h. Press the ADD, A TRIG VIEW, and CH 2 VERT MODE switches to remove their traces from the crt display.

### 4. Check CH 1 Balance

a. Set:

VERT MODE	CH 1
CH 1 VOLTS/DIV	20 mV

b. Position the trace to the center horizontal graticule line.

c. CHECK—Trace shift is 1.0 div or less as the CH 1 VOLTS/DIV VAR control is rotated from one extreme to the other extreme.

d. CHECK—CH 1 UNCAL LED comes on when the VAR control is out of the detent position.

e. Return CH 1 VAR to calibrated detent.

### 5. Check CH 2 Balance

a. Set:

VERT MODE	CH 2
CH 2 VOLTS/DIV	20 mV

b. Position the trace to the center horizontal graticule line.

c. CHECK—Trace shift is 1.0 div or less as the CH 2 VOLTS/DIV VAR control is rotated from one extreme to the other extreme.

d. CHECK—CH 2 UNCAL LED comes on when the VAR control is out of the detent position.

e. Return CH 2 VAR to calibrated detent.

f. Position the trace to the center horizontal graticule line.

g. CHECK—Trace shift is 2 div or less when switching from normal to INVERT.

**6. Check Vertical POSITION Range and Centering**

a. Set:

CH 1 VOLTS/DIV	20 mV
CH 2 VOLTS/DIV	0.1 V
AC-GND-DC (both)	DC
A TRIGGER LEVEL	Fully Clockwise
INVERT	Normal (button out)

b. Connect the leveled sine-wave generator output to the CH 2 OR Y input via a 50  $\Omega$  bnc cable and a 50  $\Omega$  bnc termination. Set the generator frequency to 50 kHz and adjust output for a vertical display of 4.8 div.

c. Set CH 2 VOLTS/DIV to 20 mV.

d. CHECK—Top of display can be positioned down to the center horizontal graticule line, and bottom of display can be positioned up to the center horizontal graticule line.

e. Move the signal from the CH 2 OR Y input to the CH 1 OR X input connector.

f. Set VERT MODE switches for CH 1 display.

g. Repeat Step 6, part d, for Ch 1.

**7. Check BEAM FIND Operation**

a. Push in and hold the BEAM FIND button.

b. CHECK—A compressed trace is visible regardless of the setting of the:

CH 1 POSITION control,  
INTENSITY control, or  
Horizontal POSITION control.

c. Return the Horizontal POSITION control and the INTENSITY control to midrange.

d. While still holding in the BEAM FIND button, vertically position the trace to the center horizontal graticule line.

e. Release the BEAM FIND button.

f. CHECK—Trace remains within the graticule area.

g. Disconnect the test equipment.

**8. Check CH 1 and CH 2 Deflection Factor**

a. Connect calibration generator standard-amplitude output to the CH 1 input connector via a 50  $\Omega$  bnc cable. Use no termination. Set the generator for a 20 mV signal and set the 465B AC-GND-DC switches to DC.

b. CHECK—CH 1 deflection factor is within the limits given in Table 4-2.

c. Set the VERT MODE switches to display CH 2, and move the signal from CH 1 OR X input to the CH 2 OR Y input connector.

d. CHECK—CH 2 deflection factor is within the limits given in Table 4-2.

Table 4-2  
DEFLECTION FACTOR LIMITS

VOLTS/DIV Switch Setting	Standard Amplitude Signal	Vertical Deflection in Divisions	3% Tolerance in Divisions
5 mV	20 mV	4	3.88 to 4.12
10 mV	50 mV	5	4.85 to 5.15
20 mV	0.1 V	5	4.85 to 5.15
50 mV	0.2 V	4	3.88 to 4.12
0.1 V	0.5 V	5	4.85 to 5.15
0.2 V	1.0 V	5	4.85 to 5.15
0.5 V	2.0 V	4	3.88 to 4.12
1.0 V	5.0 V	5	4.85 to 5.15
2.0 V	10.0 V	5	4.85 to 5.15
5.0 V	20.0 V	4	3.88 to 4.12

**9. Check CH 1 and CH 2 VOLTS/DIV VAR Range**

a. Set:

VOLTS/DIV (both)                      20 mV

b. Set the calibration generator for a 0.1 V standard-amplitude output signal.

c. CHECK—Display reduces to less than 2 div when the CH 2 VOLTS/DIV VAR control is rotated to its extreme counterclockwise position.

d. Move the signal to the CH 1 OR X input connector and set the VERT MODE switches to display CH 1.

**Performance Check Procedure  
465B Service (SN B060000 & UP)**

e. CHECK—Repeat part c using the CH 1 VOLTS/DIV VAR control.

f. Return the VAR controls to the calibrated detent position and remove the signal from the CH 1 input connector.

### 10. Check ADD Mode

a. Set:

VOLTS/DIV (both)      5 mV  
VERT MODE              ADD

b. Connect calibration generator standard-amplitude signal to the CH 1 and CH 2 input connectors via a 50  $\Omega$  bnc cable and dual-input coupler.

c. Set calibration generator for 10 mV output amplitude.

d. CHECK—Display is approximately 4 div.

### 11. Check INVERT Mode

a. Press CH 2 INVERT push button in.

b. CHECK—Display is approximately 0 div.

### 12. Check Vertical Low-Frequency Compensation

a. Set:

TIME/DIV (both)      0.2 ms  
VOLTS/DIV (both)      5 mV

b. Connect the calibration generator fast-rise + output to the CH 1 input connector via a 50  $\Omega$  bnc cable, 10X bnc attenuator, and 50  $\Omega$  bnc termination.

c. Set the calibration generator to 1 kHz and adjust output controls for a vertical display of 5 div. Adjust the A TRIGGER LEVEL control for a stable display.

d. CHECK—Rounding or overshoot is within 3% (0.15 div) at the frequencies listed in Table 4-3.

**Table 4-3  
LOW-FREQUENCY COMPENSATION SETUP**

Calibration Generator Frequency	TIME/DIV Switch Setting
1 kHz	0.2 ms
10 kHz	20 $\mu$ s
100 kHz	2 $\mu$ s

### 13. Check CH 1 and CH 2 Volts/Division Compensation

a. Set:

VOLTS/DIV (both)      5 mV (see note)  
A TIME/DIV              0.2 ms

#### NOTE

*In step 13 all VOLTS/DIV settings require the use of a 10X probe with scale-factor switching (preferably the probe supplied as a standard accessory with the oscilloscope you are performance checking). If it is necessary to use a 10X probe without scale-factor switching, set the VOLTS/DIV to indicate one tenth of the settings listed.*

b. Connect a 10X probe to the CH 1 input connector (note that the VOLTS/DIV Scale-Factor switching LED indicates 50 mV).

c. Connect the square-wave generator high-amplitude output through a 2X, 5X, or 10X bnc attenuator (depending on generator amplitude), to a 50  $\Omega$  bnc termination that is connected to a bnc-to-probe tip adapter. Insert the 10X-probe tip into the probe-tip adapter.

d. Adjust the square-wave generator for a 5 div, 1 kHz display, and add or remove attenuators and termination as necessary to maintain a 5 div display throughout step 13.

e. Adjust the probe compensation for the best flat-top waveform. Do not re-adjust probe compensation throughout the remainder of step 13.

f. CHECK—Rounding or overshoot on the waveform is within 3% ( $\pm 0.15$  div) at all settings of the VOLTS/DIV switch between 50 mV and 5 V.



g. Move the test setup to CH 2 input connector and set the VERT MODE switches to display CH 2.

h. Repeat step 13, part f, for Channel 2 (add or remove attenuators as necessary to maintain a 5 div display).

i. Disconnect probe and generator.

#### 14. Check CH 1 and CH 2 Transient Response

a. Set:

TIME/DIV (both)	0.05 $\mu$ s
VOLTS/DIV (both)	5 mV
A TRIGGER SLOPE	+

b. Connect the calibration generator fast-rise + output to the CH 2 input connector via a 50  $\Omega$  bnc cable, 10X, 5X, or 2X bnc attenuator, and 50  $\Omega$  bnc termination. Set the generator frequency to 100 kHz and adjust output controls for a vertical display of 5 div. Adjust the generator output and add or remove attenuators as necessary to maintain a 5 div display throughout this check.

c. CHECK—Flat-top waveform is within 4% or less (0.2 div) for the 5 mV, 10 mV, and 20 mV positions of the VOLTS/DIV switch.

d. Move the test setup to the CH 1 input connector and set the VERT MODE switches to display CH 1.

e. CHECK—Repeat part c for Channel 1.

f. Disconnect the test setup.

#### 15. Check CH 1 and CH 2 Bandwidth

a. Set:

VOLTS/DIV (both)	5 mV
A TIME/DIV	0.2 ms
A TRIGGER LEVEL	Fully clockwise

b. Connect the leveled sine-wave generator output to the CH 1 input connector via a 50  $\Omega$  bnc cable, 10X bnc attenuator, and 50  $\Omega$  bnc termination.

c. Set the sine-wave generator output for a vertical display of 5 div at 50 kHz. Change the sine-wave generator output frequency to 100 MHz.

d. CHECK—Display amplitude is 3.5 div or greater.

e. Repeat parts c and d for all CH 1 VOLTS/DIV switch settings from 5 mV to 0.5 V. Adjust the generator and add or remove attenuators as needed to maintain a 5-div, 50 kHz reference display.

f. Move the sine-wave generator output signal from the CH 1 input to the CH 2 input connector and set the VERT MODE switches to display CH 2.

g. Repeat parts c and d for all CH 2 VOLTS/DIV switch settings from 5 mV to 0.5 V.

h. Disconnect the test setup.

#### 16. Check Cascade Gain and Bandwidth

a. Set:

VERT MODE	CH 2
VOLTS/DIV	5 mV
TIME/DIV	1 ms

b. Connect the CH 1 VERT SIGNAL output connector (on the 465B rear panel) to the CH 2 input connector via a 50  $\Omega$  cable and a 50  $\Omega$  bnc termination.

c. Connect the calibration generator standard-amplitude output to the CH 1 input connector via a 50  $\Omega$  bnc cable. Set the calibration generator output for 5 mV.

d. CHECK—Display vertical amplitude is 5 div or greater.

e. Remove the calibration generator signal from the CH 1 input connector.

f. Connect the leveled sine-wave generator output to the CH 1 input connector via a 50  $\Omega$  bnc cable, 10X bnc attenuator, and 50  $\Omega$  bnc termination. Set the generator frequency to 50 kHz and adjust output controls for a vertical display of 5 div. Adjust the generator output frequency to 50 MHz.

g. CHECK—Display amplitude is 3.5 div or greater.

h. Disconnect the test setup.

**Performance Check Procedure  
465B Service (SN B060000 & UP)**

**17. Check Trigger View Centering and Gain**

a. Set:

VERT MODE	A TRIG VIEW
A TIME/DIV	0.2 ms
A TRIGGER COUPLING	DC
A TRIGGER SOURCE	EXT
A TRIG MODE	AUTO

b. Connect the calibration generator standard-amplitude output to the A External Trigger input connector via a 50  $\Omega$  bnc cable. Use no termination. Set the generator output to 0.5 V.

c. CHECK—Display amplitude is 5 div,  $\pm 5\%$  (5 div,  $\pm 0.25$  div).

d. CHECK—Display will trigger symmetrically within one graticule division when the A TRIGGER SLOPE is switched between + and –.

e. Set the A TRIGGER SOURCE to EXT/10 and change the output of the calibration generator to 5 V.

f. CHECK—Display amplitude is 5 div,  $\pm 5\%$  (5 div,  $\pm 0.25$  div).

g. Disconnect the calibration generator standard-amplitude signal from the A External Trigger input connector.

**18. Check Trigger View Low-Frequency Compensation**

a. Set:

A TRIGGER SOURCE	EXT
A TIME/DIV	0.1 ms

b. Connect the calibration generator high-amplitude output to the A External Trigger input connector via a 50  $\Omega$  bnc cable and 50  $\Omega$  bnc termination. Set the calibration generator output for a vertical display of 5 div at 1 kHz.

c. CHECK—Square wave has less than 10% overshoot or rounding.

d. Set A TRIGGER SOURCE to EXT/10 and adjust generator output for a vertical display of 5 div.

e. CHECK—Square wave has less than 10% overshoot or rounding.

f. Disconnect the calibration generator high-amplitude output from the A External Trigger input connector.

**19. Check Trigger View High-Frequency Compensation**

a. Set:

A TRIGGER SOURCE	EXT
A TIME/DIV	0.2 ms

b. Connect the calibration generator fast-rise + output to the A External Trigger input connector via a 50  $\Omega$  bnc cable, and 50  $\Omega$  bnc termination.

c. Set the calibration generator frequency for 100 kHz and adjust output for a vertical display of 5 div.

d. CHECK—Square-wave front-corner aberration is less than  $\pm 10\%$  ( $\pm 0.5$  div).

e. Disconnect test setup.

**20. Check Zero Trigger View Delay**

a. Set:

VERT MODE	CH 1 AND A TRIG VIEW
A TIME/DIV	0.02 $\mu$ s
X10 MAG	On (button in)
A TRIGGER COUPLING	AC
CH 1 VOLTS/DIV	0.1 V

b. Connect output of sine-wave generator via bnc T, two 42-inch (equal length) 50  $\Omega$  bnc cables, and 50  $\Omega$  bnc terminations, one to the CH 1 input connector, and one to the A External Trigger input connector. Set sine-wave generator for a 6 div display of A TRIG VIEW at 40 MHz, then adjust CH 1 VAR and VOLTS/DIV to match the amplitude of the CH 1 display to the amplitude of the A TRIG VIEW display.

c. CHECK—Time difference with displays superimposed is  $\leq 0.15$  horizontal graticule divisions.

d. Set:

HORIZ DISPLAY	B DLY'D
A TIME/DIV	0.2 $\mu$ s
B TIME/DIV	0.02 $\mu$ s

e. CHECK—Time difference with displays superimposed is  $\leq 0.15$  horizontal graticule division.

f. Disconnect test setup.

**TRIGGERS****Equipment Required**

- |                                   |  |
|-----------------------------------|--|
| 1. Leveled Sine-wave Generator    | 6. 50 $\Omega$ Signal Pickoff Unit (Type CT-3) |
| 2. Calibration Generator          | 7. 10X Bnc Attenuator                          |
| 3. 42-inch Bnc Cable (2 required) | 8. 2X Bnc Attenuator                           |
| 4. Gr-to-bnc-female Adapter       | 9. 50 $\Omega$ Bnc Termination (2 required)    |
| 5. Gr-to-bnc-male Adapter         | 10. Dual-input Coupler (2 required)            |

**465B Control Settings**

POWER ON

CRT

INTENSITY As desired

FOCUS Best focused display

SCALE ILLUM As desired

**Vertical (CH 1 and CH 2)**

VERT MODE CH 1

POSITION Midrange

VOLTS/DIV 5 mV

VOLTS/DIV VAR Calibrated detent

AC-GND-DC DC

INVERT Normal (button out)

20 MHz BW LIMIT Full bandwidth (button out)

**Trigger (A and B)**

COUPLING AC

LEVEL Midrange

SLOPE +

SOURCE NORM

TRIG MODE AUTO

A TRIGGER HOLDOFF NORM

**Sweep (A and B)**

HORIZ DISPLAY A

TIME/DIV 5  $\mu$ s

TIME/DIV VAR Calibrated detent

DELAY TIME POSITION Fully counterclockwise

X10 MAG Off (button out)

POSITION (Horizontal) Midrange

**1. Check A and B Internal Triggering**

a. Connect the output of the leveled sine-wave generator to the A and B External Trigger inputs via a 50  $\Omega$  cable, Gr-to-bnc-male adapter, 50  $\Omega$  signal pickoff unit (Type CT-3) THRU SIG OUT output, Gr-to-bnc-female adapter, 50  $\Omega$  bnc cable, 2X bnc attenuator, 10X bnc attenuator, 50  $\Omega$  bnc termination and dual-input coupler.

b. Connect the SIG OUT 10% on the CT-3 to the CH 1 and CH 2 inputs via a 50  $\Omega$  bnc cable, 50  $\Omega$  bnc termination and dual-input coupler.

c. Adjust the leveled sine-wave generator for either a 3-div, 50 kHz display and set both VOLTS/DIV switches to 50 mV (0.3 div of display), or a 5-div 50 kHz display and set both VOLTS/DIV switches to 50 mV (0.5 div display) as necessary for parts d and f of step 1.

d. CHECK—Stable display can be obtained by adjusting the A TRIGGER LEVEL control in the following A TRIGGER COUPLING and A TRIGGER SOURCE switch positions:

A TRIGGER COUPLING	A TRIGGER SOURCE	DISPLAY
AC	NORM, CH 1, CH 2	0.3 Div
DC	NORM, CH 1, CH 2	0.3 Div
LF REJ	NORM, CH 1, CH 2	0.5 Div
HF REJ	NORM, CH 1, CH 2	0.5 Div

e. Set:

HORIZ DISPLAY B DLYD

A TRIGGER LEVEL Fully clockwise

**Performance Check Procedure  
465B Service (SN B060000 & UP)**

f. CHECK—Stable display can be obtained by adjusting the B TRIGGER LEVEL control in the following B TRIGGER COUPLING and B TRIGGER SOURCE switch positions:

B TRIGGER COUPLING	B TRIGGER SOURCE	DISPLAY
AC	NORM, CH 1, CH 2	0.3 Div
DC	NORM, CH 1, CH 2	0.3 Div
LF REJ	NORM, CH 1, CH 2	0.5 Div
HF REJ	NORM, CH 1 CH 2	0.5 Div

## 2. Check A and B External Triggering

a. Set:

CH 1 VOLTS/DIV            20 mV  
TRIGGER SOURCE (both)   EXT  
TRIGGER COUPLING (both) AC

b. Adjust leveled sine-wave generator output for 5 div of display on the crt.

c. CHECK—Stable display can be obtained by adjusting B TRIGGER LEVEL control in the following B TRIGGER COUPLING switch positions:

AC, DC

d. Remove the 2X bnc attenuator and set B TRIGGER COUPLING switch to LF REJ then HF REJ.

e. CHECK—Stable display can be obtained by adjusting B TRIGGER LEVEL control.

f. Set:

HORIZ DISPLAY            A  
A TRIGGER COUPLING    LF REJ then HF REJ

g. CHECK—Stable display can be obtained by adjusting A TRIGGER LEVEL control with A TRIGGER COUPLING in both LF REJ and HF REJ.

h. Replace the 2X bnc attenuator.

i. CHECK—Stable display can be obtained by adjusting A TRIGGER LEVEL control in the following A TRIGGER COUPLING switch positions:

AC, DC

j. Remove the 10X bnc attenuator and set the A TRIGGER SOURCE switch to EXT/10.

k. CHECK—Stable display can be obtained by adjusting the A TRIGGER LEVEL control in the following A TRIGGER COUPLING switch positions:

AC, DC

l. Remove the 2X bnc attenuator and set A TRIGGER COUPLING switch to LF REJ then HF REJ.

m. CHECK—Stable display can be obtained by adjusting A TRIGGER LEVEL control.

## 3. Check A NORM TRIG Mode

a. Set:

A TRIGGER COUPLING    AC  
A TRIGGER SOURCE        NORM  
A TRIG MODE                AUTO

b. Adjust A TRIGGER LEVEL for a stable display.

c. Set TRIG MODE switch to NORM.

d. CHECK—Stable display is visible.

e. Set CH 1 AC-GND-DC switch to GND.

f. CHECK—No visible display in the absence of an adequate trigger signal.

## 4. Check SINGL SWP TRIG Mode

a. Set CH 1 AC-GND-DC switch to DC.

b. Adjust A TRIGGER LEVEL until display just triggers.

c. Set CH 1 AC-GND-DC switch to GND.

d. Press SINGL SWP push button in.

e. CHECK—READY LED comes on and stays on.

f. Set CH 1 AC-GND-DC switch to DC.

g. CHECK—READY LED goes out and a single sweep occurs.

i. CHECK—Single sweep occurs every time SINGL SWP push button is depressed.

h. Press SINGL SWP push button in.

j. Disconnect test setup.

**Performance Check Procedure  
465B Service (SN B060000 & UP)**

**IMPORTANT NOTE**

*FOR OSCILLOSCOPES WITH DIGITAL MULTIMETERS ATTACHED, REFER TO THE DIGITAL MULTIMETER MANUAL AT THIS POINT, THEN RETURN TO STEP 8 IN THE HORIZONTAL SECTION.*

*FOR OSCILLOSCOPES WITHOUT DIGITAL MULTIMETERS, CONTINUE WITH THIS PROCEDURE.*

**HORIZONTAL**

**Equipment Required**

- |                                |                            |
|--------------------------------|----------------------------|
| 1. Time-mark Generator         | 4. 42-inch, 50 Ω Bnc Cable |
| 2. Calibration Generator       | 5. 50 Ω Bnc Termination    |
| 3. Leveled Sine-wave Generator |                            |

**465B Control Settings**

POWER	ON
	<b>CRT</b>
INTENSITY	As desired
FOCUS	Best focused display
SCALE ILLUM	As desired

**SWEEP (A and B)**

HORIZ DISPLAY	A
TIME/DIV	1 ms
TIME/DIV VAR	Calibrated detent
DELAY TIME POSITION	Fully counterclockwise
X10 MAG	Off (button out)
POSITION (Horizontal)	Midrange

**VERTICAL (CH 1 and CH 2)**

VERT MODE	CH 1
POSITION	Midrange
VOLTS/DIV	0.5 V
VOLTS/DIV VAR	Calibrated detent
AC-GND-DC	DC
INVERT	Normal (button out)
20 MHz BW LIMIT	Full bandwidth (button out)

**1A. Check A and B TIME/DIV Accuracy**

a. Connect 1 ms time markers to the CH 1 input from the time-mark generator via a 50 Ω bnc cable and a 50 Ω termination. Connect + Trigger Out from the time-mark generator to the A External Trigger input via a 50 Ω bnc cable and a 50 Ω termination.

**NOTE**

*In the following steps, transfer the + Trigger Out signal from the A EXT input to the B EXT input as appropriate.*

**TRIGGER (A and B)**

COUPLING	AC
LEVEL	Midrange
SLOPE	+
A SOURCE	EXT
B SOURCE	EXT
TRIG MODE	AUTO
A TRIGGER HOLDOFF	NORM

b. CHECK—A and B timing accuracy according to Table 4-4. Timing to be accurate within 2% (0.2 div at the 11th time marker). If 11 time markers are not visible when checking B sweep, set the A TIME/DIV switch one step slower than the B TIME/DIV switch; for example:

A TIME/DIV	1 ms
B TIME/DIV	0.5 ms

When checking B timing, set HORIZ DISPLAY to B DLY'D and use B TRIGGER LEVEL to stabilize the display.

**Table 4-4  
A AND B TIMING ACCURACY**

A and B TIME/DIV Switch Setting	Time-mark Generator Output	CRT Display (Markers/ Division)
0.02 $\mu$ s	20 ns <sup>a</sup>	1
0.05 $\mu$ s	50 ns	1
.1 $\mu$ s	.1 $\mu$ s	1
.2 $\mu$ s	.2 $\mu$ s	1
.5 $\mu$ s	.5 $\mu$ s	1
1 $\mu$ s	1 $\mu$ s	1
2 $\mu$ s	2 $\mu$ s	1
5 $\mu$ s	5 $\mu$ s	1
10 $\mu$ s	10 $\mu$ s	1
20 $\mu$ s	20 $\mu$ s	1
50 $\mu$ s	50 $\mu$ s	1
.1 ms	.1ms	1
.2 ms	.2 ms	1
.5 ms	.5 ms	1
1 ms	1 ms	1
2 ms	2 ms	1
5 ms	5 ms	1
10 ms <sup>b</sup>	10 ms	1
20 ms <sup>b</sup>	20 ms	1
50 ms <sup>b</sup>	50 ms	1

**A SWEEP ONLY**

.1 s <sup>b</sup>	.1 s	1
.2 s <sup>b</sup>	.2 s	1
.5 s <sup>b</sup>	.5 s	1

<sup>a</sup>If the time-mark generator used does not have a 1-2-5 sequence, set to 1 or 2 time-markers div as necessary.

<sup>b</sup>For sweep time greater than 5 ms/div set TRIG MODE to NORM.

**1B. Check A and B Magnified Timing Accuracy**

a. Set:

HORIZ DISPLAY	A
X10 MAG	X10 (button in)
Horizontal POSITION	Midrange (as required)
A and B TIME/DIV	0.02 $\mu$ s

b. CHECK—Using the A TIME/DIV switch settings and the time-mark generator settings given in Table 4-5, check A magnified sweep timing is within 0.3 div over the center 10 div of the magnified display. Note the portions of the total magnified sweep length to be excluded from the measurement.

c. Set the HORIZ DISPLAY switch to B DLY'D.

d. CHECK—Using the B TIME/DIV switch and the time-mark generator settings given in Table 4-5, check B magnified sweep timing, within 0.3 div over the center 10 div of the magnified display. Note the portions of the total magnified sweep length to be excluded from the measurement.

e. Release the X10 MAG push button.

**2. Check A TIME/DIV VAR Range**

a. Set:

HORIZ DISPLAY	A
A TRIG MODE	AUTO
A TIME/DIV	2 ms

b. Select 5 ms time markers from the time-mark generator.

c. CHECK—At least 1 marker per division can be obtained by adjusting the TIME/DIV VAR control.

d. Return the TIME/DIV VAR control to the detent position.

**3. Check Delay or Differential Time Linearity**

a. Set:

A TIME/DIV	1 ms
B TIME/DIV	5 $\mu$ s
HORIZ DISPLAY	B DLY'D
B TRIGGER SOURCE	STARTS AFTER DELAY

b. Select 1 ms time markers from the time-mark generator.

c. Turn DELAY TIME POSITION to set time marker nearest 1.00 on dial to coincide with graticule center and note reading.

d. Turn DELAY TIME POSITION to set time marker nearest 2.00 on dial to coincide with graticule center and note reading.

**Performance Check Procedure  
465B Service (SN B060000 & UP)**

**Table 4-5  
A AND B MAGNIFIED ACCURACY**

A and B TIME/ DIV Switch Setting	Time- mark Generator Output	CRT Display (Markers/ Division)	Portions of Total Mag- nified Sweep Length to Exclude from Measurement
0.02 $\mu$ s	5 ns	3 markers per 5 div	First and last 25 div
0.05 $\mu$ s	5 ns	1	First and last 10 div
0.1 $\mu$ s	10 ns	1	First and last 5 div
0.2 $\mu$ s	20 ns	1	First and last 25 div
0.5 $\mu$ s	50 ns	1	
1 $\mu$ s	0.1 $\mu$ s	1	
2 $\mu$ s	0.2 $\mu$ s	1	
5 $\mu$ s	0.5 $\mu$ s	1	
10 $\mu$ s	1 $\mu$ s	1	
20 $\mu$ s	2 $\mu$ s	1	
50 $\mu$ s	5 $\mu$ s	1	
0.1 ms	10 $\mu$ s	1	
0.2 ms	20 $\mu$ s	1	
0.5 ms	50 $\mu$ s	1	
1 ms	0.1 ms	1	
2 ms	0.2 ms	1	
5 ms	0.5 ms	1	
10 ms <sup>a</sup>	1 ms	1	
20 ms <sup>a</sup>	2 ms	1	
50 ms <sup>a</sup>	5 ms	1	

**A SWEEP ONLY**

0.1 s <sup>a</sup>	10 ms	1	
0.2 s <sup>a</sup>	20 ms	1	
0.5 s <sup>a</sup>	50 ms	1	

<sup>a</sup>Switch TRIG MODE to NORM below 5 ms div.

e. CHECK—Difference in readings is 1.00,  $\pm 0.01$  (0.99 to 1.01), from +15°C to +35°C;  $\pm 0.03$  (0.97 to 1.03), from -15°C to +55°C.

f. Turn DELAY TIME POSITION dial to set every adjacent time marker to coincide with graticule center and note reading.

g. CHECK—Difference of readings between any two adjacent time markers is 1.00,  $\pm 0.01$  (0.99 to 1.01), from +15°C to +55°C;  $\pm 0.03$  (0.97 to 1.03), from -15°C to +55°C.

**4. Check Delay or Differential Time Accuracy**

a. Set:

HORIZ DISPLAY	B DLY'D
A TIME/DIV	0.2 $\mu$ s
B TIME/DIV	0.05 $\mu$ s

b. Set the A TIME/DIV, B TIME/DIV and the time-mark generator to the settings given in Table 4-6. First set the DELAY TIME POSITION dial to 1.00. Adjust the horizontal POSITION control so the top of one of the displayed time markers crosses the center vertical graticule line. (If the top of the time marker at the beginning of the sweep isn't visible, then use the second time marker). Without touching the horizontal POSITION control, set the DELAY TIME POSITION dial to 9.00. Slightly readjust the DELAY TIME POSITION dial to position the top of the displayed time marker to the center vertical graticule line.

c. CHECK—DELAY TIME POSITION dial setting to be 8.92 to 9.08.

d. Repeat parts b and c for each setting listed in Table 4-6.

**5. Check Delay or Differential Jitter**

a. Set:

DELAY TIME POSITION	9.00
A TIME/DIV	1 ms
B TIME/DIV	0.2 $\mu$ s

b. Select 1 ms time markers.

c. Slightly readjust DELAY TIME POSITION dial to position a time marker on screen.

d. CHECK—Jitter on leading edge of the time marker does not exceed 1 div (2.5 div if operating from a 50 Hz line voltage). Disregard slow drift.

e. Set the DELAY TIME POSITION dial to 1.00 and repeat parts c and d.



Table 4-6  
DELAY OR DIFFERENTIAL TIME ACCURACY

A TIME/ DIV Switch Setting	B TIME/ DIV Switch Setting	Time- mark Generator Output
.2 $\mu$ S	.02 $\mu$ S	.1 $\mu$ S
.2 $\mu$ S	.05 $\mu$ S	.1 $\mu$ S
.5 $\mu$ S	.05 $\mu$ S	.5 $\mu$ S
1 $\mu$ S	.1 $\mu$ S	1 $\mu$ S
2 $\mu$ S	.1 $\mu$ S	1 $\mu$ S
5 $\mu$ S	.5 $\mu$ S	5 $\mu$ S
10 $\mu$ S	1 $\mu$ S	10 $\mu$ S
20 $\mu$ S	1 $\mu$ S	10 $\mu$ S
50 $\mu$ S	5 $\mu$ S	50 $\mu$ S
.1 ms	10 $\mu$ S	.1 ms
.2 ms	10 $\mu$ S	.1 ms
.5 ms	50 $\mu$ S	.5 ms
1 ms	.1 ms	1 ms
2 ms	.1 ms	1 ms
5 ms	.5 ms	5 ms
10 ms <sup>a</sup>	1 ms	10 ms
20 ms <sup>a</sup>	1 ms	10 ms
50 ms <sup>a</sup>	5 ms	50 ms
.1 s <sup>a</sup>	10 ms	.1 s
.2 s <sup>a</sup>	10 ms	.1 s
.5 s <sup>a</sup>	50 ms	.5 s

<sup>a</sup>For sweep times greater than 5 ms/div, set TRIG MODE to NORM.

f. Disconnect the time-mark generator.

## 6. Check ALT Horizontal Display Trace Separation

a. Set:

HORIZ DISPLAY	A INTEN
A TIME/DIV	1 ms
B TIME/DIV	.1 ms
B INTENSITY	As required for visible display
A SOURCE	NORM

b. Use CH 1 Vertical POSITION control to align the trace with the center horizontal graticule line.

c. Select ALT Horizontal Display.

d. CHECK—TRACE SEP control will move the B trace at least  $\pm 4$  vertical divisions from the center graticule line with A trace centered.

## 7. Check A INTEN and B ENDS A Operation

a. Set:

A TIME/DIV	1 ms
B TIME/DIV	.1 ms
DELAY TIME POSITION	About 5.00
HORIZ DISPLAY	A INTEN

b. CHECK—B portion of trace is intensified (about 1 div).

c. Rotate A TRIGGER HOLDOFF control clockwise to the B ENDS A position (in the detent).

d. CHECK—Trace ends at the end of the intensified portion.

## 8. Check X Gain

a. Set:

TIME/DIV (both)	X-Y
VOLTS/DIV (both)	5 mV
CH 1 AC-GND-DC	AC
CH 2 AC-GND-DC	GND
HORIZ DISPLAY	A
A TRIGGER HOLDOFF	NORM

b. Connect a 20 mV standard-amplitude signal from the calibration generator to the CH 1 input via a 50  $\Omega$  bnc cable.

c. CHECK—Display is 4 div ( $\pm 0.16$  div) between the dots.

d. Disconnect test setup.

## 9. Check X Bandwidth

a. Connect the leveled sine-wave generator to the CH 1 input via a 50  $\Omega$  bnc cable and 50  $\Omega$  bnc termination.

b. Adjust the generator for a horizontal display of 10 div at 50 kHz.

**Performance Check Procedure  
465B Service (SN B060000 & UP)**

- c. Without touching the generator amplitude, adjust the generator frequency to 4 MHz.
- d. CHECK—Display is at least 7 div in length.
- e. Disconnect test setup.



# ADJUSTMENT PROCEDURE

## INTRODUCTION

### IMPORTANT—PLEASE READ BEFORE USING THIS PROCEDURE

The purpose of the Adjustment Procedure is to provide a performance verification sequence for adjustments—not to provide a troubleshooting guide. See the Troubleshooting Aids portion of the Maintenance section for troubleshooting information.

### TEST EQUIPMENT REQUIRED

Refer to Table 4-1, at the beginning of the Performance Check Procedure, for a list of test equipment required, specifications, usage, and recommended types.

The Adjustment Procedure is based on the first item of equipment given as an example. When other equipment is substituted, control settings or calibration setups might need to be altered. If the exact equipment listed is not available, check the Minimum Specification column carefully to see if any other equipment might suffice. Then, check the Usage column to see where this item is used. If used for a check that is of little or no importance to your measurement requirements, the item and corresponding step(s) can be deleted.

### LIMITS AND TOLERANCES

All limits and tolerances given in this procedure are calibration guides and should not be interpreted as instrument specifications unless they are also found in the Specification section of this manual.

Tolerances given are for the instrument under test and do not include test equipment error.

### PARTIAL PROCEDURES

If the applications for which you will use the 465B do not require the full performance available, the procedure and the equipment list can be shortened accordingly. For example, the basic measurement capabilities of this instrument can

be verified by checking and adjusting as needed: vertical deflection factor, horizontal timing accuracy, and the calibrator signal. If any step requires more than a minor readjustment, check Table 5-1 for any possible interactions.

If a Performance Check indicates that only one subsection requires adjustment, each subsection (Vertical, Horizontal, etc.) except the Power Supply, may be adjusted independently. Also, if maintenance has been performed in a subsection, the adjustments for that area may be accomplished without completing the adjustments in other subsections. If any maintenance or adjustments are changed in the Power Supply circuitry, it is advisable to perform a complete adjustment procedure including all subsections.

### SPECIAL FIXTURES

Special fixtures are used only where they simplify the test setup and procedure. These fixtures are available from Tektronix, Inc. and can be ordered by part number through your local Tektronix Field Office or representative.

### PREPARATION FOR ADJUSTMENT

Remove the 465B cabinet by following the procedure listed under "Cabinet and Rack Adapter Removal and Replacement" in the Maintenance section of this manual.

Connect test equipment and instrument to be adjusted to an appropriate power source. Turn on and allow a 20-minute warm up period before commencing Adjustment Procedure.

**Adjustment Procedure  
465B Service (SN B060000 & UP)**

**Display**

The most accurate display adjustments are made with a stable, well-focused, low-intensity display. Unless otherwise noted, adjust the Intensity, Astigmatism, Focus, and Trigger Level controls as needed.

**Line Voltage Selection**

This procedure is for 115 V ac line, medium range. If a different range is to be used, set the Regulation Range Selector and Line Voltage Selector for the available line voltage (see Operating Voltage under Installation Instruction in Section 2 of this manual).

**Step Titles**

Where possible, instrument performance is checked before an adjustment is made. Steps containing checks and adjustments are titled Check/Adjust. Those with checks only are titled Check.

**INTERNAL ADJUSTMENTS AND  
ADJUSTMENT INTERACTION**

Do not preset the internal controls or move the +55 V supply adjustment as this will typically require complete recalibration of the oscilloscope.

Table 5-1 shows calibration adjustments and the possible interaction each adjustment might have on other adjustments. The use of Table 5-1 is particularly important if only a partial procedure is performed or if a circuit requires recalibration due to component replacement.

To use this table, find the adjustment made in the column at the left of the table. Then move to the right across that row until you come to a darkened square. From the darkened square, move up the column and check the accuracy of the adjustment heading that column. Readjust if necessary.

TABLE 5-1  
ADJUSTMENT INTERACTIONS

	INTERACTION →	ADJUSTMENT MADE ↓	+55 V SUPPLY	TRACE ROTATION	Y-AXIS ALIGNMENT	GEOMETRY	CH 1 VAR BAL	CH 2 VAR BAL	INVERT BAL	CH 1 POSITION CENTERING	CH 2 POSITION CENTERING	CH 1 GAIN	CH 2 GAIN	VERT OUT GAIN	SWP START AND A SWP CAL	X1 HORIZONTAL GAIN	X10 HORIZONTAL GAIN	B SWP CAL	HIGH SPEED MAG TIMING (A AND B)	TRIGGERING SENSITIVITY (A AND B)	SLOPE CENTERING (A AND B)	TRIG LEVEL CENTERING (A AND B)	NORM TRIG DC BALANCE	CH 1 TRIG DC BAL	CH 2 TRIG DC BAL	TRIGGER VIEW CENTERING	TRIGGER VIEW GAIN	X GAIN	CRT GRID BIAS	CRT
+55 V SUPPLY			■																											
TRACE ROTATION				■																										
Y-AXIS ALIGNMENT					■																									
GEOMETRY						■																								
CH 1 VAR BAL							■																							
CH 2 VAR BAL								■																						
INVERT BAL									■																					
CH 1 POSITION CENTERING										■																				
CH 2 POSITION CENTERING											■																			
CH 1 GAIN												■																		
CH 2 GAIN													■																	
VERT OUT GAIN														■																
SWP START AND A SWP CAL															■															
X1 HORIZONTAL GAIN																■														
X10 HORIZONTAL GAIN																	■													
B SWP CAL																		■												
HIGH SPEED MAG TIMING (A AND B)																			■											
TRIGGERING SENSITIVITY (A AND B)																					■									
SLOPE CENTERING (A AND B)																						■								
TRIG LEVEL CENTERING (A AND B)																							■							
NORM TRIG DC BALANCE																								■						
CH 1 TRIG DC BAL																									■					
CH 2 TRIG DC BAL																										■				
TRIGGER VIEW CENTERING																											■			
TRIGGER VIEW GAIN																												■		
X GAIN																													■	
CRT GRID BIAS																														■
CRT																														■

**Adjustment Procedure  
465B Service (SN B060000 & UP)**

**INDEX TO ADJUSTMENT PROCEDURE**

	<b>Page</b>		
<b>Power Supply</b>		12. Check/Adjust Gain (R1482, R2025, R1882) ...	5-13
1. Check/Adjust Power Supply DC Levels, Regulation, and Ripple (R4318) .....	5-6	13. Check CH 1 and CH 2 Volts/Div Var Range ...	5-14
2. Check High Voltage Supply .....	5-7	14. Check ADD mode .....	5-14
<b>Display and Z Axis</b>		15. Check Compression and Expansion .....	5-14
1. Check/Adjust CRT Grid Bias (R4109) .....	5-8	16. Check/Adjust Low-Frequency Compensation ..	5-15
2. Check/Adjust Trace Alignment (TRACE ROTATION) .....	5-8	17. Check/Adjust CH 1 Volts/Div Compensation ...	5-16
3. Check/Adjust Y-Axis Alignment (R4072) .....	5-9	18. Check/Adjust CH 2 Volts/Div Compensation ...	5-17
4. Check/Adjust Geometry (R4069) .....	5-9	19. Check/Adjust CH 2 and Output High-Frequency Compensation .....	5-17
5. Check/Adjust Z-Axis Compensation (C4217) ...	5-9	20. Check CH 2 Position Effect .....	5-18
<b>Vertical</b>		21. Check/Adjust CH 1 High-Frequency Compensation .....	5-18
1. Check Probe Indicator LED .....	5-10	22. Check CH 1 Position Effect .....	5-19
2. Check Input Coupling (AC-GND-DC) Switches .	5-11	23. Check CH 1 Transient Response .....	5-19
3. Check ALT Mode .....	5-11	24. Check CH 2 Transient Response .....	5-19
4. Check CHOP Mode .....	5-11	25. Check Bandwidth .....	5-19
5. Check BEAM FIND .....	5-11	26. Check Cascaded Gain and Bandwidth .....	5-19
6. Check/Adjust CH 1 Volts/Div Var Balance and Var Indicator (R1484) .....	5-11	27. Check Channel Isolation .....	5-20
7. Check/Adjust CH 1 Position Centering (R1135)	5-12	28. Check/Adjust Common-Mode Rejection Ratio (R1882) .....	5-20
8. Check/Adjust CH 2 Volts/Div Var Balance and Var Indicator (R1884) .....	5-12	29. Check Bandwidth Limit Operation .....	5-21
9. Check/Adjust CH 2 Invert Balance (R1975) ...	5-12	30. Check/Adjust Trigger View Centering and Gain (R7526, R7439) .....	5-21
10. Check/Adjust CH 2 Position Centering (R1735) .....	5-12	31. Check/Adjust Trigger View Low-Frequency Compensation (C7505, C7506) .....	5-21
11. Check CH 2 and CH 1 Gate Current .....	5-12	32. Check/Adjust Trigger View High-Frequency Compensation (C7425, C7529, R7423) .....	5-21
		33. Check/Adjust Zero Trigger View Delay (R6011, R6152) .....	5-22

**Triggers**

- 1. Check/Adjust A Trigger Sensitivity and TRIG LED (R7246) . . . . . 5-23
- 2. Check/Adjust B Trigger Sensitivity (R7045) . . . . . 5-24
- 3. Check/Adjust B Trigger Slope Center and Level (R7042, R7026) . . . . . 5-25
- 4. Check/Adjust A Trigger Slope Center and Level (R7242, R7224) . . . . . 5-25
- 5. Check/Adjust A Trigger DC Levels (R1202, R1126, R1835) . . . . . 5-26
- 6. Check B Trigger DC Levels . . . . . 5-26
- 7. Check B Internal 10 MHz Triggering . . . . . 5-26
- 8. Check A Internal 10 MHz Triggering . . . . . 5-27
- 9. Check A External 10 MHz Triggering . . . . . 5-28
- 10. Check B External 10 MHz Triggering . . . . . 5-28
- 11. Check B and A External 100 MHz Triggering . . . . . 5-29
- 12. Check A Internal 100 MHz Triggering . . . . . 5-30
- 13. Check B Internal 100 MHz Triggering . . . . . 5-30
- 14. Check A and B High-Frequency Reject Triggering . . . . . 5-30
- 15. Check Single Sweep . . . . . 5-30
- 16. Check 60 Hz Internal Triggering . . . . . 5-31
- 17. Check 60 Hz External Triggering . . . . . 5-32
- 18. Check A and B External Trigger Level Ranges . . . . . 5-32
- 19. Check Line Triggers . . . . . 5-33
- 20. Check NORM A Trigger Mode . . . . . 5-33
- 21. Check AUTO Recovery Time . . . . . 5-34

**Horizontal**

- 1. Check/Adjust Sweep Start and A Sweep Calibration (R4570, R6053) . . . . . 5-36

- 2. Check Delay or Differential Time Linearity . . . . . 5-36
- 3. Check/Adjust Horizontal Amplifier Gain (R4373, R4274) . . . . . 5-36
- 4. Check Sweep Linearity . . . . . 5-37
- 5. Check/Adjust Magnifier Centering (R4253) and Registration (R4275) . . . . . 5-37
- 6. Check/Adjust B Sweep Calibration (R6052) . . . . . 5-37
- 7. Check A Sweep Length . . . . . 5-37
- 8. Check Variable Time/Division . . . . . 5-37
- 9. Check Horizontal Position Range . . . . . 5-38
- 10. Check/Adjust A 10  $\mu$ s Timing (C6002) . . . . . 5-38
- 11. Check/Adjust A Sweep High-Speed Timing (C6015) . . . . . 5-38
- 12. Check/Adjust B Sweep High-Speed Timing (C6041) . . . . . 5-39
- 13. Check A and B Time/Division Accuracy . . . . . 5-39
- 14. Check/Adjust High-Speed Magnified Timing (C4246, C4247) . . . . . 5-39
- 15. Check A and B Magnified Timing Accuracy . . . . . 5-40
- 16. Check Delay or Differential Time Accuracy . . . . . 5-41
- 17. Check Delay or Differential Time Jitter . . . . . 5-41
- 18. Check/Adjust X Gain (R4381) . . . . . 5-41
- 19. Check X-Y Phasing and Bandwidth . . . . . 5-42
- 20. Check B Ends A . . . . . 5-42
- 21. Check A Trigger Holdoff . . . . . 5-42

**Gates, Calibrator and Ext Z Axis**

- 1. Check A and B + Gates . . . . . 5-44
- 2. Check/Adjust Calibrator DC Level (R4293) . . . . . 5-44
- 3. Check External Z Axis . . . . . 5-45

**POWER SUPPLY****Equipment Required**

- |                      |                               |
|----------------------|-------------------------------|
| 1. Digital Voltmeter | 4. Autotransformer            |
| 2. DC Voltmeter      | 5. 3-Inch Slotted Screwdriver |
| 3. Test Oscilloscope |                               |

See **ADJUSTMENT LOCATIONS 1** in the *Diagrams* section for adjustments and test points (TP).

**NOTE**

After performing the following control settings, connect the instrument to a power source through a Variable Autotransformer. Set the Autotransformer to 115 V before turning the instrument on.

**Sweep**

HORIZ DISPLAY	A
DELAY TIME POSITION	Fully counterclockwise
A TIME/DIV	1 ms
B TIME/DIV	1 ms
TIME/DIV VAR	Calibrated detent
X10 MAG	Off (button out)
POSITION (Horizontal)	Midrange
A TRIGGER HOLDOFF	NORM

**465B Control Settings****Power**

Regulating Range Selector	Medium
Line Voltage Selector	115 V
POWER	ON

**1. Check/Adjust Power Supply DC Levels, Regulation, and Ripple (R4318)****CRT**

INTENSITY	As desired
FOCUS	Best focussed display
SCALE ILLUM	As desired

**NOTE**

Review the information at the beginning of the Adjustment Procedure before starting the procedure.

**Vertical**

(both Channels if applicable)

VOLTS/DIV	5 mV
VOLTS/DIV VAR	Calibrated detent
POSITION	Midrange
AC-GND-DC	GND
VERT MODE	CH 1
INVERT	Normal (button out)
20 MHz BW LIMIT	Full bandwidth (button out)

**Trigger**

(both A and B if applicable)

LEVEL	As needed for a stable display
SLOPE	+
COUPLING	AC
SOURCE	NORM
TRIG MODE	AUTO

a. Connect the digital voltmeter common lead to chassis ground and the + lead to the test point given in Table 5-2. Voltage to be within the given limits.

**Table 5-2**  
**LOW VOLTAGE POWER SUPPLY LIMITS**

Power Supply	Test Point	Reading	Tolerance
+55 V	TP4338	+54.62 to +55.39	±0.7%
+15 V	TP4339	+14.75 to +15.26	±1.7%
+5 V	TP4337	+4.92 to +5.09	±1.7%
-8 V	TP4439	-7.86 to -8.14	±1.7%
+110 V	TP4340	+106.7 to +113.3	±3.0%

**NOTE**

If the adjustment in step 1, part b, is made, the oscilloscope will require complete recalibration.



b. Connect the digital voltmeter common lead to chassis ground and + lead to TP4338. ADJUST—+55 V supply (R4318) for +55 V. Recheck all supplies according to Table 5-2.

c. Connect the test oscilloscope to the indicated test point and check the ripple amplitude according to Table 5-3 while varying the line voltage between 104 V and 126 V. For improved resolution when measuring ripple amplitude, use a 1X probe and cascaded gain on the test oscilloscope.

**Table 5-3**  
**TYPICAL LOW VOLTAGE**  
**POWER SUPPLY RIPPLE**

Power Supply	Test Point	Typical Ripple (Peak-to-Peak)
+55 V	TP4338	4 mV
+15 V	TP4339	2 mV
+5 V	TP4337	2 mV
-8 V	TP4439	2 mV
+110 V	TP4340	20 mV

d. Return line voltage to 115 V.

## 2. Check High Voltage Supply

a. Connect the dc voltmeter common lead to chassis ground and the + lead to TP4129 on the interface board. (TP4129 is accessible through a hole in the high voltage cover.)

b. CHECK—High Voltage supply for -2450 V,  $\pm 2.2\%$  (-2396 V to -2504 V).

c. Disconnect the dc voltmeter.

**DISPLAY AND Z AXIS****Equipment Required**

- |                          |  |
|--------------------------|--|
| 1. DC Voltmeter          | 5. 50 $\Omega$ Bnc Termination         |
| 2. Test Oscilloscope     | 6. 10X Probe                           |
| 3. Time-mark Generator   | 7. 3-inch Slotted Screwdriver          |
| 4. 50 $\Omega$ Bnc Cable | 8. Low-capacitance Slotted Screwdriver |

See **ADJUSTMENT LOCATIONS 1** in the *Diagrams* section for adjustments and test points (TP).

**465B Control Settings****Power**

Regulating Range Selector	Medium
Line Voltage Selector	115 V
POWER	ON

**CRT**

INTENSITY	As desired
FOCUS	Best focused display
SCALE ILLUM	Fully counterclockwise

**Vertical****(both Channels if applicable)**

VOLTS/DIV	5 mV
VOLTS/DIV VAR	Calibrated detent
POSITION	Midrange
AC-GND-DC	GND
VERT MODE	CH 1
INVERT	Normal (button out)
20 MHz BW LIMIT	Full bandwidth (button out)

**Trigger****(both A and B if applicable)**

LEVEL	As needed for a stable display
SLOPE	+
COUPLING	AC
SOURCE	NORM
TRIG MODE	AUTO

**Sweep**

HORIZ DISPLAY	A
DELAY TIME POSITION	Fully Counterclockwise
A TIME/DIV	X-Y
TIME/DIV VAR	Calibrated detent
X10 MAG	Off (button out)
POSITION (Horizontal)	Midrange
A TRIGGER HOLDOFF	NORM

**1. Check/Adjust CRT Grid Bias (R4109)**

a. Connect the digital voltmeter common lead to chassis ground and the + lead to TP4217. (TP4217 is accessible through a hole in the high voltage cover.)

b. Set the INTENSITY control for +20 V on the digital voltmeter.

c. CHECK—Display for a well-defined, low-intensity dot. Use FOCUS and ASTIG controls as needed.

d. ADJUST—CRT Grid, Bias (R4109) for a visible dot, then back off control until the dot just disappears.

**2. Check/Adjust Trace Alignment (TRACE ROTATION)**

a. Set:

A TIME/DIV	0.5 ms
INTENSITY	As desired
SCALE ILLUM	As desired

b. Position the trace to the center horizontal graticule line.

c. CHECK—Trace is parallel with the center horizontal graticule line.

d. ADJUST—TRACE ROTATION (front panel adjustment) to make the trace parallel with the center horizontal graticule line.

**3. Check/Adjust Y-Axis Alignment (R4072)**

a. Connect 1 ms time markers from the time-mark generator to the CH 1 input via a 50 Ω bnc cable and a 50 Ω bnc termination.

b. Set:

CH 1 AC-GND-DC	DC
CH 1 VOLTS/DIV	0.1 V

c. Adjust TIME/DIV VAR control for exactly 1 time marker/major division. (Time markers should fill the screen vertically. If not, reduce the VOLTS/DIV switch setting.)

d. CHECK—Display for 0.1 division tilt or less, when compared to the center vertical graticule line.

e. ADJUST—Y-Axis Alignment (R4072) to align center time marker with the center vertical graticule line.

f. INTERACTION—TRACE ROTATION.

**4. Check/Adjust Geometry (R4069)**

a. CHECK—Display for 0.1 div or less, vertical curvature of the markers across the graticule area. (Readjust A TIME/DIV VAR as needed to maintain exactly 1 marker per division.)

b. ADJUST—Geometry (R4069) for minimum curvature of the markers across the graticule area.

c. INTERACTION—Y-Axis Alignment.

d. Disconnect the test setup.

e. Return A TIME/DIV VAR to detent.

**5. Check/Adjust Z-Axis Compensation (C4217)**

a. Set the A TIME/DIV switch to 0.05 μs.

b. Connect the 10X probe from the test oscilloscope to TP4217.

c. Adjust the 465B INTENSITY control for a 15 V display on the test oscilloscope.

d. CHECK—Test oscilloscope display for optimum square corner on the unblanking gate (with minimum ringing).

e. ADJUST—Z-Axis Compensation (C4217), with a low-capacitance screwdriver, for the best square corner on the unblanking pulse viewed on the test oscilloscope.

f. Disconnect the test setup.

g. CHECK—Display for uniform intensity across the graticule area (especially the first 2 div of the trace).

h. READJUST—C4217, if necessary.

**VERTICAL****Equipment Required**

- |   |  |
|---|--|
| 1. Calibration Generator  | 7. 2X or 5X Bnc Attenuator                         |
| 2. Test Oscilloscope (only if gain requires complete adjustment)  | 8. 10X Bnc Attenuator (2 required)                 |
| 3. Leveled Sine-wave Generator  | 9. 50 $\Omega$ Bnc Termination (2 required)        |
| 4. Two 10X Probes (one should have Scale-factor Switching, however an 11 k $\Omega$ resistor may be substituted in step 1, part a). | 10. Low-capacitance Screwdriver                    |
| 5. 50 $\Omega$ Bnc Cable (2 required)   | 11. 3-inch Slotted Screwdriver                     |
| 6. Dual-input Coupler   | 12. Bnc-to-probe tip Adapter                       |
|   | 13. Bnc-female-to-coaxial-cable-connector Adapter. |

See **ADJUSTMENT LOCATIONS 2** and **ADJUSTMENT LOCATIONS 3** in the Diagrams section for adjustments and test points (TP).

**465B Control Settings****Sweep (A and B)**

POWER	ON
	<b>Display</b>
INTENSITY	As desired
FOCUS	For optimum definition
SCALE ILLUM	As desired
ASTIG	Best defined trace

HORIZ DISPLAY	A
A TIME/DIV	1 ms
B TIME/DIV	1 ms
TIME/DIV VAR	Calibrated detent
DELAY TIME POSITION	Fully counterclockwise
X10 MAG	Off (button out)
POSITION (Horizontal)	Midrange

**Vertical (CH 1 and CH 2)**

VERT MODE	CH 1
POSITION	Midrange
VOLTS/DIV	5 mV
VOLTS/DIV VAR	Calibrated detent
AC-GND-DC	DC
INVERT	Normal (button out)
20 MHz BW LIMIT	Full bandwidth (button out)

**Trigger (A and B)**

COUPLING	AC
LEVEL	As needed for stable display
SLOPE	+
A TRIGGER SOURCE	NORM
B TRIGGER SOURCE	STARTS AFTER DELAY
TRIG MODE	AUTO
A TRIGGER HOLDOFF	NORM

**1. Check Probe Indicator LED**

a. Connect a 10X probe with a Scale-factor Switching connector to CH 1 input (if no Scale-factor Switching probe is available, an 11 k $\Omega$  resistor may be used. Connect the resistor between ground and the metal coding ring on the input connector).

b. CHECK—5 mV LED is extinguished and 50 mV LED is illuminated.

c. Set VERT MODE switches to display CH 2 and move probe to CH 2 input.

d. CHECK—5 mV LED is extinguished and 50 mV LED is illuminated.

e. Remove 10X probe.

## 2. Check Input Coupling (AC-GND-DC) Switches

a. Connect output of calibration generator to CH 2 input via 50  $\Omega$  cable. Set the generator for 20 mV standard amplitude output.

b. Position bottom of display to center horizontal graticule line and set CH 2 AC-GND-DC switch to GND.

c. CHECK—No vertical deflection; trace is at center horizontal graticule line.

d. Set CH 2 AC-GND-DC switch to AC.

e. CHECK—Display is centered about center horizontal graticule line.

f. Set VERT MODE switches to display CH 1 and move test signal to CH 1.

g. Position bottom of display to center horizontal graticule line.

h. Set CH 1 AC-GND-DC switch to GND.

i. CHECK—No vertical deflection; trace is at center horizontal graticule line.

j. Set CH 1 AC-GND-DC switch to AC.

k. CHECK—Display is centered about center horizontal graticule line.

l. Disconnect square-wave signal.

## 3. Check ALT Mode

a. Set:

VERT MODE	CH 1, CH 2, and ALT: OUT
A TRIGGER LEVEL	Fully clockwise

b. Position traces about 2 div apart.

c. CHECK—Sweeps alternate for all A TIME/DIV settings except X-Y.

## 4. Check CHOP Mode

a. Set:

A TIME/DIV	0.5 $\mu$ S
VERT MODE	CH 1, CH 2, and CHOP
AC-GND-DC (both)	GND
A TRIGGER COUPLING	HF REJ
A TRIGGER LEVEL	As needed for stable display

b. Position traces about 4 div apart and set A TRIGGER LEVEL control for a stable display.

c. CHECK—Vertical switching transients are completely blanked between horizontal chopped segments.

d. CHECK—Duration of each cycle is approximately 4 div.

## 5. Check BEAM FIND

a. Push in BEAM FIND button and hold.

b. CHECK—Trace remains entirely on screen, regardless of the setting of vertical or horizontal POSITION controls.

c. Release BEAM FIND button.

## 6. Check/Adjust CH 1 Volts/Div Var Balance And Var Indicator (R1484)

a. Position trace to center horizontal graticule line.

b. CHECK—CH 1 UNCAL LED is illuminated when VAR control is out of detent.

c. CHECK—Trace shift of 0.2 div or less when rotating VAR control from one extreme to the other.

d. ADJUST—CH 1 Var Bal (R1484) for minimum trace shift while rotating CH 1 VAR control from one extreme to the other.

e. Return CH 1 VAR control to detent position.

**Adjustment Procedure  
465B Service (SN B060000 & UP)**

**7. Check/Adjust CH 1 Position Centering (R1135)**

a. Set:

CH 1 VOLTS/DIV	.2 V
CH 1 AC-GND-DC	AC
A TIME/DIV	1 ms

b. Connect leveled sine-wave generator output to CH 1 input via 50  $\Omega$  bnc cable and 50  $\Omega$  termination. Set the generator for a vertical display of 2.4 div at 50 kHz.

c. Set CH 1 VOLTS/DIV switch to 20 mV without moving the VAR control.

d. CHECK—Top of display positions down to center horizontal graticule line or below, bottom of display positions up to center horizontal graticule line or above.

e. ADJUST—CH 1 Position Center (R1135) so display positions same distance above and below graticule center line.

f. Disconnect generator.

**8. Check/Adjust CH 2 Volts/Div Var Balance and Var Indicator (R1884)**

a. Set VERT MODE switches to display CH 2.

b. CHECK—CH 2 UNCAL LED is illuminated when VAR control is out of detent.

c. CHECK—Trace shift is 0.2 div or less when rotating VAR control from one extreme to the other.

d. ADJUST—CH 2 Var Bal (R1884) for minimum trace shift while rotating CH 2 VAR control from one extreme to the other.

e. Return CH 2 VAR control to detent position.

**9. Check/Adjust CH 2 Invert Balance (R1975)**

a. Set CH 2 AC-GND-DC to GND.

b. Position trace to center horizontal graticule line and push INVERT button in.

c. CHECK—Trace shift is 0.2 div or less when switching from normal to inverted.

d. ADJUST—Invert Bal (R1975) for minimum trace shift.

**10. Check/Adjust CH 2 Position Centering (R1735)**

a. Set:

INVERT	Normal (button out)
CH 2 VOLTS/DIV	.2 V
CH 2 AC-GND-DC	AC
A TRIGGER LEVEL	Fully clockwise

b. Connect leveled sine-wave generator output to CH 2 input via 50  $\Omega$  bnc cable and 50  $\Omega$  bnc termination. Set the generator for a vertical display of 2.4 div at 50 kHz.

c. Set CH 2 VOLTS/DIV switch to 20 mV without moving VAR control.

d. CHECK—Top so display positions down to center horizontal graticule line or below, bottom of display positions up to center horizontal graticule line or above.

e. ADJUST—CH 2 Position Center (R1735) so display positions same distance above and below graticule line.

f. Disconnect generator.

**11. Check CH 2 and CH 1 Gate Current**

a. Set:

AC-GND-DC (both)	GND
VOLTS/DIV (both)	5 mV

b. Position trace to graticule center and change AC-GND-DC switch to DC.

c. CHECK—Trace shift is 0.1 div or less, when switching between GND and DC.

d. Set VERT MODE switches to display CH 1. Position trace to graticule center and change AC-GND-DC switch to DC.

e. CHECK—Trace shift is 0.1 div or less, when switching between GND and DC.

f. Set both AC-GND-DC switches to DC.

## 12. Check/Adjust Gain (R1482, R2025, R1882)

### NOTE

*It is not always necessary to do a complete readjustment to meet instrument gain specifications. Use following procedure to determine required adjustments.*

a. Set:

VERT MODE	CH 2
CH 2 VOLTS/DIV	5 mV
CH 2 AC-GND-DC	DC

b. Connect calibration generator standard-amplitude output to CH 2 input via 50  $\Omega$  bnc cable. Set the generator for 20 mV output.

c. CHECK—Display is 4 div within 3% (4 div,  $\pm 0.12$  div).

d. Change CH 2 VOLTS/DIV and calibration generator settings as shown in Table 5-4 and check that deflection accuracy is within 3% for all VOLTS/DIV settings listed.

e. Set VERT MODE Switches to display CH 1 and set the CH 1 AC-GND-DC switch to DC.

f. Move the input signal from the CH 2 input connector to the CH 1 input connector.

g. CHECK—that display is 4 div within 3% (4 div,  $\pm 0.12$  div).

h. Change CH 1 VOLTS/DIV and calibration generator settings as shown in Table 5-4 and check that deflection accuracy is within 3% for all VOLTS/DIV settings listed.

i. If both channels check within 3%, no further vertical gain calibration is required. Proceed to step 13. If a check at any setting of the VOLTS/DIV switch falls outside the 3% accuracy limits, a complete gain adjustment required. Continue with part j of this step.

j. Set CH 1 VOLTS/DIV switch to 5 mV and set the output of the calibration generator to 20 mV.

k. Set the test oscilloscopes controls as follows:

Vertical Mode	Add
Invert	On (button in)
Volts/Div (both)	.1 V (with 10X probe)
Triggering	Auto (free-running sweep)
A Trigger Source	Ext (no trigger applied)

Table 5-4  
VERTICAL DEFLECTION ACCURACY

VOLTS/DIV Setting	Calibration Generator Amplitude	Deflection in Div For 3% Accuracy		Reading In Div
		Divisions	Accuracy	
10 mV	50 mV	5	$\pm 0.15$ div	4.85 to 5.15
20 mV	0.1 V	5	$\pm 0.15$ div	4.85 to 5.15
50 mV	0.2 V	4	$\pm 0.12$ div	3.88 to 4.12
.1 V	0.5 V	5	$\pm 0.15$ div	4.85 to 5.15
.2 V	1 V	5	$\pm 0.15$ div	4.85 to 5.15
.5 V	2 V	4	$\pm 0.12$ div	3.88 to 4.12
1 V	5 V	5	$\pm 0.15$ div	4.85 to 5.15
2 V	10 V	5	$\pm 0.15$ div	4.85 to 5.15
5 V	20 V	4	$\pm 0.12$ div	3.88 to 4.12

**Adjustment Procedure  
465B Service (SN B060000 & UP)**

l. Connect two 10X probes from the test oscilloscope to TP1519 and TP1319 on the 465B Vertical Preamplifier board. Connect the probe ground leads to chassis ground.

m. CHECK—Signal between TP1519 and TP1319 is 400 mV peak to peak (4 div).

n. ADJUST—CH 1 Gain Adjust (R1482) for 400 mV peak to peak.

**NOTE**

*This is a nominal value for this adjustment. It may be reset to obtain correct CH 1 overall gain.*

o. Remove 10X probes from TP1519 and TP1319.

p. CHECK—that display is 4 div within 3% (4 div,  $\pm 0.12$  div).

q. ADJUST—Output Gain Adjust R2025 on the Vertical Output board for a 4 div display.

r. Set CH 2 VOLTS/DIV to 5 mV and move the input signal from CH 1 input to CH 2 input. Set the VERT MODE switches to display CH 2.

s. ADJUST—CH 2 Gain Adjust (R1882) for a 4 div display.

t. Repeat parts e through i to recheck the vertical deflection accuracy.

**13. Check CH 1 and CH 2 Volts/Div Var Range**

a. Set VERT MODE switches to display CH 2 and set both VOLTS/DIV switches to 10 mV and amplitude calibrator for 50 mV signal.

b. Rotate CH 2 VOLTS/DIV VAR control fully counterclockwise.

c. CHECK—Display reduces to 2 div or less.

d. Move signal to CH 1 input connector and set VERT MODE switches to display CH 1.

e. Rotate CH 1 VOLTS/DIV VAR control fully counterclockwise.

f. CHECK—Display reduces to 2 div or less.

g. Return both VOLTS/DIV VAR controls to calibrated detent.

**14. Check ADD Mode**

a. Set:

VOLTS/DIV (both)	5 mV
VERT MODE	ADD
INVERT	Normal (button out)

b. Connect calibration generator standard-amplitude output to both inputs via 50  $\Omega$  cables and dual-input coupler. Set generator output for 10 mV.

c. CHECK—that display of 4 div within 3% (4 div,  $\pm 0.12$  div).

**15. Check Compression and Expansion**

a. Set:

CH 2 AC-GND-DC	GND
VERT MODE	CH 1

b. Adjust CH 1 VAR control for a 2 div display, centered about center horizontal graticule line.

c. Position top of display to top graticule line.

d. CHECK—Display compression or expansion is 0.1 div or less.

e. Position bottom of display to bottom graticule line.

f. CHECK—Display compression or expansion is 0.1 div or less.

g. Set CH 1 VOLTS/DIV VAR control to calibrated detent.



h. Disconnect generator standard-amplitude output and dual-input coupler.

**16. Check/Adjust Low-Frequency Compensation**

a. Set:

A TIME/DIV                    0.2 ms  
 VERT MODE                    CH 1  
 AC-GND-DC (both)        DC  
 VOLTS/DIV (both)        5 mV  
 A TRIGGER LEVEL        As needed for stable display.

b. Connect calibration generator fast-rise + output to CH 1 input via a 50 Ω bnc cable, 10X attenuator, and 50 Ω bnc termination.

c. Adjust calibration generator to maintain a 5-div display throughout step 16.

d. CHECK—Display overshoot or rounding is within 3% (5 div, ±0.15 div) for each A TIME/DIV and generator setting given in Table 5-5.

**Table 5-5  
MAXIMUM OVERSHOOT OR ROUNDING**

Calibration Generator Signal	A TIME/DIV Setting	Maximum Overshoot or Rounding in Div
1 kHz	.2 ms	4.85 to 5.15
10 kHz	20 μs	4.85 to 5.15
100 kHz	2 μs	4.85 to 5.15

e. If above checks are within 3%, proceed to step 17; if not, continue with part f.

f. Set:

A TIME/DIV                    0.2 ms  
 VERT MODE                    CH 1, CH 2, and ALT  
 AC-GND-DC (both)        DC  
 VOLTS/DIV                    5 mV  
 A TRIGGER LEVEL        As needed for stable display  
 A TRIGGER SLOPE        —(minus)

g. Unplug cable connector from J4387 (Vert Alt Sync pulse) and insert plug into bnc-to-cable-connector adapter. Connect the square-wave output of low-frequency generator to the bnc-to-cable-connector adapter via a 50 Ω bnc cable. Set the generator output frequency to 1 kHz and adjust CH 1 and CH 2 Vertical POSITION controls for a 6-div display. Adjust A TRIGGER LEVEL control for a stable display. Presentation will be a square wave when the CH 1 and CH 2 traces alternates at the generator frequency.

**NOTE**

*As an alternate signal source, use the fast-rise – (minus) output of the calibration generator. Do not terminate the cable and adjust the output amplitude to maximum.*

h. ADJUST—Use the settings and adjustments in Table 5-6 and adjust the Vertical Output for best flat top within ±3%.

**Table 5-6  
VERTICAL OUTPUT LOW-FREQUENCY  
COMPENSATION**

Square-wave Frequency	465B A TIME/DIV	Adjustment
1 kHz	0.2 ms	R2448
10 kHz	20 μs	R2446
100 kHz	2 μs	R2436 R2426

i. INTERACTION—Repeat 1 kHz, 10 kHz, and 100 kHz until no further improvement is noted.

j. Unplug cable connector from bnc-to-cable-connector adapter and plug connector back into J4387.

k. Set:

A TIME/DIV                    2 μs  
 HORIZ DISPLAY                ALT

l. CHECK—TRACE SEP control will move the B trace at least ±4 vertical divisions from the A trace when rotating TRACE SEP control to fully clockwise and fully counter-clockwise positions (A trace centered).

m. CHECK—B trace moves an equal distance above and below the A trace (≈4 div).

**Adjustment Procedure**  
**465B Service (SN B060000 & UP)**

n. ADJUST—Trace Sep Centering R2117 so that the B trace moves an equal distance above and below the A Trace ( $\approx 4$  div).

o. Set:

A TIME/DIV	0.2 ms
VERT MODE	CH 1
AC-GND-DC (both)	DC
VOLTS/DIV (both)	5 mV
HORIZ DISPLAY	A
A TRIGGER LEVEL	As needed for stable display
A TRIGGER SLOPE	+

p. Connect calibration generator fast-rise + output to CH 1 input connector via 50  $\Omega$  bnc cable, 10X attenuator, and 50  $\Omega$  termination. Set generator frequency to 1 kHz and adjust amplitude for a 6-div display. Adjust A TRIGGER LEVEL for a stable display.

q. ADJUST—Use the settings and adjustments in Table 5-7 to adjust the CH 1 low-frequency compensation for best flat top within  $\pm 3\%$ .

**Table 5-7**  
**CH 1 LOW-FREQUENCY COMPENSATION**

Square-wave Frequency	465B A TIME/DIV	Adjustment
1 kHz	0.2 ms	R1176
10 kHz	20 $\mu$ s	R1185
100 kHz	2 $\mu$ s	R2432 and R2426 on Vertical Output board if needed. See Table 5-8.)

r. Move the input signal from CH 1 input connector to CH 2 input connector and set VERT MODE switches to display CH 2.

s. ADJUST—Use the settings and adjustments in Table 5-8 to adjust the CH 2 low-frequency compensation for best flat top within  $\pm 3\%$ .

t. Disconnect calibration generator fast-rise + output from CH 2 input connector.

**Table 5-8**  
**CH 2 LOW-FREQUENCY COMPENSATION**

Square-wave Frequency	465B A TIME/DIV	Adjustment
1 kHz	0.2 ms	R1580
10 kHz	20 $\mu$ s	R1582
100 kHz	2 $\mu$ s	R2432 and R2426 for best compromise between CH 1 and CH 2.

**17. Check/Adjust CH 1 Volts/Div Compensation**

**NOTE**

*C13010, in the CH 1 Preamp, is set at the factory to give C13010, in the CH 2 Preamp, enough range to match CH 2 input capacitance with CH 1 input capacitance. Unless there is a circuit malfunction, the CH 1 C13010 should not need readjustment. When adjusting either C13010, or other adjustments in this section, if the low-capacity screwdriver contains a metal bit, the metal may affect the adjustment. Check adjustment after the screwdriver is removed, and re-adjust as necessary.*

a. Set:

VOLTS/DIV (both)	5 mV (see note below)
VERT MODE	CH 1
A TIME/DIV	0.2 ms (see note below)
20 MHz BW LIMIT	Limited bandwidth (button in)

**NOTE**

*In steps 17 and 18, all VOLTS/DIV Checks and Adjustments require the use of a 10X probe with Scale-factor Switching (preferably the probe supplied as a standard accessory with the oscilloscope you are calibrating). If it is necessary to use a 10X probe without Scale-factor Switching, set the VOLTS/DIV knob to indicate one-tenth of the setting listed (5 mV instead of 50 mV, etc). When adjusting compensation, one adjustment will affect the waveform front corner, and another will affect the flat top. Ignore the front corner when making the flat top adjustment and vice-versa. The A TIME/DIV switch should be set to 1 ms for the flat-top, and to 0.2 ms for front corner checks and adjustments.*

b. Connect a 10X probe to CH 1 input connector (note that the VOLTS/DIV Scale-factor LED will now indicate 50 mV).

c. Connect calibration generator high-amplitude output to tip of the 10X probe via a 2X, 5X, or 10X bnc attenuator (depending on generator amplitude) and bnc-to-probe-tip adapter.

d. Set the calibration generator for a 5-div, 1 kHz display; add or remove attenuators or termination as needed to maintain a 5-div display throughout steps 17 and 18.

e. Adjust probe compensation adjustment for best flat top waveform. Do not re-adjust probe compensation throughout the remainder of steps 18 and 19.

f. Set CH 1 VOLTS/DIV to 0.1 V.

g. CHECK—Compensation for all VOLTS/DIV settings listed in Table 5-9 for display overshoot, rounding, and flat-top, is within 2% (5 div,  $\pm 0.1$  div). If compensation setting is within 2%, skip part h; otherwise perform part h.

h. ADJUST—Any adjustment pair (see Table 5-9) as necessary so compensation for all settings of the VOLTS/DIV switch is within 2%.

## 18. Check/Adjust CH 2 Volts/Div Compensation

a. Set:

VERT MODE                      CH 2

b. Move the 10X probe connector from the CH 1 input to the CH 2 input connector.

c. Adjust calibration generator for a 5-div, 1 kHz display; add or remove attenuators or termination as needed to maintain a 5-div display throughout the remainder of this step.

d. CHECK—Display for flat-top waveform within 3% ( $\pm 0.15$  div).

e. ADJUST—C13010 in the CH 2 Preamplifier for best flat-top waveform using a low-capacitance screwdriver.

f. Repeat step 17, parts f through h for CH 2.

g. Disconnect test setup.

Table 5-9  
VOLTS/DIV COMPENSATION

VOLTS/DIV Setting (10X Scale-factor)	Adjust	
	TIME/DIV 1 ms Flat	TIME/DIV 0.2 ms Corner
.1 V	C37	C36
.2 V	C35	C34
.5 V	C33	C32
1 V	Check	Check
2 V	Check	Check
5 V	C31	C30

### NOTE

*If the oscilloscope is to be used primarily with a 50  $\Omega$  signal source, more accurate reproduction of the waveform front corner may be achieved by calibrating with a 50  $\Omega$  system. To accomplish this, substitute a properly terminated 50  $\Omega$  cable for the 10X probe while making the front corner adjustments listed in Table 5-9.*

## 19. Check/Adjust CH 2 and Output High-Frequency Compensation

a. Set:

VOLTS/DIV	5 mV
A TRIGGER SLOPE	+
20 MHz BW LIMIT	Full bandwidth (button out)

b. Connect calibration generator fast-rise + (positive-going) output to CH 2 input connector via a 50  $\Omega$  bnc cable, 10X bnc attenuator, and 50  $\Omega$  termination.

### NOTE

*Adjustments in steps 19 through 25 interact. Perform all of the checks, but not the adjustments, in these steps before making any adjustments (unless calibration is being performed after repair or replacement of vertical components).*

*If all checks are within the given limits, proceed to step 26.*

*If any of the checks are not within the given limits, perform checks and adjustments in steps 19 through 25, using low-capacitance screwdriver.*

*If still not within the given limits—perform steps 6 through 25.*

### Adjustment Procedure 465B Service (SN B060000 & UP)

c. Adjust calibration generator output for a 5-div, 100 kHz display.

d. Set A TIME/DIV to 0.2  $\mu$ s.

e. CHECK—Flat-top display aberrations are within 4% ( $\pm 0.2$  div). See Figure 5-1 for typical display.

f. ADJUST—R1685, C1690, R1634, C1643, C2315, R2325, R2243, and C2346 for best flat-top waveform with fastest rise time.

g. Connect test setup to fast-rise — (negative-going) output of calibration generator.

h. Set A TRIGGER SLOPE to —.

i. CHECK—Flat-bottom display aberrations are within 6% ( $\pm 3$  div).

#### NOTE

*If parts f through i do not produce the desired results after circuit repairs, refer to Selectable Components at the end of the Troubleshooting subsection in the Maintenance section of this manual.*

### 20. Check CH 2 Position Effect

a. Position bottom of display to top graticule line.

b. CHECK—that display aberrations are within 8% ( $\pm 0.4$  div).

c. Set A TRIGGER SLOPE to +.

d. Connect test setup to fast-rise + output of calibration generator.

e. Position top of display to bottom graticule line.

f. CHECK—that display aberrations are within 6% ( $\pm 0.3$  div).

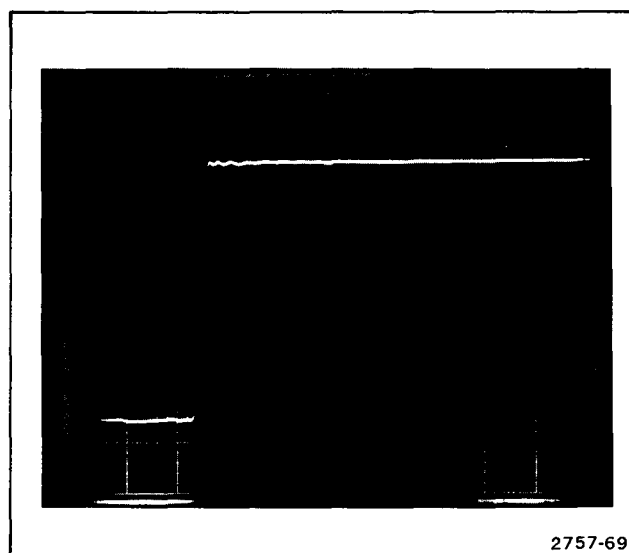


Figure 5-1. Typical display when high-frequency compensation is correctly adjusted.

### 21. Check/Adjust CH 1 High-Frequency Compensation

a. Set VERT MODE switches to display CH 1.

b. Move test signal from CH 2 input to CH 1 input connector.

c. CHECK—Flat-top display aberrations are within 4% ( $\pm 0.2$  div). See Figure 5-1 for typical display.

d. ADJUST—R1190, C1192, R1335, and C1342 for best flat-top display.

e. INTERACTION—It may be necessary to compromise Vertical Output adjustment and CH 2 adjustment for best high-frequency match between CH 1 and CH 2.

f. Connect test setup to fast-rise — output of calibration generator.

g. Set A TRIGGER SLOPE to —.

h. CHECK—Flat-bottom display aberrations are within 6% ( $\pm 0.3$  div).

**NOTE**

If parts d through h do not produce the desired results after circuit repairs, refer to *Selectable Components at the end of the Troubleshooting subsection in the Maintenance section of this manual.*

**22. Check CH 1 Position Effect**

- Position bottom of display to top graticule line.
- CHECK—that display aberrations are within 8% ( $\pm 0.4$  div).
- Set A TRIGGER SLOPE to +.
- Connect test setup to fast-rise + output of calibration generator.
- Position top of display to bottom graticule line.
- CHECK—that display aberrations are within 6% ( $\pm 0.3$  div).

**23. Check CH 1 Transient Response**

- Verify that A TRIGGER SLOPE is set to + and that the calibration generator fast-rise + output is connected to CH 1 input via a 50  $\Omega$  bnc cable, 10X bnc attenuator, and 50  $\Omega$  bnc termination.
- Adjust generator and add or remove attenuators as necessary to maintain a 5-div display throughout the checks of the 5 mV, 10 mV, 20 mV, and 50 mV positions of CH 1 VOLTS/DIV switch.
- CHECK—Display flat-top and aberrations are within 4% ( $\pm 0.2$  div) for each position of the VOLTS/DIV switch given in part b.

**24. Check CH 2 Transient Response**

- Set VERT MODE switches to display CH 2.
- Move test setup to CH 2 input connector.
- Adjust generator and add or remove attenuators as necessary to maintain a 5-div display throughout the checks of the 5 mV, 10 mV, 20 mV and 50 mV positions of CH 2 VOLTS/DIV switch.

- CHECK—Display flat-top and aberrations are within 4% ( $\pm 0.2$  div) for each position of the VOLTS/DIV switch given in part c.

**25. Check Bandwidth**

- Set:
 

A TIME/DIV	0.2 ms
CH 2 VOLTS/DIV	5 mV
- Connect leveled sine-wave generator reference signal to CH 2 input via a 50  $\Omega$  bnc cable, 10X attenuator, and 50  $\Omega$  termination.
- Adjust generator for 5-div display.
- Set generator for 100 MHz output frequency.
- CHECK—Display amplitude is 3.5 div or more.
- Repeat step 25 parts c, d, and e, for 10 mV through 1 V positions of CH 2 VOLTS/DIV switch.
- Change VERT MODE switches to display CH 1. Move test setup to CH 1 input.
- Repeat step 25, parts c, d, and e, for 5 mV through 1 V positions of CH 1 VOLTS/DIV switch.
- Disconnect test setup.

**26. Check Cascaded Gain and Bandwidth**

- Set:
 

VOLTS/DIV (both)	5 mV
AC-GND-DC (both)	AC
VERT MODE	CH 2
A TIME/DIV	1 ms
- Connect CH 1 VERT SIGNAL OUT (on 465B rear panel) to CH 2 input connector via 50  $\Omega$  bnc cable and 50  $\Omega$  termination.
- Connect calibration generator standard-amplitude output to CH 1 input connector via 50  $\Omega$  bnc cable. Set generator output to 5 mV.

**Adjustment Procedure  
465B Service (SN B060000 & UP)**

- d. CHECK—Display amplitude is 5 div or more.
- e. Remove test setup from CH 1 input.
- f. Connect leveled sine-wave generator reference signal output to CH 1 input via 50 Ω bnc cable, 10X attenuator, and 50 Ω termination.
- g. Adjust generator output for a 5-div display.
- h. Set generator for 50 MHz output frequency.
- i. CHECK—Display amplitude is 3.5 div or more.
- j. Disconnect test setup.

**27. Check Channel Isolation**

- a. Set:
 

CH 2 VOLTS/DIV	0.2 V
VERT MODE	CH 2
CH 1 AC-GND-DC	GND
- b. Connect leveled sine-wave generator output to CH 2 input via 50 Ω bnc cable, and 50 Ω termination.
- c. Set generator for 25 MHz and adjust output for a 2-div display.
- d. Set:
 

VOLTS/DIV (both)	20 mV
VERT MODE	CH 1
A TRIGGER SOURCE	CH 2
A TRIGGER LEVEL	As needed for a stable display
- e. CHECK—Display amplitude is 0.2 div or less.
- f. Move test setup from CH 2 input to CH 1 input connector.
- g. Set:
 

CH 1 AC-GND-DC	DC
CH 2 AC-GND-DC	GND

- |                  |                                |
|------------------|--------------------------------|
| VERT MODE        | CH 2                           |
| A TRIGGER SOURCE | CH 1                           |
| A TRIGGER LEVEL  | As needed for a stable display |

- h. CHECK—Display amplitude is 0.2 div or less.
- i. Disconnect test setup.

**28. Check/Adjust Common-Mode Rejection Ratio (R1882)**

- a. Set:
 

VOLTS/DIV (both)	20 mV
AC-GND-DC (both)	DC
A TRIGGER SOURCE	NORM
VERT MODE	CH 1
CH 2 INVERT	Inverted (button in)
- b. Connect leveled sine-wave generator output to CH 1 and CH 2 input connectors via 50 Ω bnc cable, 10X attenuator, 50 Ω termination, and dual-input coupler.
- c. Set generator frequency to 20 MHz and adjust output for a 6-div display.
- d. Set VERT MODE switches for ADD only (press CH 1 VERT MODE to remove CH 1 trace from crt display).
- e. CHECK—Display is 0.6 div or less (indicates CMRR of at least 10:1 at 20 MHz).
- f. Proceed to part m if the check in part e meets the requirements. If the CMRR is less than 10:1, continue with this procedure.
- g. Set VERT MODE switches to display CH 1.
- h. Set generator frequency to 50 kHz and adjust output for a 6-div display.
- i. Set VERT MODE switches to display ADD only.
- j. ADJUST—CH 2 Gain Adjust (R1882) for minimum display (best CMRR).

k. Set generator frequency to 20 MHz.

l. CHECK—Display is 0.6 div or less (indicates CMRR of at least 10:1 at 20 MHz).

m. Press CH 2 INVERT push button to release; disconnect test setup.

## 29. Check Bandwidth Limit Operation

a. Set:

20 MHz BW LIMIT	Limited bandwidth (button in)
CH 1 AC-GND-DC	DC
VERT MODE	CH 1

b. Connect leveled sine-wave generator reference signal output to CH 1 input connector via 50  $\Omega$  bnc cable and 50  $\Omega$  termination.

c. Adjust generator output amplitude for a 6-div display.

d. Increase generator frequency until display is 4.2 div.

e. CHECK—Generator output frequency is 16 MHz to 24 MHz.

f. Disconnect test setup.

## 30. Check/Adjust Trigger View Centering and Gain (R7526, R7439)

a. Set:

A TRIGGER COUPLING	AC
A TRIGGER SOURCE	EXT
A TRIGGER LEVEL	0
A TIME/DIV	0.2 ms
VERT MODE	A TRIG VIEW

b. Connect the calibration generator standard-amplitude signal to the A External Trigger input connector via a 50  $\Omega$  bnc cable. Set the generator for 0.5 V output.

c. CHECK—Display amplitude is 5 div,  $\pm 5\%$  (5 div,  $\pm 0.25$  div) and that display will trigger symmetrically within one division of the center horizontal graticule line when the A TRIGGER SLOPE is switched between + and -.

d. ADJUST—Trig View Centering (R7526) to center the display about the center horizontal graticule line.

e. ADJUST—Trig View Gain (R7439) for a 5-div display.

f. INTERACTION—Between Trig View Centering and Trig View Gain adjustments. Repeat both for no visible interaction.

g. Disconnect the calibration generator standard-amplitude signal from the A External Trigger input.

## 31. Check/Adjust Trigger View Low-Frequency Compensation (C7505, C7506)

a. Connect the calibration generator high-amplitude output to the A External Trigger input connector via a 50  $\Omega$  bnc cable. (Check generator output to see if termination is required.)

b. Set calibration generator for a 5-div display at 1 kHz.

c. CHECK—Square wave has less than 10% overshoot or rounding ( $\pm 0.5$  div).

d. ADJUST—C7505 for best flat top on square-wave display.

e. Change A TRIGGER SOURCE to EXT/10 and adjust calibration generator output amplitude for a 5-div display.

f. CHECK—Square wave has less than 10% overshoot or rounding ( $\pm 0.5$  div).

g. ADJUST—C7506 for best flat top on square-wave display.

h. Remove bnc cable from high-amplitude output on the calibration generator.

## 32. Check/Adjust Trigger View High-Frequency Compensation (C7425, C7529, and R7423)

a. Set:

A TIME/DIV	0.2 $\mu$ s
A TRIGGER SOURCE	EXT

**Adjustment Procedure  
465B Service (SN B060000 & UP)**

b. Connect fast-rise + output from calibration generator to the A External Trigger input connector via a 50 Ω bnc cable and a 50 Ω termination. Set the calibration generator to 100 kHz and adjust output amplitude for a 5-div display.

c. CHECK—Square-wave front corner has less than ±10% aberration (±0.5 div).

d. ADJUST—C7425, R7423, and C7529 for best front corner and square-wave rise time of 5 ns or less.

e. Disconnect calibration generator.

**33. Check/Adjust Zero Trigger View Delay (R6011 and R6152)**

*NOTE*

*For instruments equipped with DM44 Option, access to R6011 and R6152 is through a hole in the DM44 circuit board. See the DM44 Instruction manual, Test Points and Adjustment Location foldout, for the location of these adjustments.*

a. Set:

VERT MODE	CH 1 and A TRIG VIEW
HORIZ DISPLAY	A
A TIME/DIV	0.02 μs
X10 MAG	On (button in)
A TRIGGER SOURCE	EXT
A TRIGGER COUPLING	AC
CH 1 VOLTS/DIV	0.1 V

b. Connect output of sine-wave generator via two bnc T's, three 42-inch (equal length) 50-Ω cables, and three 50-Ω terminations; one to the CH 1 input connector, one to the A External Trigger input connector, and one to the B External Trigger input connector. Set sine-wave generator frequency to 40 MHz and adjust output for a 6-division A TRIG VIEW display. Adjust CH 1 VAR and VOLTS/DIV to match CH 1 display amplitude to A TRIG VIEW display amplitude.

c. CHECK—Time difference with displays superimposed in ≤0.15 horizontal graticule division.

d. ADJUST—R6011 for zero time difference between CH 1 display and A TRIG VIEW display.

e. Set:

HORIZ DISPLAY	B DLY'D
A TIME/DIV	0.2
B TIME/DIV	0.02
B TRIGGER SOURCE	EXT
B TRIGGER COUPLING	AC

f. CHECK—Time difference with displays superimposed is ≤0.15 horizontal graticule division.

g. ADJUST—R6152 for zero time difference between CH 1 display and A TRIG VIEW display.

h. Disconnect test setup.



**TRIGGERS****Equipment Required**

- |  |  |
|--|--|
| 1. Leveled Sine-wave Generator                 | 8. Gr-to-bnc-female Adapter                  |
| 2. Low-frequency Generator                     | 9. Gr-to-bnc-male Adapter                    |
| 3. Time-mark Generator                         | 10. 10X Bnc Attenuator                       |
| 4. Calibration Generator                       | 11. 50 $\Omega$ BNC Termination (2 required) |
| 5. 50 $\Omega$ Signal Pickoff Unit (Type CT-3) | 12. Dual-input Coupler (2 required)          |
| 6. 10X Probe                                   | 13. Bnc T Connector                          |
| 7. 42-inch Bnc Cable (2 required)              | 14. 3-inch Slotted Screwdriver               |

See **ADJUSTMENT LOCATIONS 2** and **ADJUSTMENT LOCATIONS 4** in the *Diagrams* section for adjustments and test points (TP).

**465B Control Settings****Triggering**  
(both A and B if applicable)

<b>POWER</b>		<b>LEVEL</b>	Adjust as needed for a stable display
Regulating Range Selector	Medium	<b>SLOPE</b>	+
Line Voltage Selector	115 V	<b>COUPLING</b>	AC
<b>POWER</b>	ON	<b>SOURCE</b>	NORM
		<b>TRIG MODE</b>	AUTO

<b>CRT</b>	
<b>INTENSITY</b>	As desired
<b>FOCUS</b>	Best focused display
<b>SCALE ILLUM</b>	As desired

**Vertical**  
(both channels if applicable)

<b>VOLTS/DIV</b>	10 mV
<b>VOLTS/DIV VAR</b>	Calibrated detent
<b>POSITION</b>	Midrange
<b>AC-GND-DC</b>	DC
<b>VERT MODE</b>	CH 1
<b>INVERT</b>	Off (button out)
<b>20 MHz BW LIMIT</b>	Full bandwidth (button out)

<b>Sweep</b>	
<b>HORIZ DISPLAY</b>	A
<b>DELAY TIME POSITION</b>	Fully counterclockwise
<b>A TIME/DIV</b>	0.05 $\mu$ s
<b>B TIME/DIV</b>	0.05 $\mu$ s
<b>TIME/DIV VAR</b>	Calibrated detent
<b>X10 MAG</b>	Off (button out)
<b>POSITION</b>	Midrange
<b>A TRIGGER HOLDOFF</b>	NORM

**1. Check/Adjust A Trigger Sensitivity and TRIG LED (R7246)**

a. Connect a 10 MHz signal from the leveled sine-wave generator to the A and B External Trigger inputs via a GR-to-bnc-male adapter, CT-3 through output, GR-to-bnc-female adapter, 50  $\Omega$  bnc cable, 10X attenuator, 50  $\Omega$  termination and dual-input coupler.

**Adjustment Procedure  
465B Service (SN B060000 & UP)**

b. Connect CT-3 Sig Out 10% signal to CH 1 and CH 2 inputs via a 50  $\Omega$  termination and a dual-input coupler.

c. Adjust the leveled sine-wave generator for a 3-div display.

d. Set the CH 1 VOLTS/DIV switch to 0.1 V (0.3-div display).

e. CHECK—Stable display can be obtained by rotating A TRIGGER LEVEL control in both + and – slopes.

f. CHECK—TRIG LED is on when the display is stable.

g. Set CH 1 VOLTS/DIV switch to 5 mV and adjust leveled sine-wave generator for a 2-div display.

h. Set CH 1 VOLTS/DIV switch to 0.1 V (0.1-div display).

i. CHECK—Stable display cannot be obtained by rotating A TRIGGER LEVEL control in both + and – slopes. Return the A TRIGGER SLOPE control to +.

j. If the checks in parts c through i meet the requirements, proceed to step 2. If not, make the following adjustments.

k. Set the CH 1 VOLTS/DIV switch to 10 mV and adjust the leveled sine-wave generator for a 2.5-div display.

l. Set the CH 1 VOLTS/DIV switch to 0.1 V (0.25-div display).

m. ADJUST—A Trigger Sensitivity (R7246) so display can just be triggered by rotating A TRIGGER LEVEL control (A TRIGGER SLOPE in +).

n. Set CH 1 VOLTS/DIV switch to 10 mV and adjust the leveled sine-wave generator for a 2-div display.

o. Set the CH 1 VOLTS/DIV switch to 0.1 V (0.2-div display).

p. CHECK—Stable display cannot be obtained by adjusting the A TRIGGER LEVEL control in + slope only (– slope is generally slightly more sensitive).

q. If a stable display can be obtained, then the trigger is too sensitive. Adjust A Trigger Sensitivity (R7246) slightly so display will just barely not trigger by adjusting the A TRIGGER LEVEL control (in + slope only).

r. Repeat parts k through p until a stable display can be obtained on a 0.25-div display, but not on a 0.2-div display (+ slope only).

s. Repeat checks in parts c through i.

## 2. Check/Adjust B Trigger Sensitivity (R7045)

a. Set:

HORIZ DISPLAY	BDLY'D
CH 1 VOLTS/DIV	10 mV
A TRIGGER LEVEL	Fully clockwise
B TRIGGER LEVEL	As needed for a stable display

b. Adjust leveled sine-wave generator for a 3-div display.

c. Set the CH 1 VOLTS/DIV switch to 0.1 V (0.3-div display).

d. CHECK—Stable display can be obtained by rotating B TRIGGER LEVEL control in both + and – slopes.

e. Set CH 1 VOLTS/DIV switch to 5 mV and adjust the sine-wave generator for a 2-div display.

f. Set the CH 1 VOLTS/DIV switch to 0.1 V (0.1-div display).

g. CHECK—Stable display cannot be obtained by rotating the B TRIGGER LEVEL control in either + or – slope. Return B TRIGGER SLOPE control to +.

h. If check results in parts b through g meet requirements, proceed to step 3. If not, make the following adjustments.

i. Set CH 1 VOLTS/DIV switch to 10 mV and adjust leveled sine-wave generator for a 2.5-div display.

j. Set the CH 1 VOLTS/DIV switch to 0.1 V (0.25-div display).

k. ADJUST—B Trigger Sensitivity (R7045) so display can be just triggered by adjusting B TRIGGER LEVEL control. (Adjust with B TRIGGER SLOPE in +).

l. Set the CH 1 VOLTS/DIV switch to 10 mV and adjust the leveled sine-wave generator for a 2-div display.

m. Set the CH 1 VOLTS/DIV switch to 0.1 V (0.2-div display).

n. CHECK—Stable display cannot be obtained by adjusting the B TRIGGER LEVEL control (+ slope only).

o. If stable display can be obtained, then trigger is too sensitive. Adjust B Trigger Sensitivity (R7045), slightly so display will just barely not trigger by adjusting B TRIGGER LEVEL control (+ slope only).

p. Repeat parts i through o until stable display can be obtained on a 0.25 div display but not on a 0.2 div display (+ slope only).

q. Repeat checks in parts c through g.

### 3. Check/Adjust B Trigger Slope Center and Level R7042, R7026)

a. Set:

B TRIGGER SOURCE	STARTS AFTER DELAY
TIME/DIV (both)	10 $\mu$ S
B TRIGGER LEVEL	0
CH 1 VOLTS/DIV	10 mV
CH 1 AC-GND-DC	GND

#### NOTE

*The B TRIGGER LEVEL control must remain at 0 throughout this step.*

b. Position the trace to the center horizontal graticule line.

c. Set:

CH 1 AC-GND-DC	DC
B TRIGGER SOURCE	NORM

d. Adjust the leveled sine-wave generator for approximately a 4-div display at 50 kHz.

e. Switch the B TRIGGER SLOPE switch between + and -.

f. CHECK—Display begins at about the same vertical point, within 1 div of graticule center, in both + and - slopes.

g. ADJUST—B Slope Center (R7042) for the display to start at the same vertical point on the sine wave in both + and - slopes (not necessarily the center horizontal graticule line). Return B TRIGGER SLOPE to +.

h. ADJUST—B Trig Level (R7026) to move the starting point of the display to the center horizontal graticule line.

i. INTERACTION—B Trig Level (R7026) B Slope Center (R7042), and B Trigger Sensitivity (R7045) will interact. Repeat these adjustments until no improvement is noted.

### 4. Check/ Adjust A Trigger Slope Center and Level (R7242, R7224)

a. Set:

HORIZ DISPLAY	A
A TRIGGER LEVEL	0

#### NOTE

*The A TRIGGER LEVEL control must remain at 0 throughout this step.*

b. Switch the A TRIGGER SLOPE switch between + and -.

c. CHECK—Display begins at about the same vertical point, within 1 div of graticule center, in both + and - slopes.

d. ADJUST—A Slope Center (R7242) for the display to start at the same vertical point on the sine-wave in both +

**Adjustment Procedure****465B Service (SN B060000 & UP)**

and – slopes (not necessarily the graticule center). Return A TRIGGER SLOPE to +.

e. ADJUST—A Trig Level (R7224) to move the starting point of the display to the center horizontal graticule line.

f. INTERACTION—A Trig Level (R7224), A Trigger Sensitivity (R7246), and A Slope Center (R7242) will interact. Repeat these adjustments until no improvement is noted.

**5. Check/Adjust A Trigger DC Levels (R1202, R1126, R1835)**

a. Set the A TRIGGER COUPLING switch to DC.

**NOTE**

*The A TRIGGER LEVEL control must remain at 0 throughout this step.*

b. CHECK—Start of the display is within 1 div of the center horizontal graticule line in both + and – slopes. Return A TRIGGER SLOPE to +.

c. ADJUST—Norm Trig DC Balance (R1202) to move the starting point of the display to the center horizontal graticule line.

d. INTERACTION—A and B Trig Level (R7224 and R7026) interact with Norm Trig DC Balance (R1202). Repeat these adjustments until no improvement is noted.

e. Set the A TRIGGER SOURCE switch to CH 1.

f. CHECK—Start of the display is within 1 div of the center horizontal graticule line in both + and – slopes. Return A TRIGGER SLOPE to +.

g. ADJUST—CH 1 Trig DC Balance (R1126) to move the starting point of the display to the center horizontal graticule line.

h. Set the A TRIGGER SOURCE Switch to CH 2.

i. CHECK—Start of the display is within 1 div of the center horizontal graticule line in both + and – slopes. Return A SLOPE to +.

j. ADJUST—CH 2 Trig DC Balance (R1835) to move the starting point of the display to the center horizontal graticule line.

**6. Check B Trigger DC Levels**

a. Set:

HORIZ DISPLAY	B DLY'D
A TRIGGER LEVEL	Fully clockwise
B TRIGGER LEVEL	0
B TRIGGER COUPLING	DC
B TRIGGER SOURCE	NORM

**NOTE**

*The B TRIGGER LEVEL control must remain at 0 during this step.*

b. CHECK—Start of the display is within 1 div of the center horizontal graticule line for the following modes:

**B TRIGGER SOURCE**

NORM
CH 1
CH 2

**7. Check B Internal 10 MHz Triggering**

a. Set:

TRIGGER COUPLING (both)	AC
CH 1 VOLTS/DIV	10 mV
CH 2 VOLTS/DIV	0.1 V
A TIME/DIV	0.2 $\mu$ S
B TIME/DIV	0.05 $\mu$ S
TRIGGER SOURCE (both)	NORM

b. Adjust the leveled sine-wave generator for a 3-div (30 mV) display at 10 MHz.

c. Set the CH 1 VOLTS/DIV switch to 0.1 V (0.3-div display).

d. Adjust the B TRIGGER LEVEL control as needed for a stable display.

e. CHECK—For a stable display, with both + and – slopes for these modes:

**B TRIGGER**

SOURCE	COUPLING
NORM	AC, DC
CH 1	DC, AC
CH 2	AC, DC

f. Set:

CH 1 VOLTS/DIV	10 mV
B TRIGGER COUPLING	LF REJ

g. Adjust the leveled sine-wave generator for a 5-div (50 mV) display at 10 MHz.

h. Set the CH 1 VOLTS/DIV switch to .1 V (0.5-div display).

i. Adjust B TRIGGER LEVEL control as needed for a stable display.

j. CHECK—For a stable display, with both + and – slopes for these modes:

**B TRIGGER SOURCE**

CH 2
CH 1
NORM

k. Set the B TRIGGER COUPLING switch to HF REJ.

l. CHECK—No stable display for these modes:

**B TRIGGER SOURCE**

NORM
CH 1
CH 2

**8. Check A Internal 10 MHz Triggering**

a. Set:

HORIZ DISPLAY	A
A TIME/DIV	0.05 $\mu$ s
A TRIGGER LEVEL	As needed for a stable display
CH 1 VOLTS/DIV	10 mV

b. Adjust the leveled sine-wave generator for a 3-div (30 mV) display at 10 MHz.

c. Set the CH 1 VOLTS/DIV switch to .1 V (0.3-div display).

d. Adjust the A TRIGGER LEVEL control as needed for a stable display.

e. CHECK—For a stable display, with both + and – slopes for these modes:

**A TRIGGER**

SOURCE	COUPLING
NORM	AC, DC
CH 1	DC, AC
CH 2	AC, DC

f. Set:

CH 1 VOLTS/DIV	10 mV
A TRIGGER COUPLING	LF REJ

g. Adjust the leveled sine-wave generator for a 5-div (50 mV) display at 10 MHz.

h. Set the CH 1 VOLTS/DIV switch to .1 V (0.5-div display).

i. Adjust the A TRIGGER LEVEL control as needed for a stable display.

j. CHECK—For a stable display, with both + and – slopes for these modes:

**A TRIGGER SOURCE**

CH 2
CH 1
NORM

k. Set the A TRIGGER COUPLING switch to HF REJ.

l. CHECK—No stable display for these modes:

**A TRIGGER SOURCE**

NORM
CH 1
CH 2

**Adjustment Procedure  
465B Service (SN B060000 & UP)**

**9. Check A External 10 MHz Triggering**

a. Set:

VOLTS/DIV (both)	10 mV
TRIGGER COUPLING (both)	AC
TRIGGER SOURCE (both)	EXT

b. Adjust the leveled sine-wave generator to maintain a 5-div display throughout steps 9 and 10. Adjust the A TRIGGER LEVEL control as needed for a stable display.

c. CHECK—For a stable display, with both + and – slopes for these modes:

**A TRIGGER COUPLING**

AC, DC

d. Set:

CH 1 VOLTS/DIV	20 mV
A TRIGGER COUPLING	LF REJ

e. Adjust the leveled sine-wave generator for a 5-div (100 mV) display at 10 MHz.

f. Adjust the A TRIGGER LEVEL control as needed for a stable display.

g. CHECK—For a stable display, with both + and – slopes.

h. Set the A TRIGGER COUPLING switch to HF REJ.

i. CHECK—No stable display.

j. Remove the 10X bnc attenuator from the external trigger setup and change the A TRIGGER SOURCE switch to EXT/10.

k. CHECK—No stable display.

l. Set the A TRIGGER COUPLING switch to LF REJ.

m. CHECK—For a stable display, with both + and – slopes.

n. Set:

CH 1 VOLTS/DIV	10 mV
A TRIGGER COUPLING	AC

o. Adjust the leveled sine-wave generator for a 5-div (50 mV) display at 10 MHz (0.5 V at the external Trigger input).

p. CHECK—For a stable display, with both + and – slopes for these modes:

**A TRIGGER COUPLING**

AC, DC

**10. Check B External 10 MHz Triggering**

a. Set:

HORIZ DISPLAY	B DLY'D
A TIME/DIV	0.2 $\mu$ s
B TIME/DIV	0.05 $\mu$ s

b. Reconnect the 10X bnc attenuator to the external trigger setup.

c. CHECK—For a stable display, with both + and – slopes for these modes:

**B TRIGGERING COUPLING**

AC, DC

d. Set the CH 1 VOLTS/DIV switch to 20 mV.

e. Adjust the leveled sine-wave generator for a 5-div (100 mV) display at 10 MHz.

f. Set the B TRIGGER COUPLING switch to LF REJ and adjust the B TRIGGER LEVEL control as needed for a stable display.

g. CHECK—For a stable display, with both + and – slopes.

h. Set the B TRIGGER COUPLING switch to HF REJ.

i. CHECK—No stable display.

**11. Check B and A External 100 MHz Triggering**

a. Set:

TRIGGER COUPLING	
(both)	AC
TRIGGER SOURCE	
(both)	EXT
CH 1 VOLTS/DIV	50 mV

b. Adjust the leveled sine-wave generator for a 10 MHz 3-div (150 mV) display.

c. Change the generator frequency to 100 MHz. Do not readjust the generator output signal amplitude.

d. Press the X10 MAG push button in and use the A and B TRIGGER LEVEL controls as needed for a stable display.

e. CHECK—For a stable display, with 0.1 div or less jitter, with + and – slopes for these modes:

**B TRIGGER COUPLING**

AC, DC

f. Adjust the leveled sine-wave generator for a 6-div (300 mV) display at 10 MHz; then change the generator frequency to 100 MHz. Do not readjust the signal amplitude.

g. Set the B TRIGGER COUPLING switch to LF REJ and use the A and B TRIGGER LEVEL controls as needed.

h. CHECK—For a stable display, with 0.1 div or less jitter, with both + and – slopes.

i. Set the B TRIGGER COUPLING switch to HF REJ.

j. CHECK—No stable display.

k. Set:

HORIZ DISPLAY	A
A TIME/DIV	0.05 $\mu$ s
A TRIGGER COUPLING	LF REJ
A TRIGGER SOURCE	EXT
A TRIGGER LEVEL	As needed.

l. CHECK—For a stable display, with 0.1 div or less jitter, with both + and – slopes.

m. Set the A TRIGGER COUPLING switch to HF REJ.

n. CHECK—No stable display.

o. Set the A TRIGGER COUPLING switch to AC.

p. Adjust the leveled sine-wave generator for a 3-div (150 mV) display at 10 MHz; then change the generator frequency to 100 MHz. Do not readjust the signal amplitude.

q. Use the A TRIGGER LEVEL control as needed for a stable display.

r. CHECK—For a stable display, with 0.1 div or less jitter, with both + and – slopes:

**A TRIGGER COUPLING**

AC, DC

s. Remove the 10X bnc attenuator from the external trigger setup and change the A TRIGGER SOURCE switch to EXT/10.

t. Use the A TRIGGER LEVEL control as needed for a stable display.

u. CHECK—For a stable display, with 0.1 div or less jitter, with both + and – slopes for these modes:

**A TRIGGER COUPLING**

DC, AC

v. Adjust the leveled sine-wave generator for a 6-div (300 mV) display at 10 MHz; then change the generator frequency to 100 MHz. Do not readjust the signal amplitude.

w. Set the A TRIGGER COUPLING switch to LF REJ and use the A TRIGGER LEVEL control as needed for a stable display.

x. CHECK—For a stable display, with 0.1 div or less jitter, with both + and – slopes.

y. Set the A TRIGGER COUPLING switch to HF REJ.

z. CHECK—No stable display.

**Adjustment Procedure  
465B Service (SN B060000 & UP)**

**12. Check A Internal 100 MHz Triggering**

a. Set:

VOLTS/DIV	50 mV
TRIGGER SOURCE (both)	NORM
TRIGGER COUPLING (both)	AC

b. Reconnect the 10X attenuator to the external trigger setup. Adjust the leveled sine-wave generator for a 1.5-div display at 100 MHz.

c. CHECK—For a stable display, with 0.1 div or less jitter, with + and – slopes for these modes:

**A TRIGGER**

SOURCE	COUPLING
NORM	AC, LF REJ, DC
CH 1	DC, LF REJ, AC
CH 2	AC, LF REJ, DC

d. Set the A TRIGGER COUPLING switch to HF REJ.

e. CHECK—No stable display.

**13. Check B Internal 100 MHz Triggering**

a. Set:

HORIZ DISPLAY	B DLY'D
A TIME/DIV	0.2 $\mu$ S
B TIME/DIV	0.05 $\mu$ S
A TRIGGER COUPLING	DC
A TRIGGER SOURCE	NORM

b. CHECK—For a stable display, with 0.1 div or less jitter, with + and – slopes, for these modes:

**B TRIGGER**

SOURCE	COUPLING
NORM	AC, LF REJ, DC
CH 1	DC, LF REJ, AC
CH 2	AC, LF REJ, DC

**NOTE**

*It may be necessary to adjust both A and B TRIGGER LEVEL controls to obtain the most stable display at higher frequencies in B sweep.*

c. Set the B TRIGGER COUPLING switch to HF REJ.

d. CHECK—No stable display.

**14. Check A and B High-Frequency Reject Triggering**

a. Set:

HORIZ DISPLAY	A
TIME/DIV (both)	10 $\mu$ S
X/10 MAG	Off (button out)
TRIGGER COUPLING (both)	HF REJ
TRIGGER SOURCE (both)	NORM
CH 1 VOLTS/DIV	.1 V
CH 2 VOLTS/DIV	10 mV
VERT MODE	CH 2

b. Adjust leveled sine-wave generator for a 5-div (50 mV) display at 50 kHz.

c. Set the CH 2 VOLTS/DIV switch to .1 V. Adjust A TRIGGER LEVEL control for stable display.

d. Adjust leveled sine-wave generator for 1 MHz and press the X 10 MAG push button in.

e. CHECK—No stable display with the A TRIGGER SOURCE switch in NORM, CH 1, or CH 2.

f. Set:

A TRIGGER LEVEL	Fully clockwise
HORIZ DISPLAY	B DLY'D

g. CHECK—No stable display with the B TRIGGER SOURCE switch in NORM, CH 1, or CH 2.

**15. Check Single Sweep**

a. Set:

HORIZ DISPLAY	A
CH 1 VOLTS/DIV	50 mV
VERT MODE	CH 1
X10 MAG	Off (button out)



**A TRIGGER**

COUPLING	AC
SOURCE	NORM
LEVEL	0
SLOPE	+

b. Adjust the leveled sine-wave generator for a 1-div display at 50 kHz and adjust the A TRIGGER LEVEL control so the display is just triggered.

c. Set:

TIME/DIV (both)	10 ms
CH 1 AC-GND-DC	GND
A TRIG MODE	SINGL SWP (push in)

d. CHECK—READY LED illuminates.

e. Set the CH 1 AC-GND-DC switch to DC.

f. CHECK—A single sweep occurs and the READY LED goes out.

g. Press the SINGL SWP push button in.

h. CHECK—A single sweep occurs each time the SINGL SWP push button is depressed.

i. Remove the test setup.

**16. Check 60 Hz Internal Triggering**

a. Set:

TIME/DIV (both)	5 ms
TRIGGER MODE	NORM
CH 1 VOLTS/DIV	10 mV

b. Connect the low-frequency generator signal to the CH 1 input via a 50  $\Omega$  bnc cable, bnc T and 50  $\Omega$  bnc termination. From bnc T, connect a 50  $\Omega$  bnc cable and 50  $\Omega$  bnc termination to the B External Trigger input.

c. Adjust the low-frequency generator for a 3-div (30 mV) display at 60 Hz.

d. Set the CH 1 VOLTS/DIV switch to .1 V (0.3-div display).

e. CHECK—For a stable display, with both + and – slopes for these modes:

**TRIGGER COUPLING**

AC, DC

f. Set:

CH 1 VOLTS/DIV	10 mV
A TRIGGER COUPLING	HF REJ

g. Set the low-frequency generator for a 5-div (50 mV) display at 60 Hz.

h. Set the CH 1 VOLTS/DIV switch to 0.1 V (0.5-div display).

i. CHECK—For a stable display, with both + and – slopes.

j. Set the A TRIGGER COUPLING switch to LF REJ.

k. CHECK—No stable display.

l. Set:

A TRIG MODE	AUTO
A TRIGGER LEVEL	Fully clockwise
A TIME/DIV	10 ms
B TIME/DIV	5 ms
B TRIGGER SOURCE	NORM
B TRIGGER COUPLING	HF REJ
HORIZ DISPLAY	B DLY'D
CH 1 VOLTS/DIV	0.1 V

m. CHECK—For a stable display, with both + and – slopes.

n. Set the B TRIGGER COUPLING switch to LF REJ.

o. CHECK—No stable display.

p. Set:

CH 1 VOLTS/DIV	10 mV
B TRIGGER COUPLING	AC

**Adjustment Procedure  
465B Service (SN B060000 & UP)**

q. Set the low-frequency generator for a 3-div (30 mV) display at 60 Hz.

r. Set the CH 1 VOLTS/DIV switch to 0.1 V and use the B TRIGGER LEVEL control as needed for a stable display.

s. CHECK—For a stable display, with both + and – slopes for these modes:

**B TRIGGER COUPLING**

AC, DC

**17. Check 60 Hz External Triggering**

a. Set:

B TRIGGER COUPLING	AC
CH 1 VOLTS/DIV	10 mV

b. Adjust the low-frequency generator for a 5-div (50 mV) display at 60 Hz.

c. Set the B TRIGGER SOURCE switch to EXT.

d. CHECK—For a stable display, with both + and – slopes for these modes:

**B TRIGGER COUPLING**

AC, HF REJ, DC

e. Set the B TRIGGER COUPLING switch to LF REJ.

f. CHECK—No stable display.

g. Move the signal cable from the B External Trigger input to the A External Trigger input.

h. Set:

HORIZ DISPLAY	A
A TIME/DIV	5 ms
A TRIGGER COUPLING	AC
A TRIG MODE	NORM
A TRIGGER SOURCE	EXT
A TRIGGER LEVEL	As needed

i. CHECK—For a stable display, with both + and – slopes for these modes:

**A TRIGGER COUPLING**

AC, HF REJ, DC

j. Set the A TRIGGER COUPLING switch to LF REJ.

k. CHECK—No stable display.

**18. Check A and B External Trigger Level Ranges**

a. Set:

TRIGGER COUPLING	(both)	AC
TRIGGER SLOPE	(both)	+
CH 1 VOLTS/DIV		1 V
HORIZ DISPLAY		A
A TRIG MODE		AUTO
A TIME/DIV		1 ms

b. Remove the 50 Ω termination and adjust the low-frequency generator for a 4-div (4 V) display at 1 kHz.

c. CHECK—Display is triggered along the positive slope of the waveform as the A TRIGGER LEVEL control is rotated.

d. CHECK—Display is not triggered (free runs) at either extreme of rotation.

e. Set the A TRIGGER SLOPE switch to –.

f. CHECK—Display is triggered along the negative slope of the waveform as the A TRIGGER LEVEL control is rotated.

g. CHECK—Display is not triggered (free runs) at either extreme of rotation.

h. Move the low-frequency generator signal from the A External Trigger input to the B External Trigger input.

i. Set:

A TRIGGER LEVEL	Fully counterclockwise
HORIZ DISPLAY	B DLY'D

j. CHECK—Display is triggered along the positive slope of the waveform as the B TRIGGER LEVEL control is rotated.

k. CHECK—Display is not triggered (not visible) at either extreme of rotation.

l. Set the B TRIGGER SLOPE switch to —.

m. CHECK—Display is triggered along the negative slope of the waveform as the B TRIGGER LEVEL control is rotated.

n. CHECK—Display is not triggered (not visible) at either extreme of rotation.

o. Disconnect the test setup.

p. Set:

HORIZ DISPLAY	A
A TRIGGER SOURCE	EXT/10
CH 1 VOLTS/DIV	5 V
CH 1 VOLTS/DIV VAR	Fully counterclockwise
A TRIGGER COUPLING	AC

q. Connect the calibration generator standard-amplitude output to the CH 1 input via a 50  $\Omega$  bnc cable and bnc T. Connect the bnc female connection to A External Trigger input via a 50  $\Omega$  bnc cable. Adjust the generator output to 50 V.

#### NOTE

*The range of the A LEVEL control with the A SOURCE switch in EXT/10 is  $\pm 20$  V (40 V peak-to-peak) or greater. The applied signal is 50 V peak-to-peak. Therefore, untriggered operation at both extremes of the A TRIGGER LEVEL control is not required.*

r. CHECK—Display is triggered along the negative slopes of the waveform as the A TRIGGER LEVEL control is rotated.

s. Set the A TRIGGER SLOPE switch to +.

t. CHECK—Display is triggered along the positive slope of the waveform as the A TRIGGER LEVEL control is rotated.

u. Disconnect the test setup.

## 19. Check Line Triggers

a. Set:

CH 1 VOLTS/DIV and VAR as required.

### A TRIGGER

MODE	AUTO
COUPLING	AC
SOURCE	LINE
SLOPE	+

b. Connect a 10X probe from the CH 1 input to a line-frequency source.

c. CHECK—For a stable display, starting on the positive-going slope.

d. Set the A TRIGGER SOURCE switch to —.

e. CHECK—For a stable display, starting on the negative-going slope.

f. Disconnect probe from the line-frequency source; then from the 465B.

## 20. Check NORM A Trigger Mode

a. Set:

A TIME/DIV	1 ms
CH 1 VOLTS/DIV	.5 V
CH 1 VOLTS/DIV VAR	Calibrated detent

### A TRIGGER

SLOPE	+
SOURCE	NORM
COUPLING	AC
MODE	AUTO

b. Connect time-mark generator to the CH 1 input via a 50  $\Omega$  bnc cable and 50  $\Omega$  bnc termination. Adjust generator for 0.1 s time markers.

c. CHECK—Display can be triggered by adjusting the A TRIGGER LEVEL control.

**Adjustment Procedure  
465B Service (SN B060000 & UP)**

- d. Set the A TRIG MODE switch to NORM.
- e. CHECK—Display is triggered.
- f. Set the CH 1 AC-GND-DC switch to GND.
- g. CHECK—No display is visible.

**21. Check AUTO Recovery Time**

a. Set:

CH 1 AC-GND-DC	DC
A TRIG MODE	AUTO

- b. CHECK—Display is triggered.
- c. Set the time-mark generator for 0.5 s time markers.
- d. CHECK—Display cannot be triggered (free runs).
- e. Disconnect the time-mark generator.

**IMPORTANT NOTE**

FOR OSCILLOSCOPES WITH DIGITAL MULTIMETERS ATTACHED, REFER TO THE CALIBRATION SECTION OF THE DIGITAL MULTIMETER MANUAL AT THIS POINT. ON COMPLETION OF THE CALIBRATION SECTION IN THE DM MANUAL, RETURN TO THIS MANUAL AND COMPLETE STEPS 18 & 19 IN THE HORIZONTAL SECTION AND THEN CONTINUE ON TO THE NEXT SECTION.

FOR OSCILLOSCOPES WITHOUT DIGITAL MULTIMETERS, CONTINUE WITH THIS SECTION OF THIS MANUAL.

**HORIZONTAL****Equipment Required**

- |                                |  |
|--------------------------------|--|
| 1. Test Oscilloscope           | 5. 50 $\Omega$ Bnc Termination         |
| 2. Time-mark Generator         | 6. 3-Inch Slotted Screwdriver          |
| 3. 50 $\Omega$ Bnc Cable       | 7. Low-capacitance Slotted Screwdriver |
| 4. Leveled Sine-wave Generator | 8. Dual-input Coupler                  |

See **ADJUSTMENT LOCATIONS 1** and **ADJUSTMENT LOCATIONS 5** in the *Diagrams* section for adjustments and test points (TP).

**465B Control Settings**

<b>Power</b>	
Regulating Range Selector	Medium
Line Voltage Selector	115 V
POWER	ON
<b>CRT</b>	
INTENSITY	As desired
FOCUS	Best focused display
SCALE ILLUM	As desired
B INTENSITY	As desired

<b>Vertical</b> (both Channels if applicable)	
VOLTS/DIV	0.5 V
VOLTS/DIV VAR	Calibrated detent
POSITION	Midrange
AC-GND-DC	DC
VERT MODE	CH 1
INVERT	Off (button out)
20 MHz BW LIMIT	Full bandwidth (button out)

**Triggering**  
(both A and B if applicable)

LEVEL	As needed for a stable display
SLOPE	+
COUPLING	AC
A SOURCE	EXT
B SOURCE	STARTS AFTER DELAY
A TRIG MODE	AUTO

**Sweep**

HORIZ DISPLAY	ALT
DELAY TIME POSITION	1.00
A TIME/DIV	1 ms
B TIME/DIV	5 $\mu$ s
TIME/DIV VAR	Calibrated detent
X10 MAG	Off (button out)
POSITION	Midrange
A TRIGGER HOLDOFF	NORM
TRACE SEP	As needed for ALT display trace separation.

**Adjustment Procedure  
465B Service (SN B060000 & UP)**

**1. Check/Adjust Sweep Start and A Sweep Calibration (R4570, R6053)**

a. Connect 1 ms time markers to the CH 1 input from the time-mark generator via a 50  $\Omega$  bnc cable and a 50  $\Omega$  termination. Connect + Trigger Out from the time-mark generator to the A External Trigger input via a 50  $\Omega$  bnc cable and a 50  $\Omega$  termination.

b. CHECK—Intensified portion of the sweep begins at the second time marker. (It may be necessary to readjust the INTENSITY and B INTENSITY controls, so that the intensified portion of the sweep is visible.)

c. ADJUST—Sweep Start (R4570) so the intensified portion of the sweep begins at the start of the second time marker and the pulse displayed on B DLY'D trace starts at the beginning of the sweep.

d. Set the DELAY TIME POSITION dial to 9.00.

e. CHECK—Intensified portion of the sweep begins at the tenth time marker.

f. ADJUST—A Sweep Cal (R6053) so the intensified portion of the sweep begins at the start of the tenth time marker and the pulse displayed on B DLY'D trace starts at the beginning of the sweep.

g. INTERACTION—Between Sweep Start and A Sweep Cal adjustments. Repeat both until no further improvement is noted.

**2. Check Delay or Differential Time Linearity**

a. Set the DELAY TIME POSITION dial to position the tenth time marker to the beginning of the sweep.

b. Note the reading on the DELAY TIME POSITION dial.

c. Adjust the DELAY TIME POSITION dial so the ninth time marker is at the beginning of the sweep.

d. CHECK—DELAY TIME POSITION dial for a difference in reading of 1.00,  $\pm 0.01$  (0.99 to 1.01) than the reading noted in part c.

**NOTE**

*1 div of the DELAY TIME POSITION dial is one complete revolution of the inner knob, 0.01 div is one minor division of the inner knob.*

e. Rotate the DELAY TIME POSITION dial to position each successive time marker to the beginning of the sweep.

f. CHECK—DELAY TIME POSITION dial for a difference in reading of 1.00,  $\pm 0.01$  (0.99 to 1.01) than the adjacent time marker.

**3. Check/Adjust Horizontal Amplifier Gain (R4373, R4274)**

a. Set:

HORIZ DISPLAY	A
TIME/DIV (both)	1 ms
DELAY TIME POSITION	Fully counterclockwise

b. Select 1 ms time markers from the time-mark generator.

c. CHECK—Display for 1 marker/div,  $\pm 2\%$  ( $\pm 0.2$  div at the eleventh time marker).

d. ADJUST—X1 Gain (R4274) for exactly 1 marker/div.

e. Select 0.1 ms time markers from the time-mark generator.

f. Press X10 MAG push button in.

g. CHECK—X10 MAG LED is on when the X10 MAG push button is in.

h. CHECK—1 marker/div,  $\pm 3\%$  ( $\pm 1 \frac{1}{2}$  minor div at the eleventh time marker).

i. ADJUST—X10 Gain (R4373) for exactly 1 time marker/div.

**4. Check Sweep Linearity**

- a. CHECK—Linearity over any 2 div of the magnified sweep to be within 0.1 div.
- b. Release the X10 MAG push button.
- c. Select 1 ms time markers from the time-mark generator.
- d. CHECK—Linearity over any 2 div of the sweep to be within 0.1 div.

**5. Check/Adjust Magnifier Centering (R4253) and Registration (R4275)**

- a. Push the X10 MAG push button in.
- b. Press BEAM FIND push button in.
- c. CHECK—Display is centered horizontally.
- d. ADJUST—Horizontal DC Centering (R4253) to horizontally center the display.
- e. Release BEAM FIND push button.
- f. Select 5 ms time markers from the time-mark generator.
- g. Position the middle time marker to the center vertical graticule line.
- h. Release the X10 MAG push button.
- i. CHECK—Middle marker is within 0.2 div of the center vertical graticule line.
- j. ADJUST—Magnifier Registration (R4275) to position the middle time marker to the center vertical graticule.
- k. Repeat parts c through j until no horizontal shift is observed between X10 MAG in and X10 MAG out.

**6. Check/Adjust B Sweep Calibration (R6052)**

- a. Set:
 

DELAY TIME POSITION	Fully counterclockwise
HORIZ DISPLAY	B DLY'D
A TIME/DIV	2 ms
B TIME/DIV	1 ms
X10 MAG	Off (button out)

- b. Select 1 ms time markers from the time-mark generator.

- c. CHECK—Display for 1 time marker/div,  $\pm 2\%$  (1 minor division at the eleventh time marker).

- d. ADJUST—B Sweep Cal (R6052) for exactly 1 time marker/div.

**7. Check A Sweep Length**

- a. Set:
 

TIME/DIV (both)	1 ms
HORIZ DISPLAY	A

- b. Select 5 ms time markers.

- c. Position the third time marker horizontally to the center vertical graticule line.

- d. CHECK—Display extends to the right of the center vertical graticule line 1 div ( $\pm 0.5$  div).

**8. Check Variable Time/Division**

- a. Set the A TIME/DIV switch to 2 ms.

- b. Select 5 ms time markers from the time-mark generator.

- c. CHECK—At least 1 time marker/div can be obtained by adjusting the TIME/DIV VAR control.

- d. CHECK—UNCAL LED comes on when the TIME/DIV VAR control is out of the detent position.

- e. Return the TIME/DIV VAR control to the detent position.

**Adjustment Procedure  
465B Service (SN B060000 & UP)**

**9. Check Horizontal Position Range**

- a. Turn the Horizontal POSITION control fully clockwise.
- b. CHECK—Start of sweep is to the right of the center vertical graticule line.
- c. Turn the Horizontal POSITION control fully counterclockwise.
- d. CHECK—End of sweep is to the left of the center vertical graticule line.

**NOTE**

*Horizontal POSITION control is a combined Coarse and Fine position control mounted on the same shaft in a mechanical arrangement that allows the Fine position potentiometer to rotate approximately 1/4 turn (1/8 turn in either direction from midrange) before the Coarse position control potentiometer is engaged.*

- e. Rotate the horizontal POSITION control through its Fine range.
- f. CHECK—Horizontal POSITION control Fine range will position the sweep approximately 0.5 div.

**10. Check/Adjust A 10  $\mu$ s Timing (C6002)**

- a. Set:

DELAY TIME POSITION	1.00
A TIME/DIV	10 $\mu$ s
B TIME/DIV	1 $\mu$ s

- b. Select 10  $\mu$ s time markers from the time-mark generator.
- c. CHECK—Display for 1 time marker/div,  $\pm 2\%$  (1 minor division at the eleventh time marker).
- d. ADJUST—10  $\mu$ s timing (C6002), with a low capacitance screwdriver, for exactly 1 time marker/div.
- e. Set the HORIZ DISPLAY switch to B DLY'D and B TRIGGER SOURCE to STARTS AFTER DELAY.

f. Horizontally position the displayed marker to align it with a vertical graticule line.

- g. Set DELAY TIME POSITION to 9.00.

h. ADJUST—10  $\mu$ s timing (C6002) with a low capacitance screwdriver, so the displayed marker is aligned with the same vertical graticule line as in part f.

i. Repeat parts f through h until no error exists between a DELAY TIME POSITION dial setting of 1.00 and 9.00.

**11. Check/Adjust A Sweep High-Speed Timing (C6015)**

- a. Set:

DELAY TIME POSITION	1.50
B TRIGGER SOURCE	STARTS AFTER DELAY
A TIME/DIV	0.5 $\mu$ s
B TIME/DIV	0.05 $\mu$ s
HORIZ DISPLAY	A

b. Select 0.5  $\mu$ s time markers from the time-mark generator.

c. CHECK—Display for 1 time marker/div,  $\pm 2\%$  (1 minor division at the eleventh time marker).

d. ADJUST—A High-Speed Timing (C6015), with the low-capacitance screwdriver, for exactly 1 time marker/div.

- e. Switch the HORIZ DISPLAY switch to B DLY'D.

f. Use Horizontal POSITION control to position the displayed marker so it is aligned with the center vertical graticule line.

- g. Set DELAY TIME POSITION to 8.50.

h. CHECK—Displayed time marker aligns with the center vertical graticule line.

i. ADJUST—A High-Speed Timing (C6015), with a low-capacitance screwdriver, so the displayed marker is aligned with the center vertical graticule line.



j. INTERACTION—Between the two positions of the DELAY TIME POSITION dial when adjusting C6015. Compromise the adjustments as necessary to achieve correct timing.

### 12. Check/Adjust B Sweep High-Speed Timing (C6041)

a. Set:

DELAY TIME POSITION	Fully counterclockwise
HORIZ DISPLAY	B DLY'D
B TRIGGER SOURCE	NORM
A TIME/DIV	1 $\mu$ S
B TIME/DIV	0.5 $\mu$ S

b. Adjust the A and B TRIGGER LEVEL controls for a stable display.

c. CHECK—Display for 1 time marker/div,  $\pm 2\%$  (1 minor division at the eleventh time marker).

d. ADJUST—B High-Speed Timing (C6041), with a low capacitance screwdriver, for exactly 1 time marker/div.

### 13. Check A and B Time/Division Accuracy

a. CHECK—Using the B TIME/DIV switch and the time-mark generator settings given in Table 5-10, check B sweep timing is within 0.2 div, over the first 10 div of the display.

b. Set the HORIZ DISPLAY switch to A.

c. CHECK—Using the A TIME/DIV switch and the time-mark generator settings given in Table 5-10 check A sweep timing within 0.2 div, over the first 10 div of the display.

### 14. Check/Adjust High-Speed Magnified Timing (C4246, C4247)

a. Set:

HORIZ DISPLAY	A
X10 MAG	X10 (button in)
Horizontal POSITION	Midrange (as required)
A and B TIME/DIV	0.05 $\mu$ S

b. Select 5 ns time markers from the time-mark generator.

Table 5-10  
A AND B TIMING ACCURACY

A and B TIME/DIV Switch Setting	Time-mark Generator Output	CRT Display (Markers/Division)
0.02 $\mu$ S	20 ns	1
0.05 $\mu$ S	50 ns	1
0.1 $\mu$ S	0.1 $\mu$ S	1
0.2 $\mu$ S	0.2 $\mu$ S	1
0.5 $\mu$ S	0.5 $\mu$ S	1
1 $\mu$ S	1 $\mu$ S	1
2 $\mu$ S	2 $\mu$ S	1
5 $\mu$ S	5 $\mu$ S	1
10 $\mu$ S	10 $\mu$ S	1
20 $\mu$ S	20 $\mu$ S	1
50 $\mu$ S	50 $\mu$ S	1
0.1 ms	0.1 ms	1
0.2 ms	0.2 ms	1
0.5 ms	0.5 ms	1
1 ms	1 ms	1
2 ms	2 ms	1
5 ms	5 ms	1
10 ms <sup>a</sup>	10 ms	1
20 ms <sup>a</sup>	20 ms	1
50 ms <sup>a</sup>	50 ms	1

#### A SWEEP ONLY

0.1 s <sup>a</sup>	0.1 s	1
0.2 s <sup>a</sup>	0.1 s	1
0.5 s <sup>a</sup>	0.5 s	1

<sup>a</sup>Switch A TRIG MODE to NORM below 5 ms div.

c. Set CH 1 VOLTS/DIV for at least a 4-div display.

d. CHECK—for a display of 1 time marker/div,  $\pm 3\%$  ( $\pm 1 \frac{1}{2}$  minor div at the eleventh time marker).

e. ADJUST—C4246 and C4247 equally for 1 time marker/div over the entire 10 div.

f. Set A and B TIME/DIV to 0.02  $\mu$ S.

**Adjustment Procedure  
465B Service (SN B060000 & UP)**

- g. Press BEAM FIND push button in.
- h. CHECK—Display is centered horizontally.
- i. ADJUST—Horizontal DC Centering R4253 to horizontally center the compressed display. (Recheck Magnifier Registration if this adjustment is made.)
- j. Release BEAM FIND push button.
- k. ADJUST—C4246 for 2 time marker/5 div over the entire 10 div (adjust Horizontal POSITION control as necessary).
- l. Set A and B TIME/DIV switch to 0.05  $\mu$ s.
- m. ADJUST—C4247 for 1 time marker div over the entire 10 divisions.
- n. Repeat part f and parts k through m for best timing on 0.05  $\mu$ s and 0.02  $\mu$ s ranges until no further improvement is obtained.

**15. Check A and B Magnified Timing Accuracy**

a. CHECK—Using the A TIME/DIV switch settings and the time-mark generator settings given in Table 5-11 check A magnified sweep timing is within 0.3 div over the center 10 div of the magnified display. Note the portions of the total magnified sweep length to be excluded from the measurement.

b. Set the HORIZ DISPLAY switch to B DLY'D.

c. CHECK—Using the B TIME/DIV switch and the time-mark generator settings given in Table 5-11 check B magnified sweep timing, within 0.3 div over the center 10 div of the magnified display. Note the portions of the total magnified sweep length to be excluded from the measurement.

**NOTE**

*If the start or end of the non-excluded magnified sweep exhibits a non-linearity that results in sweep timing outside the 0.3 div limit, refer to Selectable Components, under Troubleshooting in the Maintenance section, for selection of R4268, R4165 or R4363.*

d. Release the X10 MAG push button.

**Table 5-11  
A AND B MAGNIFIED ACCURACY**

A and B TIME/DIV Switch Setting	Time-mark Generator Output	CRT Display (Markers/Division)	Portions of Total Magnified Sweep Length to Exclude from Measurement
0.02 $\mu$ s	5 ns	3 markers per 5 div	First and last 25 div
0.05 $\mu$ s	5 ns	1	First and last 10 div
0.1 $\mu$ s	10 ns	1	First and last 5 div
0.2 $\mu$ s	20 ns	1	First and last 2.5 div
0.5 $\mu$ s	50 ns	1	
1 $\mu$ s	0.1 $\mu$ s	1	
2 $\mu$ s	0.2 $\mu$ s	1	
5 $\mu$ s	0.5 $\mu$ s	1	
10 $\mu$ s	1 $\mu$ s	1	
20 $\mu$ s	2 $\mu$ s	1	
50 $\mu$ s	5 $\mu$ s	1	
0.1 ms	10 $\mu$ s	1	
0.2 ms	20 $\mu$ s	1	
0.5 ms	50 $\mu$ s	1	
1 ms	0.1 ms	1	
2 ms	0.2 ms	1	
5 ms	0.5 ms	1	
10 ms <sup>a</sup>	1 ms	1	
20 ms <sup>a</sup>	2 ms	1	
50 ms <sup>a</sup>	5 ms	1	

**A SWEEP ONLY**

0.1 s <sup>a</sup>	10 ms	1	
0.2 s <sup>a</sup>	20 ms	1	
0.5 s <sup>a</sup>	50 ms	1	

<sup>a</sup>Switch TRIG MODE to NORM below 5 ms div.

## NOTE

## 16. Check Delay or Differential Time Accuracy

a. Set:

B TRIGGER SOURCE	STARTS AFTER DELAY
A TRIG MODE	AUTO
TIME/DIV (both)	According to Table 5-12
HORIZ DISPLAY	ALT

b. CHECK—Using the A TIME/DIV switch, B TIME/DIV switch, and the time-mark generator settings given in Table 5-12, check differential time accuracy is within the given tolerance. First set the DELAY TIME POSITION dial to 1.00 and rotate the dial slightly until the sweep starts at the top of the second time marker. Note the control setting and then set the dial to 9.00 and rotate it slightly until the sweep starts at the top of the tenth time marker. Delay TIME POSITION dial setting must be 8.00 div higher,  $\pm 0.08$  div.

Table 5-12  
DIFFERENTIAL TIME ACCURACY

A TIME/ DIV Switch Setting	B TIME/ DIV Switch Setting	Time- mark Generator Output	Allowable Error for Given Accuracy
0.1 $\mu$ s	0.02 $\mu$ s	0.1 $\mu$ s	
0.2 $\mu$ s	0.05 $\mu$ s	0.2 $\mu$ s	
0.5 $\mu$ s	0.05 $\mu$ s	0.5 $\mu$ s	
1 $\mu$ s	0.1 $\mu$ s	1 $\mu$ s	
2 $\mu$ s	0.2 $\mu$ s	2 $\mu$ s	
5 $\mu$ s	0.5 $\mu$ s	5 $\mu$ s	
10 $\mu$ s	1 $\mu$ s	10 $\mu$ s	
20 $\mu$ s	2 $\mu$ s	20 $\mu$ s	$\pm 8$ minor dial divisions
50 $\mu$ s	5 $\mu$ s	50 $\mu$ s	
0.1 ms	10 $\mu$ s	0.1 ms	
0.2 ms	20 $\mu$ s	0.2 ms	
0.5 ms	50 $\mu$ s	0.5 ms	
1 ms	0.1 ms	1 ms	
2 ms	0.2 ms	2 ms	
5 ms	0.5 ms	5 ms	
10 ms <sup>a</sup>	1 ms	10 ms	
20 ms <sup>a</sup>	2 ms	20 ms	
50 ms <sup>a</sup>	5 ms	50 ms	
0.1 s <sup>a</sup>	10 ms	0.1 s	
0.2 s <sup>a</sup>	20 ms	0.2 s	
0.5 s <sup>a</sup>	50 ms	0.5 s	

<sup>a</sup>Below 5 ms div, set HORIZ DISPLAY to B DLY'D and A TRIG MODE to NORM.

Below 5 ms/div, ALT HORIZ DISPLAY sweeps alternate too slowly to observe display with ease; therefore, set HORIZ DISPLAY to B DLY'D. If in doubt as to the correct setting of the DELAY TIME POSITION dial, set the HORIZ DISPLAY switch to A INTEN and check which marker is intensified.

## 17. Check Delay or Differential Time Jitter

a. Set:

DELAY TIME POSITION	1.00
HORIZ DISPLAY	B DLY'D
A TIME/DIV	1 ms
B TIME/DIV	0.2 $\mu$ s
A TRIG MODE	AUTO

b. Select 1 ms time markers from time-mark generator.

c. Position the time marker near the center of the display area with the DELAY TIME POSITION dial.

d. CHECK—Jitter on the leading edge of the time marker should not exceed 1 division (2.5 div if the instrument is being operated on a 50 Hz line voltage). Disregard the slow drift.

e. Turn the DELAY TIME POSITION dial to 9.00 and slightly readjust so the time marker is displayed near the center of the display area.

f. CHECK—Jitter on the leading edge of the time marker should not exceed 1 division (2.5 div if the instrument is being operated on a 50 Hz line voltage). Disregard the slow drift.

g. Disconnect test setup.

## 18. Check/Adjust X Gain (R4381)

a. Set:

TIME/DIV (both)	X-Y
VOLTS/DIV (both)	5 mV
CH 1 AC-GND-DC	AC
CH 2 AC-GND-DC	GND
HORIZ DISPLAY	A
A TRIGGER SOURCE	NORM

**Adjustment Procedure  
465B Service (SN B060000 & UP)**

**NOTE**

*Setting a TIME/DIV switch to X-Y position disables all VERT MODE switches, and automatically selects CH 1 input for the X-Axis signal and CH 2 input for the Y-Axis signal.*

b. Connect standard-amplitude signal from the calibration generator to the CH 1 input via a 50 Ω unterminated bnc cable. Set the generator output amplitude to 20 mV.

c. CHECK—Display for 4 div of horizontal deflection ±4% (4 div, ±0.16 div).

d. Switch the CH 1 AC-GND-DC switch to DC.

e. CHECK—Display for 4 div of horizontal deflection ±4% (4 div, ±0.16 div). It is normal for this check to be slightly less than that observed in part c.

f. Set the CH 1 AC-GND-DC switch to AC.

g. ADJUST—X Gain (R4381) for exactly 4 div of horizontal deflection.

h. Disconnect test setup.

**19. Check X-Y Phasing and Bandwidth**

a. Connect the output of the leveled sine-wave generator to the CH 1 and CH 2 inputs via a 50 Ω bnc cable, 50 Ω termination, and a dual-input coupler.

b. Adjust the leveled sine-wave generator for an 8-division horizontal display at 50 kHz.

c. Set the CH 2 AC-GND-DC switch to AC.

d. Center the display vertically and horizontally with the Horizontal POSITION and CH 2 POSITION controls.

e. CHECK—Display for an opening at the center horizontal graticule line of 0.4 div or less.

f. Set the CH 2 AC-GND-DC switch to GND.

g. Adjust the leveled sine-wave generator for a 10-div horizontal display at 50 kHz.

h. Increase the leveled sine-wave generator frequency until the display is reduced to 7 div.

i. CHECK—Output frequency of the leveled sine-wave generator is at least 4 MHz.

j. Disconnect the test setup.

**20. Check B Ends A**

a. Set:

HORIZ DISPLAY	A INTEN
A TIME/DIV	1 ms
B TIME/DIV	0.1 ms
A TRIGGER HOLDOFF	B ENDS A (in detent)

b. Adjust the INTENSITY control so the A sweep portion of the display is visible.

c. Rotate the DELAY TIME POSITION dial through its range.

d. CHECK—A sweep ends after the intensified portion at all settings of the DELAY TIME POSITION dial.

**21. Check A Trigger Holdoff**

a. Set:

HORIZ DISPLAY	A
A TRIGGER HOLDOFF	NORM
A TRIGGER LEVEL	Fully clockwise

b. Connect the A +GATE output signal (from 465B rear panel) to the test oscilloscope via a 50 Ω unterminated bnc cable.

c. Set the test oscilloscope TIME/DIV switch and TIME/DIV VAR control so that the bottom portion of the waveform (holdoff time of the A +GATE) is exactly 1 div in length.

d. Rotate the A TRIGGER HOLDOFF control clockwise.

e. CHECK—At least 10 times increase in the holdoff time of the A +GATE.

f. Set the A TRIGGER HOLDOFF control to NORM.

g. Disconnect test equipment.

Adjustment Procedure  
465B Service (SN B060000 & UP)

## GATES, CALIBRATOR, AND EXT Z AXIS

### Equipment Required

- |  |                               |
|--|-------------------------------|
| 1. Test Oscilloscope                           | 5. Calibration Generator      |
| 2. 42-inch, 50 $\Omega$ Bnc Cable (2 required) | 6. Bnc T Connector            |
| 3. Digital Voltmeter                           | 7. 3-inch Slotted Screwdriver |
| 4. Shorting Strap                              |                               |

See **ADJUSTMENT LOCATIONS 1** in the *Diagrams* section for adjustments and test points (TP).

### 465B Control Settings

Power	
Regulating Range Selector	Medium
Line Voltage Selector	115 V
POWER	ON
CRT	
INTENSITY	As desired
FOCUS	Best focused display
SCALE ILLUM	As desired
B INTENSITY	As desired
Vertical (both Channels if applicable)	
VOLTS/DIV	5 mV
VOLTS/DIV VAR	Calibrated detent
POSITION	Midrange
VERT MODE	CH 1
INVERT	Off (button out)
20 MHz BW LIMIT	Full bandwidth (button out)
Triggering (both A and B if applicable)	
LEVEL	Fully clockwise
SLOPE	+
COUPLING	AC
A SOURCE	NORM
B SOURCE	STARTS AFTER DELAY
A TRIG MODE	AUTO

### Sweep

HORIZ DISPLAY	B DLY'D
DELAY TIME POSITION	Fully counterclockwise
A TIME/DIV	50 $\mu$ s
B TIME/DIV	50 $\mu$ s
TIME/DIV VAR	Calibrated detent
X10 MAG	Off (button out)
POSITION	Midrange
A TRIGGER HOLDOFF	NORM

### 1. Check A and B +Gates

a. Connect the B +GATE output (from the rear panel of the 465B) to the test oscilloscope via a 50  $\Omega$  unterminated bnc cable.

b. CHECK—Test oscilloscope display for a positive-going pulse of +5.5 V amplitude (within 0.5 V).

c. Disconnect cable from the B +GATE output and connect it to the A +GATE output.

d. CHECK—Test oscilloscope display for a positive-going pulse of +5.5 V in amplitude ( $\pm 0.5$  V).

e. Disconnect test equipment.

### 2. Check/Adjust Calibrator DC Level (R4293)

a. Connect a shorting strap between TP4177 and TP4178.

b. Connect digital voltmeter common lead to chassis ground and + lead to the CALIBRATOR current loop.

c. CHECK—CALIBRATOR dc level is 300 mV,  $\pm 1\%$  (297 mV to 303 mV).

d. ADJUST—Amplitude Cal (R4293) for exactly 300 mV.

e. Remove the shorting strap and the digital voltmeter connections.

f. Connect a 10X probe from the test oscilloscope to the CALIBRATOR current loop.

g. CHECK—Test oscilloscope display for a 0.3 V square wave with a duration of approximately 1 ms.

h. Disconnect the test setup.

### 3. Check External Z Axis

a. Set:

HORIZ DISPLAY	A
A TIME/DIV	0.2 ms
A TRIGGER SOURCE	EXT

b. Set the INTENSITY control for a normal viewing level.

c. Connect the calibration generator standard-amplitude signal to the A External Trigger input via a 50  $\Omega$  bnc cable and bnc T connector. Connect from the bnc T to the EXT Z-AXIS input (465B rear panel) via a 50  $\Omega$  bnc cable. Set the generator output for 5 V.

d. Adjust A TRIGGER LEVEL for a stable display (TRIG LED on).

e. CHECK—Display for noticeable intensity modulation.

f. Disconnect the test setup.

# MAINTENANCE

## INTRODUCTION

This section of the manual contains information for use in preventive maintenance, troubleshooting, and corrective maintenance. Procedures for removal and replacement of the standard instrument cabinet and the rack adapter are presented at the beginning of the section. Should the instrument require shipment to a Tektronix Service Center for repair, refer to the repackaging instructions later in this section.

## CABINET AND RACK ADAPTER REMOVAL AND REPLACEMENT

The standard cabinet protects the interior of this instrument from accumulation of dust and also provides protection to personnel from the operating potentials present. In addition, the cabinet reduces the emi (electromagnetic interference) radiation from the instrument and interference to the display due to other equipment.

The front panel cover provides a dust-tight seal around the front panel and protects the front panel when storing or transporting the instrument.

The Rack Adapter cabinet for the 465B provides the proper electrical environment for the instrument, reduces dust accumulation, minimizes handling damage, and provides a means for mounting the instrument solidly to a surface such as a rack or console.

### Standard Cabinet Removal

The standard instrument cabinet can be removed in the following manner.

1. Disconnect the instrument power cord from the power source.
2. Install the front-panel cover and set the instrument face on a flat surface.
3. Unwrap the power cord from the instrument feet.

4. Remove the six screws indicated in Figure 6-1 and remove the rear cabinet frame (with feet and screws) from the instrument as an intact assembly.

5. Lift the cabinet up until it is separated from the instrument and power cord.

### WARNING

*Dangerous potentials exist at several points throughout this instrument. When the instrument is operated with the cabinet removed, do not touch exposed connections or components. Some transistors may have elevated cases. Disconnect power before cleaning the instrument or replacing parts.*

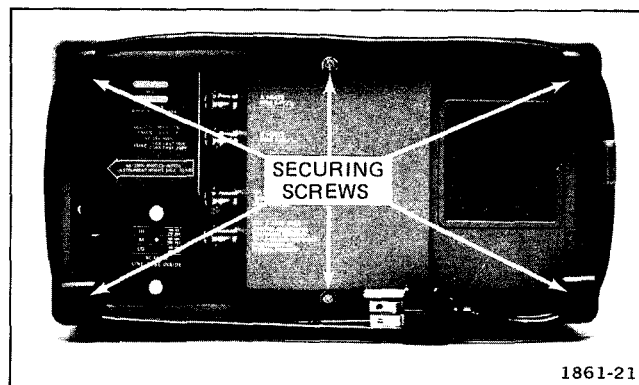


Figure 6-1. Removing the wrap-around cabinet.

### Standard Cabinet Installation

The standard instrument cabinet should be installed in the following manner.

1. Disconnect the instrument power cord from the power source.
2. If parts were removed or replaced, check all sections of the instrument for proper assembly. It may be helpful to use the diagrams in Section 10, Replaceable Mechanical Parts List, for the location of parts.



**Maintenance****465B Service (SN B060000 & UP)**

3. 465B DM-series only—If the DM-series main circuit-board is not in place, install the board on the main chassis.

4. Install the front panel cover and set the instrument face on a flat surface.

5. Place the cabinet handle against the bottom of the cabinet (bottom of cabinet is nearest to the carrying handle pivot points).

6. Pull the power cable through the cabinet and carefully slide the cabinet over the instrument. Avoid pinching cables or damaging components that protrude from circuit boards.

7. Using both hands, press lightly on the top and bottom sides of the cabinet until the front edge of the cabinet is inserted into the braided gasket groove around the full periphery of the front cabinet frame.

8. Pull the power cord through the rear cabinet frame, align the cutout portion in the frame for proper fit at the regulating range selector cover, and work the frame into place.

9. Set the feet and screws in place and with one hand exert a light downward pressure on the rear cabinet frame. Press lightly on the top and bottom sides of cabinet with the other hand, checking that cabinet edge is properly seated in the gasket groove of both front and rear frames. Continue to exert a downward pressure and tighten the six screws of the rear frame to a snug fit. Do not over-tighten these screws.

**Rack Adapter Removal**

The Rack Adapter can be removed from the instrument in the following manner.

1. Remove the hardware that fastens the Rack Adapter to the rack and pull the adapter partially out. Disconnect the instrument power cord from the power source and remove any interconnecting cables.

**NOTE**

*If it is desired to tilt the Rack Adapter and instrument, remove a screw from the rear of each slide section mounted to the Rack Adapter. These securing screws are an important part of the mounting and should be installed when tilt operation is not necessary.*

2. Remove the Rack Adapter, with instrument, from the rack and set the bottom of the complete assembly on a flat surface.

3. Remove two setscrews from the top front of Rack Adapter chassis, (0.125-inch Allen wrench is required to remove the setscrews). It may be helpful to use the diagrams in Section 10, Replaceable Mechanical Parts List, for the locations of parts.

4. Remove 10 screws that secure the rear support plate to an angle bracket on one side, to the Rack Adapter chassis on the opposite side, and to the rear of the instrument. Remove the rear support plate and blue plastic rear frame.

5. Slide the instrument forward through the adapter cabinet, using both hands (on front and rear) to lift and guide the instrument until separated from the Rack Adapter.

**WARNING**

*Dangerous potentials exist at several points throughout this instrument. When the instrument is operated with the Rack Adapter removed, do not touch exposed connections or components. Some transistors may have elevated cases. Disconnect power before cleaning the instrument or replacing parts.*

**Rack Adapter Installation**

The Rack Adapter should be installed in the following manner.

1. Disconnect the instrument power cord from the power source.

2. Verify proper assembly of all sections of the instrument if parts were removed or replaced. It may be helpful to use the diagrams in Section 10, Replaceable Mechanical Parts List, for the locations of parts.

**WARNING**

*During rackmount installation, interchanging the left and right slide-out track assemblies defeats the extension stop (safety latch) feature of the tracks. Equipment could, when extended, come out of the slides and fall from the rack, possibly causing personal injury and equipment damage.*

*When mounting the supplied slide-out tracks, inspect both assemblies to find the LH (left hand) and RH (right hand) designations to determine correct placement. Install the LH assembly to your left side as you face the front of the rack and install the RH assembly to your right side. Refer to the rackmounting instructions in this manual for complete information.*

3. Set the bottom of the Rack Adapter on a flat surface, pull the power cord through the cabinet portion of the Rack Adapter, and carefully slide the instrument rearward using both hands (on front and rear) to lift and guide the instrument until fully inserted. Avoid pinching cables or damaging components that protrude from circuit boards.

4. Check that the front edge of the cabinet portion of the Rack Adapter is inserted into the braided gasket groove around the full periphery of the instrument front frame. Pull the power cord through the blue plastic rear frame. Align the cutout portion in the plastic frame for proper fit at the regulating-range selector cover and work the frame into place.

5. Apply the rear support bracket to the rear of the Rack Adapter. Install, without tightening, six screws that secure the rear support bracket through the blue plastic frame to the rear of the instrument and four screws that secure the rear support bracket to an angle bracket and to the Rack Adapter chassis.

6. Check that all parts of the complete assembly are properly seated, then tighten the screws at the rear of the instrument and the screws at the adapter chassis to a snug fit. Do not overtighten these screws.

7. Install two setscrews at the top front of the Rack Adapter chassis (0.125-inch Allen wrench is required to install the setscrews).

8. Mount the Rack Adapter slide sections to the rack slide assemblies, connect the power cord, connect any interconnecting cables, push the Rack Adapter into final operating position, and install the adapter-to-rack hardware.

## PREVENTIVE MAINTENANCE

### Introduction

Preventive maintenance consists primarily of cleaning and visual inspection. When performed on a regular basis, preventive maintenance can prevent instrument breakdown and ensure the reliability of this instrument. The severity of the environment to which the 465B is subjected will determine the frequency of maintenance. A convenient time to perform preventive maintenance is just prior to instrument performance checkout or adjustment procedure.

### Cleaning

The cabinet minimizes accumulation of dust inside the instrument. Operation without the cabinet in place necessitates more frequent cleaning. The front cover provides a measure of dust protection for the front panel and the crt

face. The front cover should be installed when storing or transporting the instrument.

**INTERIOR.** Accumulation of dust and dirt should be removed as often as operating conditions require. Dirt can cause overheating and component breakdown. Dirt on components acts as an insulating blanket, preventing efficient heat dissipation. It also provides an electrical conduction path that can result in instrument failure, especially under high humidity conditions. The best way to clean the interior is to blow off the accumulated dust with dry, low-pressure air (approximately 9 pounds per square inch). Remove any remaining dirt with a soft brush or a cloth dampened with a mild detergent and water solution. A cotton-tipped applicator is useful for cleaning in narrow spaces or for cleaning ceramic terminal strips and circuit boards.

### CAUTION

*Avoid the use of chemical cleaning agents that might damage the plastics used in this instrument. Do not use chemicals that contain acetone, benzene, toluene, xylene, petroleum ether, white kerosene, carbon tetrachloride, methylene chloride, trichloroethane, trichlorotrifluoroethane (Freon 113, -tf, -ta, -te, -tmc) and trichlorethylene. Recommended cleaning agents are isopropyl alcohol, kelite (1 part kelite, 20 parts water), and a solution of 1% mild detergent and 99% water.*

*Most spray circuit coolants contain Freon 12 as a propellant. Because many Freons adversely affect switch contacts, check the contents and brand name before using a spray coolant. The following brand names are acceptable coolants: Artic Freeze, Quik-Freeze, and Can-O-Gas. Do not use Zero Mist brand of circuit coolant. The only recommended circuit coolants for the volts/division attenuators are dry ice (CO<sub>2</sub>) or isopropyl alcohol.*

**SWITCH CONTACTS.** Most of the switches in the 465B are circuit-board mounted, cam-actuated contacts. Care must be exercised to preserve the high-frequency characteristics of these switches. Switch maintenance is seldom necessary, but if it is required, observe the following precautions.

Clean the switch contacts only with isopropyl alcohol, especially in the area of the vertical attenuator boards. Carbon-based solvents will damage the boards used for the attenuators. Apply the isopropyl alcohol with a camel hair brush. Do not use cotton swabs, as they tend to snag on contacts, possibly causing damage, and the contacts may hold strands of cotton, causing intermittent electrical contact.

**Maintenance****465B Service (SN B060000 & UP)**

**EXTERIOR.** Loose dust accumulated on the outside of the oscilloscope can be removed with a soft cloth or small paint brush. The paint brush is particularly useful for dislodging dirt on and around the front-panel controls. Dirt that remains can be removed with a soft cloth dampened in a mild solution of detergent and water. Abrasive cleaners should not be used.

**CRT.** Two plastic light filters, one blue and one clear, are provided with the oscilloscope. Clean the light filter and the crt face with a soft lint-free cloth dampened with denatured alcohol or a mild detergent and water solution. The optional crt mesh filter can be cleaned in the following manner.

1. Hold the filter in a vertical position and brush lightly with a Number 7 soft watercolor brush to remove light coatings of dust and lint.

2. Greasy residues or dried-on dirt can be removed with a solution of warm water and a neutral pH liquid detergent. Use the brush to lightly scrub the filter.

3. Rinse the filter thoroughly in clean water and allow to air dry.

4. If any lint or dirt remains, use clean low-pressure air (approximately 9 pounds per square inch) to remove it. Do not use tweezers or other hard cleaning tools on the filter, as the special finish may be damaged.

5. When not in use, store the mesh filter in a lint-free dust-proof container such as a plastic bag.

**AIR FILTER.** The air filter should be visually checked every few weeks and cleaned or replaced if dirty. More frequent inspections are required under severe operating conditions. The following procedure is suggested for cleaning the filter. If the filter is to be replaced, order new air filters from your local Tektronix Field Office or representative. Refer to the Replaceable Mechanical Parts List for ordering information.

1. Remove the filter by pulling it out of the retaining frame on the rear panel. Be careful not to drop any of the accumulated dirt into the instrument.

2. Flush the loose dirt from the filter with a stream of hot water.

3. Place the filter in a solution of mild detergent and hot water and let it soak for several minutes.

4. Squeeze the filter to wash out any remaining dirt.

5. Rinse the filter in clear water and allow it to dry.

6. Coat the dry filter with an air-filter adhesive (available from an air conditioner supplier, or see Maintenance Aids information at the end of this section).

7. Let the adhesive dry thoroughly.

8. Re-install the filter in the retaining frame.

**Visual Inspection**

The instrument should be inspected occasionally for such defects as broken connections, broken or damaged ceramic strips, improperly seated semiconductors, damaged or improperly installed circuit boards, and heat-damaged parts.

The corrective procedure for most visible defects is obvious; however, particular care must be taken if heat-damaged components are found. Overheating usually indicates other trouble in the instrument; therefore, it is important that the cause of overheating be corrected to prevent recurrence of the damage.

**Lubrication**

The fan motor and most of the potentiometers used in the 465B are permanently sealed and generally do not require periodic lubrication. The switches used in the 465B, both cam- and level-type, are installed with proper lubrication applied where necessary and will rarely require any additional lubrication. A regular periodic lubrication program for the 465B is not recommended.

**Semiconductor Checks**

Periodic checks of the transistors and other semiconductors in the oscilloscope are not recommended. The best check of semiconductor performance is actual operation in the instrument.

**Readjustment**

To ensure accurate measurements, check the adjustment of this instrument after each 1000 hours of operation or, if used infrequently, every six months. In addition, re-

placement of components may necessitate readjustment of the affected circuits. The adjustment procedure can also be helpful in localizing certain troubles in the instrument. In some cases, minor troubles may be revealed and/or corrected by readjustment. Complete adjustment instructions are given in the Adjustment Procedure section. If only a partial adjustment is performed, see the interaction chart, Table 5-1 for possible interactions with circuits not adjusted.

## TROUBLESHOOTING

### Introduction

The following information is provided to facilitate troubleshooting. Information contained in other sections of this manual should be used along with the following information to aid in locating the defective component. An understanding of the circuit operation is helpful in locating troubles, particularly where integrated circuits are used. See the Theory of Operation, Section 3, for this information.

### Troubleshooting Aids

**TROUBLESHOOTING CHARTS.** As an aid in locating problem areas, troubleshooting charts have been provided for the low-voltage power supplies, the  $-2450$  V power supply, and for a no-visible-display condition. These can be found on foldout pages in the Diagrams section.

**POWER DISTRIBUTION DIAGRAM.** As an aid in troubleshooting the power supplies, a power distribution diagram is provided on Diagram 16 in the foldout pages at the rear of this manual. The diagram shows the distribution for each voltage from the low-voltage power supply. It also shows the service jumpers that can be used to aid in isolating the power supply from the various circuit boards. Excessive loading on the low-voltage power supply by a circuit board can rapidly be traced to the faulty circuit board with the aid of the service jumpers. The service jumpers associated with a specific schematic diagram are indicated on the respective schematic diagram. The power distribution diagram should be used in conjunction with the power supply isolation procedures adjacent to troubleshooting diagrams located in the Diagrams section of this manual.

**GRID COORDINATE SYSTEM.** Each schematic diagram and circuit board illustration is sectioned by a grid system. A table listing the grid coordinates of each component shown is located adjacent to the schematic diagram. The table lists the grid location of components on both the schematic diagram and on the circuit board illustration to aid in cross referencing components between the schematic diagram and the circuit board illustration.

**DIAGRAMS.** Complete circuit diagrams are given on fold-out pages in the Diagrams section. The portions of the circuit mounted on circuit boards are enclosed within black lines. The component number and electrical value of each component in this instrument are shown on the diagrams (see the first page of the Diagrams section for definition of the reference designators used to identify components in this instrument). Important voltages and waveforms are also shown on the diagrams. The physical locations of the waveform test points are shown on the Circuit Board illustrations.

**CIRCUIT BOARD ILLUSTRATIONS.** In conjunction with each circuit diagram is a circuit board illustration. These can be found on the back of a pullout page preceding the circuit diagram to which it relates. Each circuit component shown on the circuit diagram is identified on the circuit board illustration by its component number. In general, the component numbers increase from the left side of the circuit board to the right side, and from the top to the bottom. The lowest component numbers will be at the top left corner, and the highest component numbers will be at the bottom right corner of the circuit board.

**ADJUSTMENT LOCATIONS ILLUSTRATIONS.** To aid in locating test points and adjustable components, the adjustment locations pullout pages (normally used with the adjustment procedure) permit rapid location of test points and adjustments, because only these components are identified.

**READ-ONLY MEMORY U1605 LOGIC TABLE.** Refer to the Vertical Switching Logic diagram located in the Diagrams section of this manual for the following discussion. Input signals to U1605, a read-only memory (ROM), are as follows:

Input lines  $A_0$  through  $A_2$  — Logic levels from the  $Q_0$ ,  $Q_1$ , and  $Q_2$  outputs of U1705 used to indicate the present state of the switching. ( $Q_0$ ,  $Q_1$ , and  $Q_2$  outputs are active when LO.)

Input lines  $A_3$  through  $A_6$  — Logic levels selected by the VERT MODE switches (CH 1, CH 2, ADD, and A TRIG VIEW). A HI logic level present indicates that the Vertical Mode is selected.

Input line  $A_7$  — Logic level controlled by the X-Y position of the A TIME/DIV switch. A LO logic level is present when X-Y Horizontal Display is selected.

After U1705 is clocked, ROM U1605 uses the present data on its input lines ( $A_0$  through  $A_7$ ) to select the next

**Maintenance**  
**465B Service (SN B060000 & UP)**

output switching state to be presented to U1705. There are four output lines from U1605, O<sub>1</sub> through O<sub>4</sub>. Output lines O<sub>1</sub> through O<sub>3</sub> carry the future data; the signal present on output line O<sub>4</sub> is the Chop Clock Oscillator enabling logic (HI enables).

In the partial table shown in Figure 6-2, no Vertical Modes are selected, and the present data from U1705 is an undefined column, (i.e., 000 is not a Vertical Mode selection). In the example given, the Chop Clock Oscillator will be enabled, and the next clock pulse to U1705 will switch U1705 output to 111. Table 6-1 shows that column 111 is the idle state of U1605 (the state switched to when no Vertical Modes are selected). In the idle column, the future state of U1705 will remain 111, and the Chop Clock Oscillator will not be enabled. Each row across the table indicates the possible future states of U1705, while the column headings indicate the possible present state. The order of priority in switching (when multiple Vertical Modes are selected) is CH 1, CH 2, ADD, then A TRIG VIEW.

To use the table, determine the Vertical Mode(s) selected. Follow that row across the table. If the output of U1705 is at the present state indicated by a column heading, the data given in that column is the future state of U1705.

**Example 1.** Assume CH 1 and CH 2 Vertical Modes are selected. The present data from the Vertical Mode Switch is 10011. Move across that row to the 000 column. The data given indicates that if the present state of U1705 is 000, the future state will be 110 (CH 1) and that the Chop Clock Oscillator will be enabled. Following across the row, each

column, except 110 (CH 1), gives the same future state. If the present state is CH 1, the future state will be 101 (CH 2). From there, it will switch back to CH 1 for the chopped display of the Channel 1 and Channel 2 input signals.

**Example 2.** Assume that X-Y Horizontal Display is selected. Go to any Vertical Mode selection in the bottom half of the table. All the columns indicate that regardless of the state of the U1705 output, the future state will be 101 (CH 2). When the output of U1705 goes to 101, the Chop Clock Oscillator will be turned off, and the Chop Clock to U1705 will cease.

**Example 3.** Assume ADD Vertical Mode is selected. In the Present Data from the Vertical Mode Switch column read 10100. Move across the row (adjacent to the data) to the 000 column and note that the future state of U1605 is 1100. The output state required to switch to the ADD display is 100. Trigger view is not selected, and both CH 1 and CH 2 are selected (LO logic level selects). The Chop Clock Oscillator will be enabled to clock U1705. After clocking, the Q<sub>0</sub> and Q<sub>1</sub> outputs (pins 3 and 6) of U1705 will be HI to gate U1805D and turn on transistor Q1636. This transistor supplies the extra current required to keep both CH 1 and CH 2 Diode Gates forward biased. In the case of the 000 state, it indicates that CH 1, CH 2, and A TRIG VIEW are selected for viewing together. While this output state exists, the Diode Gates will not be forward biased to allow this combination of signals to be displayed during the switching. If the ALT Vertical Mode is selected, the circuitry of the Vertical Mode Switch enables the Chop Clock Oscillator momentarily to switch U1605 to the selected state without waiting for the next Vert Alt Sync pulse from the Horizontal Display Logic circuit.

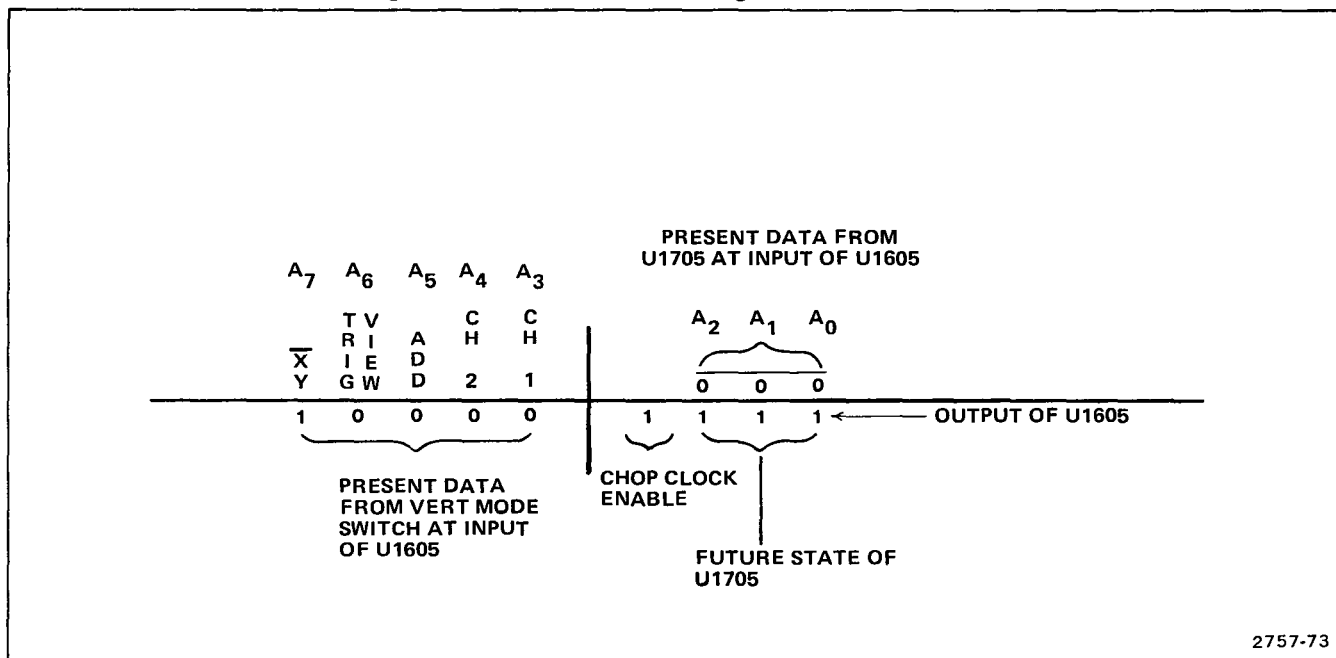


Figure 6-2. Partial Table 6-1.

Table 6-1  
READ-ONLY MEMORY U1605 LOGIC

VERT MODE PRESENT DATA AT U1605					UNDEFINED			TRIG VIEW	ADD	CH 2	CH 1	IDLE	
X Y	T R I G	V I E W	A D D	C H 2	C H 1	$\overline{000}$	$\overline{001}$	$\overline{010}$	$\overline{011}$	$\overline{100}$	$\overline{101}$	$\overline{110}$	$\overline{111}$
	1	0	0	0	0	0	1111	1111	1111	1111	1111	1111	1111
1	0	0	0	0	1	1110	1110	1110	1110	1110	1110	0110	1110
1	0	0	0	1	0	1101	1101	1101	1101	1101	0101	1101	1101
1	0	0	0	1	1	1110	1110	1110	1110	1110	1110	1101	1110
1	0	1	0	0	0	1100	1100	1100	1100	0100	1100	1100	1100
1	0	1	0	0	1	1110	1110	1110	1110	1110	1110	1100	1110
1	0	1	1	0	0	1101	1101	1101	1101	1101	1100	1101	1101
1	0	1	1	1	1	1110	1110	1110	1110	1110	1100	1101	1110
1	1	0	0	0	0	1011	1011	1011	0011	1011	1011	1011	1011
1	1	0	0	0	1	1110	1110	1110	1110	1110	1110	1011	1110
1	1	0	0	1	0	1101	1101	1101	1101	1101	1011	1101	1101
1	1	0	0	1	1	1110	1110	1110	1110	1110	1011	1101	1110
1	1	1	0	0	0	1100	1100	1100	1100	1011	1100	1100	1100
1	1	1	0	0	1	1110	1110	1110	1110	1011	1110	1100	1110
1	1	1	1	0	0	1101	1101	1101	1101	1011	1100	1101	1101
1	1	1	1	1	1	1110	1110	1110	1110	1011	1100	1101	1110
0	0	0	0	0	0	1101	1101	1101	1101	1101	0101	1101	1101
0	0	0	0	0	1	1101	1101	1101	1101	1101	0101	1101	1101
0	0	0	0	1	0	1101	1101	1101	1101	1101	0101	1101	1101
0	0	0	0	1	1	1101	1101	1101	1101	1101	0101	1101	1101
0	0	1	0	0	0	1101	1101	1101	1101	1101	0101	1101	1101
0	0	1	0	0	1	1101	1101	1101	1101	1101	0101	1101	1101
0	0	1	1	0	0	1101	1101	1101	1101	1101	0101	1101	1101
0	0	1	1	1	1	1101	1101	1101	1101	1101	0101	1101	1101
0	1	0	0	0	0	1101	1101	1101	1101	1101	0101	1101	1101
0	1	0	0	0	1	1101	1101	1101	1101	1101	0101	1101	1101
0	1	0	0	1	0	1101	1101	1101	1101	1101	0101	1101	1101
0	1	0	0	1	1	1101	1101	1101	1101	1101	0101	1101	1101
0	1	1	0	0	0	1101	1101	1101	1101	1101	0101	1101	1101
0	1	1	0	0	1	1101	1101	1101	1101	1101	0101	1101	1101
0	1	1	1	0	0	1101	1101	1101	1101	1101	0101	1101	1101
0	1	1	1	1	1	1101	1101	1101	1101	1101	0101	1101	1101

**Maintenance****465B Service (SN B060000 & UP)**

**RESISTOR COLOR CODE.** In addition to the brown composition resistors, some metal-film resistors and some wire-wound resistors are used in the 465B. The resistance values of wire-wound resistors are usually printed on the body of the component. The resistance values of composition resistors and metal-film resistors are color coded on the components with EIA color code (some metal-film resistors may have the value printed on the body). The color code is read starting with the stripe nearest the end of the resistor. Composition resistors have four stripes which consist of two significant figures, a multiplier, and a tolerance value (see Figure 6-3). Metal-film resistors have five stripes consisting of three significant figures, a multiplier, and a tolerance value.

**CAPACITOR MARKINGS.** The capacitance values of common disc capacitors and small electrolytics are marked on the side of the component body. The white ceramic capacitors used in the 465B are color coded in picofarads, using a modified EIA code (see Figure 6-3). The dipped tantalum capacitors used in the 465B are color coded in microfarads (see Figure 6-3). The color dot indicates the positive lead and voltage rating. Be careful to observe the polarity and voltage rating, as capacitors are easily destroyed by reverse or over voltage.

**DIODE COLOR CODE.** The cathode end of each glass-encased diode is indicated by a stripe, a series of stripes, or a dot. For most silicon or germanium diodes with a series of stripes, the color code identifies the three significant digits of the Tektronix Part Number using the resistor color-code system (e.g., a diode color-coded pink or blue, brown - grey - green indicates Tektronix Part Number 152-0185-00). The cathode and anode ends of metal-encased diodes can be identified by the diode symbol marked on the body.

**SEMICONDUCTOR LEAD CONFIGURATIONS.** Typical semiconductor lead configurations are shown at the beginning of the diagrams section.

**Troubleshooting Equipment**

Refer to Table 6-2 in Maintenance Aid information at the end of this section for suggested test equipment.

**Troubleshooting Techniques**

This troubleshooting procedure is arranged in an order that checks the simple trouble possibilities before proceeding with extensive troubleshooting. The first few checks ensure proper connection, operation, and calibration. If the trouble is not located by these checks, the remaining steps will aid in locating the defective component. When the defective component is located, it should be replaced following the replacement procedure given under Corrective Maintenance.

**CHECK CONTROL SETTINGS.** Incorrect control settings can indicate a trouble that does not exist. If there is any question about the correct function or operation of any control, see the Operating Instructions section of this manual or the 465B Operators Manual.

**CHECK ASSOCIATED EQUIPMENT.** Before proceeding with troubleshooting, check that the equipment used with this instrument is operating correctly. Check that the signal is properly connected and that the interconnecting cables are not defective. Also, check the power source.

**CHECK INSTRUMENT CALIBRATION.** Check the calibration of this instrument, or the affected circuit if the trouble exists in one circuit. The apparent trouble may only be a result of misadjustment and may be corrected by adjustment. Complete adjustment instructions are given in the Adjustment Procedure section of this manual.

**VISUAL CHECK.** Visually check the portion of the instrument in which the trouble is located. Many troubles can be located by visible indications such as unsoldered connections, broken wires, damaged circuit boards, damaged components, etc.

**ISOLATE TROUBLE TO A CIRCUIT.** To isolate trouble to a particular circuit, note the trouble symptom. The symptom often identifies the circuit in which the trouble is located. When trouble symptoms appear in more than one circuit, check the power supplies, then check the affected circuits. If the trouble has been isolated to a power supply, follow the Troubleshooting Chart for that supply. The power supplies are interdependent. All the low-voltage power supplies depend on +55 V for reference. If more than one supply appears defective, repair them in the following order: +55 V, +110 V, +15 V, -8 V, and -2450 V.

**CHECK CIRCUIT BOARD INTERCONNECTIONS.** After the trouble has been isolated to a particular circuit, check for loose or broken connections, improperly seated transistors, and heat-damaged components.


**CHECK VOLTAGES AND WAVEFORMS.** Often the defective component can be located by checking for the correct voltage or waveform in the circuit. Typical voltages are given on the diagrams. Waveform are shown at the left of the circuit diagram.

**NOTE**

*Voltages and waveforms given on the diagrams are not absolute and may vary slightly between instruments. To obtain operating conditions similar to those used to take these readings, see the voltage and waveform setup procedures at the beginning of the Diagrams section for the preliminary equipment setup. Note the recommended test equipment, front panel control settings, voltage and waveform conditions, and test equipment cable connection instructions. The 465B Oscilloscope control settings required to obtain the given waveforms and voltages are located adjacent to the waveform diagrams. Changes to the control settings from the preliminary setup, other than those given, are not required.*

COLOR CODE

1861-20 A

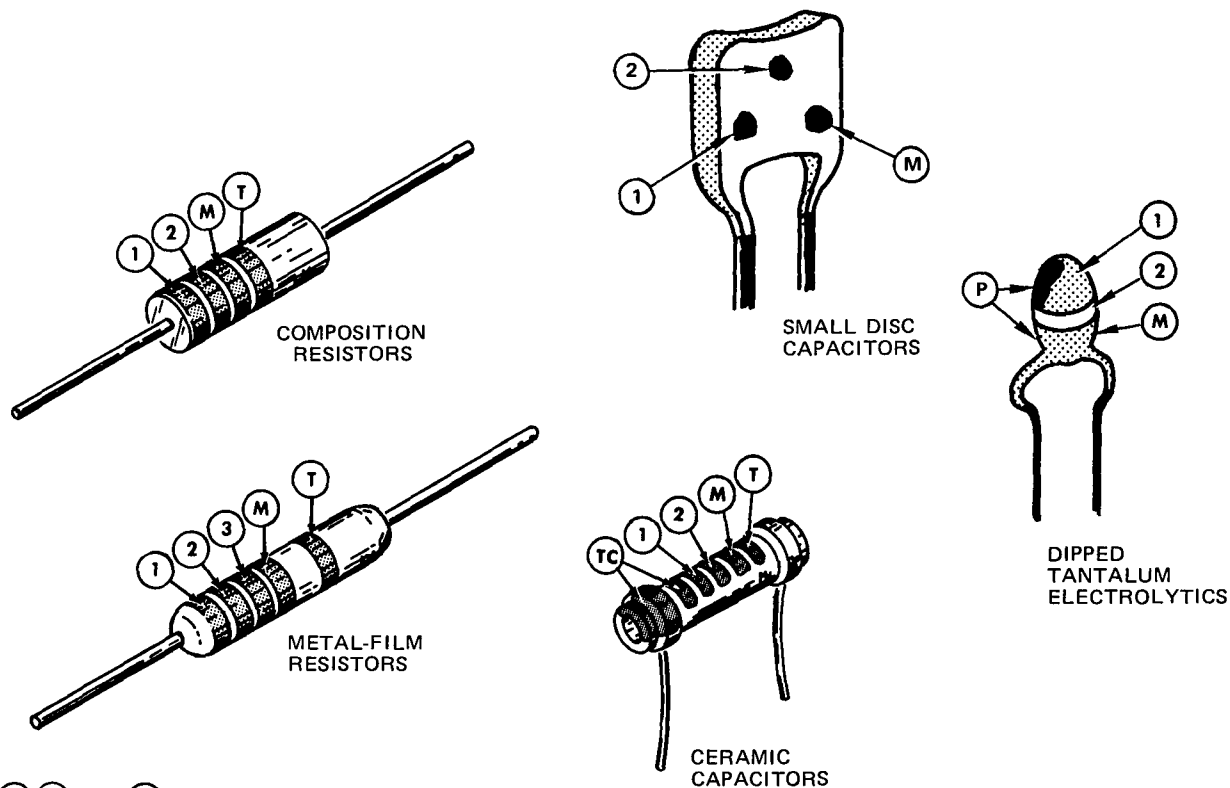

① ② and ③ — 1st, 2nd, and 3rd significant figures

Ⓜ —multiplier      Ⓣ —tolerance

ⓉⓈ —temperature coefficient

Ⓟ —polarity and voltage rating

Ⓣ and/or ⓉⓈ color code may not be present on some capacitors

COLOR	SIGNIFICANT FIGURES	RESISTORS		CAPACITORS			DIPPED TANTALUM VOLTAGE RATING
		MULTIPLIER	TOLERANCE	MULTIPLIER	TOLERANCE		
					over 10 pF	under 10 pF	
BLACK	0	1	---	1	±20%	±2 pF	4 VDC
BROWN	1	10	±1%	10	±1%	±0.1 pF	6 VDC
RED	2	10 <sup>2</sup> or 100	±2%	10 <sup>2</sup> or 100	±2%	---	10 VDC
ORANGE	3	10 <sup>3</sup> or 1 K	±3%	10 <sup>3</sup> or 1000	±3%	---	15 VDC
YELLOW	4	10 <sup>4</sup> or 10 K	±4%	10 <sup>4</sup> or 10,000	+100% -9%	---	20 VDC
GREEN	5	10 <sup>5</sup> or 100 K	±½%	10 <sup>5</sup> or 100,000	±5%	±0.5 pF	25 VDC
BLUE	6	10 <sup>6</sup> or 1 M	±¼%	10 <sup>6</sup> or 1,000,000	---	---	35 VDC
VIOLET	7	---	±1/10%	---	---	---	50 VDC
GRAY	8	---	---	10 <sup>-2</sup> or 0.01	+80% -20%	±0.25 pF	---
WHITE	9	---	---	10 <sup>-1</sup> or 0.1	±10%	±1 pF	3 VDC
GOLD	-	10 <sup>-1</sup> or 0.1	±5%	---	---	---	---
SILVER	-	10 <sup>-2</sup> or 0.01	±10%	---	---	---	---
NONE	-	---	±20%	---	±10%	±1 pF	---

Figure 6-3. Color codes.



## Maintenance 465B Service (SN B060000 & UP)

**CHECK INDIVIDUAL COMPONENTS.** The following procedures describe methods of checking individual components. Components that are soldered in place are best checked by disconnecting one end. This isolates the measurement from the effects of surrounding circuitry.

### WARNING

*The Power switch must be turned off before removing or replacing components.*

**Semiconductors.** A good check of transistor operation is actual performance under operating conditions. A transistor can be most effectively checked by substituting a new component for it (or one which has been checked previously). However, be sure that circuit conditions are not such that a replacement transistor might also be damaged. If substitute transistors are not available, use a dynamic tester. Static-type testers are not recommended, since they do not check operation under simulated operating conditions.

When troubleshooting transistors in the circuit with a voltmeter, measure the emitter-to-base and emitter-to-collector voltages to determine if the voltages are consistent with normal circuit voltage. Voltages across a transistor vary with the type of device and its circuit function. Some of these voltages are predictable. The emitter-to-base voltage of a conducting silicon transistor will normally be 0.6 V to 0.8 V. The emitter-to-collector voltage of saturated transistors is approximately 0.2 V. Because these values are small, the best way to check them is by connecting the voltmeter across the junction and use a sensitive voltmeter setting. This method is preferable to comparing two voltages taken with respect to ground (both leads of the voltmeter must be isolated from ground, if this method is used). If values less than these are obtained, either the device is short-circuited or no current is flowing in the circuit. If values are in excess of the base-emitter voltages given, the junction is back-biased or the device is defective. Values in excess of those given for emitter-collector voltages could indicate either a non-saturated device operating normally, or a defective (open-circuited) transistor. If the device is conducting, voltage will be developed across resistances in series with it; if it is open, no voltage will be developed across resistances in series with it unless current is being supplied by a parallel path.

When troubleshooting a field-effect transistor, the voltage across its elements can be checked in the same manner as for a transistor. However, it should be remembered that in the normal depletion mode of operation, the gate-to-source junction is reverse biased; in the enhanced mode, the junction is forward biased.

Integrated circuits (IC) can be checked with a voltmeter, test oscilloscope, or by direct substitution. A good understanding of circuit operation is essential to troubleshooting circuits using IC. Use care when checking voltages and waveforms around the IC so that adjacent leads are not shorted together. Typical semiconductor lead configurations are shown at the beginning of the Diagrams section.

**Diodes.** A diode can be checked for an open or a short circuit by measuring the resistance between terminals with an ohmmeter set to the R X 1k scale. The diode resistance should be very high in one direction and very low when the meter leads are reversed. Do not check tunnel diodes or back diodes with an ohmmeter.

### CAUTION

*Do not use an ohmmeter scale that has a high internal current. High currents may damage the diode. Do not measure tunnel diodes with an ohmmeter; use a dynamic tester (such as a TEKTRONIX Type 576 Transistor-Curve Tracer). Checks on diodes can be performed in much the same manner as on transistor emitter-to-base junctions. Silicon diodes should have 0.6 V to 0.8 V across the junction when conducting. Higher readings indicate that they are either back biased or defective, depending on polarity.*

**Resistors.** Check the resistors with an ohmmeter. Check the Replaceable Electrical Parts List for tolerance of the resistors used in this instrument. Resistors normally do not require replacement unless the measured value varies widely from the specified value.

**Inductors.** Check for open inductors by checking continuity with an ohmmeter. Shorted or partially shorted inductors can usually be found by checking the waveform response when high-frequency signals are passed through the circuit.

**Capacitors.** A leaky or shorted capacitor can best be detected by checking resistance with an ohmmeter on the highest scale. Do not exceed the voltage rating of the capacitor. The resistance reading should be high after initial charge of the capacitor. An open capacitor can be detected with a capacitance meter or by checking whether the capacitor passes ac signals.

**Attenuators.** The thick film attenuators are best checked by substitution. If only one channel of the 465B is not operating properly, and there is reason to believe an attenuator is defective, replace the suspected attenuator with the same

attenuator from the other channel and check instrument operation. If proper operation results, order a new attenuator.

**REPAIR AND READJUST THE CIRCUIT.** If any defective parts are located, follow the replacement procedures given in this section. Be sure to check the performance of any circuit that was repaired or that had any electrical components replaced. Readjustment of the affected circuit may be necessary. Check Table 5-1 in the Calibration Procedure section of this manual for possible adjustment interaction.

### SELECTABLE COMPONENTS

Following is a list of selectable components followed by a procedure to determine the value for best performance of your instrument.

**Selecting R1299 or R1798:** If Q1297 or Q1698 are replaced in the vertical input circuit, the values of R1299 (CH 1) or R1798 (CH 2) may have to be selected from values between 100  $\Omega$  and 1000  $\Omega$  to allow proper calibration of the 465B. To select the optimum values of R1299 or R1798.

a. Set generator for a 6 div display of fast-rise square-wave signal with VOLTS/DIV set to 5 mV.

b. Adjust the 465B for best flat-top waveform per Adjustment Procedure steps 19 or 21.

c. Set VOLTS/DIV to 20 mV and set generator for a 6-div display.

d. If the first 10 ns of the waveform top is rolled-down, select a lower value for R1299 or R1798. If the first 10 ns is rolled up, select a higher value resistor.

e. Repeat parts a through d for best overall results. Re-check step 16, Low-frequency Compensation.

**Selecting R4268, R4165, or R4363:** If magnified sweep non-linearity was observed when performing step 15 of the Adjustment Procedure, perform the following parts a through i to select the correct value for R4268 or perform parts j through m to select the correct values for R4165 and R4363.

a. Set the TIME/DIV switch to X-Y (set INTENSITY to display a low intensity dot).

b. Set horizontal POSITION to place the dot at the center vertical graticule line.

c. Set the digital multimeter (see Maintenance Aids) for a 0-200 dc volts range, and connect one multimeter test lead to the left crt deflection plate lead and the other multimeter test lead to the right crt deflection plate lead.

d. Set the horizontal POSITION control to provide a zero volts dc reading on the multimeter.

e. Move one multimeter test lead from a deflection plate lead to chassis ground.

f. Check for a multimeter reading of 48 V to 53 V.

g. If the reading in part f is outside the limits, select a value (higher or lower) for R4268 that provides a reading within limits (if reading is within limits proceed to part j). Decreasing the value of R4268 will increase the reading. A 1000  $\Omega$  change in R4268 value will change the meter reading by about 2 V. The nominal value for R4268 is 13 K $\Omega$ .

h. Repeat parts c through g as required, then disconnect the digital multimeter.

i. Perform steps 14 and 15 of the Horizontal Adjustment procedure with time markers applied to the CH 1 input.

j. If magnified sweep timing at the start or end of the non-excluded portion of sweep is still outside of the limit with the optimum value of R4268 selected, proceed as follows:

k. Set the TIME/DIV switch to .02  $\mu$ s; press X10 MAG button in; set HORIZ DISPLAY to A; and apply 5 ns time markers to CH 1 input.

l. Increase or decrease the value of R4165 (from nominal value of 33  $\Omega$ ) and R4363 (from nominal value of 120  $\Omega$ ) in approximately 10% steps to achieve optimum linearity at start and end of the non-excluded portions of the magnified sweep. Decreasing the values of both resistors causes the start of the magnified sweep to expand and the end of the magnified sweep to contract. Increasing the values of both resistors has the opposite effect. Optimum results should be achieved with R4165 and R4363 values within 40% of their nominal values.

m. Repeat parts i through l as necessary.

**Maintenance**  
**465B Service (SN B060000 & UP)**

**CORRECTIVE MAINTENANCE**

**Introduction**

Corrective maintenance consists of component replacement and instrument repair. Special techniques required to replace components in this instrument are given here.

**Maintenance Precautions**

To reduce the possibility of personal injury or instrument damage, observe the following precautions.

1. Disconnect instrument from power source before removing or installing components.
2. Use care not to interconnect instrument grounds which may be at different potentials (cross grounding).
3. Do not use excessive heat when soldering. This can damage circuit boards and semiconductors.

**Static-Sensitive Components**



*Static discharge can damage any semiconductor component in this instrument.*

This instrument contains electrical components that are susceptible to damage from static discharge. See Relative Susceptibility Table 6-2 for various classes of semiconductors. Static voltages of 1 kV to 30 kV are common in unprotected environments.

Observe the following precautions to avoid damage.

1. Minimize handling of static-sensitive components.
2. Transport and store static-sensitive components or assemblies in their original containers, on a metal rail, or on conductive foam. Label any package that contains static-sensitive assemblies or components.

3. Discharge the static voltage from your body by wearing a wrist strap while handling these components. Servicing static-sensitive assemblies or components should be performed only at a static-free work station by qualified service personnel.
4. Nothing capable of generating or holding a static charge should be allowed on the work station surface.
5. Keep the component leads shorted together whenever possible.
6. Pick up components by the body, never by the leads.
7. Do not slide the components over any surface.
8. Avoid handling components in areas that have a floor or work-surface covering capable of generating a static charge.
9. Use a soldering iron that is connected to earth ground.
10. Use only special antistatic suction type or wick type desoldering tools.

**Table 6-2**

**RELATIVE SUSCEPTIBILITY  
 TO STATIC DISCHARGE DAMAGE**

Semiconductor Classes	Relative Susceptibility Levels <sup>a</sup>
MOS or CMOS microcircuits or discretes, or linear microcircuits with MOS inputs. (Most Sensitive)	1
ECL	2
Schottky signal diodes	3
Schottky TTL	4
High-frequency bipolar transistors	5
JFETs	6
Linear microcircuits	7
Low-power Schottky TTL	8
TTL (Least Sensitive)	9

<sup>a</sup>Voltage equivalent for levels:

- 1 = 100 to 500 V    4 = 500 V    7 = 400 to 1000 V(est.)  
 2 = 200 to 500 V    5 = 400 to 600 V    8 = 900 V  
 3 = 250 V    6 = 600 to 800 V    9 = 1200 V

(Voltage discharged from a 100 pF capacitor through a resistance of 100 Ω.)

## Obtaining Replacement Parts

**STANDARD PARTS.** Most electrical and mechanical parts can be obtained through your local Tektronix Field Office or representative. However, you should be able to obtain many of the standard electronic components from a local commercial source in your area. Before you purchase or order a part from a source other than Tektronix, Inc., please check the Replaceable Electrical Parts List for the proper value, rating, tolerance and description.

### NOTE

*Physical size and shape of a component may affect instrument performance, particularly at high frequencies. Always use direct-replacement components, unless it is known that a substitute will not degrade instrument performance.*

**SPECIAL PARTS.** In addition to the standard electronic components, some special components are used in the 465B. These components are manufactured or selected by Tektronix, Inc. to meet specific performance requirements, or are manufactured for Tektronix, Inc. in accordance with our specifications (see Cross Index-Manufacturers Code Number to Manufacture in Replaceable Electrical Parts List for code numbers). Most of the mechanical parts used in this instrument have been manufactured by Tektronix, Inc., Order all special parts directly from your local Tektronix Field Office or representative.

**ORDERING PARTS.** When ordering replacement parts from Tektronix, Inc., it is imperative that all of the following information be included in order to ensure receiving the proper parts.

1. Instrument type (include modification or option numbers).
2. Instrument serial number.
3. A description of the part (if electrical, include the circuit number).
4. Tektronix part number.

## Soldering Techniques

### WARNING

*Always disconnect the instrument from the power source before attempting to solder in the instrument.*

Ordinary 60/40 solder and a 35- to 40-W pencil-type soldering iron can be used to accomplish the majority of the soldering. If a higher wattage-rating soldering iron is used on the etched circuit boards, excessive heat can cause the etched circuit wiring to separate from the board base material.

### CAUTION

*The Vertical Preamplifier Attenuator circuit boards are made of material easily damaged by excessive heat. When soldering to these boards, do not use a soldering iron with a rating of more than approximately 15 W. Avoid prolonged applications of heat to circuit-board connections. Use only isopropyl alcohol when cleaning this circuit board.*

The following technique should be used to replace a component on the circuit board. Most components can be replaced without removing the boards from the instrument.

1. Grip the component lead with long-nose pliers. Touch the soldering iron to the lead at the solder connection. Do not lay the iron directly on the board, since it may damage the board.
2. When the solder begins to melt, pull the lead out gently. This should leave a clean hole in the board. If not, the hole can be cleaned by reheating the solder and placing a sharp object such as a toothpick into the hole to clean it out. A vacuum-type desoldering tool can also be used for this purpose.
3. Bend the leads of the new component to fit the holes in the board. If the component is replaced while the board is mounted in the instrument, cut the leads so they will just protrude through the board. Insert the leads into the holes in the board so the component is firmly seated against the board (or as positioned originally). If it does not seat properly, heat the solder and gently press the component into place.

**Maintenance****465B Service (SN B060000 & UP)**

4. Touch the iron to the connection and apply a small amount of solder to make a firm solder joint. To protect heat-sensitive components, hold the lead between the component body and the solder joint with a pair of long-nose pliers or other heat sink.

5. Clip the excess lead that protrudes through the board (if not clipped in step 3).

6. Clean the area around the solder connection with a flux-remover solvent. Be careful not to remove information printed on the board.

When soldering to the ceramic strips in the instrument, a slightly larger soldering iron can be used. It is recommended that a solder containing about 3% silver be used when soldering to these strips to avoid destroying the bond to the ceramic material. This bond can be broken by repeated use of ordinary tin-lead solder or by the application of too much heat; however, occasional use of ordinary solder will not break the bond, if excessive heat is not applied.

If it becomes necessary to solder in the general area of any of the high-frequency contacts in the instrument, clean the contacts immediately upon completion of the soldering. Refer to the Switch Contacts paragraph in the Preventive Maintenance part of this section for recommended cleaners and procedures.

**Component Removal and Replacement****WARNING**

*Always disconnect the instrument from the power source before attempting to replace components.*

**CIRCUIT BOARDS.** Occasionally it may be necessary to gain access to the reverse side of a circuit board or to remove one circuit board to gain access to another. The following procedures outline the necessary steps to facilitate instrument disassembly and reassembly. Most of the connections to the circuit boards in the instrument are made with pin connectors. However, some connections are soldered to the board. Observe the soldering precautions given under Soldering Techniques in this section.

**VERTICAL PREAMPLIFIER ASSEMBLY.** Remove and replace this assembly as follows.

1. Remove instrument wrap-around cabinet in the manner given under Cabinet Removal at the beginning of this section.

2. Loosen front setscrews in the Vertical POSITION control shaft couplers (0.050" Allen wrench required) and the VAR VOLTS/DIV control shaft couplers. Slide shafts out of the couplers and remove them from the instrument.

3. Disconnect the INVERT and 20 MHz BW LIMIT push-button extension shafts from the switch shafts. Insert a scribe or similar tool between the end of the white plastic shaft and the inside of the black plastic extension shaft then pry gently. Extension shafts will snap back into position when reassembling.

4. Disconnect the following wires and cables.

a. Ten coaxial cables from the Preamplifier circuit board. Make a note of cable color codes to aid in proper installation during reassembly.

b. Unplug the delay-line connection from the end of the Preamplifier circuit board toward the rear of the instrument.

c. Locate the ground braid (near the High Voltage shield) connecting the Preamplifier circuit board to the Interface circuit board. Unsolder the end of the braid attached to the Preamplifier circuit board.

d. Unplug P1565, a three-wire connector near the middle of the Preamplifier circuit board.

e. Unplug P1505, an eight-wire connector near the rear of the Preamplifier circuit board.

5. Remove 10 screws from attenuator covers (five in each cover) and lift covers from attenuator assemblies.

6. Unsolder two resistors that connect from the Vertical Preamplifier circuit board to the Attenuator boards.

7. Remove six circuit board hold-down screws from the Preamplifier circuit board and remove board from the instrument.

8. To replace the Vertical Preamplifier circuit board, use the reverse of the removal steps.

**VERTICAL MODE SWITCH AND ATTENUATORS.** Remove and replace these assemblies as follows.

1. Loosen front setscrews in the Vertical POSITION control shaft couplers and the VAR VOLTS/DIV control shaft couplers. Slide shafts out of the couplers and remove them from the instrument.

2. Disconnect INVERT and 20 MHz BW LIMIT push-button extension shafts from the switch shafts. Insert a scribe or similar tool between the end of the white plastic shaft and the inside of the black plastic extension shaft, then pry gently. Extension shafts will snap back into position when reassembling.

3. Loosen six Vertical Preamplifier board hold-down screws (do not remove).

4. Remove knobs from the VOLTS/DIV switches. Loosen setscrews and pull to remove (requires a 1/16" Allen wrench).

5. Remove the AC-GND-DC level switch knobs by pulling them straight off.

6. Unplug both input coupling capacitors from the board. Bend capacitors out of the way, leaving the soldered lead attached.

7. Remove four nuts securing the attenuator chassis to the instrument front casting (1/4" nutdriver required).

8. Disconnect the following wires and connectors.

a. P5232, a three-wire connector (to the Interface circuit board).

b. P5236 and P5235, two-wire connectors (to the VAR VOLTS/DIV potentiometers).

c. P5036, a six-wire connector (to the CH 1 and CH 2 VOLTS/DIV UNCAL LED and the 20 MHz BW LIMIT LED).

d. P5001, an eight-wire connector at rear of Vertical Mode Switch circuit board (to the Preamplifier circuit board).

e. P5056 and P5265, three-wire connectors (to the Probe Coding boards).

f. Single red lead near the stand-off post at the rear of the Vertical Mode Switch circuit board.

9. Remove securing screw and hexagonal stand-off post from the rear of the Vertical Mode Switch circuit board.

10. Remove Vertical Mode Switch circuit board from the instrument.

11. To reinstall the Vertical Mode Switch and attenuators, use the reverse of the removal steps.

**TRIGGER GENERATOR AND SWEEP LOGIC BOARD.**  
Remove and replace this board as follows.

1. Disconnect the following cables and wires.

a. Eight coaxial cables from component side of the Trigger Generator and Sweep Logic circuit board. Make note of cable color codes to aid in proper installation when reassembling.

b. P7010 and P7305, five-wire connectors (to the A and B TRIGGER SLOPE controls).

c. P7204, a four-wire connector (to TRIG and READY LED). Guide the connector through the slotted hole when removing the circuit board.

d. P7105, a two-wire connector (to POWER LED).

e. P7052, a three-wire connector near top center of Trigger Generator and Sweep Logic circuit board.

f. Unsolder the wires from the External Trigger Input connectors.

2. Remove POWER-switch-actuator rod from the plastic holder on the switch. Pry rod out of the holder with a small flat-bladed screwdriver and remove rod from the instrument.

3. Remove POWER switch bracket from the circuit board (3/16" wrench or nutdriver required). The white plastic circuit board support on back side of board may fall off when circuit board hold-down screws are removed; save it for reinstallation.

4. Remove five circuit board hold-down screws (Phillips screwdriver required) from the board (two at rear, two at front, and one in a post at top center of the board). Also remove post (3/16" wrench or nutdriver required).

5. Unplug Trigger Generator and Sweep Logic circuit board by prying Trigger board away from Interface board at the two white interboard connectors (at bottom edge of the Trigger board).

6. Move Trigger board to the rear until Trigger switches clear the front casting to remove the assembly from the in-

**Maintenance**  
**465B Service (SN B060000 & UP)**

strument. Exercise caution to avoid damaging the connector pins on the Interface board.

7. To reinstall the Trigger Generator and Sweep Logic circuit board, reverse the order of the removal steps. If indexing of the Trigger switches was disturbed, a series of alignment steps will be required to return the indexing to its correct position. After each adjustment to the switch positioning, the board must be reinstalled to check out the switch operation.

**SWEEP TIMING CIRCUIT BOARD.** Remove and replace this board as follows.

1. Disconnect the following wires.
  - a. P6014, a two-wire connector (to main cable harness).
  - b. P6002, a three-wire connector (to DELAY TIME POSITION potentiometer).
  - c. P6001, a four-wire connector (to X10 MAG and UNCAL LED).
2. Remove VAR TIME/DIV, A TIME/DIV, and B TIME/DIV knobs (1/16" and 5/64" Allen wrenches required). The VAR knob has one externally accessible Allen setscrew, and the large gray knob has two externally accessible Allen setscrews. The clear plastic skirt knob has two Allen setscrews that are accessible from behind the front panel casting. Black spacing rings may fall out; save them for reinstallation.
3. Remove the board hold-down screw and the hexagonal rod from the Sweep Timing circuit board (Phillips screwdriver and 3/16" wrench or nutdriver required).

4. Use a flat-blade screwdriver to pry the Timing board away from the Interface board. Gently pull away the corner of the Interface board near the B External Trigger input connector and simultaneously lift up on the Timing board near the rear to fully disengage connector pins from the Interface board.

5. To reinstall Timing board, reverse the order of the removal steps.

**VERTICAL OUTPUT BOARD REMOVAL.** Remove and replace this board as follows.

1. Unplug P4295, a six-wire connector at the top front corner of Vertical Output board.

2. Disconnect two wires from the crt neck. (Use long-nose pliers and gently pull connectors from the pins on the crt neck. Pull straight away from the crt neck to avoid putting a side strain on the metal-to-glass neck-pin seal.)

3. Unplug the delay-line terminal from the top right corner of the board.

4. Remove the integrated circuit mounting nut from main chassis. Use a 1/4" open-end wrench to loosen the nut.

5. Remove two circuit board hold-down screws along the top edge of the board and remove Vertical Output circuit board from the instrument. Save the nylon posts (located behind front edge of board) for reinstallation.

6. To reinstall Vertical Output circuit board, reverse the order of the removal steps.

**MAIN INTERFACE BOARD REMOVAL.** If repair is necessary on reverse side of the Main Interface board, it is possible to gain access to that area by removal of one or two circuit boards as previously outlined. Consider this first before proceeding with Main Interface board removal procedure. (There is no reason to remove the Main Interface board except for exchange.)

**CAUTION**

*If the Main Interface board becomes defective, it is recommended that your local Tektronix Field Office or representative be contacted to arrange instrument repair at a Tektronix Service Center.*

The Main Interface board can be removed as follows.

1. Remove Trigger Generator and Sweep Logic board as previously outlined.
2. Position the instrument with the front to your right and the Interface board facing you.
3. Remove the high-voltage shield from Interface board.
4. Remove BEAM FIND and X10 MAG push-button extension shafts. Insert a scribe or small screwdriver between the end of the white plastic switch shaft and the inside of the black plastic extension shaft, then pry gently.

5. Remove INTENSITY, FOCUS, SCALE ILLUM, ASTIG, and TRACE ROTATION control extension shafts. Loosen front setscrew in each coupling with a 0.050" Allen wrench.

6. Disconnect twelve ribbon- or wire-cable connectors from main Interface board and note the location, quantity, and color of wires for each plug for reassembly reference.

a. P4009, a three-wire connector at the top left corner of the board (to Q14009).

b. P4035, a four-wire connector near top center of the board (to crt socket).

c. P4069, a two-wire connector near the INTENSITY potentiometer at top center of the board (to the Fan board).

d. P4057, a three-wire connector near the INTENSITY potentiometer at top center of the board (to Vertical Mode Switch).

e. P4061, a three-wire connector near the INTENSITY potentiometer at top center of the board (to Vertical Preamp board).

f. P4058, a six-wire connector near the INTENSITY potentiometer at top center of the board (to Vertical Output board).

g. P4086, a two-wire connector near Q4190 (to graticule lights).

h. P4165, a two-wire connector near the front of the INTENSITY potentiometer (Y-Axis).

i. P4176, a two-wire connector near the TRACE ROTATION potentiometer (to crt).

j. P4398, a six-wire connector from the TRACE SEP and B INTENSITY potentiometers, at the front of the board.

k. P4498, a six-wire connector from the TRACE SEP and HOLDOFF potentiometers, at the front of the board.

l. P4561, a three-wire connector near the bottom center of the board (from the HOLDOFF control).

7. Unsolder the CALIBRATOR loop from Main Interface board.

8. Unsolder five wires from Main Interface board and confirm each wire's color and location in the following list for reassembly reference (high-voltage wires to crt socket).

a. Wire to the one-notch ceramic strip is white with a yellow stripe.

b. Wire to the -2450 V test point (TP4129) is white with a red stripe.

c. Wire to center notch on the three-notch ceramic strip is white with an orange stripe.

d. Lowest of a pair of wires between the large high-voltage capacitors is white with brown and yellow stripes.

e. Upper wire of a pair of wires between the large high-voltage capacitors is white with a brown stripe.

9. Disconnect horizontal deflection plate leads at the crt. This requires a pair of long-nose pliers for best removal or reinstallation (pull connectors straight out from pins to avoid strain on metal-to-glass neck-pin seal).

10. Unplug five connectors from Main Interface board. Confirm each wire's color and location in the following list for reassembly reference.

a. J4325, white with black and brown stripes, from near the rear middle of the board.

b. J4387, white with a red stripe, from near the front of the board.

c. J4385, white with black and red stripes, from near the front of the board.

d. J4388, white with a blue stripe, from near the front of the board.

e. J4475, white with an orange stripe, from between the interboard connectors (to the Sweep Timing circuit board).

11. Unsolder one wire from near the left middle of the board (under cable harness).

12. Remove power transistor mounting screw from Q4102, Q4301, and Q4401.

13. Remove mounting screw from transistor Q4312 near the lower rear corner of the board.

14. Remove mounting screw from transistor Q4190 near the top right corner of the board.

15. Remove four hexagonal posts that stand-off the high-voltage shield. Use a 3/16" nutdriver.



**Maintenance****465B Service (SN B060000 & UP)**

16. Remove seven Main Interface board mounting screws. A Phillips screwdriver is required.

**WARNING**

*The crt anode and the output terminal of high-voltage multiplier may retain a high-voltage charge after the instrument is turned off. To avoid electrical shock, ground both the output terminal of the multiplier and the crt high-voltage anode lead to chassis ground.*

17. Disconnect crt anode-lead plug from the high-voltage multiplier jack. Ground this lead to the instrument main chassis to remove any stored charge. Insert a medium-size screwdriver tip between the multiplier jack body and the hold down spring clip. Pry the multiplier jack out of the spring clip.

18. Separate Main Interface circuit board from the instrument chassis, using care to prevent damage to components or wiring. Carefully thread interconnecting cables through the board and chassis, as necessary, to avoid strain on any cable. Let the board pivot on power-transformer leads that are still connected to the board.

**NOTE**

*You can now perform repairs on the reverse side of the Main Interface board, if repair is intended. To reinstall the board, reverse the order of the removal steps. If you intend to replace the Main Interface circuit board, continue with this procedure.*

19. Unsolder power-transformer wires from Main Interface board. Confirm each wire's color and location in Figure 6-4. To facilitate reassembly, record any exceptions to this procedure.

20. Unsolder blue power-cord wire from the stand-off insulator near power transformer secondary wires. Feed wire through hole in the board.

21. Remove Main Interface board from the chassis, using care to prevent strain on any of the wires.

22. To facilitate reinstallation, remove solder from the holes in the circuit-board wire-terminal pads, if wires were removed in this procedure.

To reinstall the Main Interface circuit board, reverse the order of the removal steps.


**NOTE**

*All of the mounted components are not supplied with a replacement Main Interface board. It will be necessary to exchange some components from the old board to the new board or new parts must be ordered.*

**POWER TRANSFORMER.** If the power transformer becomes defective, be sure to replace only with a direct replacement Tektronix transformer. After the transformer is replaced, check the performance of the complete instrument. Remove the transformer as follows.

1. Unsolder the power cord from the Interface board, the Regulating Range Selector Assembly, and the solder lug on the rear subpanel.

2. Remove small blue panel from the rear panel of the instrument (short screw is at the top, and the long screw is at the left side). It will be necessary to remove rear ring assembly, as for cabinet removal (see Figure 6-1) and the Regulating Range Selector cover to allow removal of the panel.

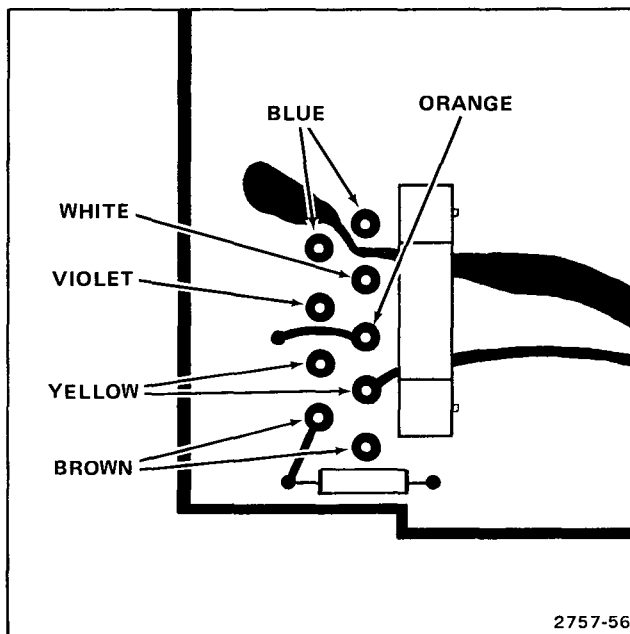

**Figure 6-4. Locations of power transformer secondary wires.**

3. Disconnect actuating shaft from the POWER switch coupler and remove shaft from the instrument. Be careful not to damage switch coupler.

4. Remove POWER switch mounting bracket from the Trigger board (3/16" wrench or nutdriver required).

5. Unsolder transformer leads from the Interface board and the solder lug on the rear subpanel. Note the wire color codes to facilitate correct reinstallation (see Figure 6-4).

6. Remove transformer leads from the Regulating Range Selector Assembly. It will be necessary to use a special pin removing tool available from Tektronix, Inc. (refer to Maintenance Aids information at end of this section). It is only necessary to use this tool to remove the transformer leads from the Selector Assembly. The leads may be reinstalled by simply pushing them into place. Note wire color codes to facilitate correct reinstallation.

7. Remove transformer bracket mounting hardware. This includes two screws on the Trigger board, one screw on the Interface board, two nuts on the U-channel (one on the transformer side and one on the crt side), and two screws and nuts on the rear subpanel.

8. Thoroughly loosen Trigger board, then lift the transformer assembly partially out until thermal cutoff retaining screws can be removed. Remove these retaining screws with a Phillips screwdriver and lift transformer assembly out of the instrument.

9. Remove thermal cutout and POWER switch from old transformer and install on new transformer. Note wire color codes to facilitate correct installation.

10. Install new transformer assembly in the instrument reversing the order of removal steps.

**CATHODE RAY TUBE (CRT).** Remove and replace the crt as follows.

**WARNING**

*Use care when handling a crt. Protective clothing and safety glasses should be worn. Avoid striking it on any object that might cause it to crack or implode. When storing a crt, place it in a protective carton or set it face down on a smooth surface in a protective location with a soft mat under the faceplate to protect it from scratches.*

1. Remove instrument wrap around cabinet in the manner given under Cabinet Removal at the beginning of this section.

2. Remove plastic bezel and filter from the front of the crt (held with four screws).

3. Remove rear cover (held by two flat-head screws).

4. Remove bell-shaped cover to expose crt socket (held by two screws).

5. Unplug crt socket.

6. Remove the two vertical deflection pin connectors from the left side of the crt neck. (Use long-nose pliers and pull connectors straight off the crt neck to avoid strain on the metal-to-glass neck-pin seal.)

7. Set the instrument on its left side (Vertical Preamp board side).

8. Remove horizontal deflection pin connectors from bottom of the crt neck (accessible through a hole in the Interface board). (Refer to step 6 for removal method.)

9. Position the instrument so the top is accessible.

**WARNING**

*The crt anode and the output terminal of high-voltage multiplier may retain a high-voltage charge after the instrument is turned off. To avoid electrical shock, ground both the output terminal of the multiplier and the crt high-voltage anode lead to chassis ground.*

10. Locate anode lead connector that is held in place by a metal spring clip fastened to the chassis. Pull the top portion of the anode lead out of the connector (where the connector plugs together, just above the metal spring clip) and discharge the metal tip to the chassis.

11. Holding one hand on the crt face, push slowly on the crt base with the other hand. Guide the anode connector through the crt shield while slowly pulling the crt out of the instrument. The plastic corner pads may fall out during removal; save them for reinstallation.

**Maintenance****465B Service (SN B060000 & UP)**

12. Reverse the above procedure to install a crt. Observe the following precautions.
  - a. Be sure to guide anode lead through the hold in the crt shield while pushing crt into the instrument.
  - b. Be sure plastic corner pads are securely seated.
  - c. Be sure plastic centering ring firmly centers the crt neck. Reposition the ring as necessary.

**HIGH VOLTAGE MULTIPLIER.** Remove and replace the High Voltage Multiplier as follows.

1. Remove Vertical Preamplifier board and crt as previously described.
2. Slide the round part of the crt shield to the rear about two inches.
3. Remove high voltage shield (held on by four screws). Note position of the cabinet grounding clip for reassembly reference.
4. Remove four 3/16" stand-off posts to which the high voltage shield is secured.
5. Remove mounting screw from Q4102 and Q4301 at the rear of the Interface board.
6. Remove circuit board hold-down screw just forward of P4165 on the Interface board.
7. Remove the shield from the high voltage transformer and high voltage multiplier (shield held by three screws).
8. Unsolder black wire (between the High Voltage Multiplier and the Interface board) from the Interface board.
9. Unsolder, the diode and the wire from the post on the High Voltage Multiplier.
10. Remove two nylon nuts securing the High Voltage Multiplier to the Interface board.
11. Remove High Voltage Multiplier (carefully pry up on the Interface board as necessary to facilitate removal).

12. Reverse above procedure to install the High Voltage Multiplier.

**TRANSISTORS AND INTEGRATED CIRCUITS.** Transistors and IC (integrated circuits) should not be replaced unless they are actually defective. If removed from their sockets during routine maintenance, return them to their original sockets. Unnecessary replacement or switching of semiconductor devices may affect the adjustment of the instrument. When a transistor is replaced, check the operation of the part of the instrument that may be affected.

Any replacement component should be of the original type or a direct replacement. Bend the leads to fit the socket and cut the leads to the same length as on the component being replaced. See Figure 9-1 for basing diagrams.

To remove the 14-, 16-, and 20-pin integrated circuits, pull slowly and evenly on both ends of the device. Try to avoid having one end of the integrated circuit disengage from the socket before the other, since this may damage the pins.

**WARNING**

*Handle silicone grease with care. Avoid getting silicone grease in the eyes. Wash hands thoroughly after use.*

**WARNING**

*Voltages are present on the exterior surface of the chassis-mounted power supply transistors if power is applied to the instrument and the POWER switch is on.*

The chassis-mounted power supply transistors and their mounting bolts are insulated from the chassis. In addition, silicone grease is used to increase heat transfer capabilities. Reinstall the insulators and replace the silicone grease when replacing these transistors. The grease should be applied to both sides of the mica insulators and should be applied to the bottom side of the transistor, where it comes in contact with the insulator.

**NOTE**

*After replacing a power transistor, check that the collector is not shorted to ground before applying power.*

**INTERCONNECTING PINS.** Two methods of interconnection are used in this instrument to connect the circuit boards with other boards and components. When the interconnection is made with a coaxial cable, a special end-lead connector plugs into a socket on the board. Other interconnections are made with a pin soldered onto the board. Two types of mating connections are used for these interconnecting pins. If the mating connector is on the end of a lead, an end-lead pin connector is used which mates with the interconnecting pin. The following information provides the replacement procedure for the various types of interconnecting methods.

**Coaxial-Type End-Lead Connectors.** Replacement of the coaxial-type end-lead connectors requires special tools and techniques; only experienced maintenance personnel should attempt replacement of these connectors. It is recommended that the cable or wiring harness be replaced as a unit. For cable or wiring harness part numbers, see the Replaceable Mechanical Parts list. An alternative solution is to refer the replacement of the defective connector to your local Tektronix Field Office or representative.

#### NOTE

*A circuit-board pin-replacement kit including necessary tools, instructions, and replacement pins is available from Tektronix, Inc. (see Maintenance Aids information at the end of this section).*

**Circuit Board Pins.** To replace a pin that is mounted on a circuit board, first disconnect any pin connectors, then unsolder the damaged pin and pull it out of the circuit board with a pair of pliers. Be careful not to damage the wiring on the board with too much heat. Ream out the hole in the circuit board with a 0.031" drill bit. Remove the ferrule from the new interconnecting pin and press the new pin into the hole in the circuit board. Position the pin in the same manner as the old pin. Then, solder the pin on both sides of the circuit board. If the old pin was bent at an angle to mate with a connector, carefully bend the new pin to match the associated pins.

**Circuit Board Pin Sockets.** The pin sockets on the circuit boards are soldered to the rear of the board. To replace one of these sockets, first unsolder the pin (use a vacuum-type desoldering tool to remove excess solder). Then, straighten the tabs on the socket and remove it from the hole in the board. Place the new socket in the circuit board hole and press the tabs down against the board. Solder the tabs of the socket to the circuit board; be careful not to get solder into the socket.

#### NOTE

*The spring tension of the pin sockets ensures a good connection between the circuit board and the pin. This spring tension can be destroyed by using the pin sockets set as a connecting point for spring-loaded probe tips, alligator clips, or other devices.*

**End-Lead Pin Connectors.** The pin connectors used to connect the wires to the interconnecting pins are factory assembled. They consist of machine-installed pin connectors mounted in plastic holders. The plastic holders are easily replaced as individual items; but if the connectors are faulty, the entire cable assembly should be replaced. Individual pin connectors are listed in the parts list, but special tools are required for installation.

When pin connectors are grouped together and mounted in a plastic holder, these connectors are removed and installed as a multi-pin connector. To provide correct orientation of this multi-pin when it is replaced, an arrow is stamped on the circuit board, and a matching arrow is molded into the plastic housing of the multi-pin connector. Be sure these arrows are aligned when the multi-pin connector is reinstalled. If the individual end-lead pin connectors are removed from the plastic holder, note the color of the individual wires to facilitate replacement.

**CERAMIC TERMINAL STRIPS.** Replacement strips (including studs) and spacers are supplied under separate part numbers. However, the old spacers may be reused if they are not damaged. The applicable Tektronix part numbers for the ceramic strips and spacers used in this instrument are given in the Replaceable Mechanical Parts list.

Remove ceramic terminal strips as follows.

1. Unsolder all components and connections on the strip. To aid in replacing the strip, it may be advisable to mark each lead or draw a sketch to show location of the components and connections.
2. Pry or pull the damaged strip from the chassis.
3. If the spacers come out with the strip, remove them from the stud pins for use on the new strip (spacers should be replaced if they are damaged).

**Maintenance**

**465B Service (SN B060000 & UP)**

Replace ceramic terminal strips as follows.

1. Place the spacers in the chassis holes.
2. Carefully press the studs of the strip into the spacers until they are completely seated.
3. If the stud extends through the spacers, cut off the excess.
4. Replace all components and connections. Observe the soldering precautions under Soldering Techniques in this section.

**Readjustment After Repair**

After any electrical component has been replaced, the adjustments for that particular circuit should be checked, as well as the adjustment of other closely related circuits. Since the power supply affects all circuits, adjustment of the entire instrument should be checked if work has been done in the power supply or if the transformer has been replaced.

**Instrument Repackaging**

Should reshipment become necessary, reuse the carton in which your instrument was shipped. If the original packaging is unfit for use or is not available, repackage the instrument as follows.

1. Obtain a carton of corrugated cardboard having inside dimensions of no less than six inches more than the instrument dimensions; this will allow for cushioning. Use a carton having a test strength of at least 275 pounds.

2. Surround the instrument with polyethylene sheeting to protect the finish and prevent packing material from entering the instrument.

3. Cushion the instrument on all sides by tightly packing dunnage or urethane foam between carton and instrument, allowing three inches on all sides.

4. Seal carton with shipping tape or industrial stapler.

**Required Reshipment Information**

If the instrument is to be shipped to a Tektronix Service Center for service or repair, attach a tag containing the following information.

1. Owner's name and address, with the name of an individual at your firm who can be contacted.

2. Complete instrument serial number.

3. Description of the services required.

**Table 6-3**  
**MAINTENANCE AIDS**

The following maintenance aids include items required for some maintenance procedures in this instrument. Equivalent products may be substituted for examples given, providing characteristics are similar.

Description	Specifications	Use	Example
Soldering Iron	15 W	General soldering and unsoldering	ANTEX PRECISION Model C
Screwdriver	Phillips #1 tip	Assembly and Disassembly	Xcelite Model X108
Screwdriver	Phillips #2 tip	Assembly and Disassembly	Xcelite Model X102
Screwdriver	Three-inch shaft; 3/32" flat bit	General	Xcelite R3323
Torque Screwdriver	1.5 inch-pounds	FUNCTION switch assembly	Sturtevant-Richmont Torque Products Model PM-5 Roto-Torq
Nutdrivers	1/4", 5/16", 3/8", 7/16"	General	Xcelite #8, #10, #12, & #14
Open End Wrench	1/4"	General	
Allen Wrenches	1/16", 5/64", 0.050"	Assembly and Disassembly	
Solder Wick		Unsoldering	Hex Wik #887-10
Lubricant	Versilub	FUNCTION switch lubrication	Tektronix Part Number 006-1353-00
Spray Cleaner	No Noise	FUNCTION switch pad cleaning	Tektronix Part Number 006-0442-02
Air Filter Adhesive		Coat air filter after cleaning	Tektronix Part Number 006-0580-00
Pin Removing Tool		Remove leads from Regulating Range Selector Assembly	Tektronix Part Number 003-0707-00
Circuit Board Pin Replacement Kit		Replace Circuit board connector pins	Tektronix Part Number 040-0542-00



*Before using any test equipment to make measurements on static-sensitive components or assemblies, be certain that any voltage or current supplied by the test equipment does not exceed the limits of the component to be tested.*

**Table 6-4**  
**SUGGESTED TROUBLESHOOTING EQUIPMENT**

Equipment	Minimum Specification	Usage	Examples
Semiconductor Tester	Dynamic type tester. Measure reverse breakdown voltages up to at least 400 V.	Test Semiconductors.	a. TEKTRONIX 576 Curve Tracer. b. TEKTRONIX 577 (D1 or D2) Curve Tracer with 177 Test Fixture
Test Oscilloscope with 10X voltage probe.	Frequency response, dc to at least 100 MHz; deflection factor, 5 mV to 5 V/div; input impedance, 1 M $\Omega$ , 20 pf; sweep rate, 0.5 s to 0.02 $\mu$ s/div.	Check operating waveforms.	TEKTRONIX 465B Oscilloscope with included 10X probe
Multimeter	Digital Multimeter, Voltmeter input impedance, 10 M $\Omega$ ; range, 0 to 200 V; voltage accuracy, within 0.15%, display, 4/12 digits; ohmmeter, 0 to 20 M $\Omega$ .	Check voltages and general troubleshooting.	a. TEKTRONIX DM 501A Digital Multimeter <sup>a</sup> b. TEKTRONIX 465B Oscilloscope with DM44 Option
Variable Autotransformer	Variable from 0 to 140 V, 1.2 A. Equipped with 3-wire power cord, plug, and receptacle.	Vary input line voltage when troubleshooting the power supply.	General Radio W8MT3VM or W10MT3W Metered Variac Autotransformer

<sup>a</sup> Requires a TM 500-Series power module.

## OPTIONS

# GENERAL OPTION INFORMATION

Your instrument may be equipped with one or more options. This section describes those options and provides required support documentation. Each Option part of this section is complete and supplies all the necessary information for operation and adjustment of the instrument. The Electrical and Mechanical Replaceable Parts list for each option are included at the end of that option.

### Index to Options Described in this section

Option 04 .....	7-3
Option 05 .....	7-5
Option 07 <sup>a</sup> .....	7-19
Option 78 .....	7-33

<sup>a</sup> Option 07 is not available on instruments equipped with the DM44 Digital Multimeter.



# OPTION 04 EMC ENVIRONMENTAL

## INTRODUCTION

This section describes the features of Option 04 applicable to the 465B Oscilloscope. Circuitry in the instrument is modified to meet additional conducted and radiated interference requirements over the frequency range of 150 kHz to 25 MHz (conducted) and 150 kHz to 1 GHz (radiated).

The following changes are made to the standard instrument circuitry to meet the additional specification requirements. Figure 7-1 reflects the Option 04 instrument configuration.

EMI filter FL14500 is added in series with the input power cord.

A cathode-ray tube mesh filter is installed to minimize crt faceplate radiation.

Four signal-output bnc connectors on the rear plenum chamber are changed to a type that improves shielding of the connected signal leads.

Capacitors are added across the transformer secondary windings.

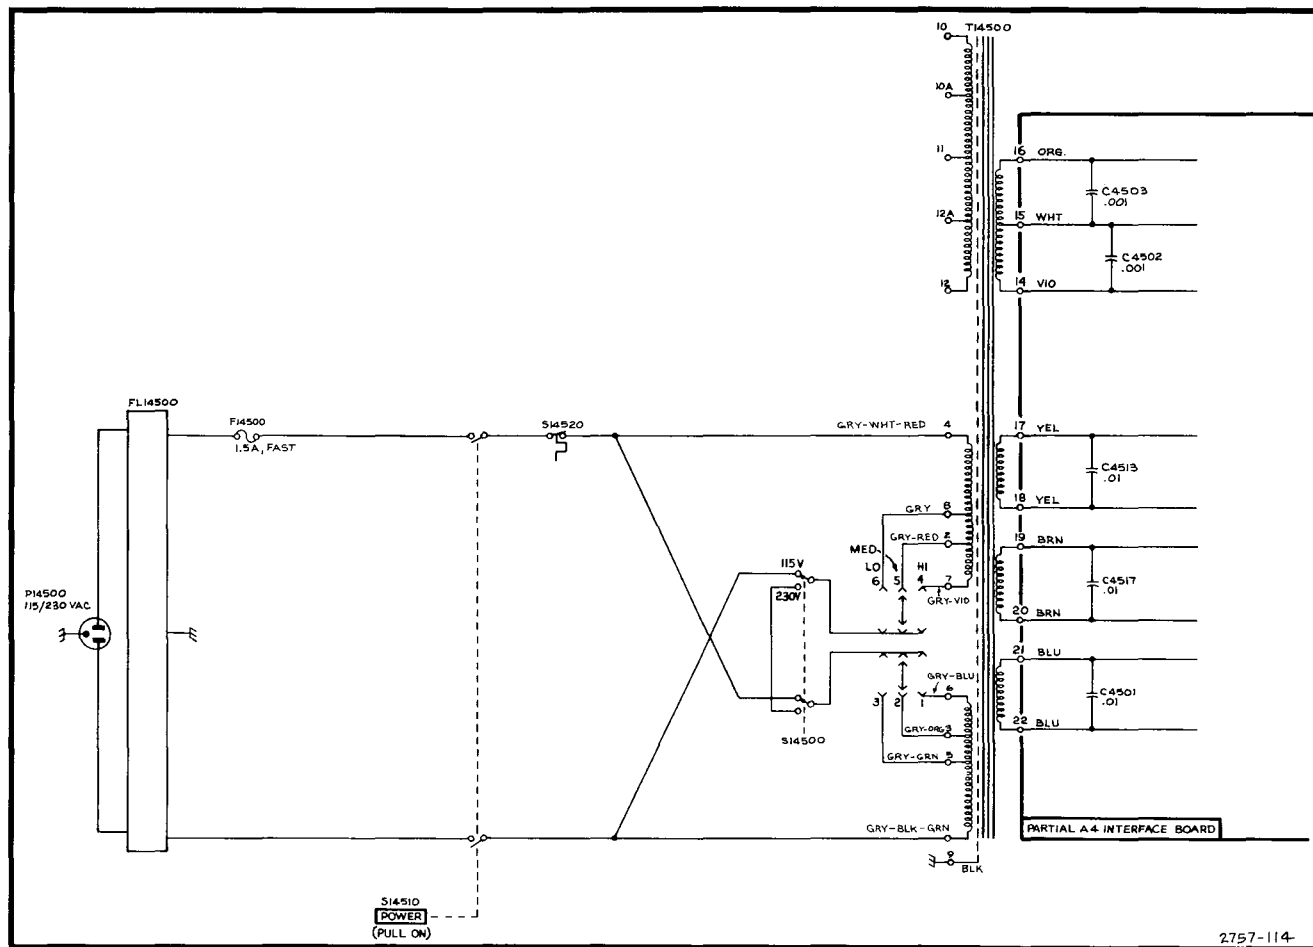


Figure 7-1. 465B Option 04 primary winding with power-line filter.

Options—465B Service  
(SN B060000 & UP)

**REPLACEABLE ELECTRICAL PARTS  
OPTION 04**

Component No.	Tektronix Part No.	Serial/Model No. Eff	Dscont	Name & Description	Mfr Code	Mfr Part Number
CHANGES FROM STANDARD 465B WHEN OPTION 04 IS ADDED						
CHANGE TO:						
A4	670-5996-04			CKT BOARD ASSY:INTERFACE	80009	670-5996-04
A4C4501	283-0003-00			CAP.,FXD,CER DI:0.01UF,+80-20%,150V	91418	SP103Z151-4R9
A4C4513	283-0003-00			CAP.,FXD,CER DI:0.01UF,+80-20%,150V	91418	SP103Z151-4R9
A4C4517	283-0003-00			CAP.,FXD,CER DI:0.01UF,+80-20%,150V	91418	SP103Z151-4R9
ADD:						
A4C4502	283-0000-00			CAP.,FXD,CER DI:0.001UF,+100-0%,500V	59660	831-519-Z5U-102P
A4C4503	283-0000-00			CAP.,FXD,CER DI:0.001UF,+100-0%,500V	59660	831-519-Z5U-102P

**REPLACEABLE MECHANICAL PARTS  
OPTION 04**

Fig. & Index No.	Tektronix Part No.	Serial/Model No. Eff	Dscont	Qty	1	2	3	4	5	Name & Description	Mfr Code	Mfr Part Number
CHANGES FROM STANDARD 465B WHEN OPTION 04 IS ADDED												
ADD:												
A4	-----			1						CKT BOARD ASSY:INTERFACE		
	131-0382-00			1						. TERMINAL,STUD:0.812 L,INSULATED	71279	572-4822-01-05-1
	210-0586-00			1						. NUT,PL,ASSEM WA:4-40 X 0.25,STL CD PL	83385	OBD
CHASSIS PARTS												
	119-0376-01			1						FILTER,RAD INT:2 X 3A,250V,400 HZ (ATTACHING PARTS)	80009	119-0376-01
	211-0038-00			1						SCREW,MACHINE:4-40 X 0.312,FLH,100 DEG	83385	OBD
	210-0586-00			1						NUT,PL,ASSEM WA:4-40 X 0.25,STL CD PL	83385	OBD
										- - - * - - -		
	131-0707-00			1						CONNECTOR,TERM:22-26 AWG,BRS& CU BE GOLD	22526	47439
	131-0708-00			1						CONTACT,ELEC:0.48"L,28-32 AWG WIRE	22526	47437
	131-1310-00			1						CONTACT,ELEC:MESH FILTER GROUND	80009	131-1310-00
	131-1315-01			4						CONN,RCPT,ELEC:BNC,FEMALE	24931	28JR 306-1
	210-0774-00			2						EYELET,METALLIC:0.152 OD X 0.245 INCH L,BRS	80009	210-0774-00
	210-0775-00			2						EYELET,METALLIC:0.126 OD X 0.23 INCH L,BRS	80009	210-0775-00
	378-0726-00			1						FILTER,MESH:EMI	80009	378-0726-00
	334-3379-00			1						MARKER,IDENT:MARKED GROUND SYMBOL	80009	334-3379-00
	348-0239-00			1						GROMMET,PLASTIC:DK GRAY,U-SHAPE,0.27 ID	80009	348-0239-00
	179-2739-00			1						WIRING HARNESS:MAIN	80009	179-2739-00
	195-0529-00			1						LEAD,ELECTRICAL:18 AWG,2.0 L,8-0	80009	195-0529-00

## OPTION 05 TV SYNC SEPARATOR

### INTRODUCTION

Option 05, when installed in the 465B Oscilloscope, adds a TV Sync Separator and other changes to provide stable sweep triggering from composite video waveforms and provides a Field 1 or Field 2 sync selection feature. The Option 05 requires that the polarity of the input signals be observed since the SYNC SEPARATOR OPERATES ON SYNC NEGATIVE SIGNALS ONLY. Operation of the instrument from sync positive signals is described in operation of the sync separator under Operating Instructions.

The information and instructions presented here apply to the use of the 465B Option 05 instrument in TV applications. Refer to the appropriate sections of the Operator's or Service manuals for use and operation of the instrument for non-TV applications.

### GENERAL INFORMATION

Option 05 includes a TV Sync Separator and provides the instrument with front-panel selection of additional trigger-signal processing to facilitate observation and measurement of composite video and related television waveforms. Added circuitry provides amplification, clipping, and vertical sync recognition. Vertical (field rate) and horizontal (line rate) trigger signals are selected with the A TRIGGER COUPLING switch for A Sweep triggering. Horizontal (line rate) trigger signals for B Sweep triggering are selected with the B TRIGGER SOURCE switch.

For interlaced video signals, the TV FIELD trigger signals may start the A Sweep on either Field 1 or Field 2 ("even" or "odd" fields respectively in CCIR System B terminology). Trigger signal selection is accomplished with the A TRIGGER SLOPE switch.

When A TRIGGER COUPLING switch is set to either TV FIELD or TV LINE (see Figure 7-2), the A TRIGGER SOURCE switch selects the source of the signals to be processed in the Sync Separator. This includes NORM (composite vertical signal), CH 1, CH 2, EXT, or EXT/10. (LINE source is not a usable function with TV FIELD or TV LINE coupling.)

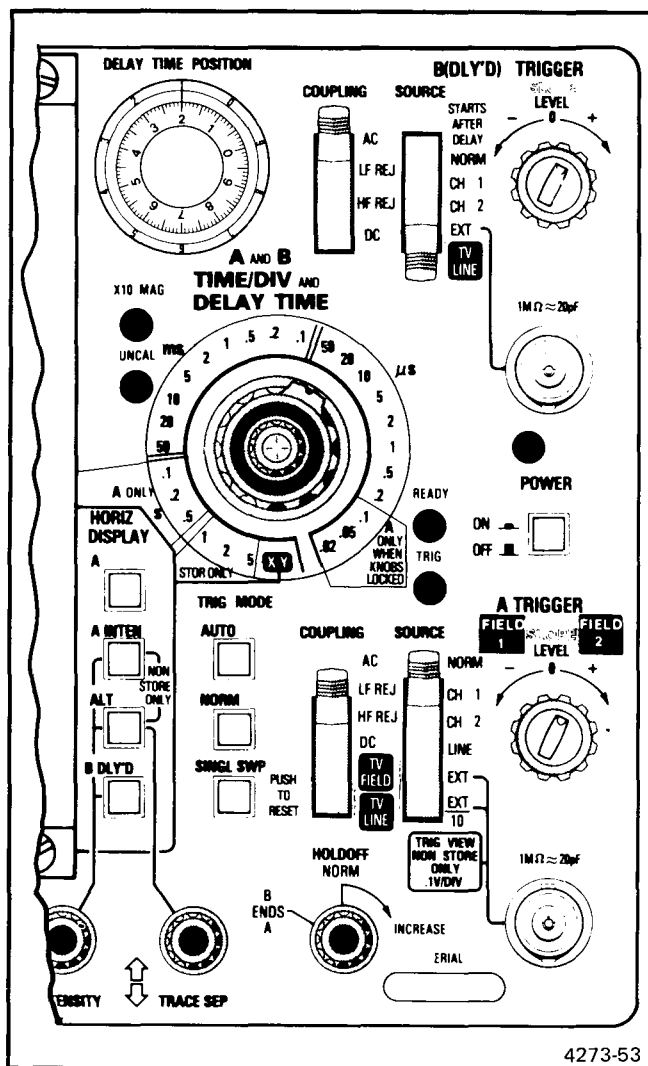


Figure 7-2. Partial 465B front panel showing Option 05 features.

With the A TRIGGER COUPLING switch set to either TV FIELD or TV LINE, the selected sync output from the Sync Separator is automatically applied to the A Sweep TRIGGER circuit for use as the triggering signal for the A Sweep. For the B Sweep, the horizontal-sync signal (line-rate sync) from the Sync Separator is fed only to the TV LINE position of the B TRIGGER SOURCE switch, to be selected at the option of the user.

**Options**

**465B Service (SN B060000 & UP)**

Option 05 circuitry requires sync-negative composite video for proper operation. This signal polarity is used with most standard broadcast systems employing 405 to 819 lines at 50- or 60-Hz field rates and with closed-circuit systems having up to 1201 lines at a 60-Hz field rate. Sync-positive video may be used, as discussed later under "Operation of the Sync Separator."

To optimize video measurements, the vertical amplifier ac coupling input capacitors are increased from 0.019  $\mu$ F to 0.2  $\mu$ F Figure 7-3. The larger physical size of these capacitors increases the input shunt capacitance to a normalized value of 24 pF.

**Specification**

Electrical characteristics and performance requirements listed in the "Specification" part of this manual are applicable to the 465B Option 05 oscilloscope with the following exceptions or additions.

**Vertical Input**

Resistance	1 M $\Omega$ within 2%
Capacitance	24 pF $\pm$ 10%
Time Constant	24 $\mu$ s $\pm$ 12%

**AC Input Coupling**

**Low Frequency -3 dB Point**

Direct	1 Hz
Via 10X Passive Probe	0.1 Hz

**Tilt (10-ms pulse)**

Direct	2.5%
Via 10X Passive Probe	0.25%

**Triggering**

**Sync Separation** Stable video rejection and sync separation from sync-negative composite video, 405- to 1201-line, 50- or 60-Hz field rate.

Sync-positive composite video can be separated by applying the input signal to the CH 2 input connector and using the CH 2 INVERT feature.

FIELD 1 and FIELD 2 trigger signals are selectable with the A TRIGGER SLOPE switch for interlaced field systems. A trigger signal is generated for every field in noninterlaced field systems.


Trigger Amplitude	Min	Max
<b>Internal</b>		
Composite Video (nominal) <sup>a</sup>	1.5 cm	15 cm
Composite Sync	0.5 cm	20 cm
<b>External</b>		
Composite Video (nominal) <sup>a</sup>	150 mV	1.5 V
Composite Sync	50 mV	2.0 V
<b>EXT/10</b>		
Composite Video (nominal) <sup>a</sup>	1.5 V	15 V
Composite Sync	500 mV	20 V

<sup>a</sup> Peak video is approximately 7/3 sync amplitude.

**Furnished Accessories**

The following accessories are provided with Option 05 instruments.

- 1 Graticule, NTSC (CCIR System M); -40 to +100 units, with 7.5-unit setup line; horizontal divisions along line zero (for part number see Option 05 "Accessories" in the parts list of this section).
- 1 Graticule, CCIR (CCIR System B); zero to +100 units, 35-unit setup line; horizontal divisions along line 30 (for part number see Option 05 "Accessories" in the parts list of this section.)

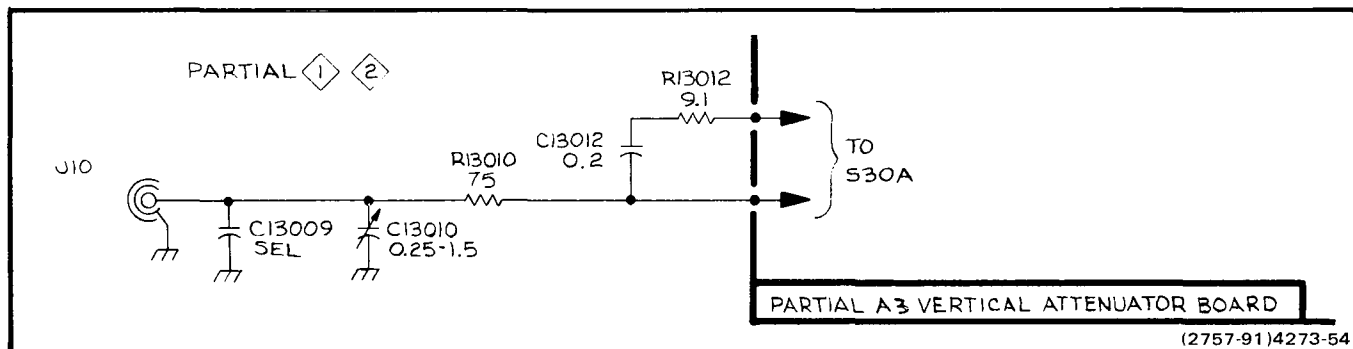

**Figure 7-3. Option 05 465B Vertical Input changes.**

## OPERATING INSTRUCTIONS

### Installation of the Video Graticule

To install a video graticule, perform the following steps.

1. Loosen the four captive bezel securing screws about six turns and remove the bezel.
2. Remove the implosion shield from the two bosses on the bezel and install the desired graticule, ensuring that the markings are on the surface away from the crt face. The graticule can be positioned horizontally a small amount to align the external graticule and mask with the internal crt graticule lines.

#### NOTE

*The extended tab at the bottom of the video graticule mates with the slightly wider bottom margin of the graticule cover.*

3. Position the bezel in place and secure it with the four captive screws.

### Vertical Calibration for CCIR and NTSC Video Graticules

When the video graticule is installed, the 10 horizontal divisions along line 0 correspond to the internal graticule divisions, and the TIME/DIV calibration of the oscilloscope remains unchanged. However, the vertical divisions represent only proportions of the 100-unit (CCIR) or the 140-unit (NTSC) video waveform, and the vertical VOLTS/DIV calibration is inapplicable.

To calibrate for a standard 1 V (nominal) video signal, apply the 300 mV CALIBRATOR square-wave signal to either the CH 1 or CH 2 vertical input and adjust the associated VOLTS/DIV and VAR (VOLTS/DIV) controls so that the displayed waveform occupies either 30 units on the CCIR graticule or 42 units on the NTSC graticule. This adjustment may be made with a well-focused, free-running display.

### Operation of the Sync Separator

To trigger the 465B on a video signal, perform the following steps.

1. Set the A TRIGGER COUPLING switch to either TV FIELD or TV LINE.

2. Determine the polarity of the composite video or composite sync waveform applied to the 465B. The Sync Separator requires normal (sync-negative) video with sync at the negative peak. To obtain proper Sync Separator operation from inverted (sync-positive) video (sync at the positive peaks and peak video at the negative peaks), apply the signal to the CH 2 input connector, select CH 2 as the A TRIGGER SOURCE, and use the CH 2 INVERT feature to obtain the proper signal polarity.

#### NOTE

*Composite Sync is the vertical and horizontal sync signals combined in a single waveform, but without video (picture) information. Composite Video is the picture waveform complete with vertical and horizontal blanking and sync components.*

3. Use the A TRIGGER SLOPE switch to select the desired field for use as the trigger signal (with the A TRIGGER SOURCE switch set to the TV FIELD position).

For special considerations in dual-trace modes (ALT or CHOP), refer to "Vertical Operating Modes—Special Considerations" in this section. For internal triggering, the sync portion of the displayed waveform should be at least 0.5 cm high (7 units, or 0.35 div, on the CCIR graticule; on the NTSC graticule it should be 10 units, or about 0.5 div). For external triggering, the sync portion of the waveform should be at least 50 mV in amplitude (or 0.50 V with the SOURCE switch set to EXT/10). To avoid circuit overload and partial or complete loss of sync, do not exceed the specified maximum composite video amplitude (15 div for internal triggering; 1.5 V for external triggering).

### Triggering the Sweep

The output of the Sync Separator is fed via the A TRIGGER COUPLING switch to the A Sweep Trigger circuit and via the B TRIGGER SOURCE switch to the B Sweep Trigger circuit. Triggering the A Sweep from the TV FIELD or TV LINE sync signal requires only the proper setting of the A TRIGGER LEVEL control. When TV FIELD rate triggering is used, selecting either Field 1 or Field 2 sync is accomplished by setting the A TRIGGER SLOPE switch to the desired field. In the PAL four-field TV system, the FIELD 1 position selects either Field 1 or Field 3, and the FIELD 2 position selects either Field 2 or Field 4. Refer to "Identifying Fields, Frames, and Lines in 525/60 and 625/50 TV Systems" to identify the specific field being viewed.

To trigger the B Sweep from the line-rate trigger output of the Sync Separator, perform the following steps.

**Options****465B Service (SN B060000 & UP)**

1. Set the A TRIGGER COUPLING switch to either TV FIELD or TV LINE and ensure that the A Sweep is running.

**NOTE**

*The B Sweep cannot be operated independently of the A Sweep and cannot run more than once for each A Sweep cycle. For composite line displays, refer to "Special Measurements" in this section.*

2. Set the B TRIGGER SOURCE switch to TV LINE.

3. Adjust the B TRIGGER LEVEL control for a stable, triggered sweep.

**Vertical Operating Modes—Special Considerations**

**Dual-Trace Modes.** For dual-trace operation, the Sync Separator input must be taken from CH 1, CH 2, or an external source. (When only one trace is displayed on the crt, the NORM position of the A TRIGGER SOURCE switch may be used.) The Sync Separator cannot correctly process switched (composite vertical deflection) waveforms present on the NORM trigger signal line in either the ALT or CHOP dual-trace vertical mode; it is, therefore, not possible to obtain stable simultaneous displays of two independent video signals that are not time related.

**Single-Channel Triggering.** When triggering from Channel 1 or Channel 2, the waveform fed to the Sync Separator is the same (except for positioning) as that displayed on the crt when the channel is selected to display a signal. If the VAR (VOLTS/DIV) control is used to reduce displayed amplitude, the signal to the Sync Separator is also reduced. When the Channel 2 INVERT switch is pressed in, the CH 2 signal to the A TRIGGER SOURCE switch is also inverted. Since the Sync Separator requires sync-negative waveforms for proper operation, it will be necessary to observe correct signal polarity when selecting the A TRIGGER SOURCE signal.

It is not necessary to display the Channel 1 or Channel 2 signal to obtain CH 1 or CH 2 triggering. Whenever the AC-GND-DC input coupling switch for the channel is not set to GND, the input amplifier and trigger channel are active, regardless of the selection of VERT MODE push buttons.

**Add Mode.** A single-channel trigger signal amplitude is not affected by contribution of the other channel to an Add

vertical mode display. When the Add mode, with Channel 2 inverted, is used to compare two video waveforms by subtraction, the Channel 1 or Channel 2 signal to the Sync Separator will be adequate for stable triggering, providing the individual channel signal meets the triggering requirements (including correct polarity).

When the Add mode is used to display the full signal from both sides of a balanced line, it may be necessary to use the NORM (composite vertical signal) A TRIGGER SOURCE switch position (if neither side of the line has sufficient amplitude for suitable triggering or if common-mode signals interfere with stable sync-separation and triggering).

**Typical Operation**

In a typical operating mode for the Option 05 instrument, the A Sweep establishes the basic frame and field presentation, and the B Sweep allows detailed observation and measurement of various portions of the video waveform.

For 50- and 60-Hz field rates, the 2 ms/div setting of the A TIME/DIV switch is usually selected. For some PAL system observations, a setting of 5 ms/div with the A TRIGGER HOLDOFF control set to approximately the four-o'clock position (additional one-field holdoff), may be desirable to maintain a stable display relationship to the four-field PAL burst-blanking sequence.

All detailed measurements are then made using the B Sweep, (HORIZ DISPLAY switches set either to B DLY'D or ALT) with the B TRIGGER SOURCE switch set either to STARTS AFTER DELAY (continuously variable B Sweep start point) or to TV LINE (B Sweep starts after the next horizontal sync pulse following the delay interval set by the DELAY TIME POSITION control and the A TIME/DIV switch setting).

Because the leading edge of the sync pulse will not be displayed, the typical B TIME/DIV switch setting for width measurement (front porch, back porch and horizontal-blanking intervals, horizontal sync, serration, and equalizing pulses) is 10  $\mu$ s/div. This setting will allow display of two consecutive pulses. Use the X10 MAG switch to display the second pulses at 1  $\mu$ s/div sweep rate.

For rise- and fall-time measurements on blanking and sync waveforms, trigger the A or B Sweep directly from the displayed waveform (avoiding the processing delay of the Sync Separator). This permits viewing the trigger edge at sweep rates from 0.5  $\mu$ s/div to 0.02  $\mu$ s/div.

## Selecting an Individual Line

### NOTE

*For field and line identification systems, refer to "Identifying Fields, Frames, and Lines in 525/60 and 625/50 TV Systems" at the end of these Operating Instructions.*

**One-Frame Cycle.** To display an entire vertical blanking interval for locating a specific line (e.g., one of the lines containing a specific VIT waveform), set the A TIME/DIV switch to 2 ms/div and the B TIME/DIV switch (pull to unlock from A) to 10  $\mu$ s/div. Ensure that the A TRIGGER HOLDOFF control is set to NORM (fully counterclockwise) and the A TRIGGER COUPLING switch is set to TV FIELD. Then, select the desired field (FIELD 1 or FIELD 2) with the A TRIGGER SLOPE switch.

Press in the A INTEN push button and use the DELAY TIME POSITION control to position the intensified zone (B Sweep) on the desired line. Pressing the B DLY'D button will then display the desired line on the B trace. Set HORIZ DISPLAY to ALT to view the A INTEN trace and B DLY'D trace simultaneously.

**Two-Frame Cycle.** If PAL burst blanking is to be checked, set the A Sweep time for a 3 1/2-field cycle (5 ms/div, with the A TRIGGER HOLDOFF control set to about the four o'clock position). Then, use the B Sweep (ALT HORIZ DISPLAY is recommended) to identify fields and lines. At 5 ms/div, only slightly more than two fields will be displayed, while the trigger holdoff interval covers a full field. Putting a specific field on screen in a particular location will typically require several operations of the A TRIGGER SLOPE switch (switching back and forth between FIELD 1 and FIELD 2) to select the proper frame cycle.

## Special measurements

**Overscanned Displays.** For various video measurements, it may be desirable to expand the video waveform vertically beyond the limits of the screen. Under these circumstances, either the trigger amplifiers or Sync Separator may be overloaded, blocking out some sync pulses in the vicinity of strong video transitions, or losing sync pulses altogether. To avoid overload problems, use either an external sync signal or the other vertical channel to supply a constant-amplitude signal to the Sync Separator while overscanned observations are being made. Note, however, that transient-response aberrations in the main vertical am-

plifier will be increased when the signal is driven offscreen, and the aberrations will become relatively serious if the amplifier is driven to saturation and cutoff.

**Horizontal-Sync Pulse Measurements.** Measurements of the rise and fall times and the width of horizontal sync pulses typically do not require use of the Sync Separator, except when only certain lines or groups of lines appear abnormal. A bright display of all horizontal sync pulses is obtained when the A Sweep is triggered on the appropriate slope using LF REJ coupling and an A Sweep TIME/DIV switch setting of 5  $\mu$ s or less. Triggering stability may be upset by sharp luminance transitions at the right side of the picture, but a careful setting of the LEVEL control will typically permit accurate measurements. Use of the 5  $\mu$ s/div basic rate locks out most of the video (for 525- or 625-line systems) from triggering the A Sweep. When faster sweeps are needed, the A TRIGGER HOLDOFF control may be adjusted to block out video information.

**RF Interference.** Operation in the vicinity of some FM and TV transmitters may cause objectionable amounts of rf signal energy in the display, even when coaxial cables are used to make signal connections to the instrument. The front-panel 20 MHz BW LIMIT switch will usually eliminate such interference from the display, but it will not affect the signal applied to the Sync Separator. Where rf energy interferes with Sync Separator operation, external filters will be required. Use of probes designed for 10- to 30-MHz bandwidth oscilloscopes will provide 6- to 10-dB attenuation in the 50- to 100-MHz range and may be beneficial in reducing rf interference.

## Identifying Fields, Frames, and Lines in 525/60 and 625/50 TV Systems

**NTSC (CCIR System M).** Field 1 is defined as the field whose first equalizing pulse is one full H interval (63.5  $\mu$ s) from the preceding horizontal-sync pulse. The Field 1 picture starts with a full line of video, and lines are numbered 1 through 263, starting with the leading edge of the first equalizing pulse. The first regular horizontal-sync pulse after the second equalizing interval is the start of line 10.

Field 2 starts with an equalizing pulse a half-line interval from the preceding horizontal-sync pulse. The Field 2 picture starts with a half line of video, and lines are numbered 1 through 262, starting with the leading edge of the second equalizing pulse. After the second equalizing interval, the first full line is line 9.

In the M/NTSC four-field color system, Fields 3 and 4 are defined identically to Fields 1 and 2, respectively, except for

**Options****465B Service (SN B060000 & UP)**

the phase of the color reference subcarrier. In Fields 1 and 4, positive-going zero crossovers of the reference subcarrier nominally coincide with the leading edge of even-numbered horizontal sync pulses. In Fields 2 and 3, negative-going zero crossovers of the reference subcarrier nominally coincide with the leading edge of even-numbered horizontal sync pulses.

**CCIR System B and Similar 625/50 Systems.** Except for PAL systems, identification of parts of the picture in most 625-line, 50 Hz field-rate systems relies primarily on continuous line numbering rather than on field-and-line identification.

The CCIR frame starts with the first (wide) vertical-sync pulse following a field that ends with one-half line of video. The first line after the second equalizing interval is line 6; the first picture line is line 23 (one-half line of video). The first field of the frame contains lines 1 through the first half of line 313; the picture ends with a full line of video (line 310).

The second field of the frame commences with the leading edge of the first (wide) vertical sync pulse (in the middle of line 313) and runs through line 625 (end of the equalizing interval). The first full line after the equalizing interval is line 318; the picture starts on line 336 (full line of video).

The first field is referred to as "odd," and the second field is referred to as "even." Note that while the identification systems for System M and System B are reversed, the correct field sync (Field 1 or Field 2) is selected indicated by the A TRIGGER SLOPE switch setting.

In the four-field PAL sequence with Bruch Sequence Color-Burst blanking, the fields are identified as follows.

**Field 1**—Field that follows a field ending in one-half line of video, when the preceding field has color burst on the last full line. Field 1 lines are 1 through 312 and half of line 313. Color burst starts on line 7 of Field 1; one-half line of video appears on line 23.

**Field 2**—Field that follows a field ending in a full line of video which does not carry color burst. Field 2 lines are the last half of line 313 through line 625. Color burst starts on line 319 (one line without burst following the last equalizing pulse); a full line of video appears on line 336.

**Field 3**—Field that follows a field ending in a half line of video when preceding field has no color burst on the last full line. Field 3 lines are 1 through the first half of line 313. Burst

starts on line 6 (immediately following the last equalizing pulse); one-half line of video appears on line 23.

**Field 4**—Field that follows a field ending in a full line of video carrying color burst. Field 4 lines are the second half of line 313 through line 625. Color burst for Field 4 starts on line 320 (two full lines without burst follow the last equalizing pulse); video starts with a full line on line 336.

**NOTE**

*The FIELD 1 position of the A TRIGGER SLOPE switch selects NTSC or PAL Field 1 or 3 to start the display; the FIELD 2 position selects NTSC or PAL Field 2 or 4.*

**THEORY OF OPERATION****Introduction**

This text describes circuitry unique to Option 05. Refer to the Theory of Operation section of this manual for information concerning those portions of the oscilloscope circuitry that are unchanged by Option 05. Figure 7-4 shows, in a simplified block diagram, those circuits added or changed by Option 05. The following discussion is limited to a description of those stages. Schematic diagrams 14 and 15, pertaining to circuitry added to or changed from the standard instrument, are located in Section 9.

**Switching**


The added TV FIELD and TV LINE positions of the A TRIGGER COUPLING switch open the usual signal path to the A Trigger circuitry and couple the appropriate output of the Sync Separator stage to the A Trigger Generator circuitry.

The Option 05 TV LINE position on the B (DLY'D) TRIGGER SOURCE switch couples the line-rate trigger signal from the Sync Separator output to the B Trigger Generator circuitry.

**Trigger Pickoff**

A Trigger Pickoff stage composed of source follower Q7512 and emitter follower Q7514 provides isolation and impedance matching to Trigger Amplifier U315 and minimizes loading of the input signal. Gain of the Trigger Pickoff stage is slightly less than unity. The video trigger signal (internal or external) from the A TRIGGER SOURCE switch is coupled to the input of Q7512, while the output of the Trigger Pickoff stage (emitter follower Q7514) is fed through



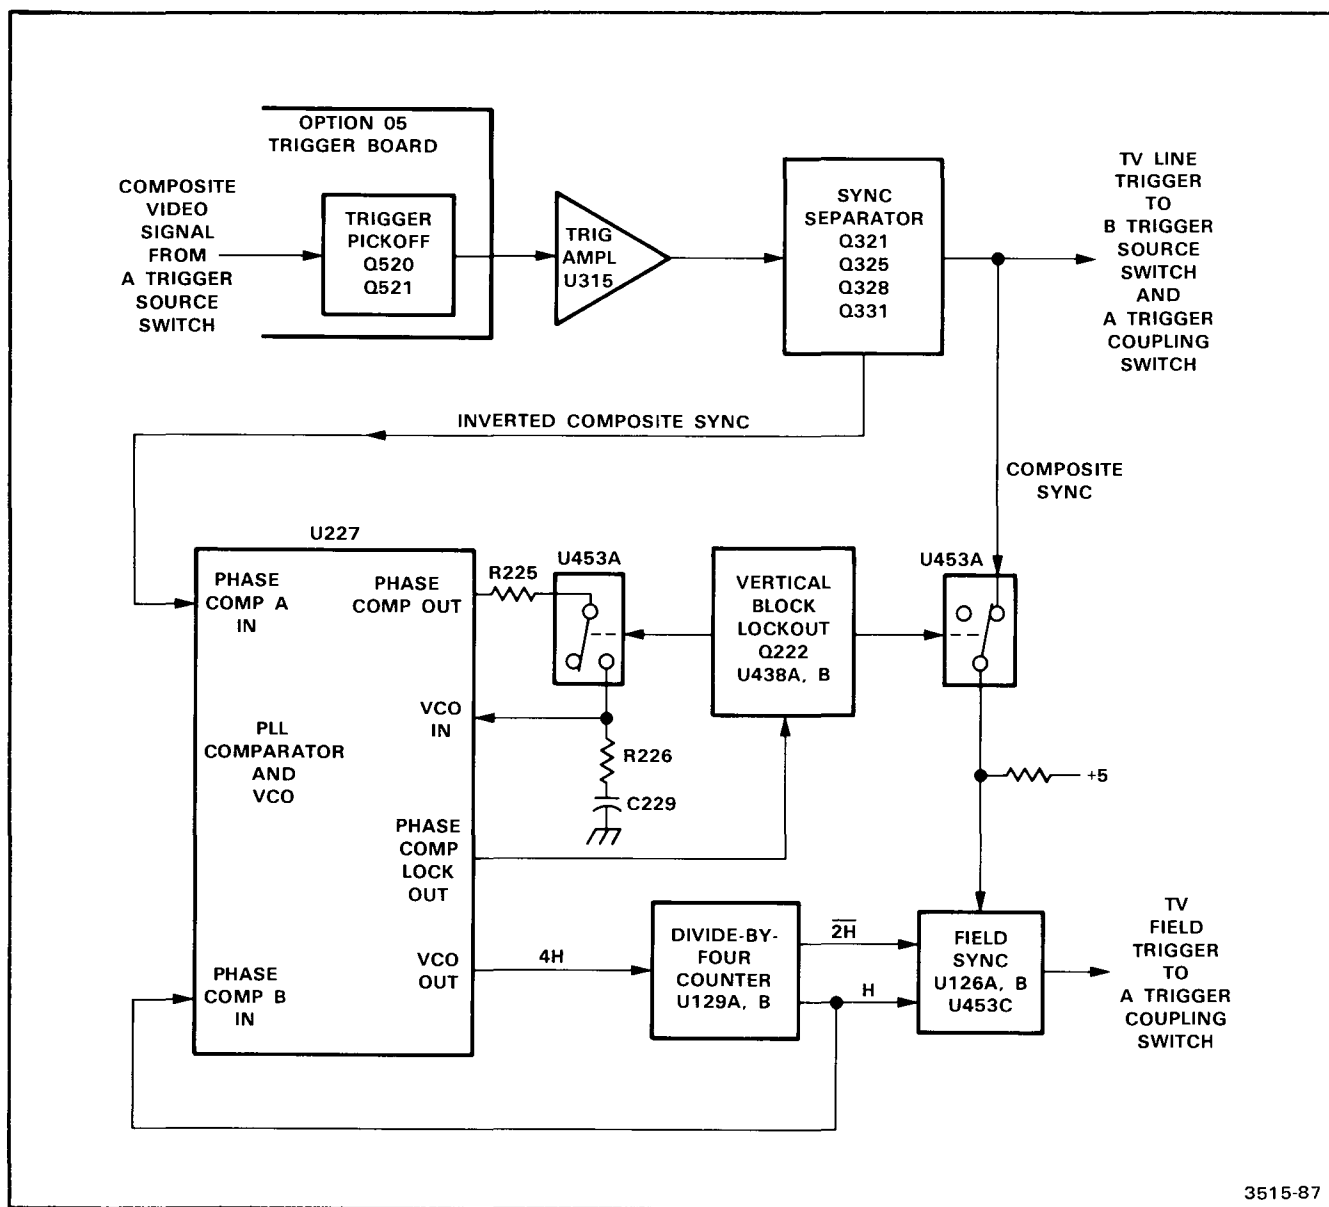

3515-87

Figure 7-4. 465B Option 05, simplified block diagram.

P7575 and P2810 to the Trigger Amplifier. Diode CR7510 prevents high-amplitude, negative-going signals from damaging the input of Q7512. High-amplitude, positive-going signals are limited by the gate-to-drain current that flows when the source-gate junction of Q7512 becomes forward biased.

### Trigger Amplifier

Trigger Amplifier U315 and associated components provide adequate drive for the Sync-Separator. Output from the Trigger Amplifier stage is fed to Q325, the Sync Separator circuitry input transistor. Feedback resistor R310 (from U315, pin 8 to U315, pin 3) controls the gain of U315 for

low-amplitude signals, while R311, CR310, and CR311 control the gain for higher-amplitude signals.

### Sync Separator

The Sync Separator circuit (composed of Q321, Q325, Q328, Q331, and associated components) is arranged as a wide-band, high-gain, self-biasing clipping amplifier that performs several functions.

1. Positive video information is removed (stripped) from incoming sync-negative, composite video signals.

**Options****465B Service (SN B060000 & UP)**

2. Negative sync tips are clipped to eliminate possible noise or, in some systems, subsidiary signals.

3. The "middle" portion of the resulting composite sync is amplified for use as the A and B Sweep (TV LINE) sync. The amplified signal is further processed by the Field Selection circuitry to obtain the TV Field trigger signal to the A Sweep trigger circuitry.

**Sync Stripper.** With no signal applied (quiescent state), Q325 and Q321 are biased to produce approximately +5 V on the Q321 collector, and Q331 is biased into saturation. The collector of Q331 will be at approximately 0 V.

When the composite video signal from U315 is applied to the base of Q325 (via R324 and C323) the negative-sync portion increases the forward bias of Q325, thereby lowering the Q325 emitter voltage. This negative-going emitter voltage, applied directly to the base of Q321, reduces the forward bias on Q321 and allows the Q321 collector voltage level to rise. Thus, the negative-sync portion of the composite video signal is amplified and inverted. However, transistor Q321 remains saturated during the positive voltage changes of the Q321 collector, so the negative sync tips are not passed on to the composite sync bus.

The amount of dc feedback applied to the base of Q325 is determined by the sync-tip amplitude. Current through CR333 rapidly charges C329, and the forward bias on Q328 increases. The increased current flow through Q328 applies a negative dc feedback to Q325 through the parallel combination of R327, C321, and R321, thereby limiting the positive output level of Q321.

The negative transition of the sync pulse output from Q321 is applied to C329 through R331 and R332, producing a relatively long time-constant-discharge path. Between sync pulses, the charge on C329 reduces only a small amount, and the dc feedback remains at the level determined by the sync tip amplitude. If the signal amplitude were to reduce, the sync tip amplitude would also be less. The negative feedback generated would be reduced, increasing the gain and adjusting to a lower input signal level.

The gain for positive-going portions of the input signal is over 100 (limited primarily by the finite gain of Q321). The positive video portions of the input signal saturate Q321 whenever the peak-to-peak input amplitude exceeds approximately 60 mV. Any signal applied to Q321 while it is saturated will not be amplified. This results in the positive portion of the composite-video signal being clipped. However, the negative-sync portion of the input signal is amplified to nearly 6 V peak-to-peak and inverted at the output of Q321. This inverted composite sync signal is fed via R409

and R408 to the Phase Comparator A input of U227 to control the phase-locked-loop oscillator, and applied via R326 to the base of Sync Clipper Q331.

**Sync Clipper.** Transistor Q331 passes a signal only during a narrow input signal level range. During the quiescent state, and also whenever the sync tips drive the collector of Q321 positive, Q331 is saturated. On the negative transition of a sync pulse, Q331 comes out of saturation as the Q321 output signal level drops through +4 V, but it becomes cut-off as the signal level continues to drop through +3 V. Sync Clipper Q331 then amplifies only the middle portion of the sync signal, clipping off the sync tips and any excursions of color subcarrier peaks that may have extended into the sync area. The amplified composite sync is fed to a voltage divider composed of R101 and R102 to reduce the signal amplitude to the correct level for application via P2834 to the A and B Trigger Generator circuits. This composite-sync signal is also applied via U453A, a MOSFET bilateral switch, to the Field Selection circuitry.

**Field Selection**

The Field Selection circuitry consists of the following.

1. A phase-locked-loop oscillator, operating at four times the television horizontal line rate (4H).

2. A sync-block-lookout circuit that opens the error-correction input to the phase-locked-loop oscillator during the vertical sync interval to prevent equalizing pulses, serrations, or (in some systems) the absence of horizontal sync pulses from affecting the oscillator frequency.

3. Sampling circuits that, after each horizontal sync pulse, interrogate the state of the composite sync bus at the one-quarter and three-quarter points in a line interval and then generate the FIELD output sync signal.

**Phase-Locked Loop.** The phase-locked loop is composed of U227, a CMOS phase comparator and voltage-controlled oscillator (VCO), and U129A and B, a divide-by-four counter. The VCO operates at four times the horizontal frequency, while the output of U129A and B is one-fourth the VCO frequency (the horizontal frequency). The minimum VCO frequency is set by C228 to less than 40 kHz, or four times the line rate of a 405-line, 50-Hz video system. Range-setting resistor R224 extends the upper frequency range to above 144 kHz (four times the line rate of a 1201-line, 60-Hz system).

Inverted composite sync is applied to U227 at pin 14, the Phase Comparator A input. The VCO output is divided by

four by U129A and B, and the Q output signal of U129A at pin 1 is applied to the Phase Comparator B input of U227 at pin 3. Positive-going edges of the two signals are compared to produce the required correction voltage to the VCO. If the positive-going leading edge of the incoming inverted horizontal sync pulse occurs before the positive-going edge of the U129A output, the comparator produces a +5 V pulse at pin 13. If the U129A output comparison point occurs prior to the inverted composite sync positive-going leading edge, a 0 V pulse is produced by the comparator.

The duration of any generated correction pulse is the time difference between the sync signal and counter output edges. The greater the phase difference, the wider the correction pulse. Between correction pulses, the phase-comparator output at pin 13 is an open circuit and has no effect on the oscillator frequency.

Correction signals are applied to the VCO input of U227 at pin 9 via a low-pass filter composed of R225, R226, C229, C425, and U453B (one-third of a CMOS triple bilateral switch). The low-pass filter circuit compensates the phase-locked loop and attenuates the fast switching transients of the comparator output. When pin 10 of U435B is HI, VCO IN is connected to COMP OUT through the low-pass filter. When pin 10 of U453B is LO, COMP OUT is disconnected from VCO IN, and only the voltage level stored on C229 is applied to VCO IN. This voltage level remains constant between correction pulses to maintain the oscillator frequency. Resistor R425 supplies a bias current to the filter network to cause the signal at VCO IN to always slightly lead the incoming sync pulses at COMP IN (pin 14). This results in improved VCO output jitter characteristics.

**Sync Block Lockout.** The phase comparator produces a "lock" signal at U227, pin 1. As long as the input comparison edges are exactly coincident, the lock signal remains HI, but it goes LO for the duration of any correction pulses. The lock signal is applied to the Vertical-Block-Lockout circuit for use in recognizing changes in the vertical sync block that would cause the VCO to be forced off frequency. During such periods, the correction loop is opened to allow the VCO to maintain a constant frequency without correction.

The negative-going, out-of-lock pulse from the phase comparator is applied via R222 and R221 to the base of Q222. Capacitor C213, connected between the junction of the two resistors and ground, must discharge before Q222 can be biased off. The time constant of R221 and C213 is long enough that the duration of the out-of-lock pulse must exceed approximately 10  $\mu$ s before the collector voltage of Q222 goes high enough to cross the threshold level of U438A. Errors of such a duration are introduced by either the 2H equalizing pulses and sync pulse serrations in the vertical sync block (VCO attempts to increase frequency) or by the absence of H pulses in the sync block, as is common

in 405/50 and many closed-circuit TV systems (VCO attempts to decrease frequency).

When the error exceeds 10  $\mu$ s in duration, the voltage level at the collector of Q222 crosses the threshold level of U438A and the one-shot multivibrator is triggered. The resulting signal from U438A is an approximately 1-ms, negative-going pulse from the Q output (pin 7) that opens bilateral switch U453B. The phase comparator output is opened to prevent correction pulses from being applied to the VCO input. The VCO maintains its previous frequency, as determined by the charge present on C229, for the duration of the 1-ms pulse. Current through R124 holds Q222 on during this time to inhibit the output of U227, pin 1 from resetting U438A.

A second one-shot circuit composed of U438B is triggered by the rising edge of the end of the 1-ms negative pulse from U438A pin 6 (Q output). An approximately 10-ms positive inhibit pulse from U438B, pin 10 is fed back to the base of Q222. This inhibit pulse prevents any further lock-outs for approximately 10 ms, thus ensuring that in the event of severe frequency or phase discrepancies, the phase comparator will actively compare the loop signal with the incoming sync signal for at least 90% of the time. The VCO circuit is then able to ignore 1-ms-long blocks that occur at intervals no closer than 10 ms, but the 90% active cycle still provides a quick lockup when a new video signal is applied.

A negative pulse from U438B, pin 9 opens bilateral switch U453A for the duration of the 10 ms inhibit pulse. This prevents the incoming composite sync from being clocked through U126B in the Field Selection circuit while U227 is relocking to the signal.

**Field Sync.** In all standard interlaced television signals, the vertical sync pulse ahead of a field that starts with a full line of video will occur halfway between two horizontal sync pulses (Field 1 in NTSC terminology, Even field in CCIR system B). A field startig with a half line of video will be preceded by a vertical sync pulse that starts at the end of a line.

The Field Sync circuit uses the  $\overline{2H}$  and H rate outputs of divide-by-four counter U129A and B to sample the state of the composite sync bus at two points in the line interval between H pulses. This sampling determines when a vertical sync block has started. One sample point is at about the one-quarter point in the H interval, and the other is at about the three-quarter point.

A positive-going edge used to clock U126B at both the one-quarter and three-quarter points is provided from the U129B  $\overline{Q}$  output (pin 12). The composite sync level applied

**Options**

**465B Service (SN B060000 & UP)**

to U126B at pin 9 (the D input of the flip-flop) is sampled and latched into U126B on each rising clock edge. If the level is HI when it is sampled (no vertical sync pulse present), the U126B  $\bar{Q}$  output (pin 12) will go LO and remain there. If the sync level is LO when sampled (signifying a vertical sync pulse), the  $\bar{Q}$  output of U126B will go from LO to HI to clock U126A at pin 3 (refer to the timing diagram, Figure 7-5). When the vertical sync pulse has ended, the  $\bar{Q}$  output of U126B clocks back LO.

The Q output of U129A is applied to the U126A D input. This output level is HI for the first half of each H interval (horizontal line) and LO for the second half. When the rising edge clock transition occurs at U126A (pin 3), the state of the D input (pin 5) will be transferred to the Q output (pin 1), and the complement will appear on the Q output (pin 2).

Thus, each occurrence of a vertical sync pulse is detected by U126B, and U126A determines whether it occurred in the first half or second half of a line. If the vertical sync pulse is present in the first half of the line, the Q output of U126A at pin 1 will go HI; and if it occurs in the second half, the Q output will go LO.

Therefore, in an interlaced system, the outputs of U126A will toggle at the full frame rate, with transitions occurring just after the start of each vertical sync pulse. The Q output will be HI during Field 1 and LO during Field 2.

Bilateral switch U453C is used to automatically select either the "Field 1/Field 2" trigger signal from the  $\bar{Q}$  output of U126A (for interlaced video) or the "Field" trigger signal from the  $\bar{Q}$  output of U126B (for noninterlaced systems.) In an interlaced video system, U126A toggles at the frame rate. The circuit composed of C404, CR404, R113, CR112, C405, and R110 rectifies the ac-coupled U126A Q output to produce a HI level at pin 9 of U453C. This causes the  $\bar{Q}$  output of U126A to be passed to R404. In a noninterlaced system, U126A does not toggle. The level at pin 9 of U453C is LO, and the  $\bar{Q}$  output of U126B is passed to R404 to produce a trigger signal on each field. Resistors R404, R405, and R406 attenuate and level shift the output of U453C to produce levels suitable for the A Sweep Trigger Generator.

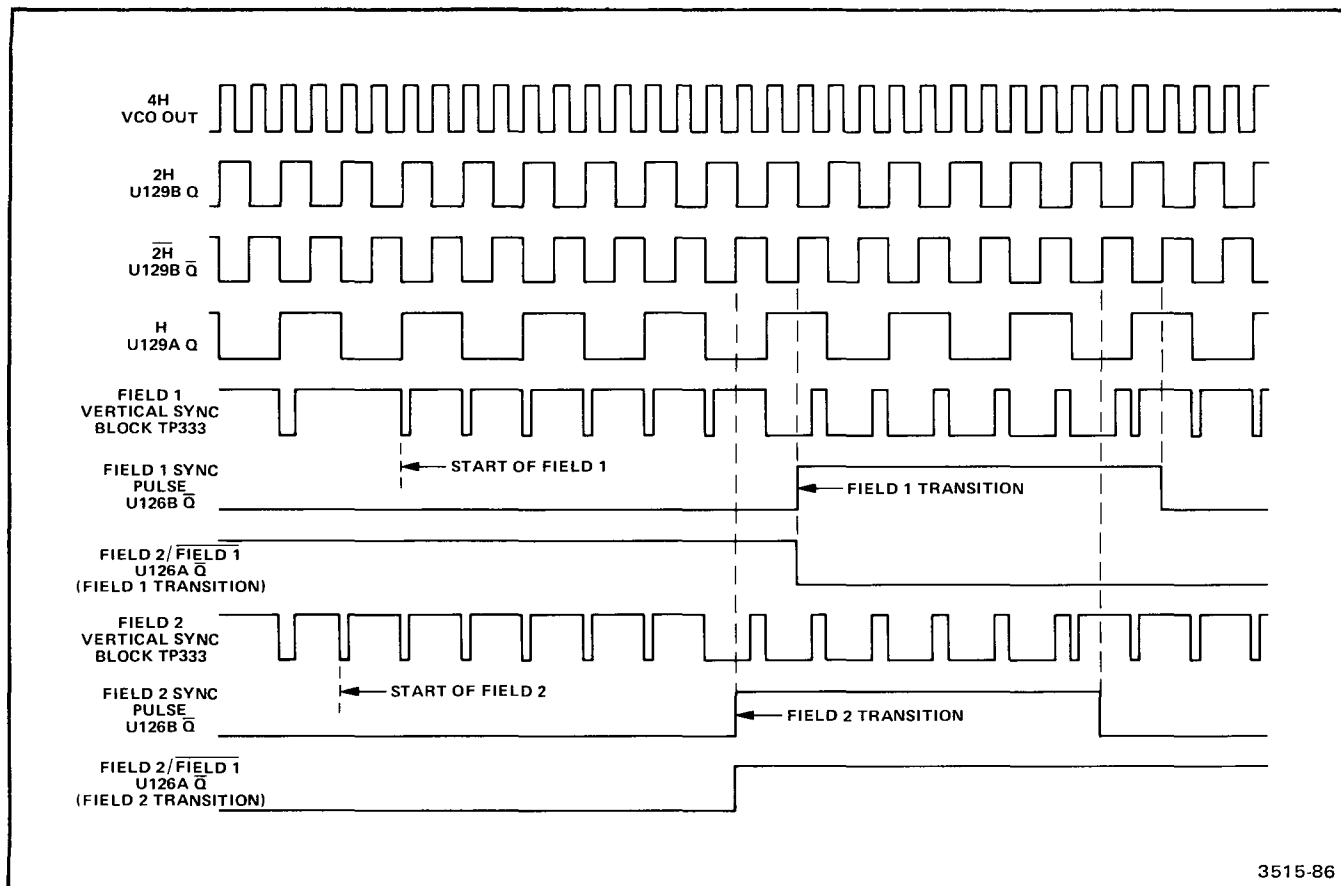


Figure 7-5. 465B Option 05 Field selection timing diagram.

REPLACEABLE ELECTRICAL PARTS  
OPTION 05

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscnt	Name & Description	Mfr Code	Mfr Part Number
---------------	--------------------	----------------------------	--------------------	----------	-----------------

CHANGES FROM STANDARD 465B  
WHEN OPTION 05 IS ADDED

## CHANGE TO:

A7	670-6000-01		CKT BOARD ASSY:TRIGGER GEN &SWEEP LOGIC	80009	670-6000-01
A7C7313	281-0772-00		CAP.,FXD,CER DI:0.0047UF,10%,100V	04222	GC701C472K
A7R7417	315-0475-00		RES.,FXD,CMPSN:4.7M OHM,5%,0.25W	01121	CB4755
A7S7112	263-0070-00		SW SL ACTR ASSY:A COUPLING,6 OF 6 POSITION	80009	263-0070-00
A7S7415	263-0070-00		SW SL ACTR ASSY:A COUPLING,6 OF 6 POSITION	80009	263-0070-00

## ADD:

A7C7107	281-0592-00		CAP.,FXD,CER DI:4.7PF,+/-0.5PF,500V	59660	301-000-COH0479D
A7C7501	281-0592-00		CAP.,FXD,CER DI:4.7PF,+/-0.5PF,500V	59660	301-000-COH0479D
A7C7511	281-0814-00		CAP.,FXD,CER DI:100PF,10%,100V	04222	GC70-1-A101K
A7CR7510	152-0246-00		SEMICOND DEVICE:SW,SI,40V,200MA	03508	DE140
A7Q7512	151-1005-00		TRANSISTOR:SILICON,JFE,N-CHANNEL	80009	151-1005-00
A7Q7514	151-0220-03		TRANSISTOR:SILICON,PNP,SEL	80009	151-0220-03
A7R7409	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	01121	CB4705
A7R7411	315-0153-00		RES.,FXD,CMPSN:15K OHM,5%,0.25W	01121	CB1535
A7R7413	321-0496-00		RES.,FXD,FILM:1.43M OHM,1%,0.125W	91637	HFF1813G14303F
A7R7414	315-0106-00		RES.,FXD,CMPSN:10M OHM,5%,0.25W	01121	CB1065
A7R7513	315-0472-00		RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	01121	CB4725
A7R7514	315-0472-00		RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	01121	CB4725

## CHASSIS PARTS

## CHANGE TO:

C13012	285-1055-00		CAP.,FXD,PLSTC:0.2UF,10%,400V	80009	285-1055-00
--------	-------------	--	-------------------------------	-------	-------------

## ADD:

C13009	-----		(SELECTED AND ADDED WHEN REQUIRED) (0.0PF-0.8PF FOR CORRECT INPUT CAPACITANCE)		
--------	-------	--	---	--	--

R13012	307-0116-00		RES.,FXD,CMPSN:9.1 OHM,5%,0.25W	01121	CB91G5
--------	-------------	--	---------------------------------	-------	--------

## A12 TV SYNC SEPARATOR

A12	670-7045-00		CKT BOARD ASSY:TV SYNC SEPARATOR	80009	670-7045-00
A12C201	290-0219-00		CAP.,FXD,ELCTLT:5UF,+75-10%,25V	56289	30D505G025BA9
A12C212	283-0177-00		CAP.,FXD,CER DI:1UF,+80-20%,25V	56289	273C5
A12C213	281-0773-00		CAP.,FXD,CER DI:0.01UF,10%,100V	04222	GC70-1C103K
A12C228	283-0698-00		CAP.,FXD,MICA D:390PF,1%,500V	09023	CD15ED391F03
A12C229	290-0283-00		CAP.,FXD,ELCTLT:0.47UF,10%,35V	56289	162D474X9035BC2
A12C301	290-0219-00		CAP.,FXD,ELCTLT:5UF,+75-10%,25V	56289	30D505G025BA9
A12C305	283-0177-00		CAP.,FXD,CER DI:1UF,+80-20%,25V	56289	273C5
A12C315	281-0811-00		CAP.,FXD,CER DI:10PF,10%,100V	72982	8035D2AADC1G100K
A12C316	281-0811-00		CAP.,FXD,CER DI:10PF,10%,100V	72982	8035D2AADC1G100K
A12C321	283-0177-00		CAP.,FXD,CER DI:1UF,+80-20%,25V	56289	273C5
A12C323	283-0177-00		CAP.,FXD,CER DI:1UF,+80-20%,25V	56289	273C5

Options—465B Service  
(SN B060000 & UP)

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A12C329	283-0339-00		CAP., FXD, CER DI:0.22UF, 10%, 50V	72982	8131N075W5R224K
A12C334	281-0813-00		CAP., FXD CER DI:0.047UF, 20%, 50V	04222	GC705-E-473M
A12C401	281-0773-00		CAP., FXD, CER DI:0.01UF, 10%, 100V	04222	GC70-1C103K
A12C403	283-0167-00		CAP., FXD, CER DI:0.1UF, 10%, 100V	72982	8131N145X5R0104K
A12C404	281-0775-00		CAP., FXD, CER DI:0.1UF, 20%, 50V	72982	8005D9AABZ5U104M
A12C405	281-0773-00		CAP., FXD, CER DI:0.01UF, 10%, 100V	04222	GC70-1C103K
A12C425	281-0773-00		CAP., FXD, CER DI:0.01UF, 10%, 100V	04222	GC70-1C103K
A12CR112	152-0141-02		SEMICONV DEVICE:SILICON, 30V, 150MA	01295	1N4152R
A12CR310	152-0141-02		SEMICONV DEVICE:SILICON, 30V, 150MA	01295	1N4152R
A12CR311	152-0141-02		SEMICONV DEVICE:SILICON, 30V, 150MA	01295	1N4152R
A12CR333	152-0141-02		SEMICONV DEVICE:SILICON, 30V, 150MA	01295	1N4152R
A12CR404	152-0141-02		SEMICONV DEVICE:SILICON, 30V, 150MA	01295	1N4152R
A12CR408	152-0141-02		SEMICONV DEVICE:SILICON, 30V, 150MA	01295	1N4152R
A12Q222	151-0190-00		TRANSISTOR:SILICON, NPN	07263	S032677
A12Q321	151-0190-00		TRANSISTOR:SILICON, NPN	07263	S032677
A12Q325	151-0220-00		TRANSISTOR:SILICON, PNP	07263	S036228
A12Q328	151-0190-00		TRANSISTOR:SILICON, NPN	07263	S032677
A12Q331	151-0190-00		TRANSISTOR:SILICON, NPN	07263	S032677
A12R101	315-0102-00		RES., FXD, CMPSN:1K OHM, 5%, 0.25W	01121	CB1025
A12R102	315-0103-00		RES., FXD, CMPSN:10K OHM, 5%, 0.25W	01121	CB1035
A12R110	315-0106-00		RES., FXD, CMPSN:10M OHM, 5%, 0.25W	01121	CB1065
A12R113	315-0105-00		RES., FXD, CMPSN:1M OHM, 5%, 0.25W	01121	CB1055
A12R115	315-0103-00		RES., FXD, CMPSN:10K OHM, 5%, 0.25W	01121	CB1035
A12R124	315-0103-00		RES., FXD, CMPSN:10K OHM, 5%, 0.25W	01121	CB1035
A12R204	315-0751-00		RES., FXD, CMPSN:750 OHM, 5%, 0.25W	01121	CB7515
A12R206	315-0100-00		RES., FXD, CMPSN:10 OHM, 5%, 0.25W	01121	CB1005
A12R207	315-0100-00		RES., FXD, CMPSN:10 OHM, 5%, 0.25W	01121	CB1005
A12R221	315-0222-00		RES., FXD, CMPSN:2.2K OHM, 5%, 0.25W	01121	CB2225
A12R222	315-0103-00		RES., FXD, CMPSN:10K OHM, 5%, 0.25W	01121	CB1035
A12R224	315-0103-00		RES., FXD, CMPSN:10K OHM, 5%, 0.25W	01121	CB1035
A12R225	315-0123-00		RES., FXD, CMPSN:12K OHM, 5%, 0.25W	01121	CB1235
A12R226	315-0122-00		RES., FXD, CMPSN:1.2K OHM, 5%, 0.25W	01121	CB1225
A12R232	315-0242-00		RES., FXD, CMPSN:2.4K OHM, 5%, 0.25W	01121	CB2425
A12R233	315-0203-00		RES., FXD, CMPSN:20K OHM, 5%, 0.25W	01121	CB2035
A12R304	315-0302-00		RES., FXD, CMPSN:3K OHM, 5%, 0.25W	01121	CB3025
A12R307	315-0123-00		RES., FXD, CMPSN:12K OHM, 5%, 0.25W	01121	CB1235
A12R308	315-0123-00		RES., FXD, CMPSN:12K OHM, 5%, 0.25W	01121	CB1235
A12R310	315-0124-00		RES., FXD, CMPSN:120K OHM, 5%, 0.25W	01121	CB1245
A12R311	315-0123-00		RES., FXD, CMPSN:12K OHM, 5%, 0.25W	01121	CB1235
A12R317	315-0433-00		RES., FXD, CMPSN:43K OHM, 5%, 0.25W	01121	CB4335
A12R318	315-0684-00		RES., FXD, CMPSN:680K OHM, 5%, 0.25W	01121	CB6845
A12R321	315-0243-00		RES., FXD, CMPSN:24K OHM, 5%, 0.25W	01121	CB2435
A12R322	315-0682-00		RES., FXD, CMPSN:6.8K OHM, 5%, 0.25W	01121	CB6825
A12R324	315-0242-00		RES., FXD, CMPSN:2.4K OHM, 5%, 0.25W	01121	CB2425
A12R325	315-0302-00		RES., FXD, CMPSN:3K OHM, 5%, 0.25W	01121	CB3025
A12R326	315-0123-00		RES., FXD, CMPSN:12K OHM, 5%, 0.25W	01121	CB1235
A12R327	315-0222-00		RES., FXD, CMPSN:2.2K OHM, 5%, 0.25W	01121	CB2225
A12R328	315-0433-00		RES., FXD, CMPSN:43K OHM, 5%, 0.25W	01121	CB4335
A12R331	315-0433-00		RES., FXD, CMPSN:43K OHM, 5%, 0.25W	01121	CB4335
A12R332	315-0243-00		RES., FXD, CMPSN:24K OHM, 5%, 0.25W	01121	CB2435
A12R401	315-0104-00		RES., FXD, CMPSN:100K OHM, 5%, 0.25W	01121	CB1045
A12R402	315-0103-00		RES., FXD, CMPSN:10K OHM, 5%, 0.25W	01121	CB1035
A12R403	315-0104-00		RES., FXD, CMPSN:100K OHM, 5%, 0.25W	01121	CB1045
A12R404	315-0103-00		RES., FXD, CMPSN:10K OHM, 5%, 0.25W	01121	CB1035
A12R405	315-0473-00		RES., FXD, CMPSN:47K OHM, 5%, 0.25W	01121	CB4735
A12R406	315-0152-00		RES., FXD, CMPSN:1.5K OHM, 5%, 0.25W	01121	CB1525
A12R407	315-0103-00		RES., FXD, CMPSN:10K OHM, 5%, 0.25W	01121	CB1035

Component No.	Tektronix Part No.	Serial/Model No. Eff	Dscont	Name & Description	Mfr Code	Mfr Part Number
A12R408	315-0202-00			RES.,FXD,CMPSN:2K OHM,5%,0.25W	01121	CB2025
A12R409	315-0202-00			RES.,FXD,CMPSN:2K OHM,5%,0.25W	01121	CB2025
A12R425	315-0125-00			RES.,FXD,CMPSN:1.2M OHM,5%,0.25W	01121	CB1255
A12U126	156-0366-02			MICROCIRCUIT,DI:DUAL D FLIP-FLOP,CHK	80009	156-0366-02
A12U129	156-0366-02			MICROCIRCUIT,DI:DUAL D FLIP-FLOP,CHK	80009	156-0366-02
A12U227	156-0704-00			MICROCIRCUIT,LI:PHASE LOCK LOOP	04713	MC14046CP
A12U315	156-0136-00			MICROCIRCUIT,LI:OPNL AMPL	02735	CA 3030
A12U438	156-1152-01			MICROCIRCUIT,DI:PRCN RETRIGGERABLE,BURN-IN	80009	156-1152-01
A12U453	156-0515-02			MICROCIRCUIT,DI:TRIPLE 3-CHANMUX,SEL	80009	156-0515-02
A12VR211	152-0226-00			SEMICOND DEVICE:ZENER,0.4W,5.1V,5%	14552	TD3810980

**REPLACEABLE MECHANICAL PARTS  
OPTION 05**

Fig. & Index No.	Tektronix Part No.	Serial/Model No. Eff	Dscont	Qty	1	2	3	4	5	Name & Description	Mfr Code	Mfr Part Number
------------------	--------------------	----------------------	--------	-----	---	---	---	---	---	--------------------	----------	-----------------

CHANGES FROM STANDARD 465B  
WHEN OPTION 05 IS ADDED

CHANGE TO:

	672-0796-00			2						CKT BOARD ASSY:ATTENUATOR	80009	672-0796-00
	333-2524-03			1						PANEL,FRONT:	80009	333-2524-03

ADD:

A7	670-6000-01			1						CKT BOARD ASSY:TRIGGER GEN & SWEEP LOGIC	80009	670-6000-01
	131-0608-00			8						. TERMINAL,PIN:0.365 L X 0.025 PH BRZ GOLD	22526	47357
	136-0252-04			6						. SOCKET,PIN TERM:U/W 0.016-0.018 DIA PINS	22526	75060-007

CHASSIS PARTS

	337-1762-00			1						SHLD,ELECTRICAL:FAN MOTOR	80009	337-1762-00
	105-0243-00			1						ACTUATOR,SWITCH:AC,DC	80009	105-0243-00
	441-1150-00			1						CHASSIS,SCOPE:SYNC SEPARATOR	80009	441-1150-00
	211-0101-00			4						SCREW,MACHINE:4-40 X 0.25,100 DEG,FLH STL	83385	OBD
	211-0244-00			4						SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH STL	78189	OBD
	179-2791-00			1						WIRING HARNESS:TV SYNC	80009	179-2791-00
	198-2318-00			1						WIRE SET,ELEC:	80009	198-2318-00
	131-0707-00			5						. CONNECTOR,TERM:22-26 AWG,BRS& CU BE GOLD	22526	47439
	175-0828-00			FT						. WIRE,ELECTRICAL:5 WIRE RIBBON	08261	SS-0526-710610C
	352-0163-00			1						. CONN BODY,PL,EL:5 WIRE BLACK	80009	352-0163-00
	407-1568-02			1						BRACKET,ANGLE:CIRCUIT BOARD,AL	80009	407-1568-02
	-----			-						(465B,DM44,OPT. 5 ONLY)		

STANDARD ACCESSORIES

	337-1674-02			1						SHLD,IMPLOSION:FILTER,MKD FOR NTSC	80009	337-1674-02
	337-1674-03			1						SHLD,IMPLOSION:FILTER,MKD FOR CCIR	80009	337-1674-03

## OPTION 07 EXTERNAL DC OPERATION

### INTRODUCTION

Option 07 is a dc-to-ac inverter that permits Tektronix oscilloscopes to operate on either 12 or 24 V dc with no performance deterioration. Circuitry is provided to protect against damage due to connection of 24 V when in the 12-V mode of operation. The 24-V external input permits use with marine and aircraft conventional dc power.

Option 07 is an integral part of the oscilloscope. The modified oscilloscope has a three-position voltage input selection slide switch (visible through the right side panel) at the rear of the line voltage selector switch. A dc-input connector is located below the fan cover on the rear panel.

Option 07 is not provided with 465B oscilloscopes equipped with the DM44 Digital Multimeter.

### SPECIFICATION

Electrical characteristics and performance requirements listed in the Specification part of this manual are applicable to the 465B Option 07 oscilloscope with the following exceptions or additions.

**DC Requirements.** Either 11.5 V to 14 V or 22 V to 28 V. Operation with 11.5 V to 14 V will not allow use of the graticule lights or Option 05. Operating range may be extended to 15 V or 30 V with a series dropping resistor. Maximum elevation for + or - power lead is 50 V with respect to oscilloscope chassis or ground.

### CONTROLS AND CONNECTORS

<b>MODE Switch</b>	Three-position switch located adjacent to the Line Voltage Selector switch on the right side panel and used to select the proper input power to the 465B.
<b>AC</b>	Permits application of ac power to the oscilloscope power switch.

**DC 12** Permits 12-V operation of the instrument from an external 12-V source.

**DC 24** Permits 24 V operation of the instrument from either an external 24 V power source or from the 1106 Battery Pack, which may be mechanically attached to the oscilloscope.

**DC Input Connector** Used for connecting external dc power source to the 465B Option 07; located on rear panel.

### OPERATION AND INSPECTION

To operate the 465B Option 07 oscilloscope, perform the following steps.

#### CAUTION

*Connect the oscilloscope frame to a ground (earth) reference before using.*

1. Set the 465B LINE SELECTOR switch and the Option 07 MODE switch to the appropriate positions for the power source to be used. Refer to Table 7-1 for proper switch positions.

Table 7-1  
LINE SWITCH AND OPTION 07 MODE SWITCH SETTING

Power Source	465B LINE SELECTOR Switch	Option 07 MODE SWITCH
115 V ac	115	AC
230 V ac	230	AC
12 V dc	—	DC 12
24 V dc	—	DC 24
Tektronix 1106	—	DC 24



**Options**

**465B Service (SN B060000 & UP)**

2. The 465B Option 07 oscilloscope may now be operated using the information, instructions, and procedures contained in preceding sections of this manual, with the exception of DM44 digital multimeter operation.

**THEORY OF OPERATION**

Option 07 is a dc-to-ac inverter operating on 12 V dc or 24 V dc. The operating frequency of the inverter is approximately 400 Hz. The following circuit description is for 24-V operation unless noted otherwise. Refer to the schematic diagrams (Figures 7-7 and 7-8) throughout the detailed circuit description.

**General Description**

The dc source is applied to the Turn-off Level circuit, the Start circuit, and the primary of T14500 (see Figure 7-6). If the dc source is above the level set by Turn-off Level Adjustment R1613, the Turn-off circuit does not operate.

The Start circuit provides a large current surge through T1631 secondary to the bases of Q1652, Q1662, Q1654, and Q1664. This starts the inverter.

The Turn-off circuit is activated in two ways. In 24 V operation, Q1622 is turned on by the source voltage dropping


below 22 V. In 12 V mode of operation, Q1626 is turned on by the accidental application of 24 V dc.

**Turn-Off Level Circuit**

For the following description, refer to Figure 7-7.

The voltage reference for the base of Q1606 is set by R1604, VR1604, and VR1605 to approximately 9.1 V. This establishes the junction of R1607 and the emitters of Q1606 and Q1608 at about 9.7 V. Power transients that occur whenever the inverter is turned on are prevented from activating the Turn-off circuit by the filtering action of C1605. This filtering action helps hold the 9.1 V supply base of Q1606 constant and prevents Q1608 from turning on, thereby allowing sufficient time for the power source to recover after providing the initial-start surge.

Source voltages higher than 22 V dc cause increased current through R1607, Q1606, and R1609. Q1608 is kept cut off by the increased voltage across R1609 and the resulting change across the divider composed of R1611, R1613, and R1614. This permits no current through R1617. Since R1617 furnishes bias to Q1622, the transistor is cut off. This permits the collector of Q1622 and the rest of the turn-off circuit to rise to a voltage determined by the inverter circuit and the dc source voltage. The collector of Q1622 may be about 24 V (with respect to -dc) with a 12-V dc source and about 36 V with a 24-V dc source.

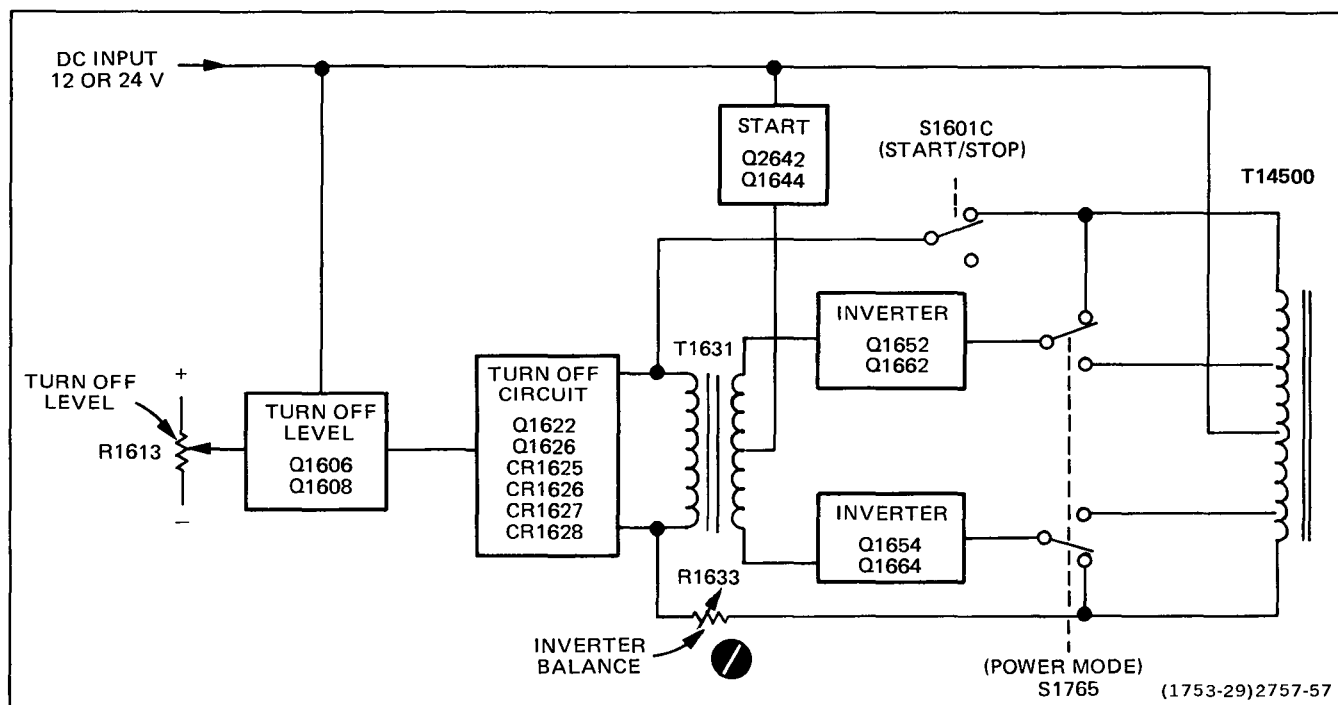

**Figure 7-6. Option 07 simplified block diagram.**

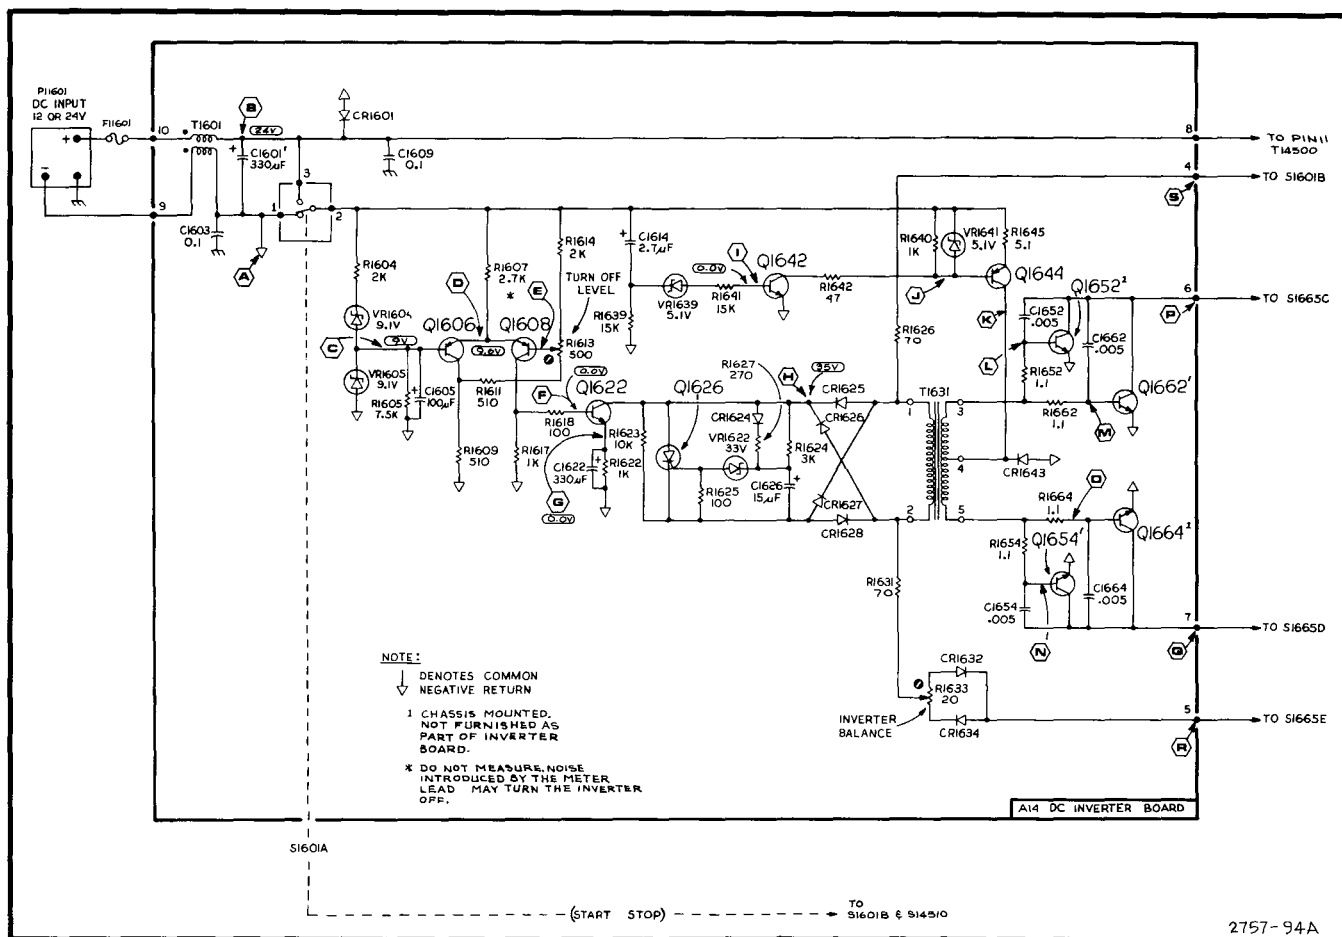


Figure 7-7. 465B Option 07 DC Inverter.

If the dc source voltage drops to less than 22 V, the current through divider R1609, R1611, R1613, and R1614 is decreased. Transistor Q1608 conducts, taking current from Q1606, and causing less drop across R1609. This makes Q1608 conduct more, and Q1606 is cut off. Current flow through R1617 turns Q1662 on. Transistor Q1622 saturates, dropping its collector voltage to about 0.2 V. The maximum base current of Q1622 is limited by R1618.

During 12 V dc operation, there is no current flow through VR1604 and VR1605, since their series rating (about 18 V) exceeds the applied voltage. The base current of Q1606, through R1605, turns Q1606 on enough to take all the current through R1607, which causes Q1608 to be cut off.

### Turn-Off Circuit

Transistor Q1622 is off under normal operating conditions until the dc source drops below 22 V and causes Q1622 to conduct. Transistor Q1622 does not conduct during 12 V dc operation, since the Turn-off Level circuit is disabled. Diodes

CR1625, CR1626, CR1627, and CR1628 form a bridge rectifier. The inverter waveform is rectified to provide operating power for the Turn-off circuit. The inverter spikes are filtered by C1626 to keep them from firing Q1626 (silicon-controlled rectifier). Resistor R1623 prevents C1626 from charging to the peak-to-peak level of the inverter spikes.

When Q1622 is turned on, it saturates. The high current path required for feedback current via CR1625 or CR1626 is provided by C1622. Whenever the inverter is shut down, C1622 discharges through R1622.

If 24 V dc is accidentally applied when the mode switch is in the 12 V position, transformer T14500 attempts to produce two times the correct feedback. This is sufficient to cause VR1622 to conduct. Zener diode VR1622 provides the firing current for silicon-controlled rectifier Q1626. Scr Q1626 fires and shorts out the bridge rectifier and the primary of T1631, stopping the inverter. Resistor R1625 prevents Q1626 from being fired by inverter noise. Resistor R1624 and capacitor C1626 provide holding current for Q1626, keeping it conducting until the surge created by the

Options  
465B Service (SN B060000 & UP)

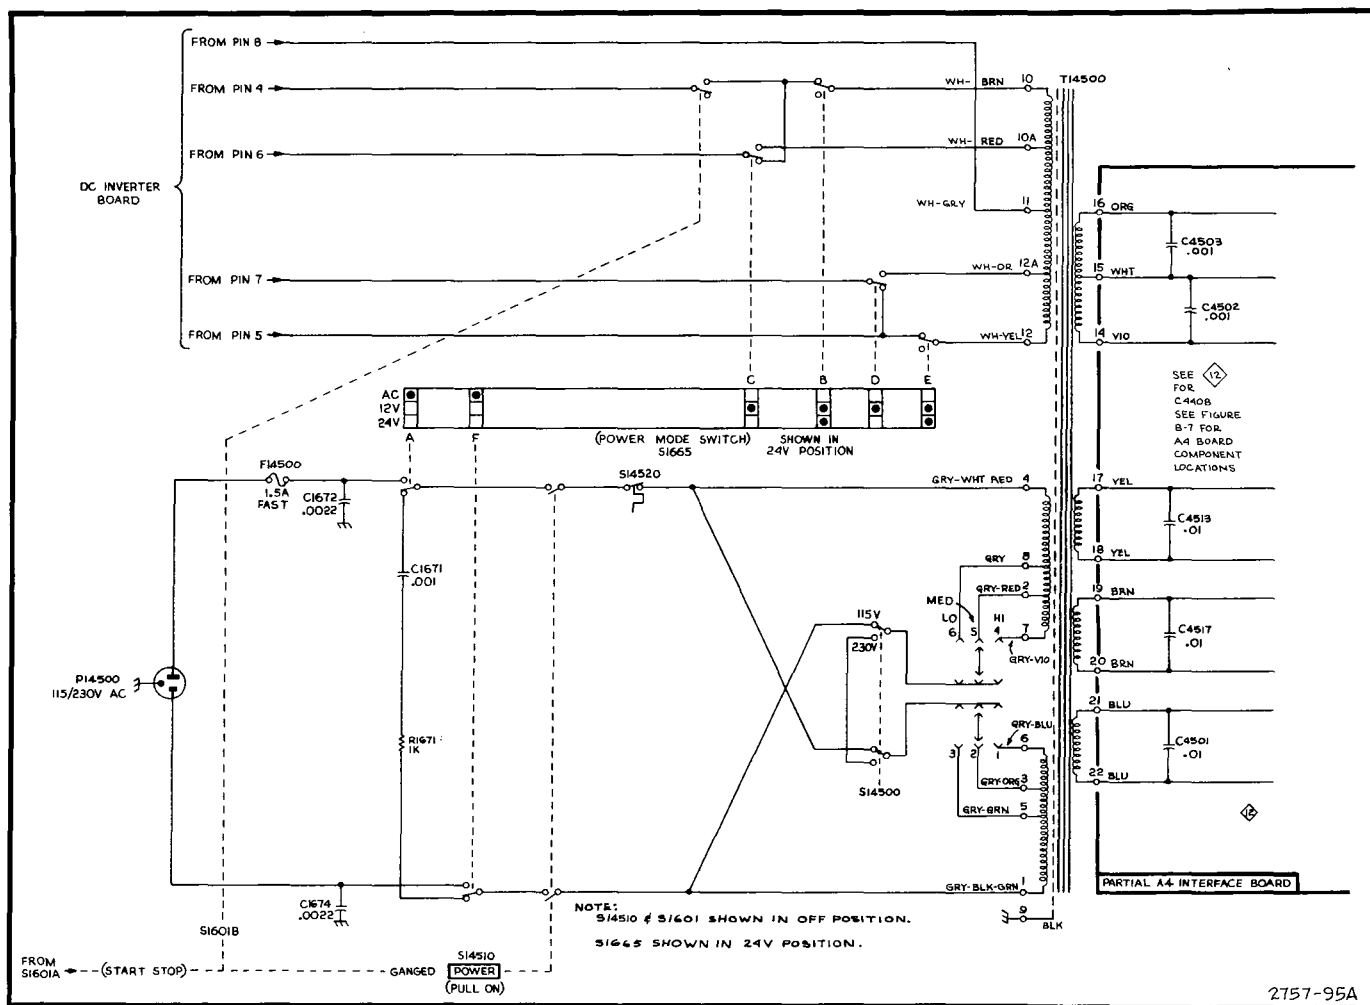


Figure 7-8. 465B Option 07 primary winding.

over-voltage conditions have terminated. Diode CR1624 permits rapid charging of C1626.

**Start Circuit**

When S1601 is closed, the external dc source is applied to C1614, VR1641, and R1645. The initial surge is coupled to Q1642 through C1614, VR1639, and R1641. Transistor Q1642 saturates until C1614 charges through R1639 to the value determined by VR1639 and the base-emitter junction of Q1642 (about 5.7 V), then Q1642 is cut off. Resistor R1641 limits the base current in Q1642. Zener diode VR1639, once C1614 is charged, makes Q1642 insensitive to input variations. Resistor R1642 limits Q1642 collector current. Transistor Q1644, R1645, and VR1641 provide a constant current during the time Q1642 is saturated, regardless of the dc source voltage. Diode CR1643 is reverse biased by this starting current. The starting current is applied to the inverter transistors through T1631.

**Inverter Circuit**

The starting surge is applied to the bases of Q1652, Q1662, Q1654, and Q1664 through T1631, R1652, R1662, R1654, and R1664. Since the transistors do not have identical parameters, one pair will conduct before the other and will start the inverter. Operating base current is provided through CR1643.

The main frequency-determining components for the inverter are R1626, R1631, and T1631 primary and secondary windings. Four base resistors (R1652, R1662, R1654, and R1664) distribute the drive evenly between the four transistors. Capacitors C1652, C1662, C1654, and C1664 degenerate the high-frequency response and reduce transients.

Feedback to maintain inverter operation is provided from T14500 primary to T1631 primary through R1626, R1631, R1633, CR1632, and CR1634. Resistors R1626 and R1631 provide frequency stability and current limiting. Resistor R1633 and diodes CR1632 and CR1634 compensate for differences in transistors and components. Diodes CR1632 and CR1634 conduct during different inverter half-cycles and permit R1633 to balance the drive to T14500.

Capacitors C4503, C4502, C4513, C4517, and C4501 are added to the secondary of T14500 with Option 07 to provide optimum reduction of transients during inverter operation.

### DC Input

External power is applied through P11601. Diode CR1601 is normally reverse biased. If the wrong polarity external power is applied, CR1601 becomes forward biased and blows fuse F11601. A low-pass network comprised of T1601, C1601, C1603, and C1609 acts as a filter to reduce transients to the dc source.

### Start-stop Switch

The capacitors in the Turn-Off and Start circuits are discharged by section A of S1601 when the switch is set to the off (stop) position. This ensures the correct time constants when S1601 is changed to the on (start) position. In the start position, the dc input is applied to the inverter circuitry by S1601, section A. At the same time, S1601, section B is closed, completing the feedback loop for the inverter tran-

sistors. Start-stop switch S1601, section B stops the inverter in the off position by opening the feedback loop between T14500 and T1631.

### Power-Mode Switch (S1665)

Sections A and F of S1665 connect filter C1671 and R1671 to T14500 during 12 V or 24 V operation to reduce converter transients (see Figure 7-8). Sections C and D of S1665 select either transformer terminals 10A and 12A or 10 and 12, to provide the same secondary output when operating on 12 V or 24 V. Sections B and E connect transformer terminals 10 and 12 to S1665 sections C and D and to the inverter feedback circuit during both 12 V and 24 V operation.

## MAINTENANCE

### Test Equipment Required

The test equipment listed in Table 7-2, or an equivalent piece of test equipment, is required to complete the performance check and adjustment of Option 07 if needed.

The specifications given for the equipment are the minimum necessary to provide accurate results. Therefore, the equipment used must meet or exceed the listed specifications. Detailed operating instructions for the test equipment are not given in this procedure. Refer to the appropriate instruction manual if more test equipment operating information is required.

Table 7-2  
OPTION 07 TEST EQUIPMENT REQUIRED

Description	Minimum Specification	Usage	Examples
DC Voltmeter	22 V to 28 V, 1% accuracy.	Set input voltage.	a. Triplet Model 630-NA b. Simpson Model 262
Test Oscilloscope <sup>a</sup>	Bandwidth, dc to 500 kHz; minimum deflection, 10 mV/div.	Verify inverter balance.	a. TEKTRONIX 212 Oscilloscope. b. TEKTRONIX 465B Oscilloscope <sup>a</sup> .
DC Power Source	22 V to 28 V and 11.5 V to 14 V. Handle starting surge of 4 to 10 A without dropping below 22 V. 12-V starting surge is approximately 15 A.	Supply operating power for Option 07.	Any variable dc power supply that meets minimum specification.

<sup>a</sup> If the instrument under test and Option 07 are operational and the power source used has a negative ground, the instrument under test may be used as the test oscilloscope.

**Options**

465B Service (SN B060000 &amp; UP)

**Circuit Board Chassis Removal**

The Option 07 circuit board is mounted on a small chassis located between the power transformer and the crt shield. To remove the chassis, first remove the two thread-forming screws located at the top of the chassis. Then remove one screw at the bottom right side of the chassis, just below the power transformer.

**ADJUSTMENT**

Option 07 may be calibrated without removing it from the oscilloscope.

In the following procedures the reference letters (A), (B), etc., refer to points indicated on the schematic diagram (Figure 7-7) and circuit board illustrations.

**NOTE**

*Option 07 is calibrated at the factory using a power supply having the specifications given in Table 7-2, Equipment Required. This permits the most accurate setting of the turn-off volts and inverter balance adjustments. Because this type of power supply may not be available, several alternative possibilities are given. The alternate power supplies have drawbacks, including voltage stability vs. time with high discharge rates. See Figure 7-9.*

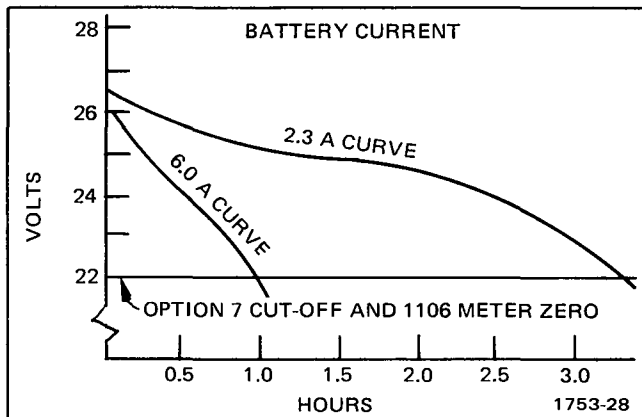


Figure 7-9. Typical battery pack discharge curves.

**Power Supply Alternatives**

1. Variable power supply with the capabilities given in Table 7-2.

2. Variable power supply with an adequate current rating, in series with the supply alternative in item 4 or item 5.

3. TEKTRONIX 1106 Battery Pack.<sup>1</sup>

4. Two 12 V wet-cell storage batteries, in series, tapped at 20 V, 22 V or 24 V.<sup>2</sup>

5. 18 to 23 NiCd cells, 4.0 ampere-hour (D cells) or greater, furnishing 20 V to 28 V.<sup>2</sup>

**CAUTION**

*This procedure is for an external dc source with the negative lead at ground potential (negative ground system).*

**Operating Range**

a. Connect the dc source to the oscilloscope equipped with Option 07. Operate the oscilloscope in the 24 V mode. Connect the voltmeter between fuse F1601 (B) and the common negative return (A). Vary the dc source from 28 V to 22 V.

CHECK—that the oscilloscope operates over the voltage range.

b. Change the dc source to 12 V. Operate the oscilloscope in the 12 V mode. Vary the dc source from 14 V to 11.5 V.

CHECK—that the oscilloscope operates over the voltage range.

<sup>1</sup> To set the turn-off level, the battery is charged above the cut-off point (22 V). An oscilloscope is connected and the battery allowed to discharge while its voltage is being monitored. As it reaches 22 V, the turn-off point is set to cut off Option 07. The turn-off point on Option 07 approximately coincides with the meter zero on the 1106.

<sup>2</sup> This does not permit accurate adjustment of the turn-off level. NiCd batteries can be used, following the technique used for item 3.

**Inverter Balance****NOTE**

*If the major oscilloscope use is with a 12 V source, perform this step while operating the oscilloscope with dc source on 12 V.*

Operate the oscilloscope in the 24 V mode. Set the dc source to 24 V. Attach the probe ground to the common negative terminal (A) and connect the test oscilloscope probe tip to C1601 (C).


CHECK—that the signal is flat. See Figure 7-10.

ADJUST—Inverter Balance (R1633) for the flattest signal.

**NOTE**

*There is a slow drift (about a second) after the Inverter Balance adjustment has been moved. This is due to transistor characteristics and will require a slight Inverter Balance readjustment.*

*A very close approximation of the preceding method can be obtained by setting the Invertr Balance control for the minimum sound coming from the Inverter.*

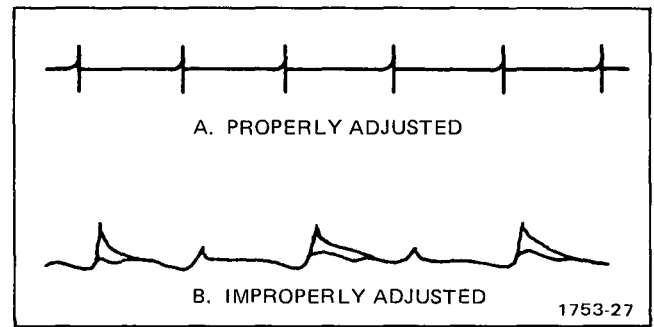


**Figure 7-10. Option 07 Inverter balance.**

**Turn-Off Level**

Set the dc source for 21.8 V.

ADJUST—Turn-off Level (R1613) slowly until Option 07 turns off.



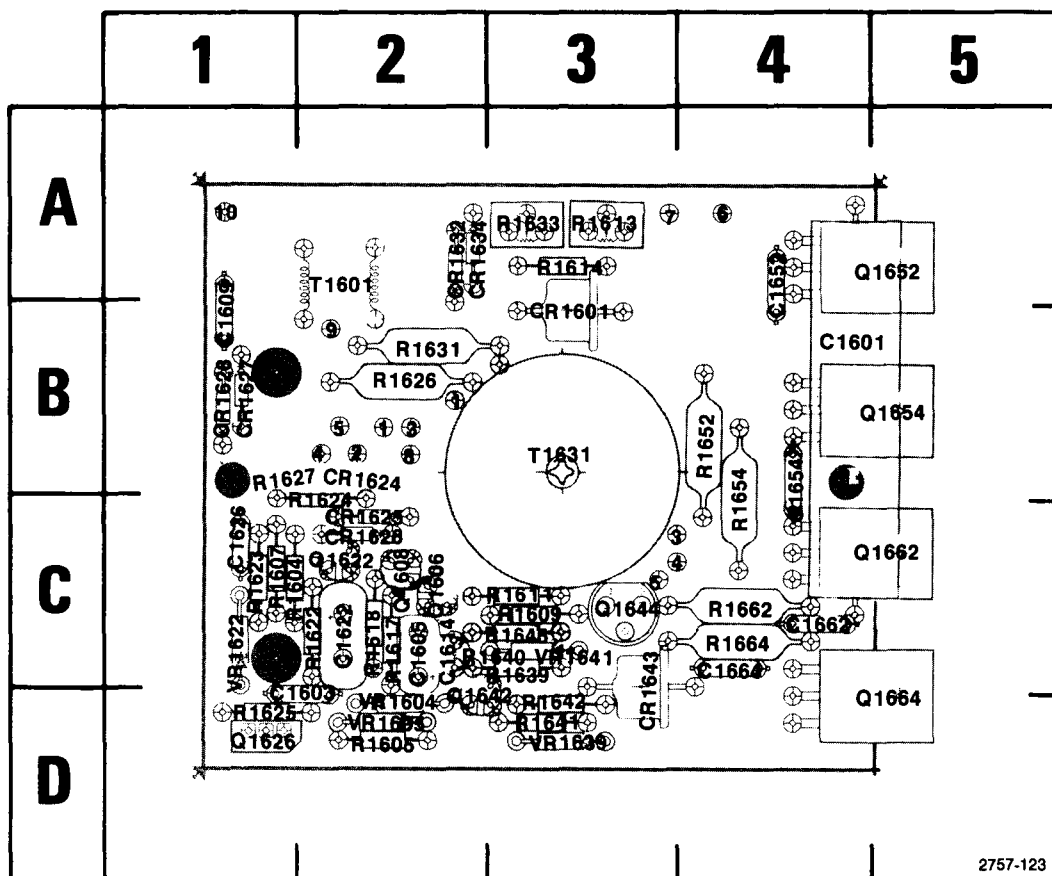

2757-123

CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC
C1601	4B	Q1606	2C	R1623	1C	VR1605	2D
C1603	2D	Q1608	2C	R1624	2C	VR1622	1C
C1605	2C	Q1622	2C	R1625	1D	VR1639	3D
C1609	1B	Q1626	2C	R1626	2B	VR1641	3C
C1614	2C	Q1642	2D	R1627	2B		
C1622	2C	Q1644	3C	R1631	2B		
C1626	1C	Q1652	5A	R1633	3A		
C1652	4A	Q1654	5B	R1639	3C		
C1654	4B	Q1662	5C	R1640	3C		
C1662	4C	Q1664	5D	R1641	3D		
C1664	4C			R1642	3D		
		R1604	1C	R1645	3C		
CR1601	3B	R1605	2D	R1652	4B		
CR1624	2B	R1607	1C	R1654	4B		
CR1625	2C	R1609	3C	R1662	4C		
CR1626	2C	R1611	3D	R1664	4C		
CR1627	1B	R1613	3A				
CR1628	1B	R1614	3A	T1601	2A		
CR1632	2A	R1617	2C	T1631	3B		
CR1634	2A	R1618	2C				
CR1643	3D	R1622	2C	VR1604	2D		

Figure 7-13. Option 07 DC Inverter circuit board component locations.



Options—465B Service  
(SN B060000 & UP)REPLACEABLE ELECTRICAL PARTS  
OPTION 07

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
CHANGES FROM STANDARD 465B WHEN OPTION 07 IS ADDED					
CHANGE TO:					
A4	670-5996-05		CKT BOARD ASSY:INTERFACE	80009	670-5996-05
ADD:					
A4C4408	283-0081-00		CAP.,FXD,CER DI:0.1UF,+80-20%,25V	56289	36C600
A4C4501	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	91418	SP103Z151-4R9
A4C4502	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	59660	831-519-Z5U-102P
A4C4503	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	59660	831-519-Z5U-102P
A4C4513	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	91418	SP103Z151-4R9
A4C4517	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	91418	SP103Z151-4R9
A14	670-2744-01		CKT BOARD ASSY:INVERTER	80009	670-2744-01
A14C1601	290-0667-00		CAP.,FXD,ELCTLT:330UF,+75-10%,50V	56289	500D158
A14C1603	283-0178-00		CAP.,FXD,CER DI:0.1UF,+80-20%,100V	72982	8131N145651 104Z
A14C1605	290-0531-00		CAP.,FXD,ELCTLT:100UF,20%,10V	90201	TDC107M010WLC
A14C1609	283-0178-00		CAP.,FXD,CER DI:0.1UF,+80-20%,100V	72982	8131N145651 104Z
A14C1614	290-0573-00		CAP.,FXD,ELCTLT:2.7UF,20%,50V	56289	196D275X0050JA1
A14C1622	290-0533-00		CAP.,FXD,ELCTLT:330UF,20%,6V	90201	TDC337M006WLD
A14C1626	290-0528-00		CAP.,FXD,ELCTLT:15UF,20%,50V	90201	TDC156M050WLC
A14C1652	283-0110-00		CAP.,FXD,CER DI:0.005UF,+80-20%,150V	56289	19C242B
A14C1654	283-0110-00		CAP.,FXD,CER DI:0.005UF,+80-20%,150V	56289	19C242B
A14C1662	283-0110-00		CAP.,FXD,CER DI:0.005UF,+80-20%,150V	56289	19C242B
A14C1664	283-0110-00		CAP.,FXD,CER DI:0.005UF,+80-20%,150V	56289	19C242B
A14CR1601	152-0198-00		SEMICONV DEVICE:SILICON,200V,3A	03508	1N5624
A14CR1624	152-0333-00		SEMICONV DEVICE:SILICON,55V,200MA	07263	FDH-6012
A14CR1625	152-0107-00		SEMICONV DEVICE:SILICON,400V,400MA	01295	G727
A14CR1626	152-0107-00		SEMICONV DEVICE:SILICON,400V,400MA	01295	G727
A14CR1627	152-0107-00		SEMICONV DEVICE:SILICON,400V,400MA	01295	G727
A14CR1628	152-0107-00		SEMICONV DEVICE:SILICON,400V,400MA	01295	G727
A14CR1632	152-0333-00		SEMICONV DEVICE:SILICON,55V,200MA	07263	FDH-6012
A14CR1634	152-0333-00		SEMICONV DEVICE:SILICON,55V,200MA	07263	FDH-6012
A14CR1643	152-0198-00		SEMICONV DEVICE:SILICON,200V,3A	03508	1N5624
A14Q1606	151-0301-00		TRANSISTOR:SILICON,PNP	27014	2N2907A
A14Q1608	151-0301-00		TRANSISTOR:SILICON,PNP	27014	2N2907A
A14Q1622	151-0302-00		TRANSISTOR:SILICON,NPN	07263	S038487
A14Q1626	151-0506-00		SCR:SILICON	03508	C106B2X283
A14Q1642	151-0302-00		TRANSISTOR:SILICON,NPN	07263	S038487
A14Q1644	151-0335-00		TRANSISTOR:SILICON,PNP	04713	SJE917
A14Q1652	151-0436-00		TRANSISTOR:SILICON,NPN	04713	SJE966
A14Q1654	151-0436-00		TRANSISTOR:SILICON,NPN	04713	SJE966
A14Q1662	151-0436-00		TRANSISTOR:SILICON,NPN	04713	SJE966
A14Q1664	151-0436-00		TRANSISTOR:SILICON,NPN	04713	SJE966
A14R1604	315-0202-00		RES.,FXD,CMPSN:2K OHM,5%,0.25W	01121	CB2025
A14R1605	315-0752-00		RES.,FXD,CMPSN:7.5K OHM,5%,0.25W	01121	CB7525
A14R1607	315-0272-00		RES.,FXD,CMPSN:2.7K OHM,5%,0.25W	01121	CB2725
A14R1609	315-0511-00		RES.,FXD,CMPSN:510 OHM,5%,0.25W	01121	CB5115
A14R1611	315-0511-00		RES.,FXD,CMPSN:510 OHM,5%,0.25W	01121	CB5115
A14R1613	311-1248-00		RES.,VAR, NONWIR:500 OHM,10%,0.50W	73138	72-23-0
A14R1614	315-0202-00		RES.,FXD,CMPSN:2K OHM,5%,0.25W	01121	CB2025
A14R1617	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	01121	CB1025
A14R1618	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	01121	CB1015

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A14R1622	315-0102-00		RES., FXD, CMPSN:1K OHM, 5%, 0.25W	01121	CB1025
A14R1623	315-0103-00		RES., FXD, CMPSN:10K OHM, 5%, 0.25W	01121	CB1035
A14R1624	315-0302-00		RES., FXD, CMPSN:3K OHM, 5%, 0.25W	01121	CB3025
A14R1625	316-0101-00		RES., FXD, CMPSN:100 OHM, 10%, 0.25W	01121	CB1011
A14R1626	308-0450-00		RES., FXD, WW:70 OHM, 1%, 3W	91637	RS2B-B70R00F
A14R1627	315-0271-00		RES., FXD, CMPSN:270 OHM, 5%, 0.25W	01121	CB2715
A14R1631	308-0450-00		RES., FXD, WW:70 OHM, 1%, 3W	91637	RS2B-B70R00F
A14R1633	311-1501-00		RES., VAR, NONWIR:20 OHM, 10%, 0.50W	73138	72-37-0
A14R1639	315-0153-00		RES., FXD, CMPSN:15K OHM, 5%, 0.25W	01121	CB1535
A14R1640	315-0102-00		RES., FXD, CMPSN:1K OHM, 5%, 0.25W	01121	CB1025
A14R1641	315-0153-00		RES., FXD, CMPSN:15K OHM, 5%, 0.25W	01121	CB1535
A14R1642	315-0470-00		RES., FXD, CMPSN:47 OHM, 5%, 0.25W	01121	CB4705
A14R1645	307-0113-00		RES., FXD, CMPSN:5.1 OHM, 5%, 0.25W	01121	CB51G5
A14R1652	308-0459-00		RES., FXD, WW:1.1 OHM, 5%, 3W	91637	CW2B-1R100J
A14R1654	308-0459-00		RES., FXD, WW:1.1 OHM, 5%, 3W	91637	CW2B-1R100J
A14R1662	308-0459-00		RES., FXD, WW:1.1 OHM, 5%, 3W	91637	CW2B-1R100J
A14R1664	308-0459-00		RES., FXD, WW:1.1 OHM, 5%, 3W	91637	CW2B-1R100J
A14T1601	120-0637-00		XFMR, TOROID:5 TURNS BIFILAR	80009	120-0637-00
A14T1631	120-0852-00		XFMR, TOROID:2 WINDINGS	80009	120-0852-00
A14VR1604	152-0306-00		SEMICONV DEVICE:ZENER, 0.4W, 9.1V, 5%	15238	Z5409
A14VR1605	152-0306-00		SEMICONV DEVICE:ZENER, 0.4W, 9.1V, 5%	15238	Z5409
A14VR1622	152-0241-00		SEMICONV DEVICE:ZENER, 0.4W, 33V, 5%	80009	152-0241-00
A14VR1639	152-0279-00		SEMICONV DEVICE:ZENER, 0.4W, 5.1V, 5%	04713	SZG35010RL
A14VR1641	152-0279-00		SEMICONV DEVICE:ZENER, 0.4W, 5.1V, 5%	04713	SZG35010RL
CHASSIS PARTS					
C1671	283-0000-00		CAP., FXD, CER DI:0.001UF, +100-0%, 500V	59660	831-519-Z5U-102P
C1672	283-0263-00		CAP., FXD, CER DI:0.0022UF, 20%, 3000V (MOUNTED ON REAR PANEL. NOT USED WHEN INSTR IS EQUIPPED WITH BOTH OPTION 4 AND OPTION 7)	56289	33C319
C1674	283-0263-00		CAP., FXD, CER DI:0.0022UF, 20%, 3000V (SEE FOOTNOTE ON C1672)	56289	33C319
C1681	283-0000-00		CAP., FXD, CER DI:0.001UF, +100-0%, 500V (SEE FOOTNOTE ON C1672)	59660	831-519-Z5U-102P
C1682	283-0000-00		CAP., FXD, CER DI:0.001UF, +100-0%, 500V (WHEN EQUIPPED WITH BOTH OPTION 4 AND OPTION 7, ONLY ONE SET OF THESE CAPS IS USED)	59660	831-519-Z5U-102P
C1683	283-0003-00		CAP., FXD, CER DI:0.01UF, +80-20%, 150V (SEE FOOTNOTE ON C1682)	91418	SP103Z151-4R9
C1684	283-0003-00		CAP., FXD, CER DI:0.01UF, +80-20%, 150V (SEE FOOTNOTE ON C1682)	91418	SP103Z151-4R9
C1685	283-0003-00		CAP., FXD, CER DI:0.01UF, +80-20%, 150V (SEE FOOTNOTE ON C1682)	91418	SP103Z151-4R9
F11601	159-0038-00		FUSE, CARTRIDGE:3AG, 15A, 32V, FAST-BLOW	71400	AGC15
P11601	131-1333-00		CONNECTOR, RCPT, :POWER	80009	131-1333-00
R1671	308-0077-00		RES., FXD, WW:1K OHM, 5%, 3W	91637	CW2B-10000J
S1601	260-0834-00		SWITCH, TOGGLE:DPDT, 5A, 125VAC, 0.25-40 THD	09353	U21-SHZQE
S1665	105-0479-00		ACTUATOR, SWITCH:SLIDE, INVERTER	80009	105-0479-00
S1665A	260-0760-00		SWITCH, SENS:10A, 250V, SPDT, SNAP ACTION	01963	E62-10A
S1665B	260-0760-00		SWITCH, SENS:10A, 250V, SPDT, SNAP ACTION	01963	E62-10A
S1665C	260-0760-00		SWITCH, SENS:10A, 250V, SPDT, SNAP ACTION	01963	E62-10A

**Options—465B Service  
(SN B060000 & UP)**

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
S1665D	260-0760-00		SWITCH, SENS:10A, 250V, SPDT, SNAP ACTION	01963	E62-10A
S1665E	260-0760-00		SWITCH, SENS:10A, 250V, SPDT, SNAP ACTION	01963	E62-10A
S1665F	260-0760-00		SWITCH, SENS:10A, 250V, SPDT, SNAP ACTION	01963	E62-10A

REPLACEABLE MECHANICAL PARTS  
OPTION 07

Options—465B Service  
(SN B06000 & UP)

OPTION 07 EXPLODED VIEW

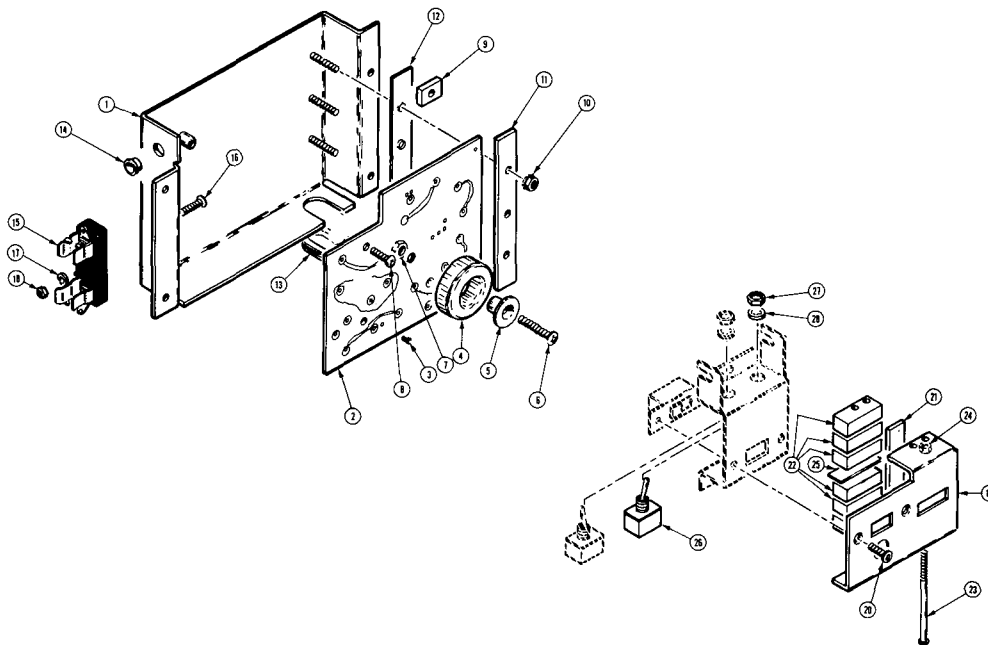


Fig. & Index No.	Tektronix Part No.	Serial/Model No. Eff	Dscont	Qty	1	2	3	4	5	Name & Description	Mfr Code	Mfr Part Number
1-	441-1171-00			1						CHASSIS, SCOPE: INVERTER (ATTACHING PARTS)	80009	441-1171-00
	211-0008-00			2						SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
	210-0938-00			2						WASHER, FLAT: 0.109 ID X 0.25 INCH OD, STL	75497	AN960-3
										* - - - -		
-2	-----			1						CKT BOARD ASSY: INVERTER (SEE A14 REPL)		
-3	136-0252-07			15						. SOCKET, PIN CONN: W/O DIMPLE	22526	75060-012
-4	-----			1						. XFMR, TOROID: (SEE T1601 REPL)		
										(ATTACHING PARTS)		
-5	343-0443-00			1						. RETAINER, XFMR:	80009	343-0443-00
-6	212-0011-00			1						. SCREW, MACHINE: 8-32 X 0.750 INCH, FLH STL	83385	OBD
-7	210-0409-00			1						. NUT, PLAIN, HEX.: 8-32 X 0.312 INCH, BRS	73743	3046-402
										* - - - -		
										(ATTACHING PARTS FOR CKT BD)		
-8	211-0116-00			2						SCR, ASSEM WSHR: 4-40 X 0.312 INCH, PNH BRS	83385	OBD
										* - - - -		
-9	-----			4						TRANSISTOR: (SEE Q1652, Q1654, Q1662, Q1664 REPL)		
										(ATTACHING PARTS)		
-10	210-0586-00			3						NUT, PL, ASSEM WA: 4-40 X 0.25, STL CD PL	83385	OBD
-11	343-0451-00			1						RETAINER, XSTR:	80009	343-0451-00
-12	342-0195-00			1						INSULATOR, PLATE: 0.70 X 3 INCHES LONG	08530	OBD
										* - - - -		
-13	348-0141-00			1						GROMMET, PLASTIC: U-SHP, 0.625 X 0.658 INCH	80009	348-0141-00
-14	348-0055-00			1						GROMMET, PLASTIC: 0.25 INCH DIA	80009	348-0055-00
-15	352-0031-00			1						FUSEHOLDER: 3AG FUSE	75915	357001
										(ATTACHING PARTS)		
-16	211-0507-00			1						SCREW, MACHINE: 6-32 X 0.312 INCH, PNH STL	83385	OBD
-17	210-0006-00			1						WASHER, LOCK: #6 INTL, 0.018THK, STL CD PL	78189	1206-00-00-0541C
-18	210-0407-00			1						NUT, PLAIN, HEX.: 6-32 X 0.25 INCH, BRS	73743	3038-0228-402
										* - - - -		
	342-0228-00			1						INSULATOR, FILM: 0.70 X 1.150 INCH LONG	80009	342-0228-00

**Options—465B Service  
(SN B060000 & UP)**

Fig. & Index No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Qty	1	2	3	4	5	Name & Description	Mfr Code	Mfr Part Number
-19	407-1341-00		1						BRACKET,ELEC SW:ALUMINUM (ATTACHING PARTS)	80009	407-1341-00
-20	211-0101-00		2						SCREW,MACHINE:4-40 X 0.25,100 DEG,FLH STL - - - * - - -	83385	OBD
-21	105-0479-00		1						ACTUATOR, SWITCH: SLIDE, INVERTER	80009	105-0479-00
-22	260-0760-00		6						SWITCH, SENS:10A, 250V, SPDT, SNAP ACTION (ATTACHING PARTS)	01963	E62-10A
-23	211-0212-00		2						SCREW,MACHINE:2-56 X 1.75 INCH,PNH STL	83385	OBD
-24	210-0405-00		1						NUT, PLAIN, HEX.: 2-56 X 0.188 INCH, BRS - - - * - - -	73743	12157-50
-25	386-2649-00		1						PL, ACTR GUIDE: INVERTER	80009	386-2649-00
	214-1925-00		1						SPRING, SW ACT: POWER SOURCE	80009	214-1925-00
-26	-----		1						SWITCH, TOGGLE: (SEE S1665 REPL) (ATTACHING PARTS)		
-27	210-0562-00		1						NUT, PLAIN, HEX.: 0.25-40 X 0.312 INCH, BBS	73743	2X20224-402
-28	210-0046-00		1						WASHER, LOCK: 0.261 ID, INTL, 0.018 THK, BRS - - - * - - -	78189	1214-05-00-0541C
	179-1962-00		1						WIRING HARNESS: VARIABLE RESISTOR	80009	179-1962-00
	348-0005-00		1						GROMMET, RUBBER: 0.50 INCH DIA	70485	230
	200-1414-11		1						COVER, SCOPE: REAR	80009	200-1414-11
	131-1333-00		1						CONNECTOR, RCPT, : POWER (ATTACHING PARTS)	80009	131-1333-00
	211-0101-00		2						SCREW,MACHINE:4-40 X 0.25,100 DEG,FLH STL	83385	OBD
	348-0365-00		4						FOOT, CABINET: PLASTIC, W/LATCH GROOVE - - - * - - -	80009	348-0365-00

## OPTION 78 TYPE P11 PHOSPHOR

This option adds a Type P11 phosphor crt to the instrument.

If this option is being added to an instrument that is already equipped with a different phosphor, or if the cathode-ray tube requires replacement, use the following procedure.

1. Follow the crt removal and installation procedure in the Maintenance section of this manual.

2. After completing crt installation, check Table 5-1 (Adjustment Interactions), in the Adjustment Procedure of this manual, for any readjustments that may be necessary.

### PARTS LIST CHANGES

**Delete**

V14000	154-0731-00	CRT, P31 Phosphor
--------	-------------	-------------------

**Add**

V14000	154-0731-04	CRT, P11 Phosphor
--------	-------------	-------------------

# REPLACEABLE ELECTRICAL PARTS

## PARTS ORDERING INFORMATION

Replacement parts are available from or through your local Tektronix, Inc. Field Office or representative.

Changes to Tektronix instruments are sometimes made to accommodate improved components as they become available, and to give you the benefit of the latest circuit improvements developed in our engineering department. It is therefore important, when ordering parts, to include the following information in your order: Part number, instrument type or number, serial number, and modification number if applicable.

If a part you have ordered has been replaced with a new or improved part, your local Tektronix, Inc. Field Office or representative will contact you concerning any change in part number.

Change information, if any, is located at the rear of this manual.

### LIST OF ASSEMBLIES

A list of assemblies can be found at the beginning of the Electrical Parts List. The assemblies are listed in numerical order. When the complete component number of a part is known, this list will identify the assembly in which the part is located.

### CROSS INDEX-MFR. CODE NUMBER TO MANUFACTURER

 
The Mfr. Code Number to Manufacturer index for the Electrical Parts List is located immediately after this page. The Cross Index provides codes, names and addresses of manufacturers of components listed in the Electrical Parts List.

### ABBREVIATIONS


Abbreviations conform to American National Standard Y1.1.

### COMPONENT NUMBER (column one of the Electrical Parts List)

A numbering method has been used to identify assemblies, subassemblies and parts. Examples of this numbering method and typical expansions are illustrated by the following:



**Read: Resistor 1234 of Assembly 23**

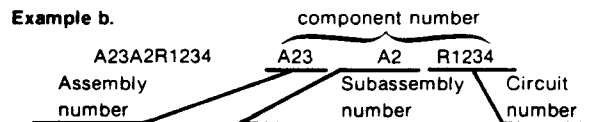

**Read: Resistor 1234 of Subassembly 2 of Assembly 23**

Only the circuit number will appear on the diagrams and circuit board illustrations. Each diagram and circuit board illustration is clearly marked with the assembly number. Assembly numbers are also marked on the mechanical exploded views located in the Mechanical Parts List. The component number is obtained by adding the assembly number prefix to the circuit number.

The Electrical Parts List is divided and arranged by assemblies in numerical sequence (e.g., assembly A1 with its subassemblies and parts, precedes assembly A2 with its subassemblies and parts).

Chassis-mounted parts have no assembly number prefix and are located at the end of the Electrical Parts List.

### TEKTRONIX PART NO. (column two of the Electrical Parts List)

Indicates part number to be used when ordering replacement part from Tektronix.

### SERIAL/MODEL NO. (columns three and four of the Electrical Parts List)

Column three (3) indicates the serial number at which the part was first used. Column four (4) indicates the serial number at which the part was removed. No serial number entered indicates part is good for all serial numbers.

### NAME & DESCRIPTION (column five of the Electrical Parts List)

In the Parts List, an Item Name is separated from the description by a colon (:). Because of space limitations, an Item Name may sometimes appear as incomplete. For further Item Name identification, the U.S. Federal Cataloging Handbook H6-1 can be utilized where possible.

### MFR. CODE (column six of the Electrical Parts List)

Indicates the code number of the actual manufacturer of the part. (Code to name and address cross reference can be found immediately after this page.)

### MFR. PART NUMBER (column seven of the Electrical Parts List)

Indicates actual manufacturers part number.

CROSS INDEX—MFR. CODE NUMBER TO MANUFACTURER

Mfr. Code	Manufacturer	Address	City, State, Zip
000HX	SAN-O INDUSTRIAL CORP.	170 WILBUR PLACE	BAHEMIA LONG ISLAND, NY 11716
00213	NYTRONICS, COMPONENTS GROUP, INC., SUBSIDIARY OF NYTRONICS, INC.	ORANGE STREET	DARLINGTON, SC 29532
00779	AMP, INC.	P.O. BOX 3608	HARRISBURG, PA 17105
00853	SANGAMO ELECTRIC CO., S. CAROLINA DIV.	P.O. BOX 128	PICKENS, SC 29671
01121	ALLEN-BRADLEY COMPANY	1201 2ND STREET SOUTH	MILWAUKEE, WI 53204
01295	TEXAS INSTRUMENTS, INC. SEMICONDUCTOR GROUP	P.O. BOX 5012	DALLAS, TX 75222
01963	CHERRY ELECTRICAL PRODUCTS CORPORATION	3600 SUNSET AVENUE	WAUKEGAN, IL 60085
02111	SPECTROL ELECTRONICS CORPORATION	17070 EAST GALE AVENUE	CITY OF INDUSTRY, CA 91745
02735	RCA CORPORATION, SOLID STATE DIVISION	ROUTE 202	SOMERVILLE, NY 08876
03508	GENERAL ELECTRIC COMPANY, SEMI-CONDUCTOR PRODUCTS DEPARTMENT	ELECTRONICS PARK P O BOX 867	SYRACUSE, NY 13201 MYRTLE BEACH, SC 29577
04222	AVX CERAMICS, DIVISION OF AVX CORP.	5005 E MCDOWELL RD, PO BOX 20923	PHOENIX, AZ 85036
04713	MOTOROLA, INC., SEMICONDUCTOR PROD. DIV.		
05397	UNION CARBIDE CORPORATION, MATERIALS SYSTEMS DIVISION	11901 MADISON AVENUE	CLEVELAND, OH 44101
05828	GENERAL INSTRUMENT CORP ELECTRONIC SYSTEMS DIV.	600 W JOHN ST.	HICKSVILLE LI, NY 11802
07263	FAIRCHILD SEMICONDUCTOR, A DIV. OF FAIRCHILD CAMERA AND INSTRUMENT CORP.	464 ELLIS STREET	MOUNTAIN VIEW, CA 94042
08806	GENERAL ELECTRIC CO., MINIATURE LAMP PRODUCTS DEPARTMENT	NELA PARK	CLEVELAND, OH 44112
09023	CORNELL-DUBILIER ELECTRONIC DIVISION FEDERAL PACIFIC ELECTRIC CO.	2652 DALRYMPLE ST. 103 MORSE STREET	SANFORD, NC 27330 WATERTOWN, MA 02172
09353	C AND K COMPONENTS, INC.	LOWER WASHINGTON STREET	DOVER, NH 03820
12697	CLAROSTAT MFG. CO., INC.	8700 E THOMAS RD, P O BOX 1390	SCOTTSDALE, AZ 85252
12954	SIEMENS CORPORATION, COMPONENTS GROUP	580 PLEASANT STREET	WATERTOWN, MA 02172
12969	UNITRODE CORPORATION	1601 OLYMPIC BLVD.	SANTA MONICA, CA 90404
14193	CAL-R, INC.		
14298	AMERICAN COMPONENTS, INC., AN INSILCO COMPANY	8TH AVE. AT HARRY STREET 3301 ELECTRONICS WAY P O BOX 3049	CONSHOHOCKEN, PA 19428 WEST PALM BEACH, FL 33402 SANTA ANA, CA 92704
14433	ITT SEMICONDUCTORS	2830 E FAIRVIEW ST.	
14552	MICRO SEMICONDUCTOR CORP.	P.O. BOX 600,600 W. JOHN ST.	HICKSVILLE, NY 11802
14936	GENERAL INSTRUMENT CORP., SEMICONDUCTOR PRODUCTS GROUP		
15238	ITT SEMICONDUCTORS, A DIVISION OF INTER NATIONAL TELEPHONE AND TELEGRAPH CORP.	P.O. BOX 168, 500 BROADWAY 2905 BLUE STAR ST.	LAWRENCE, MA 01841 ANAHEIM, CA 92806
15454	RODAN INDUSTRIES, INC.	811 E. ARQUES	SUNNYVALE, CA 94086
18324	SIGNETICS CORP.	34-32 57TH ST	WOODSIDE, NY 11377
18518	MSI ELECTRONICS INC.	P O BOX 760	MINERAL WELLS, TX 76067
19701	ELECTRA-MIDLAND CORP., MEPCO ELECTRA INC.		
22229	SOLITRON DEVICES, INC., SEMICONDUCTOR GROUP	8808 BALBOA AVENUE	SAN DIEGO OPERS, CA 92123
24546	CORNING GLASS WORKS, ELECTRONIC COMPONENTS DIVISION	550 HIGH STREET 186 WOOD AVE. S	BRADFORD, PA 16701 ISELIN, NJ 08830
25088	SIEMENS CORP.	2900 SEMICONDUCTOR DR. PO BOX 5928	SANTA CLARA, CA 95051 GREENVILLE, SC 29606
27014	NATIONAL SEMICONDUCTOR CORP.	8081 WALLACE ROAD	EDEN PRAIRIE, MN 55343
31433	UNION CARBIDE CORP ELECTRONICS DIV	10900 N. TANTAU AVE.	CUPERTINO, CA 95014
31918	IEE/SCHADOW INC.	1200 COLUMBIA AVE.	RIVERSIDE, CA 92507
32293	INTERSIL, INC.	152 E MAIN STREET	FAIRVIEW, PA 16415
32997	BOURNS, INC., TRIMPOT PRODUCTS DIV.	901 THOMPSON PL. P. O. BOX 787	SUNNYVALE, CA 94086
33095	SPECTRUM CONTROL, INC.	1981 PORT CITY BLVD.	MUSKEGON, MI 49443
34335	ADVANCED MICRO DEVICES	640 PAGE MILL ROAD	PALO ALTO, CA 94304
50157	MIDWEST COMPONENTS INC.	3700 WALNUT STREET 2820 E COLLEGE AVENUE	MCKEESPORT, PA 15132 STATE COLLEGE, PA 16801
50434	HEWLETT-PACKARD COMPANY	2990 TELESTAR CT. SUITE 212	FALLS CHURCH, VA 22042
50437	RELIANCE STEEL PRODUCTS COMPANY	67 ALBANY STREET	CAZENOVIA, NY 13035
51642	CENTRE ENGINEERING INC.	134 FULTON AVENUE	GARDEN CITY PARK, NY 11040
51984	NEC AMERICA INC. RADIO AND TRANSMISSION DIV.	5 HEMLOCK STREET	LATHAM, NY 12110
52763	STETTNER-TRUSH, INC.	6435 N PROESEL AVENUE	CHICAGO, IL 60645
52769	SPRAGUE GOODMAN ELEC., INC.	87 MARSHALL ST.	NORTH ADAMS, MA 01247
53184	XCITON CORPORATION		
55680	NICHICON/AMERICA/CORP.		
56289	SPRAGUE ELECTRIC CO.		



## CROSS INDEX—MFR. CODE NUMBER TO MANUFACTURER

Mfr. Code	Manufacturer	Address	City, State, Zip
57668	R-OHM CORP.	16931 MILLIKEN AVE.	IRVINE, CA 92713
59660	TUSONIX INC.	2155 N FORBES BLVD	TUCSON, AZ 85705
59821	CENTRALAB INC SUB NORTH AMERICAN PHILIPS CORP	7158 MERCHANT AVE	EL PASO, TX 79915
60211	VMI ELECTRONICS	594 EAST VISALIA RD	FARMERSVILLE, CA 93223
71400	BUSSMAN MFG., DIVISION OF MCGRAW- EDISON CO.	2536 W. UNIVERSITY ST.	ST. LOUIS, MO 63107
71590	CENTRALAB ELECTRONICS, DIV. OF GLOBE-UNION, INC.	P O BOX 858	FORT DODGE, IA 50501
72619	DIALIGHT, DIV. AMPEREX ELECTRONIC	203 HARRISON PLACE	BROOKLYN, NY 11237
72982	ERIE TECHNOLOGICAL PRODUCTS, INC.	644 W. 12TH ST.	ERIE, PA 16512
73138	BECKMAN INSTRUMENTS, INC., HELIPOT DIV.	2500 HARBOR BLVD.	FULLERTON, CA 92634
73899	JFD ELECTRONICS COMPONENTS CORP.	PINETREE ROAD	OXFORD, NC 27565
74276	SIGNALITE DIV., GENERAL INSTRUMENT CORP.	1933 HECK AVE.	NEPTUNE, NJ 07753
74970	JOHNSON, E. F., CO.	299 10TH AVE. S. W.	WASECA, MN 56093
75042	TRW ELECTRONIC COMPONENTS, IRC FIXED RESISTORS, PHILADELPHIA DIVISION	401 N. BROAD ST.	PHILADELPHIA, PA 19108
76493	BELL INDUSTRIES, INC., MILLER, J. W., DIV.	19070 REYES AVE., P O BOX 5825	COMPTON, CA 90224
80009	TEKTRONIX, INC.	P O BOX 500	BEAVERTON, OR 97077
80031	ELECTRA-MIDLAND CORP., MEPCO DIV.	22 COLUMBIA ROAD	MORRISTOWN, NJ 07960
82389	SWITCHCRAFT, INC.	5555 N. ELSTON AVE.	CHICAGO, IL 60630
83003	VARO, INC.	P O BOX 411, 2203 WALNUT STREET	GARLAND, TX 75040
90201	MALLORY CAPACITOR CO., DIV. OF P. R. MALLORY AND CO., INC.	3029 E. WASHINGTON STREET P. O. BOX 372	INDIANAPOLIS, IN 46206
91637	DALE ELECTRONICS, INC.	P. O. BOX 609	COLUMBUS, NE 68601
93410	ESSEX INTERNATIONAL, INC., CONTROLS DIV. LEXINGTON PLANT	P. O. BOX 1007	MANSFIELD, OH 44903
96733	SAN FERNANDO ELECTRIC MFG CO	1501 FIRST ST	SAN FERNANDO, CA 91341
S3629	PANEL COMPONENTS CORP.	2015 SECOND ST.	BERKELEY, CA 94170

Component No.	Tektronix Part No.	Serial/Model No. Eff	Dscont	Name & Description	Mfr Code	Mfr Part Number
A1	670-5997-03	B060000	B063303	CKT BOARD ASSY:VERTICAL PREAMP	80009	670-5997-03
A1	670-5997-04	B063304		CKT BOARD ASSY:VERTICAL PREAMP	80009	670-5997-04
A2	670-6385-00			CKT BOARD ASSY:VERTICAL OUTPUT	80009	670-6385-00
A3	670-6003-00			CKT BOARD ASSY:ATTENUATOR	80009	670-6003-00
A4	670-5996-03			CKT BOARD ASSY:INTERFACE	80009	670-5996-03
A4	---			(SEE OPTION SECTION FOR OPT 04 & OPT 07)		
A4	670-5996-04			CKT BOARD ASSY:INTERFACE	80009	670-5996-04
A4	---			(OPTION 04 ONLY)		
A4	670-5996-05			CKT BOARD ASSY:INTERFACE	80009	670-5996-05
A4	---			(OPTION 07 ONLY)		
A5	670-5998-00			CKT BOARD ASSY:VERTICAL MODE SWITCH	80009	670-5998-00
A6	670-6001-00			CKT BOARD ASSY:TIMING	80009	670-6001-00
A7	670-6000-00			CKT BOARD ASSY:TRIGGER GEN & SWEEP LOGIC	80009	670-6000-00
A7	670-6000-01			CKT BOARD ASSY:TRIGGER GEN & SWEEP LOGIC	80009	670-6000-01
A7	---			(OPTION 05 ONLY)		
A8	670-6002-01			CKT BOARD ASSY:FAN MOTOR	80009	670-6002-01
A9	670-6004-00			CKT BOARD ASSY:PROBE CODING	80009	670-6004-00
A10	670-2279-00			CKT BOARD ASSY:CRT SCALE ILLUMINATION	80009	670-2279-00
A12	670-7045-00			CKT BOARD ASSY:TV SYNC SEPARATOR	80009	670-7045-00
A12	---			(OPTION 05 ONLY)		
A14	670-2744-01			CKT BOARD ASSY:INVERTER	80009	670-2744-01
A14	---			(OPTION 7 ONLY)		
A1	670-5997-03	B060000	B063303	CKT BOARD ASSY:VERTICAL PREAMP	80009	670-5997-03
A1	670-5997-04	B063304		CKT BOARD ASSY:VERTICAL PREAMP	80009	670-5997-04
A1C1016	281-0763-00			CAP.,FXD,CER DI:47PF,10%,100V	04222	MA101A470KAA
A1C1026	281-0815-00			CAP.,FXD,CER DI:0.027UF,20%,50V	72982	8005D9AABW5R273M
A1C1037	281-0815-00			CAP.,FXD,CER DI:0.027UF,20%,50V	72982	8005D9AABW5R273M
A1C1048	281-0812-00			CAP.,FXD,CER DI:1000PF,10%,100V	04222	MA101C102KAA
A1C1071	281-0813-00			CAP.,FXD,CER DI:0.047UF,20%,50V	96733	R2980
A1C1072	281-0786-00			CAP.,FXD,CER DI:150PF,10%,100V	04222	MA101A151KAA
A1C1075	281-0773-00			CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A1C1091	281-0773-00			CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A1C1095	281-0815-00			CAP.,FXD,CER DI:0.027UF,20%,50V	72982	8005D9AABW5R273M
A1C1112	281-0798-00			CAP.,FXD,CER DI:51PF,1%,100V	96733	R2928
A1C1119	290-0517-00			CAP.,FXD,ELCTLT:6.8UF,20%,35V	90201	TDC685M035FL
A1C1135	290-0517-00			CAP.,FXD,ELCTLT:6.8UF,20%,35V	90201	TDC685M035FL
A1C1142	281-0823-00			CAP.,FXD,CER DI:470PF,10%,50V	04222	MA105A471KAA
A1C1144	281-0819-00			CAP.,FXD,CER DI:33PF,5%,50V	72982	8035BC0G330
A1C1152	281-0809-00			CAP.,FXD,CER DI:200PF,5%,100V	04222	MA101A201JAA
A1C1173	283-0114-00			CAP.,FXD,CER DI:0.0015UF,5%,200V	59660	805534Y5DO152J
A1C1192	281-0205-00			CAP.,VAR,PLSTC:5.5-65PF,100V	80031	2810C5R565QJ02F0
A1C1287	281-0815-00			CAP.,FXD,CER DI:0.027UF,20%,50V	72982	8005D9AABW5R273M
A1C1306	281-0579-00			CAP.,FXD,CER DI:21PF,5%,500V	59660	301000C0G0210J
A1C1334	281-0773-00			CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A1C1342	281-0204-00			CAP.,VAR,PLSTC:2-22PF,100V	80031	2807C00222MJ02
A1C1353	281-0809-00			CAP.,FXD,CER DI:200PF,5%,100V	04222	MA101A201JAA
A1C1384	281-0815-00			CAP.,FXD,CER DI:0.027UF,20%,50V	72982	8005D9AABW5R273M
A1C1385	281-0815-00			CAP.,FXD,CER DI:0.027UF,20%,50V	72982	8005D9AABW5R273M
A1C1396	290-0517-00			CAP.,FXD,ELCTLT:6.8UF,20%,35V	90201	TDC685M035FL
A1C1398	281-0547-00			CAP.,FXD,CER DI:2.7PF,10%,500V	04222	7001-COJ-2R7C
A1C1398	---			(NOMINAL VALUE,SELECTED)		

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A1C1405	281-0589-00		CAP.,FXD,CER DI:170PF,5%,500V	72982	301000Z5D0171J
A1C1422	281-0823-00		CAP.,FXD,CER DI:470PF,10%,50V	04222	MA105A471KAA
A1C1462	290-0517-00		CAP.,FXD,ELCTLT:6.8UF,20%,35V	90201	TDC685M035FL
A1C1464	290-0517-00		CAP.,FXD,ELCTLT:6.8UF,20%,35V	90201	TDC685M035FL
A1C1466	290-0517-00		CAP.,FXD,ELCTLT:6.8UF,20%,35V	90201	TDC685M035FL
A1C1502	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A1C1517	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A1C1521	281-0823-00		CAP.,FXD,CER DI:470PF,10%,50V	04222	MA105A471KAA
A1C1525	290-0527-00		CAP.,FXD,ELCTLT:15UF,20%,20V	90201	TDC156M020NFL
A1C1586	283-0114-00		CAP.,FXD,CER DI:0.0015UF,5%,200V	59660	805534Y5DO152J
A1C1587	281-0786-00		CAP.,FXD,CER DI:150PF,10%,100V	04222	MA101A151KAA
A1C1592	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A1C1597	281-0815-00		CAP.,FXD,CER DI:0.027UF,20%,50V	72982	8005D9AABW5R273M
A1C1611	281-0814-00		CAP.,FXD,CER DI:100PF,10%,100V	04222	GC101A101K
A1C1615	281-0814-00		CAP.,FXD,CER DI:100PF,10%,100V	04222	GC101A101K
A1C1623	281-0814-00		CAP.,FXD,CER DI:100PF,10%,100V	04222	GC101A101K
A1C1643	281-0204-00		CAP.,VAR,PLSTC:2-22PF,100V	80031	2807C00222MJ02
A1C1647	281-0809-00		CAP.,FXD,CER DI:200PF,5%,100V	04222	MA101A201JAA
A1C1682	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A1C1683	281-0813-00		CAP.,FXD,CER DI:0.047UF,20%,50V	96733	R2980
A1C1690	281-0205-00		CAP.,VAR,PLSTC:5.5-65PF,100V	80031	2810C5R565QJ02F0
A1C1714	281-0814-00		CAP.,FXD,CER DI:100PF,10%,100V	04222	GC101A101K
A1C1723	281-0814-00		CAP.,FXD,CER DI:100PF,10%,100V	04222	GC101A101K
A1C1726	281-0814-00		CAP.,FXD,CER DI:100PF,10%,100V	04222	GC101A101K
A1C1734	290-0527-00		CAP.,FXD,ELCTLT:15UF,20%,20V	90201	TDC156M020NFL
A1C1787	281-0815-00		CAP.,FXD,CER DI:0.027UF,20%,50V	72982	8005D9AABW5R273M
A1C1804	281-0630-00		CAP.,FXD,CER DI:390PF,5%,500V	72982	630000Y5D391J
A1C1813	281-0809-00		CAP.,FXD,CER DI:200PF,5%,100V	04222	MA101A201JAA
A1C1822	281-0763-00		CAP.,FXD,CER DI:47PF,10%,100V	04222	MA101A470KAA
A1C1827	281-0798-00		CAP.,FXD,CER DI:51PF,1%,100V	96733	R2928
A1C1832	290-0517-00		CAP.,FXD,ELCTLT:6.8UF,20%,35V	90201	TDC685M035FL
A1C1837	281-0815-00		CAP.,FXD,CER DI:0.027UF,20%,50V	72982	8005D9AABW5R273M
A1C1846	281-0812-00		CAP.,FXD,CER DI:1000PF,10%,100V	04222	MA101C102KAA
A1C1848	281-0759-00		CAP.,FXD,CER DI:22PF,10%,100V	96733	R2735
A1C1854	281-0809-00		CAP.,FXD,CER DI:200PF,5%,100V	04222	MA101A201JAA
A1C1885	281-0815-00		CAP.,FXD,CER DI:0.027UF,20%,50V	72982	8005D9AABW5R273M
A1C1886	281-0815-00		CAP.,FXD,CER DI:0.027UF,20%,50V	72982	8005D9AABW5R273M
A1C1894	290-0517-00		CAP.,FXD,ELCTLT:6.8UF,20%,35V	90201	TDC685M035FL
A1C1896	281-0547-00		CAP.,FXD,CER DI:2.7PF,10%,500V	04222	7001-COJ-2R7C
A1C1896	—		(NOMINAL VALUE,SELECTED)		
A1C1906	281-0799-00		CAP.,FXD,CER DI:62PF,2%,100V	04222	MA101A620GAA
A1C1911	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A1C1912	290-0517-00		CAP.,FXD,ELCTLT:6.8UF,20%,35V	90201	TDC685M035FL
A1C1943	281-0823-00		CAP.,FXD,CER DI:470PF,10%,50V	04222	MA105A471KAA
A1CR1013	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A1CR1014	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A1CR1015	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A1CR1023	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A1CR1024	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A1CR1034	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A1CR1193	152-0153-00		SEMICON DVC,DI:SW,SI,10V,50MA,DO-7	07263	FD7003
A1CR1263	152-0612-00		SEMICON DEVICE:V VAR CAP.,4V,17.5PF	18518	152-0612-00
A1CR1264	152-0612-00		SEMICON DEVICE:V VAR CAP.,4V,17.5PF	18518	152-0612-00
A1CR1298	152-0323-00		SEMICON DEVICE:SILICON,35V,0.1A	14552	MT5085

Component No.	Tektronix Part No.	Serial/Model No. Eff	Dscont	Name & Description	Mfr Code	Mfr Part Number
A1CR1312	152-0141-02			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A1CR1327	152-0141-02			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A1CR1432	152-0322-00			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	50434	5082-2672
A1CR1434	152-0322-00			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	50434	5082-2672
A1CR1436	152-0322-00			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	50434	5082-2672
A1CR1438	152-0322-00			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	50434	5082-2672
A1CR1441	152-0322-00			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	50434	5082-2672
A1CR1443	152-0322-00			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	50434	5082-2672
A1CR1445	152-0322-00			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	50434	5082-2672
A1CR1447	152-0322-00			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	50434	5082-2672
A1CR1529	152-0141-02			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A1CR1541	152-0322-00			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	50434	5082-2672
A1CR1543	152-0322-00			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	50434	5082-2672
A1CR1545	152-0322-00			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	50434	5082-2672
A1CR1547	152-0322-00			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	50434	5082-2672
A1CR1693	152-0153-00			SEMICON DVC,DI:SW,SI,10V,50MA,DO-7	07263	FD7003
A1CR1727	152-0141-02			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A1CR1763	152-0612-00			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	18518	152-0612-00
A1CR1764	152-0612-00			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	18518	152-0612-00
A1CR1796	152-0323-00			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	14552	MT5085
A1CR1818	152-0141-02			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A1CR1918	152-0141-02			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A1CR1936	152-0141-02			SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A1L1245	108-0433-00			COIL,RF:0.09UH	80009	108-0433-00
A1L1412	108-0182-00			COIL,RF:FIXED,285NH	80009	108-0182-00
A1L1512	108-0182-00			COIL,RF:FIXED,285NH	80009	108-0182-00
A1L1642	108-0433-00			COIL,RF:0.09UH	80009	108-0433-00
A1Q1004	151-0190-00			TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A1Q1028	151-0438-00	B060000	B063303	TRANSISTOR:SILICON,PNP,SEL FROM SPS692	80009	151-0438-00
A1Q1028	151-0221-00	B063304		TRANSISTOR:SILICON,PNP	04713	SPS246
A1Q1038	151-0271-00			TRANSISTOR:SILICON,PNP	04713	SPS8236
A1Q1045	151-0271-00			TRANSISTOR:SILICON,PNP	04713	SPS8236
A1Q1062	151-0190-00			TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A1Q1118	151-0221-00			TRANSISTOR:SILICON,PNP	04713	SPS246
A1Q1125	151-0221-00			TRANSISTOR:SILICON,PNP	04713	SPS246
A1Q1145	151-0271-00			TRANSISTOR:SILICON,PNP	04713	SPS8236
A1Q1150	151-0221-00			TRANSISTOR:SILICON,PNP	04713	SPS246
A1Q1155	151-0434-00			TRANSISTOR:SILICON,PNP	04713	SS7144
A1Q1175	151-0198-00			TRANSISTOR:SELECTED	04713	SPS8802-1
A1Q1215	151-0198-00			TRANSISTOR:SELECTED	04713	SPS8802-1
A1Q1225	151-0221-00			TRANSISTOR:SILICON,PNP	04713	SPS246
A1Q1235	151-0221-00			TRANSISTOR:SILICON,PNP	04713	SPS246
A1Q1250	151-0221-00			TRANSISTOR:SILICON,PNP	04713	SPS246
A1Q1297	151-1090-00			TRANSISTOR:SILICON,DUAL,N CHANNEL,FET	32293	ITS30929
A1Q1344	151-0221-00			TRANSISTOR:SILICON,PNP	04713	SPS246
A1Q1346	151-0221-00			TRANSISTOR:SILICON,PNP	04713	SPS246
A1Q1355	151-0434-00			TRANSISTOR:SILICON,PNP	04713	SS7144
A1Q1375	151-0198-00			TRANSISTOR:SELECTED	04713	SPS8802-1
A1Q1426	151-0472-00			TRANSISTOR:SILICON,NPN	51984	NE41632B
A1Q1428	151-0472-00			TRANSISTOR:SILICON,NPN	51984	NE41632B
A1Q1555	151-0190-00			TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A1Q1617	151-0188-00			TRANSISTOR:PNP,SI,TO-92	04713	SPS6868
A1Q1619	151-0188-00			TRANSISTOR:PNP,SI,TO-92	04713	SPS6868
A1Q1636	151-0367-00			TRANSISTOR:SILICON,NPN,SEL FROM 3571TP	04713	SPS 8811

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A1Q1644	151-0221-00		TRANSISTOR:SILICON,PNP	04713	SPS246
A1Q1646	151-0221-00		TRANSISTOR:SILICON,PNP	04713	SPS246
A1Q1655	151-0434-00		TRANSISTOR:SILICON,PNP	04713	SS7144
A1Q1675	151-0198-00		TRANSISTOR:SELECTED	04713	SPS8802-1
A1Q1698	151-1090-00		TRANSISTOR:SILICON,DUAL,N CHANNEL,FET	32293	ITS30929
A1Q1719	151-0188-00		TRANSISTOR:PNP,SI,TO-92	04713	SPS6868
A1Q1746	151-0221-00		TRANSISTOR:SILICON,PNP	04713	SPS246
A1Q1812	151-0188-00		TRANSISTOR:PNP,SI,TO-92	04713	SPS6868
A1Q1833	151-0221-00		TRANSISTOR:SILICON,PNP	04713	SPS246
A1Q1845	151-0271-00		TRANSISTOR:SILICON,PNP	04713	SPS8236
A1Q1855	151-0434-00		TRANSISTOR:SILICON,PNP	04713	SS7144
A1Q1875	151-0198-00		TRANSISTOR:SELECTED	04713	SPS8802-1
A1Q1938	151-0271-00		TRANSISTOR:SILICON,PNP	04713	SPS8236
A1Q1948	151-0271-00		TRANSISTOR:SILICON,PNP	04713	SPS8236
A1Q1954	151-0221-00		TRANSISTOR:SILICON,PNP	04713	SPS246
A1R1015	315-0472-00		RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	57668	NTR25J-E04K7
A1R1016	321-0064-00		RES.,FXD,FILM:45.3 OHM,1%,0.125W	91637	CMF55116G45R30F
A1R1032	321-0204-00		RES.,FXD,FILM:1.3K OHM,1%,0.125W	91637	CMF55116G13000F
A1R1033	315-0331-00		RES.,FXD,CMPSN:330 OHM,5%,0.25W	57668	NTR25J-E330E
A1R1035	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A1R1042	315-0431-00		RES.,FXD,CMPSN:430 OHM,5%,0.25W	57668	NTR25J-E 430E
A1R1052	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A1R1055	311-1311-00		RES.,VAR, NONWIR:1K OHM,20%,0.5W	01121	73U4G048L102M
A1R1064	321-0190-00		RES.,FXD,FILM:931 OHM,1%,0.125W	91637	MFF1816G931R0F
A1R1072	315-0112-00		RES.,FXD,CMPSN:1.1K OHM,5%,0.25W	57668	NTR25J-E 1K1
A1R1081	321-0218-00		RES.,FXD,FILM:1.82K OHM,1%,0.125W	91637	MFF1816G18200F
A1R1082	321-0218-00		RES.,FXD,FILM:1.82K OHM,1%,0.125W	91637	MFF1816G18200F
A1R1087	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A1R1095	321-0030-00		RES.,FXD,FILM:20 OHM,1%,0.125W	91637	CMF55116G20R00F
A1R1106	321-0064-00		RES.,FXD,FILM:45.3 OHM,1%,0.125W	91637	CMF55116G45R30F
A1R1107	321-0068-00		RES.,FXD,FILM:49.9 OHM,1%,0.125W	91637	CMF55116G49R90F
A1R1108	321-0126-00		RES.,FXD,FILM:200 OHM,1%,0.125W	91637	CMF55116G200R0F
A1R1116	315-0751-00		RES.,FXD,CMPSN:750 OHM,5%,0.25W	57668	NTR25J-E750E
A1R1117	315-0331-00		RES.,FXD,CMPSN:330 OHM,5%,0.25W	57668	NTR25J-E330E
A1R1126	311-1564-00		RES.,VAR, NONWIR:TRMR,500 OHM,0.5W	32997	3352T-CK5-501
A1R1135	311-1558-00		RES.,VAR, NONWIR:TRMR,20K OHM,0.5W	32997	3352T-1-203
A1R1136	315-0331-00		RES.,FXD,CMPSN:330 OHM,5%,0.25W	57668	NTR25J-E330E
A1R1143	321-0192-00		RES.,FXD,FILM:976 OHM,1%,0.125W	91637	CMF55116G976R0F
A1R1144	321-0126-00		RES.,FXD,FILM:200 OHM,1%,0.125W	91637	CMF55116G200R0F
A1R1147	315-0390-00		RES.,FXD,CMPSN:39 OHM,5%,0.25W	57668	NTR25J-E39E0
A1R1148	315-0222-00		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	57668	NTR25J-E02K2
A1R1152	315-0241-00		RES.,FXD,CMPSN:240 OHM,5%,0.25W	57668	NTR25J-E 240E
A1R1159	321-0126-00		RES.,FXD,FILM:200 OHM,1%,0.125W	91637	CMF55116G200R0F
A1R1168	315-0183-00		RES.,FXD,CMPSN:18K OHM,5%,0.25W	57668	NTR25J-E 18K
A1R1173	315-0241-00		RES.,FXD,CMPSN:240 OHM,5%,0.25W	57668	NTR25J-E 240E
A1R1176	311-1560-00		RES.,VAR, NONWIR:TRMR,5K OHM,0.5W	32997	3352T-1-502
A1R1185	311-1560-00		RES.,VAR, NONWIR:TRMR,5K OHM,0.5W	32997	3352T-1-502
A1R1186	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A1R1188	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A1R1190	311-1567-00		RES.,VAR, NONWIR:TRMR,100 OHM,0.50W	73138	91-89-0
A1R1202	311-1564-00		RES.,VAR, NONWIR:TRMR,500 OHM,0.5W	32997	3352T-CK5-501
A1R1205	321-0206-00		RES.,FXD,FILM:1.37K OHM,1%,0.125W	91637	MFF1816G13700F
A1R1206	321-0177-00		RES.,FXD,FILM:681 OHM,1%,0.125W	57668	RB14FXE681E
A1R1207	315-0271-00		RES.,FXD,CMPSN:270 OHM,5%,0.25W	01121	CB2715

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A1R1208	323-0156-00		RES.,FXD,FILM:412 OHM,1%,0.50W	75042	CECT0-4120F
A1R1216	315-0511-00		RES.,FXD,CMPSN:510 OHM,5%,0.25W	57668	NTR25J-E 510E
A1R1232	315-0430-00		RES.,FXD,CMPSN:43 OHM,5%,0.25W	57668	NTR25J-E 43E
A1R1233	315-0512-00		RES.,FXD,CMPSN:5.1K OHM,5%,0.25W	57668	NTR25J-E05K1
A1R1234	321-0196-00		RES.,FXD,FILM:1.07K OHM,1%,0.125W	91637	CMF55116G10700F
A1R1242	321-0192-00		RES.,FXD,FILM:976 OHM,1%,0.125W	91637	CMF55116G976R0F
A1R1243	315-0392-00		RES.,FXD,CMPSN:3.9K OHM,5%,0.25W	57668	NTR25J-E03K9
A1R1244	315-0392-00		RES.,FXD,CMPSN:3.9K OHM,5%,0.25W	57668	NTR25J-E03K9
A1R1246	315-0390-00		RES.,FXD,CMPSN:39 OHM,5%,0.25W	57668	NTR25J-E39E0
A1R1247	315-0222-00		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	57668	NTR25J-E02K2
A1R1252	321-0170-00		RES.,FXD,FILM:576 OHM,1%,0.125W	91637	CMF55116G576R0F
A1R1253	321-0170-00		RES.,FXD,FILM:576 OHM,1%,0.125W	91637	CMF55116G576R0F
A1R1254	321-0089-00		RES.,FXD,FILM:82.5 OHM,1%,0.125W	91637	CMF55116G82R50F
A1R1256	315-0100-00		RES.,FXD,CMPSN:10 OHM,5%,0.25W	57668	NTR25J-E 10E0
A1R1258	315-0100-00		RES.,FXD,CMPSN:10 OHM,5%,0.25W	57668	NTR25J-E 10E0
A1R1274	315-0301-00		RES.,FXD,CMPSN:300 OHM,5%,0.25W	57668	NTR25J-E300E
A1R1275	321-0181-00		RES.,FXD,FILM:750 OHM,1%,0.125W	91637	CMF55116G750R0F
A1R1276	321-0181-00		RES.,FXD,FILM:750 OHM,1%,0.125W	91637	CMF55116G750R0F
A1R1278	315-0270-00		RES.,FXD,CMPSN:27 OHM,5%,0.25W	57668	NTR25J-E 27E
A1R1285	311-1403-00		RES.,VAR,NONWIR:5K OHM,20%,0.50W	01121	18M651
A1R1296	321-0030-00		RES.,FXD,FILM:20 OHM,1%,0.125W	91637	CMF55116G20R00F
A1R1299	315-0621-00		RES.,FXD,CMPSN:620 OHM,5%,0.25W	57668	NTR25J-E620E
A1R1299	—		(NOMINAL VALUE,SELECTED)		
A1R1311	321-0049-00		RES.,FXD,FILM:31.6 OHM,1%,0.125W	91637	CMF55116G31R60F
A1R1314	321-0065-00		RES.,FXD,FILM:46.4 OHM,1%,0.125W	57668	RB14FXE 46E4
A1R1326	315-0430-00		RES.,FXD,CMPSN:43 OHM,5%,0.25W	57668	NTR25J-E 43E
A1R1328	321-0126-00		RES.,FXD,FILM:200 OHM,1%,0.125W	91637	CMF55116G200R0F
A1R1333	315-0821-00		RES.,FXD,CMPSN:820 OHM,5%,0.25W	57668	NTR25J-E 820E
A1R1334	315-0821-00		RES.,FXD,CMPSN:820 OHM,5%,0.25W	57668	NTR25J-E 820E
A1R1335	311-1563-00		RES.,VAR,NONWIR:1K OHM,20%,0.50W	73138	91-85-0
A1R1353	315-0241-00		RES.,FXD,CMPSN:240 OHM,5%,0.25W	57668	NTR25J-E 240E
A1R1358	321-0126-00		RES.,FXD,FILM:200 OHM,1%,0.125W	91637	CMF55116G200R0F
A1R1376	315-0301-00		RES.,FXD,CMPSN:300 OHM,5%,0.25W	57668	NTR25J-E300E
A1R1382	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A1R1384	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A1R1385	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A1R1391	315-0151-00		RES.,FXD,CMPSN:150 OHM,5%,0.25W	57668	NTR25J-E150E
A1R1392	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A1R1422	315-0750-00		RES.,FXD,CMPSN:75 OHM,5%,0.25W	57668	NTR25J-E75E0
A1R1438	315-0302-00		RES.,FXD,CMPSN:3K OHM,5%,0.25W	57668	NTR25J-E03K0
A1R1439	315-0302-00		RES.,FXD,CMPSN:3K OHM,5%,0.25W	57668	NTR25J-E03K0
A1R1448	315-0511-00		RES.,FXD,CMPSN:510 OHM,5%,0.25W	57668	NTR25J-E 510E
A1R1449	315-0751-00		RES.,FXD,CMPSN:750 OHM,5%,0.25W	57668	NTR25J-E750E
A1R1482	311-1561-00		RES.,VAR,NONWIR:2.5K OHM,20%,0.50W	73138	91-83-0
A1R1484	311-1559-00		RES.,VAR,NONWIR:10K OHM,20%,0.50W	73138	91-81-0
A1R1486	321-0307-00		RES.,FXD,FILM:15.4K OHM,1%,0.125W	91637	MFF1816G15401F
A1R1487	321-0239-00		RES.,FXD,FILM:3.01K OHM,1%,0.125W	24546	CT55 3011 F
A1R1488	321-0277-00		RES.,FXD,FILM:7.5K OHM,1%,0.125W	91637	MFF1816G75000F
A1R1504	315-0331-00		RES.,FXD,CMPSN:330 OHM,5%,0.25W	57668	NTR25J-E330E
A1R1514	321-0065-00		RES.,FXD,FILM:46.4 OHM,1%,0.125W	57668	RB14FXE 46E4
A1R1516	323-0161-00		RES.,FXD,FILM:464 OHM,1%,0.50W	75042	CECT0-4640F
A1R1521	315-0750-00		RES.,FXD,CMPSN:75 OHM,5%,0.25W	57668	NTR25J-E75E0
A1R1522	321-0126-00		RES.,FXD,FILM:200 OHM,1%,0.125W	91637	CMF55116G200R0F
A1R1532	321-0186-00		RES.,FXD,FILM:845 OHM,1%,0.125W	91637	CMF55116G84500F

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscnt	Name & Description	Mfr Code	Mfr Part Number
A1R1534	321-0186-00		RES.,FXD,FILM:845 OHM,1%,0.125W	91637	CMF55116G84500F
A1R1536	321-0133-00		RES.,FXD,FILM:237 OHM,1%,0.125W	91637	CMF55116G237R0F
A1R1538	321-0133-00		RES.,FXD,FILM:237 OHM,1%,0.125W	91637	CMF55116G237R0F
A1R1548	315-0751-00		RES.,FXD,CMPSN:750 OHM,5%,0.25W	57668	NTR25J-E750E
A1R1549	315-0511-00		RES.,FXD,CMPSN:510 OHM,5%,0.25W	57668	NTR25J-E 510E
A1R1558	311-1311-00		RES.,VAR, NONWIR:1K OHM,20%,0.5W	01121	73U4G048L102M
A1R1562	321-0190-00		RES.,FXD,FILM:931 OHM,1%,0.125W	91637	MFF1816G931R0F
A1R1579	321-0218-00		RES.,FXD,FILM:1.82K OHM,1%,0.125W	91637	MFF1816G18200F
A1R1580	311-1560-00		RES.,VAR, NONWIR:TRMR,5K OHM,0.5W	32997	3352T-1-502
A1R1582	311-1560-00		RES.,VAR, NONWIR:TRMR,5K OHM,0.5W	32997	3352T-1-502
A1R1586	315-0241-00		RES.,FXD,CMPSN:240 OHM,5%,0.25W	57668	NTR25J-E 240E
A1R1587	315-0112-00		RES.,FXD,CMPSN:1.1K OHM,5%,0.25W	57668	NTR25J-E 1K1
A1R1589	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A1R1590	321-0218-00		RES.,FXD,FILM:1.82K OHM,1%,0.125W	91637	MFF1816G18200F
A1R1612	315-0752-00		RES.,FXD,CMPSN:7.5K OHM,5%,0.25W	57668	NTR25J-E07K5
A1R1613	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A1R1616	315-0752-00		RES.,FXD,CMPSN:7.5K OHM,5%,0.25W	57668	NTR25J-E07K5
A1R1622	321-0151-00		RES.,FXD,FILM:365 OHM,1%,0.125W	91637	CMF55116G365R0F
A1R1624	321-0145-00		RES.,FXD,FILM:316 OHM,1%,0.125W	91637	CMF55116G316R0F
A1R1625	321-0151-00		RES.,FXD,FILM:365 OHM,1%,0.125W	91637	CMF55116G365R0F
A1R1626	321-0145-00		RES.,FXD,FILM:316 OHM,1%,0.125W	91637	CMF55116G316R0F
A1R1632	323-0106-00		RES.,FXD,FILM:124 OHM,1%,0.50W	91637	MFF1226G124R0F
A1R1634	311-1563-00		RES.,VAR, NONWIR:1K OHM,20%,0.50W	73138	91-85-0
A1R1645	315-0392-00		RES.,FXD,CMPSN:3.9K OHM,5%,0.25W	57668	NTR25J-E03K9
A1R1647	315-0241-00		RES.,FXD,CMPSN:240 OHM,5%,0.25W	57668	NTR25J-E 240E
A1R1661	321-0126-00		RES.,FXD,FILM:200 OHM,1%,0.125W	91637	CMF55116G200R0F
A1R1683	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A1R1684	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A1R1685	311-1567-00		RES.,VAR, NONWIR:TRMR,100 OHM,0.50W	73138	91-89-0
A1R1687	315-0270-00		RES.,FXD,CMPSN:27 OHM,5%,0.25W	57668	NTR25J-E 27E
A1R1695	321-0030-00		RES.,FXD,FILM:20 OHM,1%,0.125W	91637	CMF55116G20R00F
A1R1712	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A1R1714	315-0752-00		RES.,FXD,CMPSN:7.5K OHM,5%,0.25W	57668	NTR25J-E07K5
A1R1716	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A1R1724	321-0145-00		RES.,FXD,FILM:316 OHM,1%,0.125W	91637	CMF55116G316R0F
A1R1725	321-0151-00		RES.,FXD,FILM:365 OHM,1%,0.125W	91637	CMF55116G365R0F
A1R1735	311-1558-00		RES.,VAR, NONWIR:TRMR,20K OHM,0.5W	32997	3352T-1-203
A1R1742	315-0392-00		RES.,FXD,CMPSN:3.9K OHM,5%,0.25W	57668	NTR25J-E03K9
A1R1744	315-0390-00		RES.,FXD,CMPSN:39 OHM,5%,0.25W	57668	NTR25J-E39E0
A1R1752	321-0170-00		RES.,FXD,FILM:576 OHM,1%,0.125W	91637	CMF55116G576R0F
A1R1753	321-0170-00		RES.,FXD,FILM:576 OHM,1%,0.125W	91637	CMF55116G576R0F
A1R1754	321-0089-00		RES.,FXD,FILM:82.5 OHM,1%,0.125W	91637	CMF55116G82R50F
A1R1756	315-0100-00		RES.,FXD,CMPSN:10 OHM,5%,0.25W	57668	NTR25J-E 10E0
A1R1758	315-0100-00		RES.,FXD,CMPSN:10 OHM,5%,0.25W	57668	NTR25J-E 10E0
A1R1774	315-0301-00		RES.,FXD,CMPSN:300 OHM,5%,0.25W	57668	NTR25J-E300E
A1R1775	321-0181-00		RES.,FXD,FILM:750 OHM,1%,0.125W	91637	CMF55116G750R0F
A1R1776	321-0181-00		RES.,FXD,FILM:750 OHM,1%,0.125W	91637	CMF55116G750R0F
A1R1782	311-1403-00		RES.,VAR, NONWIR:5K OHM,20%,0.50W	01121	18M651
A1R1794	321-0030-00		RES.,FXD,FILM:20 OHM,1%,0.125W	91637	CMF55116G20R00F
A1R1798	315-0621-00		RES.,FXD,CMPSN:620 OHM,5%,0.25W	57668	NTR25J-E620E
A1R1798	—		(NOMINAL VALUE, SELECTED)		
A1R1815	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A1R1816	315-0302-00		RES.,FXD,CMPSN:3K OHM,5%,0.25W	57668	NTR25J-E03K0
A1R1817	315-0302-00		RES.,FXD,CMPSN:3K OHM,5%,0.25W	57668	NTR25J-E03K0

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscnt	Name & Description	Mfr Code	Mfr Part Number
A1R1818	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A1R1825	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A1R1828	321-0064-00		RES.,FXD,FILM:45.3 OHM,1%,0.125W	91637	CMF55116G45R30F
A1R1834	321-0204-00		RES.,FXD,FILM:1.3K OHM,1%,0.125W	91637	CMF55116G13000F
A1R1835	311-1564-00		RES.,VAR,NONWIR:TRMR,500 OHM,0.5W	32997	3352T-CK5-501
A1R1838	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A1R1839	315-0431-00		RES.,FXD,CMPSN:430 OHM,5%,0.25W	57668	NTR25J-E 430E
A1R1842	321-0192-00		RES.,FXD,FILM:976 OHM,1%,0.125W	91637	CMF55116G976R0F
A1R1843	321-0192-00		RES.,FXD,FILM:976 OHM,1%,0.125W	91637	CMF55116G976R0F
A1R1849	315-0222-00		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	57668	NTR25J-E02K2
A1R1854	315-0241-00		RES.,FXD,CMPSN:240 OHM,5%,0.25W	57668	NTR25J-E 240E
A1R1858	321-0126-00		RES.,FXD,FILM:200 OHM,1%,0.125W	91637	CMF55116G200R0F
A1R1868	315-0183-00		RES.,FXD,CMPSN:18K OHM,5%,0.25W	57668	NTR25J-E 18K
A1R1876	315-0301-00		RES.,FXD,CMPSN:300 OHM,5%,0.25W	57668	NTR25J-E300E
A1R1881	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A1R1882	311-1561-00		RES.,VAR,NONWIR:2.5K OHM,20%,0.50W	73138	91-83-0
A1R1884	311-1559-00		RES.,VAR,NONWIR:10K OHM,20%,0.50W	73138	91-81-0
A1R1885	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A1R1886	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A1R1889	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A1R1891	315-0151-00		RES.,FXD,CMPSN:150 OHM,5%,0.25W	57668	NTR25J-E150E
A1R1893	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A1R1903	315-0112-00		RES.,FXD,CMPSN:1.1K OHM,5%,0.25W	57668	NTR25J-E 1K1
A1R1904	315-0221-00		RES.,FXD,CMPSN:220 OHM,5%,0.25W	57668	NTR25J-E220E
A1R1906	315-0203-00		RES.,FXD,CMPSN:20K OHM,5%,0.25W	57668	NTR25J-E20K0
A1R1914	315-0122-00		RES.,FXD,CMPSN:1.2K OHM,5%,0.25W	57668	NTR25J-E01K2
A1R1916	315-0471-00		RES.,FXD,CMPSN:470 OHM,5%,0.25W	57668	NTR25J-E470E
A1R1922	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A1R1924	315-0122-00		RES.,FXD,CMPSN:1.2K OHM,5%,0.25W	57668	NTR25J-E01K2
A1R1932	315-0751-00		RES.,FXD,CMPSN:750 OHM,5%,0.25W	57668	NTR25J-E750E
A1R1934	321-0196-00		RES.,FXD,FILM:1.07K OHM,1%,0.125W	91637	CMF55116G10700F
A1R1944	315-0331-00		RES.,FXD,CMPSN:330 OHM,5%,0.25W	57668	NTR25J-E330E
A1R1946	321-0126-00		RES.,FXD,FILM:200 OHM,1%,0.125W	91637	CMF55116G200R0F
A1R1952	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A1R1956	315-0390-00		RES.,FXD,CMPSN:39 OHM,5%,0.25W	57668	NTR25J-E39E0
A1R1958	315-0222-00		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	57668	NTR25J-E02K2
A1R1975	311-1559-00		RES.,VAR,NONWIR:10K OHM,20%,0.50W	73138	91-81-0
A1R1981	321-0307-00		RES.,FXD,FILM:15.4K OHM,1%,0.125W	91637	MFF1816G15401F
A1R1983	321-0307-00		RES.,FXD,FILM:15.4K OHM,1%,0.125W	91637	MFF1816G15401F
A1R1986	321-0277-00		RES.,FXD,FILM:7.5K OHM,1%,0.125W	91637	MFF1816G75000F
A1R1987	321-0277-00		RES.,FXD,FILM:7.5K OHM,1%,0.125W	91637	MFF1816G75000F
A1R1988	321-0260-00		RES.,FXD,FILM:4.99K OHM,1%,0.125W	91637	MFF1816G49900F
A1R1989	321-0260-00		RES.,FXD,FILM:4.99K OHM,1%,0.125W	91637	MFF1816G49900F
A1RT1267	307-0181-00		RES.,THERMAL:100K OHM,10%,4MW/DEG C	15454	1DE104-K-220EC
A1RT1767	307-0181-00		RES.,THERMAL:100K OHM,10%,4MW/DEG C	15454	1DE104-K-220EC
A1S1414	260-1486-00		SWITCH,PUSH:1 BUTTON,PB1,4P,PUSH-PUSH	59821	EKAB001000562
A1S1995	260-1208-00		SWITCH,PUSH:DPDT,28VDC,PUSH-PUSH	31918	ORDER BY DESCR
A1U1290	155-0078-10		MICROCIRCUIT,LI:ML,VERTICAL AMPLIFIER	80009	155-0078-10
A1U1605	160-0204-01		MICROCIRCUIT,DI:256 X 4 ROM,SCRN	80009	160-0204-01
A1U1705	156-0392-00		MICROCIRCUIT,DI:QUAD LATCH W/CLEAR	34335	SN74LS175N OR J
A1U1790	155-0078-10		MICROCIRCUIT,LI:ML,VERTICAL AMPLIFIER	80009	155-0078-10
A1U1805	156-0480-02		MICROCIRCUIT,DI:QUAD 2-INP & GATE,SCRN	01295	SN74LS08NP3
A1U1905	156-0382-02		MICROCIRCUIT,DI:QUAD 2-INP & GATE	01295	SN74LS00NP3
A1VR1096	152-0166-00		SEMICONV DEVICE:ZENER,0.4W,6.2V,5%	04713	SZ11738RL



Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A1VR1356	152-0166-00		SEMICON D DEVICE:ZENER,0.4W,6.2V,5%	04713	SZ11738RL
A1VR1597	152-0166-00		SEMICON D DEVICE:ZENER,0.4W,6.2V,5%	04713	SZ11738RL
A1VR1662	152-0166-00		SEMICON D DEVICE:ZENER,0.4W,6.2V,5%	04713	SZ11738RL
A1VR1824	152-0306-00		SEMICON D DEVICE:ZENER,0.4W,9.1V,5%	15238	Z5409
A1W1527	131-0566-00		BUS CONDUCTOR:DUMMY RES,2.375,22 AWG	57668	JWW-0200E0
A1W1732	131-0566-00		BUS CONDUCTOR:DUMMY RES,2.375,22 AWG	57668	JWW-0200E0

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscnt	Name & Description	Mfr Code	Mfr Part Number
A2	670-6385-00		CKT BOARD ASSY:VERTICAL OUTPUT	80009	670-6385-00
A2C2038	281-0768-00		CAP.,FXD,CER DI:470PF,20%,100V	56289	292CC0G471M100B
A2C2047	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A2C2126	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A2C2172	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A2C2196	281-0783-00		CAP.,FXD,CER DI:0.1UF,20%,100V	96733	ADVISE
A2C2315	281-0089-00		CAP.,VAR,CER DI:2-8PF,350V	59660	538-006-A2-8
A2C2334	281-0772-00		CAP.,FXD,CER DI:0.0047UF,10%,100V	04222	MA201C472KAA
A2C2335	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A2C2336	281-0812-00		CAP.,FXD,CER DI:1000PF,10%,100V	04222	MA101C102KAA
A2C2337	281-0797-00		CAP.,FXD,CER DI:15PF,10%,100V	04222	MA106A150KAA
A2C2339	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A2C2346	281-0096-00		CAP.,VAR,AIR DI:5.5-18PF,350V	33095	53-717-029A5.5
A2C2417	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A2C2422	281-0812-00		CAP.,FXD,CER DI:1000PF,10%,100V	04222	MA101C102KAA
A2C2424	281-0788-00		CAP.,FXD,CER DI:470PF,10%,100V	96733	R3015
A2C2486	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A2C2488	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A2L2264	108-0328-00		COIL,RF:0.3UH	80009	108-0328-00
A2L2267	108-0328-00		COIL,RF:0.3UH	80009	108-0328-00
A2L2267	108-0328-00		COIL,RF:0.3UH	80009	108-0328-00
A2L2296	108-0538-00		COIL,RF:FIXED,2.7UH	76493	JWM#B7059
A2L2492	108-0538-00		COIL,RF:FIXED,2.7UH	76493	JWM#B7059
A2L2494	108-0538-00		COIL,RF:FIXED,2.7UH	76493	JWM#B7059
A2LR2264	108-0328-00		COIL,RF:0.3UH	80009	108-0328-00
A2LR2267	108-0328-00		COIL,RF:0.3UH	80009	108-0328-00
A2Q2105	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A2Q2115	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A2Q2306	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A2Q2308	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A2R2014	321-0289-00		RES.,FXD,FILM:10K OHM,1%,0.125W	91637	MFF1816G10001F
A2R2015	321-0289-00		RES.,FXD,FILM:10K OHM,1%,0.125W	91637	MFF1816G10001F
A2R2016	321-0251-00		RES.,FXD,FILM:4.02K OHM,1%,0.125W	91637	MFF1816G40200F
A2R2017	321-0250-00		RES.,FXD,FILM:3.92K OHM,1%,0.125W	91637	MFF1816G39200F
A2R2025	311-1238-00		RES.,VAR,NONWIR:5K OHM,10%,0.50W	73138	72-27-0
A2R2045	315-0133-00		RES.,FXD,CMPSN:13K OHM,5%,0.25W	57668	NTR25J-E 13K
A2R2054	321-0080-00		RES.,FXD,FILM:66.5 OHM,1%,0.125W	91637	CMF55116G66R50F
A2R2055	321-0175-00		RES.,FXD,FILM:649 OHM,1%,0.125W	91637	CMF55116G649R0F
A2R2057	323-0127-00		RES.,FXD,FILM:205 OHM,1%,0.50W	91637	MFF1226G205R0F
A2R2058	323-0155-00		RES.,FXD,FILM:402 OHM,1%,0.50W	75042	CECT0-4020F
A2R2073	315-0473-00		RES.,FXD,CMPSN:47K OHM,5%,0.25W	57668	NTR25J-E47K0
A2R2074	323-0055-00		RES.,FXD,FILM:36.5 OHM,1%,0.5W	75042	CECT0-35R50F
A2R2075	315-0473-00		RES.,FXD,CMPSN:47K OHM,5%,0.25W	57668	NTR25J-E47K0
A2R2103	315-0472-00		RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	57668	NTR25J-E04K7
A2R2104	315-0392-00		RES.,FXD,CMPSN:3.9K OHM,5%,0.25W	57668	NTR25J-E03K9
A2R2108	321-0085-00		RES.,FXD,FILM:75 OHM,1%,0.125W	91637	CMF55116G75R00F
A2R2117	311-1236-00		RES.,VAR,NONWIR:250 OHM,10%,0.50W	73138	72-22-0
A2R2119	321-0193-00		RES.,FXD,FILM:1K OHM,1%,0.125W	19701	5043ED1K00F
A2R2123	321-0183-00		RES.,FXD,FILM:787 OHM,1%,0.125W	91637	CMF55116G787R0F
A2R2124	321-0223-00		RES.,FXD,FILM:2.05K OHM,1%,0.125W	91637	MFF1816G20500F
A2R2125	321-0198-00		RES.,FXD,FILM:1.13K OHM,1%,0.125W	91637	CMF55116G11300F
A2R2127	315-0270-00		RES.,FXD,CMPSN:27 OHM,5%,0.25W	57668	NTR25J-E 27E
A2R2135	323-0140-00		RES.,FXD,FILM:280 OHM,1%,0.50W	75042	CECT0-2800F
A2R2137	323-0140-00		RES.,FXD,FILM:280 OHM,1%,0.50W	75042	CECT0-2800F

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A2R2142	315-0561-00		RES.,FXD,CMPSN:560 OHM,5%,0.25W	57668	NTRRERJ-E 560E
A2R2143	321-0061-00		RES.,FXD,FILM:42.2 OHM,1%,0.125W	91637	CMF55116G42R20F
A2R2154	323-0155-00		RES.,FXD,FILM:402 OHM,1%,0.50W	75042	CECT0-4020F
A2R2156	321-0052-00		RES.,FXD,FILM:34 OHM,1%,0.125W	91637	CMF55116G34R00F
A2R2168	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A2R2185	308-0758-00		RES.,FXD,WW:430 OHM,1%,7W	14193	SP1151S-430R0F
A2R2207	321-0001-00		RES.,FXD,FILM:10 OHM,1%,0.125W	75042	CEAT0-10R00F
A2R2208	321-0001-00		RES.,FXD,FILM:10 OHM,1%,0.125W	75042	CEAT0-10R00F
A2R2212	321-0193-00		RES.,FXD,FILM:1K OHM,1%,0.125W	19701	5043ED1K00F
A2R2214	321-0068-00		RES.,FXD,FILM:49.9 OHM,1%,0.125W	91637	CMF55116G49R90F
A2R2218	321-0068-00		RES.,FXD,FILM:49.9 OHM,1%,0.125W	91637	CMF55116G49R90F
A2R2243	311-1236-00		RES.,VAR,NONWIR:250 OHM,10%,0.50W	73138	72-22-0
A2R2244	315-0270-00		RES.,FXD,CMPSN:27 OHM,5%,0.25W	57668	NTR25J-E 27E
A2R2246	315-0270-00		RES.,FXD,CMPSN:27 OHM,5%,0.25W	57668	NTR25J-E 27E
A2R2247	321-0139-00		RES.,FXD,FILM:274 OHM,1%,0.125W	91637	CMF55116G274R0F
A2R2262	315-0100-00		RES.,FXD,CMPSN:10 OHM,5%,0.25W	57668	NTR25J-E 10E0
A2R2268	315-0100-00		RES.,FXD,CMPSN:10 OHM,5%,0.25W	57668	NTR25J-E 10E0
A2R2284	308-0758-00		RES.,FXD,WW:430 OHM,1%,7W	14193	SP1151S-430R0F
A2R2304	321-0147-00		RES.,FXD,FILM:332 OHM,1%,0.125W	91637	CMF55116G332R0F
A2R2305	321-0147-00		RES.,FXD,FILM:332 OHM,1%,0.125W	91637	CMF55116G332R0F
A2R2318	315-0331-00		RES.,FXD,CMPSN:330 OHM,5%,0.25W	57668	NTR25J-E330E
A2R2323	315-0750-00		RES.,FXD,CMPSN:75 OHM,5%,0.25W	57668	NTR25J-E75E0
A2R2325	311-1236-00		RES.,VAR,NONWIR:250 OHM,10%,0.50W	73138	72-22-0
A2R2326	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A2R2328	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A2R2335	315-0561-00		RES.,FXD,CMPSN:560 OHM,5%,0.25W	57668	NTRRERJ-E 560E
A2R2337	321-0061-00		RES.,FXD,FILM:42.2 OHM,1%,0.125W	91637	CMF55116G42R20F
A2R2344	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A2R2354	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A2R2356	321-0052-00		RES.,FXD,FILM:34 OHM,1%,0.125W	91637	CMF55116G34R00F
A2R2357	323-0155-00		RES.,FXD,FILM:402 OHM,1%,0.50W	75042	CECT0-4020F
A2R2358	323-0155-00		RES.,FXD,FILM:402 OHM,1%,0.50W	75042	CECT0-4020F
A2R2426	311-1564-00		RES.,VAR,NONWIR:TRMR,500 OHM,0.5W	32997	3352T-CK5-501
A2R2432	311-1560-00		RES.,VAR,NONWIR:TRMR,5K OHM,0.5W	32997	3352T-1-502
A2R2436	311-1559-00		RES.,VAR,NONWIR:10K OHM,20%,0.50W	73138	91-81-0
A2R2446	311-1559-00		RES.,VAR,NONWIR:10K OHM,20%,0.50W	73138	91-81-0
A2R2447	321-0178-00		RES.,FXD,FILM:698 OHM,1%,0.125W	91637	CMF55116G698R0F
A2R2448	311-1556-00		RES.,VAR,NONWIR:50K OHM,20%,0.50W	73138	91-78-0
A2R2455	321-0178-00		RES.,FXD,FILM:698 OHM,1%,0.125W	91637	CMF55116G698R0F
A2R2465	315-0473-00		RES.,FXD,CMPSN:47K OHM,5%,0.25W	57668	NTR25J-E47K0
A2R2466	315-0473-00		RES.,FXD,CMPSN:47K OHM,5%,0.25W	57668	NTR25J-E47K0
A2R2472	315-0202-00		RES.,FXD,CMPSN:2K OHM,5%,0.25W	57668	NTR25J-E02K0
A2R2476	315-0821-00		RES.,FXD,CMPSN:820 OHM,5%,0.25W	57668	NTR25J-E 820E
A2RT2333	307-0125-00		MICRO, THERMAL:500 OHM,10%,25 DEG C	50157	2D1595
A2U2005	156-0067-00		MICROCIRCUIT,LI:OPERATIONAL AMPLIFIER	04713	MC1741CP1
A2U2225	155-0078-10		MICROCIRCUIT,LI:ML,VERTICAL AMPLIFIER	80009	155-0078-10
A2U2255	155-0115-00		MICROCIRCUIT,LI:CRT VERT DEFLECTION DRIVER	80009	155-0115-00
A2U2385	156-0067-00		MICROCIRCUIT,LI:OPERATIONAL AMPLIFIER	04713	MC1741CP1
A2VR2232	152-0195-00		SEMICOND DEVICE:ZENER,0.4W,5.1V,5%	04713	SZ11755
A2VR2234	152-0278-00		SEMICOND DEVICE:ZENER,0.4W,3V,5%	04713	SZG35009K20
A2VR2238	152-0195-00		SEMICOND DEVICE:ZENER,0.4W,5.1V,5%	04713	SZ11755

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A3	670-6003-00		CKT BOARD ASSY:ATTENUATOR	80009	670-6003-00
A3C30	307-1014-01		ATTENUATOR,FXD:100X	80009	307-1014-01
A3C31	307-1014-01		ATTENUATOR,FXD:100X	80009	307-1014-01
A3C32	307-1013-01		ATTENUATOR,FXD:10X	80009	307-1013-01
A3C33	307-1013-01		ATTENUATOR,FXD:10X	80009	307-1013-01
A3C34	307-1011-00		ATTENUATOR,FXD:4X	80009	307-1011-00
A3C35	307-1011-00		ATTENUATOR,FXD:4X	80009	307-1011-00
A3C36	307-1010-01		ATTENUATOR,FXD:2X	80009	307-1010-01
A3C37	307-1010-01		ATTENUATOR,FXD:2X	80009	307-1010-01
A3C3042	283-0156-00		CAP.,FXD,CER DI:1000PF,+100-0%,200V	96733	R2670
A3R3014	315-0105-00		RES.,FXD,CMPSN:1M OHM,5%,0.25W	57668	NTR255-E 1M
A3R3015	315-0220-00		RES.,FXD,CMPSN:22 OHM,5%,0.25W	57668	NTR25J-E 22E
A3R3030	317-0220-00		RES.,FXD,CMPSN:22 OHM,5%,0.125W	01121	BB2205
A3R3032	315-0360-00		RES.,FXD,CMPSN:36 OHM,5%,0.25W	57668	NTR25J-E 36E
A3R3033	317-0100-00		RES.,FXD,CMPSN:10 OHM,5%,0.125W	01121	BB1005
A3R3036	317-0100-00		RES.,FXD,CMPSN:10 OHM,5%,0.125W	01121	BB1005
A3R3039	321-0481-00		RES.,FXD,FILM:1M OHM,1%,0.125W	91637	CMF55116G10003F
A3R3042	317-0474-00		RES.,FXD,CMPSN:470K OHM,5%,0.125W	01121	BB4745
A3R3045	315-0300-00		RES.,FXD,CMPSN:30 OHM,5%,0.25W	57668	NTR25J-E 30E

Component No.	Tektronix	Serial/Model No.		Name & Description	Mfr Code	Mfr Part Number
	Part No.	Eff	Dscont			
A4	670-5996-03			CKT BOARD ASSY:INTERFACE	80009	670-5996-03
A4	---			(SEE OPTION SECTION FOR OPT 04 & OPT 07)		
A4	670-5996-04			CKT BOARD ASSY:INTERFACE	80009	670-5996-04
A4	---			(OPTION 04 ONLY)		
A4	670-5996-05			CKT BOARD ASSY:INTERFACE	80009	670-5996-05
A4	---			(OPTION 07 ONLY)		
A4C4003	290-0536-00			CAP.,FXD,ELCTLT:10UF,20%,25V	90201	TDC106M025FL
A4C4005	283-0002-00			CAP.,FXD,CER DI:0.01UF,+80-20%,500V	59821	D103Z47Z5ULDCEX
A4C4006	290-0316-00			CAP.,FXD,ELCTLT:47UF,20%,35V	56289	150D476X0035S2
A4C4010	281-0622-00			CAP.,FXD,CER DI:47PF,1%,500V	59660	30100C0G0470F
A4C4012	283-0203-00			CAP.,FXD,CER DI:0.47UF,20%,50V	04222	SR305SC474MAA
A4C4016	285-0509-01			CAP.,FXD,PPR DI:0.0068UF,20%,5000V	56289	430P507
A4C4020	285-0509-01			CAP.,FXD,PPR DI:0.0068UF,20%,5000V	56289	430P507
A4C4025	285-0509-01			CAP.,FXD,PPR DI:0.0068UF,20%,5000V	56289	430P507
A4C4036	281-0773-00			CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A4C4037	283-0003-00			CAP.,FXD,CER DI:0.01UF,+80-20%,150V	59821	D103Z40Z5UJDCEX
A4C4038	285-1040-00			CAP.,FXD,PLSTC:0.0012UF,10%,4000V	56289	430P522
A4C4039	283-0003-00			CAP.,FXD,CER DI:0.01UF,+80-20%,150V	59821	D103Z40Z5UJDCEX
A4C4043	281-0773-00			CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A4C4104	290-0164-00			CAP.,FXD,ELCTLT:1UF,+50-10%,150V	56289	500D105F150BA7
A4C4107	283-0178-00			CAP.,FXD,CER DI:0.1UF,+80-20%,100V	04222	ADVISE
A4C4113	283-0002-00			CAP.,FXD,CER DI:0.01UF,+80-20%,500V	59821	D103Z47Z5ULDCEX
A4C4114	283-0057-00			CAP.,FXD,CER DI:0.1UF,+80-20%,200V	56289	2C20Z5U104Z200B
A4C4116	283-0057-00			CAP.,FXD,CER DI:0.1UF,+80-20%,200V	56289	2C20Z5U104Z200B
A4C4117	285-1040-00			CAP.,FXD,PLSTC:0.0012UF,10%,4000V	56289	430P522
A4C4118	285-0507-01			CAP.,FXD,PPR DI:0.0047UF,20%,6000V	56289	430P571
A4C4126	285-1040-00			CAP.,FXD,PLSTC:0.0012UF,10%,4000V	56289	430P522
A4C4150	283-0328-00			CAP.,FXD,CER DI:0.03UF,+80-20%,200V	51642	300-200-Z5U-303Z
A4C4153	283-0003-00			CAP.,FXD,CER DI:0.01UF,+80-20%,150V	59821	D103Z40Z5UJDCEX
A4C4159	281-0773-00			CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A4C4164	281-0816-00			CAP.,FXD,CER DI:82PF,5%,100V	96733	R3247
A4C4175	281-0812-00			CAP.,FXD,CER DI:1000PF,10%,100V	04222	MA101C102KAA
A4C4187	285-0686-00			CAP.,FXD,PLSTC:0.068UF,10%,100V	56289	192P68392M465
A4C4192	281-0767-00			CAP.,FXD,CER DI:330PF,20%,100V	12969	CGB331MEN
A4C4203	290-0535-00			CAP.,FXD,ELCTLT:33UF,20%,10V	56289	196D336X0010KA1
A4C4204	281-0775-00			CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A4C4216	283-0002-00			CAP.,FXD,CER DI:0.01UF,+80-20%,500V	59821	D103Z47Z5ULDCEX
A4C4217	281-0064-00			CAP.,VAR,PLSTC:0.25-1.5PF,600V	74970	273-0001-101
A4C4226	281-0788-00			CAP.,FXD,CER DI:470PF,10%,100V	96733	R3015
A4C4229	283-0198-00			CAP.,FXD,CER DI:0.22UF,20%,50V	04222	ADVISE
A4C4246	281-0168-00			CAP.,VAR,AIR DI:1.3-5.4PF,250V	74970	187-0103-005
A4C4247	281-0168-00			CAP.,VAR,AIR DI:1.3-5.4PF,250V	74970	187-0103-005
A4C4262	283-0024-00			CAP.,FXD,CER DI:0.1UF,+80-20%,50V	31433	C322C104M5R5CA
A4C4271	281-0812-00			CAP.,FXD,CER DI:1000PF,10%,100V	04222	MA101C102KAA
A4C4283	283-0004-00			CAP.,FXD,CER DI:0.02UF,+80-20%,150V	59821	SDDH69J203Z
A4C4285	281-0775-00			CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A4C4288	283-0004-00			CAP.,FXD,CER DI:0.02UF,+80-20%,150V	59821	SDDH69J203Z
A4C4291	281-0762-00			CAP.,FXD,CER DI:27PF,20%,100V	96733	R2737
A4C4292	290-0532-00			CAP.,FXD,ELCTLT:150UF,20%,6V	90201	TDC157M006WSG
A4C4303	290-0305-00			CAP.,FXD,ELCTLT:3UF,20%,150V	56289	109D305X0150C2
A4C4305	281-0814-00			CAP.,FXD,CER DI:100PF,10%,100V	04222	GC101A101K
A4C4306	281-0783-00			CAP.,FXD,CER DI:0.1UF,20%,100V	96733	ADVISE
A4C4307	281-0774-00			CAP.,FXD,CER DI:0.022UF,20%,100V	96733	R2747

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A4C4311	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A4C4326	290-0535-00		CAP.,FXD,ELCLTL:33UF,20%,10V	56289	196D336X0010KA1
A4C4327	290-0149-00		CAP.,FXD,ELCLTL:5UF,+75-10%,150V	56289	30D505G150CCAS
A4C4331	290-0529-00		CAP.,FXD,ELCLTL:47UF,20%,20V	05397	T362C476M020AS
A4C4341	283-0328-00		CAP.,FXD,CER DI:0.03UF,+80-20%,200V	51642	300-200-Z5U-303Z
A4C4351	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A4C4352	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	59821	D103Z40Z5UJDC EX
A4C4361	281-0816-00		CAP.,FXD,CER DI:82PF,5%,100V	96733	R3247
A4C4362	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A4C4375	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A4C4391	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A4C4398	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A4C4407	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A4C4408	283-0081-00		CAP.,FXD,CER DI:0.1UF,+80-20%,25V	59821	2DDU69E104Z
A4C4408	---		(OPTION 07 ONLY)		
A4C4419	290-0571-00		CAP.,FXD,ELCLTL:5000UF,+100-0%,25V	90201	PPF20-36043
A4C4429	290-0638-00		CAP.,FXD,ELCLTL:1200UF,+75-10%,100V	56289	68D10529
A4C4439	290-0670-00		CAP.,FXD,ELCLTL:550UF,+75-10%,100V	56289	68D10512
A4C4441	290-0527-00		CAP.,FXD,ELCLTL:15UF,20%,20V	90201	TDC156M020NFL
A4C4442	283-0178-00		CAP.,FXD,CER DI:0.1UF,+80-20%,100V	04222	ADVISE
A4C4461	290-0807-00		CAP.,FXD,ELCLTL:1000UF,+100-10%,10VDC	90201	TT102N010E1C3P
A4C4472	281-0774-00		CAP.,FXD,CER DI:0.022UF,20%,100V	96733	R2747
A4C4473	281-0767-00		CAP.,FXD,CER DI:330PF,20%,100V	12969	CGB331MEN
A4C4476	290-0527-00		CAP.,FXD,ELCLTL:15UF,20%,20V	90201	TDC156M020NFL
A4C4477	281-0756-00		CAP.,FXD,CER DI:2.2PF,0.5%,200V	96733	R2732
A4C4487	281-0788-00		CAP.,FXD,CER DI:470PF,10%,100V	96733	R3015
A4C4497	281-0774-00		CAP.,FXD,CER DI:0.022UF,20%,100V	96733	R2747
A4C4501	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	59821	D103Z40Z5UJDC EX
A4C4501	---		(OPTION 04 & 07 ONLY)		
A4C4502	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	59660	831610Y5U0102P
A4C4502	---		(OPTION 04 & 07 ONLY)		
A4C4503	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	59660	831610Y5U0102P
A4C4503	---		(OPTION 04 & 07 ONLY)		
A4C4513	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	59821	D103Z40Z5UJDC EX
A4C4513	---		(OPTION 04 & 07 ONLY)		
A4C4517	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	59821	D103Z40Z5UJDC EX
A4C4517	---		(OPTION 04 & 07 ONLY)		
A4C4521	290-0584-00		CAP.,FXD,ELCLTL:5500UF,+100-10%,30V	90201	PPF552GN4A3P2
A4C4531	290-0571-00		CAP.,FXD,ELCLTL:5000UF,+100-0%,25V	90201	PPF20-36043
A4C4532	281-0580-00		CAP.,FXD,CER DI:470PF,10%,500V	04222	7001-1374
A4C4533	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A4C4554	281-0760-00		CAP.,FXD,CER DI:22PF,10%,500V	96733	R2736
A4C4563	281-0785-00		CAP.,FXD,CER DI:68PF,10%,100V	04222	MA101A680KAA
A4C4567	281-0774-00		CAP.,FXD,CER DI:0.022UF,20%,100V	96733	R2747
A4C4568	281-0787-00		CAP.,FXD,CER DI:15PF,5%,500V	96733	R3064
A4C4569	281-0762-00		CAP.,FXD,CER DI:27PF,20%,100V	96733	R2737
A4C4571	290-0512-00		CAP.,FXD,ELCLTL:22UF,20%,15V	56289	196D226X0015KA1
A4C4572	290-0527-00		CAP.,FXD,ELCLTL:15UF,20%,20V	90201	TDC156M020NFL
A4C4575	283-0178-00		CAP.,FXD,CER DI:0.1UF,+80-20%,100V	04222	ADVISE
A4C4585	281-0759-00		CAP.,FXD,CER DI:22PF,10%,100V	96733	R2735
A4C4592	281-0814-00		CAP.,FXD,CER DI:100PF,10%,100V	04222	GC101A101K
A4C4593	281-0814-00		CAP.,FXD,CER DI:100PF,10%,100V	04222	GC101A101K
A4C4594	281-0774-00		CAP.,FXD,CER DI:0.022UF,20%,100V	96733	R2747
A4C4597	281-0771-00		CAP.,FXD,CER DI:0.0022UF,20%,200V	96733	R2746
A4C4598	281-0760-00		CAP.,FXD,CER DI:22PF,10%,500V	96733	R2736

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A4CR4002	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4004	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4005	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4010	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4021	152-0409-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	83003	VG12X-1
A4CR4104	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4105	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4108	152-0107-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	G727
A4CR4111	152-0061-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	07263	FDH2161
A4CR4112	152-0061-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	07263	FDH2161
A4CR4115	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4122	152-0242-00		SEMICON DVC,SIG,SI,225V,0.2A,D0-7	07263	FDH5004
A4CR4123	152-0242-00		SEMICON DVC,SIG,SI,225V,0.2A,D0-7	07263	FDH5004
A4CR4144	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4159	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4216	152-0061-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	07263	FDH2161
A4CR4218	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4261	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4266	152-0322-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	50434	5082-2672
A4CR4267	152-0322-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	50434	5082-2672
A4CR4285	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4287	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4291	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4302	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4303	152-0066-00		SEMICON DVC DI:RECT,SI,400V,1A,D0-41	05828	GP10G-020
A4CR4304	152-0061-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	07263	FDH2161
A4CR4311	152-0061-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	07263	FDH2161
A4CR4312	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4318	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4321	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4322	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4326	152-0304-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	15238	Z5411
A4CR4328	152-0061-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	07263	FDH2161
A4CR4329	152-0333-00		SEMICON DVC DI:SW,SI,55V,200MA,D0-35	03508	DJ2011
A4CR4342	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4381	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4396	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4405	152-0066-00		SEMICON DVC DI:RECT,SI,400V,1A,D0-41	05828	GP10G-020
A4CR4406	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4411	152-0556-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	14936	KBU4A
A4CR4423	152-0107-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	G727
A4CR4425	152-0066-00		SEMICON DVC DI:RECT,SI,400V,1A,D0-41	05828	GP10G-020
A4CR4426	152-0066-00		SEMICON DVC DI:RECT,SI,400V,1A,D0-41	05828	GP10G-020
A4CR4431	152-0107-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	G727
A4CR4441	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4442	152-0153-00		SEMICON DVC,DI:SW,SI,10V,50MA,D0-7	07263	FD7003
A4CR4465	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4466	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4467	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4471	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4472	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4515	152-0066-00		SEMICON DVC DI:RECT,SI,400V,1A,D0-41	05828	GP10G-020
A4CR4516	152-0556-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	14936	KBU4A
A4CR4528	152-0556-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	14936	KBU4A

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscnt	Name & Description	Mfr Code	Mfr Part Number
A4CR4531	152-0488-00		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	04713	SDA317
A4CR4546	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4551	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4552	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4567	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4577	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4581	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4582	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4592	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4CR4597	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A4DS4124	150-0002-00		LAMP,GLOW:0.5 MA 60/125V	74276	NE-2T(T2)
A4DS4125	150-0002-00		LAMP,GLOW:0.5 MA 60/125V	74276	NE-2T(T2)
A4F4501	159-0059-00		FUSE,WIRE LEAD:5A,FAST-BLOW	000HX	SPI-5A
A4F4507	159-0059-00		FUSE,WIRE LEAD:5A,FAST-BLOW	000HX	SPI-5A
A4F4508	159-0016-00		FUSE,CARTRIDGE:3AG,1.5A,250V,FAST-BLOW	71400	AGC-CW-1 1/2
A4J4463	136-0499-12		CONN,RCPT,ELEC:CKT BD,1 X 12,0.1 SPACING	00779	4-380949-2
A4J4487	136-0499-14		CONNECTOR,RCPT,;14 CONTACT	00779	4-380949-4
A4L4006	108-0422-00		COIL,RF:FIXED,82UH	80009	108-0422-00
A4L4292	108-0245-00		COIL,RF:3.9UH	76493	B6310-1
A4L4593	108-0328-00		COIL,RF:0.3UH	80009	108-0328-00
A4Q4002	151-0188-00		TRANSISTOR:PNP,SI,TO-92	04713	SPS6868
A4Q4008	151-0136-00		TRANSISTOR:SILICON,NPN (SEE CHASSIS PARTS)	02735	35495
A4Q4102	---				
A4Q4103	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A4Q4105	151-0302-00		TRANSISTOR:SILICON,NPN	07263	S038487
A4Q4106	151-0302-00		TRANSISTOR:SILICON,NPN	07263	S038487
A4Q4146	151-0406-00		TRANSISTOR:SILICON,PNP	04713	ST1264
A4Q4150	151-0407-00		TRANSISTOR:SILICON,NPN	04713	SS2456
A4Q4161	151-0302-00		TRANSISTOR:SILICON,NPN	07263	S038487
A4Q4169	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A4Q4182	151-0342-00		TRANSISTOR:SILICON,PNP	07263	S035928
A4Q4190	---		(SEE CHASSIS PARTS)		
A4Q4196	151-0342-00		TRANSISTOR:SILICON,PNP	07263	S035928
A4Q4213	151-0406-00		TRANSISTOR:SILICON,PNP	04713	ST1264
A4Q4217	151-0407-00		TRANSISTOR:SILICON,NPN	04713	SS2456
A4Q4222	151-0188-00		TRANSISTOR:PNP,SI,TO-92	04713	SPS6868
A4Q4223	151-0223-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS8026
A4Q4228	151-0126-00		TRANSISTOR:SILICON,NPN	04713	ST1046
A4Q4233	151-0301-00		TRANSISTOR:SILICON,PNP	27014	2N2907A
A4Q4273	151-0188-00		TRANSISTOR:PNP,SI,TO-92	04713	SPS6868
A4Q4274	151-0188-00		TRANSISTOR:PNP,SI,TO-92	04713	SPS6868
A4Q4284	151-0220-00		TRANSISTOR:PNP,SI,TO-92	07263	S036228
A4Q4285	151-0216-00		TRANSISTOR:SILICON,PNP	04713	SPS8803
A4Q4291	151-0164-00		TRANSISTOR:PNP,SI,TO-92	04713	2N2907A
A4Q4301	---		(SEE CHASSIS PARTS)		
A4Q4302	151-0347-00		TRANSISTOR:SILICON,NPN	56289	T7916
A4Q4303	151-0347-00		TRANSISTOR:SILICON,NPN	56289	T7916
A4Q4311	151-0302-00		TRANSISTOR:SILICON,NPN	07263	S038487
A4Q4312	---		(SEE CHASSIS PARTS)		
A4Q4341	151-0406-00		TRANSISTOR:SILICON,PNP	04713	ST1264
A4Q4342	151-0407-00		TRANSISTOR:SILICON,NPN	04713	SS2456
A4Q4361	151-0301-00		TRANSISTOR:SILICON,PNP	27014	2N2907A
A4Q4362	151-0188-00		TRANSISTOR:PNP,SI,TO-92	04713	SPS6868
A4Q4401	---		(SEE CHASSIS PARTS)		



Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A4Q4403	151-0302-00		TRANSISTOR:SILICON,NPN	07263	S038487
A4Q4404	151-0302-00		TRANSISTOR:SILICON,NPN	07263	S038487
A4Q4425	151-0311-01		TRANSISTOR:SILICON,NPN	04713	SJE908
A4Q4431	151-0347-00		TRANSISTOR:SILICON,NPN	56289	T7916
A4Q4465	151-0188-00		TRANSISTOR:PNP,SI,TO-92	04713	SPS6868
A4Q4475	151-0188-00		TRANSISTOR:PNP,SI,TO-92	04713	SPS6868
A4Q4481	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A4Q4482	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A4Q4491	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A4Q4492	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A4Q4497	151-0283-00		TRANSISTOR:SILICON,NPN	07263	S032790
A4Q4498	151-1025-00		TRANSISTOR:SILICON,JFE,N-CHANNEL	01295	SFB8129
A4Q4545	151-0188-00		TRANSISTOR:PNP,SI,TO-92	04713	SPS6868
A4Q4554	151-0220-00		TRANSISTOR:PNP,SI,TO-92	07263	S036228
A4Q4562	151-0220-00		TRANSISTOR:PNP,SI,TO-92	07263	S036228
A4Q4563	151-0188-00		TRANSISTOR:PNP,SI,TO-92	04713	SPS6868
A4Q4564	151-0188-00		TRANSISTOR:PNP,SI,TO-92	04713	SPS6868
A4Q4565	151-0283-00		TRANSISTOR:SILICON,NPN	07263	S032790
A4Q4566	151-1025-00		TRANSISTOR:SILICON,JFE,N-CHANNEL	01295	SFB8129
A4Q4570	151-0127-00		TRANSISTOR:SILICON,NPN	07263	S006075
A4Q4581	151-0220-00		TRANSISTOR:PNP,SI,TO-92	07263	S036228
A4Q4582	151-0220-00		TRANSISTOR:PNP,SI,TO-92	07263	S036228
A4Q4588	151-0354-00		TRANSISTOR:SILICON,PNP,DUAL	32293	ITS1200A
A4Q4598	151-0127-00		TRANSISTOR:SILICON,NPN	07263	S006075
A4R4001	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A4R4002	315-0472-00		RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	57668	NTR25J-E04K7
A4R4003	315-0392-00		RES.,FXD,CMPSN:3.9K OHM,5%,0.25W	57668	NTR25J-E03K9
A4R4004	321-0327-00		RES.,FXD,FILM:24.9K OHM,1%,0.125W	91637	MFF1816G24901F
A4R4005	321-0329-00		RES.,FXD,FILM:26.1K OHM,1%,0.125W	91637	MFF1816G26101F
A4R4006	315-0106-00		RES.,FXD,CMPSN:10M OHM,5%,0.25W	01121	CB1065
A4R4008	315-0182-00		RES.,FXD,CMPSN:1.8K OHM,5%,0.25W	57668	NTR25J-E1K8
A4R4013	315-0104-00		RES.,FXD,CMPSN:100K OHM,5%,0.25W	57668	NTR25J-E100K
A4R4041	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A4R4042	315-0223-00		RES.,FXD,CMPSN:22K OHM,5%,0.25W	57668	NTR25J-E 22K
A4R4048	315-0183-00		RES.,FXD,CMPSN:18K OHM,5%,0.25W	57668	NTR25J-E 18K
A4R4059	311-1538-00		RES.,VAR,NONWIR:5K OHM X 2.5M OHM,10%	01121	18M683
A4R4069	311-1555-00		RES.,VAR,NONWIR:TRMR,100K OHM,0.5W	32997	3352T-1-104
A4R4072	311-1560-00		RES.,VAR,NONWIR:TRMR,5K OHM,0.5W	32997	3352T-1-502
A4R4075	315-0302-00		RES.,FXD,CMPSN:3K OHM,5%,0.25W	57668	NTR25J-E03K0
A4R4107	315-0471-00		RES.,FXD,CMPSN:470 OHM,5%,0.25W	57668	NTR25J-E470E
A4R4108	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A4R4109	311-1557-00		RES.,VAR,NONWIR:25K OHM,20%,0.50W	73138	91-79-0
A4R4110	315-0471-00		RES.,FXD,CMPSN:470 OHM,5%,0.25W	57668	NTR25J-E470E
A4R4111	315-0102-03		RES.,FXD,CMPSN:1K OHM,5%,0.25W	01121	CB1025
A4R4112	315-0394-00		RES.,FXD,CMPSN:390K OHM,5%,0.25W	57668	NTR25J-E390K
A4R4113	315-0102-03		RES.,FXD,CMPSN:1K OHM,5%,0.25W	01121	CB1025
A4R4114	315-0911-00		RES.,FXD,CMPSN:910 OHM,5%,0.25W	57668	NTR25J-E910E
A4R4119	315-0221-03		RES.,FXD,CMPSN:220 OHM,5%,0.25W	01121	CB2215
A4R4124	315-0226-00		RES.,FXD,CMPSN:22M OHM,5%,0.25W	01121	CB2265
A4R4123	315-0103-03		RES.,FXD,CMPSN:10K OHM,5%,0.25W	01121	CB1035
A4R4126	315-0103-03		RES.,FXD,CMPSN:10K OHM,5%,0.25W	01121	CB1035
A4R4127	307-0290-04		RES.,FXD,FILM:	80009	307-0290-04
A4R4128	315-0103-03		RES.,FXD,CMPSN:10K OHM,5%,0.25W	01121	CB1035
A4R4132	311-0075-00		RES.,VAR,NONWIR:5M OHM,20%	12697	381-CM16993

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscnt	Name & Description	Mfr Code	Mfr Part Number
A4R4142	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A4R4144	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A4R4145	321-0189-00		RES.,FXD,FILM:909 OHM,1%,0.125W	91637	CMF55116G909R0F
A4R4146	301-0393-00		RES.,FXD,CMPSN:39K OHM,5%,0.5W	57668	TR50J-E 39K
A4R4158	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A4R4161	315-0681-00		RES.,FXD,CMPSN:680 OHM,5%,0.25W	57668	NTR25J-E680E
A4R4163	315-0182-00		RES.,FXD,CMPSN:1.8K OHM,5%,0.25W	57668	NTR25J-E1K8
A4R4165	315-0330-00		RES.,FXD,CMPSN:33 OHM,5%,0.25W	57668	NTR25J-E 33E
A4R4165	—		(NOMINAL VALUE,SELECTED)		
A4R4167	321-0245-00		RES.,FXD,FILM:3.48K OHM,1%,0.125W	91637	MFF1816G34800F
A4R4169	315-0221-00		RES.,FXD,CMPSN:220 OHM,5%,0.25W	57668	NTR25J-E220E
A4R4172	321-0287-00		RES.,FXD,FILM:9.53K OHM,1%,0.125W	91637	MFF1816G95300F
A4R4173	321-0138-00		RES.,FXD,FILM:267 OHM,1%,0.125W	91637	CMF55116G267R0F
A4R4174	321-0138-00		RES.,FXD,FILM:267 OHM,1%,0.125W	91637	CMF55116G267R0F
A4R4175	315-0621-00		RES.,FXD,CMPSN:620 OHM,5%,0.25W	57668	NTR25J-E620E
A4R4178	311-1372-00		RES.,VAR,NONWIR:100K OHM,20%,1W	01121	73M1G040L104M
A4R4179	311-1313-00		RES.,VAR,NONWIR:2K OHM,20%,0.5W	01121	73M4G048L202M
A4R4184	315-0822-00		RES.,FXD,CMPSN:8.2K OHM,5%,0.25W	57668	NTR25J-E 8K2
A4R4185	315-0912-00		RES.,FXD,CMPSN:9.1K OHM,5%,0.25W	57668	NTR25J-E09K1
A4R4186	315-0473-00		RES.,FXD,CMPSN:47K OHM,5%,0.25W	57668	NTR25J-E47K0
A4R4191	315-0513-00		RES.,FXD,CMPSN:51K OHM,5%,0.25W	57668	NTR25J-E51K0
A4R4193	315-0302-00		RES.,FXD,CMPSN:3K OHM,5%,0.25W	57668	NTR25J-E03K0
A4R4195	311-1373-00		RES.,VAR,NONWIR:5K OHM,20%,1W	01121	73U4G040L502M
A4R4202	308-0459-00		RES.,FXD,WW:1.1 OHM,5%,3W	91637	CW2B-1R100J TR
A4R4204	315-0242-00		RES.,FXD,CMPSN:2.4K OHM,5%,0.25W	57668	NTR25J-E02K4
A4R4205	321-0274-00		RES.,FXD,FILM:6.98K OHM,1%,0.125W	91637	CMF55116G69800F
A4R4206	321-0775-03		RES.,FXD,FILM:45K OHM,0.25%,0.125W	91637	MFF1816D45001C
A4R4207	321-0774-03		RES.,FXD,FILM:4.5K OHM,0.25%,0.125W	91637	MFF1816D45000C
A4R4208	315-0563-00		RES.,FXD,CMPSN:56K OHM,5%,0.25W	57668	NTR25J-E 56K
A4R4213	315-0332-00		RES.,FXD,CMPSN:3.3K OHM,5%,0.25W	57668	NTR25J-E03K3
A4R4216	315-0273-00		RES.,FXD,CMPSN:27K OHM,5%,0.25W	57668	NTR25J-E27K0
A4R4217	302-0393-00		RES.,FXD,CMPSN:39K OHM,10%,0.50W	01121	EB3931
A4R4218	323-0322-00		RES.,FXD,FILM:22.1K OHM,1%,0.50W	75042	CECTO-2212F
A4R4219	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A4R4220	315-0391-00		RES.,FXD,CMPSN:390 OHM,5%,0.25W	57668	NTR25J-E390E
A4R4221	321-0249-00		RES.,FXD,FILM:3.83K OHM,1%,0.125W	91637	MFF1816G38300F
A4R4224	321-0168-00		RES.,FXD,FILM:549 OHM,1%,0.125W	91637	CMF55116G549R0F
A4R4225	315-0201-00		RES.,FXD,CMPSN:200 OHM,5%,0.25W	57668	NTR25J-E200E
A4R4226	315-0475-00		RES.,FXD,CMPSN:4.7M OHM,5%,0.25W	01121	CB4755
A4R4227	315-0221-00		RES.,FXD,CMPSN:220 OHM,5%,0.25W	57668	NTR25J-E220E
A4R4228	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A4R4230	315-0242-00		RES.,FXD,CMPSN:2.4K OHM,5%,0.25W	57668	NTR25J-E02K4
A4R4231	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A4R4235	315-0683-00		RES.,FXD,CMPSN:68K OHM,5%,0.25W	57668	NTR25J-E68K0
A4R4242	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A4R4244	322-0289-00		RES.,FXD,FILM:10K OHM,1%,0.25W	24546	NA60 10K 1%
A4R4245	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A4R4250	322-0289-00		RES.,FXD,FILM:10K OHM,1%,0.25W	24546	NA60 10K 1%
A4R4253	311-1556-00		RES.,VAR,NONWIR:50K OHM,20%,0.50W	73138	91-78-0
A4R4254	322-0289-00		RES.,FXD,FILM:10K OHM,1%,0.25W	24546	NA60 10K 1%
A4R4260	315-0223-00		RES.,FXD,CMPSN:22K OHM,5%,0.25W	57668	NTR25J-E 22K
A4R4262	315-0223-00		RES.,FXD,CMPSN:22K OHM,5%,0.25W	57668	NTR25J-E 22K
A4R4263	301-0181-00		RES.,FXD,CMPSN:180 OHM,5%,0.5W	57668	TR50J-E180E
A4R4265	321-0142-00		RES.,FXD,FILM:294 OHM,1%,0.125W	91637	CMF55116G294R0F

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscnt	Name & Description	Mfr Code	Mfr Part Number
A4R4266	321-0126-00		RES.,FXD,FILM:200 OHM,1%,0.125W	91637	CMF55116G200R0F
A4R4267	321-0126-00		RES.,FXD,FILM:200 OHM,1%,0.125W	91637	CMF55116G200R0F
A4R4268	321-0300-00		RES.,FXD,FILM:13K OHM,1%,0.125W	91637	MFF1816G13001F
A4R4268	---		(NOMINAL VALUE,SELECTED)		
A4R4270	321-0206-00		RES.,FXD,FILM:1.37K OHM,1%,0.125W	91637	MFF1816G13700F
A4R4272	315-0621-00		RES.,FXD,CMPSN:620 OHM,5%,0.25W	57668	NTR25J-E620E
A4R4273	323-0289-00		RES.,FXD,FILM:10K OHM,1%,0.50W	75042	CECT0-1002F
A4R4274	311-1563-00		RES.,VAR,NONWIR:1K OHM,20%,0.50W	73138	91-85-0
A4R4275	311-1561-00		RES.,VAR,NONWIR:2.5K OHM,20%,0.50W	73138	91-83-0
A4R4276	321-0210-00		RES.,FXD,FILM:1.5K OHM,1%,0.125W	91637	MFF1816G15000F
A4R4277	323-0289-00		RES.,FXD,FILM:10K OHM,1%,0.50W	75042	CECT0-1002F
A4R4279	321-0110-00		RES.,FXD,FILM:137 OHM,1%,0.125W	91637	CMF55116G137R0F
A4R4280	321-0205-00		RES.,FXD,FILM:1.33K OHM,1%,0.125W	91637	CMF55116G13300F
A4R4281	321-0164-00		RES.,FXD,FILM:499 OHM,1%,0.125W	91637	CMF55116G499R0F
A4R4282	321-0253-00		RES.,FXD,FILM:4.22K OHM,1%,0.125W	91637	MFF1816G42200F
A4R4283	315-0472-00		RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	57668	NTR25J-E04K7
A4R4284	315-0333-00		RES.,FXD,CMPSN:33K OHM,5%,0.25W	57668	NTR25J-E33K0
A4R4285	321-0174-00		RES.,FXD,FILM:634 OHM,1%,0.125W	24546	CT55 623 OHM 1%
A4R4286	315-0471-00		RES.,FXD,CMPSN:470 OHM,5%,0.25W	57668	NTR25J-E470E
A4R4287	315-0152-00		RES.,FXD,CMPSN:1.5K OHM,5%,0.25W	57668	NTR25J-E01K5
A4R4288	315-0202-00		RES.,FXD,CMPSN:2K OHM,5%,0.25W	57668	NTR25J-E02K0
A4R4289	315-0203-00		RES.,FXD,CMPSN:20K OHM,5%,0.25W	57668	NTR25J-E20K0
A4R4291	315-0512-00		RES.,FXD,CMPSN:5.1K OHM,5%,0.25W	57668	NTR25J-E05K1
A4R4293	311-1568-00		RES.,VAR,NONWIR:50 OHM,20%,0.50W	73138	91-90-0
A4R4294	321-0107-00		RES.,FXD,FILM:127 OHM,1%,0.125W	91637	CMF55116G127R0F
A4R4295	321-0001-00		RES.,FXD,FILM:10 OHM,1%,0.125W	75042	CEAT0-10R00F
A4R4302	315-0122-00		RES.,FXD,CMPSN:1.2K OHM,5%,0.25W	57668	NTR25J-E01K2
A4R4303	307-0052-00		RES.,FXD,CMPSN:3 OHM,5%,0.50W	01121	EB30G5
A4R4305	321-0366-00		RES.,FXD,FILM:63.4K OHM,1%,0.125W	91637	CMF55116G63401F
A4R4306	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A4R4311	321-0962-03		RES.,FXD,FILM:8K OHM,0.25%,0.125W	24546	NC55 8000C
A4R4312	321-0967-03		RES.,FXD,FILM:55K OHM,0.25%,0.125W	91637	MFF1816D55001C
A4R4313	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A4R4314	321-0201-00		RES.,FXD,FILM:1.21K OHM,1%,0.125W	91637	CMF55116G12100F
A4R4315	315-0512-00		RES.,FXD,CMPSN:5.1K OHM,5%,0.25W	57668	NTR25J-E05K1
A4R4316	315-0183-00		RES.,FXD,CMPSN:18K OHM,5%,0.25W	57668	NTR25J-E 18K
A4R4318	311-1226-00		RES.,VAR,NONWIR:2.5K OHM,20%,0.50W	32997	3386F-T04-252
A4R4319	321-0292-00		RES.,FXD,FILM:10.7K OHM,1%,0.125W	91637	MFF1816G10701F
A4R4321	321-0307-00		RES.,FXD,FILM:15.4K OHM,1%,0.125W	91637	MFF1816G15401F
A4R4322	321-0220-00		RES.,FXD,FILM:1.91K OHM,1%,0.125W	91637	MFF1816G19100F
A4R4323	301-0243-00		RES.,FXD,CMPSN:24K OHM,5%,0.5W	57668	TR50J-E24K
A4R4324	315-0242-00		RES.,FXD,CMPSN:2.4K OHM,5%,0.25W	57668	NTR25J-E02K4
A4R4325	307-0093-00		RES.,FXD,CMPSN:1.2 OHM,5%,0.50W	01121	EB12G5
A4R4326	303-0223-00		RES.,FXD,CMPSN:22K OHM,5%,1W	01121	GB2235
A4R4327	315-0153-00		RES.,FXD,CMPSN:15K OHM,5%,0.25W	57668	NTR25J-E 15K
A4R4331	315-0273-00		RES.,FXD,CMPSN:27K OHM,5%,0.25W	57668	NTR25J-E27K0
A4R4332	315-0224-00		RES.,FXD,CMPSN:220K OHM,5%,0.25W	57668	NTR25J-E220K
A4R4341	322-0289-00		RES.,FXD,FILM:10K OHM,1%,0.25W	24546	NA60 10K 1%
A4R4342	301-0393-00		RES.,FXD,CMPSN:39K OHM,5%,0.5W	57668	TR50J-E 39K
A4R4343	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A4R4344	302-0273-00		RES.,FXD,CMPSN:27K OHM,10%,0.50W	01121	EB2731
A4R4345	321-0268-00		RES.,FXD,FILM:6.04K OHM,1%,0.125W	91637	CMF55116G60400F
A4R4346	321-0189-00		RES.,FXD,FILM:909 OHM,1%,0.125W	91637	CMF55116G909R0F
A4R4347	321-0034-00		RES.,FXD,FILM:22.1 OHM,1%,0.125W	91637	CMF55116G22R10F

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A4R4351	315-0273-00		RES.,FXD,CMPSN:27K OHM,5%,0.25W	57668	NTR25J-E27K0
A4R4352	321-0222-00		RES.,FXD,FILM:2K OHM,1%,0.125W	91637	MFF1816G20000F
A4R4360	321-0142-00		RES.,FXD,FILM:294 OHM,1%,0.125W	91637	CMF55116G294R0F
A4R4361	321-0245-00		RES.,FXD,FILM:3.48K OHM,1%,0.125W	91637	MFF1816G34800F
A4R4362	315-0391-00		RES.,FXD,CMPSN:390 OHM,5%,0.25W	57668	NTR25J-E390E
A4R4363	315-0121-00		RES.,FXD,CMPSN:120 OHM,5%,0.25W	57668	NTR25J-E 120E
A4R4363	---		(NOMINAL VALUE,SELECTED)		
A4R4364	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A4R4365	321-0222-00		RES.,FXD,FILM:2K OHM,1%,0.125W	91637	MFF1816G20000F
A4R4366	321-0173-00		RES.,FXD,FILM:619 OHM,1%,0.125W	91637	CMF55116G619R0F
A4R4367	321-0184-00		RES.,FXD,FILM:806 OHM,1%,0.125W	91637	CMF55116G806R0F
A4R4368	323-0248-00		RES.,FXD,FILM:3.74K OHM,1%,0.50W	19701	5053RD3K740F
A4R4369	323-0248-00		RES.,FXD,FILM:3.74K OHM,1%,0.50W	19701	5053RD3K740F
A4R4371	321-0184-00		RES.,FXD,FILM:806 OHM,1%,0.125W	91637	CMF55116G806R0F
A4R4372	321-0173-00		RES.,FXD,FILM:619 OHM,1%,0.125W	91637	CMF55116G619R0F
A4R4373	311-1567-00		RES.,VAR,NONWIR:TRMR,100 OHM,0.50W	73138	91-89-0
A4R4374	315-0270-00		RES.,FXD,CMPSN:27 OHM,5%,0.25W	57668	NTR25J-E 27E
A4R4375	315-0331-00		RES.,FXD,CMPSN:330 OHM,5%,0.25W	57668	NTR25J-E330E
A4R4376	323-0191-00		RES.,FXD,FILM:953 OHM,1%,0.50W	75042	CECT0-9530F
A4R4381	311-1567-00		RES.,VAR,NONWIR:TRMR,100 OHM,0.50W	73138	91-89-0
A4R4382	321-0193-00		RES.,FXD,FILM:1K OHM,1%,0.125W	19701	5043ED1K00F
A4R4383	321-0147-00		RES.,FXD,FILM:332 OHM,1%,0.125W	91637	CMF55116G332R0F
A4R4384	321-0116-00		RES.,FXD,FILM:158 OHM,1%,0.125W	91637	CMF55116G158R0F
A4R4392	315-0512-00		RES.,FXD,CMPSN:5.1K OHM,5%,0.25W	57668	NTR25J-E05K1
A4R4394	315-0122-00		RES.,FXD,CMPSN:1.2K OHM,5%,0.25W	57668	NTR25J-E01K2
A4R4395	315-0821-00		RES.,FXD,CMPSN:820 OHM,5%,0.25W	57668	NTR25J-E 820E
A4R4396	315-0122-00		RES.,FXD,CMPSN:1.2K OHM,5%,0.25W	57668	NTR25J-E01K2
A4R4397	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A4R4403	308-0459-00		RES.,FXD,WW:1.1 OHM,5%,3W	91637	CW2B-1R100J TR
A4R4404	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A4R4405	315-0123-00		RES.,FXD,CMPSN:12K OHM,5%,0.25W	57668	NTR25J-E12K0
A4R4406	321-0296-00		RES.,FXD,FILM:11.8K OHM,1%,0.125W	91637	MFF1816G11801F
A4R4407	321-0603-00		RES.,FXD,FILM:15K OHM,0.25%,0.125W	91637	MFF1816D15001C
A4R4411	321-0966-03		RES.,FXD,FILM:40K OHM,0.25%,0.125W	91637	CMF55116D40001C
A4R4412	303-0472-00		RES.,FXD,CMPSN:4.7K OHM,5%,1W	01121	GB4725
A4R4421	323-0269-00		RES.,FXD,FILM:6.19K OHM,1%,0.50W	75042	CECT0-6191F
A4R4422	308-0644-00		RES.,FXD,WW:25 OHM,1%,5W	91637	RS5111-25 OHM 1%
A4R4432	315-0200-02		RES.,FXD,CMPSN:20 OHM,5%,0.25W	01121	CB2005
A4R4433	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A4R4434	303-0203-00		RES.,FXD,CMPSN:20K OHM,5%,1W	01121	GB2035
A4R4441	315-0302-00		RES.,FXD,CMPSN:3K OHM,5%,0.25W	57668	NTR25J-E03K0
A4R4451	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A4R4461	321-0229-00		RES.,FXD,FILM:2.37K OHM,1%,0.125W	24546	CT552371F
A4R4462	321-0251-01		RES.,FXD,FILM:4.02K OHM,0.5%,0.125W	91637	MFF1816G40200D
A4R4466	321-0418-00		RES.,FXD,FILM:221K OHM,1%,0.125W	91637	MFF1816G22102F
A4R4467	315-0822-00		RES.,FXD,CMPSN:8.2K OHM,5%,0.25W	57668	NTR25J-E 8K2
A4R4469	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A4R4471	321-0463-00		RES.,FXD,FILM:649K OHM,1%,0.125W	91637	MFF1816G64902F
A4R4472	315-0822-00		RES.,FXD,CMPSN:8.2K OHM,5%,0.25W	57668	NTR25J-E 8K2
A4R4473	315-0221-00		RES.,FXD,CMPSN:220 OHM,5%,0.25W	57668	NTR25J-E220E
A4R4474	321-0228-00		RES.,FXD,FILM:2.32K OHM,1%,0.125W	24546	CT552321F
A4R4475	321-0251-01		RES.,FXD,FILM:4.02K OHM,0.5%,0.125W	91637	MFF1816G40200D
A4R4476	315-0184-00		RES.,FXD,CMPSN:180K OHM,5%,0.25W	57668	NTR25J-E 180K
A4R4477	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A4R4479	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A4R4482	315-0512-02		RES.,FXD,CMPSN:5.1K OHM,5%,0.25W	01121	CB5125
A4R4483	315-0512-02		RES.,FXD,CMPSN:5.1K OHM,5%,0.25W	01121	CB5125
A4R4484	315-0512-02		RES.,FXD,CMPSN:5.1K OHM,5%,0.25W	01121	CB5125
A4R4485	315-0222-00		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	57668	NTR25J-E02K2
A4R4486	315-0512-00		RES.,FXD,CMPSN:5.1K OHM,5%,0.25W	57668	NTR25J-E05K1
A4R4487	315-0222-00		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	57668	NTR25J-E02K2
A4R4488	315-0512-00		RES.,FXD,CMPSN:5.1K OHM,5%,0.25W	57668	NTR25J-E05K1
A4R4491	315-0122-00		RES.,FXD,CMPSN:1.2K OHM,5%,0.25W	57668	NTR25J-E01K2
A4R4492	315-0821-00		RES.,FXD,CMPSN:820 OHM,5%,0.25W	57668	NTR25J-E 820E
A4R4493	315-0122-00		RES.,FXD,CMPSN:1.2K OHM,5%,0.25W	57668	NTR25J-E01K2
A4R4494	315-0821-00		RES.,FXD,CMPSN:820 OHM,5%,0.25W	57668	NTR25J-E 820E
A4R4495	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A4R4496	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A4R4497	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A4R4498	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A4R4526	308-0363-00		RES.,FXD,WW:3K OHM,5%,8W	14193	SAV96-3001J
A4R4527	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A4R4531	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A4R4545	301-0432-00		RES.,FXD,CMPSN:4.3K OHM,5%,0.5W	57668	TR50J-E 4K3
A4R4546	321-0228-00		RES.,FXD,FILM:2.32K OHM,1%,0.125W	24546	CT552321F
A4R4547	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A4R4548	321-0193-00		RES.,FXD,FILM:1K OHM,1%,0.125W	19701	5043ED1K00F
A4R4551	308-0421-00		RES.,FXD,WW:3K OHM,5%,3W	91637	CW-2B B30000J
A4R4552	315-0360-00		RES.,FXD,CMPSN:36 OHM,5%,0.25W	57668	NTR25J-E 36E
A4R4553	321-0250-00		RES.,FXD,FILM:3.92K OHM,1%,0.125W	91637	MFF1816G39200F
A4R4554	321-0195-00		RES.,FXD,FILM:1.05K OHM,1%,0.125W	91637	CMF55116G10500F
A4R4561	315-0360-00		RES.,FXD,CMPSN:36 OHM,5%,0.25W	57668	NTR25J-E 36E
A4R4562	321-0193-00		RES.,FXD,FILM:1K OHM,1%,0.125W	19701	5043ED1K00F
A4R4563	321-0165-00		RES.,FXD,FILM:511 OHM,1%,0.125W	91637	CMF55116G511R0F
A4R4564	315-0330-00		RES.,FXD,CMPSN:33 OHM,5%,0.25W	57668	NTR25J-E 33E
A4R4565	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A4R4566	321-0193-00		RES.,FXD,FILM:1K OHM,1%,0.125W	19701	5043ED1K00F
A4R4568	315-0330-00		RES.,FXD,CMPSN:33 OHM,5%,0.25W	57668	NTR25J-E 33E
A4R4570	311-1567-00		RES.,VAR,NONWIR:TRMR,100 OHM,0.50W	73138	91-89-0
A4R4571	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A4R4572	321-0256-00		RES.,FXD,FILM:4.53K OHM,1%,0.125W	91637	MFF1816G45300F
A4R4573	321-0154-00		RES.,FXD,FILM:392 OHM,1%,0.125W	91637	CMF55116G392R0F
A4R4574	321-0231-00		RES.,FXD,FILM:2.49K OHM,1%,0.125W	91637	MFF1816G24900F
A4R4575	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A4R4576	303-0432-00		RES.,FXD,CMPSN:4.3K OHM,5%,1W	01121	GB4325
A4R4577	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A4R4578	321-0228-00		RES.,FXD,FILM:2.32K OHM,1%,0.125W	24546	CT552321F
A4R4579	321-0193-00		RES.,FXD,FILM:1K OHM,1%,0.125W	19701	5043ED1K00F
A4R4581	308-0421-00		RES.,FXD,WW:3K OHM,5%,3W	91637	CW-2B B30000J
A4R4583	315-0360-00		RES.,FXD,CMPSN:36 OHM,5%,0.25W	57668	NTR25J-E 36E
A4R4584	321-0250-00		RES.,FXD,FILM:3.92K OHM,1%,0.125W	91637	MFF1816G39200F
A4R4585	321-0195-00		RES.,FXD,FILM:1.05K OHM,1%,0.125W	91637	CMF55116G10500F
A4R4586	321-0193-00		RES.,FXD,FILM:1K OHM,1%,0.125W	19701	5043ED1K00F
A4R4587	321-0165-00		RES.,FXD,FILM:511 OHM,1%,0.125W	91637	CMF55116G511R0F
A4R4592	315-0360-00		RES.,FXD,CMPSN:36 OHM,5%,0.25W	57668	NTR25J-E 36E
A4R4593	315-0273-00		RES.,FXD,CMPSN:27K OHM,5%,0.25W	57668	NTR25J-E27K0
A4R4595	321-0256-00		RES.,FXD,FILM:4.53K OHM,1%,0.125W	91637	MFF1816G45300F
A4R4596	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscnt	Name & Description	Mfr Code	Mfr Part Number
A4R4597	321-0193-00		RES.,FXD,FILM:1K OHM,1%,0.125W	19701	5043ED1K00F
A4R4598	315-0181-00		RES.,FXD,CMPSN:180 OHM,5%,0.25W	57668	NTR25J-E180E
A4R4599	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A4RT4373	307-0122-00		RES.,THERMAL:50 OHM,10%	50157	3D1515
A4S4075	260-1310-01		SWITCH,PUSH:4PDT MOMENTARY,NON-SHORTING	59821	2KAA001000549
A4S4371	260-1208-00		SWITCH,PUSH:DPDT,28VDC,PUSH-PUSH	31918	ORDER BY DESCR
A4T4015	120-0800-01		XFMR,PWR,SDN&SU:MOLDED	80009	120-0800-01
A4U4032	152-0552-00		SEMICONV DEVICE:V MULTR,5KV IN,15KV OUT	60211	VM170
A4U4206	156-0158-00		MICROCIRCUIT,LI:DUAL OPERATIONAL AMPLIFIER	18324	MC1458N
A4U4269	156-0048-03		MICROCIRCUIT,LI:5 XSTR ARRAY,SEL	04713	SC77161B
A4U4391	156-0383-02		MICROCIRCUIT,DI:QUAD 2-INP NOR GATE,SCRN	01295	SN74LS02NP3
A4U4411	156-0158-00		MICROCIRCUIT,LI:DUAL OPERATIONAL AMPLIFIER	18324	MC1458N
A4U4491	156-0388-03		MICROCIRCUIT,DI:DUAL D FLIP-FLOP,SCRN	01295	SN74LS74ANP3
A4VR4007	152-0289-00		SEMICONV DEVICE:ZENER,0.4W,180V,5%	04713	SZ12484KRL
A4VR4108	152-0286-00		SEMICONV DEVICE:ZENER,0.4W,75V,5%	80009	152-0286-00
A4VR4194	152-0127-00		SEMICONV DEVICE:ZENER,0.4W,7.5V,5%	04713	SZG35009K2
A4VR4215	152-0166-00		SEMICONV DEVICE:ZENER,0.4W,6.2V,5%	04713	SZ11738RL
A4VR4304	152-0283-00		SEMICONV DEVICE:ZENER,0.4W,43V,5%	12954	DZ750903B1N976B
A4VR4326	152-0304-00		SEMICONV DEVICE:ZENER,0.4W,20V,5%	15238	Z5411
A4VR4341	152-0166-00		SEMICONV DEVICE:ZENER,0.4W,6.2V,5%	04713	SZ11738RL
A4VR4394	152-0306-00		SEMICONV DEVICE:ZENER,0.4W,9.1V,5%	15238	Z5409
A4VR4408	152-0281-00		SEMICONV DEVICE:ZENER,0.4W,22V,5%	12954	1N969B
A4VR4421	152-0411-00		SEMICONV DEVICE:ZENER,0.25W,9V,5%	04713	SZ12483KRL
A4VR4422	152-0268-00		SEMICONV DEVICE:ZENER,0.4W,56V,5%	80009	152-0268-00
A4VR4495	152-0306-00		SEMICONV DEVICE:ZENER,0.4W,9.1V,5%	15238	Z5409
A4VR4496	152-0306-00		SEMICONV DEVICE:ZENER,0.4W,9.1V,5%	15238	Z5409
A4VR4497	152-0278-00		SEMICONV DEVICE:ZENER,0.4W,3V,5%	04713	SZG35009K20
A4W4032	131-0566-00		BUS CONDUCTOR:DUMMY RES,2.375,22 AWG	57668	JWW-0200E0
A4W4183	131-0566-00		BUS CONDUCTOR:DUMMY RES,2.375,22 AWG	57668	JWW-0200E0
A4W4259	131-0566-00		BUS CONDUCTOR:DUMMY RES,2.375,22 AWG	57668	JWW-0200E0
A4W4348	131-0566-00		BUS CONDUCTOR:DUMMY RES,2.375,22 AWG	57668	JWW-0200E0
A4W4440	131-0566-00		BUS CONDUCTOR:DUMMY RES,2.375,22 AWG	57668	JWW-0200E0
A4W4468	131-0566-00		BUS CONDUCTOR:DUMMY RES,2.375,22 AWG	57668	JWW-0200E0
A4W4481	131-0566-00		BUS CONDUCTOR:DUMMY RES,2.375,22 AWG	57668	JWW-0200E0
A4W4483	131-0566-00		BUS CONDUCTOR:DUMMY RES,2.375,22 AWG	57668	JWW-0200E0
A4W4544	131-0566-00		BUS CONDUCTOR:DUMMY RES,2.375,22 AWG	57668	JWW-0200E0

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A5	670-5998-00		CKT BOARD ASSY:VERTICAL MODE SWITCH	80009	670-5998-00
A5C5018	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A5C5135	290-0246-00		CAP.,FXD,ELCTLT:3.3UF,10%,15V	56289	173D335X9015V
A5C5145	290-0246-00		CAP.,FXD,ELCTLT:3.3UF,10%,15V	56289	173D335X9015V
A5C5214	290-0804-00		CAP.,FXD,ELCTLT:10UF,+50-10%,25V	55680	ULA1E100TEA
A5C5235	290-0246-00		CAP.,FXD,ELCTLT:3.3UF,10%,15V	56289	173D335X9015V
A5C5245	290-0246-00		CAP.,FXD,ELCTLT:3.3UF,10%,15V	56289	173D335X9015V
A5CR5115	152-0141-02		SEMICON DVC,DI:SW,S1,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A5CR5116	152-0141-02		SEMICON DVC,DI:SW,S1,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A5CR5118	152-0141-02		SEMICON DVC,DI:SW,S1,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A5CR5211	152-0141-02		SEMICON DVC,DI:SW,S1,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A5CR5214	152-0141-02		SEMICON DVC,DI:SW,S1,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A5Q5017	151-0301-00		TRANSISTOR:SILICON,PNP	27014	2N2907A
A5Q5056	151-0302-00		TRANSISTOR:SILICON,NPN	07263	S038487
A5Q5057	151-0281-00		TRANSISTOR:SILICON,NPN	03508	X16P4039
A5Q5241	151-0301-00		TRANSISTOR:SILICON,PNP	27014	2N2907A
A5Q5257	151-0281-00		TRANSISTOR:SILICON,NPN	03508	X16P4039
A5Q5258	151-0302-00		TRANSISTOR:SILICON,NPN	07263	S038487
A5R5005	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A5R5006	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A5R5007	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A5R5015	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A5R5018	315-0331-00		RES.,FXD,CMPSN:330 OHM,5%,0.25W	57668	NTR25J-E330E
A5R5041	315-0161-00		RES.,FXD,CMPSN:160 OHM,5%,0.25W	57668	NTR25J-E 160E
A5R5042	315-0332-00		RES.,FXD,CMPSN:3.3K OHM,5%,0.25W	57668	NTR25J-E03K3
A5R5051	315-0241-00		RES.,FXD,CMPSN:240 OHM,5%,0.25W	57668	NTR25J-E 240E
A5R5052	315-0162-00		RES.,FXD,CMPSN:1.6K OHM,5%,0.25W	57668	NTR25J-E 1K6
A5R5053	315-0821-00		RES.,FXD,CMPSN:820 OHM,5%,0.25W	57668	NTR25J-E 820E
A5R5055	315-0473-00		RES.,FXD,CMPSN:47K OHM,5%,0.25W	57668	NTR25J-E47K0
A5R5111	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A5R5114	315-0472-00		RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	57668	NTR25J-E04K7
A5R5117	315-0331-00		RES.,FXD,CMPSN:330 OHM,5%,0.25W	57668	NTR25J-E330E
A5R5135	315-0621-00		RES.,FXD,CMPSN:620 OHM,5%,0.25W	57668	NTR25J-E620E
A5R5145	315-0621-00		RES.,FXD,CMPSN:620 OHM,5%,0.25W	57668	NTR25J-E620E
A5R5211	315-0302-00		RES.,FXD,CMPSN:3K OHM,5%,0.25W	57668	NTR25J-E03K0
A5R5212	315-0472-00		RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	57668	NTR25J-E04K7
A5R5213	315-0362-00		RES.,FXD,CMPSN:3.6K OHM,5%,0.25W	57668	NTR25J-E 3K6
A5R5214	315-0751-00		RES.,FXD,CMPSN:750 OHM,5%,0.25W	57668	NTR25J-E750E
A5R5235	315-0621-00		RES.,FXD,CMPSN:620 OHM,5%,0.25W	57668	NTR25J-E620E
A5R5236	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A5R5237	315-0472-00		RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	57668	NTR25J-E04K7
A5R5238	315-0821-00		RES.,FXD,CMPSN:820 OHM,5%,0.25W	57668	NTR25J-E 820E
A5R5245	315-0621-00		RES.,FXD,CMPSN:620 OHM,5%,0.25W	57668	NTR25J-E620E
A5R5251	315-0241-00		RES.,FXD,CMPSN:240 OHM,5%,0.25W	57668	NTR25J-E 240E
A5R5252	315-0162-00		RES.,FXD,CMPSN:1.6K OHM,5%,0.25W	57668	NTR25J-E 1K6
A5R5253	315-0161-00		RES.,FXD,CMPSN:160 OHM,5%,0.25W	57668	NTR25J-E 160E
A5R5254	315-0332-00		RES.,FXD,CMPSN:3.3K OHM,5%,0.25W	57668	NTR25J-E03K3
A5R5255	315-0473-00		RES.,FXD,CMPSN:47K OHM,5%,0.25W	57668	NTR25J-E47K0
A5S5210	260-1944-00		SWITCH,PUSH:5 BTN,2 POLE,VERTICAL MODE	59821	2KBB0500001219
A5U5235	156-0652-02		MICROCIRCUIT,DI:QUAD 2-INPUT EXCL NOR GATE	01295	SN74LS266NP3

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A6	670-6001-00		CKT BOARD ASSY:TIMING	80009	670-6001-00
A6C6001	281-0763-00		CAP.,FXD,CER DI:47PF,10%,100V	04222	MA101A470KAA
A6C6002	281-0096-00		CAP.,VAR,AIR DI:5.5-18PF,350V	33095	53-717-029A5.5
A6C6015	281-0089-00		CAP.,VAR,CER DI:2-8PF,350V	59660	538-006-A2-8
A6C6016	283-0331-00		CAP.,FXD,CER DI:43PF,2%,100V	59660	0805536C0G0-430G
A6C6020	----		(MATCHED SET WITH A6C6105)		
A6C6033	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A6C6041	281-0089-00		CAP.,VAR,CER DI:2-8PF,350V	59660	538-006-A2-8
A6C6043	283-0331-00		CAP.,FXD,CER DI:43PF,2%,100V	59660	0805536C0G0-430G
A6C6105	295-0175-00		CAP.,SET,MTCHD:0.1UF,9.95UF,985PF,0.2%	80009	295-0175-00
A6C6110	----		(MATCHED SET WITH A6C6105)		
A6C6112	283-0645-00		CAP.,FXD,MICA D:790PF,1%,100V	00853	D153F791F0
A6C6121	290-0245-00		CAP.,FXD,ELCTL:1.5UF,10%,10V	56289	150D155X9010A2
A6C6122	283-0239-00		CAP.,FXD,CER DI:0.022UF,10%,50V	72982	8121N083X7R0223K
A6C6135	----		(PART OF A6C140)		
A6C6140	295-0157-00		CAP.,SET,MTCHD:0.1UF,1UF,998PF	80009	295-0157-00
A6C6225	----		(PART OF A6C140)		
A6CR6113	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A6CR6218	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A6CR6219	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A6Q6032	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A6Q6034	151-0302-00		TRANSISTOR:SILICON,NPN	07263	S038487
A6Q6036	151-0302-00		TRANSISTOR:SILICON,NPN	07263	S038487
A6Q6215	151-0188-00		TRANSISTOR:PNP,SI,TO-92	04713	SPS6868
A6R6001	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A6R6002	323-0498-04		RES.,FXD,FILM:1.5M OHM,0.1%,0.50W	91637	HFF129D15003B
A6R6004	323-0481-04		RES.,FXD,FILM:1M OHM,0.1%,0.50W	91637	MFF1226D10003B
A6R6006	321-0648-04		RES.,FXD,FILM:500K OHM,0.1%,0.125W	91637	CMF110216D50002B
A6R6008	321-0618-04		RES.,FXD,FILM:250K OHM,0.1%,0.125W	24546	NC55 2502 B
A6R6010	321-0414-04		RES.,FXD,FILM:200K OHM,0.1%,0.125W	91637	CMF55116D20002B
A6R6011	311-1915-00		RES.,VAR,NONWIR:20K OHM,10%,0.50W	73138	72-196-0
A6R6012	321-0169-00		RES.,FXD,FILM:562 OHM,1%,0.125W	91637	CMF55116G562R0F
A6R6012	----		(STANDARD ONLY. SEE DM44 MANUAL FOR ALTERNATE VALUE)		
A6R6012	----				
A6R6013	321-0385-04		RES.,FXD,FILM:100K OHM,0.1%,0.125W	91637	MFF1816D10002B
A6R6014	321-0756-04		RES.,FXD,FILM:50K OHM,0.1%,0.125W	91637	MFF1816D50001B
A6R6017	321-0986-07		RES.,FXD,FILM:25K OHM,0.1%,0.125W	91637	MFF1816C25001B
A6R6018	321-0380-00		RES.,FXD,FILM:88.7K OHM,1%,0.125W	91637	MFF1816G88701F
A6R6019	321-0156-00		RES.,FXD,FILM:412 OHM,1%,0.125W	91637	CMF55116G412R0F
A6R6019	----		(STANDARD ONLY. SEE DM44 MANUAL FOR ALTERNATE VALUE)		
A6R6019	----				
A6R6020	321-0790-00		RES.,FXD,FILM:990K OHM,1%,0.125W	14298	AME55D9903F
A6R6021	321-0983-00		RES.,FXD,FILM:4.5M OHM,1%,0.125W	91637	CM110216G45003F
A6R6022	321-0296-00		RES.,FXD,FILM:11.8K OHM,1%,0.125W	91637	MFF1816G11801F
A6R6026	323-0498-04		RES.,FXD,FILM:1.5M OHM,0.1%,0.50W	91637	HFF129D15003B
A6R6027	323-0481-04		RES.,FXD,FILM:1M OHM,0.1%,0.50W	91637	MFF1226D10003B
A6R6032	321-0648-04		RES.,FXD,FILM:500K OHM,0.1%,0.125W	91637	CMF110216D50002B
A6R6033	321-0618-04		RES.,FXD,FILM:250K OHM,0.1%,0.125W	24546	NC55 2502 B
A6R6034	321-0414-04		RES.,FXD,FILM:200K OHM,0.1%,0.125W	91637	CMF55116D20002B
A6R6035	321-0385-04		RES.,FXD,FILM:100K OHM,0.1%,0.125W	91637	MFF1816D10002B
A6R6036	321-0756-04		RES.,FXD,FILM:50K OHM,0.1%,0.125W	91637	MFF1816D50001B
A6R6037	321-0986-07		RES.,FXD,FILM:25K OHM,0.1%,0.125W	91637	MFF1816C25001B
A6R6038	321-0383-00		RES.,FXD,FILM:95.3K OHM,1%,0.125W	91637	MFF1816G95301F



Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A6R6044	315-0473-00		RES.,FXD,CMPSN:47K OHM,5%,0.25W	57668	NTR25J-E47K0
A6R6045	321-0262-00		RES.,FXD,FILM:5.23K OHM,1%,0.125W	91637	MFF1816G52300F
A6R6046	321-0496-00		RES.,FXD,FILM:1.43M OHM,1%,0.125W	91637	HFF1813G14303F
A6R6047	321-0431-00		RES.,FXD,FILM:301K OHM,1%,0.125W	91637	MFF1816G30102F
A6R6052	311-1245-00		RES.,VAR,NONWIR:10K OHM,10%,0.50W	73138	72-28-0
A6R6053	311-1245-00		RES.,VAR,NONWIR:10K OHM,10%,0.50W	73138	72-28-0
A6R6054	321-0458-00		RES.,FXD,FILM:576K OHM,1%,0.125W	91637	MFF1816G57602F
A6R6056	315-0472-00		RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	57668	NTR25J-E04K7
A6R6060	315-0331-00		RES.,FXD,CMPSN:330 OHM,5%,0.25W	57668	NTR25J-E330E
A6R6114	321-0338-00		RES.,FXD,FILM:32.4K OHM,1%,0.125W	91637	MFF1816G32401F
A6R6115	321-0429-00		RES.,FXD,FILM:287K OHM,1%,0.125W	91637	MFF1816G28702F
A6R6123	321-0481-00		RES.,FXD,FILM:1M OHM,1%,0.125W	91637	CMF55116G10003F
A6R6152	311-1238-00		RES.,VAR,NONWIR:5K OHM,10%,0.50W	73138	72-27-0
A6R6155	-----		(SEE CHASSIS PARTS)		
A6R6212	315-0561-00		RES.,FXD,CMPSN:560 OHM,5%,0.25W	57668	NTRERJ-E 560E
A6R6213	315-0302-00		RES.,FXD,CMPSN:3K OHM,5%,0.25W	57668	NTR25J-E03K0
A6R6217	315-0682-00		RES.,FXD,CMPSN:6.8K OHM,5%,0.25W	57668	NTR25J-E06K8
A6S6111	-----		(SEE CHASSIS PARTS)		
A6S6155	-----		(SEE CHASSIS PARTS)		
A6S6205	260-1422-00		SWITCH,PUSH:3 STA,INTERLOCK	59821	EKBC030000594
A6S6260	260-1945-00		SWITCH,PUSH:3 BTN,2 POLE,1 BTN BLANK	80009	260-1945-00
A6VR6057	152-0395-00		SEMICONV DEVICE:ZENER,0.4W,4.3V,5%	14552	TD332317
A6VR6058	152-0166-00		SEMICONV DEVICE:ZENER,0.4W,6.2V,5%	04713	SZ11738RL

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscnt	Name & Description	Mfr Code	Mfr Part Number
A7	670-6000-00		CKT BOARD ASSY:TRIGGER GEN & SWEEP LOGIC	80009	670-6000-00
A7	670-6000-01		CKT BOARD ASSY:TRIGGER GEN & SWEEP LOGIC	80009	670-6000-01
A7	— —		(OPTION 05 ONLY)		
A7C7006	281-0603-00		CAP.,FXD,CER DI:39PF,5%,500V	59660	308-000C0G0390J
A7C7008	281-0579-00		CAP.,FXD,CER DI:21PF,5%,500V	59660	301000C0G0210J
A7C7018	281-0815-00		CAP.,FXD,CER DI:0.027UF,20%,50V	72982	8005D9AABW5R273M
A7C7019	281-0759-00		CAP.,FXD,CER DI:22PF,10%,100V	96733	R2735
A7C7025	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A7C7027	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A7C7028	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A7C7052	290-0183-00		CAP.,FXD,ELCTLT:1UF,10%,35V	90201	TAC105K035P02
A7C7107	281-0592-00		CAP.,FXD,CER DI:4.7PF,+/-0.5PF,500V	59660	301000C0H0479D
A7C7107	— —		(OPTION 05 ONLY)		
A7C7108	281-0813-00		CAP.,FXD,CER DI:0.047UF,20%,50V	96733	R2980
A7C7116	281-0814-00		CAP.,FXD,CER DI:100PF,10%,100V	04222	GC101A101K
A7C7127	290-0808-00		CAP.,FXD,ELCTLT:2.7UF,10%,20V	05397	T3228275K020AS
A7C7128	281-0759-00		CAP.,FXD,CER DI:22PF,10%,100V	96733	R2735
A7C7134	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A7C7158	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A7C7165	281-0814-00		CAP.,FXD,CER DI:100PF,10%,100V	04222	GC101A101K
A7C7174	281-0786-00		CAP.,FXD,CER DI:150PF,10%,100V	04222	MA101A151KAA
A7C7182	281-0547-00		CAP.,FXD,CER DI:2.7PF,10%,500V	04222	7001-COJ-2R7C
A7C7187	281-0547-00		CAP.,FXD,CER DI:2.7PF,10%,500V	04222	7001-COJ-2R7C
A7C7188	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A7C7196	290-0527-00		CAP.,FXD,ELCTLT:15UF,20%,20V	90201	TDC156M020NFL
A7C7197	290-0527-00		CAP.,FXD,ELCTLT:15UF,20%,20V	90201	TDC156M020NFL
A7C7227	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A7C7229	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A7C7244	290-0808-00		CAP.,FXD,ELCTLT:2.7UF,10%,20V	05397	T3228275K020AS
A7C7247	290-0808-00		CAP.,FXD,ELCTLT:2.7UF,10%,20V	05397	T3228275K020AS
A7C7263	290-0808-00		CAP.,FXD,ELCTLT:2.7UF,10%,20V	05397	T3228275K020AS
A7C7265	290-0808-00		CAP.,FXD,ELCTLT:2.7UF,10%,20V	05397	T3228275K020AS
A7C7273	290-0183-00		CAP.,FXD,ELCTLT:1UF,10%,35V	90201	TAC105K035P02
A7C7286	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A7C7288	290-0527-00		CAP.,FXD,ELCTLT:15UF,20%,20V	90201	TDC156M020NFL
A7C7297	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A7C7303	290-0808-00		CAP.,FXD,ELCTLT:2.7UF,10%,20V	05397	T3228275K020AS
A7C7313	281-0772-00		CAP.,FXD,CER DI:0.0047UF,10%,100V	04222	MA201C472KAA
A7C7313	— —		(OPTION 05 ONLY)		
A7C7313	281-0815-00		CAP.,FXD,CER DI:0.027UF,20%,50V	72982	8005D9AABW5R273M
A7C7317	281-0814-00		CAP.,FXD,CER DI:100PF,10%,100V	04222	GC101A101K
A7C7321	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A7C7329	281-0759-00		CAP.,FXD,CER DI:22PF,10%,100V	96733	R2735
A7C7371	281-0797-00		CAP.,FXD,CER DI:15PF,10%,100V	04222	MA106A150KAA
A7C7376	281-0786-00		CAP.,FXD,CER DI:150PF,10%,100V	04222	MA101A151KAA
A7C7377	290-0808-00		CAP.,FXD,ELCTLT:2.7UF,10%,20V	05397	T3228275K020AS
A7C7404	281-0579-00		CAP.,FXD,CER DI:21PF,5%,500V	59660	301000C0G0210J
A7C7406	281-0814-00		CAP.,FXD,CER DI:100PF,10%,100V	04222	GC101A101K
A7C7425	281-0158-00		CAP.,VAR,CER DI:7.45PF,25V	73899	DVJ-5006
A7C7435	283-0116-00		CAP.,FXD,CER DI:820PF,5%,500V	59660	801547B821J
A7C7442	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A7C7443	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A7C7447	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscnt	Name & Description	Mfr Code	Mfr Part Number
A7C7449	281-0814-00		CAP.,FXD,CER DI:100PF,10%,100V	04222	GC101A101K
A7C7453	281-0797-00		CAP.,FXD,CER DI:15PF,10%,100V	04222	MA106A150KAA
A7C7458	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A7C7461	281-0814-00		CAP.,FXD,CER DI:100PF,10%,100V	04222	GC101A101K
A7C7471	290-0301-00		CAP.,FXD,ELCTLT:10UF,10%,20V	56289	150D106X9020B2
A7C7501	281-0592-00		CAP.,FXD,CER DI:4.7PF,+/-0.5PF,500V	59660	301000C0H0479D
A7C7501	— —		(OPTION 05 ONLY)		
A7C7505	281-0207-00		CAP.,VAR,PLSTC:2-18PF,100V	52769	GXA 18000
A7C7506	281-0217-00		CAP.,VAR,CER DI:0.5-3.5PF,400V	52763	311908141
A7C7507	290-0808-00		CAP.,FXD,ELCTLT:2.7UF,10%,20V	05397	T3228275K020AS
A7C7508	281-0811-00		CAP.,FXD,CER DI:100PF,10%,100V	96733	R2911
A7C7511	281-0814-00		CAP.,FXD,CER DI:100PF,10%,100V	04222	GC101A101K
A7C7511	— —		(OPTION 05 ONLY)		
A7C7517	281-0759-00		CAP.,FXD,CER DI:22PF,10%,100V	96733	R2735
A7C7519	281-0812-00		CAP.,FXD,CER DI:1000PF,10%,100V	04222	MA101C102KAA
A7C7529	281-0122-00		CAP.,VAR,CER DI:2.5-9PF,100V	59660	518-000A2.5-9
A7C7536	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A7C7565	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A7CR7046	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7072	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7073	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7078	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7084	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7085	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7097	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7098	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7099	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7120	152-0246-00		SEMICON DEVICE:SW,SI,40V,200MA	14433	WG1537TK
A7CR7146	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7147	152-0125-01		SEMICON DEVICE:TUNNEL,4.7MA,18PF	03508	STD704
A7CR7148	152-0125-01		SEMICON DEVICE:TUNNEL,4.7MA,18PF	03508	STD704
A7CR7149	152-0322-00		SEMICON DEVICE:SILICON,15V,HOT CARRIER	50434	5082-2672
A7CR7154	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7184	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7272	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7277	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7281	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7322	152-0246-00		SEMICON DEVICE:SW,SI,40V,200MA	14433	WG1537TK
A7CR7349	152-0125-01		SEMICON DEVICE:TUNNEL,4.7MA,18PF	03508	STD704
A7CR7350	152-0125-01		SEMICON DEVICE:TUNNEL,4.7MA,18PF	03508	STD704
A7CR7362	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7381	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7382	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7383	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7385	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7386	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7387	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7449	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7451	152-0322-00		SEMICON DEVICE:SILICON,15V,HOT CARRIER	50434	5082-2672
A7CR7463	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7464	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7510	152-0246-00		SEMICON DEVICE:SW,SI,40V,200MA	14433	WG1537TK
A7CR7510	— —		(OPTION 05 ONLY)		
A7CR7521	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A7CR7536	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A7J4541	136-0499-14		CONNECTOR,RCPT,;14 CONTACT	00779	4-380949-4
A7J4571	136-0499-10		CONN,RCPT,ELEC:CKT BD,1 X 10,0.1 SPACING	00779	4-380949-0
A7L7043	108-0370-00		COIL,RF:0.14UH	80009	108-0370-00
A7L7137	108-0370-00		COIL,RF:0.14UH	80009	108-0370-00
A7L7278	108-0538-00		COIL,RF:FIXED,2.7UH	76493	JWM#B7059
A7L7341	108-0370-00		COIL,RF:0.14UH	80009	108-0370-00
A7L7441	108-0370-00		COIL,RF:0.14UH	80009	108-0370-00
A7L7525	108-0655-00		COIL,RF:FIXED,75NH	80009	108-0655-00
A7Q7053	151-0220-03		TRANSISTOR:SILICON,PNP,SEL	04713	SPS6915
A7Q7055	151-0220-03		TRANSISTOR:SILICON,PNP,SEL	04713	SPS6915
A7Q7067	151-0232-00		TRANSISTOR:SILICON,NPN,DUAL	07263	SP12141
A7Q7074	151-0220-03		TRANSISTOR:SILICON,PNP,SEL	04713	SPS6915
A7Q7075	151-0220-03		TRANSISTOR:SILICON,PNP,SEL	04713	SPS6915
A7Q7076	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A7Q7083	151-0220-03		TRANSISTOR:SILICON,PNP,SEL	04713	SPS6915
A7Q7092	151-0220-03		TRANSISTOR:SILICON,PNP,SEL	04713	SPS6915
A7Q7093	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A7Q7095	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A7Q7124	151-1042-00		SEMICONDCVC SE:MATCHED PAIR FET	22229	S2089
A7Q7142	151-0221-00		TRANSISTOR:SILICON,PNP	04713	SPS246
A7Q7143	151-0221-00		TRANSISTOR:SILICON,PNP	04713	SPS246
A7Q7155	151-0220-03		TRANSISTOR:SILICON,PNP,SEL	04713	SPS6915
A7Q7174	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A7Q7181	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A7Q7182	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A7Q7195	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A7Q7254	151-0220-03		TRANSISTOR:SILICON,PNP,SEL	04713	SPS6915
A7Q7256	151-0220-03		TRANSISTOR:SILICON,PNP,SEL	04713	SPS6915
A7Q7324	151-1042-00		SEMICONDCVC SE:MATCHED PAIR FET	22229	S2089
A7Q7344	151-0221-00		TRANSISTOR:SILICON,PNP	04713	SPS246
A7Q7345	151-0221-00		TRANSISTOR:SILICON,PNP	04713	SPS246
A7Q7422	151-0441-00		TRANSISTOR:SILICON,NPN	04713	SRF501
A7Q7424	151-0441-00		TRANSISTOR:SILICON,NPN	04713	SRF501
A7Q7460	151-0220-03		TRANSISTOR:SILICON,PNP,SEL	04713	SPS6915
A7Q7465	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A7Q7512	151-1005-00		TRANSISTOR:SILICON,JFE,N-CHANNEL	27014	F55037
A7Q7512	---		(OPTION 05 ONLY)		
A7Q7514	151-0220-03		TRANSISTOR:SILICON,PNP,SEL	04713	SPS6915
A7Q7514	---		(OPTION 05 ONLY)		
A7R7009	315-0334-00		RES.,FXD,CMPSN:330K OHM,5%,0.25W	01121	CB3345
A7R7014	315-0104-00		RES.,FXD,CMPSN:100K OHM,5%,0.25W	57668	NTR25J-E100K
A7R7020	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A7R7024	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A7R7025	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A7R7026	311-1558-00		RES.,VAR,NONWIR:TRMR,20K OHM,0.5W	32997	3352T-1-203
A7R7027	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A7R7028	315-0681-00		RES.,FXD,CMPSN:680 OHM,5%,0.25W	57668	NTR25J-E680E
A7R7029	321-0209-00		RES.,FXD,FILM:1.47K OHM,1%,0.125W	91637	MFF1816G14700F
A7R7032	315-0202-00		RES.,FXD,CMPSN:2K OHM,5%,0.25W	57668	NTR25J-E02K0
A7R7033	315-0560-00		RES.,FXD,CMPSN:56 OHM,5%,0.25W	57668	NTR25J-E56E0
A7R7034	315-0222-00		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	57668	NTR25J-E02K2
A7R7035	315-0682-00		RES.,FXD,CMPSN:6.8K OHM,5%,0.25W	57668	NTR25J-E06K8
A7R7036	315-0182-00		RES.,FXD,CMPSN:1.8K OHM,5%,0.25W	57668	NTR25J-E1K8
A7R7037	315-0182-00		RES.,FXD,CMPSN:1.8K OHM,5%,0.25W	57668	NTR25J-E1K8

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A7R7038	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A7R7042	311-1558-00		RES.,VAR,NONWIR:TRMR,20K OHM,0.5W	32997	3352T-1-203
A7R7043	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A7R7044	315-0274-00		RES.,FXD,CMPSN:270K OHM,5%,0.25W	57668	NTR25J-E270K
A7R7045	311-1558-00		RES.,VAR,NONWIR:TRMR,20K OHM,0.5W	32997	3352T-1-203
A7R7046	315-0104-00		RES.,FXD,CMPSN:100K OHM,5%,0.25W	57668	NTR25J-E100K
A7R7047	315-0330-00		RES.,FXD,CMPSN:33 OHM,5%,0.25W	57668	NTR25J-E 33E
A7R7048	315-0562-00		RES.,FXD,CMPSN:5.6K OHM,5%,0.25W	57668	NTR25J-E05K6
A7R7049	315-0390-00		RES.,FXD,CMPSN:39 OHM,5%,0.25W	57668	NTR25J-E39E0
A7R7052	321-0200-00		RES.,FXD,FILM:1.18K OHM,1%,0.125W	91637	CMF55116G11800F
A7R7056	315-0151-00		RES.,FXD,CMPSN:150 OHM,5%,0.25W	57668	NTR25J-E150E
A7R7057	315-0332-00		RES.,FXD,CMPSN:3.3K OHM,5%,0.25W	57668	NTR25J-E03K3
A7R7062	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A7R7063	315-0681-00		RES.,FXD,CMPSN:680 OHM,5%,0.25W	57668	NTR25J-E680E
A7R7064	315-0752-00		RES.,FXD,CMPSN:7.5K OHM,5%,0.25W	57668	NTR25J-E07K5
A7R7065	315-0681-00		RES.,FXD,CMPSN:680 OHM,5%,0.25W	57668	NTR25J-E680E
A7R7066	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A7R7068	315-0562-00		RES.,FXD,CMPSN:5.6K OHM,5%,0.25W	57668	NTR25J-E05K6
A7R7069	301-0622-00		RES.,FXD,CMPSN:6.2K OHM,5%,0.50W	01121	EB6225
A7R7070	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A7R7077	301-0471-00		RES.,FXD,CMPSN:470 OHM,5%,0.5W	57668	TR50J-E 470E
A7R7078	301-0471-00		RES.,FXD,CMPSN:470 OHM,5%,0.5W	57668	TR50J-E 470E
A7R7079	321-0155-00		RES.,FXD,FILM:402 OHM,1%,0.125W	91637	CMF55116G402R0F
A7R7084	315-0911-00		RES.,FXD,CMPSN:910 OHM,5%,0.25W	57668	NTR25J-E910E
A7R7085	315-0221-00		RES.,FXD,CMPSN:220 OHM,5%,0.25W	57668	NTR25J-E220E
A7R7086	315-0221-00		RES.,FXD,CMPSN:220 OHM,5%,0.25W	57668	NTR25J-E220E
A7R7087	321-0155-00		RES.,FXD,FILM:402 OHM,1%,0.125W	91637	CMF55116G402R0F
A7R7088	321-0215-00		RES.,FXD,FILM:1.69K OHM,1%,0.125W	91637	MFF1816G16900F
A7R7097	315-0472-00		RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	57668	NTR25J-E04K7
A7R7098	315-0911-00		RES.,FXD,CMPSN:910 OHM,5%,0.25W	57668	NTR25J-E910E
A7R7106	315-0754-00		RES.,FXD,CMPSN:750K OHM,5%,0.25W	57668	NTR25J-E 750K
A7R7108	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A7R7111	315-0563-00		RES.,FXD,CMPSN:56K OHM,5%,0.25W	57668	NTR25J-E 56K
A7R7119	321-0481-00		RES.,FXD,FILM:1M OHM,1%,0.125W	91637	CMF55116G10003F
A7R7121	315-0150-00		RES.,FXD,CMPSN:15 OHM,5%,0.25W	57668	NTR25J-E 15E
A7R7125	315-0150-00		RES.,FXD,CMPSN:15 OHM,5%,0.25W	57668	NTR25J-E 15E
A7R7126	321-0209-00		RES.,FXD,FILM:1.47K OHM,1%,0.125W	91637	MFF1816G14700F
A7R7128	315-0390-00		RES.,FXD,CMPSN:39 OHM,5%,0.25W	57668	NTR25J-E39E0
A7R7132	315-0362-00		RES.,FXD,CMPSN:3.6K OHM,5%,0.25W	57668	NTR25J-E 3K6
A7R7133	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A7R7134	315-0331-00		RES.,FXD,CMPSN:330 OHM,5%,0.25W	57668	NTR25J-E330E
A7R7135	315-0153-00		RES.,FXD,CMPSN:15K OHM,5%,0.25W	57668	NTR25J-E 15K
A7R7142	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A7R7143	315-0274-00		RES.,FXD,CMPSN:270K OHM,5%,0.25W	57668	NTR25J-E270K
A7R7145	315-0330-00		RES.,FXD,CMPSN:33 OHM,5%,0.25W	57668	NTR25J-E 33E
A7R7147	321-0097-00		RES.,FXD,FILM:100 OHM,1%,0.125W	91637	CMF55116G100R0F
A7R7149	321-0258-00		RES.,FXD,FILM:4.75K OHM,1%,0.125W	91637	MFF1816G47500F
A7R7150	323-0310-00		RES.,FXD,FILM:16.5K OHM,1%,0.50W	75042	CECT0-1652F
A7R7152	315-0331-00		RES.,FXD,CMPSN:330 OHM,5%,0.25W	57668	NTR25J-E330E
A7R7154	315-0681-00		RES.,FXD,CMPSN:680 OHM,5%,0.25W	57668	NTR25J-E680E
A7R7155	315-0681-00		RES.,FXD,CMPSN:680 OHM,5%,0.25W	57668	NTR25J-E680E
A7R7157	321-0186-00		RES.,FXD,FILM:845 OHM,1%,0.125W	91637	CMF55116G84500F
A7R7159	315-0270-00		RES.,FXD,CMPSN:27 OHM,5%,0.25W	57668	NTR25J-E 27E
A7R7162	315-0132-00		RES.,FXD,CMPSN:1.3K OHM,5%,0.25W	57668	NTR25J-E01K3

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A7R7164	301-0562-00		RES.,FXD,CMPSN:5.6K OHM,5%,0.50W	57668	TR50J-E 5K6
A7R7165	315-0561-00		RES.,FXD,CMPSN:560 OHM,5%,0.25W	57668	NTR25J-E 560E
A7R7166	321-0206-00		RES.,FXD,FILM:1.37K OHM,1%,0.125W	91637	MFF1816G13700F
A7R7167	321-0243-00		RES.,FXD,FILM:3.32K OHM,1%,0.125W	91637	MFF1816G33200F
A7R7171	315-0752-00		RES.,FXD,CMPSN:7.5K OHM,5%,0.25W	57668	NTR25J-E07K5
A7R7173	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A7R7175	321-0155-00		RES.,FXD,FILM:402 OHM,1%,0.125W	91637	CMF55116G402R0F
A7R7176	321-0209-00		RES.,FXD,FILM:1.47K OHM,1%,0.125W	91637	MFF1816G14700F
A7R7177	321-0171-00		RES.,FXD,FILM:590 OHM,1%,0.125W	91637	CMF55116G590R0F
A7R7178	321-0192-00		RES.,FXD,FILM:976 OHM,1%,0.125W	91637	CMF55116G976R0F
A7R7179	321-0227-00		RES.,FXD,FILM:2.26K OHM,1%,0.125W	91637	MFF1816G22600F
A7R7184	315-0472-00		RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	57668	NTR25J-E04K7
A7R7186	321-0192-00		RES.,FXD,FILM:976 OHM,1%,0.125W	91637	CMF55116G976R0F
A7R7187	321-0171-00		RES.,FXD,FILM:590 OHM,1%,0.125W	91637	CMF55116G590R0F
A7R7188	315-0220-00		RES.,FXD,CMPSN:22 OHM,5%,0.25W	57668	NTR25J-E 22E
A7R7192	321-0231-00		RES.,FXD,FILM:2.49K OHM,1%,0.125W	91637	MFF1816G24900F
A7R7194	321-0264-00		RES.,FXD,FILM:5.49K OHM,1%,0.125W	91637	MFF1816G54900F
A7R7196	315-0182-00		RES.,FXD,CMPSN:1.8K OHM,5%,0.25W	57668	NTR25J-E1K8
A7R7197	321-0155-00		RES.,FXD,FILM:402 OHM,1%,0.125W	91637	CMF55116G402R0F
A7R7208	321-0068-00		RES.,FXD,FILM:49.9 OHM,1%,0.125W	91637	CMF55116G49R90F
A7R7213	321-0068-00		RES.,FXD,FILM:49.9 OHM,1%,0.125W	91637	CMF55116G49R90F
A7R7218	321-0068-00		RES.,FXD,FILM:49.9 OHM,1%,0.125W	91637	CMF55116G49R90F
A7R7224	311-1558-00		RES.,VAR,NONWIR:TRMR,20K OHM,0.5W	32997	3352T-1-203
A7R7226	315-0202-00		RES.,FXD,CMPSN:2K OHM,5%,0.25W	57668	NTR25J-E02K0
A7R7228	315-0681-00		RES.,FXD,CMPSN:680 OHM,5%,0.25W	57668	NTR25J-E680E
A7R7229	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A7R7232	321-0209-00		RES.,FXD,FILM:1.47K OHM,1%,0.125W	91637	MFF1816G14700F
A7R7233	315-0560-00		RES.,FXD,CMPSN:56 OHM,5%,0.25W	57668	NTR25J-E56E0
A7R7234	315-0182-00		RES.,FXD,CMPSN:1.8K OHM,5%,0.25W	57668	NTR25J-E1K8
A7R7235	315-0222-00		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	57668	NTR25J-E02K2
A7R7236	315-0682-00		RES.,FXD,CMPSN:6.8K OHM,5%,0.25W	57668	NTR25J-E06K8
A7R7237	315-0182-00		RES.,FXD,CMPSN:1.8K OHM,5%,0.25W	57668	NTR25J-E1K8
A7R7238	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A7R7242	311-1558-00		RES.,VAR,NONWIR:TRMR,20K OHM,0.5W	32997	3352T-1-203
A7R7243	315-0274-00		RES.,FXD,CMPSN:270K OHM,5%,0.25W	57668	NTR25J-E270K
A7R7246	311-1558-00		RES.,VAR,NONWIR:TRMR,20K OHM,0.5W	32997	3352T-1-203
A7R7248	315-0562-00		RES.,FXD,CMPSN:5.6K OHM,5%,0.25W	57668	NTR25J-E05K6
A7R7253	321-0196-00		RES.,FXD,FILM:1.07K OHM,1%,0.125W	91637	CMF55116G10700F
A7R7264	315-0331-00		RES.,FXD,CMPSN:330 OHM,5%,0.25W	57668	NTR25J-E330E
A7R7267	315-0472-00		RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	57668	NTR25J-E04K7
A7R7269	315-0331-00		RES.,FXD,CMPSN:330 OHM,5%,0.25W	57668	NTR25J-E330E
A7R7272	315-0334-00		RES.,FXD,CMPSN:330K OHM,5%,0.25W	01121	CB3345
A7R7275	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A7R7276	315-0241-00		RES.,FXD,CMPSN:240 OHM,5%,0.25W	57668	NTR25J-E 240E
A7R7277	315-0472-00		RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	57668	NTR25J-E04K7
A7R7281	315-0112-00		RES.,FXD,CMPSN:1.1K OHM,5%,0.25W	57668	NTR25J-E 1K1
A7R7283	315-0112-00		RES.,FXD,CMPSN:1.1K OHM,5%,0.25W	57668	NTR25J-E 1K1
A7R7284	315-0162-00		RES.,FXD,CMPSN:1.6K OHM,5%,0.25W	57668	NTR25J-E 1K6
A7R7287	315-0220-00		RES.,FXD,CMPSN:22 OHM,5%,0.25W	57668	NTR25J-E 22E
A7R7297	315-0220-00		RES.,FXD,CMPSN:22 OHM,5%,0.25W	57668	NTR25J-E 22E
A7R7305	315-0510-00		RES.,FXD,CMPSN:51 OHM,5%,0.25W	57668	NTR25J-E51E0
A7R7306	315-0820-00		RES.,FXD,CMPSN:82 OHM,5%,0.25W	57668	NTR25J-E82E0
A7R7308	315-0241-00		RES.,FXD,CMPSN:240 OHM,5%,0.25W	57668	NTR25J-E 240E
A7R7316	315-0563-00		RES.,FXD,CMPSN:56K OHM,5%,0.25W	57668	NTR25J-E 56K

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A7R7319	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A7R7325	315-0150-00		RES.,FXD,CMPSN:15 OHM,5%,0.25W	57668	NTR25J-E 15E
A7R7326	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A7R7327	315-0150-00		RES.,FXD,CMPSN:15 OHM,5%,0.25W	57668	NTR25J-E 15E
A7R7328	315-0270-00		RES.,FXD,CMPSN:27 OHM,5%,0.25W	57668	NTR25J-E 27E
A7R7329	315-0390-00		RES.,FXD,CMPSN:39 OHM,5%,0.25W	57668	NTR25J-E39E0
A7R7342	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A7R7343	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A7R7346	315-0330-00		RES.,FXD,CMPSN:33 OHM,5%,0.25W	57668	NTR25J-E 33E
A7R7347	315-0330-00		RES.,FXD,CMPSN:33 OHM,5%,0.25W	57668	NTR25J-E 33E
A7R7348	315-0390-00		RES.,FXD,CMPSN:39 OHM,5%,0.25W	57668	NTR25J-E39E0
A7R7349	321-0097-00		RES.,FXD,FILM:100 OHM,1%,0.125W	91637	CMF55116G100R0F
A7R7355	315-0471-00		RES.,FXD,CMPSN:470 OHM,5%,0.25W	57668	NTR25J-E470E
A7R7356	321-0258-00		RES.,FXD,FILM:4.75K OHM,1%,0.125W	91637	MFF1816G47500F
A7R7357	315-0332-00		RES.,FXD,CMPSN:3.3K OHM,5%,0.25W	57668	NTR25J-E03K3
A7R7358	315-0151-00		RES.,FXD,CMPSN:150 OHM,5%,0.25W	57668	NTR25J-E150E
A7R7361	315-0132-00		RES.,FXD,CMPSN:1.3K OHM,5%,0.25W	57668	NTR25J-E01K3
A7R7365	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A7R7402	321-0790-00		RES.,FXD,FILM:990K OHM,1%,0.125W	14298	AME55D9903F
A7R7404	321-0450-00		RES.,FXD,FILM:475K OHM,1%,0.125W	91637	CMF55116G47502F
A7R7406	321-0381-00		RES.,FXD,FILM:90.9K OHM,1%,0.125W	91637	MFF1816G90901F
A7R7407	315-0270-00		RES.,FXD,CMPSN:27 OHM,5%,0.25W	57668	NTR25J-E 27E
A7R7408	315-0392-00		RES.,FXD,CMPSN:3.9K OHM,5%,0.25W	57668	NTR25J-E03K9
A7R7409	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0
A7R7409	---		(OPTION 05 ONLY)		
A7R7411	315-0153-00		RES.,FXD,CMPSN:15K OHM,5%,0.25W	57668	NTR25J-E 15K
A7R7411	---		(OPTION 05 ONLY)		
A7R7413	321-0496-00		RES.,FXD,FILM:1.43M OHM,1%,0.125W	91637	HFF1813G14303F
A7R7413	---		(OPTION 05 ONLY)		
A7R7414	315-0106-00		RES.,FXD,CMPSN:10M OHM,5%,0.25W	01121	CB1065
A7R7414	---		(OPTION 05 ONLY)		
A7R7417	315-0475-00		RES.,FXD,CMPSN:4.7M OHM,5%,0.25W	01121	CB4755
A7R7417	---		(OPTION 05 ONLY)		
A7R7417	321-0481-00		RES.,FXD,FILM:1M OHM,1%,0.125W	24546	NA4D1004F00
A7R7421	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A7R7423	311-1260-00		RES.,VAR,NONWIR:250 OHM,10%,0.50W	32997	3329P-L58-251
A7R7432	315-0270-00		RES.,FXD,CMPSN:27 OHM,5%,0.25W	57668	NTR25J-E 27E
A7R7434	315-0200-00		RES.,FXD,CMPSN:20 OHM,5%,0.25W	57668	NTR25J-E 20E
A7R7435	315-0162-00		RES.,FXD,CMPSN:1.6K OHM,5%,0.25W	57668	NTR25J-E 1K6
A7R7436	321-0209-00		RES.,FXD,FILM:1.47K OHM,1%,0.125W	91637	MFF1816G14700F
A7R7437	315-0362-00		RES.,FXD,CMPSN:3.6K OHM,5%,0.25W	57668	NTR25J-E 3K6
A7R7439	311-1567-00		RES.,VAR,NONWIR:TRMR,100 OHM,0.50W	73138	91-89-0
A7R7441	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A7R7444	315-0331-00		RES.,FXD,CMPSN:330 OHM,5%,0.25W	57668	NTR25J-E330E
A7R7445	315-0274-00		RES.,FXD,CMPSN:270K OHM,5%,0.25W	57668	NTR25J-E270K
A7R7453	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A7R7455	315-0471-00		RES.,FXD,CMPSN:470 OHM,5%,0.25W	57668	NTR25J-E470E
A7R7456	321-0200-00		RES.,FXD,FILM:1.18K OHM,1%,0.125W	91637	CMF55116G11800F
A7R7457	315-0270-00		RES.,FXD,CMPSN:27 OHM,5%,0.25W	57668	NTR25J-E 27E
A7R7458	321-0243-00		RES.,FXD,FILM:3.32K OHM,1%,0.125W	91637	MFF1816G33200F
A7R7461	321-0201-00		RES.,FXD,FILM:1.21K OHM,1%,0.125W	91637	CMF55116G12100F
A7R7465	315-0822-00		RES.,FXD,CMPSN:8.2K OHM,5%,0.25W	57668	NTR25J-E 8K2
A7R7471	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A7R7503	315-0100-00		RES.,FXD,CMPSN:10 OHM,5%,0.25W	57668	NTR25J-E 10E0

Component No.	Tektronix Part No.	Serial/Model No. Eff	Dscont	Name & Description	Mfr Code	Mfr Part Number
A7R7506	325-0245-00			RES.,FXD,FILM:3.32M OHM,1%,0.125W	91637	CMF55116G33203F
A7R7513	315-0472-00			RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	57668	NTR25J-E04K7
A7R7513	— — —			(OPTION 05 ONLY)		
A7R7514	315-0472-00			RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	57668	NTR25J-E04K7
A7R7514	— — —			(OPTION 05 ONLY)		
A7R7516	315-0104-00			RES.,FXD,CMPSN:100K OHM,5%,0.25W	57668	NTR25J-E100K
A7R7519	321-0175-00			RES.,FXD,FILM:649 OHM,1%,0.125W	91637	CMF55116G649R0F
A7R7521	321-0198-00			RES.,FXD,FILM:1.13K OHM,1%,0.125W	91637	CMF55116G11300F
A7R7522	315-0430-00			RES.,FXD,CMPSN:43 OHM,5%,0.25W	57668	NTR25J-E 43E
A7R7525	315-0124-00			RES.,FXD,CMPSN:120K OHM,5%,0.25W	57668	NTR25J-E 120K
A7R7526	311-0622-00			RES.,VAR, NONWIR:100 OHM,10%,0.50W	32997	3329H-L58-101
A7R7533	321-0198-00			RES.,FXD,FILM:1.13K OHM,1%,0.125W	91637	CMF55116G11300F
A7R7534	315-0430-00			RES.,FXD,CMPSN:43 OHM,5%,0.25W	57668	NTR25J-E 43E
A7R7545	323-0310-00			RES.,FXD,FILM:16.5K OHM,1%,0.50W	75042	CECT0-1652F
A7R7565	315-0274-00			RES.,FXD,CMPSN:270K OHM,5%,0.25W	57668	NTR25J-E270K
A7RT7147	307-0124-00			RES.,THERMAL:5K OHM,10%	50157	1D1618
A7RT7349	307-0124-00			RES.,THERMAL:5K OHM,10%	50157	1D1618
A7S7015	263-0065-00			SW SL ACTR ASSY:B COUPLING,4 OF 5 POSITION	80009	263-0065-00
A7S7112	263-0066-00			SW SL ACTR ASSY:B SOURCE,5 OF 6 POSITION	80009	263-0066-00
A7S7112	263-0070-00			SW SL ACTR ASSY:A COUPLING,6 OF 6 POSITION	80009	263-0070-00
A7S7112	— — —			(OPTION 05 ONLY)		
A7S7312	263-0068-00			SW SL ACTR ASSY:A SOURCE,6 OF 6 POSITION	80009	263-0068-00
A7S7415	263-0070-00			SW SL ACTR ASSY:A COUPLING,6 OF 6 POSITION	80009	263-0070-00
A7S7415	— — —			(OPTION 05 ONLY)		
A7S7415	263-0067-00			SW SL ACTR ASSY:A COUPLING,4 OF 6 POSITION	80009	263-0067-00
A7U7131	155-0217-00			MICROCIRCUIT,LI:PLRT INV & TRIG PICK OFF	80009	155-0217-00
A7U7331	155-0217-00			MICROCIRCUIT,LI:PLRT INV & TRIG PICK OFF	80009	155-0217-00
A7U7375	155-0049-02			MICROCIRCUIT,DI:SWEEP CONTROL,W/LOCKOUT	80009	155-0049-02
A7VR7047	152-0175-00			SEMICONV DEVICE:ZENER,0.4W,5.6V,5%	04713	SZG35008
A7VR7145	152-0175-00			SEMICONV DEVICE:ZENER,0.4W,5.6V,5%	04713	SZG35008
A7VR7256	152-0227-00			SEMICONV DEVICE:ZENER,0.4W,6.2V,5%	04713	SZ13903
A7VR7275	152-0278-00			SEMICONV DEVICE:ZENER,0.4W,3V,5%	04713	SZG35009K20
A7VR7346	152-0175-00			SEMICONV DEVICE:ZENER,0.4W,5.6V,5%	04713	SZG35008
A7VR7446	152-0175-00			SEMICONV DEVICE:ZENER,0.4W,5.6V,5%	04713	SZG35008
A7VR7520	152-0195-00			SEMICONV DEVICE:ZENER,0.4W,5.1V,5%	04713	SZ11755
A7W7291	131-0566-00			BUS CONDUCTOR:DUMMY RES,2.375,22 AWG	57668	JWW-0200E0
A7W7292	131-0566-00			BUS CONDUCTOR:DUMMY RES,2.375,22 AWG	57668	JWW-0200E0
A7W7293	131-0566-00			BUS CONDUCTOR:DUMMY RES,2.375,22 AWG	57668	JWW-0200E0



Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A8	670-6002-01		CKT BOARD ASSY:FAN MOTOR	80009	670-6002-01
A8B8045	147-0035-00		MOTOR,DC:BRUSHLESS,10-15VDC,145MA	25088	1AD3001-0A
A8C8064	290-0536-00		CAP.,FXD,ELCTLT:10UF,20%,25V	90201	TDC106M025FL
A8CR8042	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A8CR8044	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A8CR8046	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A8CR8048	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A8CR8066	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A8Q8067	151-0301-00		TRANSISTOR:SILICON,PNP	27014	2N2907A
A8R8033	321-0228-00		RES.,FXD,FILM:2.32K OHM,1%,0.125W	24546	CT552321F
A8R8035	321-0201-00		RES.,FXD,FILM:1.21K OHM,1%,0.125W	91637	CMF55116G12100F
A8R8036	315-0363-00		RES.,FXD,CMPSN:36K OHM,5%,0.25W	57668	NTR25J-E36K0
A8R8054	323-0140-00		RES.,FXD,FILM:280 OHM,1%,0.50W	75042	CECT0-2800F
A8R8056	323-0140-00		RES.,FXD,FILM:280 OHM,1%,0.50W	75042	CECT0-2800F
A8R8058	303-0150-00		RES.,FXD,CMPSN:15 OHM,5%,1W	01121	GB1505
A8R8065	321-0062-00		RES.,FXD,FILM:43.2 OHM,1%,0.125W	91637	CMF55-116G43R20F
A8RT8038	307-0124-00		RES.,THERMAL:5K OHM,10%	50157	1D1618
A8U8061	156-0281-00		MICROCIRCUIT,LI:4 TRANSISTOR ARRAY	02735	89164

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A9	670-6004-00		CKT BOARD ASSY:PROBE CODING	80009	670-6004-00
A9DS9040	150-1063-00		LT EMITTING DIO:YELLOW,585 NM,40 MA	72619	550-0305-804
A9DS9060	150-1063-00		LT EMITTING DIO:YELLOW,585 NM,40 MA	72619	550-0305-804
A10	670-2279-00		CKT BOARD ASSY:CRT SCALE ILLUMINATION	80009	670-2279-00
A10DS14086	150-0129-00		LAMP,INCAND:6.3V,200MA	08806	2112D
A10DS14087	150-0129-00		LAMP,INCAND:6.3V,200MA	08806	2112D
A12	670-7045-00		CKT BOARD ASSY:TV SYNC SEPARATOR	80009	670-7045-00
A12	— —		(OPTION 05 ONLY)		
A12C201	290-0219-00		CAP.,FXD,ELCTLT:5UF, + 75-10%,25V	56289	30D505G025BA9
A12C212	283-0177-00		CAP.,FXD,CER DI:1UF, + 80-20%,25V	04222	SR302E105ZAA
A12C213	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A12C228	283-0698-00		CAP.,FXD,MICA D:390PF,1%,500V	09023	CD15FD391F03
A12C229	290-0283-00		CAP.,FXD,ELCTLT:0.47UF,10%,35V	56289	173D474X9035U
A12C301	290-0219-00		CAP.,FXD,ELCTLT:5UF, + 75-10%,25V	56289	30D505G025BA9
A12C305	283-0177-00		CAP.,FXD,CER DI:1UF, + 80-20%,25V	04222	SR302E105ZAA
A12C315	281-0811-00		CAP.,FXD,CER DI:10PF,10%,100V	96733	R2911
A12C316	281-0811-00		CAP.,FXD,CER DI:10PF,10%,100V	96733	R2911
A12C321	283-0177-00		CAP.,FXD,CER DI:1UF, + 80-20%,25V	04222	SR302E105ZAA
A12C323	283-0177-00		CAP.,FXD,CER DI:1UF, + 80-20%,25V	04222	SR302E105ZAA
A12C329	283-0339-00		CAP.,FXD,CER DI:0.22UF,10%,50V	51642	300 050X5R224K
A12C334	281-0813-00		CAP.,FXD CER DI:0.047UF,20%,50V	96733	R2980
A12C401	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A12C403	283-0167-00		CAP.,FXD,CER DI:0.1UF,10%,100V	72982	8131N145X5R0104K
A12C404	281-0775-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA205E104MAA
A12C405	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A12C425	281-0773-00		CAP.,FXD,CER DI:0.1UF,20%,50V	04222	MA201C103KAA
A12CR112	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A12CR310	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A12CR311	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A12CR333	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A12CR404	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A12CR408	152-0141-02		SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35	12969	NDP0263 (1N4152)
A12Q222	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A12Q321	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A12Q325	151-0220-00		TRANSISTOR:PNP,SI,TO-92	07263	S036228
A12Q328	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A12Q331	151-0190-00		TRANSISTOR:NPN,SI,TO-92	04713	SPS7969
A12R101	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A12R102	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A12R110	315-0106-00		RES.,FXD,CMPSN:10M OHM,5%,0.25W	01121	CB1065
A12R113	315-0105-00		RES.,FXD,CMPSN:1M OHM,5%,0.25W	57668	NTR25J-E 1M
A12R115	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A12R124	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A12R204	315-0751-00		RES.,FXD,CMPSN:750 OHM,5%,0.25W	57668	NTR25J-E750E
A12R206	315-0100-00		RES.,FXD,CMPSN:10 OHM,5%,0.25W	57668	NTR25J-E 10E0

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A12R207	315-0100-00		RES.,FXD,CMPSN:10 OHM,5%,0.25W	57668	NTR25J-E 10E0
A12R221	315-0222-00		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	57668	NTR25J-E02K2
A12R222	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A12R224	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A12R225	315-0123-00		RES.,FXD,CMPSN:12K OHM,5%,0.25W	57668	NTR25J-E12K0
A12R226	315-0122-00		RES.,FXD,CMPSN:1.2K OHM,5%,0.25W	57668	NTR25J-E01K2
A12R232	315-0242-00		RES.,FXD,CMPSN:2.4K OHM,5%,0.25W	57668	NTR25J-E02K4
A12R233	315-0203-00		RES.,FXD,CMPSN:20K OHM,5%,0.25W	57668	NTR25J-E20K0
A12R304	315-0302-00		RES.,FXD,CMPSN:3K OHM,5%,0.25W	57668	NTR25J-E03K0
A12R307	315-0123-00		RES.,FXD,CMPSN:12K OHM,5%,0.25W	57668	NTR25J-E12K0
A12R308	315-0123-00		RES.,FXD,CMPSN:12K OHM,5%,0.25W	57668	NTR25J-E12K0
A12R310	315-0124-00		RES.,FXD,CMPSN:120K OHM,5%,0.25W	57668	NTR25J-E 120K
A12R311	315-0123-00		RES.,FXD,CMPSN:12K OHM,5%,0.25W	57668	NTR25J-E12K0
A12R317	315-0433-00		RES.,FXD,CMPSN:43K OHM,5%,0.25W	57668	NTR25J-E043K
A12R318	315-0684-00		RES.,FXD,CMPSN:680K OHM,5%,0.25W	01121	CB6845
A12R321	315-0243-00		RES.,FXD,CMPSN:24K OHM,5%,0.25W	57668	NTR25J-E24K0
A12R322	315-0682-00		RES.,FXD,CMPSN:6.8K OHM,5%,0.25W	57668	NTR25J-E06K8
A12R324	315-0242-00		RES.,FXD,CMPSN:2.4K OHM,5%,0.25W	57668	NTR25J-E02K4
A12R325	315-0302-00		RES.,FXD,CMPSN:3K OHM,5%,0.25W	57668	NTR25J-E03K0
A12R326	315-0123-00		RES.,FXD,CMPSN:12K OHM,5%,0.25W	57668	NTR25J-E12K0
A12R327	315-0222-00		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	57668	NTR25J-E02K2
A12R328	315-0433-00		RES.,FXD,CMPSN:43K OHM,5%,0.25W	57668	NTR25J-E043K
A12R331	315-0433-00		RES.,FXD,CMPSN:43K OHM,5%,0.25W	57668	NTR25J-E043K
A12R332	315-0243-00		RES.,FXD,CMPSN:24K OHM,5%,0.25W	57668	NTR25J-E24K0
A12R401	315-0104-00		RES.,FXD,CMPSN:100K OHM,5%,0.25W	57668	NTR25J-E100K
A12R402	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A12R403	315-0104-00		RES.,FXD,CMPSN:100K OHM,5%,0.25W	57668	NTR25J-E100K
A12R404	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A12R405	315-0473-00		RES.,FXD,CMPSN:47K OHM,5%,0.25W	57668	NTR25J-E47K0
A12R406	315-0152-00		RES.,FXD,CMPSN:1.5K OHM,5%,0.25W	57668	NTR25J-E01K5
A12R407	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A12R408	315-0202-00		RES.,FXD,CMPSN:2K OHM,5%,0.25W	57668	NTR25J-E02K0
A12R409	315-0202-00		RES.,FXD,CMPSN:2K OHM,5%,0.25W	57668	NTR25J-E02K0
A12R425	315-0125-00		RES.,FXD,CMPSN:1.2M OHM,5%,0.25W	57668	NTR25J-E 1M2
A12U126	156-0366-02		MICROCIRCUIT,DI:DUAL D FLIP-FLOP,SCREENED	02735	CD4013BFX
A12U129	156-0366-02		MICROCIRCUIT,DI:DUAL D FLIP-FLOP,SCREENED	02735	CD4013BFX
A12U227	156-0704-00		MICROCIRCUIT,LI:PHASE LOCK LOOP	04713	MC14046CP
A12U315	156-0136-00		MICROCIRCUIT,LI:OPNL AMPL	02735	CA 3030
A12U438	156-1152-01		MICROCIRCUIT,DI:PRCN RETRIGGERABLE,BURN-IN	80009	156-1152-01
A12U453	156-0515-02		MICROCIRCUIT,DI:TRIPLE 3-CHAN MUX,SEL	80009	156-0515-02
A12VR211	152-0226-00		SEMICONV DEVICE:ZENER,0.4W,5.1V,5%	14552	TD3810980

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscnt	Name & Description	Mfr Code	Mfr Part Number
A14	670-2744-01		CKT BOARD ASSY:INVERTER	80009	670-2744-01
A14	-----		(OPTION 7 ONLY)		
A14C1601	290-0667-00		CAP.,FXD,ELCTLT:330UF,+75-10%,50V	56289	500D158
A14C1603	283-0178-00		CAP.,FXD,CER DI:0.1UF,+80-20%,100V	04222	ADVISE
A14C1605	290-0531-00		CAP.,FXD,ELCTLT:100UF,20%,10V	90201	TDC107M010WLC
A14C1609	283-0178-00		CAP.,FXD,CER DI:0.1UF,+80-20%,100V	04222	ADVISE
A14C1614	290-0573-00		CAP.,FXD,ELCTLT:2.7UF,20%,50V	56289	196D275X0050JA1
A14C1622	290-0533-00		CAP.,FXD,ELCTLT:330UF,20%,6V	90201	TDC337M006WLD
A14C1626	290-0528-00		CAP.,FXD,ELCTLT:15UF,20%,50V	56289	196D156X0050PE4
A14C1652	283-0110-00		CAP.,FXD,CER DI:0.005UF,+80-20%,150V	59660	855-547-E-502Z
A14C1654	283-0110-00		CAP.,FXD,CER DI:0.005UF,+80-20%,150V	59660	855-547-E-502Z
A14C1662	283-0110-00		CAP.,FXD,CER DI:0.005UF,+80-20%,150V	59660	855-547-E-502Z
A14C1664	283-0110-00		CAP.,FXD,CER DI:0.005UF,+80-20%,150V	59660	855-547-E-502Z
A14CR1601	152-0198-00		SEMICONV DEVICE:SILICON,200V,3A	03508	1N5624
A14CR1624	152-0333-00		SEMICONV DVC DI:SW,S1,55V,200MA,D0-35	03508	DJ2011
A14CR1625	152-0107-00		SEMICONV DEVICE:SILICON,400V,400MA	12969	G727
A14CR1626	152-0107-00		SEMICONV DEVICE:SILICON,400V,400MA	12969	G727
A14CR1627	152-0107-00		SEMICONV DEVICE:SILICON,400V,400MA	12969	G727
A14CR1628	152-0107-00		SEMICONV DEVICE:SILICON,400V,400MA	12969	G727
A14CR1632	152-0333-00		SEMICONV DVC DI:SW,S1,55V,200MA,D0-35	03508	DJ2011
A14CR1634	152-0333-00		SEMICONV DVC DI:SW,S1,55V,200MA,D0-35	03508	DJ2011
A14CR1643	152-0198-00		SEMICONV DEVICE:SILICON,200V,3A	03508	1N5624
A14Q1606	151-0301-00		TRANSISTOR:SILICON,PNP	27014	2N2907A
A14Q1608	151-0301-00		TRANSISTOR:SILICON,PNP	27014	2N2907A
A14Q1622	151-0302-00		TRANSISTOR:SILICON,NPN	07263	S038487
A14Q1626	151-0506-00		SCR:SILICON	03508	C106B2X283
A14Q1642	151-0302-00		TRANSISTOR:SILICON,NPN	07263	S038487
A14Q1644	151-0335-00		TRANSISTOR:SILICON,PNP	04713	SJE917
A14Q1652	151-0436-00		TRANSISTOR:SILICON,NPN	04713	SJE966
A14Q1654	151-0436-00		TRANSISTOR:SILICON,NPN	04713	SJE966
A14Q1662	151-0436-00		TRANSISTOR:SILICON,NPN	04713	SJE966
A14Q1664	151-0436-00		TRANSISTOR:SILICON,NPN	04713	SJE966
A14R1604	315-0202-00		RES.,FXD,CMPSN:2K OHM,5%,0.25W	57668	NTR25J-E02K0
A14R1605	315-0752-00		RES.,FXD,CMPSN:7.5K OHM,5%,0.25W	57668	NTR25J-E07K5
A14R1607	315-0272-00		RES.,FXD,CMPSN:2.7K OHM,5%,0.25W	57668	NTR25J-E02K7
A14R1609	315-0511-00		RES.,FXD,CMPSN:510 OHM,5%,0.25W	57668	NTR25J-E 510E
A14R1611	315-0511-00		RES.,FXD,CMPSN:510 OHM,5%,0.25W	57668	NTR25J-E 510E
A14R1613	311-1248-00		RES.,VAR,NONWIR:500 OHM,10%,0.50W	73138	72-23-0
A14R1614	315-0202-00		RES.,FXD,CMPSN:2K OHM,5%,0.25W	57668	NTR25J-E02K0
A14R1617	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A14R1618	315-0101-00		RES.,FXD,CMPSN:100 OHM,5%,0.25W	57668	NTR25J-E 100E
A14R1622	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A14R1623	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	57668	NTR25J-E10K0
A14R1624	315-0302-00		RES.,FXD,CMPSN:3K OHM,5%,0.25W	57668	NTR25J-E03K0
A14R1625	316-0101-00		RES.,FXD,CMPSN:100 OHM,10%,0.25W	01121	CB1011
A14R1626	308-0450-00		RES.,FXD,WW:70 OHM,1%,3W	91637	RS2B-B70R00F T/R
A14R1627	315-0271-00		RES.,FXD,CMPSN:270 OHM,5%,0.25W	01121	CB2715
A14R1631	308-0450-00		RES.,FXD,WW:70 OHM,1%,3W	91637	RS2B-B70R00F T/R
A14R1633	311-1501-00		RES.,VAR,NONWIR:20 OHM,10%,0.50W	73138	72-37-0
A14R1639	315-0153-00		RES.,FXD,CMPSN:15K OHM,5%,0.25W	57668	NTR25J-E 15K
A14R1640	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W	57668	NTR25JE01K0
A14R1641	315-0153-00		RES.,FXD,CMPSN:15K OHM,5%,0.25W	57668	NTR25J-E 15K
A14R1642	315-0470-00		RES.,FXD,CMPSN:47 OHM,5%,0.25W	57668	NTR25J-E47E0

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
A14R1645	307-0113-00		RES.,FXD,CMPSN:5.1 OHM,5%,0.25W	01121	CB51G5
A14R1652	308-0459-00		RES.,FXD,WW:1.1 OHM,5%,3W	91637	CW2B-1R100J TR
A14R1654	308-0459-00		RES.,FXD,WW:1.1 OHM,5%,3W	91637	CW2B-1R100J TR
A14R1662	308-0459-00		RES.,FXD,WW:1.1 OHM,5%,3W	91637	CW2B-1R100J TR
A14R1664	308-0459-00		RES.,FXD,WW:1.1 OHM,5%,3W	91637	CW2B-1R100J TR
A14T1601	120-0637-00		XFMR,TOROID:5 TURNS BIFILAR	80009	120-0637-00
A14T1631	120-0852-00		XFMR,TOROID:2 WINDINGS	80009	120-0852-00
A14VR1604	152-0306-00		SEMICONV DEVICE:ZENER,0.4W,9.1V,5%	15238	Z5409
A14VR1605	152-0306-00		SEMICONV DEVICE:ZENER,0.4W,9.1V,5%	15238	Z5409
A14VR1622	152-0241-00		SEMICONV DEVICE:ZENER,0.4W,33V,5%	04713	SZG35009K5
A14VR1639	152-0279-00		SEMICONV DEVICE:ZENER,0.4W,5.1V,5%	04713	SZG35010RL
A14VR1641	152-0279-00		SEMICONV DEVICE:ZENER,0.4W,5.1V,5%	04713	SZG35010RL

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscnt	Name & Description	Mfr Code	Mfr Part Number
CHASSIS PARTS					
C13009	— —		(SELECTED AND ADDED WHEN REQUIRED)		
C13009	— —		(OPTION 05 ONLY)		
C13009	— —		(0.0PF-0.8PF FOR CORRECT INPUT CAPACITANCE)		
C13009	— —		(OPTION 05 ONLY)		
C13010	281-0064-00		CAP.,VAR,PLSTC:0.25-1.5PF,600V	74970	273-0001-101
C13012	285-0816-01		CAP.,FXD,PLSTC:0.019UF,10%,600V	80009	285-0816-01
C13012	285-1055-00		CAP.,FXD,PLSTC:0.2UF,10%,400V	80009	285-1055-00
C13012	— —		(OPTION 05 ONLY)		
C15101	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	59660	831610Y5U0102P
C15103	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	59660	831610Y5U0102P
C1671	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	59660	831610Y5U0102P
C1671	— —		(OPTION 07 ONLY)		
C1672	283-0263-00		CAP.,FXD,CER DI:0.0022UF,20%,3000V	59660	828556Y5R0222M
C1672	— —		(OPT 07 ONLY, REMOVE WHEN OPT 04 & 07 USED)		
C1674	283-0263-00		CAP.,FXD,CER DI:0.0022UF,20%,3000V	59660	828556Y5R0222M
C1674	— —		(SEE FOOTNOTE ON C1672)		
C1681	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	59660	831610Y5U0102P
C1681	— —		(SEE FOOTNOTE ON C1672)		
C1682	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	59660	831610Y5U0102P
C1682	— —		(WHEN EQUIPPED WITH BOTH OPT 04 & 07,		
C1682	— —		ONLY ONE SET OF THESE CAPS IS USED)		
C1683	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	59821	D103Z40Z5UJDCEX
C1683	— —		(SEE FOOTNOTE ON C1682)		
C1684	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	59821	D103Z40Z5UJDCEX
C1684	— —		(SEE FOOTNOTE ON C1682)		
C1685	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	59821	D103Z40Z5UJDCEX
C1685	— —		(SEE FOOTNOTE ON C1682)		
CR14498	152-0333-00		SEMICON DVC DI:SW,SI,55V,200MA,D0-35	03508	DJ2011
DL11405	119-0387-00		DELAY LINE,ELEC:120NS,100 OHM	80009	119-0387-00
DS15034	150-1001-02		LT EMITTING DIO:RED,660NM,50MA MAX	07263	FLV160/CLIP
DS15036	150-1001-02		LT EMITTING DIO:RED,660NM,50MA MAX	07263	FLV160/CLIP
DS15038	150-1001-02		LT EMITTING DIO:RED,660NM,50MA MAX	07263	FLV160/CLIP
DS16001	150-1001-02		LT EMITTING DIO:RED,660NM,50MA MAX	07263	FLV160/CLIP
DS16002	150-1001-02		LT EMITTING DIO:RED,660NM,50MA MAX	07263	FLV160/CLIP
DS17105	150-1017-00		LT EMITTING DIO:GREEN,550NM,55MA MAX	50437	LSM-16L-100
DS17127	150-1032-00		LT EMITTING DIO:YELLOW,580NM,40MA,MAX	53184	XC-5569-Y2
DS17206	150-1001-02		LT EMITTING DIO:RED,660NM,50MA MAX	07263	FLV160/CLIP
F11601	159-0038-00		FUSE,CARTRIDGE:3AG,15A,32V,FAST-BLOW	71400	AGC-CW-15
F11601	— —		(OPTION 07 ONLY)		
F14500	159-0016-00		FUSE,CARTRIDGE:3AG,1.5A,250V,FAST-BLOW	71400	AGC-CW-1 1/2
F14500	159-0042-00		FUSE,CARTRIDGE:3AG,0.75A,250V,FAST-BLOW	71400	AGC-CW-3/4
F14500	— —		(OPTION A1,A2,A3,A4)		
F14501	159-0172-00		FUSE,CARTRIDGE:TYPE C,13 AMP	S3629	PCC-1089
F14501	— —		(OPTION A2 ONLY)		
L14165	108-0714-00		COIL,TUBE DEFLE:Y AXIS ALIGNMENT	80009	108-0714-00
L14176	108-0713-00		COIL,TUBE DEFLE:TRACE ROTATION	80009	108-0713-00
P11601	131-1333-00		CONNECTOR,RCPT.:POWER	80009	131-1333-00
P11601	— —		(OPTION 07 ONLY)		
Q4102	151-0349-00		TRANSISTOR:SILICON,NPN,SEL FROM MJE280	04713	SJE924
Q4190	151-0390-00		TRANSISTOR:SILICON,NPN	04713	SPS3414/MPS-U45
Q4301	151-0436-00		TRANSISTOR:SILICON,NPN	04713	SJE966
Q4312	151-0390-00		TRANSISTOR:SILICON,NPN	04713	SPS3414/MPS-U45

Component No.	Tektronix Part No.	Serial/Model No. Eff Dscnt	Name & Description	Mfr Code	Mfr Part Number
Q4401	151-0349-00		TRANSISTOR:SILICON,NPN,SEL FROM MJE280	04713	SJE924
Q14009	151-0140-00		TRANSISTOR:SILICON,NPN	02735	36568
R6155	311-1701-00		RES.,VAR,NONWIR:PNL,50K OHM,1W,W/SW	01121	18M655
R6155	---		(FURNISHED AS A UNIT WITH S6155)		
R13010	315-0750-00		RES.,FXD,CMPSN:75 OHM,5%,0.25W	57668	NTR25J-E75E0
R13012	307-0116-00		RES.,FXD,CMPSN:9.1 OHM,5%,0.25W	01121	CB91G5
R13012	---		(OPTION 05 ONLY)		
R14288	311-2047-00		RES.,VAR NONWIR:PNL,50K/5K OHM,20%,0.5W	12697	CM41749
R14398	311-1482-00		RES.,VAR,NONWIR:5K OHM,20%,0.50W	01121	W-8070
R14398	---		(FURNISHED AS A UNIT WITH S14398)		
R14498	311-1410-00		RES.,VAR,NONWIR:25K OHM,20%,1W	01121	18M912
R14499	311-0608-00		RES.,VAR,NONWIR:2K OHM,10%,0.75W	01121	W8156
R14518	311-1482-00		RES.,VAR,NONWIR:5K OHM,20%,0.50W	01121	W-8070
R15102	315-0103-03		RES.,FXD,CMPSN:10K OHM,5%,0.25W	01121	CB1035
R16002	311-1464-00		RES.,VAR,WW:2K OHM,5%,2W	02111	534-264
R1671	308-0077-00		RES.,FXD,WW:1K OHM,5%,3W	00213	1240S 1000-5
R1671	---		(OPTION 07 ONLY)		
R17010	311-1192-00		RES.,VAR,NONWIR:10K OHM,20%,1W,W/SW	71590	BA-232-001
R17010	---		(FURNISHED AS A UNIT WITH S17010)		
R17305	311-1192-00		RES.,VAR,NONWIR:10K OHM,20%,1W,W/SW	71590	BA-232-001
R17305	---		(FURNISHED AS A UNIT WITH S17305)		
S14398	---		(FURNISHED AS A UNIT WITH R14398)		
S14500	260-1300-01		SWITCH,SLIDE:DPDT,3A,125V	82389	46206LFE
S14510	260-0834-00		SWITCH,TOGGLE:DPDT,5A,125VAC,0.25-40 THD	09353	U21-SHZQE
S14520	260-0638-00		SW,THERMOSTATIC:10A,240V,OPEN 75 DEG C	93410	430-364
S1601	260-0834-00		SWITCH,TOGGLE:DPDT,5A,125VAC,0.25-40 THD	09353	U21-SHZQE
S1601	---		(OPTION 07 ONLY)		
S1665	105-0479-00		ACTUATOR,SWITCH:SLIDE,INVERTER	80009	105-0479-00
S1665	---		(OPTION 07 ONLY)		
S1665	260-0760-00		SWITCH,SENS:SUBMINIATURE,10A,125/240VAC	01963	E62-10A
S1665	---		(OPTION 07 ONLY)		
S6111	263-1176-00		SW CAM ACTR AS:TIME/CM	80009	263-1176-00
S6155	---		(FURNISHED AS A UNIT WITH R6155)		
S17010	---		(FURNISHED AS A UNIT WITH R17010)		
S17305	---		(FURNISHED AS A UNIT WITH R17305)		
T14500	120-0798-01		XFMR,PWR,STPDN:	80009	120-0798-01
V14000	154-0731-00		ELECTRON TUBE:W/ANODE LEAD	80009	154-0731-00
V14000	---		(STANDARD ONLY)		
V14000	154-0731-04		ELECTRON TUBE:CRT,P11,INT SCALE	80009	154-0731-04
V140000	---		(OPTION 78 ONLY. P11 PHOSPHOR)		

# DIAGRAMS AND CIRCUIT BOARD ILLUSTRATIONS

## Symbols

Graphic symbols and class designation letters are based on ANSI Standard Y32.2-1975.

Logic symbology is based on ANSI Y32.14-1973 in terms of positive logic. Logic symbols depict the logic function performed and may differ from the manufacturer's data.

The overline on a signal name indicates that the signal performs its intended function when it is in the low state.

Abbreviations are based on ANSI Y1.1-1972.

Other ANSI standards that are used in the preparation of diagrams by Tektronix, Inc. are:

- Y14.15, 1966 Drafting Practices.
- Y14.2, 1973 Line Conventions and Lettering.
- Y10.5, 1968 Letter Symbols for Quantities Used in Electrical Science and Electrical Engineering.

American National Standard Institute  
1430 Broadway  
New York, New York 10018

## Component Values

Electrical components shown on the diagrams are in the following units unless noted otherwise:

Capacitors = Values one or greater are in picofarads (pF).  
Values less than one are in microfarads ( $\mu$ F).


Resistors = Ohms ( $\Omega$ ).

The following special symbols may appear on the diagrams:

## Assembly Numbers and Grid Coordinates

Each assembly in the instrument is assigned an assembly number (e.g., A20). The assembly number appears on the circuit board outline on the diagram, in the title for the circuit board component location illustration, and in the lookup table for the schematic diagram and corresponding component locator illustration. The Replaceable Electrical Parts list is arranged by assemblies in numerical sequence; the components are listed by component number (see following illustration for constructing a component number).

### COMPONENT NUMBER EXAMPLE

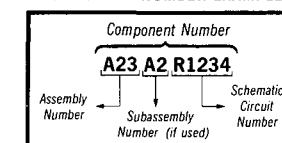

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

The schematic diagram and circuit board component location illustration have grids. A lookup table with the grid coordinates is provided for ease of locating the component. Only the components illustrated on the facing diagram are listed in the lookup table. When more than one schematic diagram is used to illustrate the circuitry on a circuit board, the circuit board illustration may only appear opposite the first diagram on which it was illustrated; the lookup table will list the diagram number of other diagrams that the circuitry of the circuit board appears on.


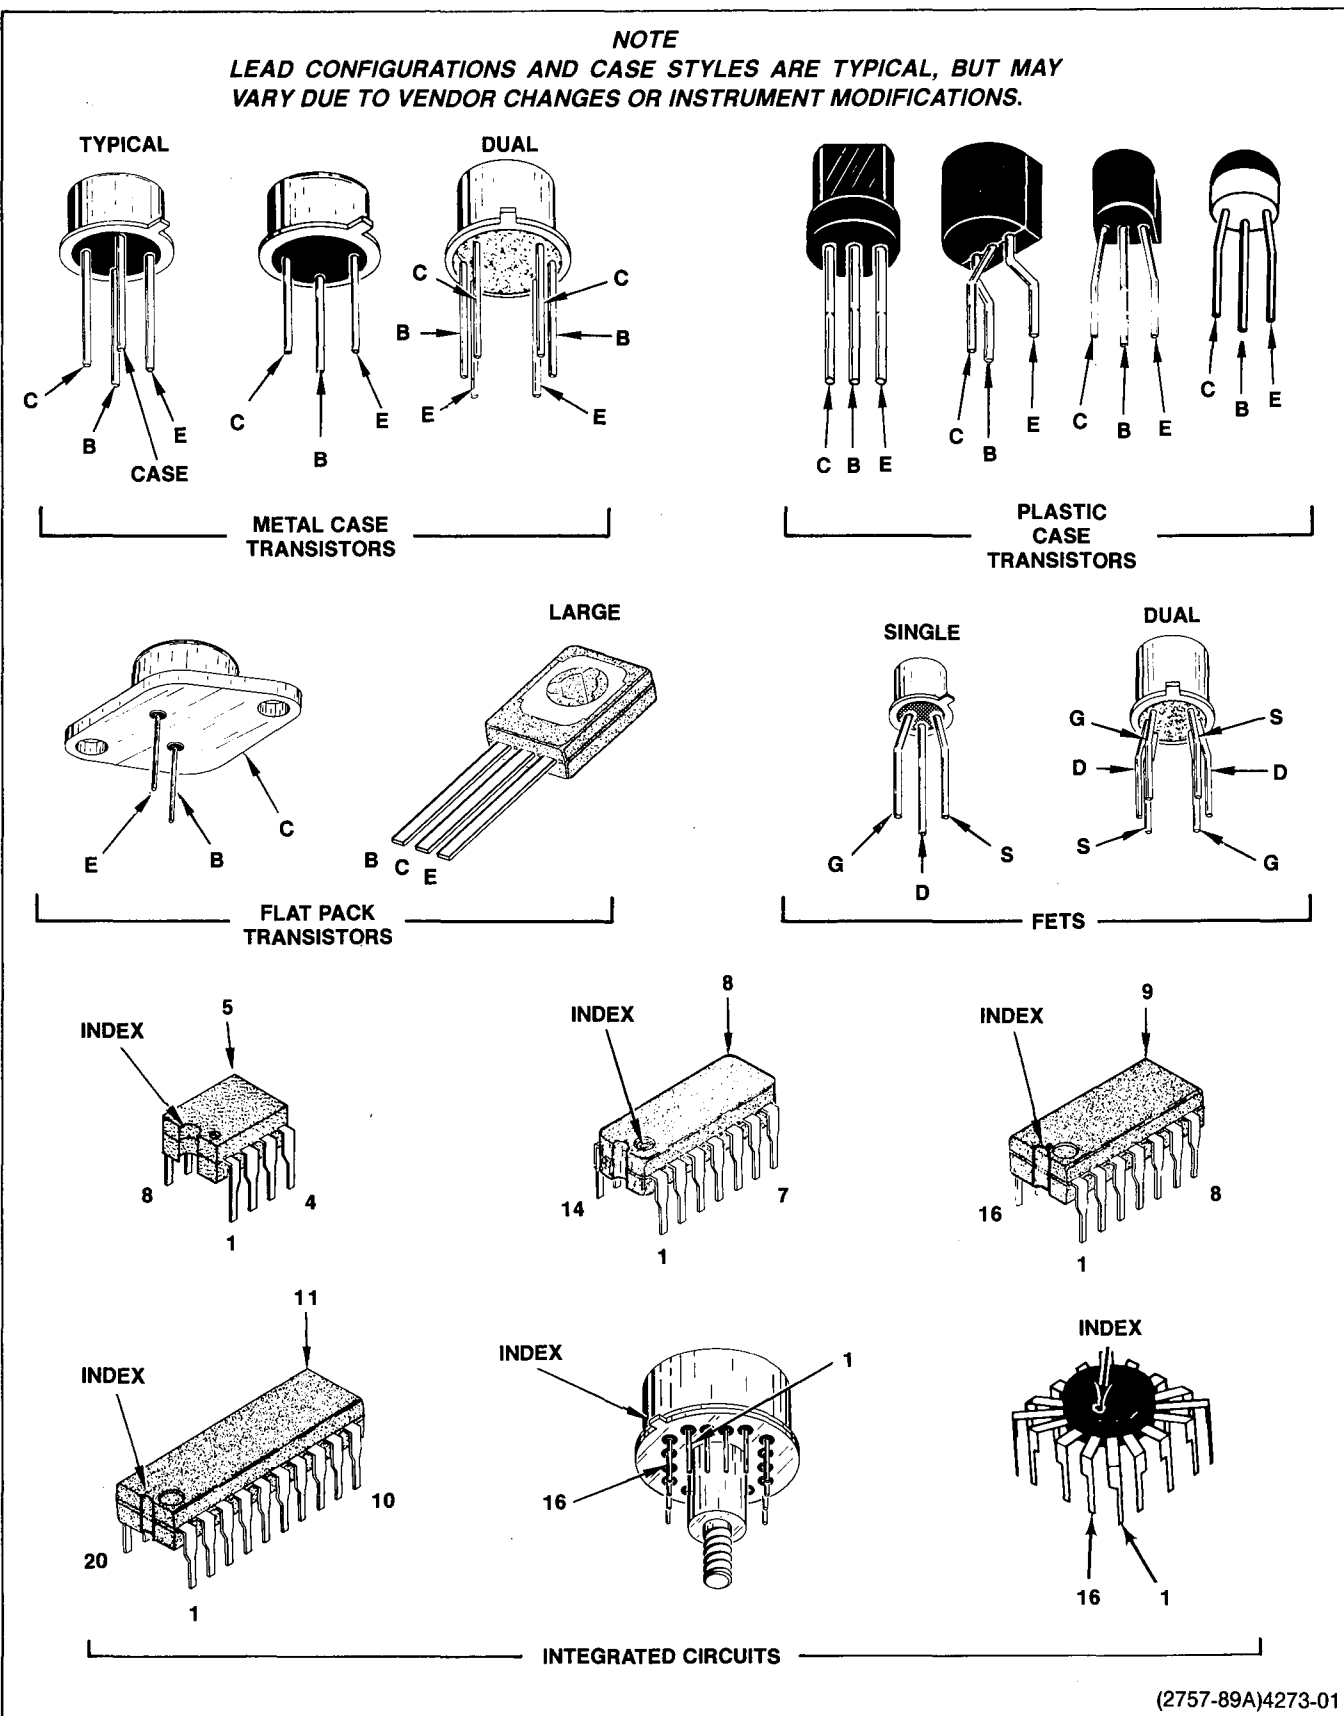


Figure 9-1. Semiconductor lead configurations.



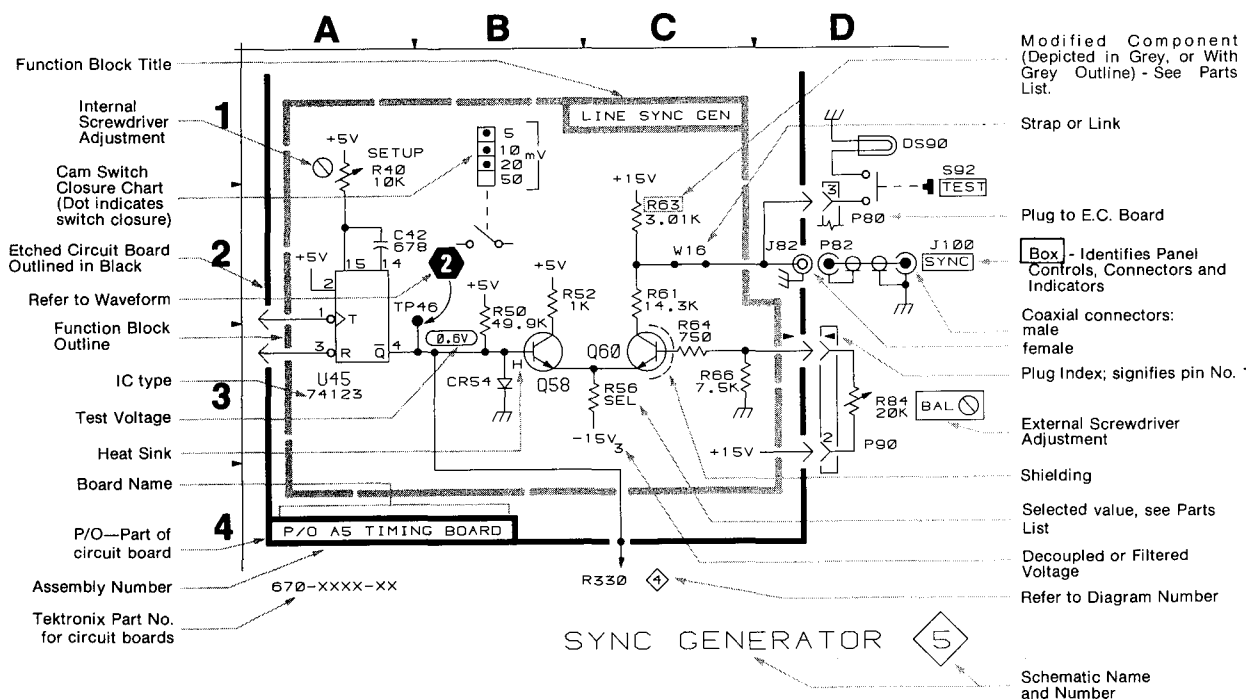

465B Service (SN B060000 &amp; UP)

**AC WAVEFORMS**

The waveforms adjacent to the circuit diagrams were obtained using the recommended test equipment and setup given below unless otherwise noted.

**RECOMMENDED TEST EQUIPMENT**

Item	Specifications	Example
Test Oscilloscope	Frequency response: DC-100 MHz. Deflection factor: 5 mV/div to 5 V/div (to 50 V/div with 10X probe). Input impedance: 1 M $\Omega$ , 20 pf. Sweep rate: 5 ms to 0.5 $\mu$ s/div.	TEKTRONIX 465B or equivalent.
Probe	Fast-rise 10X probe compatible with the vertical amplifier of the test oscilloscope.	TEKTRONIX P6065 or equivalent.

**465B CONTROL SETTINGS****CRT Controls**

INTENSITY	As desired
FOCUS	As desired
SCALE ILLUM	As desired

**Vertical Controls (both A and B if applicable)**

VOLTS/DIV	5 mV
VAR	Calibrated detent
POSITION	Midrange
AC-GND-DC	DC
VERT MODE	CH 1 and CHOP
INVERT	Off (button out)
20 MHz BW LIMIT	Full bandwidth (button out)

**Sweep Controls**

TIME/DIV (both)	1 ms
VAR	Calibrated detent
HORIZ DISPLAY	A
X10 MAG	Off (button out)
POSITION	Midrange
DELAY TIME POSITION	Fully counterclockwise

**Trigger Controls (both A and B unless otherwise noted)**

COUPLING	AC
SOURCE	NORM
TRIG MODE	AUTO
SLOPE	+
A TRIGGER LEVEL	As needed for a stable display (locked on positive transition of square-wave input).
A TRIGGER HOLDOFF	NORM

**TEST OSCILLOSCOPE SETUP****Test Oscilloscope Control Settings**

Apply a 20 mV p-p, positive-going square wave from the Calibration Generator to the CH 1 or X input connector. Connect the 465B A +GATE (from the 465B rear panel) to the test oscilloscope external trigger input connector. Use no terminations.

All controls as needed for the best display except as noted below:	Ch 1
Vert Mode	As required for the measurement to be made
Ac-Gnd-Dc	As needed for each waveform
Volts/Div	Ext (465B A +GATE)
Trigger Source	Ac
Trigger Coupling	Auto
Trigger Mode	As needed for each waveform
Time/Div	

465B Oscilloscope control settings required to obtain valid waveforms are given with each set of waveforms. Changes from the preliminary control settings for the other controls is not required.


Connect a 10X probe to the Channel 1 input of the test oscilloscope. Apply the probe tip to the test point or component lead as indicated on the schematic and the component board layout Figure associated with that schematic.


**DC VOLTAGES**

Typical voltage measurements were obtained with the instrument operating under the conditions noted in the control settings adjacent to each schematic diagram. Voltage measurements were taken with no signal applied to the vertical or trigger inputs. All voltages measured with reference to chassis ground. Voltages rounded to the nearest tenth of a volt.

**RECOMMENDED TEST EQUIPMENT**

Item	Specifications	Example
Digital Multimeter (for voltages up to 1 kV)	Range: 0 to 1 kV. Input Impedance: 10 M $\Omega$ .	TEKTRONIX DM 501 Digital Multimeter. TEKTRONIX Oscilloscope with DM 44 Option.
DC Voltmeter (for voltages above 1 kV)	Range: 0 to 3 kV. Input Impedance: 20 k $\Omega$ /V.	Triplet Model 630NA.

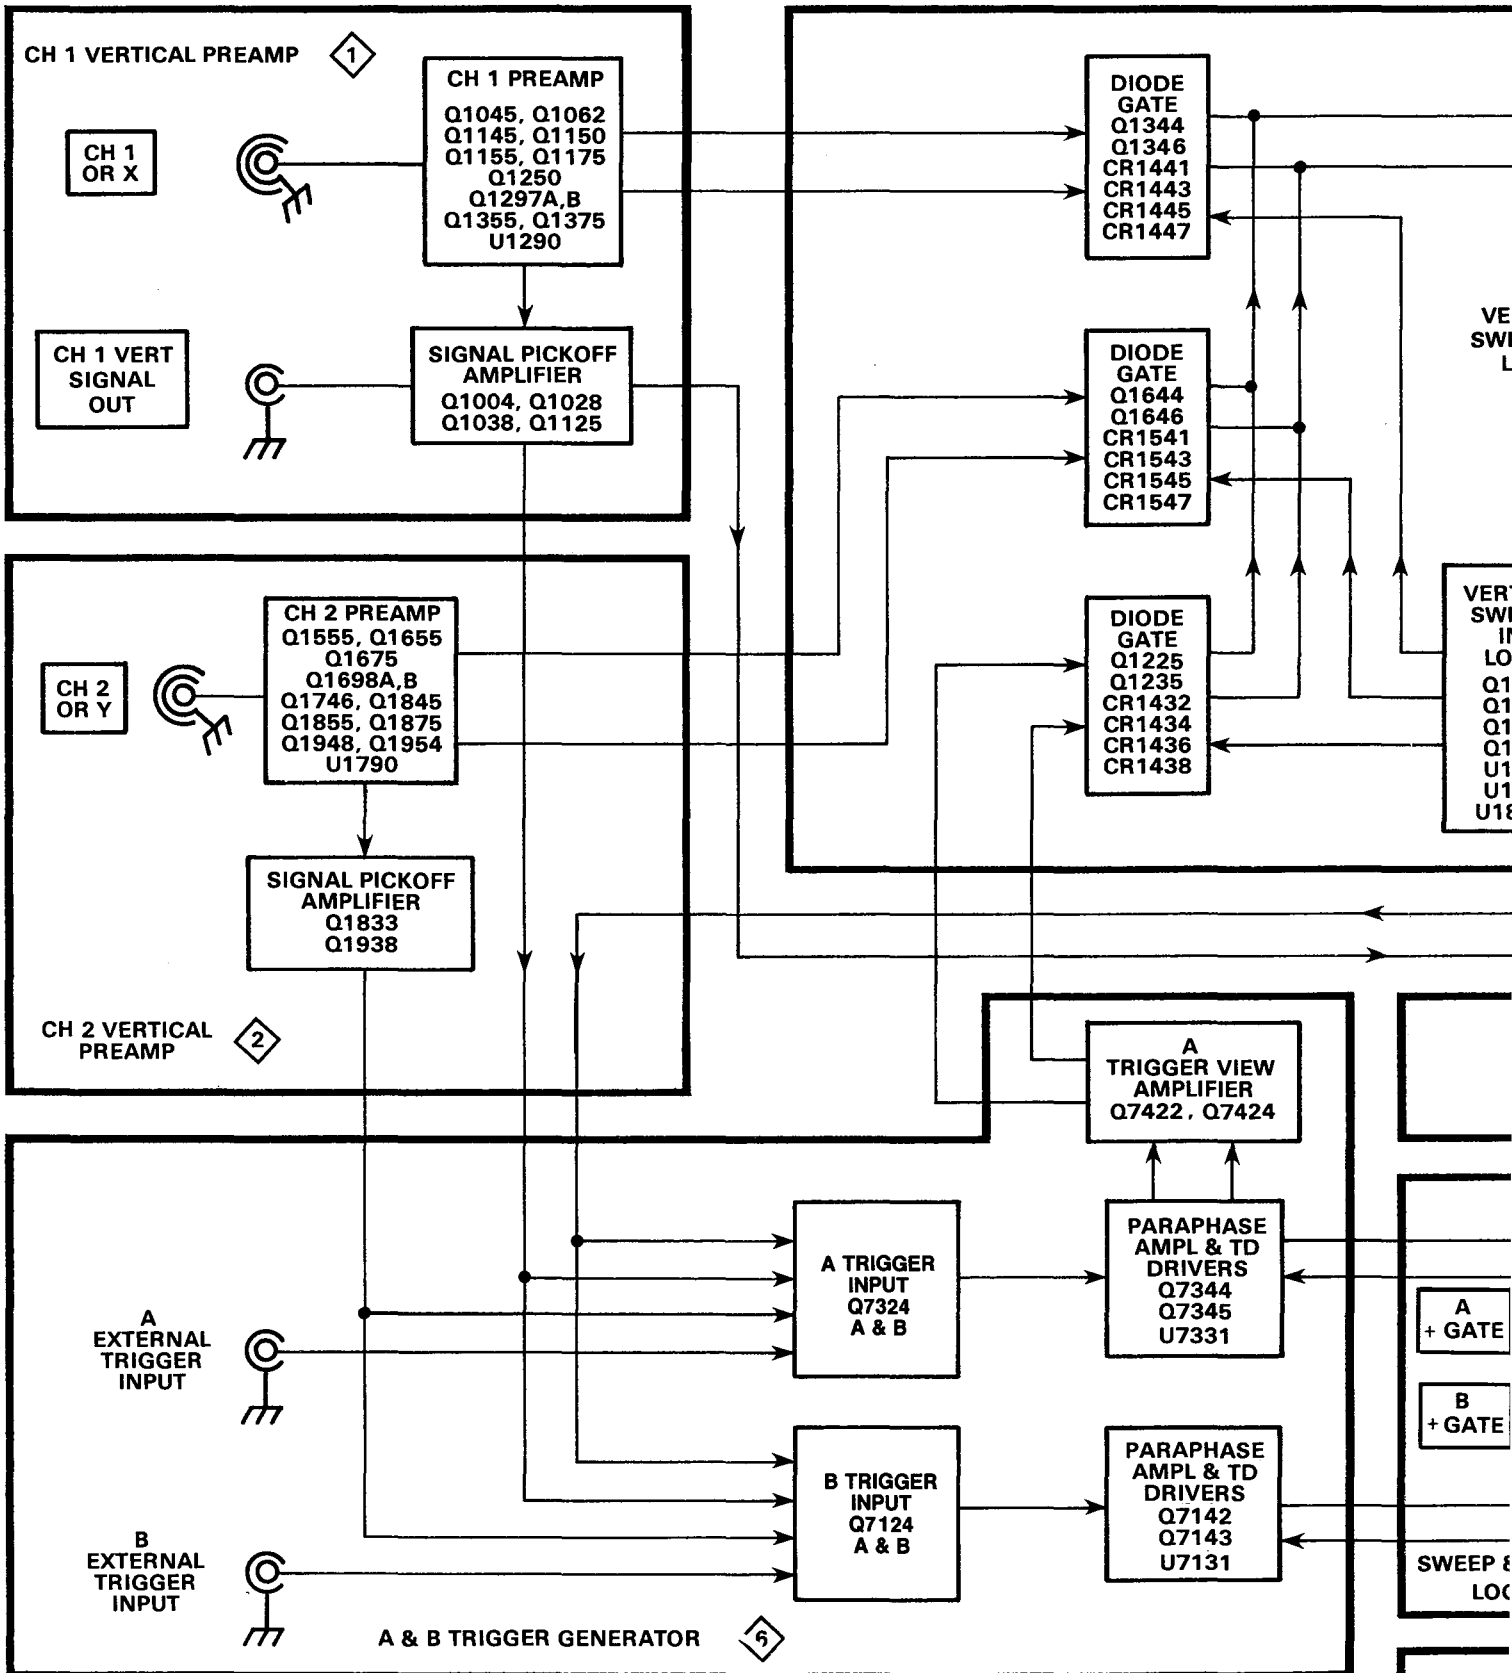

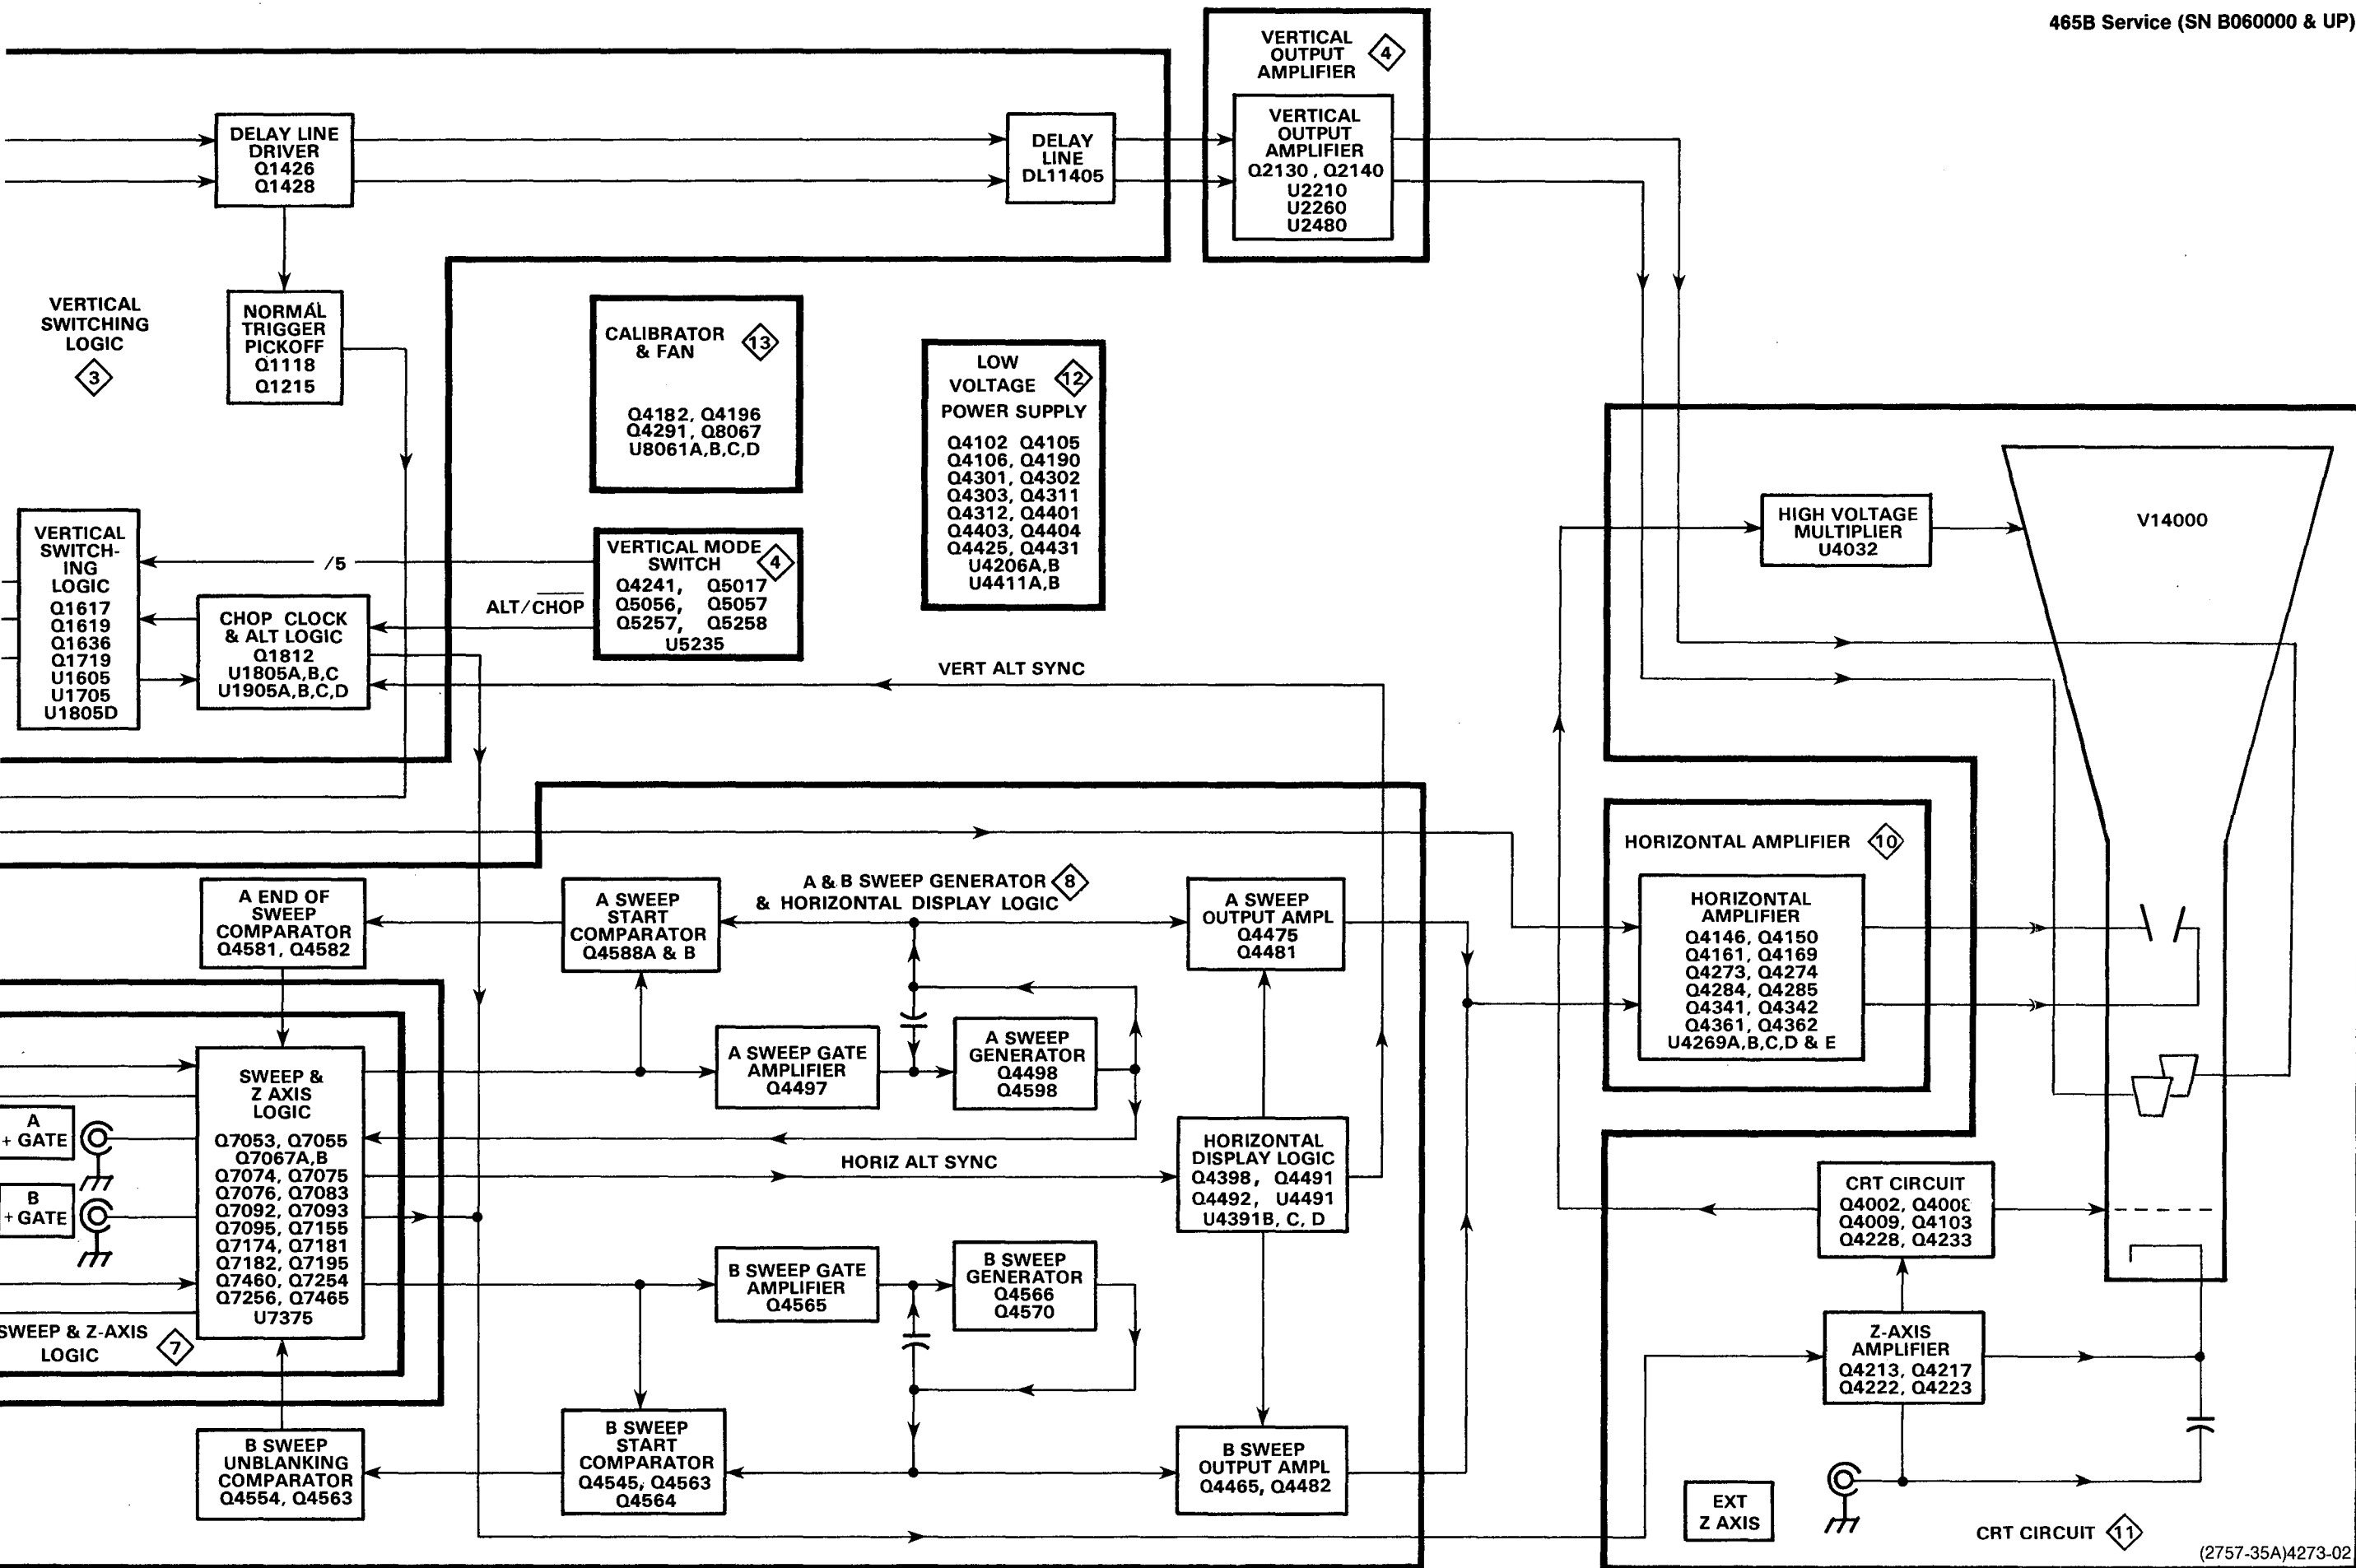

BLOCK DIAGRAM

A3 & A1-BOARD  
COMPONENT LOCATIONS


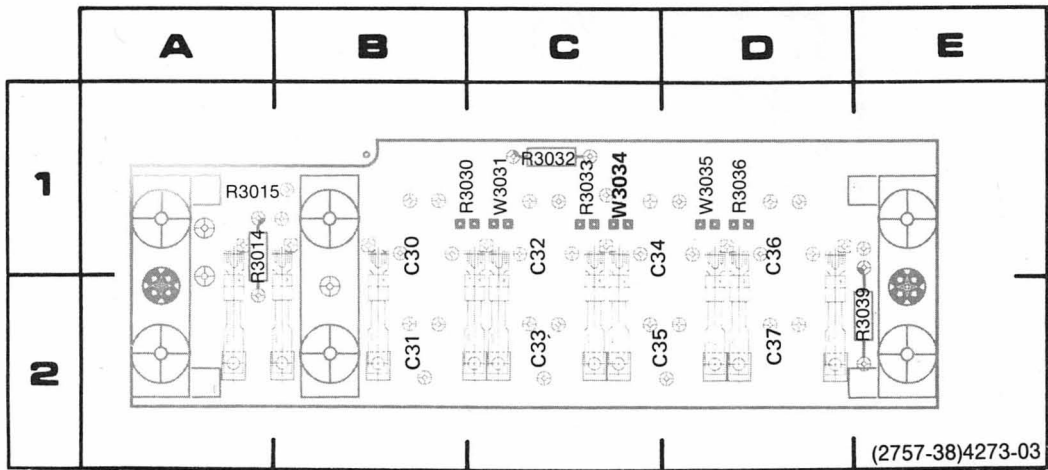


Figure 9-2. A3-Attenuator circuit board component locations.

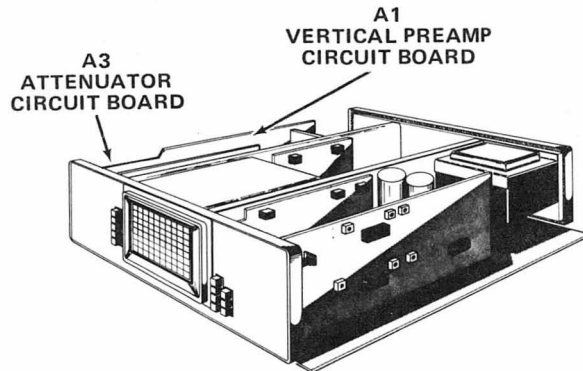


DC Voltages

VERT MODE CH 1  
AC-GND-DC (both) GND

AC Waveforms


VERT MODE CH 1  
CH 1 AC-GND-DC DC  
VOLTS/DIV 5 mV  
Input 20 mV positive square wave

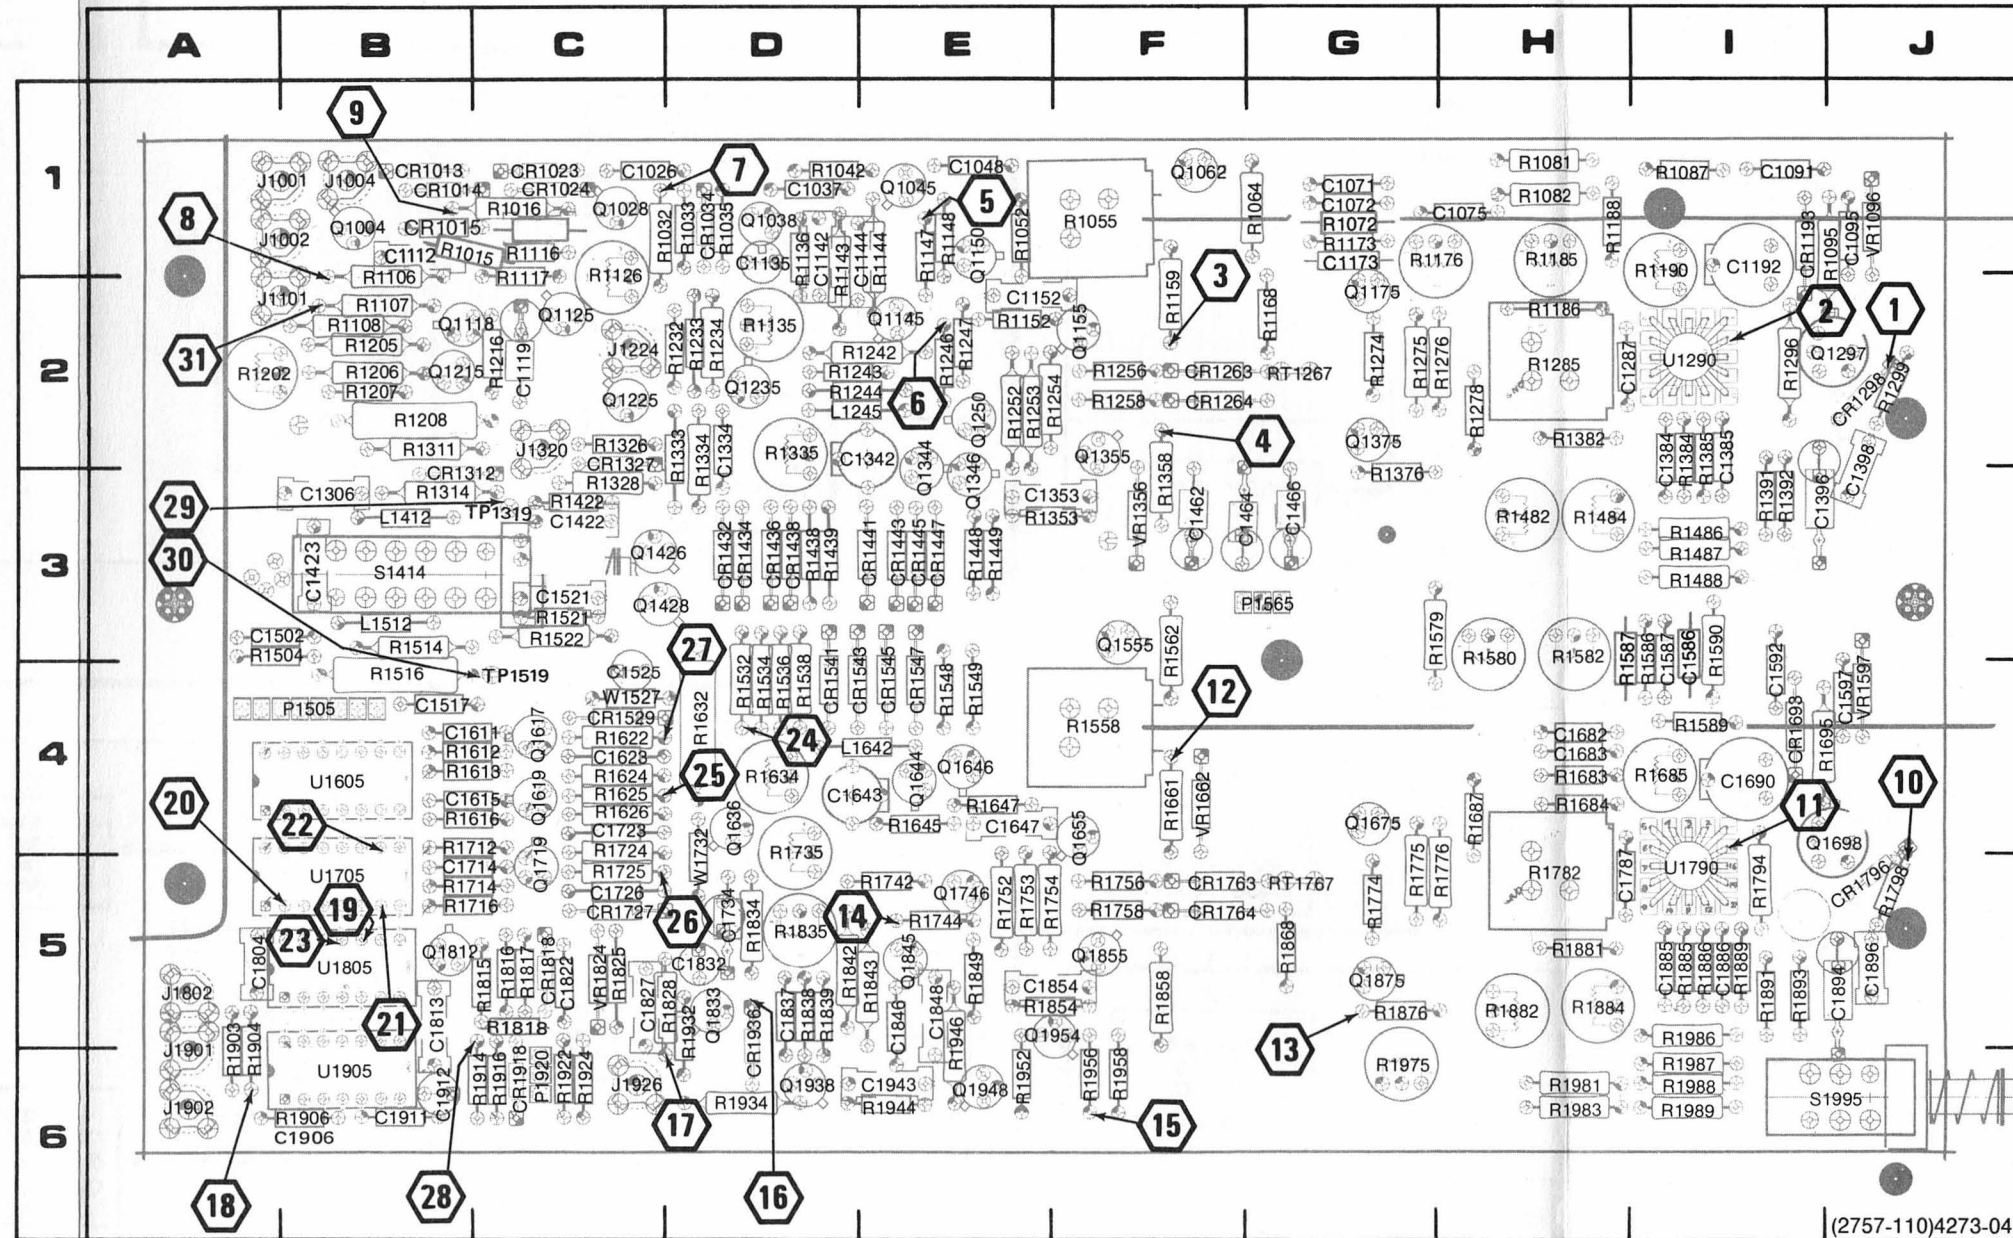

- 1 to 0 V 20 mV p-p
- 2 to 0 V 20 mV p-p
- 3 to 8 V 50 mV p-p
- 4 to 8 V 50 mV p-p
- 5 to 9.5 V 50 mV p-p
- 6 to 9.5 V 50 mV p-p
- 7 to -0.8 V 250 mV p-p
- 8 to 0 V 125 mV p-p
- 9 to 0 V 125 mV p-p

Figure 9-3. A1-Vertical Preamplifier circuit board component locations.

COMPONENT NUMBER EXAMPLE

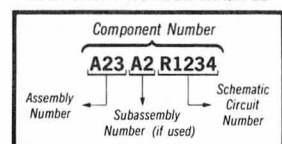

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

⊗ Static Sensitive Devices  
See Maintenance Section

## CH 1 VERTICAL PREAMP

DIAGRAM 

P/O A1 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C1016	8J	1C	Q1125	7H	2C	R1188	5B	1H
C1026	8H	1C	Q1145	6H	2E	R1190	5B	1I
C1037	7G	1D	Q1150	5G	1E	R1234	7H	2D
C1048	4H	1E	Q1155	4F	2F	R1242	5H	2E
C1071	5A	1G	Q1175	4D	2G	R1243	4J	2D
C1072	5A	1G	Q1250	5G	2E	R1244	6J	2E
C1075	5B	1H	Q1297A	4A	2J	R1246	6G	2E
C1091	5A	1I	Q1297D	4A	2J	R1247	6G	2E
C1095	3A	1J	Q1355	6F	2F	R1252	5G	2E
C1112	7I	1B	Q1375	6D	2G	R1253	5G	2E
C1135	5J	1D				R1254	5G	2F
C1142	6H	1D	R1015	6I	1B	R1256	4F	2F
C1144	5H	1E	R1016	8J	1C	R1258	6F	2F
C1152	4G	2E	R1032	8H	1D	R1274	4D	2G
C1173	5A	1G	R1033	8H	1D	R1275	5D	2G
C1192	5B	1I	R1035	7H	1D	R1276	5D	2H
C1287	3C	2I	R1042	4H	1D	R1278	3C	2H
C1335	2D	2D	R1052	5G	1E	R1285	7A	2H
C1353	6G	3F	R1055	5I	1F	R1296	4A	2I
C1384	7C	2I	R1064	5I	1G	R1299	4A	2J
C1385	7B	2I	R1072	5A	1G	R1353	6G	3F
C1396	4A	3I	R1081	5A	1H	R1358	6E	3F
C1398	4A	2J	R1082	5A	1H	R1376	6E	3G
CR1013	8I	1B	R1087	5B	1I	R1382	6D	2H
CR1014	8I	1B	R1095	4A	1J	R1384	7C	2I
CR1015	7I	1B	R1106	7I	2B	R1385	7B	2I
CR1023	8I	1C	R1116	8H	1C	R1391	6B	3I
CR1024	8I	1C	R1117	7H	2C	R1392	6B	3I
CR1034	7H	1D	R1126	9G	2C	R1482	5D	3H
CR1193	4B	1I	R1135	5J	2D	R1484	6A	3H
CR1263	4F	2F	R1136	6H	1D	R1486	7C	3I
CR1264	6F	2F	R1143	5H	1D	R1487	7B	3I
CR1298	3A	2J	R1144	5H	1E	R1488	7B	3I
J1001	8J	1B	R1147	4G	1E			
J1002	7J	1B	R1148	4G	1E	RT1267	4E	2G
J1004	7J	1B	R1152	4G	2E			
Q1004	7I	1B	R1159	4E	2F	U1290	3D	2I
Q1028	8H	1C	R1168	6F	2G			
Q1038	6H	1D	R1173	5A	1G	VR1096	3A	1J
Q1045	4H	1E	R1176	5A	1H	VR1356	5E	3F
Q1062	5I	1F	R1185	5B	1H			
			R1186	4D	2H			

*P/O A1 ASSY also shown on diagram(s) 2, and 3*



P/O A3 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C30	2C	1B	C37	2I	2D	R3036	2H	1D
C31	2C	2B				R3039	2I	2E
C32	2E	1C	R3014	1B	1A			
C33	2E	2C	R3015	2B	1A	W3031	2D	1C
C34	2G	1C	R3030	2C	1C	W3034	2F	1C
C35	2G	2C	R3032	2E	1C	W3035	2G	1D
C36	2H	1D	R3033	2E	1C			

*P/O A3 ASSY also shown on diagram 2*

CHASSIS MOUNTED PARTS								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C3042	2J	CHASSIS	J13010	2A	CHASSIS	R3045	2J	CHASSIS
C13010	2A	CHASSIS						
C13012	2A	CHASSIS	R3042	2J	CHASSIS			

A B C D E F G H I J K

VOLTAGE & WAVEFORM CONDITIONS

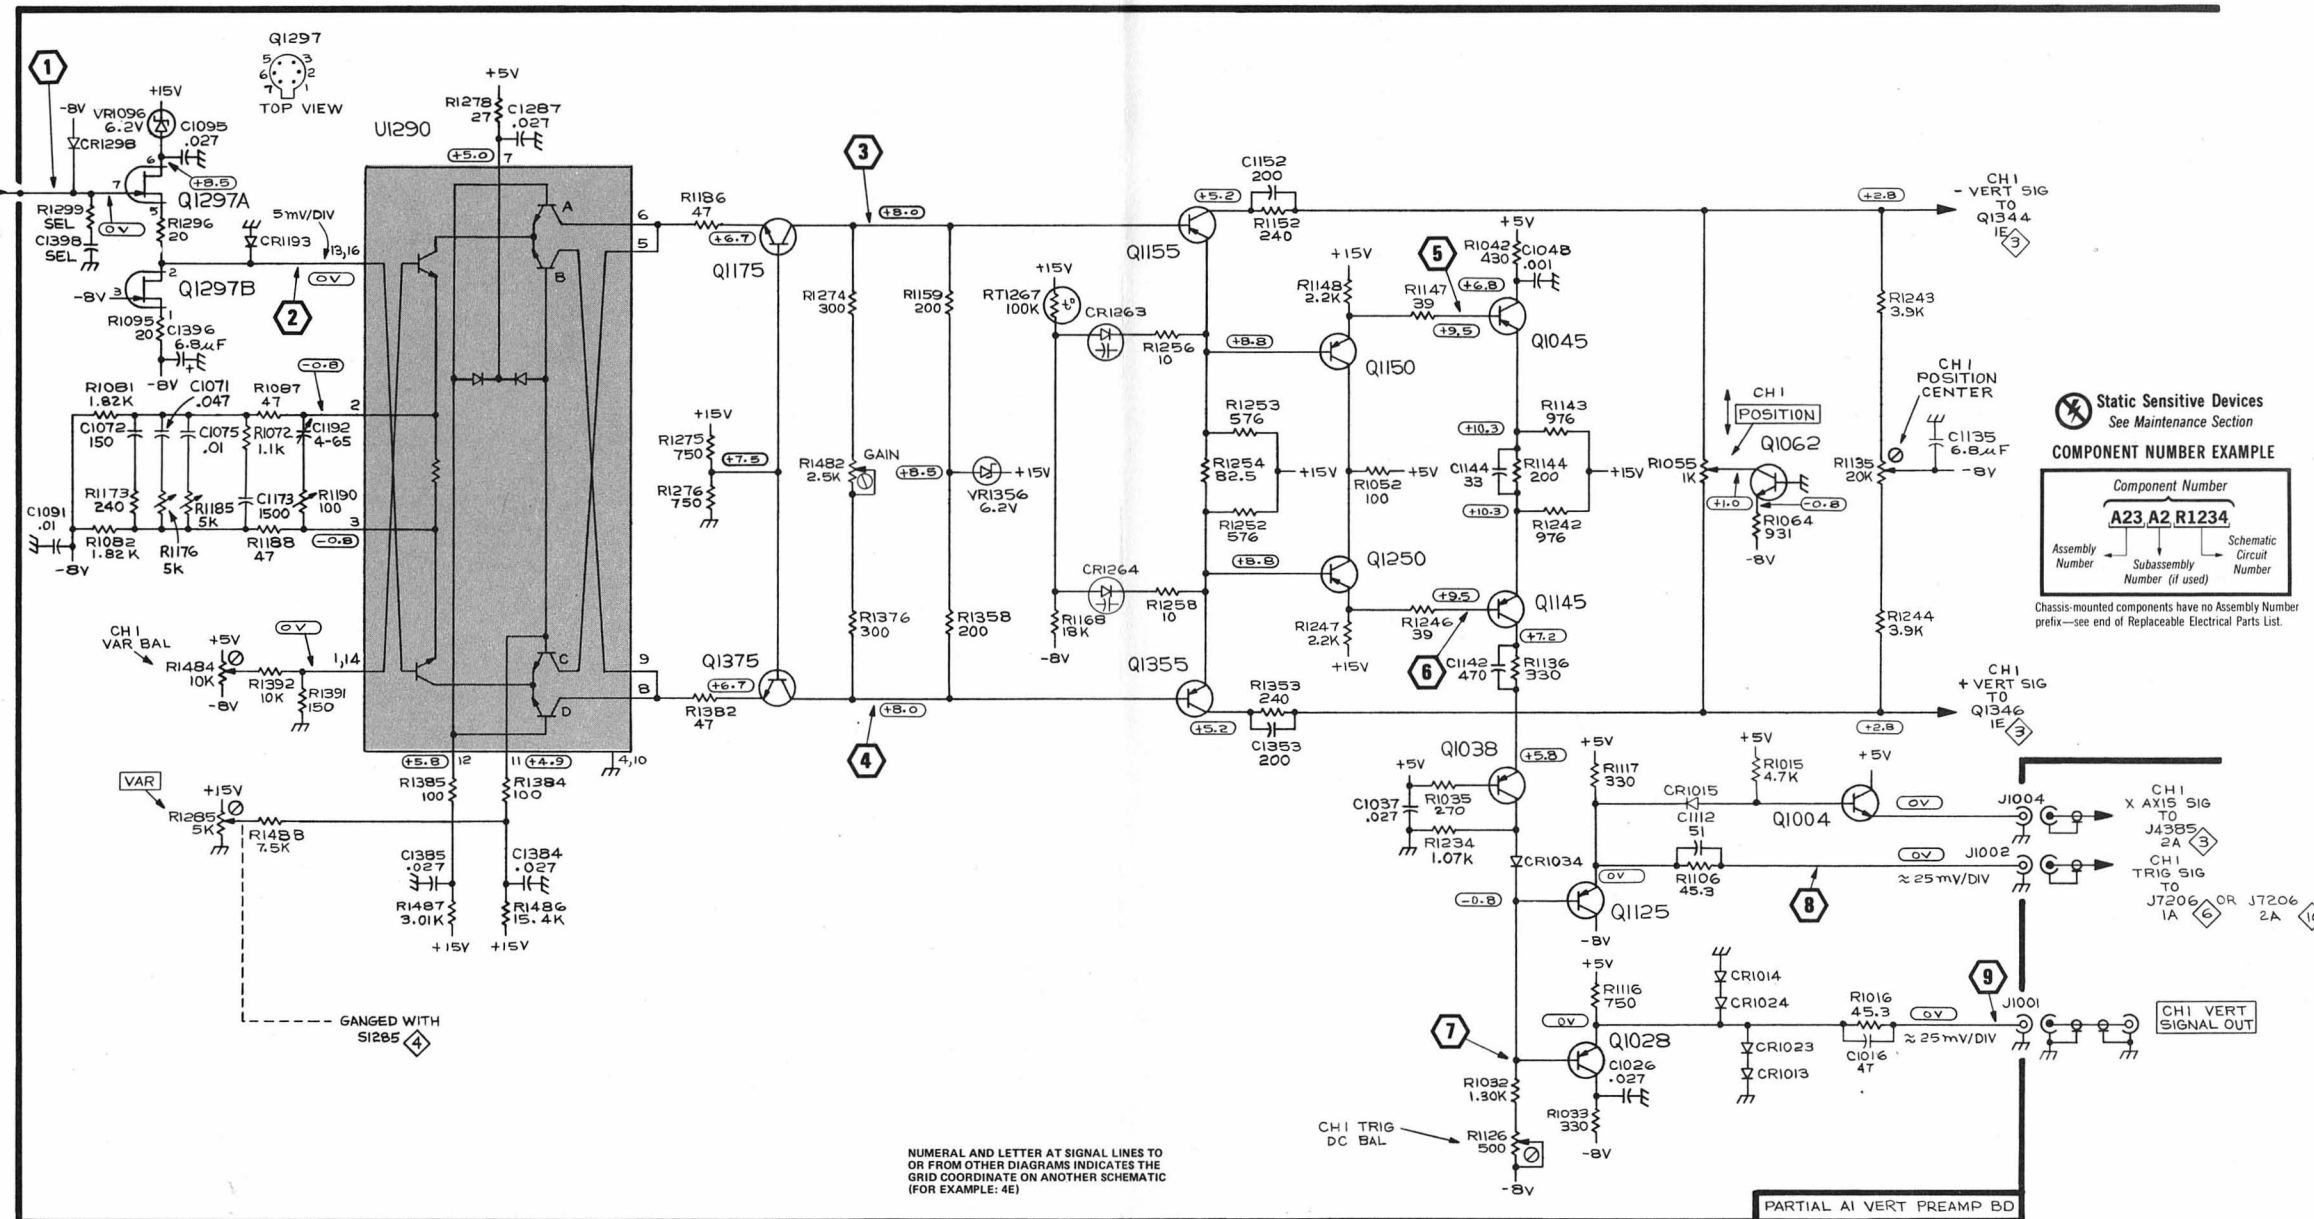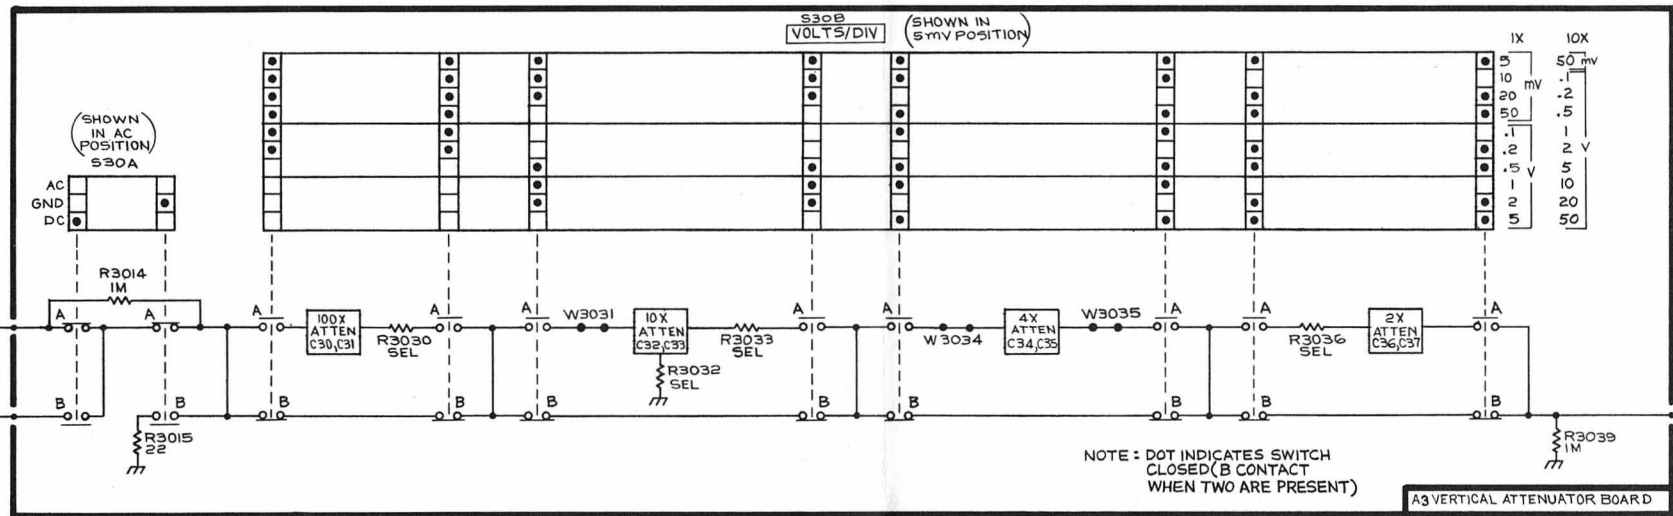

Static Sensitive Devices  
See Maintenance Section

COMPONENT NUMBER EXAMPLE

Component Number		
A23	A2	R1234
Assembly Number	Subassembly Number (if used)	Schematic Circuit Number

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

CH 1 VERTICAL PREAMP

465B Service (SN B060000 & UP)

### 465B CONTROL SETTINGS


#### DC Voltages

VERT MODE	CH 2
AC-GND-DC (both)	GND

#### AC Waveforms

VERT MODE	CH 2
CH 2 AC-GND-DC	DC
VOLTS/DIV	5 mV
Input	20 mV positive-going square wave

WAVEFORMS FOR DIAGRAM 2

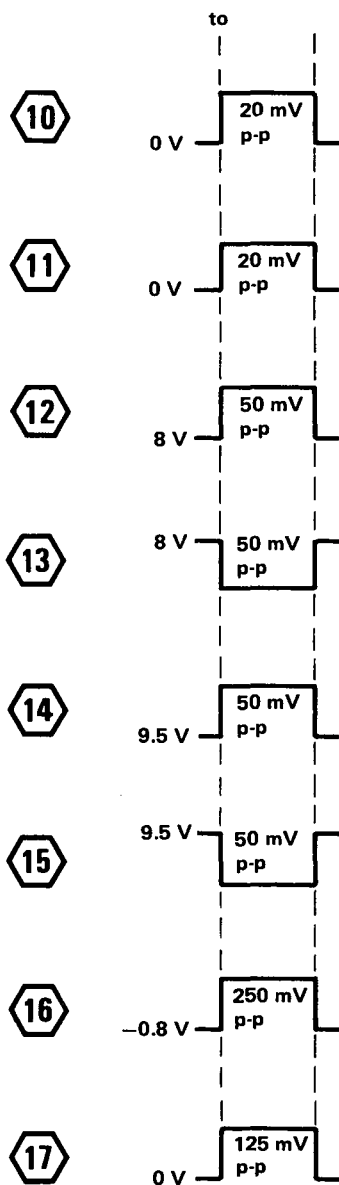



## CH 2 VERTICAL PREAMP DIAGRAM 2

P/O A1 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C1586	5A	3I	Q1948	6H	6E	R1842	5H	5D
C1587	5A	3I	Q1954	6G	5F	R1843	5H	5E
C1592	5A	4I	R1558	5I	4F	R1849	4G	5E
C1597	3A	4J	R1562	5I	3F	R1854	6G	5F
C1647	3G	4E	R1579	5A	3H	R1858	6E	5F
C1682	5B	4H	R1580	5A	3H	R1868	6F	5G
C1683	5A	4H	R1582	5B	3H	R1876	6E	5G
C1690	5B	4I	R1586	5A	3I	R1881	6D	5H
C1787	3C	5H	R1587	5A	3H	R1882	5E	5H
C1827	7I	5C	R1589	5B	4I	R1884	6A	5H
C1837	7G	5D	R1590	5A	3I	R1885	7C	5I
C1846	4H	5E	R1645	4J	4E	R1886	7B	5I
C1848	5H	5E	R1647	4G	4E	R1889	6B	5I
C1854	6G	5F	R1661	4E	4F	R1891	6B	5I
C1885	7C	5I	R1683	5B	4H	R1893	6A	5I
C1886	7B	5I	R1684	4D	4H	R1932	7H	5D
C1894	4A	5J	R1685	5B	4I	R1934	7H	6D
C1896	4A	5J	R1687	3C	4H	R1944	6H	6E
C1943	6H	6E	R1695	4A	4J	R1946	5H	5E
CR1693	4B	4I	R1735	5J	4D	R1952	5G	6E
CR1763	4F	5F	R1742	6J	5E	R1956	6H	6F
CR1764	6F	5F	R1744	4H	5E	R1958	6G	6F
CR1796	3A	5J	R1752	5G	5E	R1975	6A	6G
CR1936	7H	5D	R1753	5G	5E	R1981	7B	6H
			R1754	5F	5F	R1983	7C	6H
J1926	7J	6C	R1756	4F	5F	R1986	7B	5I
			R1758	6F	5F	R1987	7B	6I
Q1555	5I	3F	R1774	4E	5G	R1988	7B	6I
Q1556	4F	4F	R1775	5D	5G	R1989	7A	6I
Q1675	4D	4G	R1776	5D	5H			
Q1698A	4A	4J	R1782	7A	5H	RT1767	4F	5G
Q1698B	4A	4J	R1794	4A	5I			
Q1746	4G	5E	R1798	4A	5J	S1995	6A	6J
Q1833	8I	5D	R1828	7I	5D			
Q1845	4H	5E	R1834	8H	5D	U1790	3B	5I
Q1855	6F	5F	R1835	8H	5D			
Q1875	6D	5G	R1838	7H	5D	VR1597	3A	4J
Q1938	6H	6D	R1839	4H	5D	VR1662	5E	4F

*P/O A1 ASSY also shown on diagram(s) 1, and 3*



P/O A3 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C30	2C	1B	C37	2I	2D	R3036	2H	1D
C31	2C	2B				R3039	2I	2E
C32	2E	1C	R3014	1B	1A			
C33	2E	2C	R3015	2B	1A	W3031	2D	1C
C34	2G	1C	R3030	2C	1C	W3034	2F	1C
C35	2G	2C	R3032	2E	1C	W3035	2G	1D
C36	2H	1D	R3033	2E	1C			

*P/O A3 ASSY also shown on diagram 1*

CHASSIS MOUNTED PARTS								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C3042	2J	CHASSIS	J13010	2A	CHASSIS	R3045	2K	CHASSIS
C13010	2A	CHASSIS						
C13012	2A	CHASSIS	R3042	2J	CHASSIS			

A B C D E F G H I J K

WAVEFORMS

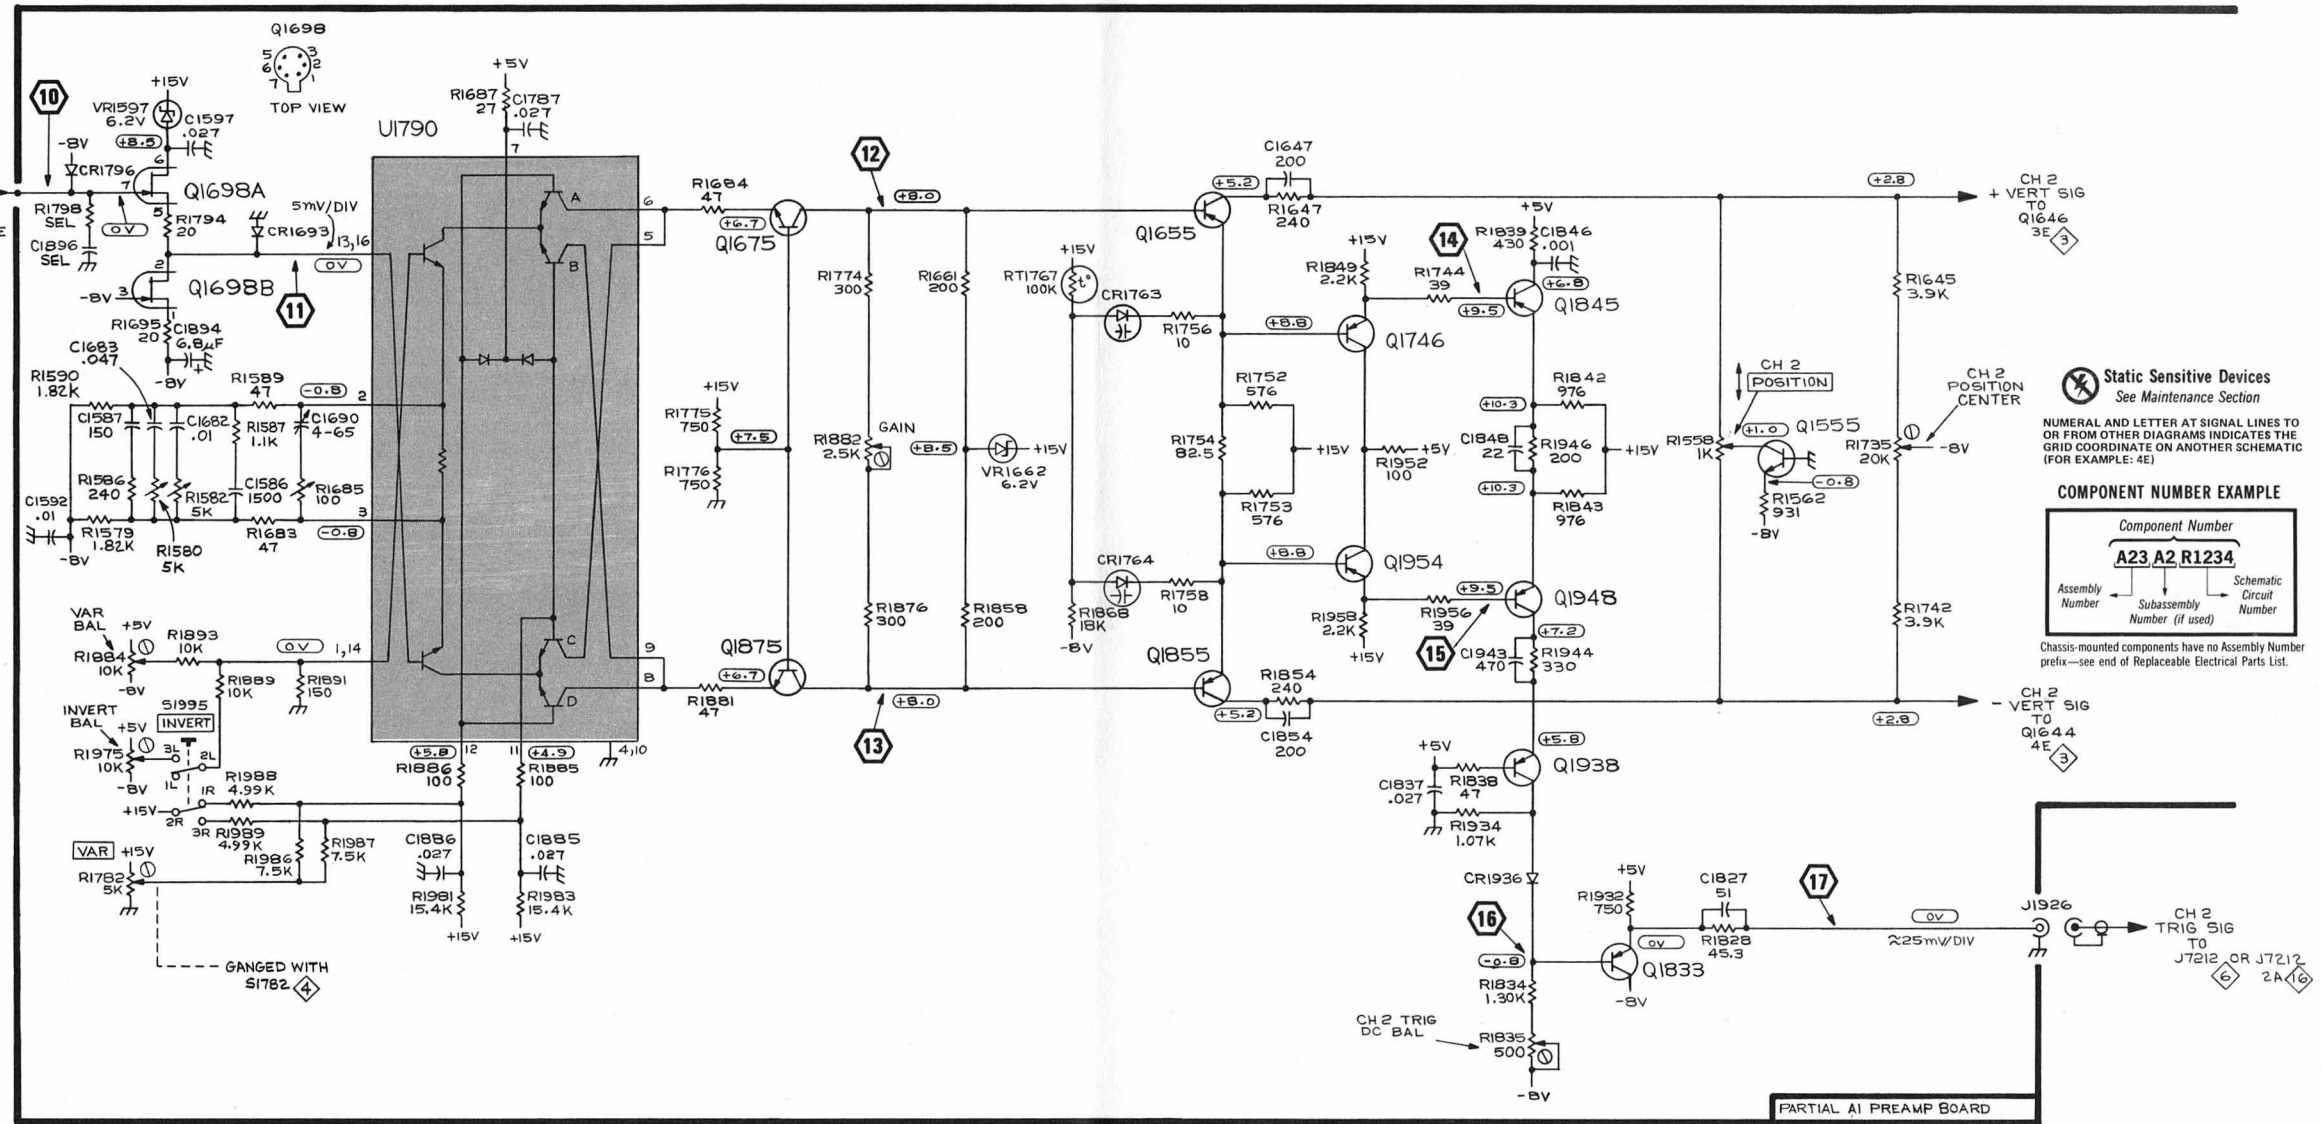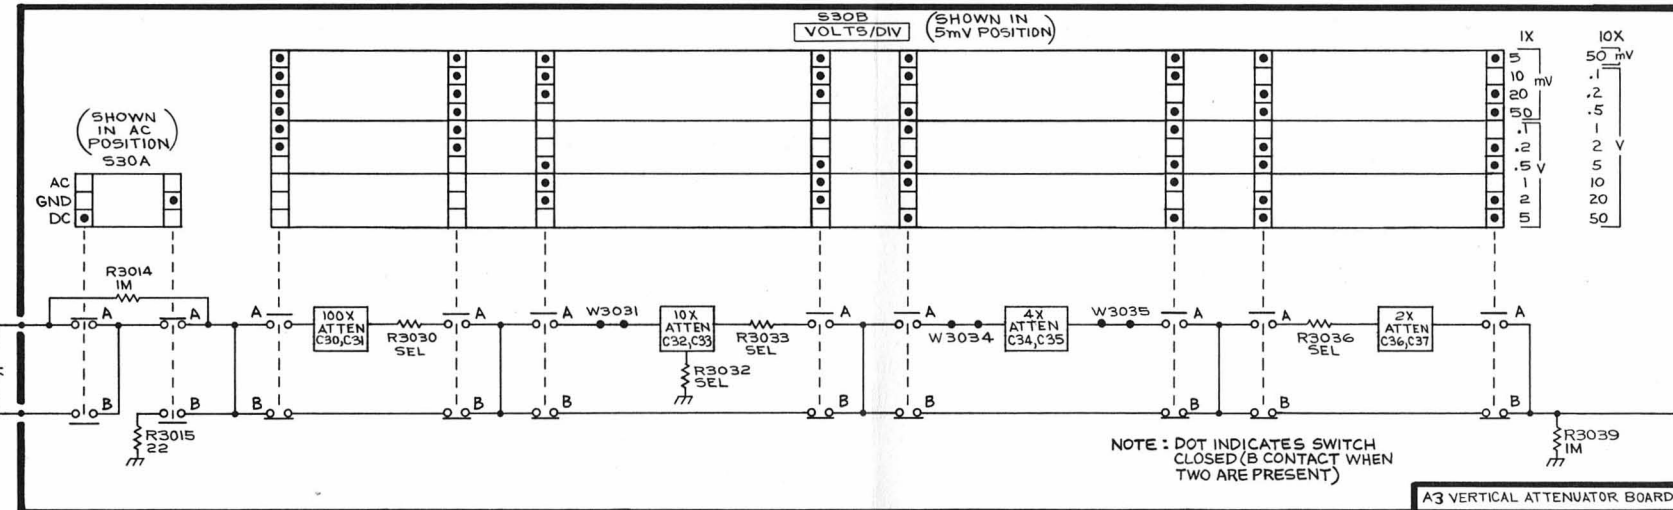

Static Sensitive Devices  
See Maintenance Section

NUMERAL AND LETTER AT SIGNAL LINES TO OR FROM OTHER DIAGRAMS INDICATES THE GRID COORDINATE ON ANOTHER SCHEMATIC (FOR EXAMPLE: 4E)

COMPONENT NUMBER EXAMPLE

Component Number	
A23	A2 R1234
Assembly Number	Schematic Circuit Number
Subassembly Number (if used)	

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

465B OSCILLOSCOPE (5N B060000 & UP)

(1757-76) 4273-08

CH 2 VERTICAL PREAMP

CH 2 VERTICAL PREAMP


DC Voltages

A TRIG MODE	NORM (sweep not running)
VERT MODE	CH 1 and CHOP
AC-GND-DC (both)	GND
CH 1 POSITION	Midrange


AC Waveforms

VERT MODE	CH 1, ADD, A TRIG VIEW, and CHOP
A TRIG MODE	AUTO (no trigger signal)
A AND B TIME/DIV	1 ms
HORIZ DISPLAY	A
AC-GND-DC (both)	GND

H = HI logic level >2 vdc  
L = LO logic level <0.8 vdc

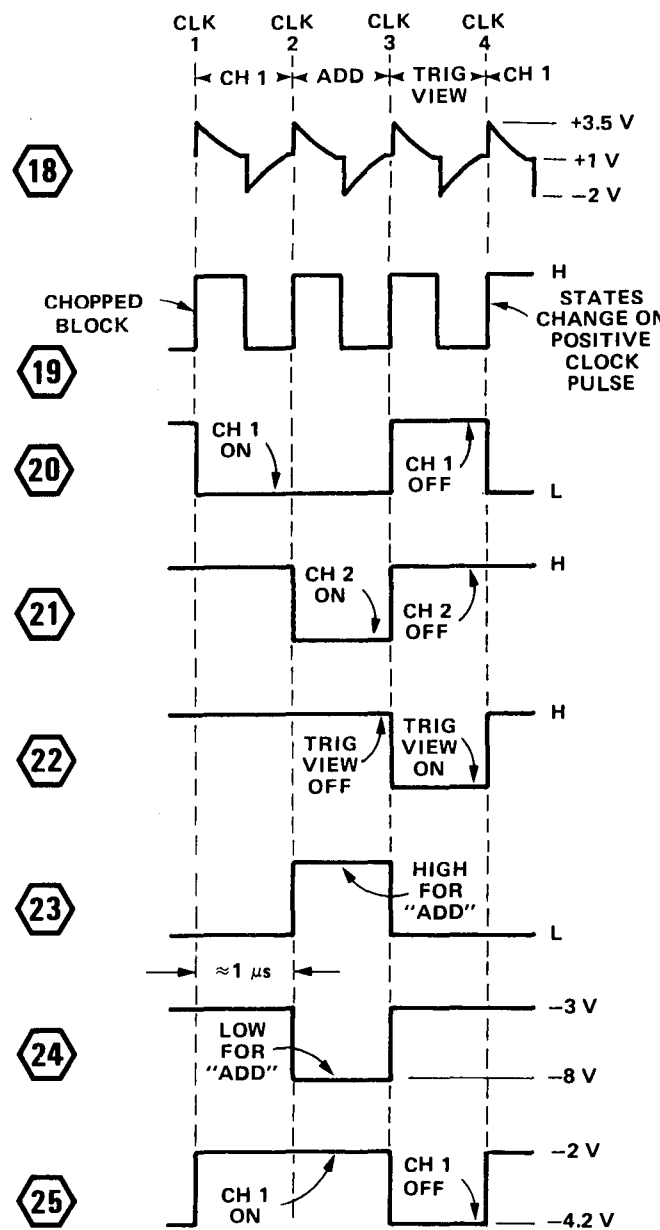

26

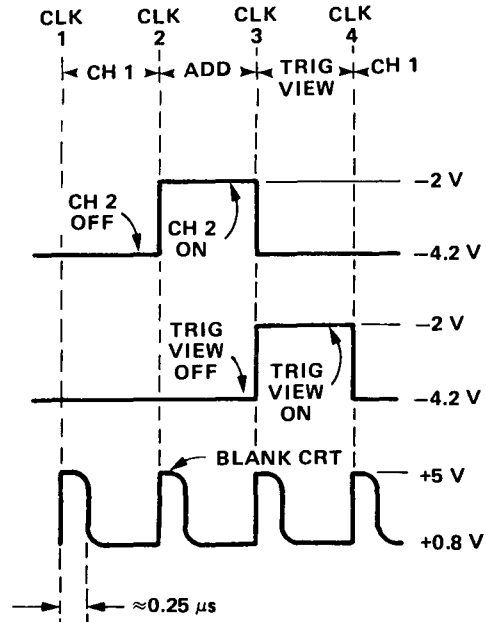

27

28


(2757-98)4273-09

465B CONTROL SETTINGS

AC Waveforms

VERT MODE	CH 1
VOLTS/DIV	5 mV
CH 1 AC-GND-DC	DC
Vertical POSITION	Midrange
Input	20 mV positive-going square wave

29

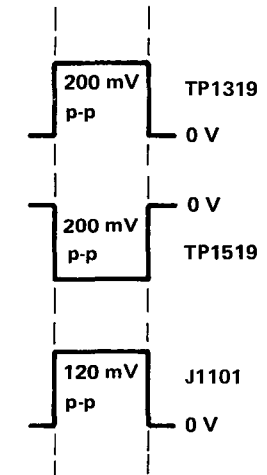

30

31

(2757-99)4273-10

**VERTICAL SWITCHING LOGIC  
DIAGRAM **

<b>P/O A4 ASSY</b>								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
P4061	6A	2H						
<i>P/O A4 ASSY also shown on diagram(s) 4, 5, 7, 8, 9, 10, 11, 12, and 13</i>								
<b>P/O A5 ASSY</b>								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C5018	2B	1B	P5001 P5005	2B 2A	1A 1B	S5210	3B	3A
<i>P/O A5 ASSY also shown on diagram 4</i>								
<b>P/O A7 ASSY</b>								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C7108	2A	2B	P7052	3A	1G	S7312B	1A	3C
<i>P/O A7 ASSY also shown on diagram(s) 6, 7, and 12</i>								
<b>CHASSIS MOUNTED PARTS</b>								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
DL11405	1M	CHASSIS						

VERTICAL SWITCHING LOGIC

DIAGRAM 

P/O A1 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C1119	1L	2C	L1245	1D	2E	R1522	3J	3C
C1306	2L	3B	L1412	1M	3B	R1532	2J	4D
C1342	1D	2E	L1512	3L	3B	R1534	3J	4D
C1405	2L	3B	L1642	3D	4E	R1536	2K	4D
C1422	1K	3C				R1538	2K	4D
			P1505	2B	4B	R1548	3E	4E
C1462	7A	3F	P1505	4A	4B	R1549	4E	4E
C1464	7A	3G	P1505	4M	4B	R1612	6H	4C
C1466	6A	3G	P1505	8A	4B	R1613	6I	4C
C1502	4L	3B	P1565	6A	3G	R1616	5H	4C
C1517	2D	4B	P1920	5M	6C	R1622	6I	4C
C1521	3K	3C	P1920	8M	6C	R1624	6J	4C
C1525	7B	4C				R1625	5I	4C
C1611	6H	4C	Q1118	1K	2B	R1626	5J	4C
C1615	5H	4C	Q1215	1K	2B	R1632	2K	4D
C1623	6J	4C	Q1225	3E	2C	R1634	4D	4D
C1643	4D	4E	Q1235	2E	2D	R1712	5H	4C
C1714	5H	5C	Q1344	1E	2E	R1714	5H	5C
C1723	5J	4C	Q1346	1E	3E	R1716	5I	5C
C1726	5J	5C	Q1426	2K	3C	R1724	5J	4C
C1734	7B	5D	Q1428	3K	3C	R1725	5I	5C
C1804	8F	5A	Q1617	6I	4C	R1815	8I	5C
C1813	8H	5B	Q1619	5I	4C	R1816	6L	5C
C1822	5H	5C	Q1636	4I	4D	R1817	6K	5C
C1832	2K	5D	Q1644	4E	4E	R1818	8J	5C
C1906	9I	6B	Q1646	3E	4E	R1825	4I	5C
C1911	8C	6B	Q1719	5I	5C	R1903	7E	6A
C1912	7I	6B	Q1812	8I	5B	R1904	7F	6A
CR1312	1K	3B				R1906	8I	6B
CR1327	2D	2C	R1107	1L	2B	R1914	8J	6C
CR1432	2F	3D	R1108	1K	2B	R1916	7H	6C
CR1434	3F	3D	R1202	1K	2A	R1922	4H	6C
CR1436	3G	3D	R1205	1K	2B	R1924	4H	6C
CR1438	2G	3D	R1206	1K	2B			
CR1441	1G	3E	R1207	1K	2B	S1414	1M	3B
CR1443	1F	3E	R1208	1K	2B			
CR1445	1G	3E	R1216	1L	2C	TP1319	1K	3C
CR1447	1F	3E	R1232	1D	2D	TP1519	3K	4C
CR1529	6K	4C	R1233	2E	2D			
CR1541	4G	4D	R1311	1K	2B	U1605	6C	4B
CR1543	4F	4E	R1314	1L	3B	U1705	4G	5B
CR1545	3G	4E	R1326	3D	2C	U1805A	7F	5B
CR1547	3G	4E	R1328	1J	3C	U1805B	7D	5B
CR1547	3F	4E	R1333	2E	2D	U1805C	7F	5B
CR1727	6K	5C	R1334	2D	2D	U1805D	4H	5B
CR1818	6K	5C	R1335	1D	2D	U1905A	8D	6B
CR1918	8I	6C	R1422	1K	3C	U1905B	8E	6B
						U1905C	8G	6B
						U1905D	8D	6B
J1101	1M	2B	R1438	2F	3D			
J1224	1B	2C	R1439	3F	3D	VR1824	4H	5C
J1224	1B	2C	R1448	1E	3E			
J1320	3C	2C	R1449	1E	3E	W1527	7A	4C
J1802	6M	5A	R1504	4M	3B	W1732	7A	4D
J1802	6M	5A	R1514	3L	3B			
J1901	8B	6A	R1516	3K	4B			
J1902	8M	6A	R1521	3K	3C			

P/O A1 ASSY also shown on diagram(s) 1, and 2



465B Service (SN B060000 & UP)



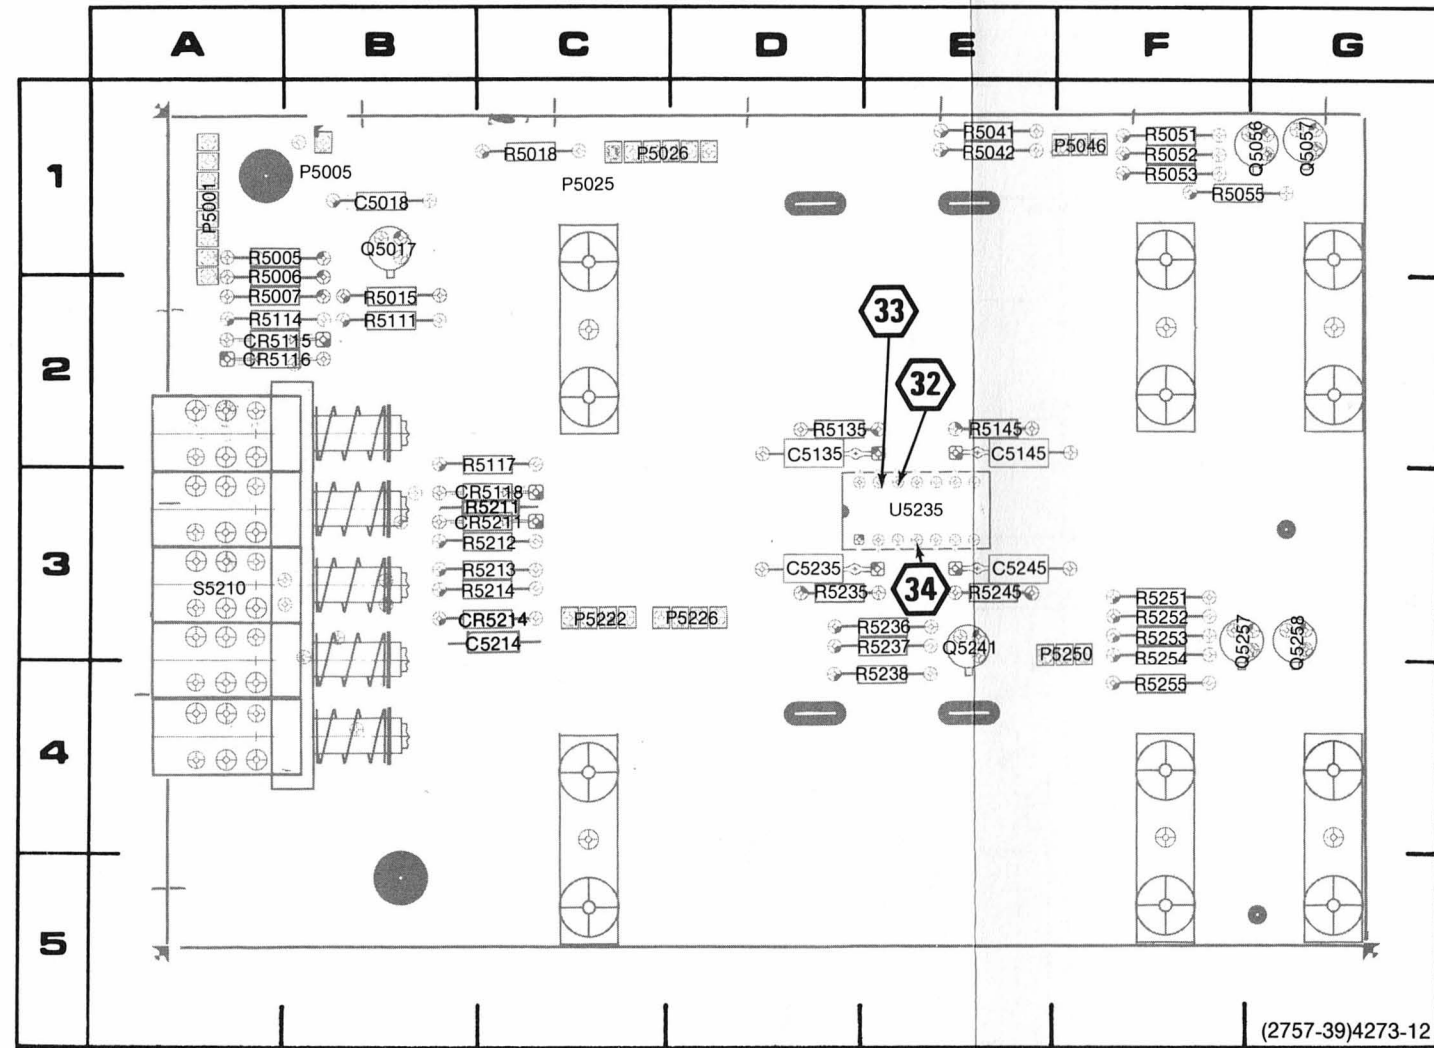


Figure 9-4. A5-Vertical Mode Switch circuit board component locations.

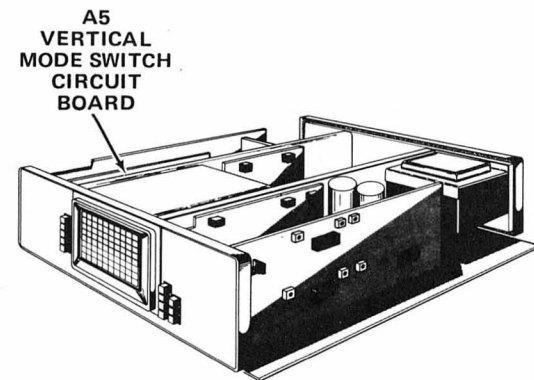

 Static Sensitive Devices  
See Maintenance Section

COMPONENT NUMBER EXAMPLE

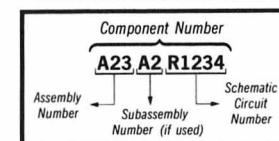

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

## 465B CONTROL SETTINGS


### DC Voltages

A TRIG MODE	NORM (sweep not triggered)
VERT MODE	CH 1 and CHOP
AC-GND-DC (both)	GND

### AC Waveforms

A TRIG MODE	AUTO (no trigger signal)
A and B TIME/DIV	1 ms
AC-GND-DC (both)	GND

H = HI logic level >2 vdc  
 L = LO logic level < 0.8 vdc

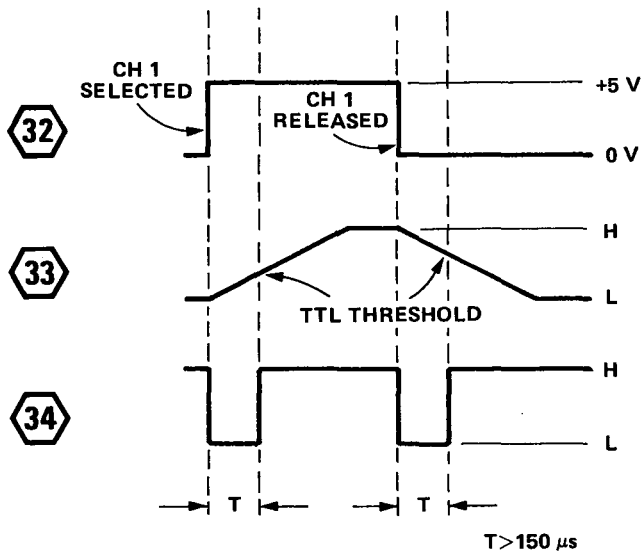


**NEGATIVE TRANSITION OCCURS WHEN CH 1, TRIG VIEW, ADD, OR CH 2 BUTTONS ARE PRESSED OR RELEASED.**



## VERTICAL MODE SWITCH

DIAGRAM 

P/O A4 ASSY					
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
P4057	6A	2G			
<i>P/O A4 ASSY also shown on diagram(s) 3, 5, 7, 8, 9, 10, 11, 12, and 13</i>					
P/O A5 ASSY					
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C5018	4D	1B	R5015	2D	2B
C5135	3C	2D	R5018	7E	1C
C5145	6C	2E	R5041	2D	1E
C5214	6D	3C	R5042	1D	1E
C5235	4C	3D	R5051	1D	1F
C5245	5C	3E	R5052	2D	1F
			R5053	2E	1F
CR5115	3D	2A	R5055	2C	1F
CR5116	5D	2A	R5111	3D	2B
CR5118	6C	3C	R5114	3D	2A
CR5211	6B	3C	R5117	1E	2C
CR5214	6D	3C	R5135	3B	2D
P5001	3E	1A	R5145	3B	2E
P5001	8A	1A	R5211	6C	3C
P5005	3A	1B	R5212	6C	3C
P5025	9B	1C	R5213	6B	3C
P5026	1E	1C	R5214	5D	3C
P5046	1E	1F	R5235	4B	3D
P5222	3A	3C	R5236	6D	3E
P5226	1E	3D	R5237	6D	3E
P5250	6E	3F	R5238	6E	4E
P5250	6E	3F	R5245	5B	3E
			R5251	7D	3F
Q5017	3D	1B	R5252	7D	3F
Q5056	2D	1G	R5253	7D	3F
Q5057	2C	1G	R5254	7D	3F
Q5241	6E	3E	R5255	7C	4F
Q5257	7D	3F	S5210	2A	3A
Q5258	7D	3G			
			U5235A	4C	3E
R5005	5D	1A	U5235B	3C	3E
R5006	6D	2A	U5235B	5C	3E
R5007	4D	2A	U5235C	5C	3E
<i>P/O A5 ASSY also shown on diagram 3</i>					
CHASSIS MOUNTED PARTS					
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C15101	2A	CHASSIS	DS15034	1F	CHASSIS
C15101	7A	CHASSIS	DS15036	9C	CHASSIS
C15103	2A	CHASSIS	DS15038	7F	CHASSIS
C15103	7A	CHASSIS			
DS9040	2F	CHASSIS	R15102	2A	CHASSIS
DS9040	7F	CHASSIS	R15102	7A	CHASSIS
DS9060	2G	CHASSIS	S1285	1F	CHASSIS
DS9060	7G	CHASSIS			

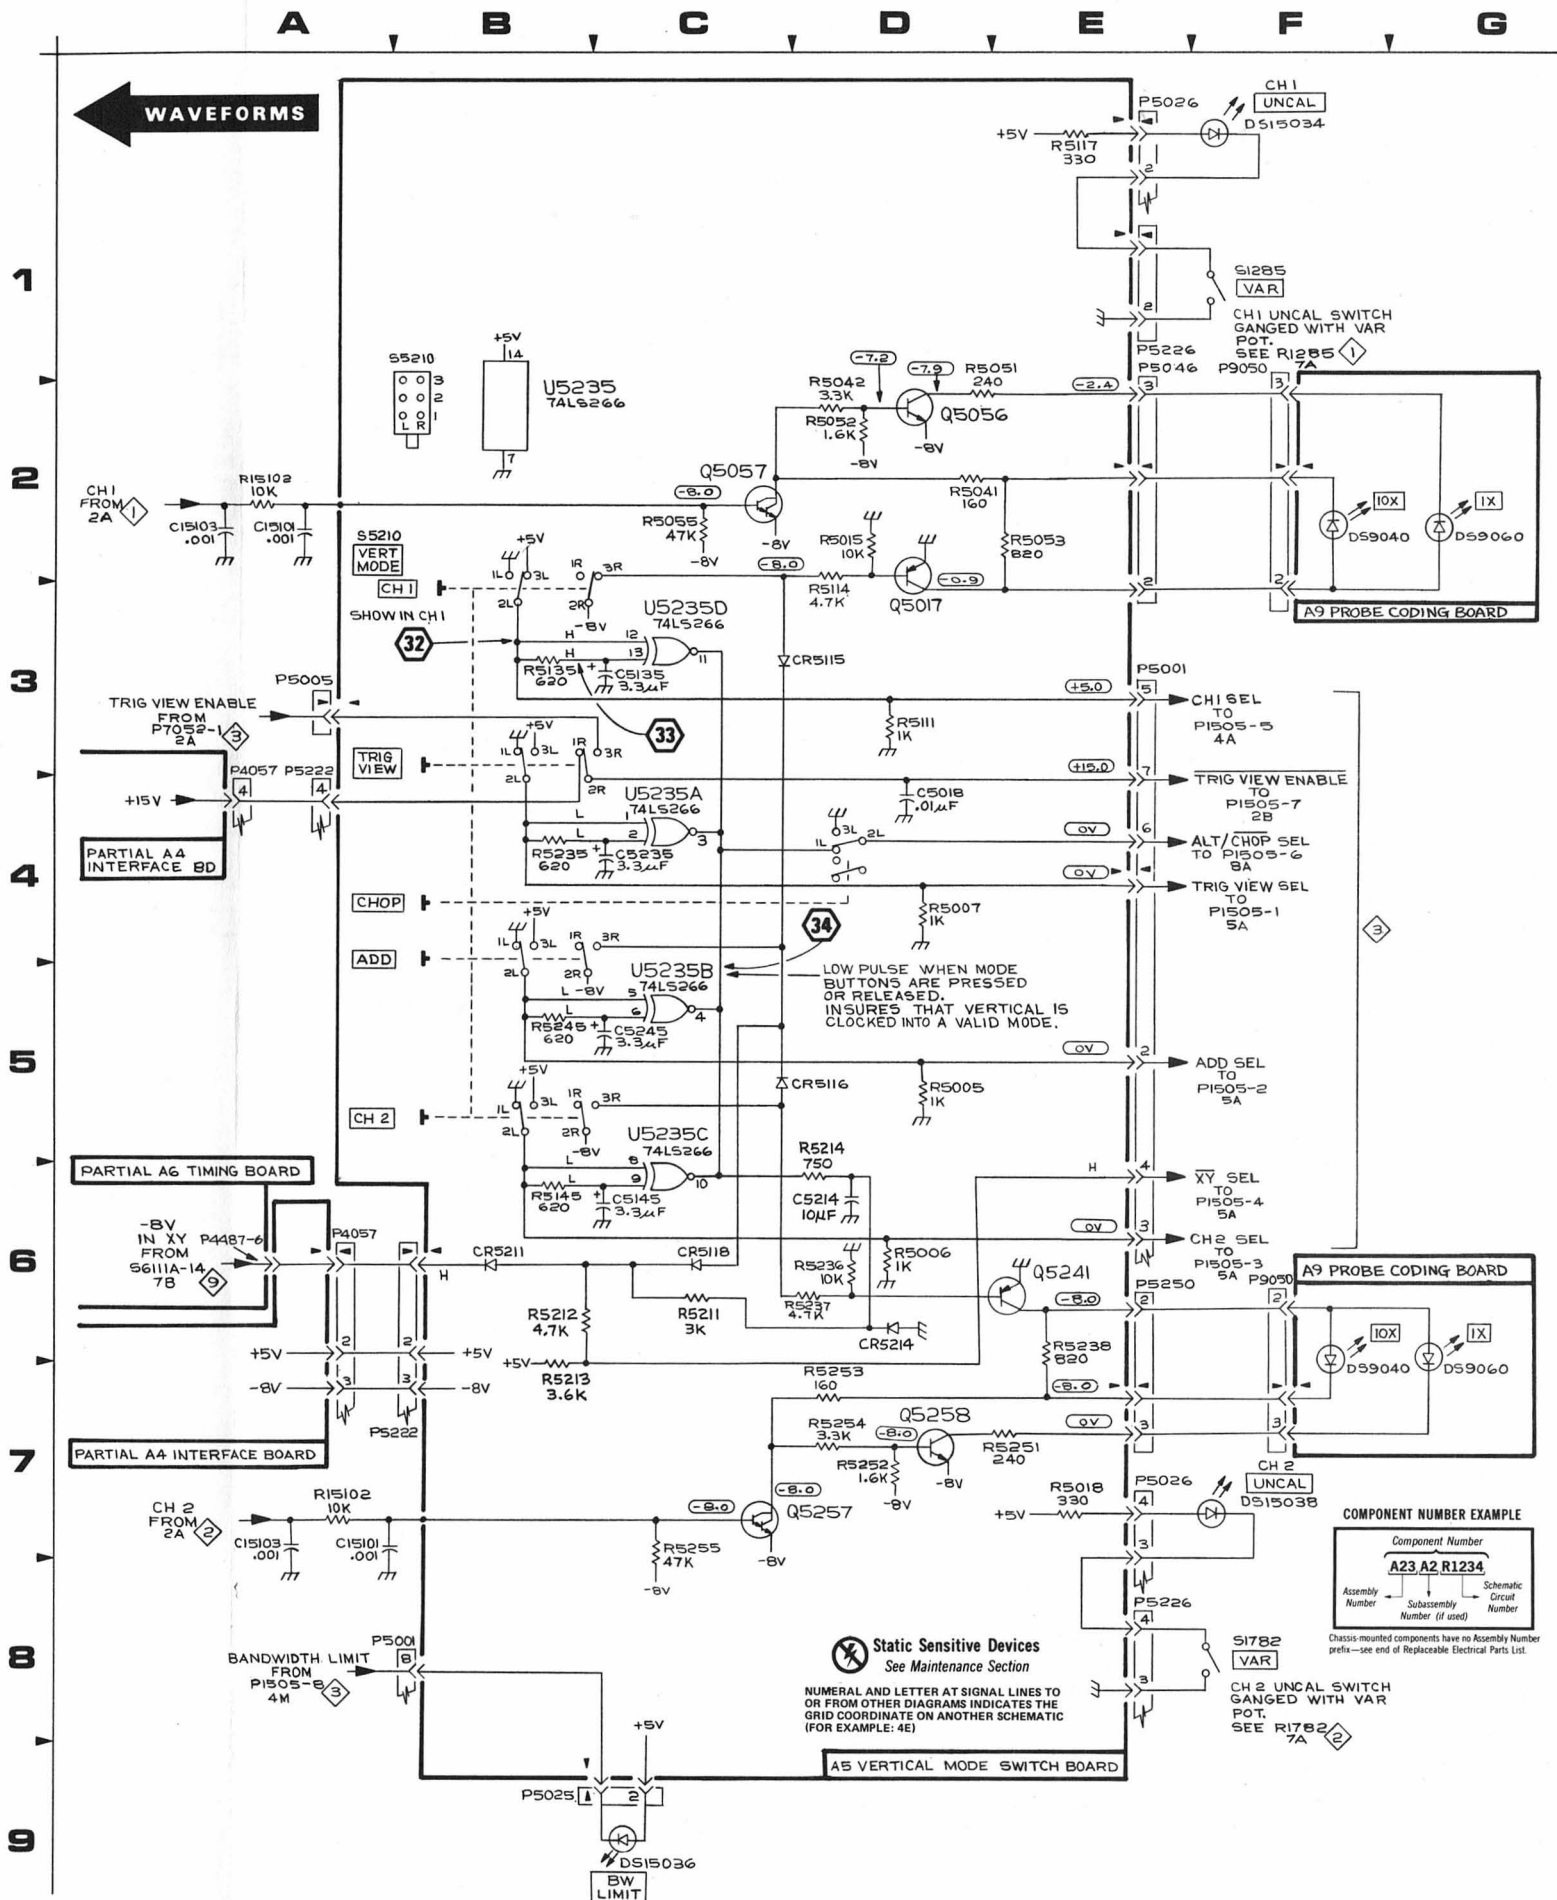

A2-BOARD COMPONENT LOCATIONS



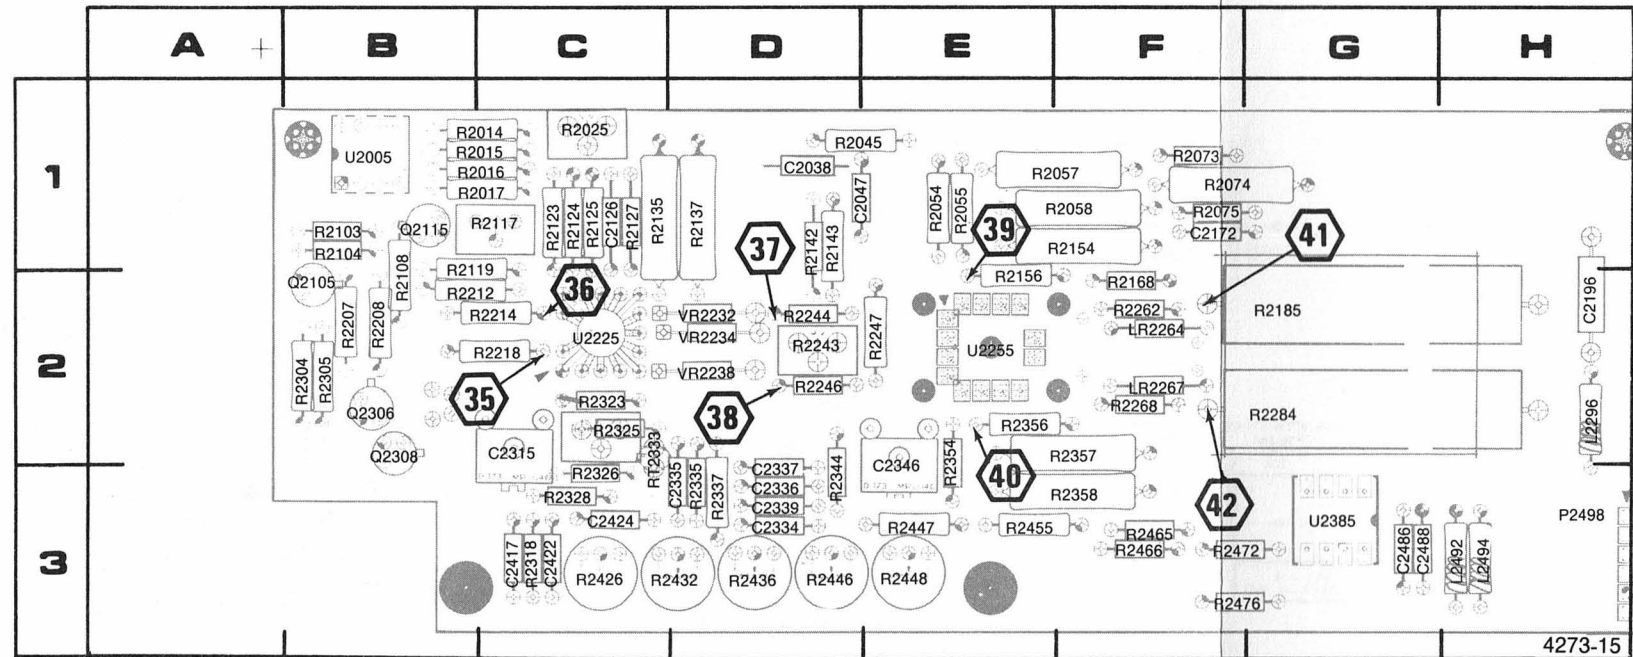


Figure 9-5. A2-Vertical Output circuit board component locations.

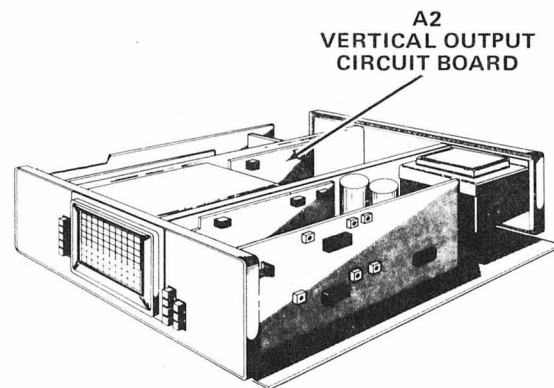

 Static Sensitive Devices  
See Maintenance Section

COMPONENT NUMBER EXAMPLE

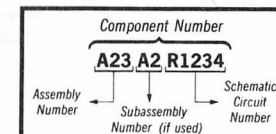

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.


### 465B CONTROL SETTINGS

#### DC Voltages

VERT MODE	CH 1
Vertical POSITION	Midrange
AC-GND-DC (both)	GND

#### AC Waveforms


VERT MODE	CH 1
VOLTS/DIV	5 mV
CH 1 AC-GND-DC	DC
Input	20 mV positive-going square wave

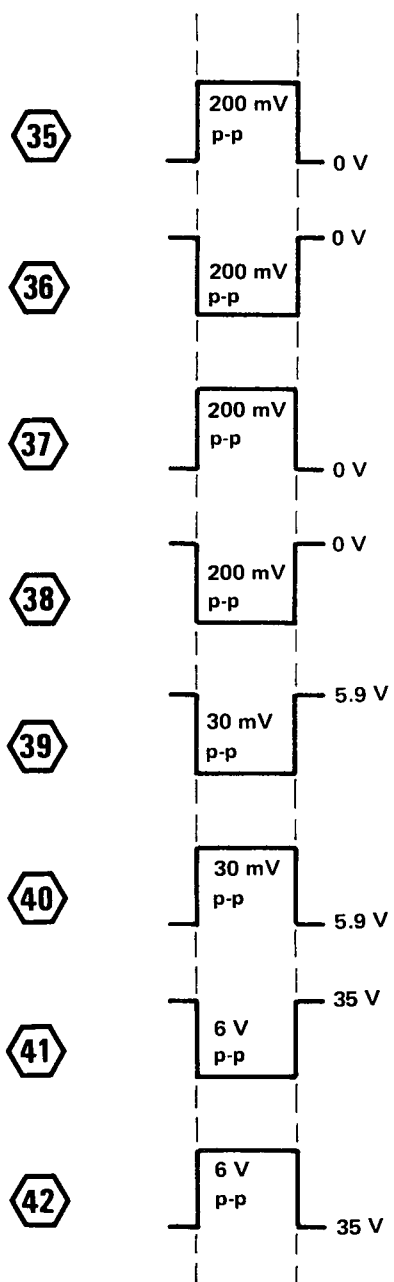

**VERTICAL OUTPUT AMPLIFIER  
DIAGRAM** 

<b>A2 ASSY</b>								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C2038	3C	1D	R2054	6E	1E	R2318	2D	3C
C2047	4G	1D	R2055	6E	1E	R2323	2E	2C
C2126	3H	1C	R2057	6E	1E	R2325	3E	2C
C2172	3H	1F	R2058	5F	1E	R2326	3D	3C
C2196	2H	2H	R2073	6F	1F	R2328	2D	3C
C2315	2E	2C	R2074	2H	1F	R2335	7C	3D
C2334	5C	3D	R2075	6F	1F	R2337	7C	3D
C2335	7C	3D	R2103	3C	1B	R2344	5C	3D
C2336	6C	3D	R2104	3B	1B	R2354	6C	2E
C2337	6C	2D	R2108	3C	1B	R2356	6E	2E
C2339	6B	3D	R2117	3A	1B	R2357	6F	2E
C2346	6D	2E	R2119	3C	2B	R2358	6F	3E
C2417	4B	3C	R2123	4G	1C	R2426	2D	3C
C2422	3D	3C	R2124	4G	1C	R2432	6C	3C
C2424	3D	3C	R2125	4F	1C	R2436	6C	3D
C2486	3H	3G	R2127	3H	1C	R2446	6C	3D
C2488	2G	3G	R2135	5B	1C	R2447	6B	3E
			R2137	7B	1D	R2448	6B	3E
L2296	2G	2H	R2142	5C	1D	R2455	6B	3E
L2492	2G	3H	R2143	5C	1D	R2465	6F	3F
L2494	3G	3H	R2154	5F	1E	R2466	6F	3F
			R2156	5E	2E	R2472	6G	3F
LR2264	5H	2F	R2168	5H	2F	R2476	4C	3F
LR2267	6H	2F	R2185	5H	2G			
			R2207	3B	2B	RT2333	3E	2C
P2495	4B		R2208	3C	2B			
P2498	3B	3H	R2212	2C	2B	U2005	3B	1B
			R2214	3D	2B	U2225	4F	2C
Q2105	3C	2B	R2218	2C	2B	U2255	5G	2E
Q2115	4B	1B	R2243	6D	2D	U2385	6F	3G
Q2306	2B	2B	R2244	5C	2D			
Q2308	3C	2B	R2246	7C	2D	VR2232	5C	2D
			R2247	6D	2E	VR2234	4D	2D
R2014	2B	1B	R2262	5H	2F	VR2238	7C	2D
R2015	2B	1B	R2268	7H	2F			
R2016	2A	1B	R2284	7H	2G			
R2017	3A	1B	R2304	2B	2B			
R2025	5F	1C	R2305	2C	2B			
R2045	3C	1D						
<b>P/O A4 ASSY</b>								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
P4058	2G	2G	S4075	2J	2F			

*P/O A4 ASSY also shown on diagrams 3, 4, 7, 8, 9, 10,11, 12, and 13*

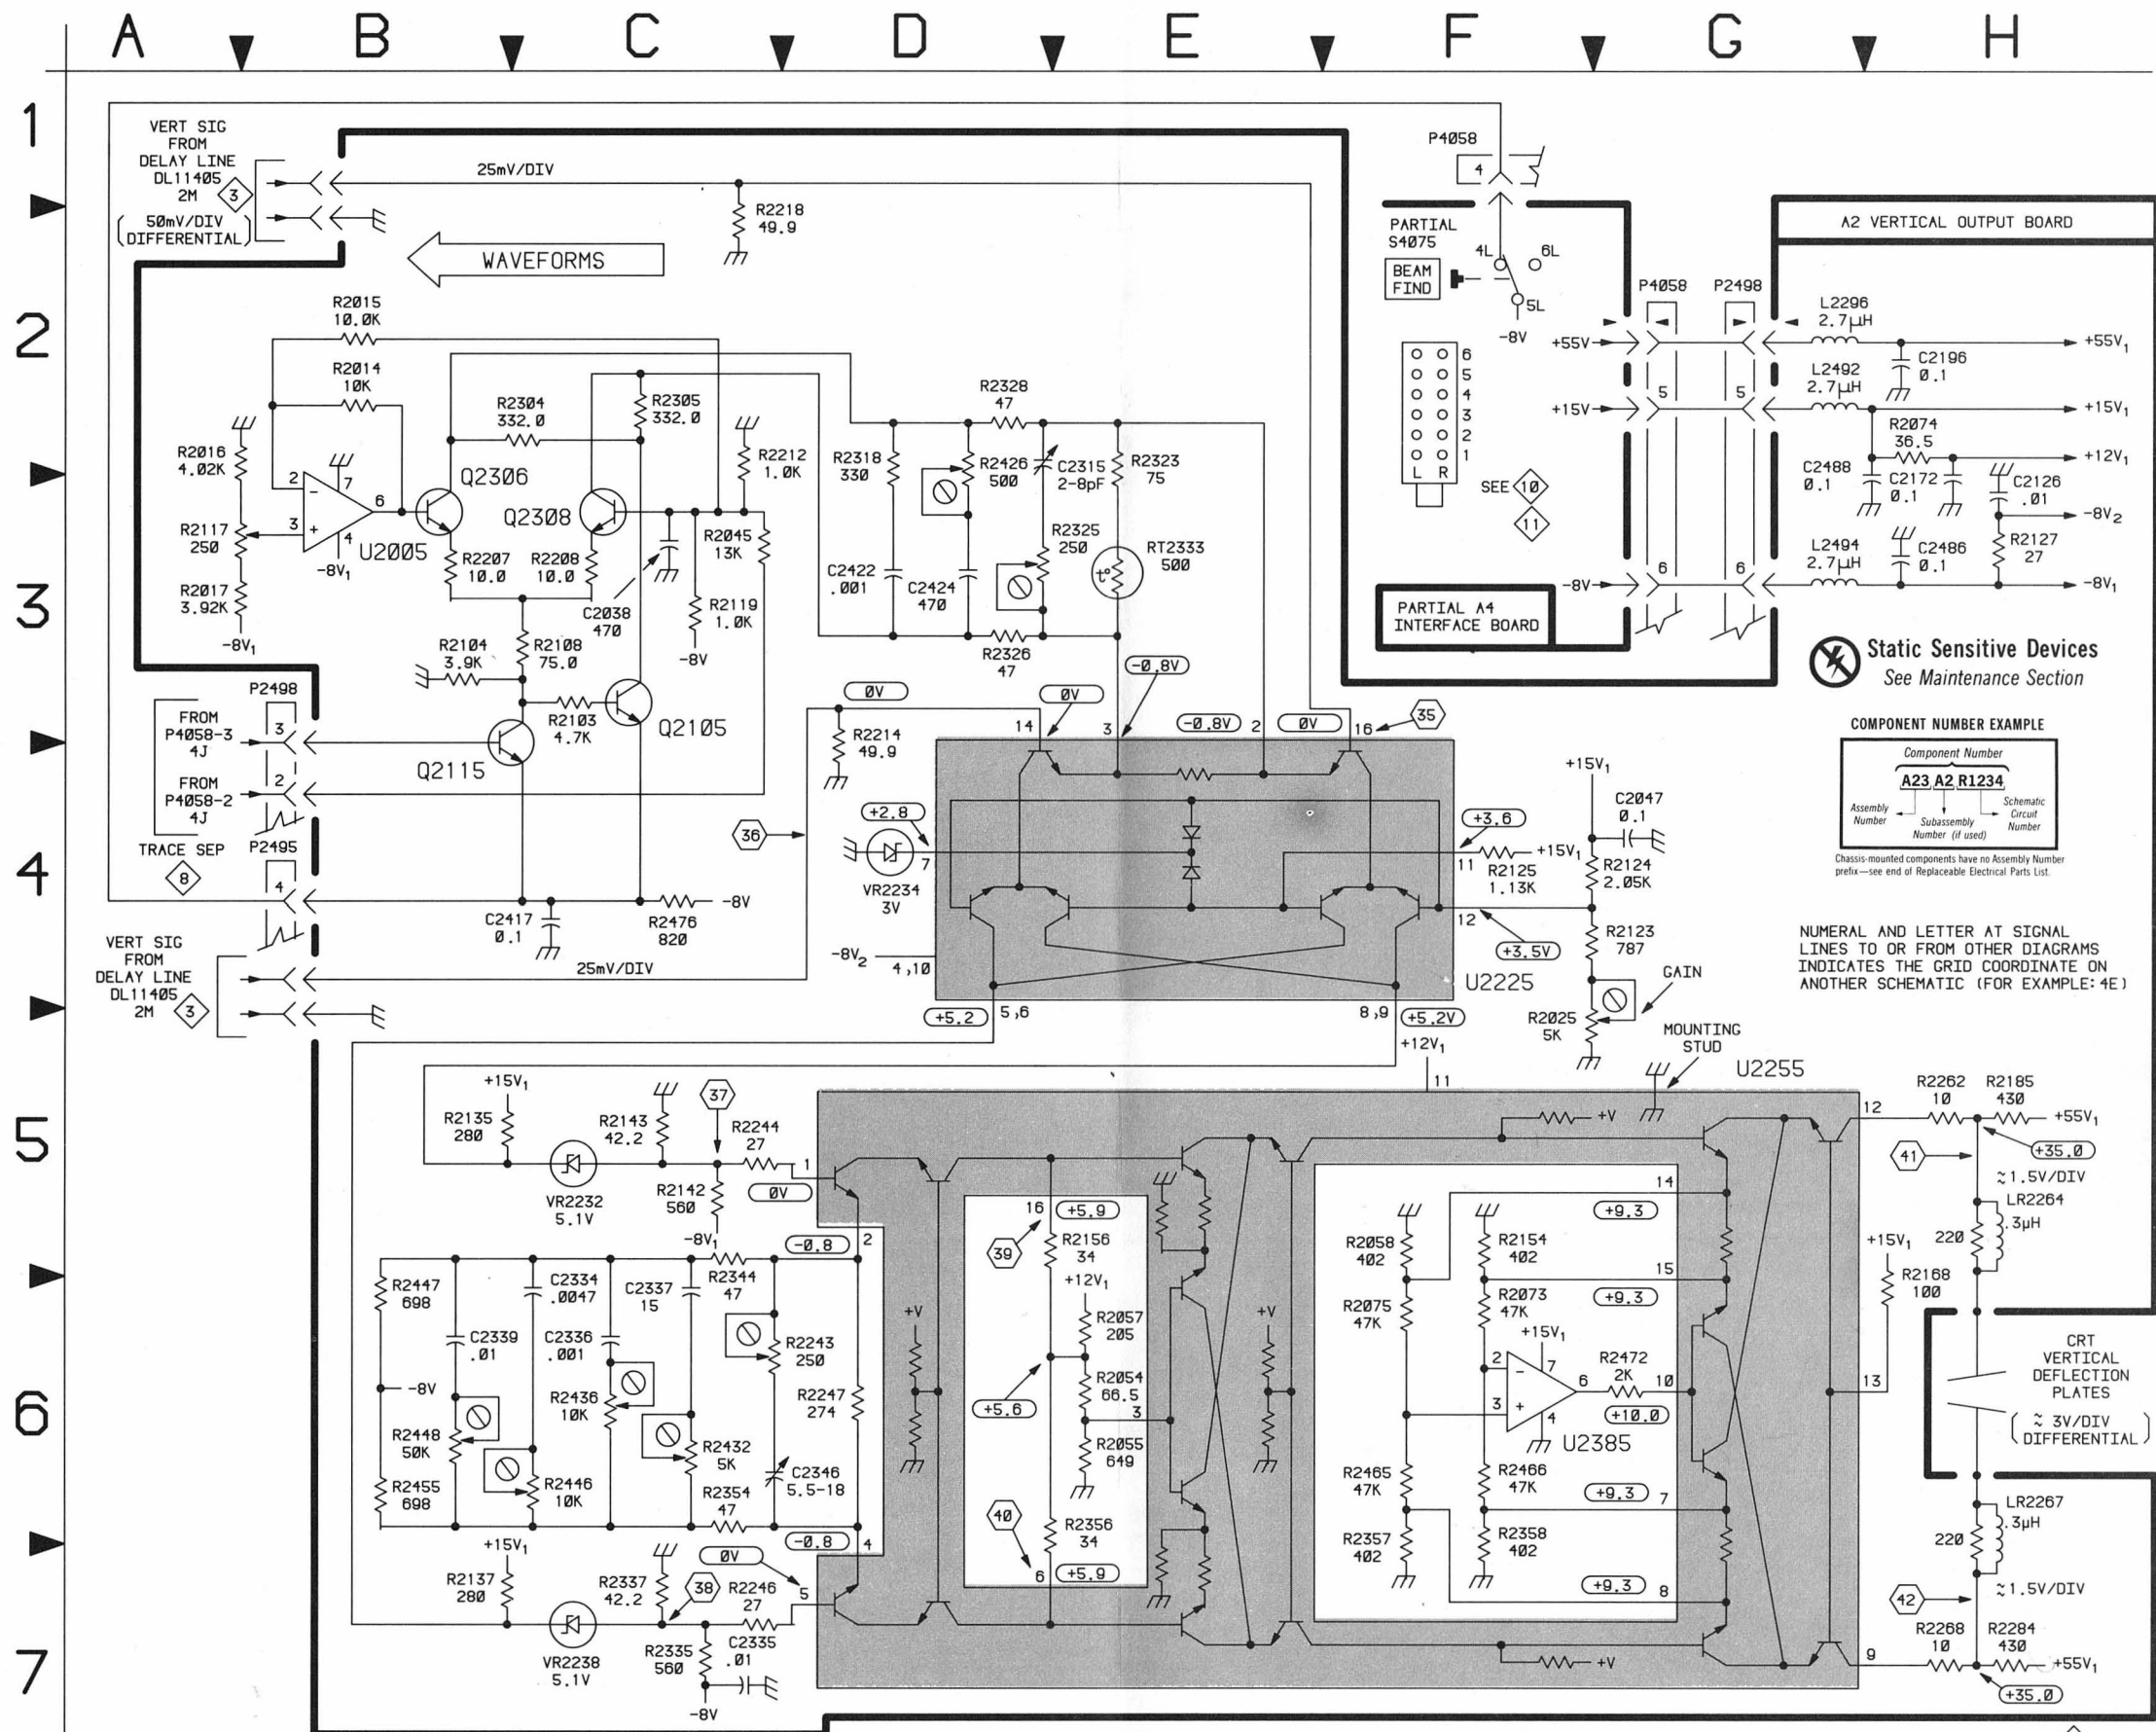

VERT OUTPUT AMPL


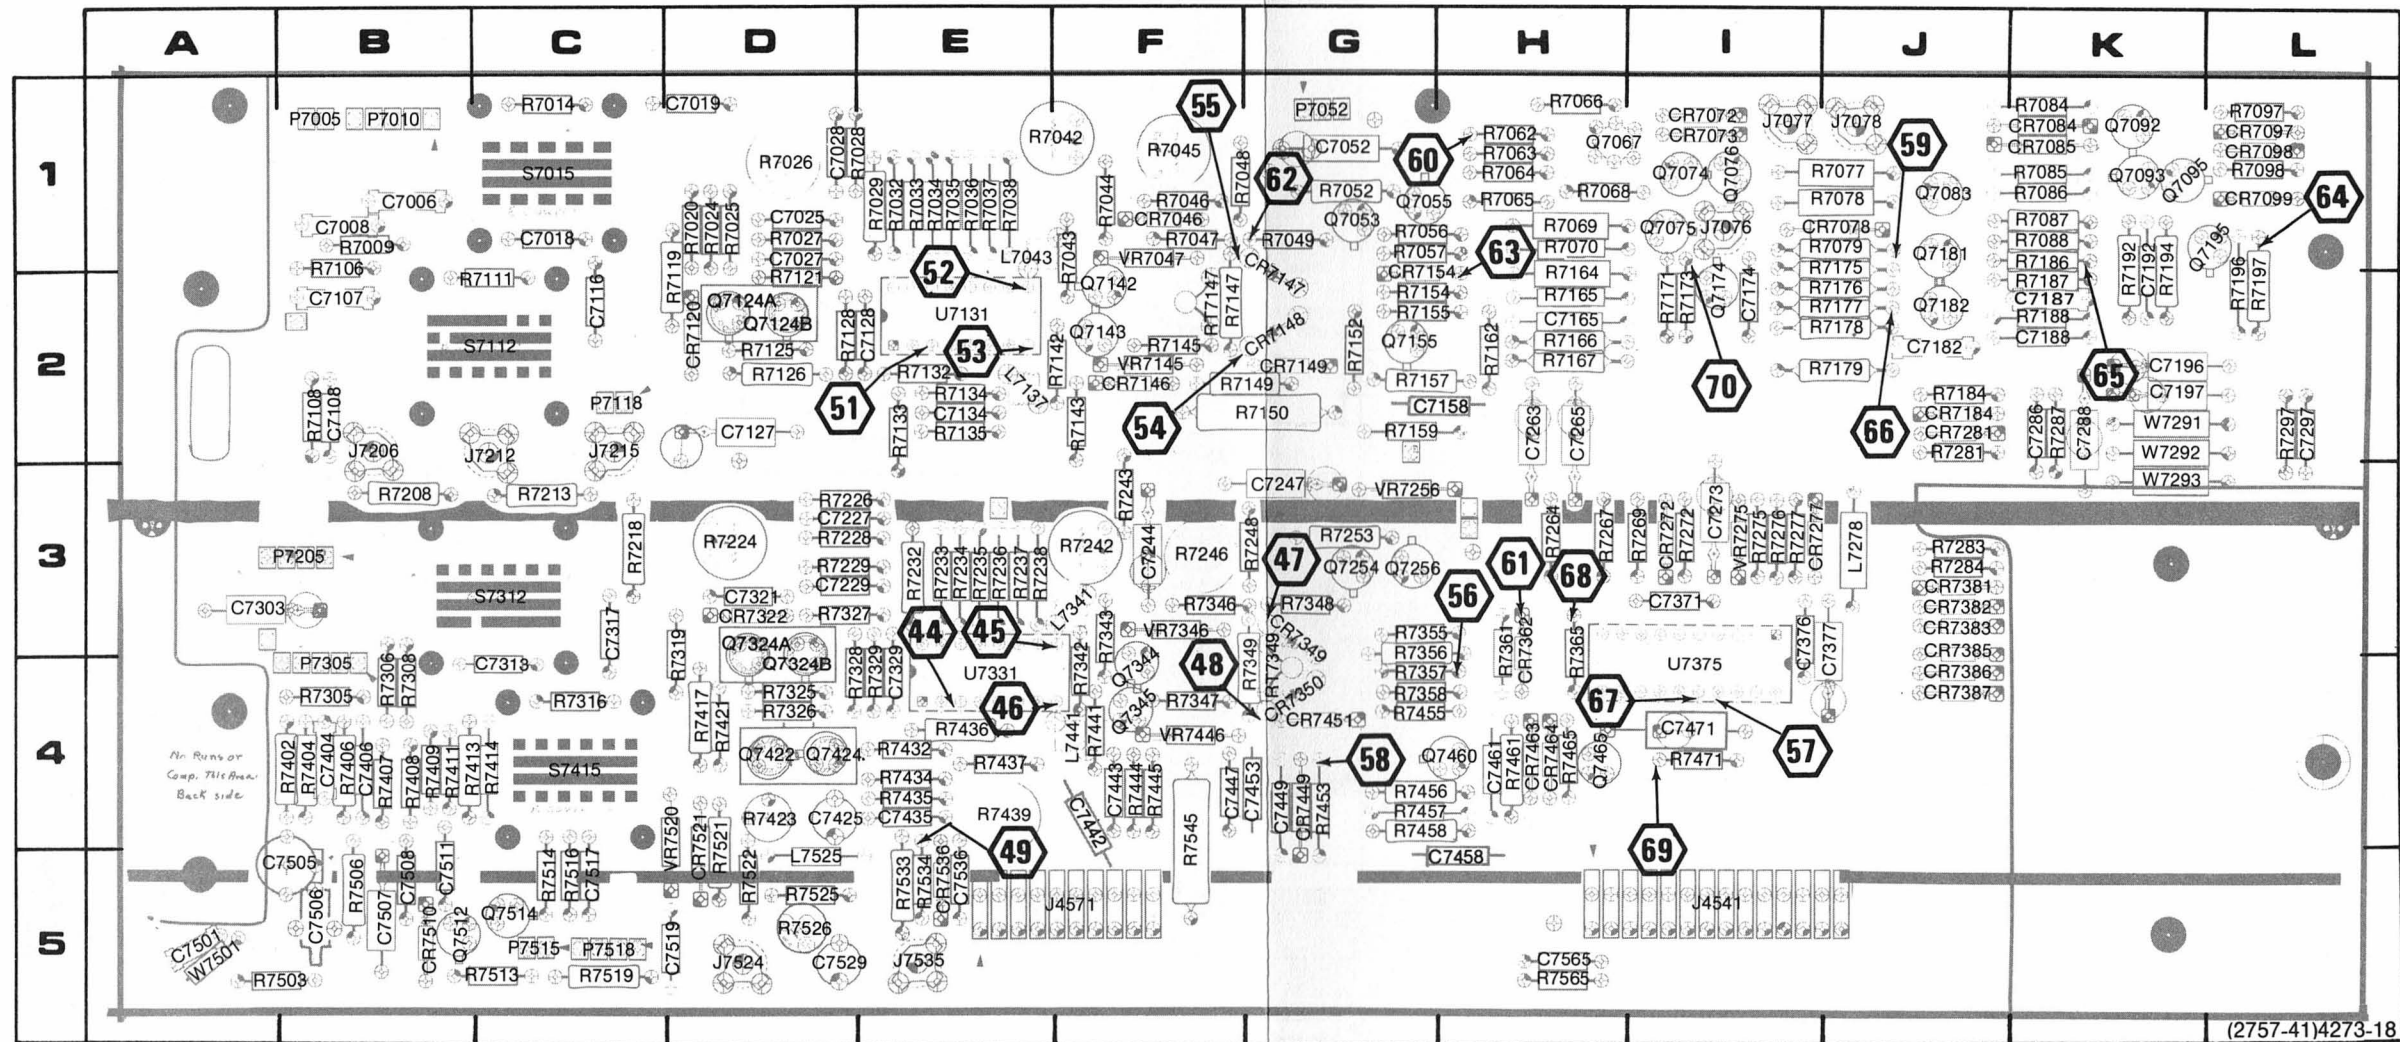



Figure 9-6. A7-Trigger Generator and Sweep Logic circuit board component locations.

A7-BOARD COMPONENT LOCATIONS  
DIA 6 VOLTS & WAVEFORMS

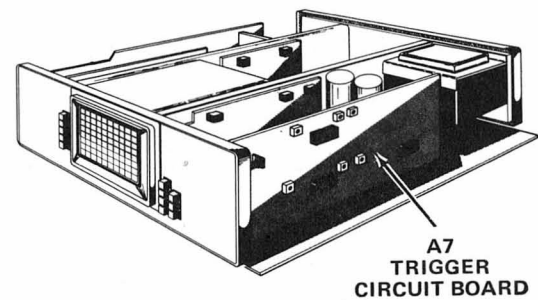

⊗ Static Sensitive Devices  
See Maintenance Section

COMPONENT NUMBER EXAMPLE

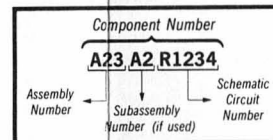

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.


### 465B CONTROL SETTINGS

#### DC Voltages

A TRIG MODE	NORM (sweep not running)
TRIGGER SOURCE (both)	EXT
TRIGGER LEVEL (both)	Midrange
TRIGGER SLOPE (both)	+
TRIGGER COUPLING (both)	AC
VERT MODE	A TRIG VIEW and CHOP
AC-GND-DC (both)	GND


#### AC Waveforms

TIME/DIV	0.2 ms
TRIGGER SOURCE (both)	EXT
TRIGGER LEVEL (both)	Midrange
TRIGGER SLOPE (both)	+
TRIGGER COUPLING (both)	AC
VERT MODE	A TRIG VIEW and CHOP
HORIZ DISPLAY	A INTEN
DELAY TIME POSITION	Fully counterclockwise
Trigger Input (both)	0.5 V, 1 kHz square wave

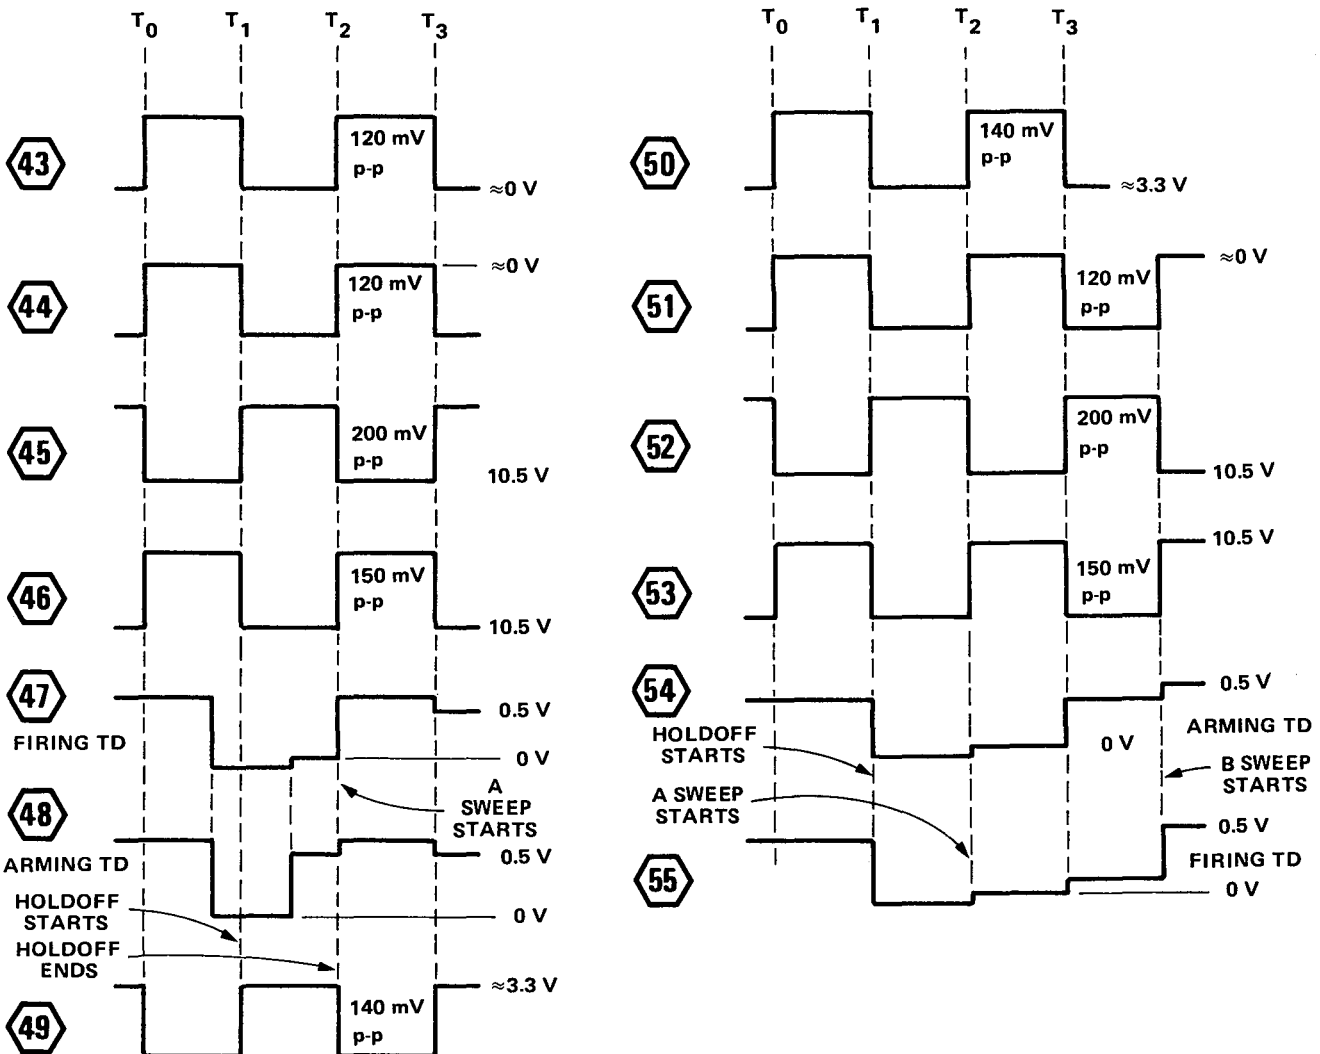





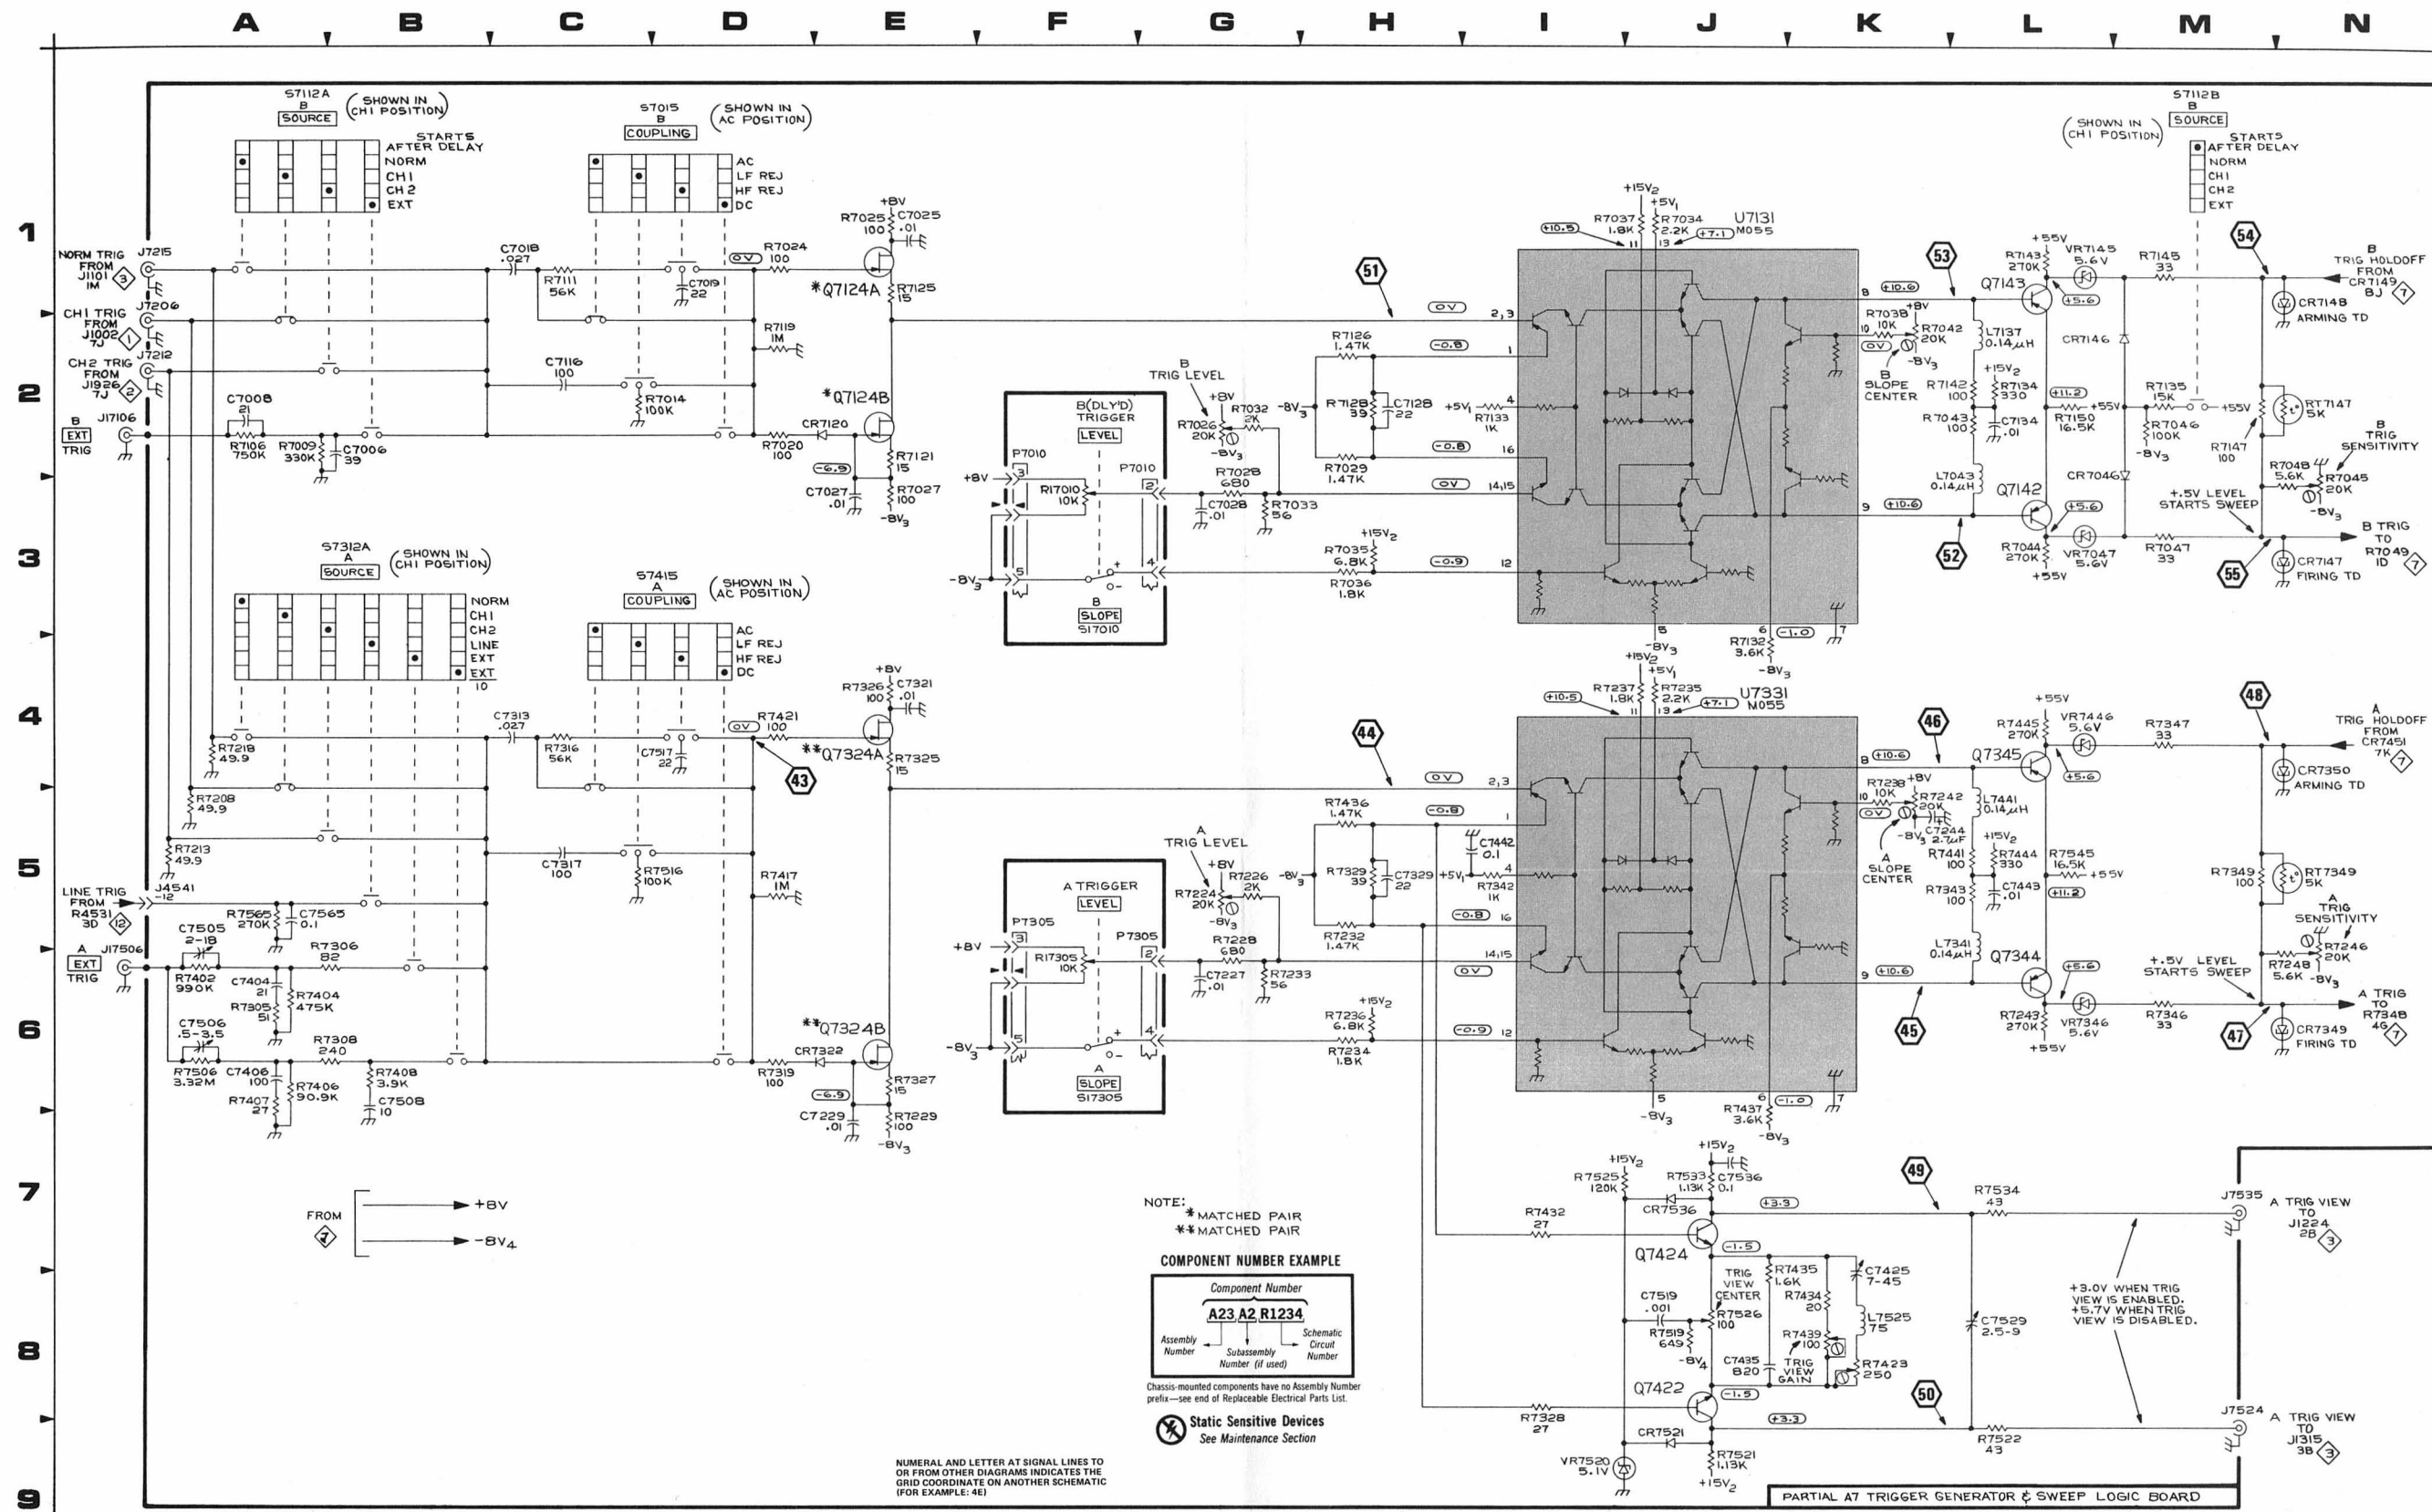

465B OSCILLOSCOPE (5N 8060000 & UP)

(2157-80) 4213-20

A & B TRIGGER GENERATORS 6

A & B TRIGGER GENERATORS 6

NOTE:  
 \* MATCHED PAIR  
 \*\* MATCHED PAIR

COMPONENT NUMBER EXAMPLE

Component Number		
A23	A2	R1234
Assembly Number	Subassembly Number (if used)	Schematic Circuit Number

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

Static Sensitive Devices  
 See Maintenance Section

NUMERAL AND LETTER AT SIGNAL LINES TO OR FROM OTHER DIAGRAMS INDICATES THE GRID COORDINATE ON ANOTHER SCHEMATIC (FOR EXAMPLE: 4E)

PARTIAL AT TRIGGER GENERATOR & SWEEP LOGIC BOARD


### 465B CONTROL SETTINGS

#### DC Voltages

A TRIG MODE	NORM (sweep not running)
AC-GND-DC (both)	GND

#### AC Waveforms

A TRIG MODE	AUTO (no trigger signal)
B TRIGGER SOURCE	STARTS AFTER DELAY
DELAY TIME POSITION	5.00
HORIZ DISPLAY	A INTEN
A TIME/DIV	1 ms
B TIME/DIV	0.1 ms
AC-GND-DC (both)	GND

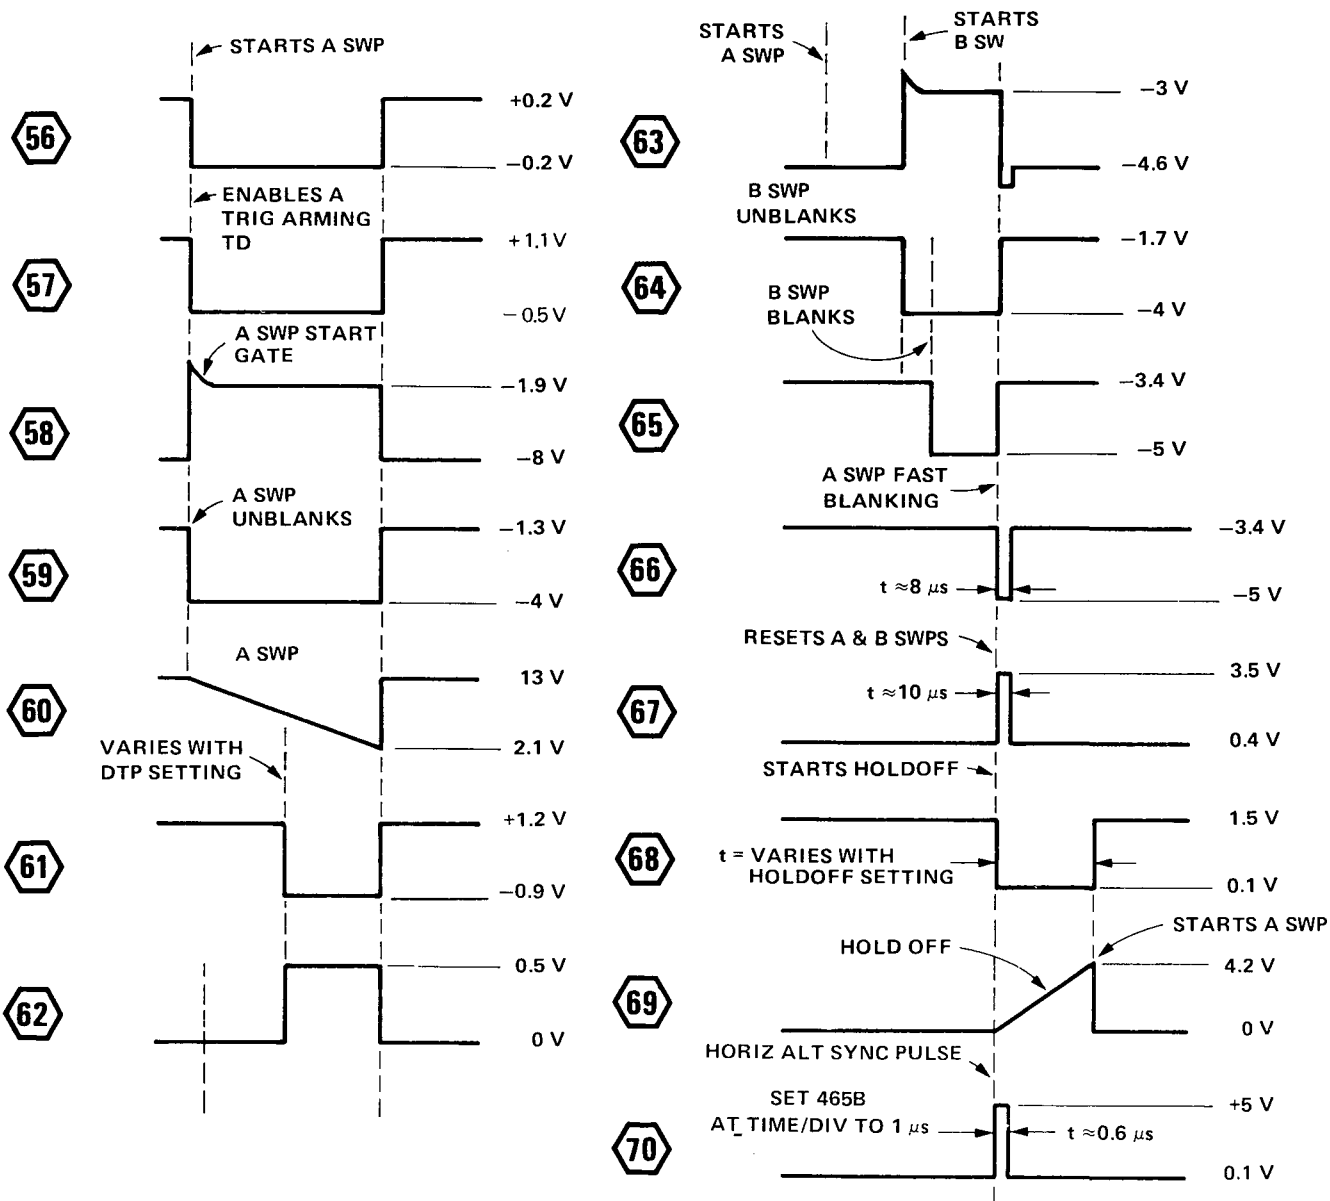

WAVEFORMS FOR DIAGRAM 7

## SWEEP AND Z-AXIS LOGIC DIAGRAM

7

P/O A7 ASSY CONT					
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
R7066	8C	1H	R7275	5I	3I
R7068	8D	1H	R7276	6H	3I
R7069	7D	1H	R7277	6H	3I
R7070	8D	1H	R7281	3F	2J
R7077	1G	1J	R7283	1D	3J
R7078	2I	1J	R7284	1C	3J
R7079	4E	1J	R7287	8M	2K
R7084	2F	1K	R7297	8M	2L
R7085	1F	1K	R7348	4G	3G
R7086	3F	1K	R7355	5G	3G
R7087	2E	1K	R7356	7K	3G
R7088	2D	1K	R7357	4I	4G
R7097	1D	1L	R7358	4I	4G
R7098	1F	1L	R7361	7J	4H
R7149	8K	2G	R7365	7K	4H
R7152	8J	2G	R7453	5H	4G
R7154	1E	2G	R7455	7J	4G
R7155	1E	2G	R7456	8K	4G
R7157	9J	2G	R7457	7J	4G
R7159	8J	2G	R7458	7J	4G
R7162	8I	2H	R7461	7J	4H
R7164	7E	1H	R7465	5D	4H
R7165	8D	2H	R7471	6L	4I
R7166	8J	2H	R7503	9M	5B
R7167	8J	2H			
R7171	3H	2I	U7375	6H	4I
R7173	3H	2I			
R7175	4E	1J	VR7256	7M	3G
R7176	4E	2J	VR7275	8H	3I
R7177	4F	2J			
R7178	4G	2J	W7291	8M	2K
R7179	9E	2J	W7292	7M	2K
R7184	2E	2J	W7293	8M	3K
R7186	2C	1K			
R7187	2C	2K			
R7188	8M	2K			
R7192	3D	2K			
R7194	3D	2K			
R7196	4D	2L			
R7197	2E	2L			
R7253	4H	3G			
R7264	7I	2H			
R7267	6K	2H			
R7269	6I	3I			
R7272	5I	3I			

*P/O A7 ASSY also shown on diagrams 3, 6, and 12*

CHASSIS MOUNTED PARTS					
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
DS17127	5K	CHASSIS	R16002	8A	CHASSIS
DS17206	5K	CHASSIS	S14498	5A	CHASSIS
R14398	4A	CHASSIS			


TABLE (cont)



**SWEEP AND Z-AXIS LOGIC DIAGRAM** 7


P/O A4 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C4398	3A	7L	P4398	3A	7M	W4544	9N	9G
J4463	1A	9H	P4561	5A	9H			
J4487	6B	9K	P4571	7N	10I			
<i>P/O A4 ASSY also shown on diagrams 3, 4, 5, 8, 9, 10, 11, 12, and 13</i>								
P/O A6 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
CR6218	7B	5D	P6010	8B	1D	R6019	8A	2D
CR6219	7B	5D	P6010	9A	1D	R6217	7B	5D
			P6015	8B	1D			
P4487	6B	5D	P6015	9A	1D	S6205	6A	4B
P4487	6M	5D				S6260	1A	4H
P6002	8A	1B	R6012	9A	1C			
<i>P/O A6 ASSY also shown on diagrams 8, 9, and 10</i>								
P/O A7 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C7052	9C	1G	CR7154	1E	1G	J7076	3L	1I
C7127	5J	2D	CR7184	4F	2J	J7077	2L	1I
C7158	8J	2H	CR7272	6I	3I	J7078	1L	1J
C7165	8J	2H	CR7277	6L	3I			
C7174	3H	2I	CR7281	3F	2J	L7278	5H	3J
C7182	3F	2J	CR7362	7I	4H			
C7187	2D	2K	CR7381	2C	3J	P7205	5K	3B
C7188	8M	2K	CR7382	2E	3J	P7052	8C	1G
C7192	3D	2K	CR7383	2C	3J			
C7196	7M	2K	CR7385	1D	3J	Q7053	1E	1G
C7197	8M	2K	CR7386	2E	4J	Q7055	1E	1G
C7247	7M	3G	CR7387	3F	4J	Q7067A	8E	1H
C7263	7I	2H	CR7449	4I	4G	Q7067B	8C	1H
C7265	6I	2H	CR7451	8K	4G	Q7074	8D	1I
C7273	6I	3I	CR7463	5C	4H	Q7075	8D	1I
C7286	8L	2K	CR7464	6C	4H	Q7076	9E	1I
C7288	8M	2K				Q7083	2F	1J
C7297	8M	2L				Q7092	1F	1K
C7303	8M	3A	J4541-1	1L	5I	Q7093	2D	1K
C7371	5I	3I	J4541-2	2C	5I	Q7095	2D	1K
C7376	6K	3I	J4541-3	5C	5I	Q7155	8J	2G
C7377	5H	3J	J4541-4	8N	5I	Q7174	3H	2I
C7447	5H	4F	J4541-5	3C	5I	Q7181	4E	1J
C7449	5I	4G	J4541-6	2C	5I	Q7182	4F	2J
C7453	5I	4G	J4541-7	7N	5I	Q7195	3D	1L
C7458	7K	5H	J4541-8	4C	5I	Q7254	4H	3G
C7461	7J	4H	J4541-9	1C	5I	Q7256	4H	3G
C7471	7H	4I	J4541-10	8N	5I	Q7460	7J	4H
C7507	9M	5B	J4541-11	8N	5I	Q7465	7L	4H
			J4541-13	9N	5I			
CR7072	9D	1I	J4571-1	4L	5F	R7049	1D	1G
CR7073	9E	1I	J4571-2	4C	5F	R7052	1E	1G
CR7078	2F	1J	J4571-3,4	6C	5F	R7056	1E	1G
CR7084	2G	1K	J4571-5	6C	5F	R7057	1E	1G
CR7085	2G	1K	J4571-6,7	7C	5F	R7062	8E	1H
CR7097	1G	1L	J4571-8	6L	5F	R7063	8C	1H
CR7098	1G	1L	J4571-9	7N	5F	R7064	7C	1H
CR7099	1F	1L	J4571-10	9N	5F	R7065	8E	1H
CR7149	9K	2G						

**TABLE (cont)**

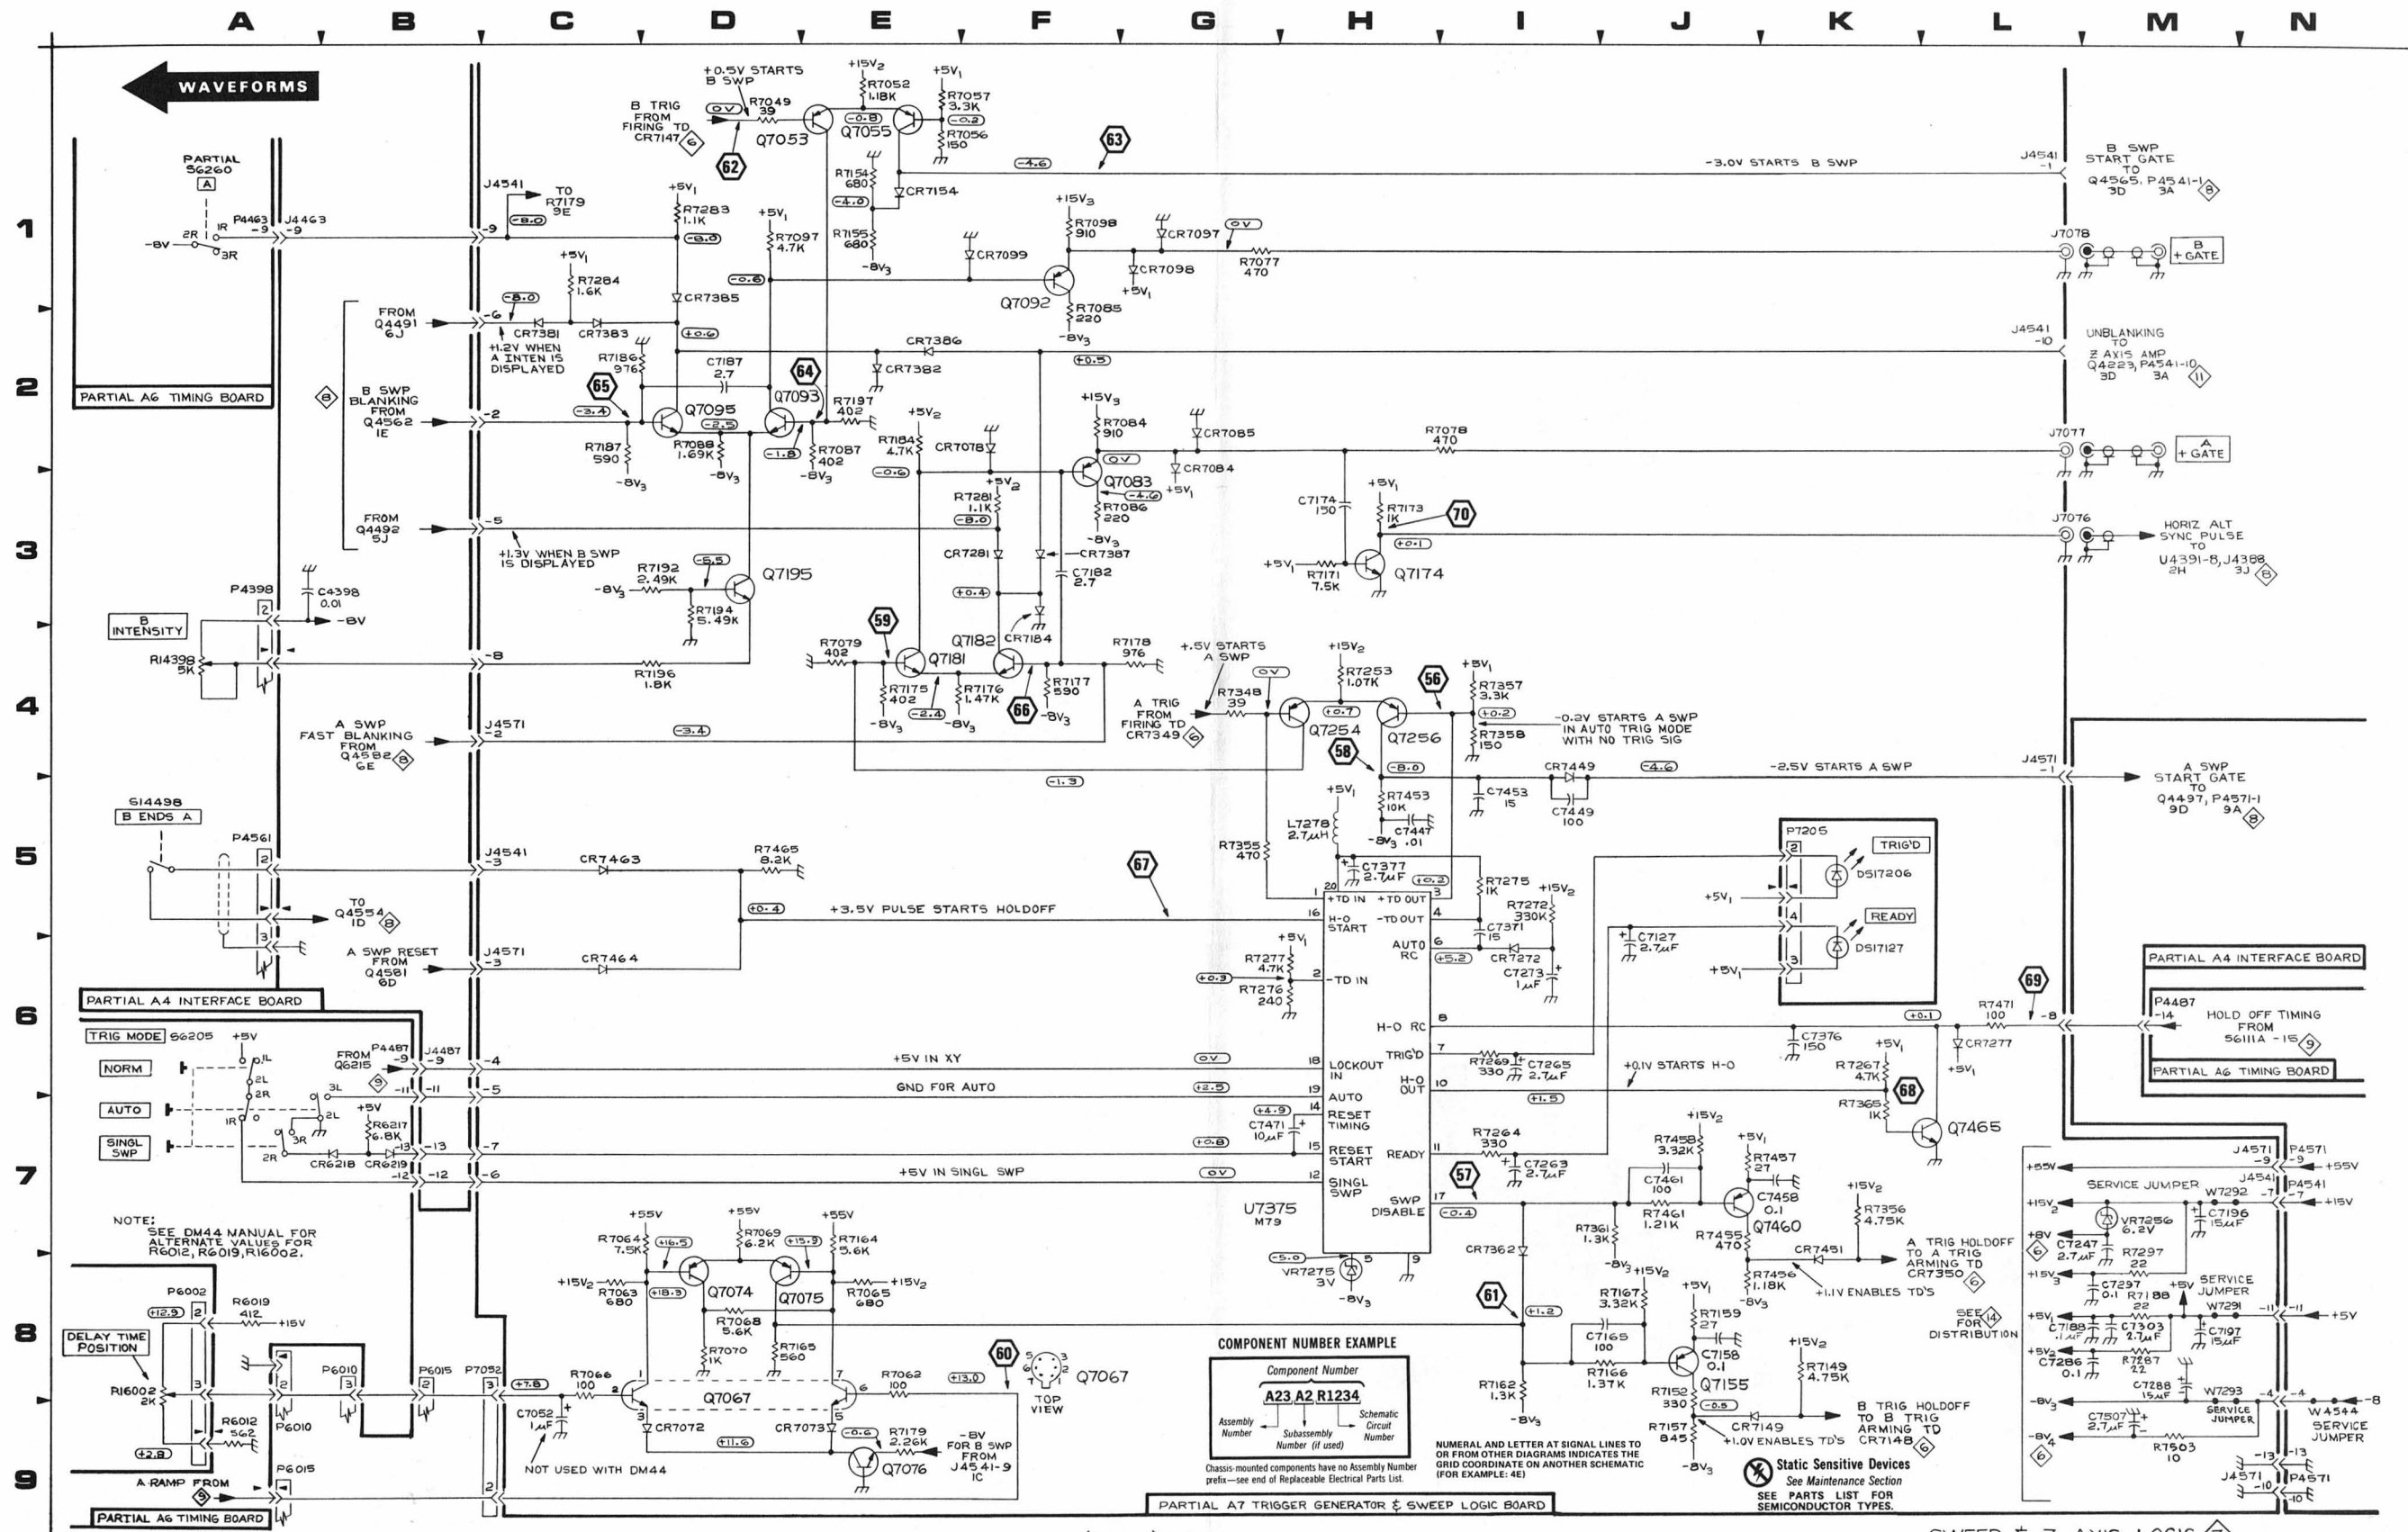

465B Service (SN B06000 & UP)

A4-BOARD COMPONENT LOCATIONS

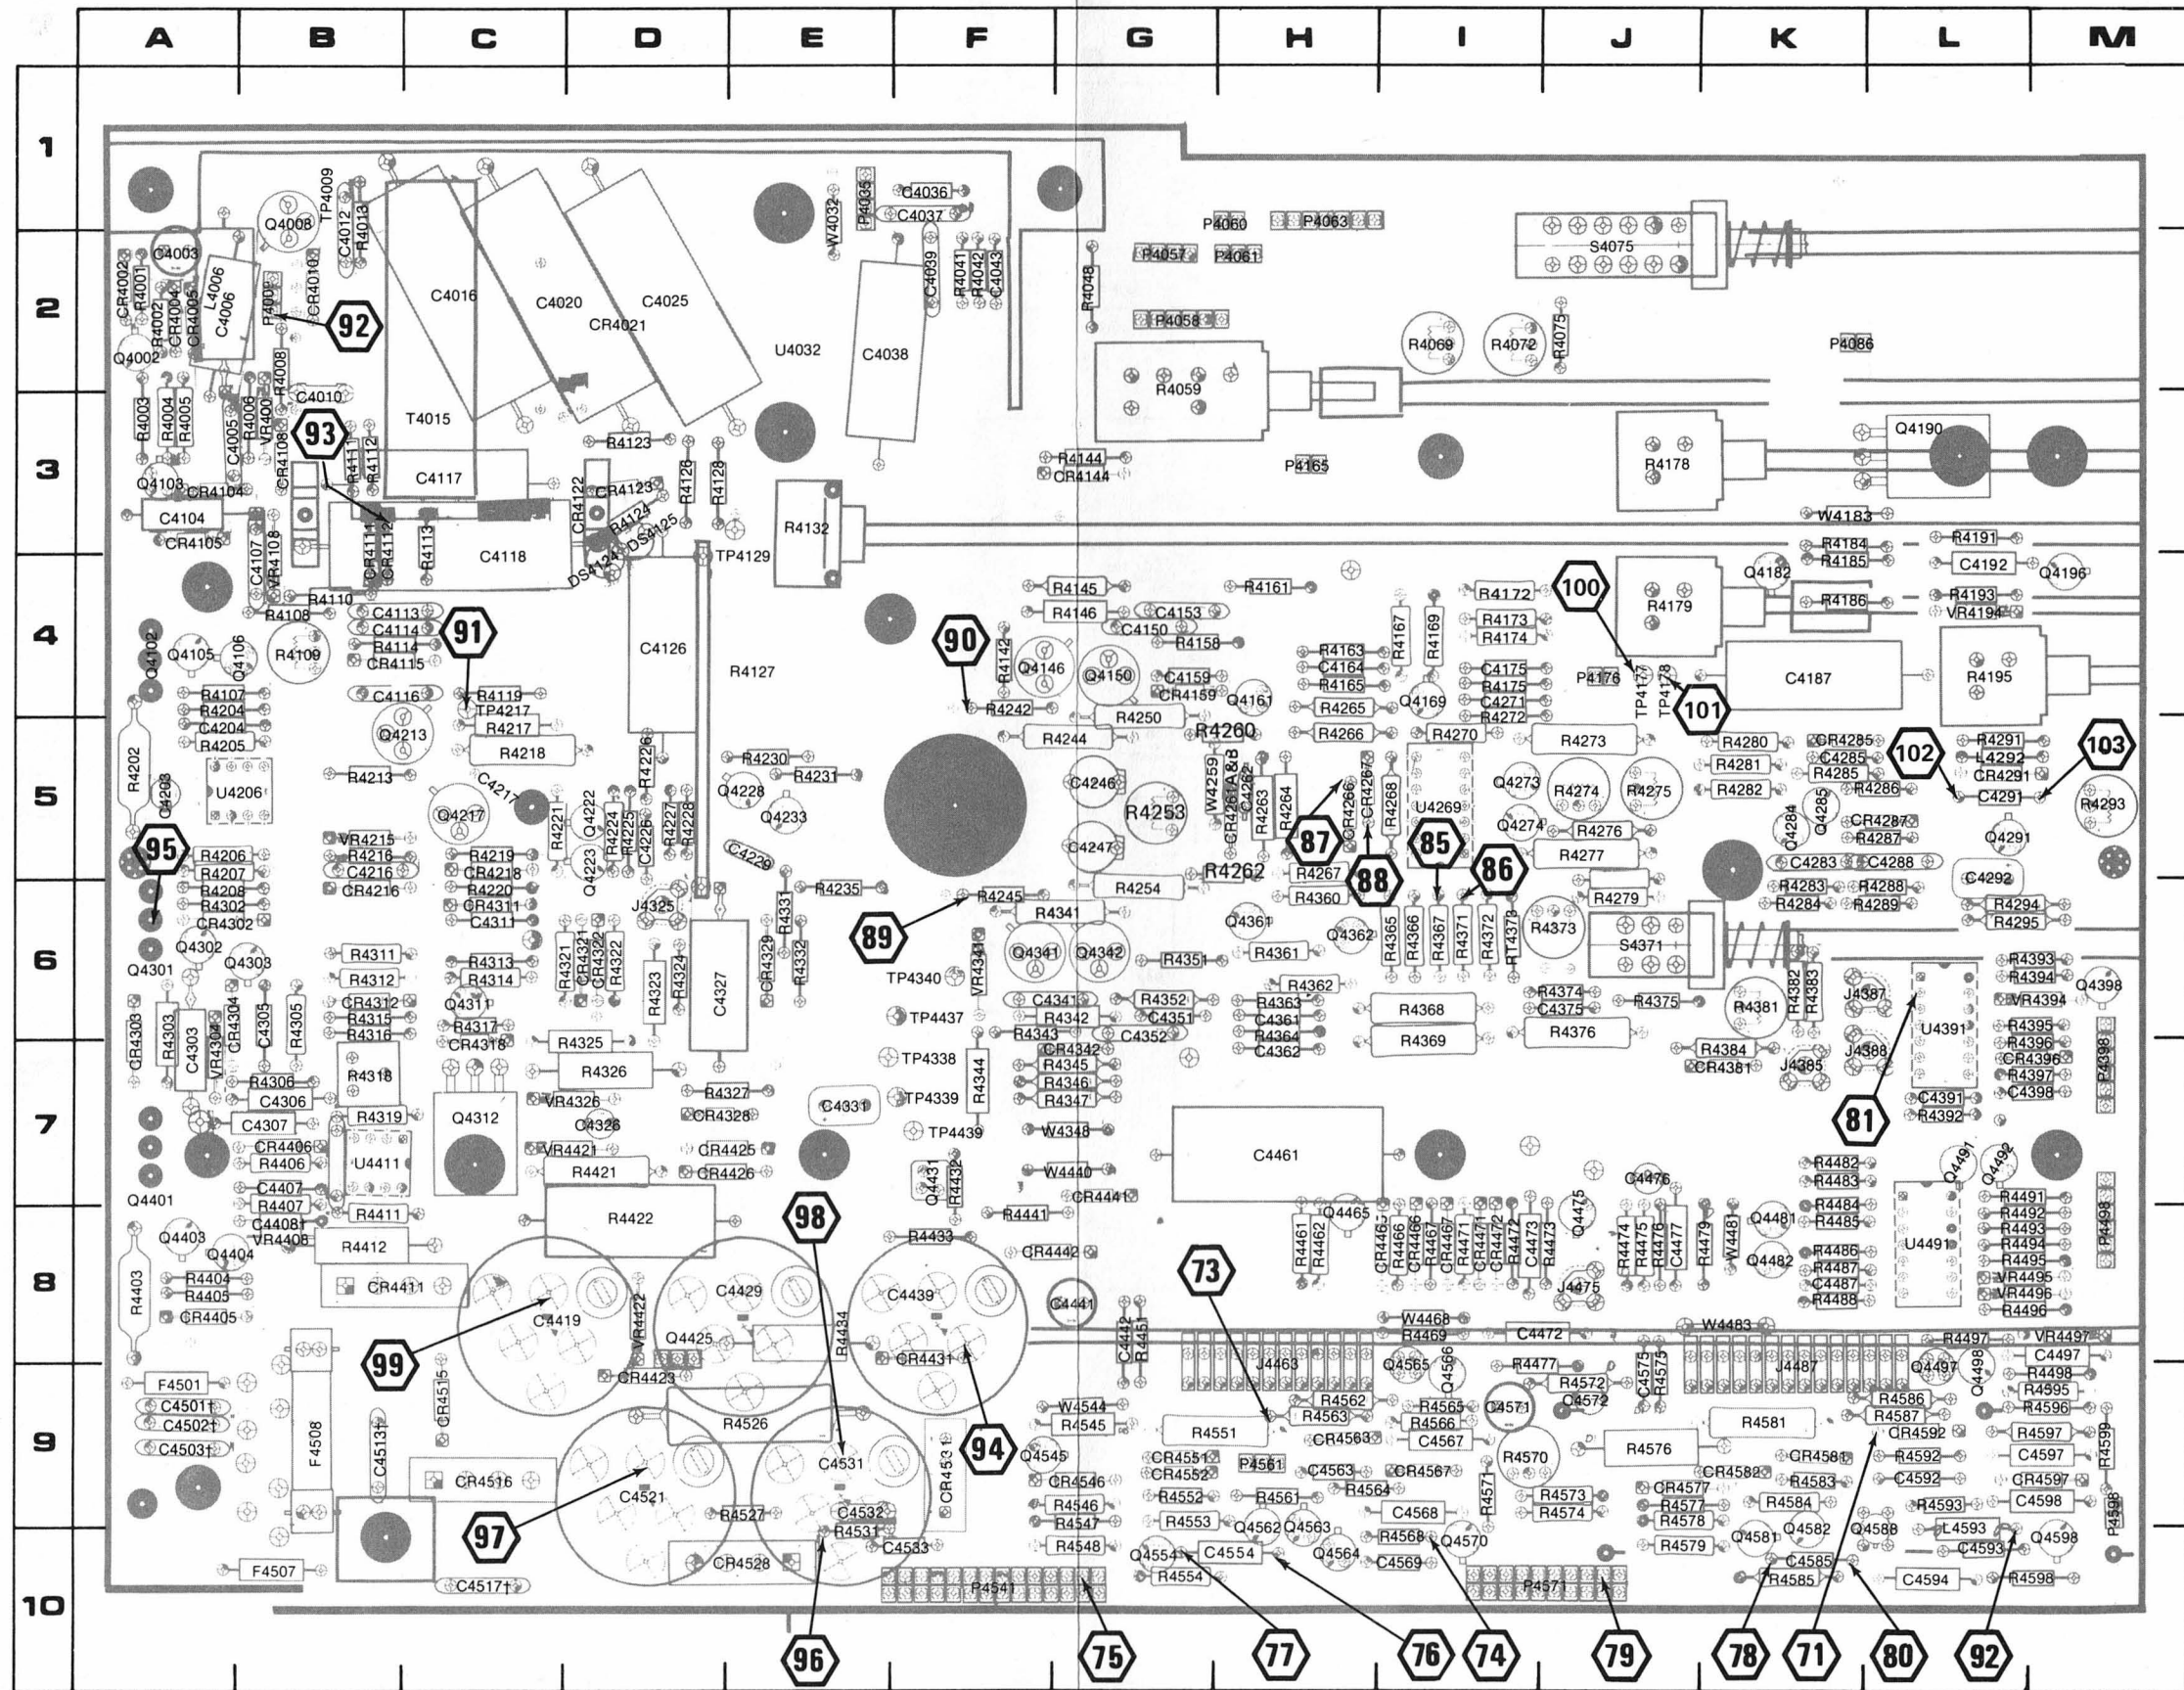


⊗ Static Sensitive  
See Maintenance

COMPONENT NUMBER

Component No.  
A23 A2 R1

Assembly Number      Subassembly Number (if used)

Chassis-mounted components have a prefix—see end of Replaceable E

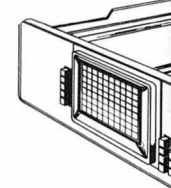

(2757-104)4273-23

†(USED WITH OPTION 04 OR OPTION 07 ONLY)

Figure 9-7. A4-Interface circuit board component locations.



### 465B CONTROL SETTINGS

#### DC Voltages

A TRIG MODE	NORM (sweep not running)
AC-GND-DC (both)	GND

#### AC Waveforms

A TRIG MODE	AUTO (no trigger signal)
B TRIGGER SOURCE	STARTS AFTER DELAY
HORIZ DISPLAY	A INTEN
DELAY TIME POSITION	5.00
A TIME/DIV	1 ms
B TIME/DIV	0.1 ms
AC-GND-DC (both)	GND

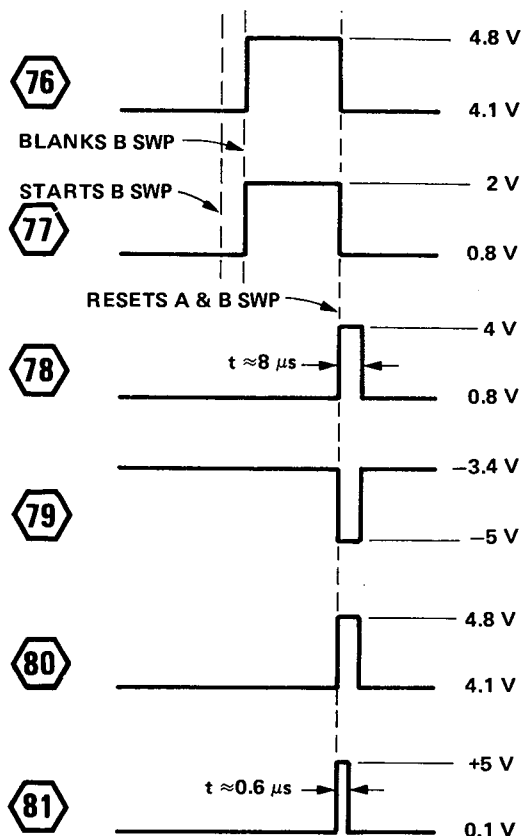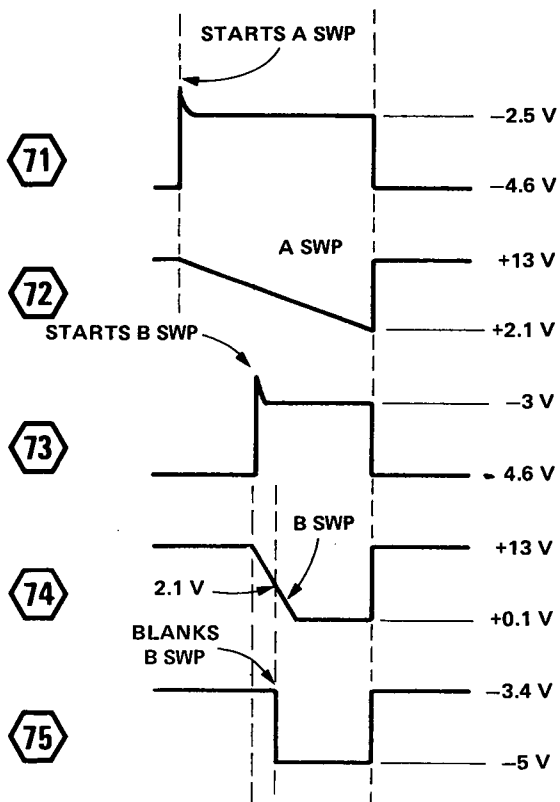


Sensitive Devices  
Maintenance Section

COMPONENT NUMBER EXAMPLE

Component Number
23 A2 R1234
Subassembly Number (if used)
Schematic Circuit Number

Components have no Assembly Number  
Replaceable Electrical Parts List

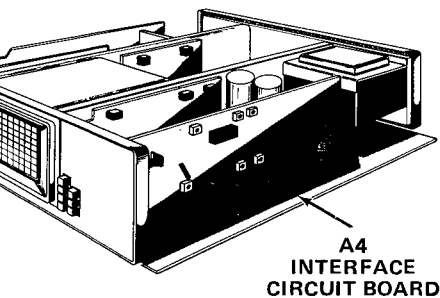



**HORIZONTAL DISPLAY LOGIC AND A & B SWEEP GENERATORS  
DIAGRAM** 8

<b>P/O A4 ASSY</b>								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C4391	4D	7L	P4571	6M	10I	R4498	8F	9M
C4441	4B	8G	P4571	9A	10J	R4545	1B	9G
C4442	1C	8G				R4546	1E	9G
C4442	1C	8G	Q4398	3I	6M	R4547	1C	10G
C4472	2F	7I	Q4465	2L	8H	R4548	1D	10G
C4473	5L	8I	Q4475	7K	8J	R4551	1G	9G
C4476	7K	7J	Q4481	5K	8K	R4552	1B	9G
C4477	7J	8J	Q4482	5K	8K	R4553	1D	10G
C4487	5J	8K	Q4491	6K	7L	R4554	1D	10G
C4497	8G	8M	Q4492	5K	7L	R4561	1C	9H
C4554	1E	10H	Q4497	9D	9L	R4562	3E	9H
C4563	1B	9H	Q4498	8F	9L	R4563	3C	9H
C4567	3D	9I	Q4545	1B	9F	R4563	3C	9H
C4568	2G	9I	Q4554	1D	10G	R4563	3C	9H
C4569	1E	10I	Q4562	1E	10H	R4564	1B	9H
C4571	1A	9I	Q4563	1B	10H	R4565	2E	9I
C4572	9C	9J	Q4564	1C	10H	R4566	3E	9I
C4575	6C	9J	Q4565	3D	9I	R4568	1G	10I
C4585	6E	10K	Q4566	2E	9I	R4570	1A	9I
C4592	7B	9L	Q4570	3G	10I	R4571	2F	9I
C4593	9A	10L	Q4581	6D	10K	R4571	2F	9I
C4594	1A	10L	Q4582	6E	10K	R4572	3E	9J
C4597	8D	9M	Q4588	7B	10L	R4573	1A	9J
C4598	8G	9M	Q4588A	7A	10L	R4574	1A	9J
			Q4588B	7C	10L	R4575	6B	9J
			Q4598	8G	10M	R4576	6B	9J
CR4396	3G	7L	R4392	5G	7L	R4577	6C	9J
CR4465	4L	8I	R4393	3I	6L	R4578	6E	9J
CR4466	4L	8I	R4394	3I	6L	R4579	6D	10K
CR4467	5L	8I	R4395	2H	6L	R4581	7G	9K
CR4471	5L	8I	R4396	3G	7L	R4583	6B	9K
CR4472	5L	8I	R4397	4H	7L	R4584	6D	9K
CR4546	1C	9G	R4451	1B	8G	R4585	6D	10K
CR4551	1B	9G	R4461	1K	8H	R4586	9E	9L
CR4552	1B	9G	R4462	1I	8H	R4587	9C	9L
CR4563	3D	9H	R4466	4M	8I	R4592	6C	9L
CR4567	2G	9I	R4467	5L	8I	R4593	7B	9L
CR4577	6C	9J	R4469	2E	8I	R4595	9F	9M
CR4581	6B	9K	R4471	5M	8I	R4596	8F	9M
CR4582	6B	9K	R4472	4L	8I	R4597	9E	9M
CR4592	9D	9L	R4473	5M	8J	R4598	9A	10M
CR4597	8G	9M	R4474	7K	8J	R4599	8G	9M
J4387	2J	6L	R4475	7J	8J	U4391	5D	6L
J4388	3G	7L	R4476	7J	8J	U4391B	4G	6L
J4463	2D	9H	R4477	2F	9I	U4391C	6I	6L
J4463	2E	9H	R4479	7K	8K	U4391D	2H	6L
J4463	2E	9H	R4482	4G	7K	U4491	4D	8L
J4463	4G	9H	R4483	5G	7K	U4491A	5H	8L
J4463	4M	9H	R4484	5G	8K	U4491B	6I	8L
J4463	5M	9H	R4485	4I	8K			
J4475	5M	8J	R4486	4I	8K	VR4394	3I	6L
J4487	3G	9K	R4487	5I	8K	VR4495	5I	8L
J4487	6E	9K	R4488	5H	8K	VR4496	6I	8L
J4487	7E	9K	R4491	6J	7L			
J4487	8D	9K	R4492	6J	8L			
J4541	1N	10F	R4493	5J	8L	W4348	4B	7G
L4593	7F	10L	R4494	5J	8L	W4440	4B	7G
P4541	1M	10F	R4495	5I	8L	W4544	5B	9G
P4541	3A	10F	R4496	6I	8L			
P4541	5L	10F	R4497	8F	8L			
P4561	1M	9H						

*P/O A4 ASSY also shown on diagrams 3, 4, 5, 7, 9, 10, 11, 12, and 13*


**P/O A6 ASSY**

CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
P4463	4G	5G	S6111A	7D	3C	S6260	4F	4H

*P/O A6 ASSY also shown on diagrams 7, 9, and 10*

**CHASSIS MOUNTED PARTS**

R14499      3K      CHASSIS

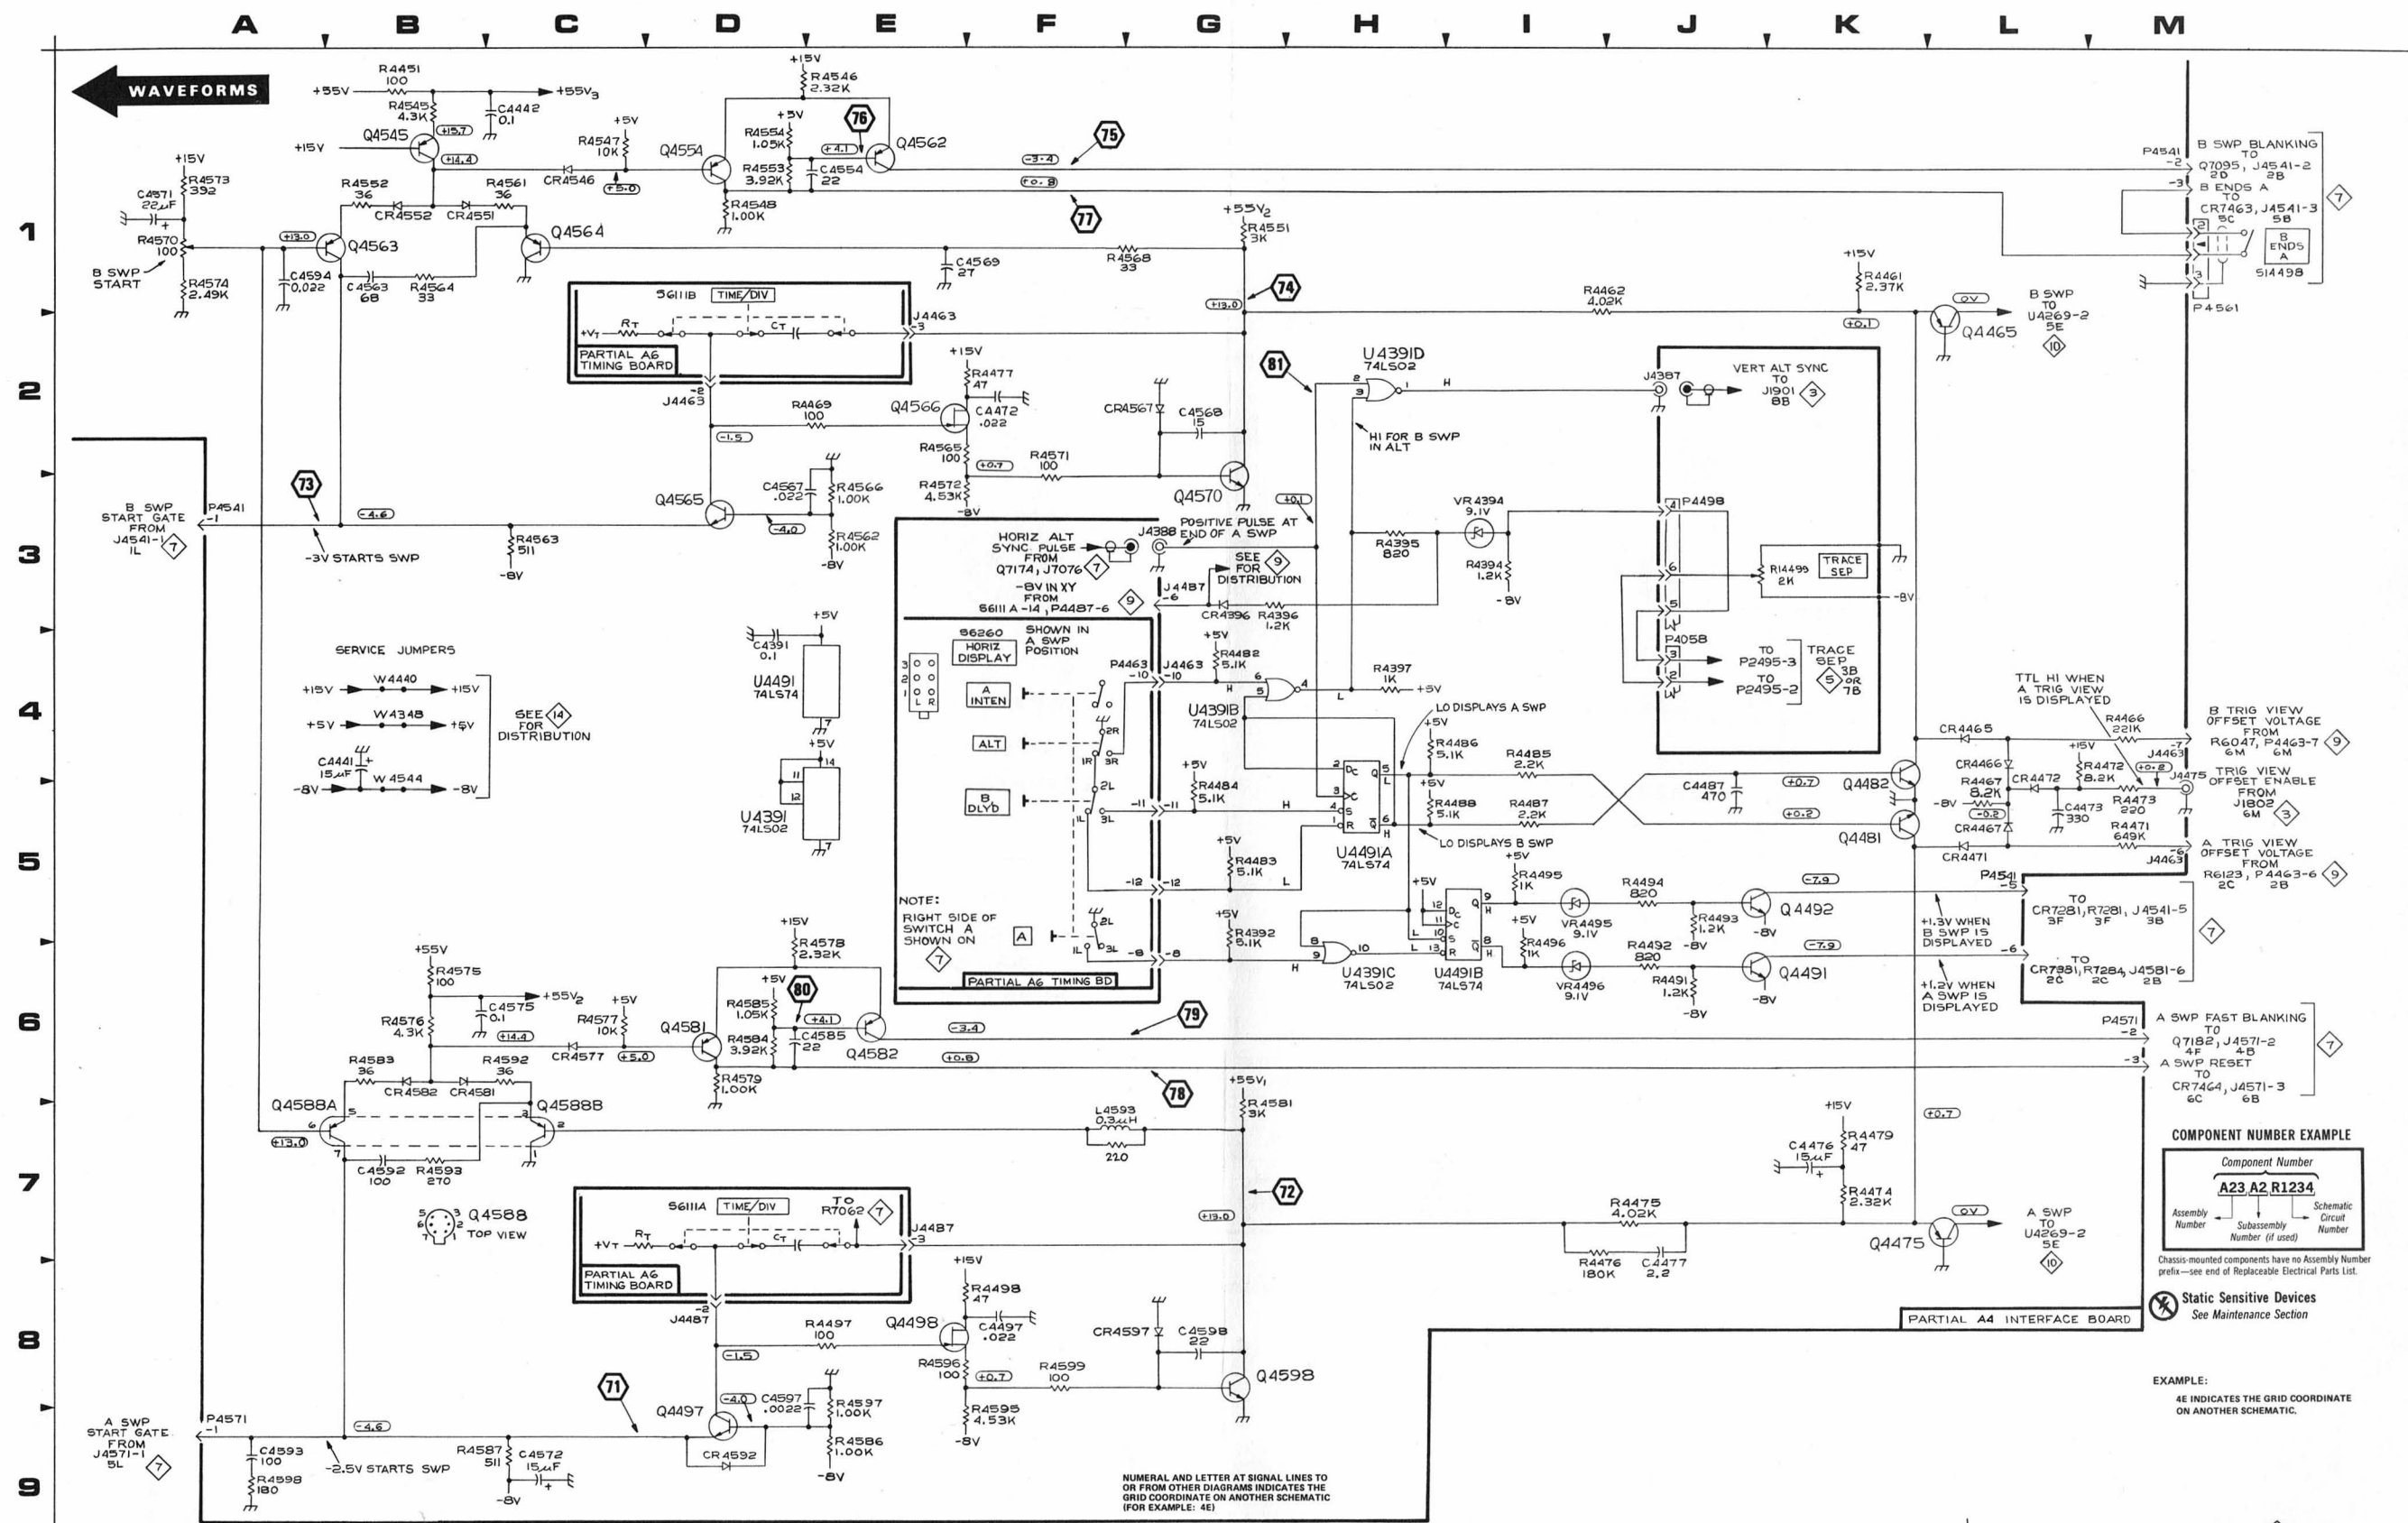

WAVEFORMS

 
465B OSCILLOSCOPE (5N B060000 1/2 UP)

(2157-32) 4273-25

HORIZONTAL DISPLAY LOGIC AND A & B SWEEP GENERATORS

HORIZ DISPLAY LOGIC & A & B SWEEP GEN

COMPONENT NUMBER EXAMPLE



Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

Static Sensitive Devices See Maintenance Section

EXAMPLE: 4E INDICATES THE GRID COORDINATE ON ANOTHER SCHEMATIC.

NUMERAL AND LETTER AT SIGNAL LINES TO OR FROM OTHER DIAGRAMS INDICATES THE GRID COORDINATE ON ANOTHER SCHEMATIC (FOR EXAMPLE: 4E)

A6-BOARD COMPONENT LOCATIONS


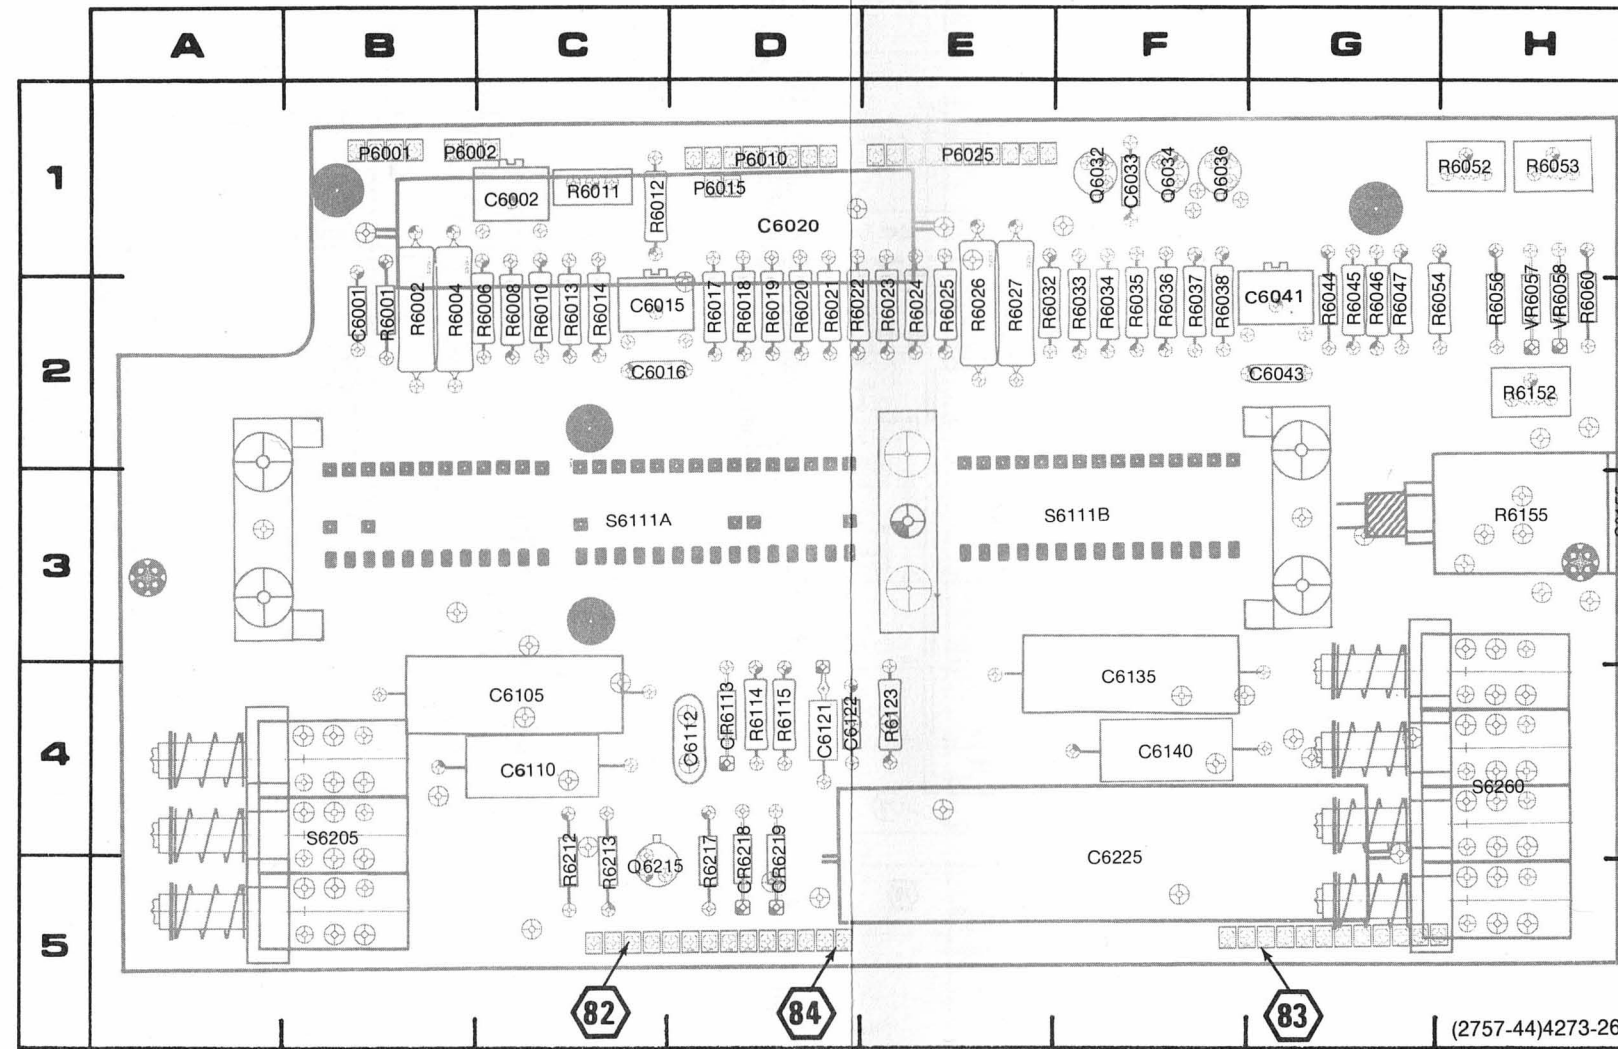



Figure 9-8. A6-Timing circuit board component locations.

Static Sensitive Devices  
See Maintenance Section

COMPONENT NUMBER EXAMPLE

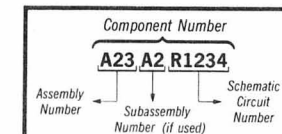

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

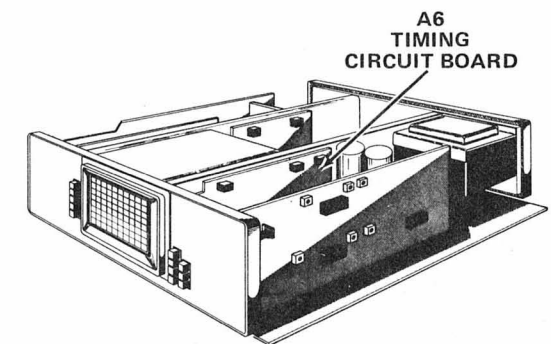


### 465B CONTROL SETTINGS

#### DC Voltages

A TIME/DIV	X-Y
AC-GND-DC (both)	GND

#### AC Waveforms


A TRIG MODE	AUTO (no trigger signal)
B TRIGGER SOURCE	STARTS AFTER DELAY
HORIZ DISPLAY	A INTEN
DELAY TIME POSITION	5.00
A TIME/DIV	1 ms
B TIME/DIV	0.1 ms
AC-GND-DC (both)	GND

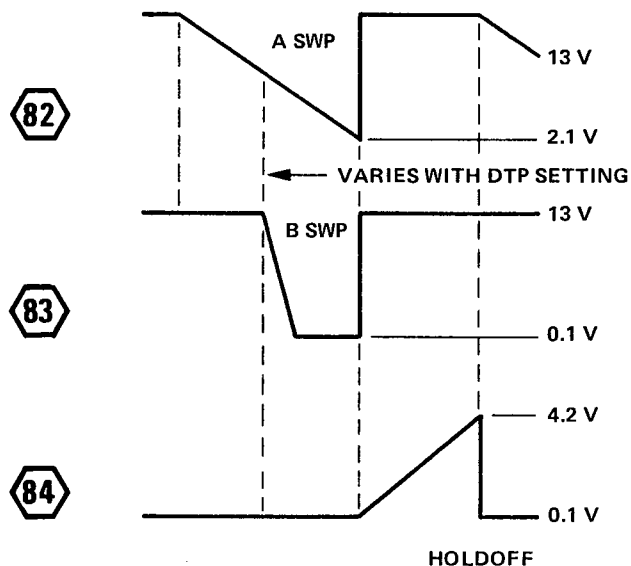

(2757-105)4273-27

## A & B TIMING SWITCH DIAGRAM

P/O A4 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
P4498	2G	8M	W4468	1A	8I	W4544	1A	9G
VR4497	3G	8M	W4481	1A	8K			
			W4483	1A	8K			
<i>P/O A4 ASSY also shown on diagrams 3, 4, 5, 7, 8, 10, 11, 12, and 13</i>								
P/O A6 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C6001	5B	2B	Q6034	1F	1F	R6035	2J	2F
C6002	3C	1C	Q6036	1I	1F	R6036	2I	2F
C6015	5B	2C	Q6215	6B	5C	R6037	3I	2F
C6016	5B	2C				R6038	3I	2F
C6020	4B	2D	R6001	5B	2B	R6044	3I	2G
C6033	2E	1F	R6002	4D	2B	R6045	6M	2G
C6041	2L	2G	R6004	4D	2B	R6046	6M	2G
C6043	2L	2G	R6006	4D	2C	R6047	6M	2G
C6105	4B	4C	R6008	5D	2C	R6052	1H	1H
C6110	4C	4C	R6010	5D	2C	R6053	1G	1H
C6112	4F	4D	R6011	2D	1C	R6054	7M	2H
C6121	5F	4D	R6013	5E	2C	R6056	2H	2H
C6122	5F	4D	R6014	6E	2C	R6060	1F	2H
C6135	2L	4F	R6017	6E	2D	R6114	3F	4D
C6140	1K	4F	R6018	6E	2D	R6115	3F	3H
C6225	2L	5F	R6020	3C	2D	R6123	2C	4E
			R6021	2D	2D	R6152	5M	2H
CR6113	3F	4D	R6022	2D	2D	R6155	2F	3H
			R6023	4I	2E	R6212	7B	5C
P4463	1B	5G	R6024	4I	2E	R6213	7B	5C
P448	1B	5D	R6025	3I	2E			
P6001	1E	1B	R6026	2J	2E	S6111B	7G	3C
P6010	5M	1D	R6027	1I	2E	S6155	1F	3H
P6025	3M	1E	R6032	2J	2E			
			R6033	2J	2F	VR6057	1H	2H
Q6032	2E	1F	R6034	2J	2F	VR6058	1H	2H
<i>P/O A6 ASSY also shown on diagrams 7, 8, and 10</i>								
CHASSIS MOUNTED PARTS								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
CR14498	3H	CHASSIS	R14498	2H	CHASSIS			
DS16002	1E	CHASSIS	S14498	3H	CHASSIS			

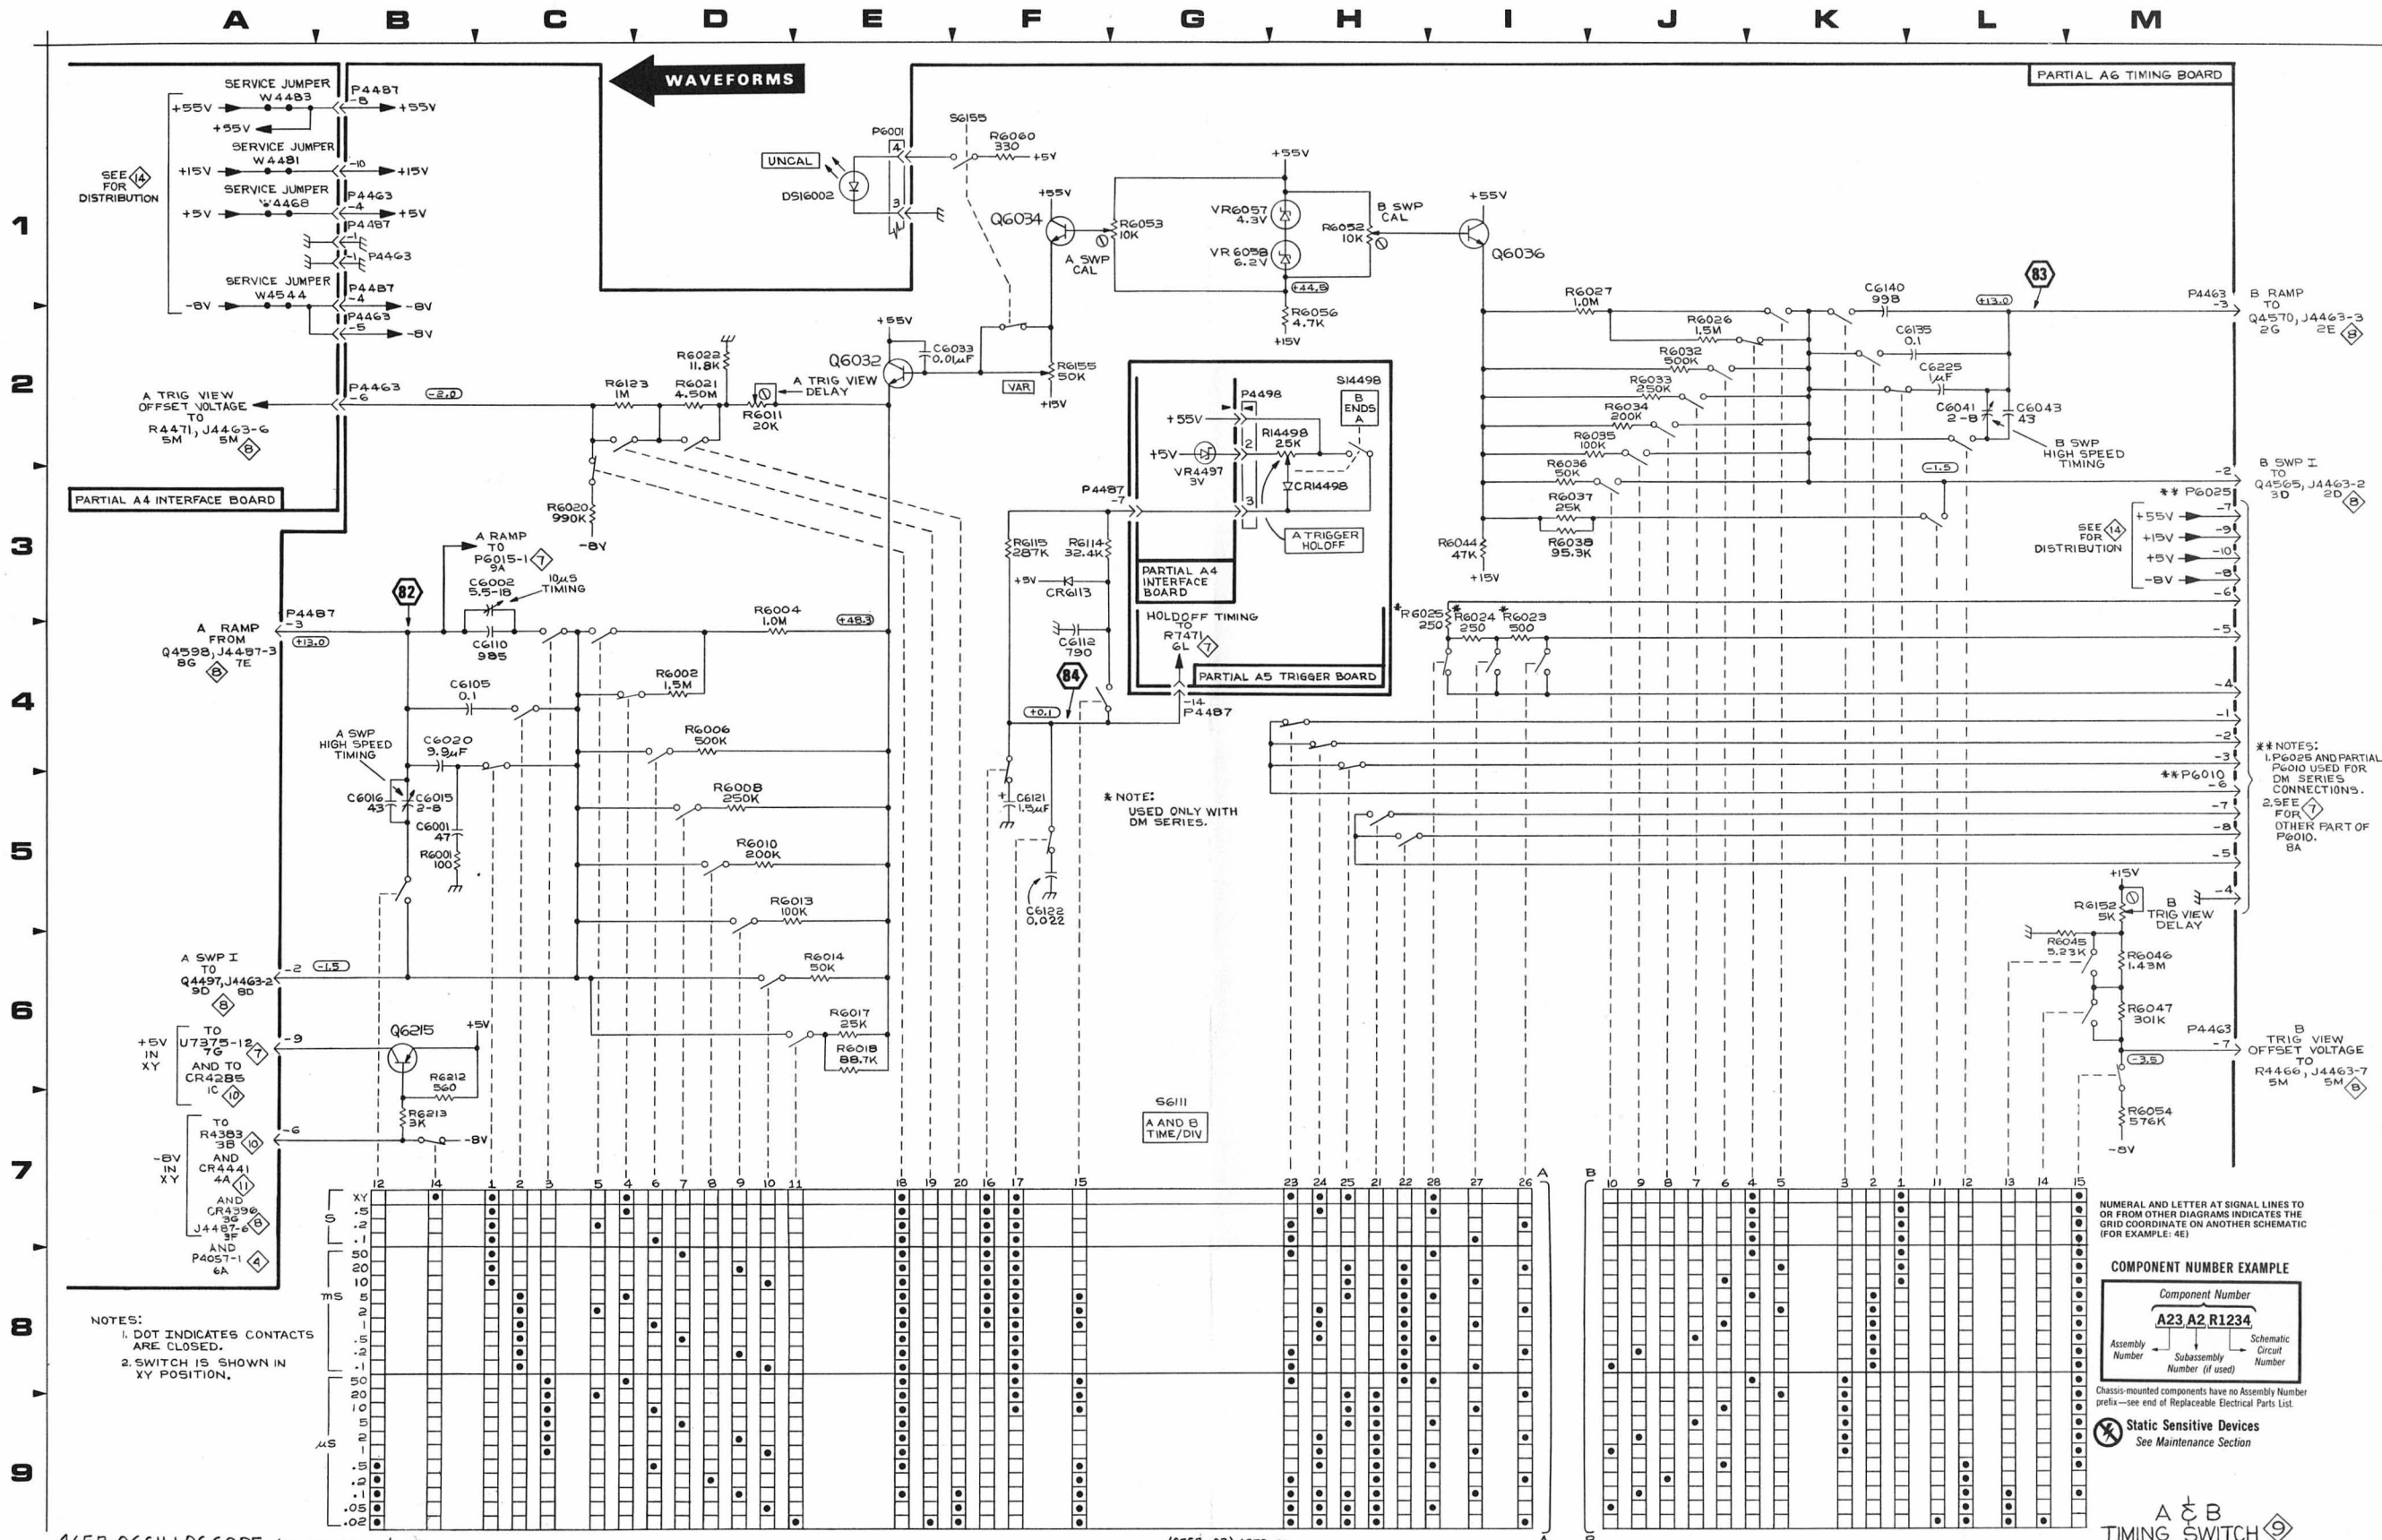


465B OSCILLOSCOPE (SN B060000 (UP))

(2157-83) 4273-28

- NOTES:
1. DOT INDICATES CONTACTS ARE CLOSED.
  2. SWITCH IS SHOWN IN XY POSITION.

NUMERAL AND LETTER AT SIGNAL LINES TO OR FROM OTHER DIAGRAMS INDICATES THE GRID COORDINATE ON ANOTHER SCHEMATIC (FOR EXAMPLE: 4E)

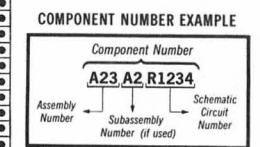

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

⊗ Static Sensitive Devices  
See Maintenance Section

A & B  
TIMING SWITCH

- \*\* NOTES:
1. P6025 AND PARTIAL P6010 USED FOR DM SERIES CONNECTIONS.
  2. SEE FOR OTHER PART OF P6010, BA.

A & B TIMING SWITCH

465B Service (SN B060000 & UP)

### 465B CONTROL SETTINGS


#### DC Voltages

A TIME/DIV	X-Y
CH 2 POSITION	Beam centered
Horizontal POSITION	Beam centered
AC-GND-DC (both)	GND

#### AC Waveforms

A TRIG MODE	AUTO (no trigger signal)
HORIZ DISPLAY	A
A TIME/DIV	1 ms
Horizontal POSITION	Trace centered
AC-GND-DC (both)	GND

WAVEFORMS FOR DIAGRAM 10

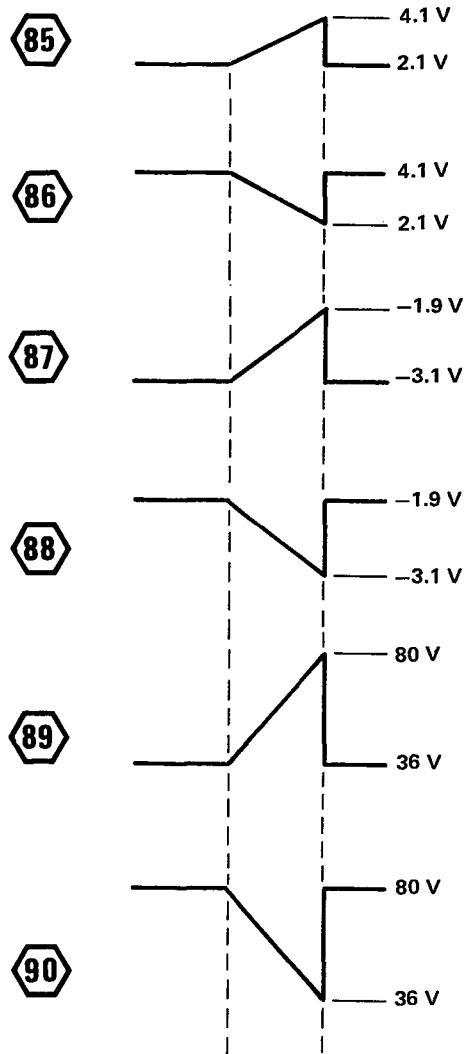

## HORIZONTAL AMPLIFIER

## DIAGRAM



P/O A4 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C4150	1L	4G	Q4342	8L	6G	R4288	6B	6L
C4153	1L	4G	Q4361	6K	6H	R4289	6B	6L
C4159	2L	4G	Q4362	7J	6H	R4341	7K	6G
C4164	1J	4H				R4342	7L	6G
C4175	2F	4I	R4075	5H	2J	R4343	7L	6F
C4246	1K	5G	R4142	1M	4F	R4344	4L	7F
C4247	7K	5G	R4145	1L	4G	R4345	8M	7G
C4262	4K	5H	R4146	1K	4G	R4346	6L	7G
C4271	6F	4I	R4158	1L	4G	R4347	4D	7G
C4283	7B	5K	R4161	1K	4H	R4351	8K	6G
C4285	1C	5K	R4163	1J	4H	R4352	8M	6G
C4288	6B	5L	R4165	2J	4H	R4360	6I	6H
C4341	7L	6G	R4167	2I	4I	R4361	5I	6H
C4351	8L	6G	R4169	1J	4I	R4362	7J	6H
C4352	7L	6G	R4172	4H	4I	R4363	6J	6H
C4361	6J	6H	R4173	1G	4I	R4364	7J	6H
C4362	4I	7H	R4174	6G	4I	R4365	3D	6I
C4375	1D	6J	R4175	2F	4I	R4366	3D	6I
C4461	3D	7H	R4242	1M	4F	R4367	6D	6I
			R4244	1K	5G	R4368	1E	6I
CR4159	2L	4G	R4245	7M	6F	R4369	6E	7I
CR4261A	6L	5H	R4250	1K	5G	R4371	2B	6I
CR4261B	6L	5H	R4253	4K	5G	R4372	4D	6I
CR4266	3G	5H	R4254	6K	6G	R4373	3F	6J
CR4267	3H	5H	R4260	2K	5H	R4374	2D	6J
			R4262	5K	5H	R4375	7G	6J
CR4285	2C	5K	R4263	6K	5H	R4376	1E	6J
CR4287	3B	5L	R4265	2I	4H	R4381	2B	6K
CR4342	8M	7G	R4266	2H	5H	R4382	2B	6K
CR4381	2A	7K	R4267	6H	5H	R4383	3B	6K
			R4268	3H	5I	R4384	2B	7K
J4385	2A	7K	R4270	4H	5I			
J4487	3A	9K	R4272	6F	5I	RT4373	2D	6J
			R4273	3E	5J	S4075	5H	2J
P4398	6A	7M	R4274	3F	5J	S4371	8F	6J
P4571	1D	10I	R4275	4E	5J			
			R4276	4F	5J	U4269A	5D	5I
Q4146	1L	4F	R4277	5E	5J	U4269B	2D	5I
Q4150	1L	4G	R4279	4F	6J	U4269C	6G	5I
Q4161	2K	4H	R4280	2C	5K	U4269D	2G	5I
Q4169	1J	4I	R4281	2C	5K	U4269E	4H	5I
Q4273	2E	5I	R4282	1D	5K			
Q4274	6E	5I	R4283	6C	6K	VR4341	3L	6F
Q4284	2C	5K	R4284	6C	6K			
Q4285	3C	5K	R4285	2B	5K	W4259	2K	5G
Q4341	7L	6F	R4286	1C	5L	W4348	4B	7G
			R4287	3B	5L	W4440	4B	7G
						W4544	5B	9G

*P/O A4 ASSY also shown on diagrams 3, 4, 5, 7, 8, 9, 11, 12, and 13*

P/O A6 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
P4487	7D	5D	P6001	7C	1B			

*P/O A6 ASSY also shown on diagrams 7, 8, and 9*


CHASSIS MOUNTED PARTS								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
DS16001	8C	CHASSIS	R14288A	6A	CHASSIS	R14288B	6A	CHASSIS



A B C D E F G H I J K L M

← WAVEFORMS

1  
2  
3  
4  
5  
6  
7  
8  
9

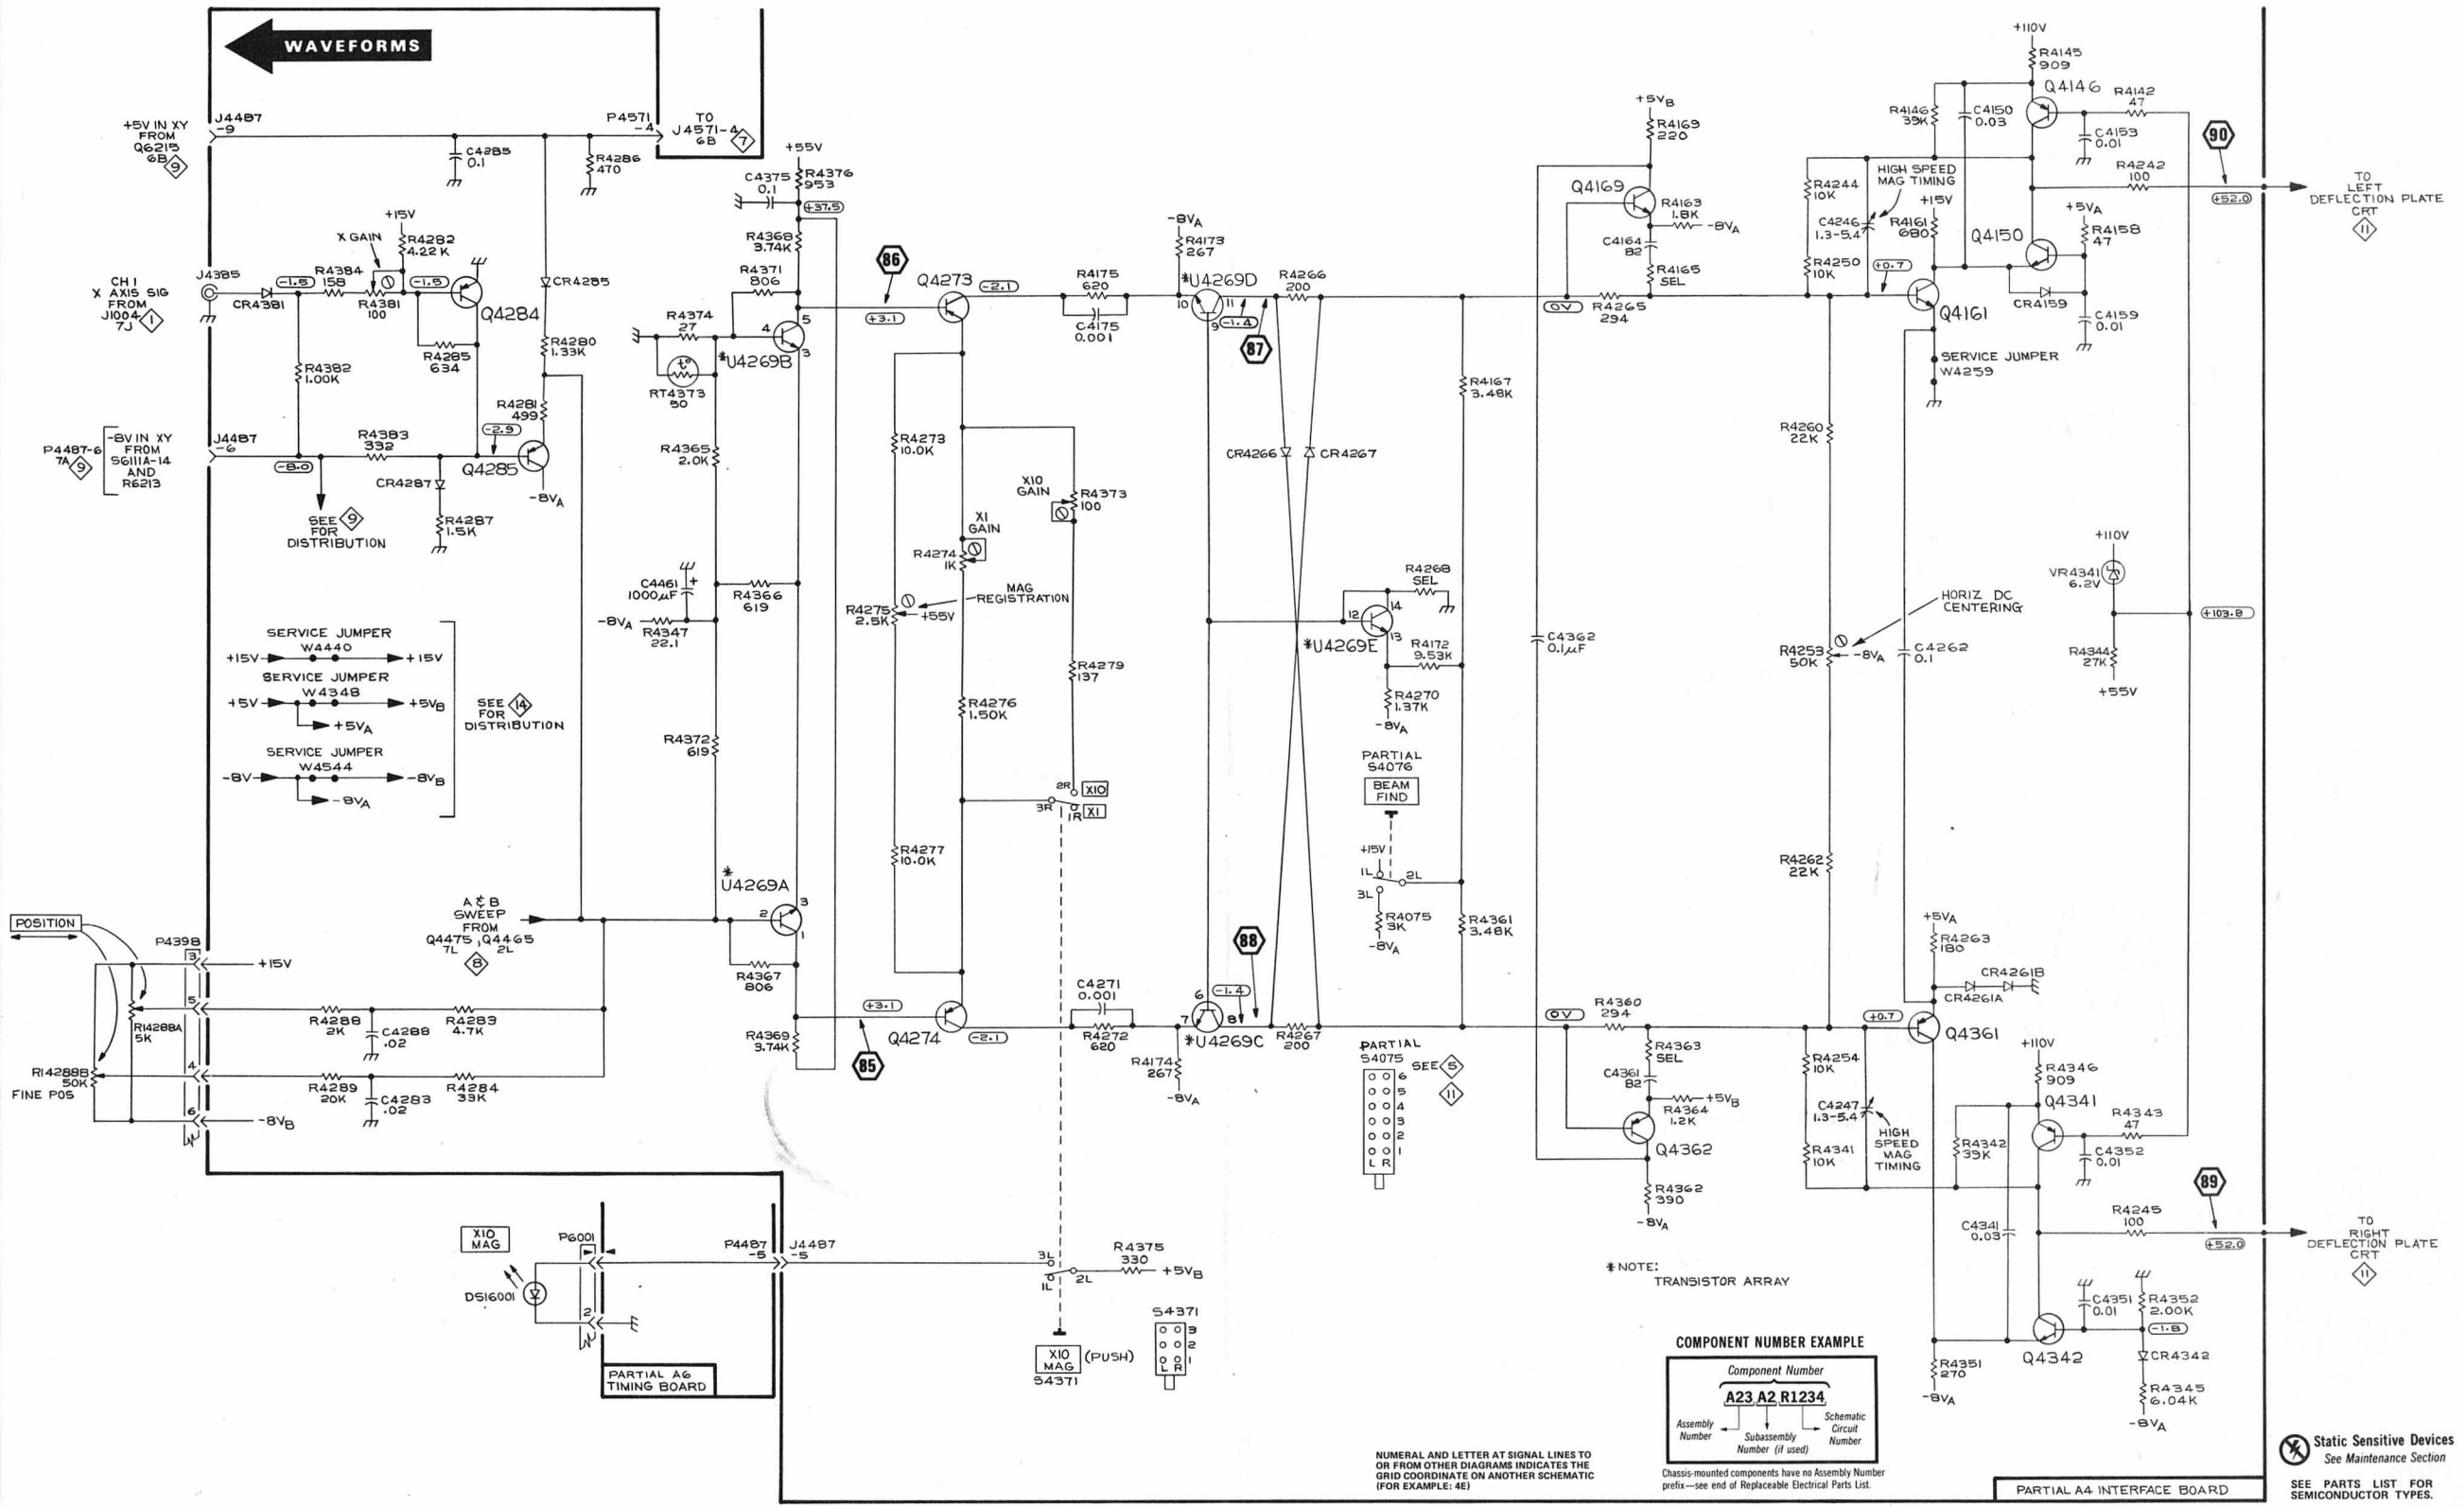

465B OSCILLOSCOPE (5N060000 & UP)

(2757-64) 4273-30

NUMERAL AND LETTER AT SIGNAL LINES TO OR FROM OTHER DIAGRAMS INDICATES THE GRID COORDINATE ON ANOTHER SCHEMATIC (FOR EXAMPLE: 4E)

NOTE: TRANSISTOR ARRAY

COMPONENT NUMBER EXAMPLE

Component Number		
A23	A2	R1234
Assembly Number	Subassembly Number (if used)	Schematic Circuit Number

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

Static Sensitive Devices See Maintenance Section  
SEE PARTS LIST FOR SEMICONDUCTOR TYPES.

PARTIAL A4 INTERFACE BOARD  
HORIZONTAL AMPLIFIER

HORIZONTAL AMPLIFIER




### 465B CONTROL SETTINGS

#### DC Voltages

A TRIG MODE	NORM (sweep not running)
AC-GND-DC (both)	GND

#### AC Waveforms

A TRIG MODE	AUTO (no trigger signal)
HORIZ DISPLAY	A
A TIME/DIV	1 ms
AC-GND-DC (both)	GND

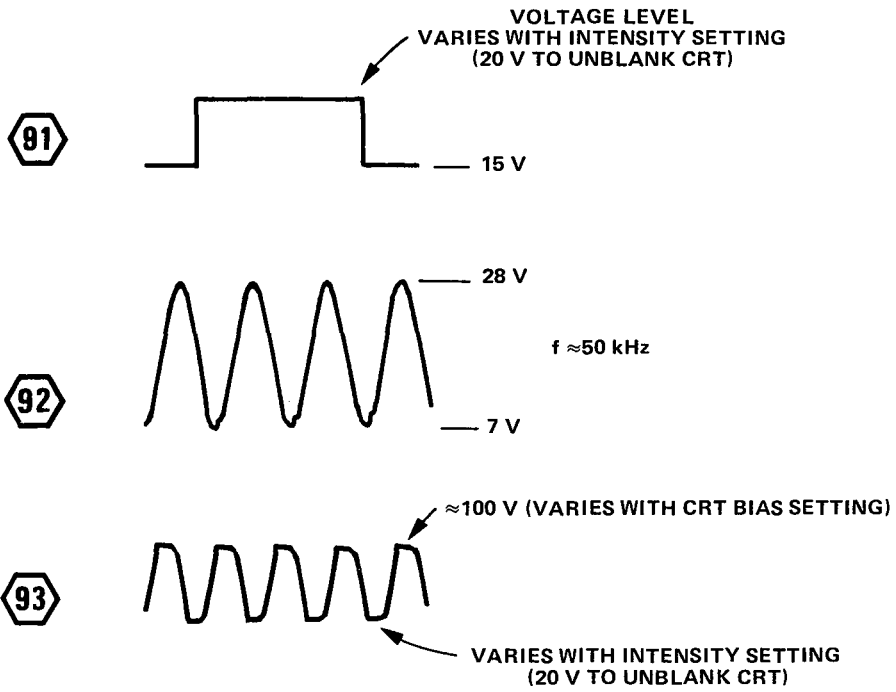

(2757-107)4273-31


## CRT CIRCUIT DIAGRAM

11

P/O A4 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C4003	7D	2A	DS4124	5J	4D	R4127A	5J	4E
C4005	4H	3A	DS4125	6J	3D	R4127B	4J	4F
C4006	5F	2A				R4127C	5C	4E
C4010	4I	2B	F4508	5F	9B	R4127D	6C	4F
C4012	6F	2B				R4128	6J	3D
C4016	6H	2C	J4325	5A	6D	R4132	5J	3E
C4020	6H	2C				R4144	2B	3G
C4025	6J	2D	L4006	5F	2A	R4178	5M	3J
C4036	5M	1F				R4179	2M	4J
C4037	3M	1F	P4009	7F	2B	R4213	1E	5B
C4038	5J	2E	P4035	5M	1E	R4216	2E	5B
C4039	5M	2F	P4165	4M	3H	R4217	2G	5C
C4043	4M	2F	P4176	2M	4J	R4218	4F	3D
C4104	3H	3A	P4541	3A	10F	R4219	3F	5C
C4107	3H	4B				R4220	3E	6C
C4113	2E	4B	Q4002	6D	2A	R4221	4E	5C
C4114	1F	4B	Q4008	5E	1B	R4224	2D	5D
C4116	1G	4B	Q4103	6E	3A	R4225	3E	5D
C4117	3I	3C	Q4213	2F	5B	R4226	8C	5D
C4118	2I	3C	Q4217	3F	5C	R4227	8B	5D
C4126	7J	4D	Q4222	3E	5D	R4228	5C	5D
C4216	2F	5B	Q4223	3D	5D	R4230	3C	5E
C4217	4F	5C	Q4228	5C	5E	R4231	4E	5E
C4226	6B	5D	Q4233	5D	5E	R4235	5D	6E
C4229	5C	5E				R4313	3F	6C
C4311	3G	6C	R4001	5D	2A	R4314	4D	6C
C4327	4C	6D	R4002	5E	2A	R4321	3D	6D
			R4003	6D	3A	R4322	2D	6D
CR4002	5D	2A	R4004	5D	3A	R4323	5B	6D
CR4004	5F	2A	R4005	6D	3A	R4324	5E	6D
CR4005	7E	2A	R4006	4H	2B	R4327	3D	7D
CR4010	5E	2B	R4008	5H	2B	R4331	4E	6E
CR4021	7G	2D	R4013	6E	2B	R4331	5C	6E
CR4104	6E	3A	R4041	5M	2F	R4332	4C	6E
CR4108	5H	3B	R4042	4N	2F	R4441	4B	8F
CR4111	3I	3B	R4048	4N	2G	S4075	1D	2J
CR4112	2I	3B	R4059A	2B	2G	T4015	6F	3C
CR4115	1F	4B	R4059B	4J	2G			
CR4122	3J	3D	R4069	3M	2I	TP4009	6F	1B
CR4123	3J	3D	R4072	4M	2I	TP4129	6K	3E
CR4144	2C	3G	R4108	3H	4B	TP4217	2I	4C
CR4216	1G	6B	R4109	3G	4B			
CR4218	3F	5C	R4110	3H	4B	U4032	1I	2E
CR4311	2H	6C	R4111	3I	3B			
CR4321	3E	6D	R4112	3I	3B	VR4007	4I	3B
CR4322	3B	6D	R4113	2I	3C	VR4108	3H	2B
CR4328	1E	7D	R4114	1G	4B	VR4215	1E	5B
CR4329	4C	6E	R4119	2I	4C			
CR4441	4B	7G	R4123	7H	3D	W4032	1I	1E
CR4442	3B	8G	R4124	3J	3D			
			R4126	4I	3D			
<i>P/O A4 ASSY also shown on diagrams 3, 4, 5, 7, 8, 9, 10, 12, and 13</i>								
CHASSIS MOUNTED PARTS								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
L14165	4L	CHASSIS	R4059A	2B	CHASSIS	S4075	1C	CHASSIS
L14176	2L	CHASSIS	R4059B	4J	CHASSIS	S6111A	4A	CHASSIS
			R4132	5J	CHASSIS			
P14325	5A	CHASSIS	R4178	4M	CHASSIS	V14000	2L	CHASSIS
			R4179	2M	CHASSIS			
Q14009	8F	CHASSIS						

A B C D E F G H I J K L M N

WAVEFORMS

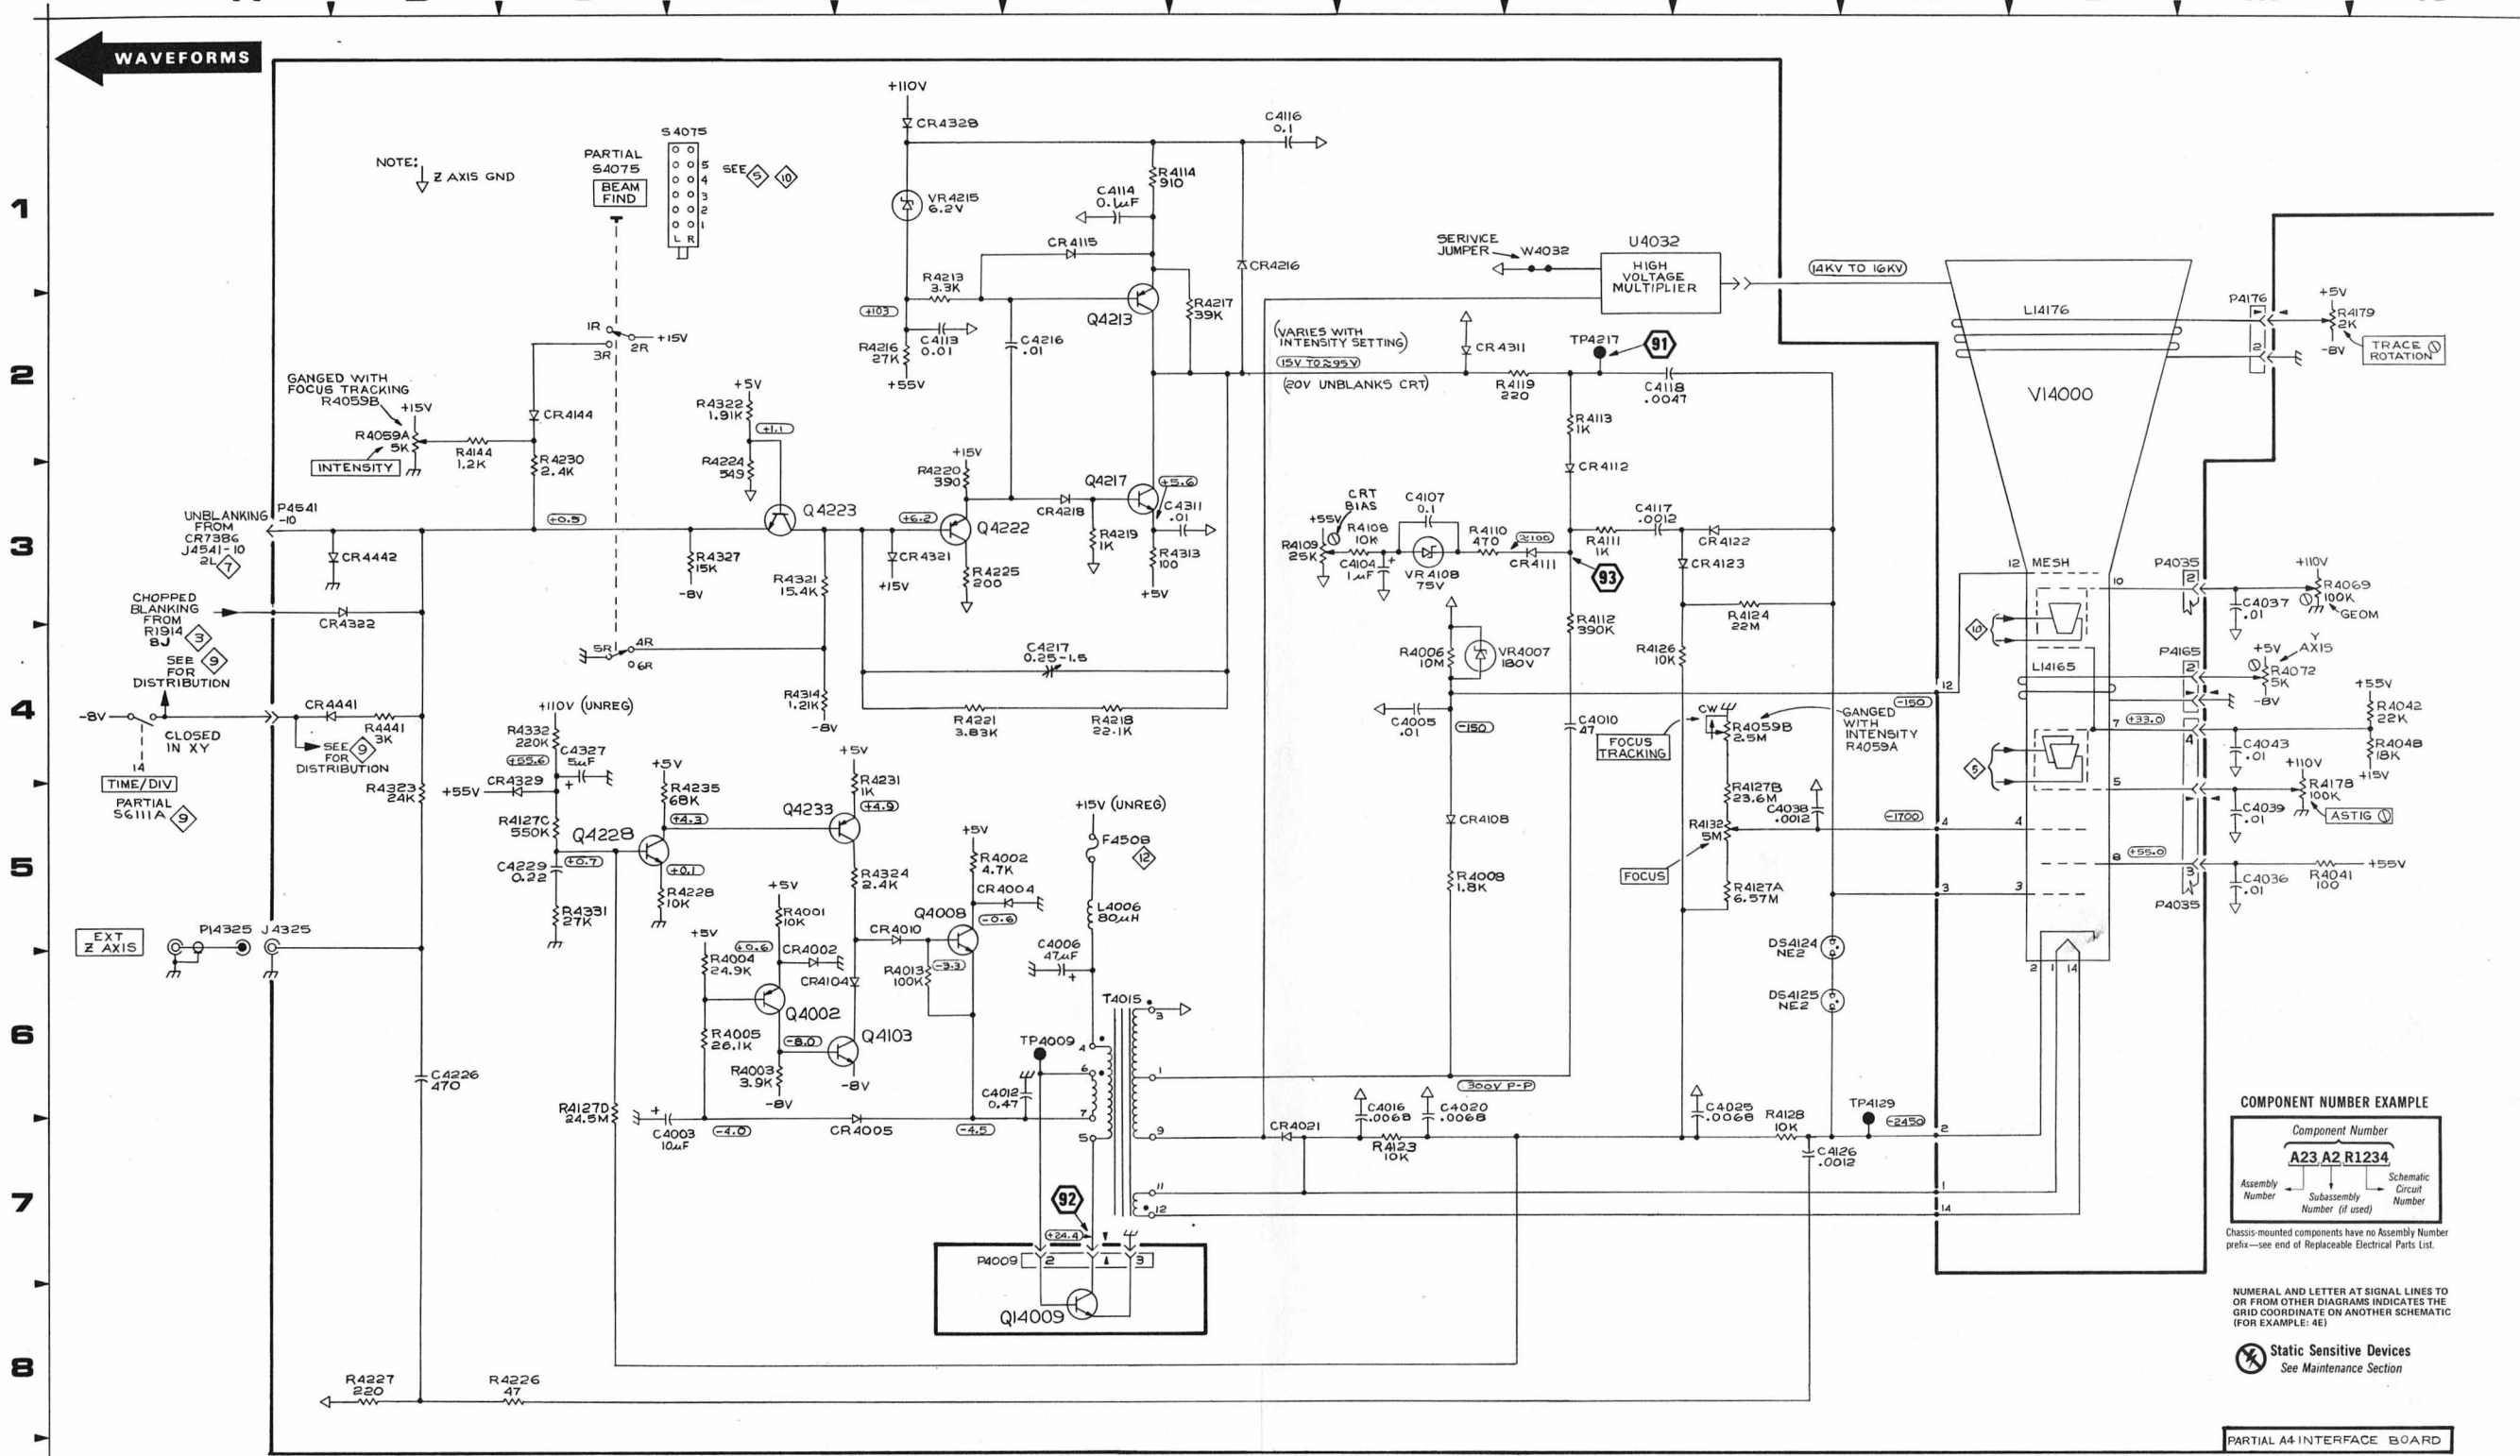

**COMPONENT NUMBER EXAMPLE**

Component Number		
A23	A2	R1234
Assembly Number	Subassembly Number (if used)	Schematic Circuit Number

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

NUMERAL AND LETTER AT SIGNAL LINES TO OR FROM OTHER DIAGRAMS INDICATES THE GRID COORDINATE ON ANOTHER SCHEMATIC (FOR EXAMPLE: 4E)

Static Sensitive Devices  
See Maintenance Section

PARTIAL A4 INTERFACE BOARD

465B OSCILLOSCOPE (SN B060000 & UP)

(2757-85) 4273-32

CRT CIRCUIT

11

465B Service (SN B060000 & UP)


465B CONTROL SETTINGS

DC Voltages

Line voltage 115 vac

AC Waveforms

Line voltage 115 vac

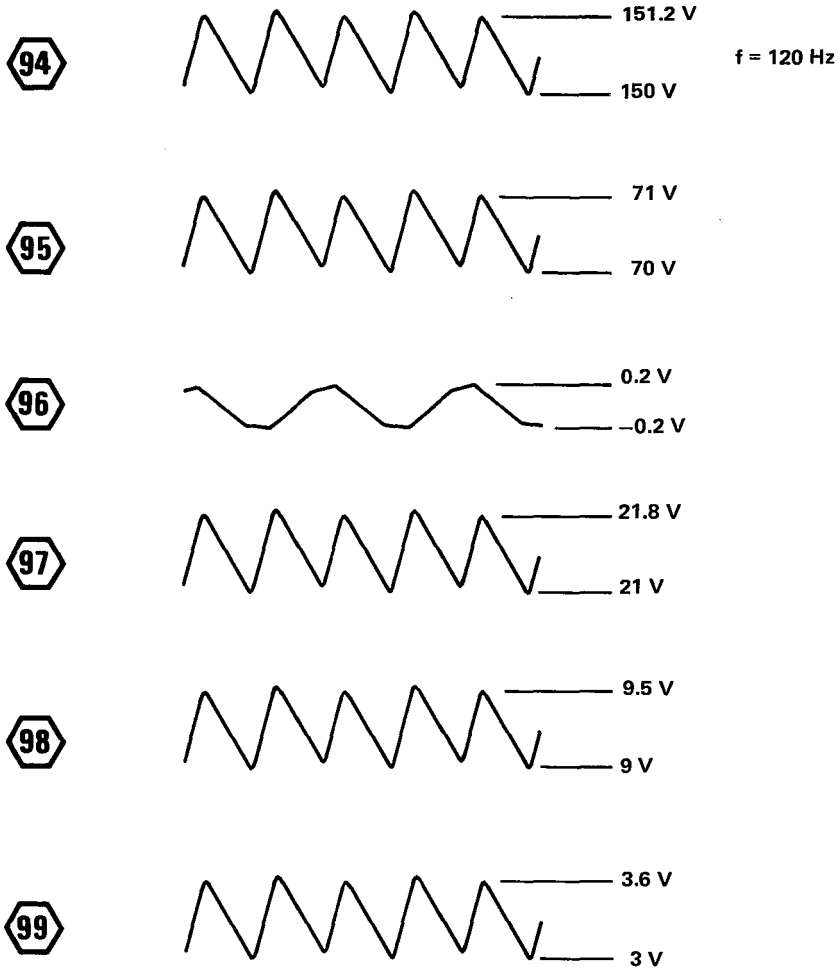

## POWER SUPPLY DIAGRAM



P/O A4 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C4203	7H	5A	F4508	3H	9B	R4317	5F	6C
C4204	5F	5A				R4318	2F	7B
C4303	2H	7A	P4086	7C	2K	R4319	1D	7B
C4305	2F	6B	P4541	3J	10F	R4325	5H	7D
C4306	1E	7B				R4326	1F	7D
C4307	1D	7B	Q4102	6G	4A	R4403	4H	8A
C4326	6H	7D	Q4105	6G	4A	R4404	4G	8A
C4331	4H	7E	Q4106	7F	4A	R4405	4G	8A
C4407	3F	7B	Q4190	8D	3L	R4406	3F	7B
C4408	3E	8B	Q4301	1G	6A	R4407	4E	8B
C4419	6E	8D	Q4302	1G	6A	R4411	3E	8B
C4429	1E	8E	Q4303	2F	6B	R4412	2I	8B
C4439	1E	8F	Q4311	6F	6C	R4421	1D	7D
C4521	3E	9D	Q4312	5G	7C	R4422	5H	8D
C4531	5E	9E	Q4401	4G	7A	R4432	1I	7F
C4532	2D	9E	Q4403	3G	8A	R4433	1I	8F
C4533	3D	10F	Q4404	4F	8A	R4434	1I	8E
			Q4425	1I	8D	R4526	1H	9E
CR4105	6G	3A	Q4431	1I	7F	R4527	3D	9E
CR4302	1F	6A				R4531	3D	10E
CR4303	1H	7A	R4107	7G	4A			
CR4304	1F	6A	R4193	7E	4K	TP4337	6I	6F
CR4312	2F	6B	R4195	8E	4K	TP4338	2I	7F
CR4318	5F	7C	R4202	7H	5A	TP4339	4I	7F
CR4405	4H	8A	R4204	7G	4A	TP4340	1I	6F
CR4406	1E	7B	R4205	7F	5A	TP4439	7I	7F
CR4411	6D	8B	R4206	2G	5A			
CR4423	1I	9D	R4206	5E	5A	U4206A	5F	5A
CR4425	6I	7D	R4207	5E	5A	U4206B	6F	5A
CR4426	2I	7D	R4208	2G	6A	U4411A	1E	7B
CR4431	1H	8F	R4302	2G	6A	U4411D	4F	7B
CR4515	7H	9C	R4303	2H	7A			
CR4516	3D	9C	R4305	2F	6B	VR4194	7E	4K
CR4528	4D	10E	R4306	1E	7B	VR4304	1E	7A
CR4531	1D	9F	R4311	6E	6B	VR4326	1H	7D
			R4312	6E	6B	VR4408	2I	8B
F4501	6D	9A	R4315	6F	6B	VR4421	1D	7D
F4507	4D	10B	R4316	1F	6B	VR4422	1I	8D

*P/O A4 ASSY also shown on diagrams 3, 4, 5, 7, 8, 9, 10, 11, and 13*

P/O A7 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
P7005	7B	1B	R7108	7B	2B			

*P/O A7 ASSY also shown on diagrams 3, 6, and 7*


A10 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
DS14086	7C	NONE						
DS14087	8C	NONE						

CHASSIS MOUNTED PARTS								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
DS17105	6B	CHASSIS	Q1490	8D	CHASSIS	S14500	4B	CHASSIS
F14500	6A	CHASSIS	Q4102	6G	CHASSIS	S14510	6A	CHASSIS
P4086	7C	CHASSIS	Q4301	1G	CHASSIS	S14520	5A	CHASSIS
P14500	6A	CHASSIS	Q4312	5G	CHASSIS	T14500	CA	CHASSIS
			Q4401	4G	CHASSIS			
			R4195	8E	CHASSIS			

A B C D E F G H I J

1  
2  
3  
4  
5  
6  
7  
8

← WAVEFORMS

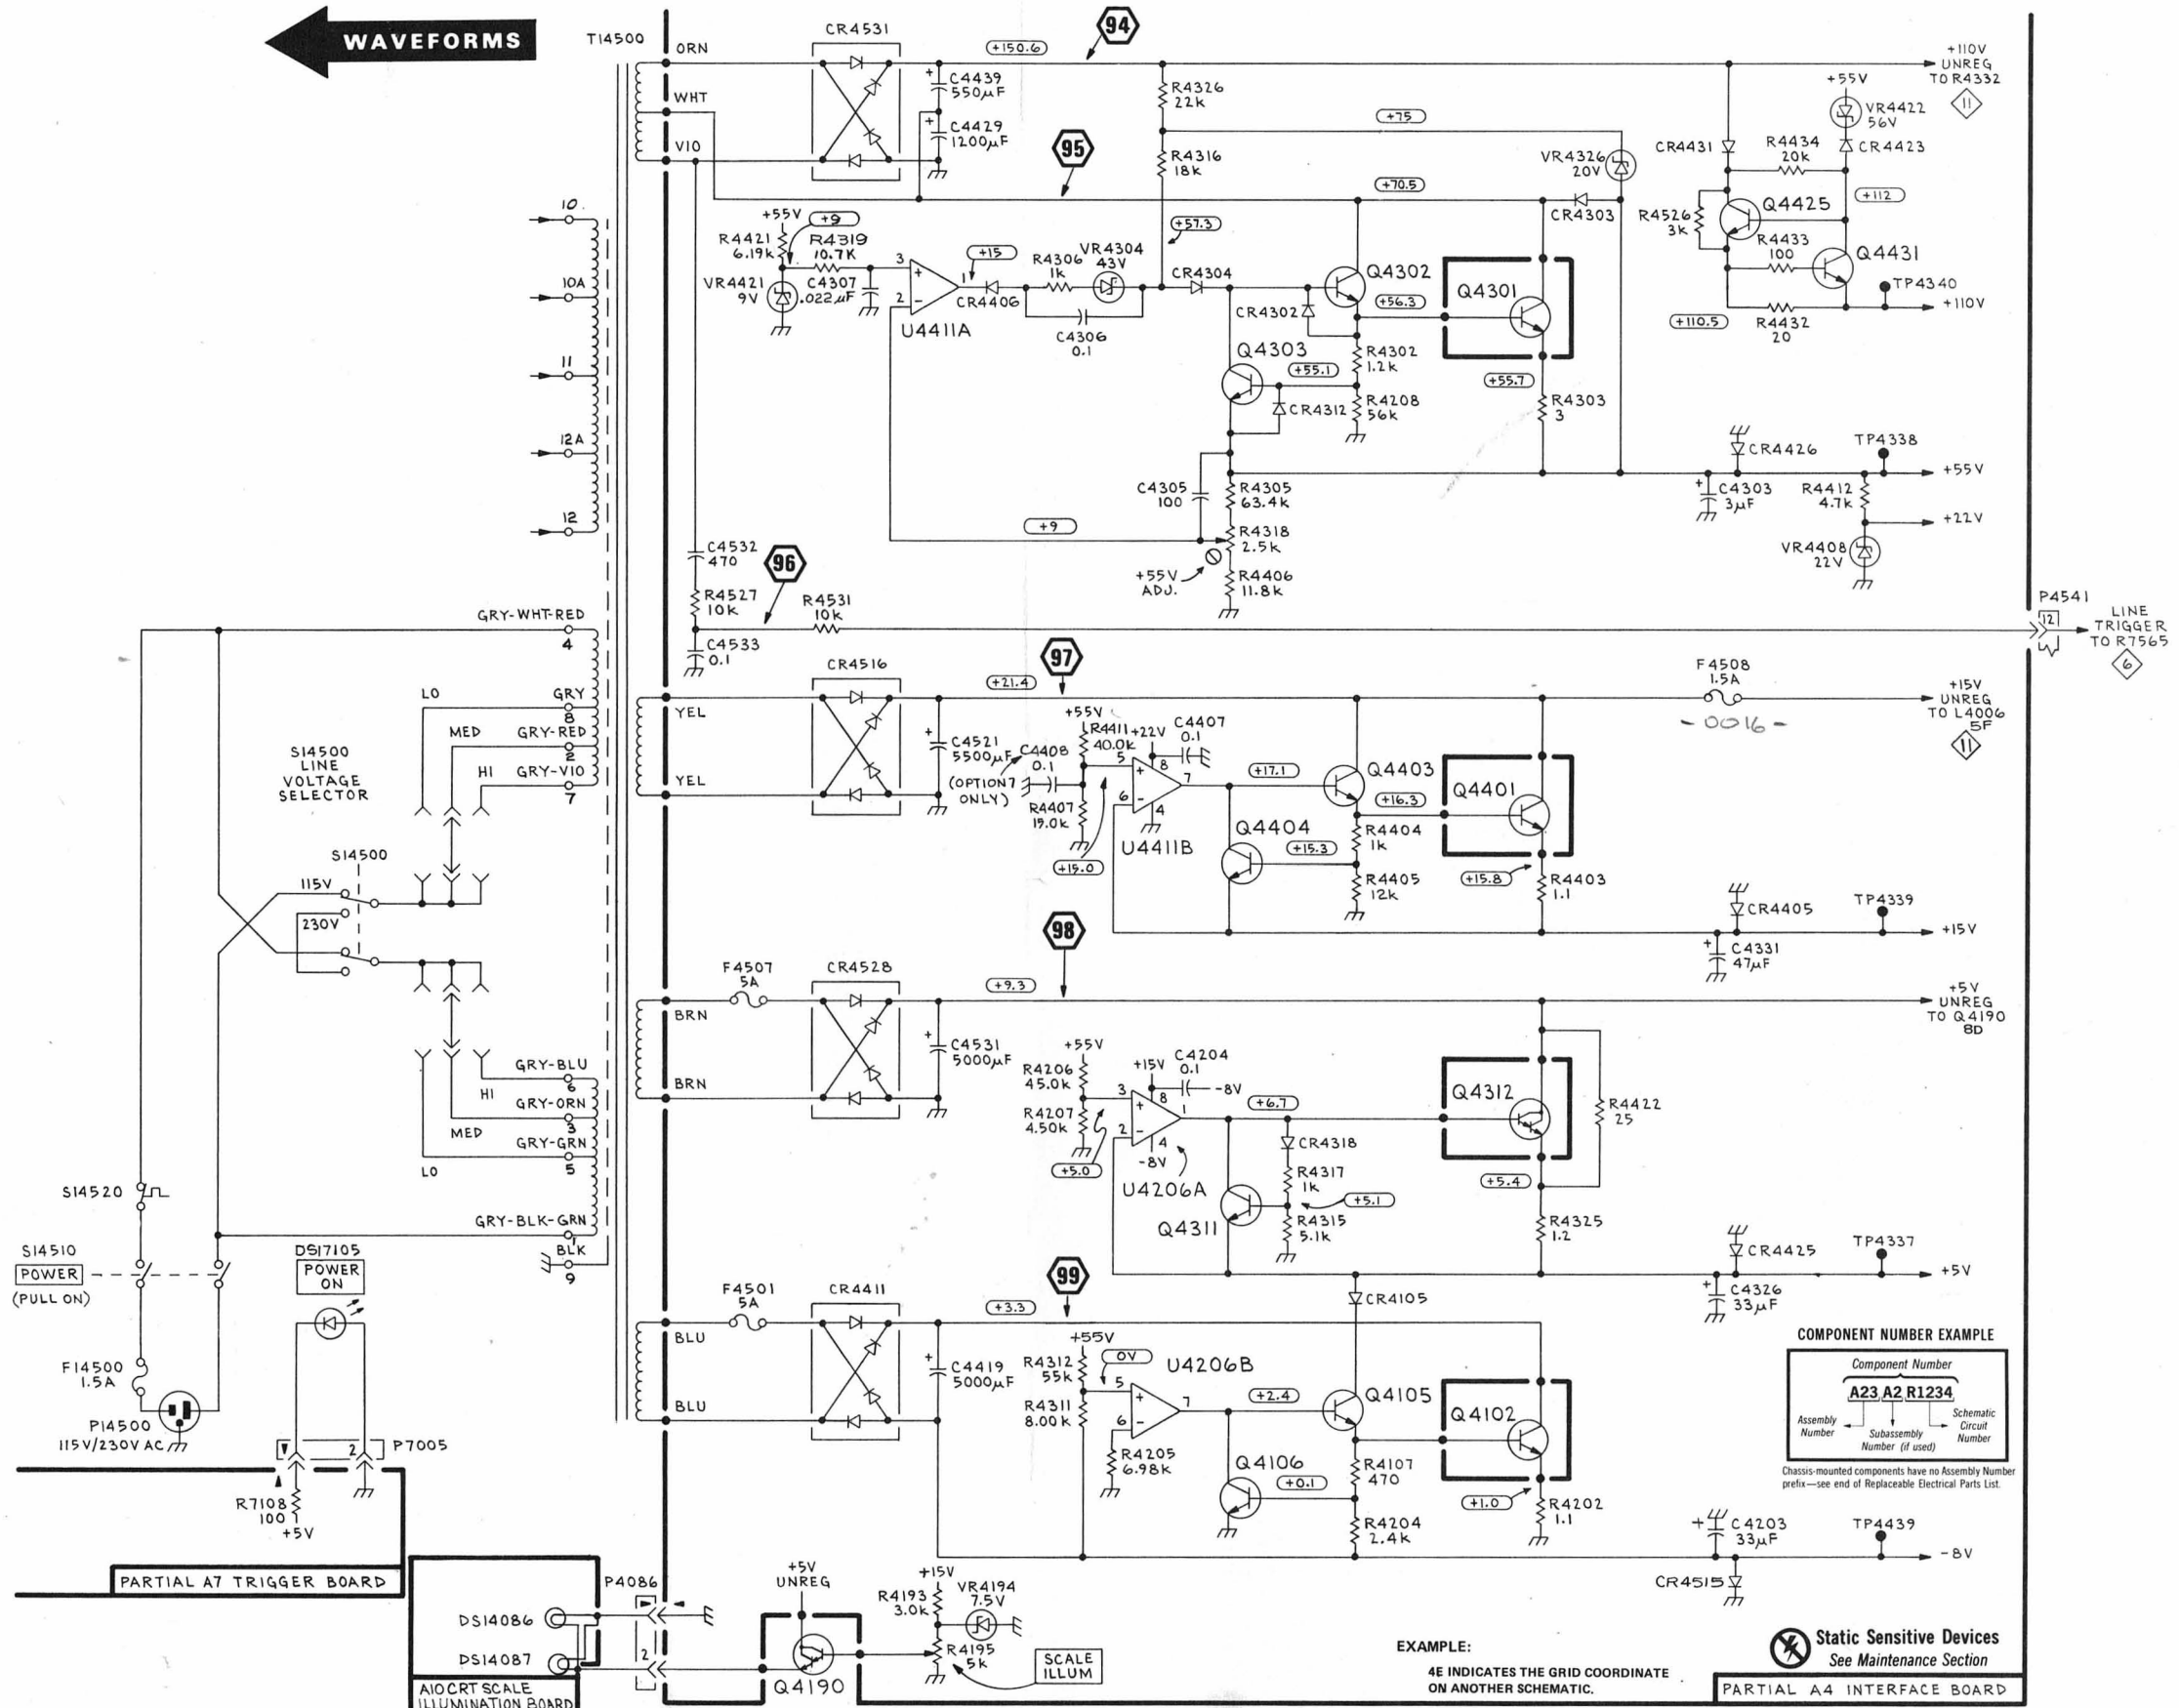

POWER SUPPLY 12

465B OSCILLOSCOPE (SN B060000 & UP)

(2757-86) 4273-34

POWER SUPPLY 12


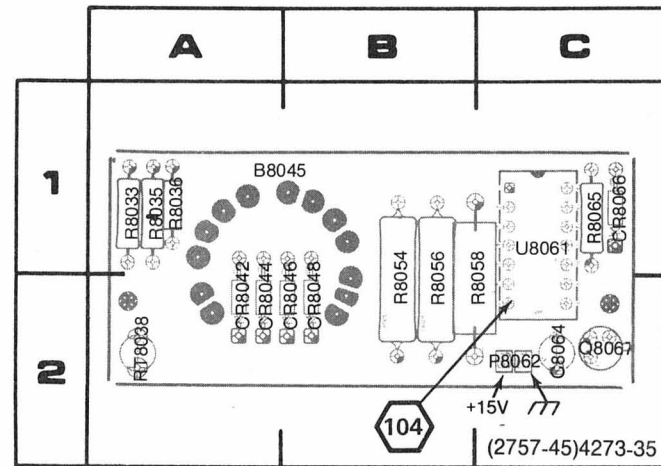



Figure 9-9. A8-Fan circuit board component locations.

Static Sensitive Devices  
See Maintenance Section

COMPONENT NUMBER EXAMPLE

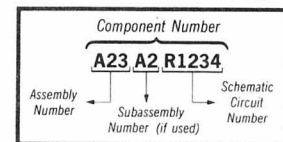

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

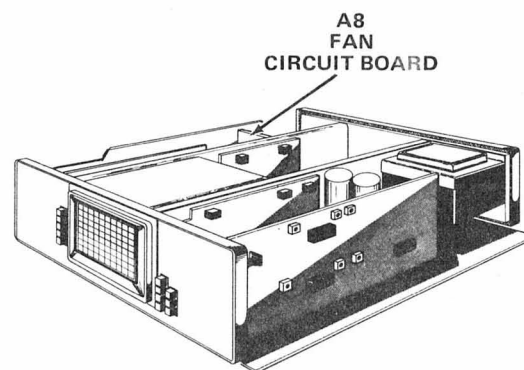


465B CONTROL SETTINGS

DC Voltages

Remove Q1496 to make dc measurements in the Calibrator circuit.

AC Waveforms

Fan circuit waveform taken at 25°C ambient temperature.

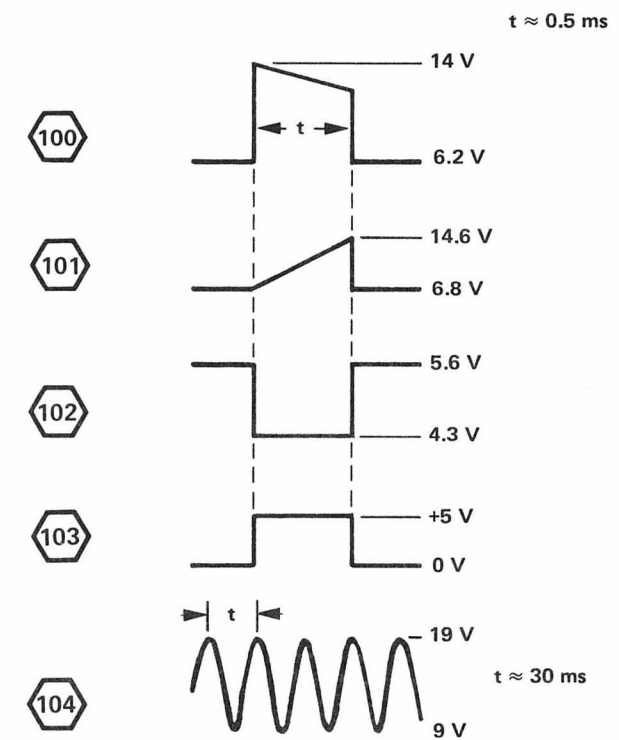

(2757-109)4273-36



**CALIBRATOR AND FAN  
DIAGRAM 13**

P/O A4 ASSY					
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C4187	3B	4K	R4184	4B	3K
C4192	4B	4L	R4185	3B	4K
C4291	5C	5L	R4186	3A	4K
C4292	4D	5L	R4191	3C	3L
			R4291	5C	5L
CR4291	4C	5L	R4293	5D	5M
			R4294	5D	6L
L4292	3D	5L	R4295	6D	6L
P4060	2E	1H	TP4177	4A	4J
			TP4178	3C	4J
Q4182	3B	4K			
Q4196	4C	4M	W4183	4A	3K
Q4291	5D	5L			


*P/O A4 ASSY also shown on diagrams 3, 4, 5, 7, 8, 9, 10, 11, and 12*

P/O A8 ASSY					
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
B8045	3F	1A	R8033	5J	1A
			R8035	5J	1A
C8064	2I	2C	R8036	6J	1A
			R8054	3I	2B
CR8042	5I	2A	R8056	3G	2B
CR8044	H	2A	R8058	6H	2C
CR8046	4I	2B	R8065	4H	1C
CR8048	5H	2B			
CR8066	2I	1C	RT8038	6J	2A
P8062	2F	2C	U8061A	5I	1C
			U8061B	5F	1C
Q8067	2H	2C	U8061C	5G	1C

CHASSIS MOUNTED PARTS					
CIRCUIT NUMBER	SCHEM NUMBER	SCHEM LOCATION	CIRCUIT NUMBER	SCHEM NUMBER	SCHEM LOCATION
C3042	1	2J	Q4190	12	8D
C3042	2	2J	Q4102	12	6G
C13010	1	2A	Q4301	12	1G
C13010	2	2A	Q4312	12	5G
C13012	1	2A	Q4401	12	4G
C13012	2	2A	Q14009	11	8F
C15101	4	2A			
C15101	4	7A	R3042	1	2J
C15103	4	2A	R3042	2	2J
C15103	4	7A	R3045	1	2J
CR14498	9	3H	R3045	2	2K
			R4059A	11	2B
DL11405	3	1M	R4059B	11	4J
			R4132	11	5J
DS9040	4	2F	R4178	11	4M
DS9040	4	7F	R4179	11	2M
DS9060	4	2G	R4195	12	8E
DS9060	4	7G	R13010	1	2A
DS14086	12	7C	R13010	2	2A
DS14087	12	8C	R14288A	10	6A
DS15034	4	1F	R14288B	10	6A
DS15036	4	9C	R14398	7	4A
DS15038	4	7F	R14498	8	3J
DS16001	10	8C	R14498	9	2H
DS16002	9	1E	R15102	4	2A
DS17105	12	6B	R15102	4	7A
DS17127	7	5K	R16002	7	8A
DS17206	7	5K			
			S1285	4	1F
F14500	12	6A	S1782	4	8F
			S4075	11	1C
J4387	8	2J	S6111A	11	4A
J13010	1	2A	S7112D	6	1M
J13010	2	2A	S14498	7	5A
			S14498	8	1N
L14165	11	4L	S14498	9	2H
L14176	11	2L	S14500	12	4B
			S14510	12	6A
P4058	8	4J	S14520	12	5A
P4086	12	7C	S17010	6	3F
P4498	8	3J			
P14325	11	5A	T14500	12	CA
P14500	12	6A			

A B C D E F G H I J

← WAVEFORMS

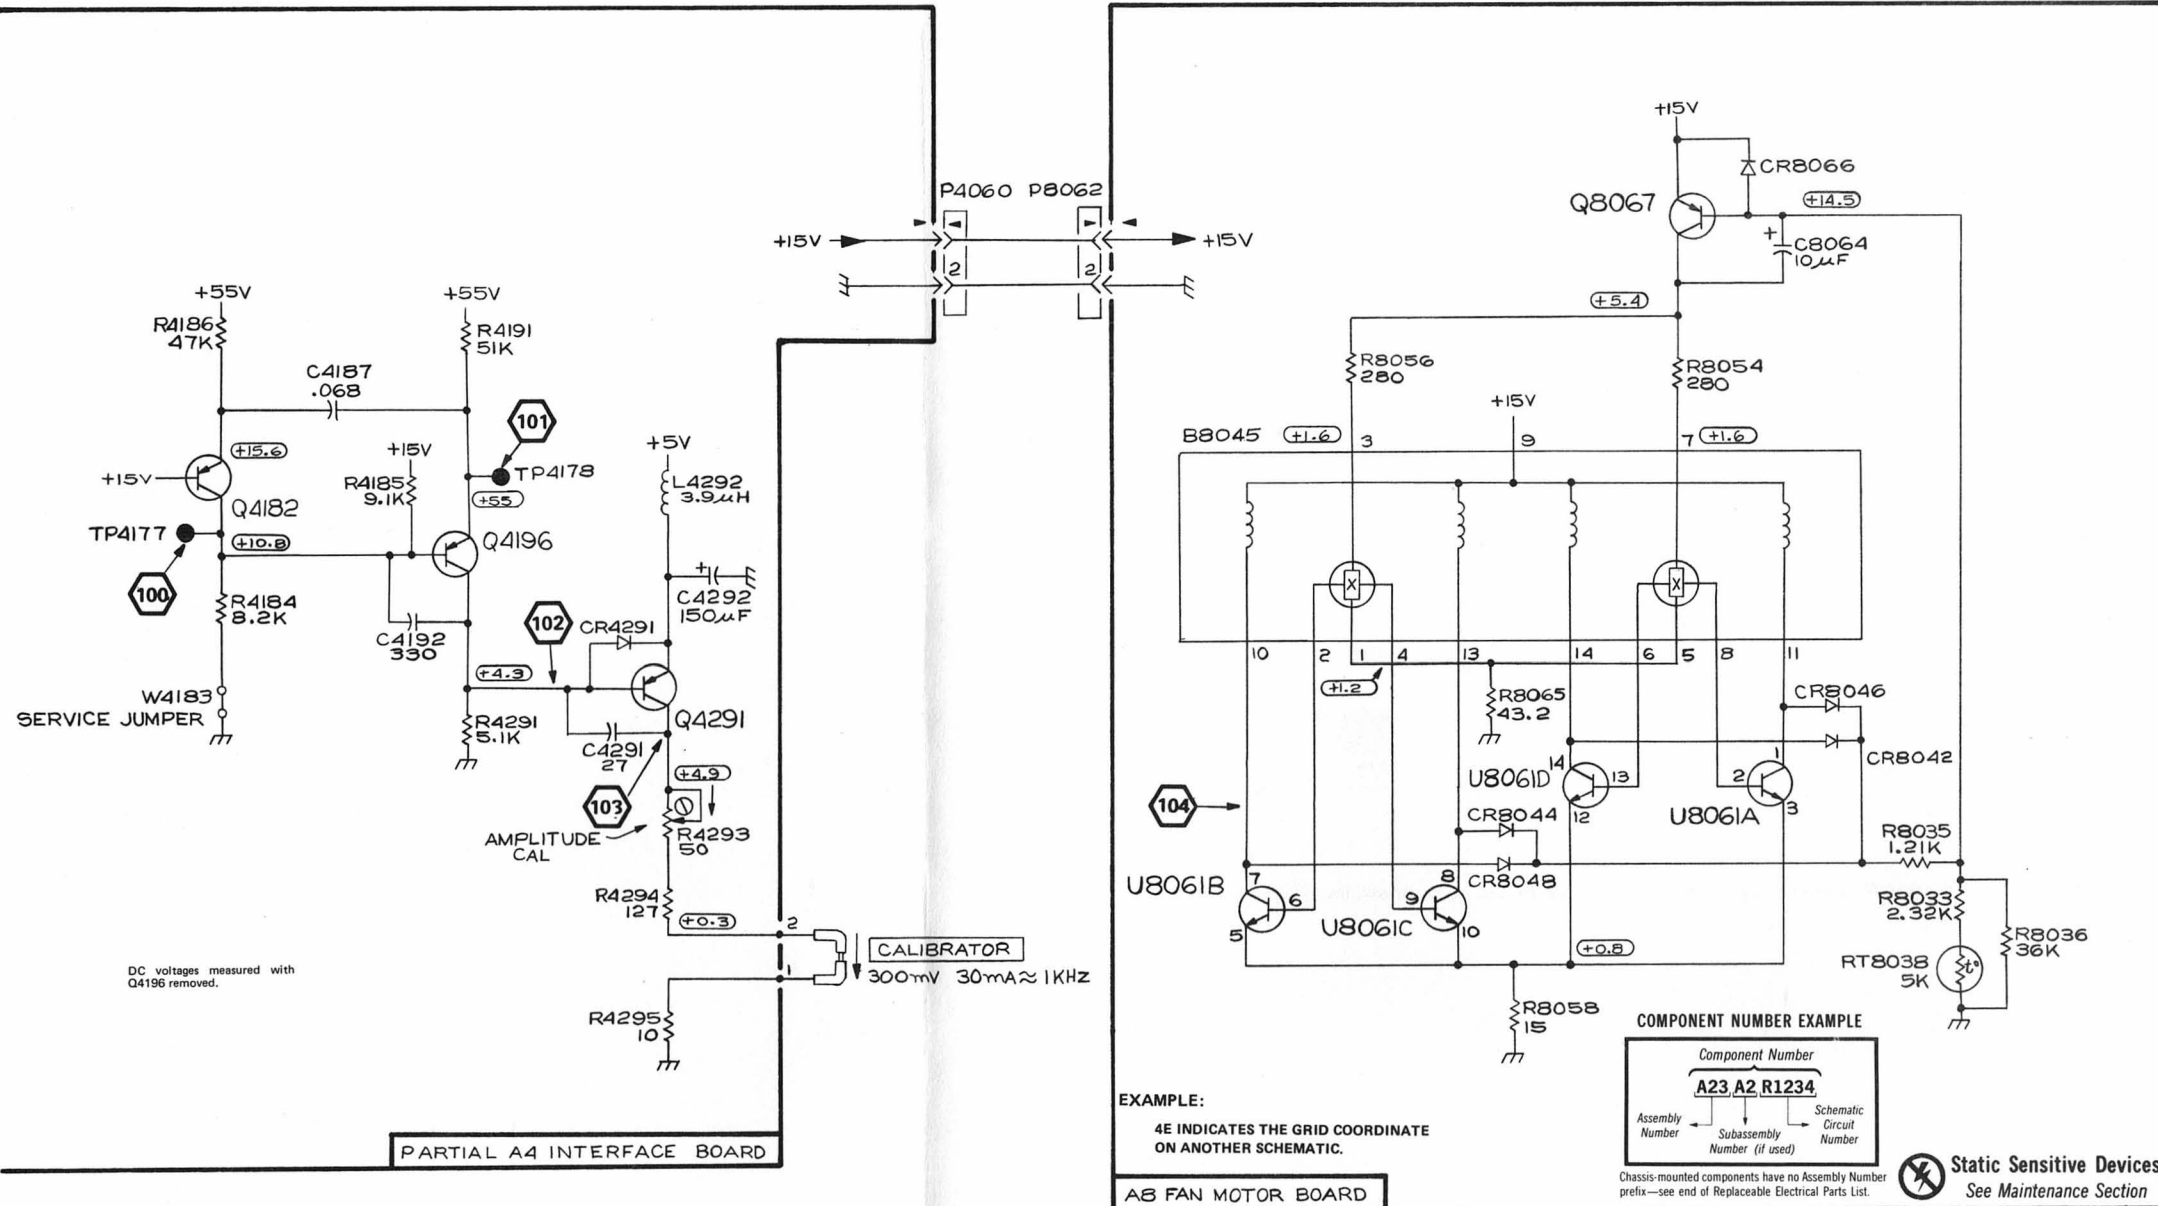

CALIBRATOR & FAN

13

465B OSCILLOSCOPE (SN B060000 & UP)

(2757-87) 4273-37

CALIBRATOR & FAN 13

1  
2  
3  
4  
5  
6  
7  
8

A29-BOARD COMPONENT LOCATIONS


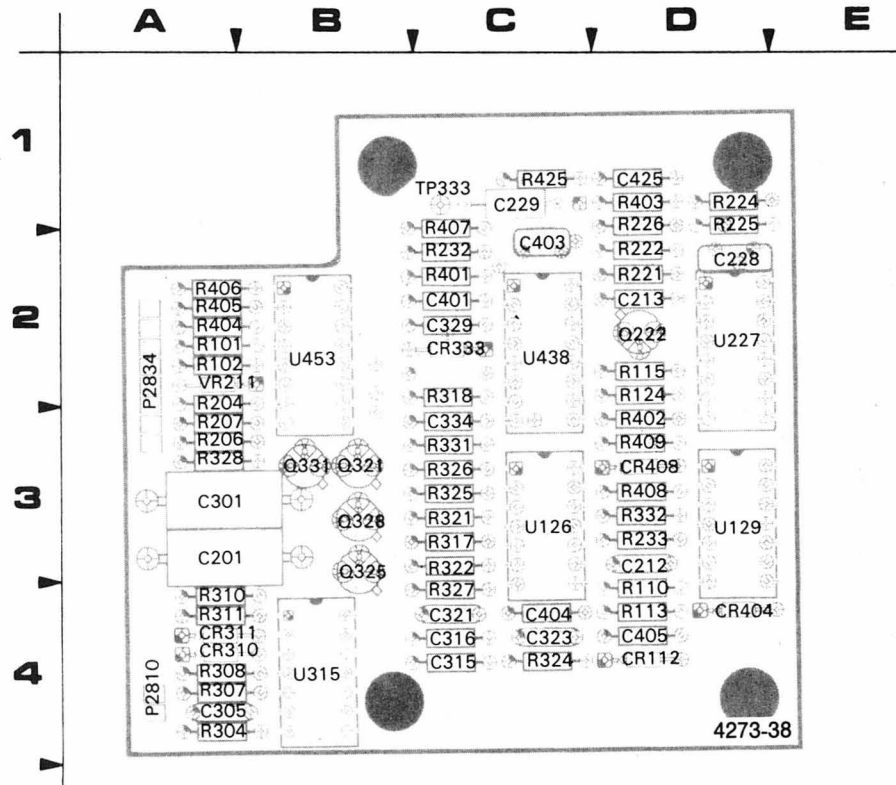


Figure 9-10. Option 05 A29-TV Sync Separator circuit board component locations.

 Static Sensitive Devices  
See Maintenance Section

COMPONENT NUMBER EXAMPLE

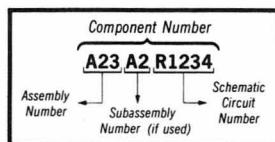

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.


## OPTION 05 TV SYNC SEPARATOR DIAGRAM

14

ASSEMBLY A29								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C201	4B	3A	Q325	2E	3B	R327	1E	4C
C212	4B	3D	Q328	1E	3B	R328	2G	3A
C213	6D	2D	Q331	2H	3B	R331	1F	3C
C228	6B	2D				R332	1F	3D
C229	6D	1C	R101	2J	2A	R401	5E	2C
C301	3A	3A	R102	1I	2A	R402	6F	3D
C305	2C	4A	R110	6J	4D	R403	5G	1D
C315	2D	4C	R113	6I	4D	R404	7J	2A
C316	2D	4C	R115	5D	2D	R405	7J	2A
C321	2E	4C	R124	6E	2D	R406	7J	2A
C323	2E	4C	R204	3B	2A	R407	5H	1C
C329	1E	2C	R206	3B	3A	R408	3F	3D
C334	1F	3C	R207	4A	3A	R409	3F	3D
C401	5E	2C	R221	6D	2D	R425	4E	1C
C403	5F	2C	R222	6C	2D			
C404	6I	4C	R224	5B	1D	TP333	2H	1C
C405	6J	4D	R225	4C	1D			
C425	5E	1D	R226	5D	1D	U126A	6I	3C
			R232	1H	2C	U126B	7H	3C
CR112	6J	4D	R233	4B	3D	U129A	6G	3D
CR310	3D	4A	R304	2C	4A	U129B	7F	3D
CR311	3D	4A	R307	2C	4A	U227	6B	2D
CR333	1F	2C	R308	2C	4A	U315	1C	4B
CR404	6J	4D	R310	3D	4A	U438A	6E	2C
CR408	3G	3D	R311	3D	4A	U438B	6F	2C
			R317	3E	3C	U453A	5H	2B
P2810	2A	4A	R318	2F	2C	U453B	4D	2B
P2834	1K	2A	R321	1E	3C	U453C	7J	2B
R2834	3A	2A	R322	2E	3C			
			R324	2D	4C	VR211	4B	2A
Q222	6D	2D	R325	1F	3C			
Q321	2F	3B	R326	2G	3C			

A B C D E F G H I J K

1  
2  
3  
4  
5  
6  
7  
8

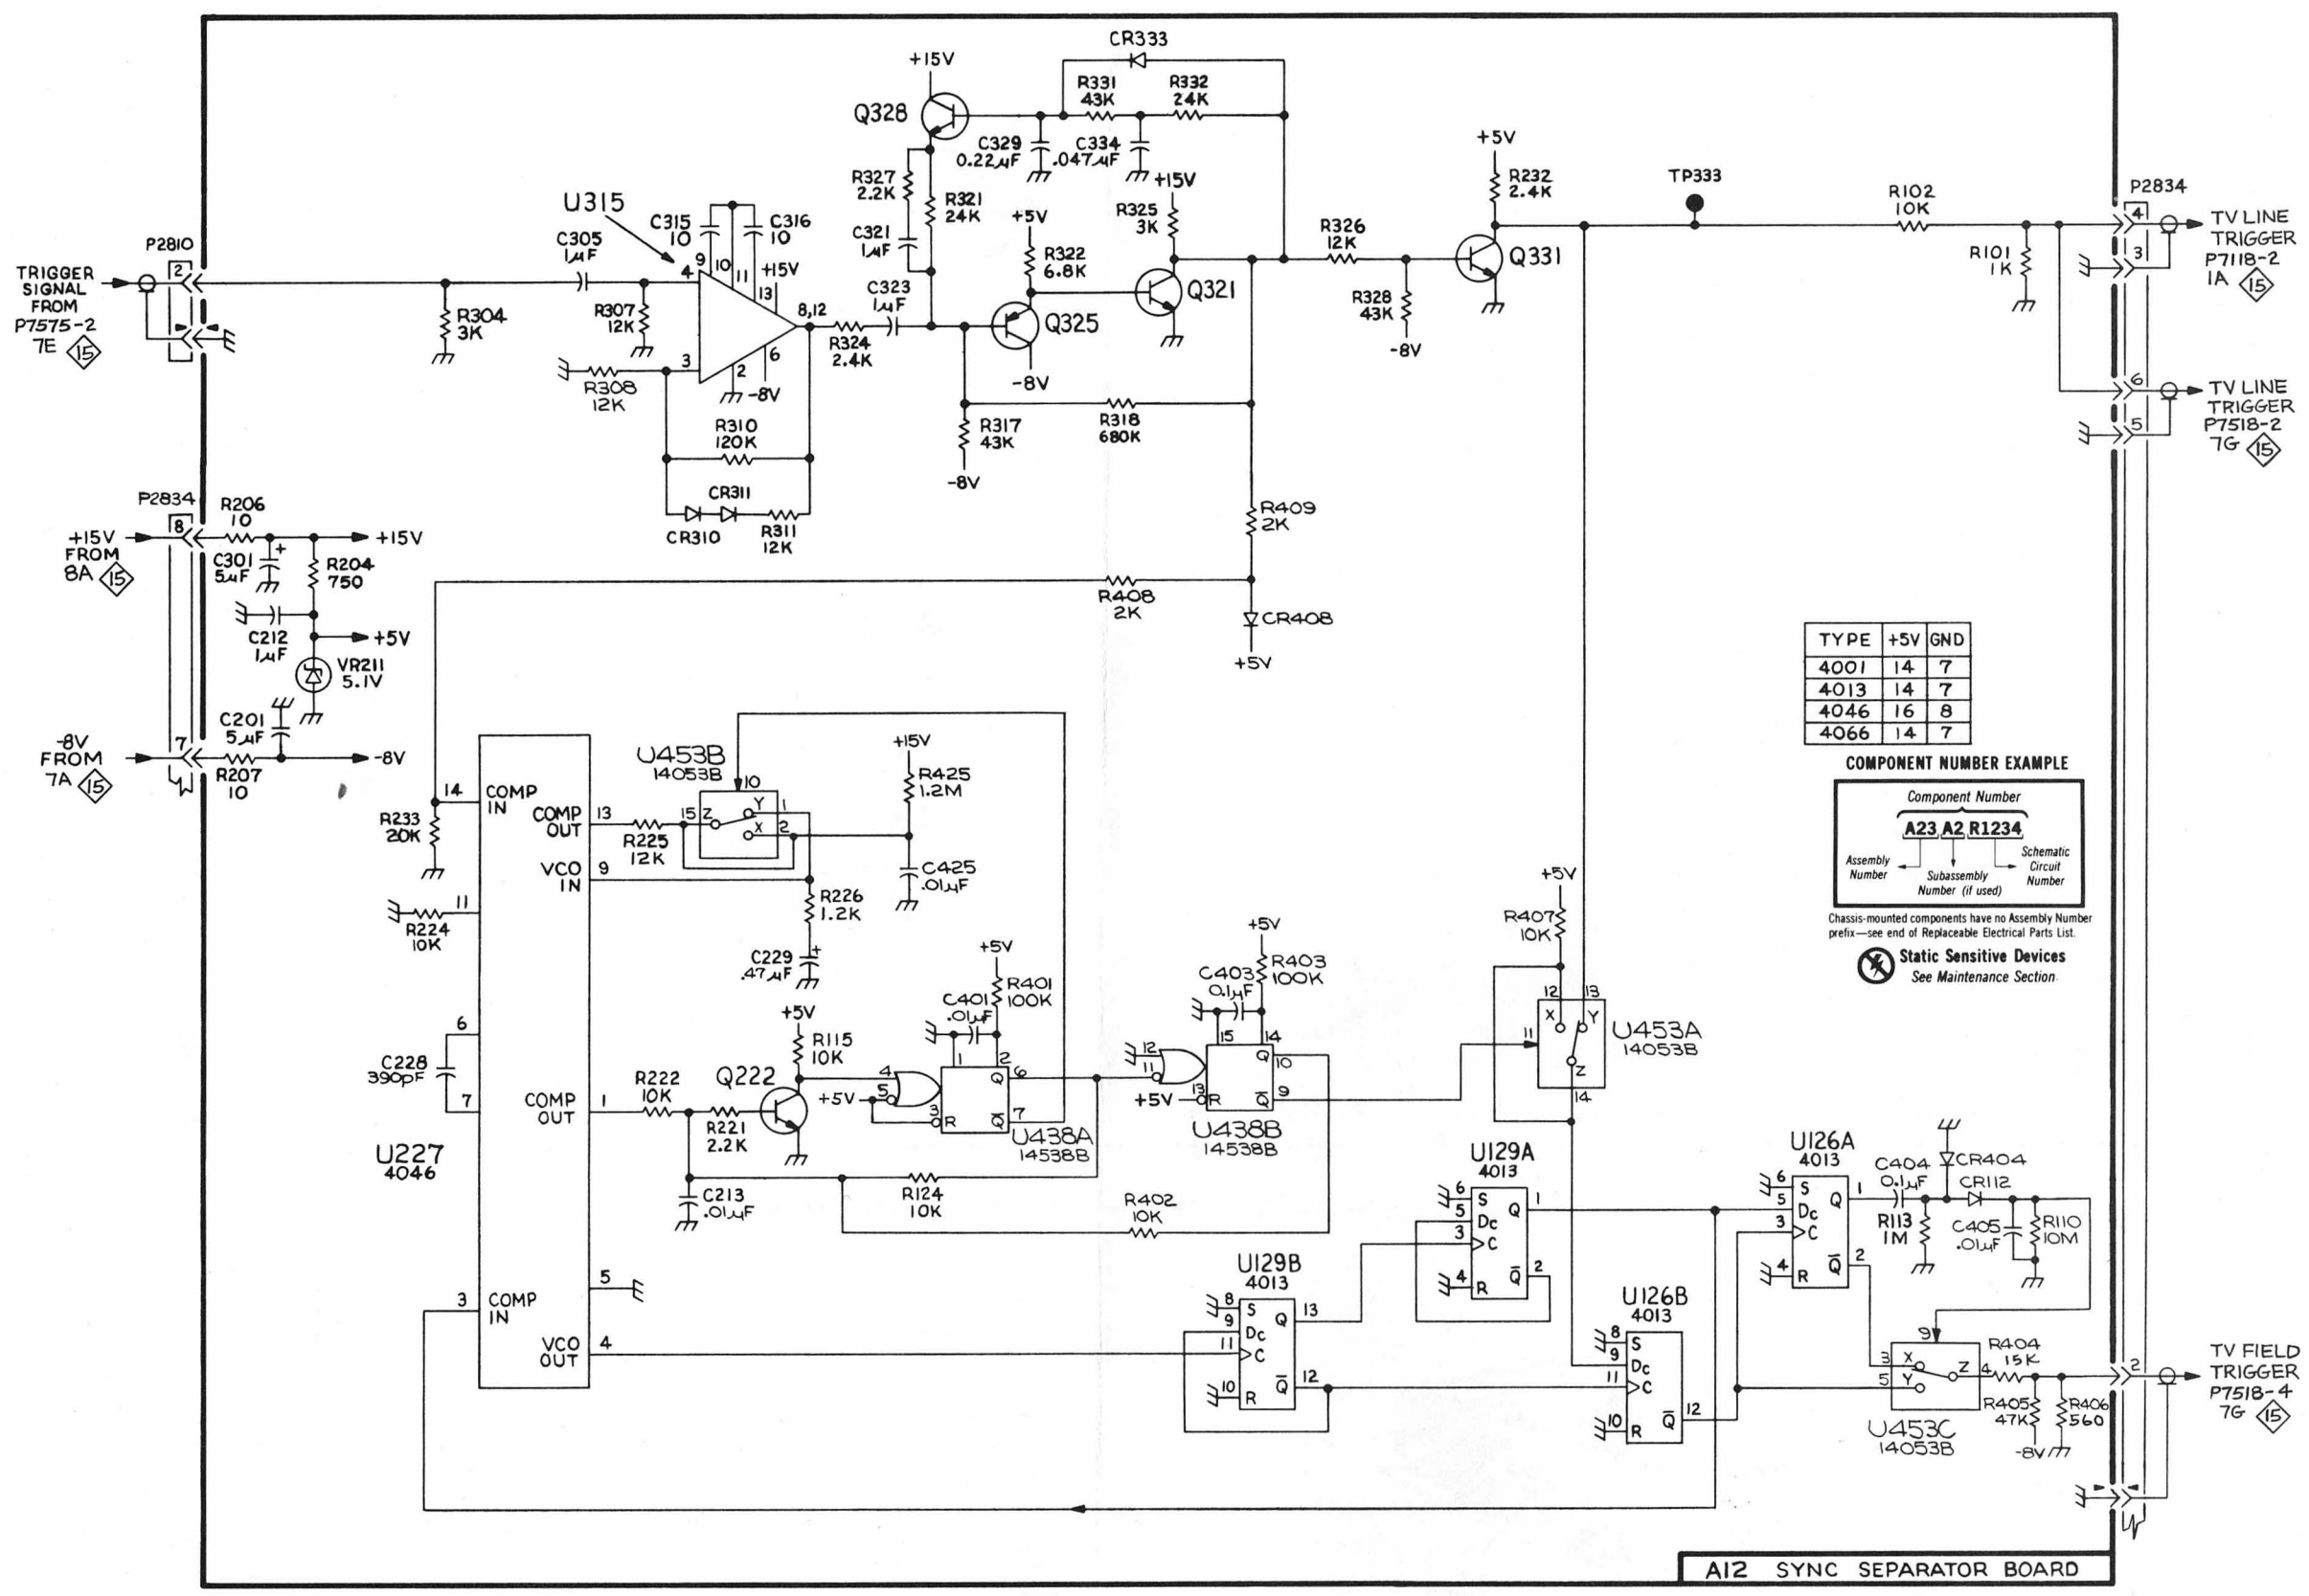

TYPE	+5V	GND
4001	14	7
4013	14	7
4046	16	8
4066	14	7

COMPONENT NUMBER EXAMPLE

Component Number  
**A23 A2 R1234**

Assembly Number      Subassembly Number (if used)      Schematic Circuit Number

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

Static Sensitive Devices  
See Maintenance Section.


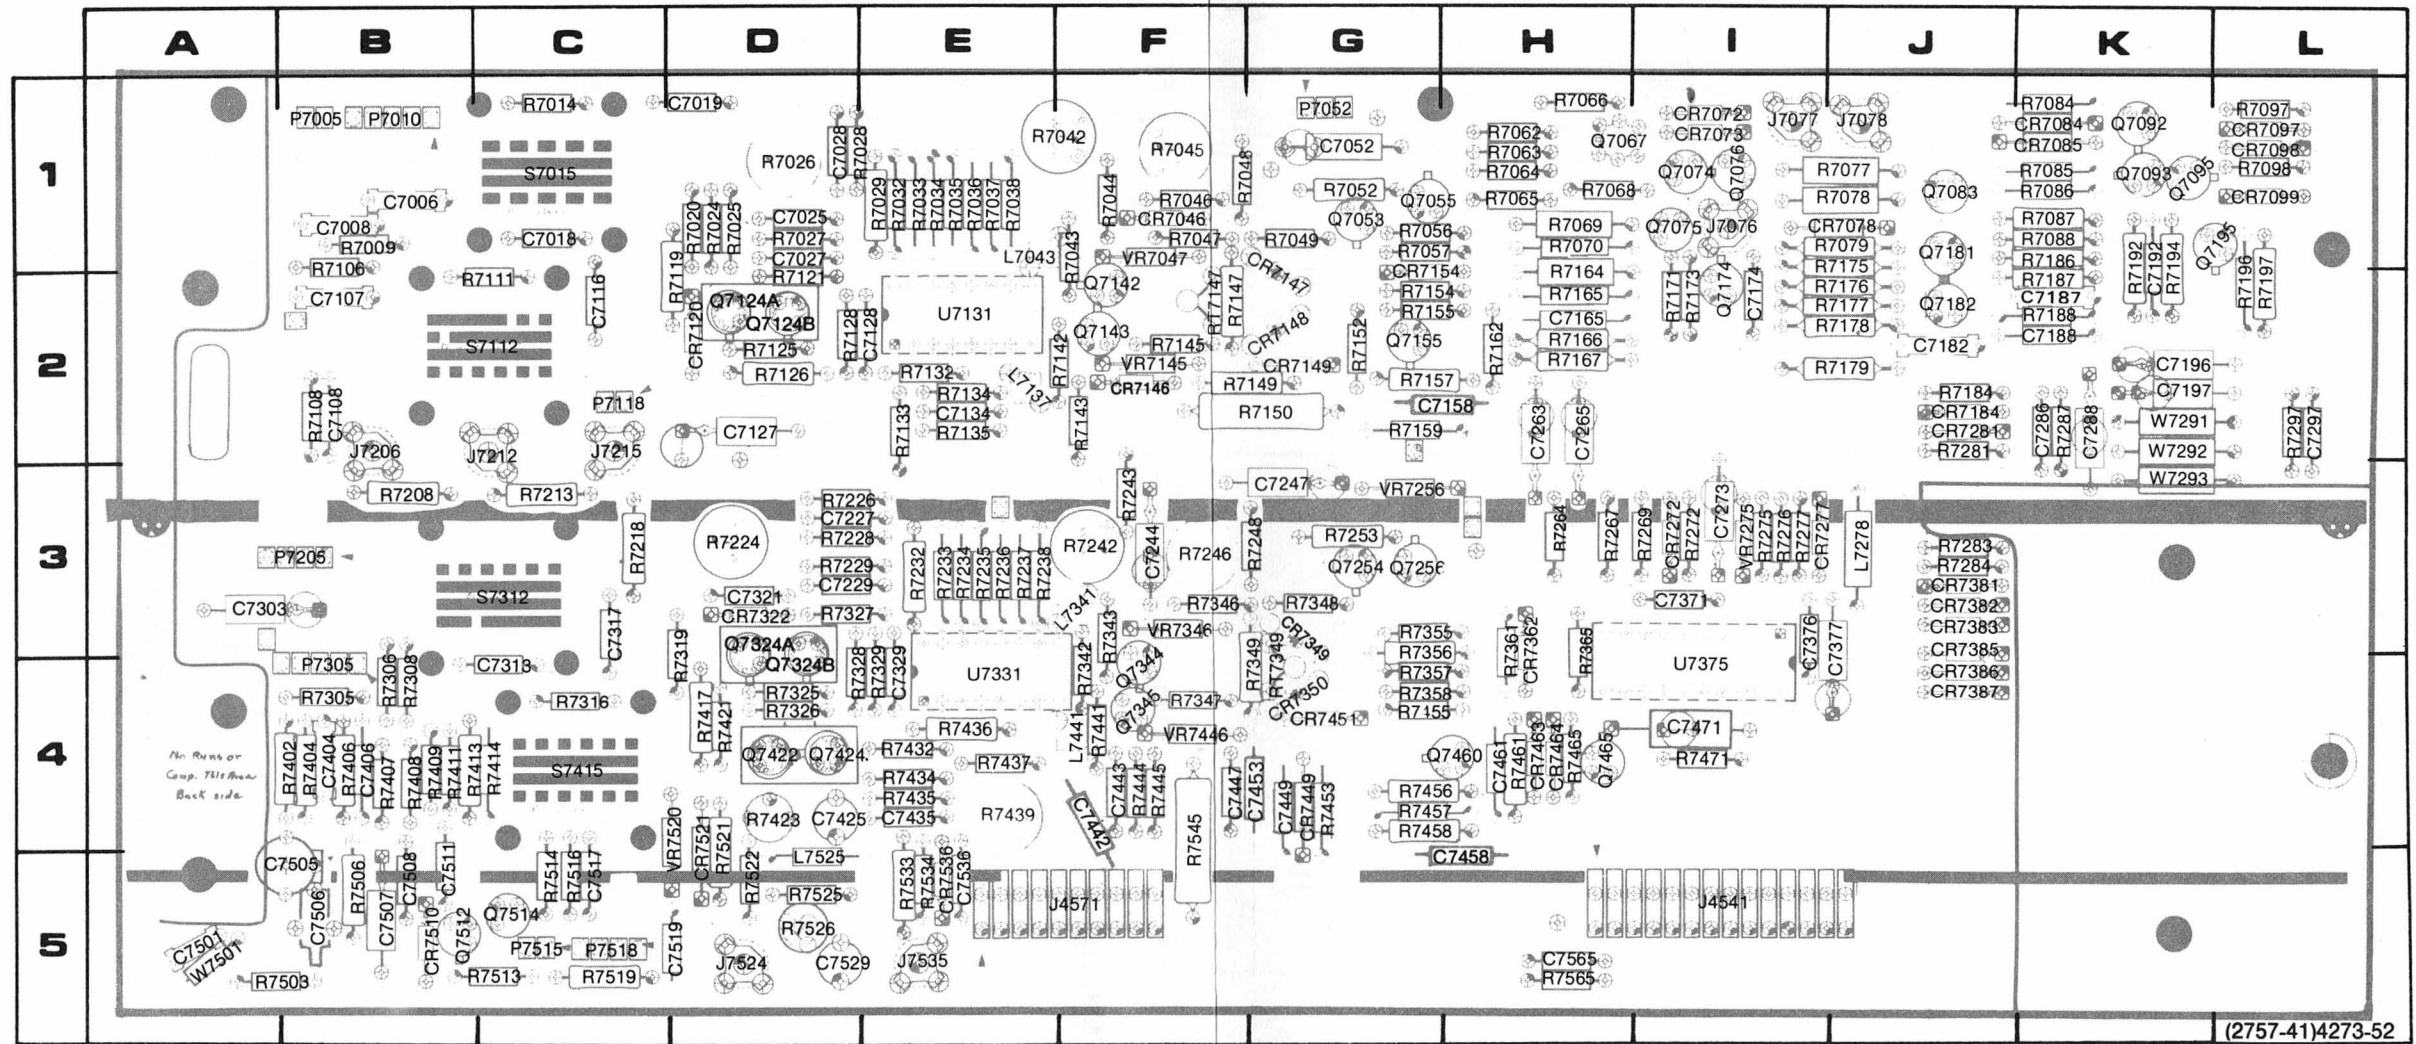



Figure 9-11. Option 05 A7-Trigger Generator and Sweep Logic circuit board component locations.

OPTIONS 05 A7-BOARD COMPONENT LOCATIONS

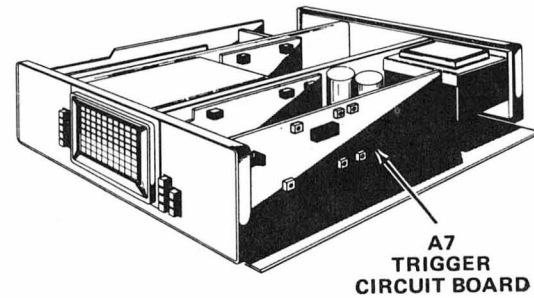

 Static Sensitive Devices  
See Maintenance Section

COMPONENT NUMBER EXAMPLE

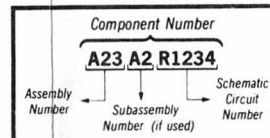


Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

## TRIGGER SWITCHES &amp; TRIGGER PICKOFF DIAGRAM

15

P/O A7 ASSY								
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C7006	3C	1B	Q7124A	1I	2D	R7325	5I	4D
C7008	3C	1B	Q7124B	3I	2D	R7326	4H	4D
C7019	1G	1D	Q7324A	5H	3D	R7327	7H	3D
C7025	3H	1D	Q7324B	6H	3D	R7402	6B	4B
C7027	1I	1D	Q7512 <sup>1</sup>	D7	B5	R7404	6B	4B
C7107 <sup>1</sup>	B3	B2	Q7514 <sup>1</sup>	D7	C5	R7406	7A	4B
C7116	2F	2C				R7407	7B	4B
C7229	7H	3D	R7009	3B	1B	R7408	7C	4B
C7313	5C	4C	R7014	3G	1C	R7409 <sup>1</sup>	D6	B4
C7317	6E	3C	R7020	3G	1D	R7411 <sup>1</sup>	C6	B4
C7321	3I	3D	R7024	1H	1D	R7413 <sup>1</sup>	C5	B4
C7404	6B	4B	R7025	1H	1D	R7414 <sup>1</sup>	D5	C4
C7406	7B	4B	R7027	3H	1D	R7417	5G	4D
C7501 <sup>1</sup>	A6	A5	R7106	3B	1B	R7421	4G	4D
C7505	6B	5B	R7111	1F	2C	R7506	6B	5B
C7506	6B	5B	R7119	2G	2D	R7513 <sup>1</sup>	D7	C5
C7508	7C	5B	R7121	3H	2D	R7514 <sup>1</sup>	D7	C5
C7511 <sup>1</sup>	D6	B5	R7125	1I	2D	R7516	6F	5C
C7517	5F	5C	R7208	5B	3B	R7565	6A	5H
C7565	6B	5H	R7213	5A	3C			
			R7218	5B	3C	S7015	1G	1C
CR7120	3H	2D	R7229	7H	3D	S7112	1D	2C
CR7322	6H	3D	R7305	6C	4B	S7312A	3B	3C
CR7510 <sup>1</sup>	C7	B5	R7306	6B	4B	S7415	3F	4C
			R7308	6B	4B			
J7206	2A	2B	R7316	5E	4C			
J7212	2A	2C	R7319	6G	4D			
J7215	1A	2C						

Note: <sup>1</sup> parts added with Option 05.

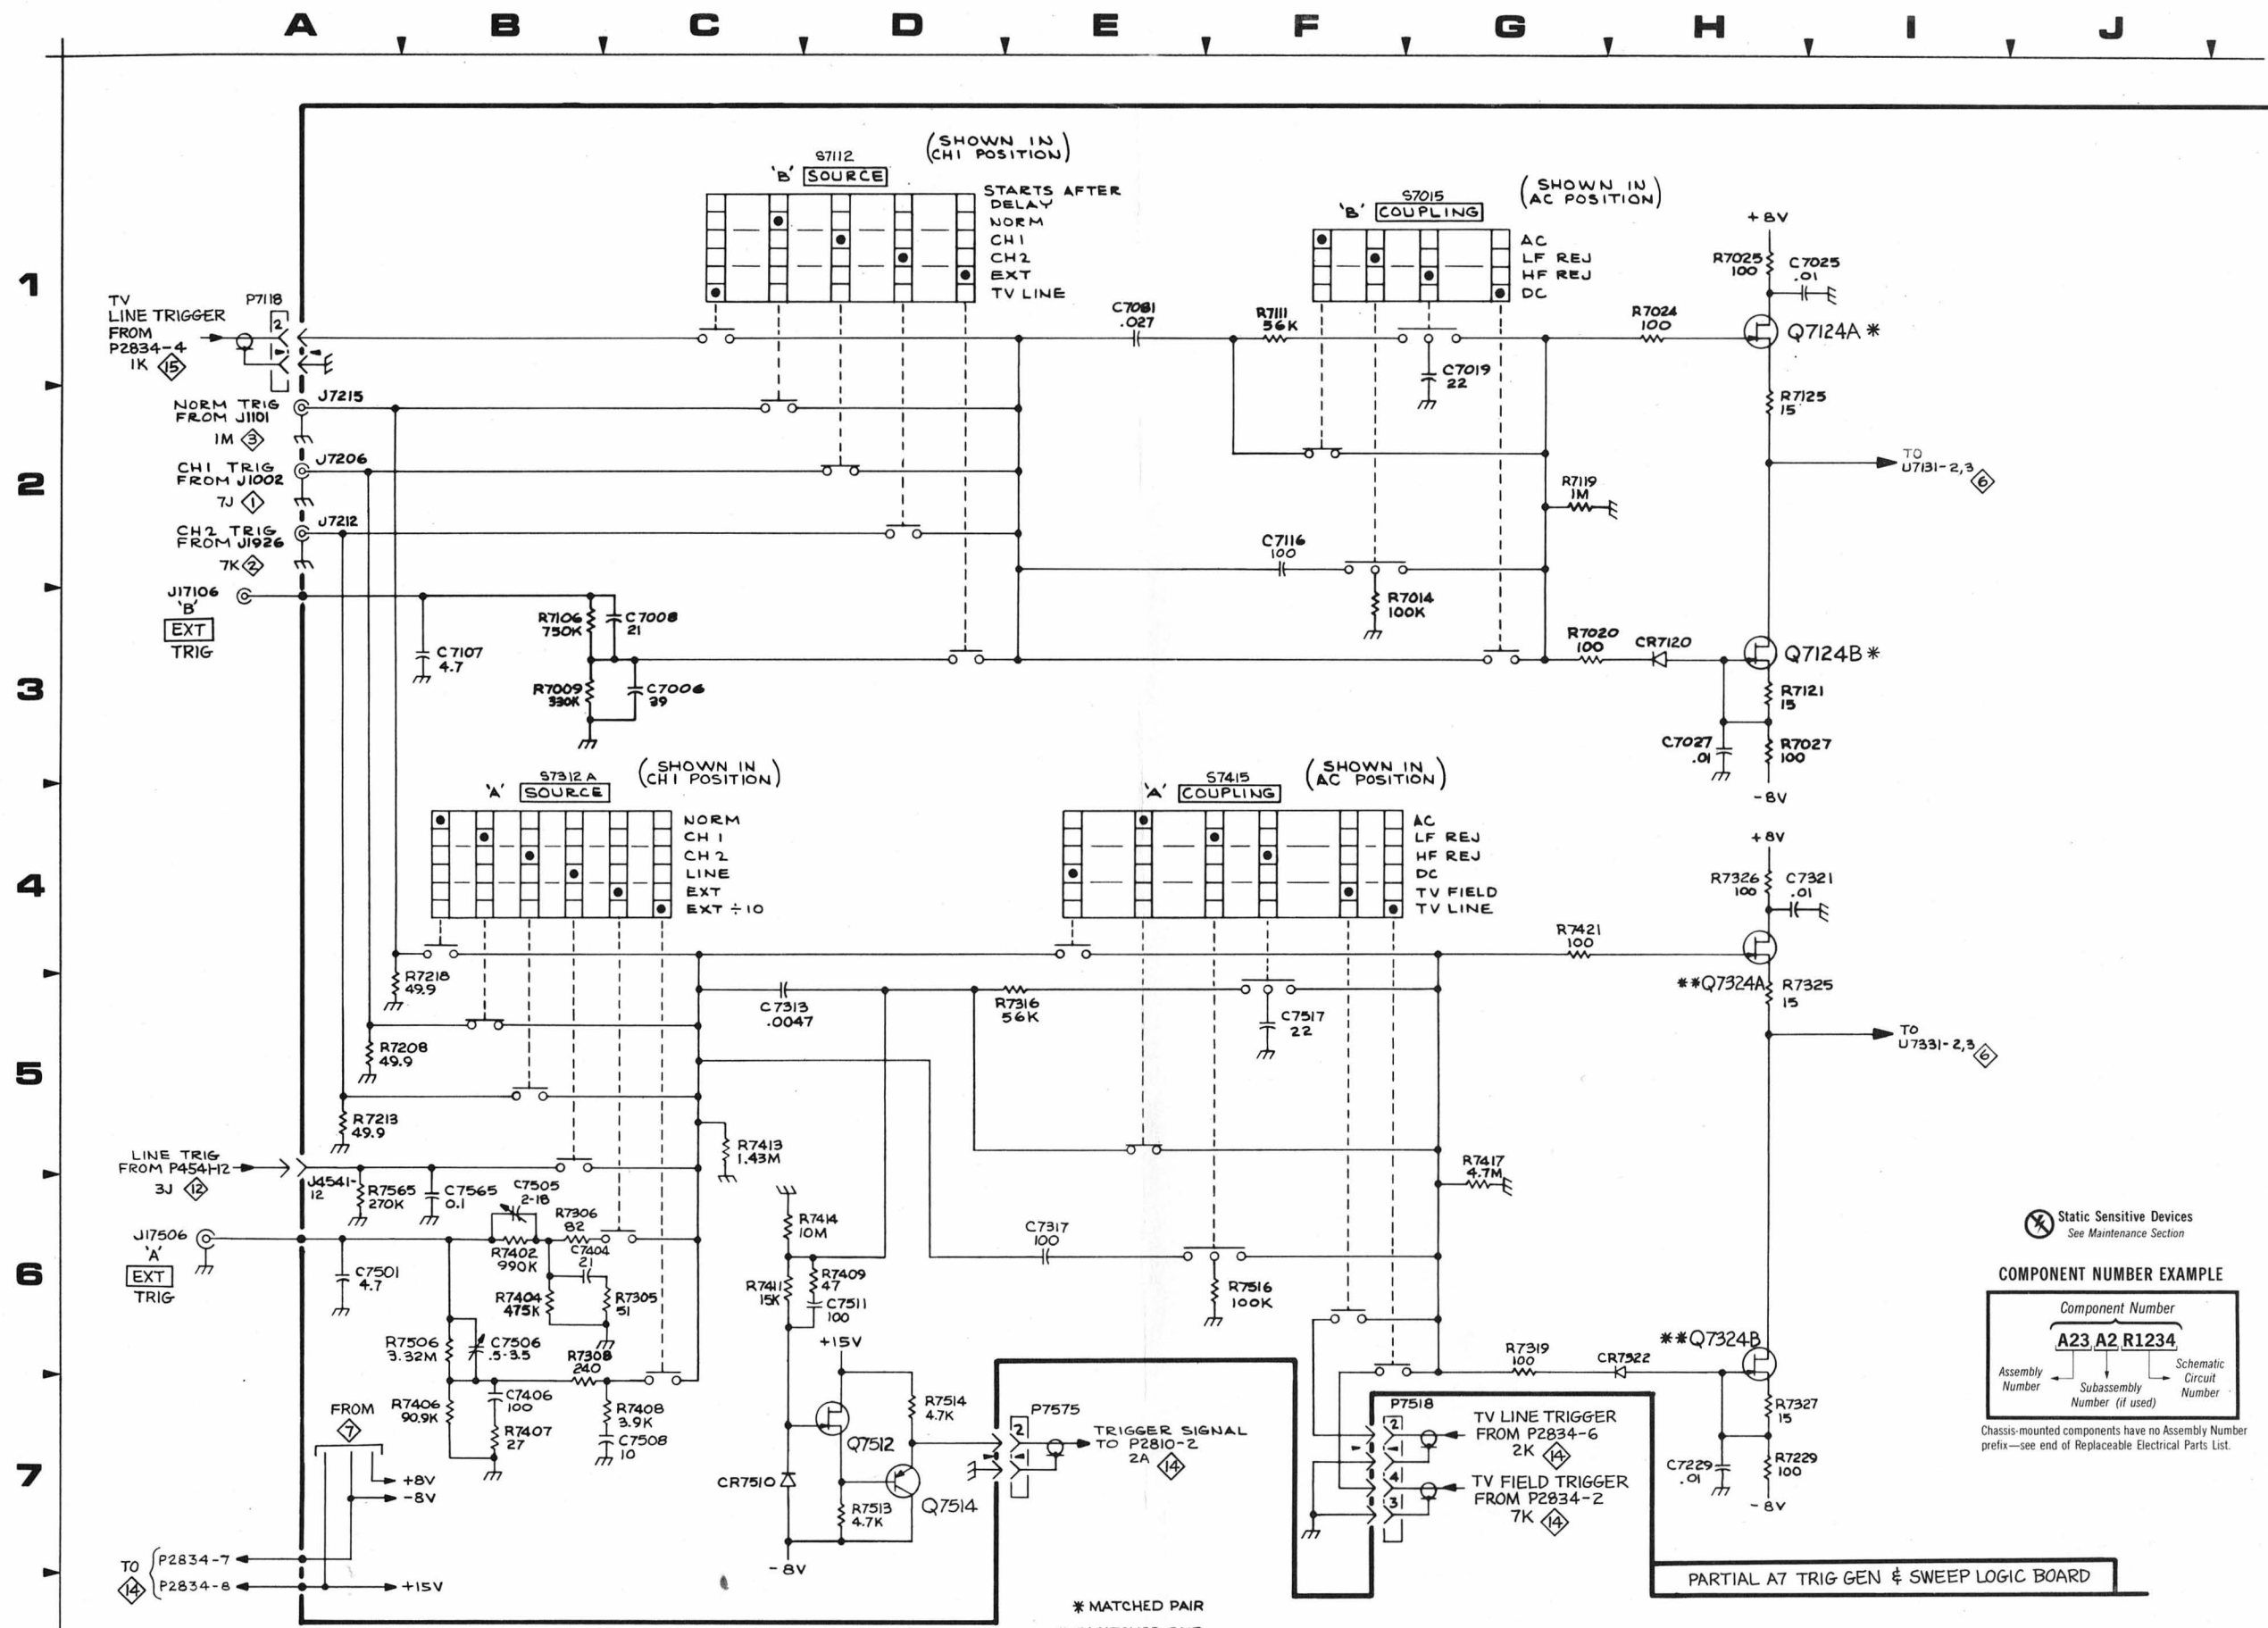

465B (SN B060000 & UP)

\* MATCHED PAIR  
\*\* MATCHED PAIR  
4273-40  
REV OCT 1982

OPTION 05 TRIGGER SWITCHES & TRIGGER PICKOFF


⊗ Static Sensitive Devices  
See Maintenance Section

**COMPONENT NUMBER EXAMPLE**

Component Number		
A23 A2 R1234		
Assembly Number	Subassembly Number (if used)	Schematic Circuit Number

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.



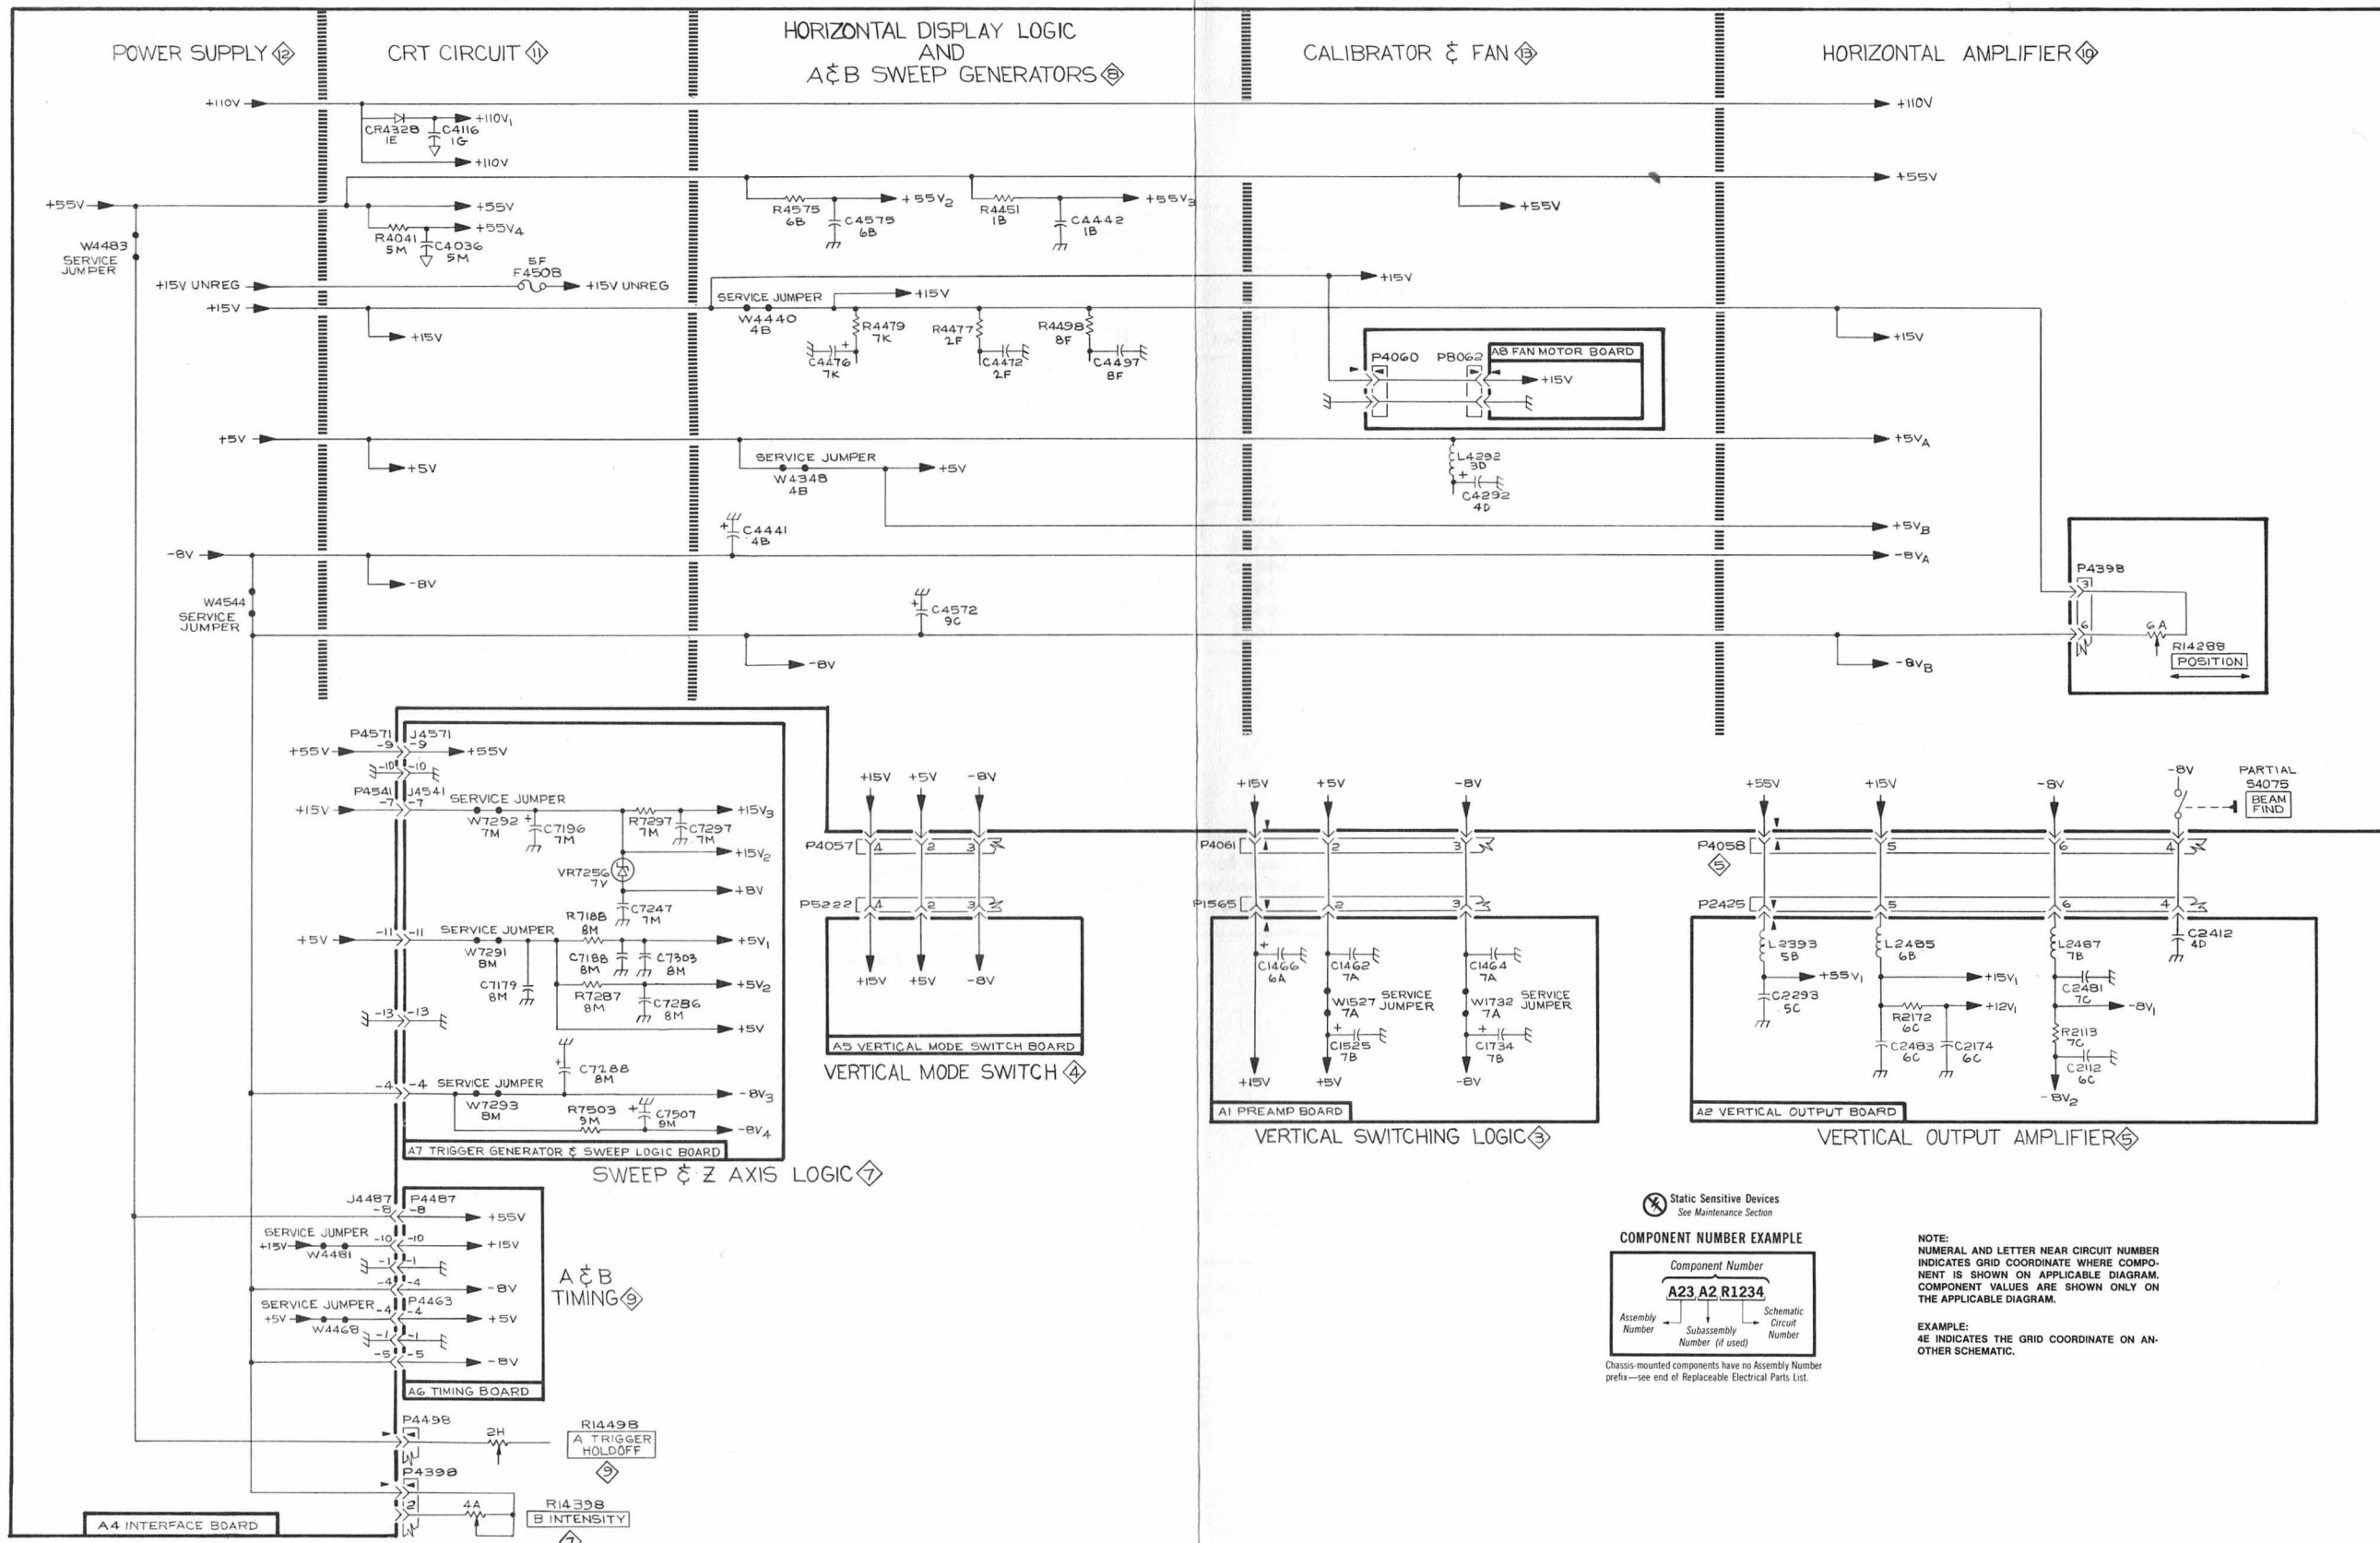

465B OSCILLOSCOPE (SN B060000 & UP)

4 R 79

(2751-88) 4273-42

Static Sensitive Devices  
See Maintenance Section


**COMPONENT NUMBER EXAMPLE**

Component Number		
A23	A2	R1234
Assembly Number	Subassembly Number (if used)	Schematic Circuit Number

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

**NOTE:**  
NUMERAL AND LETTER NEAR CIRCUIT NUMBER INDICATES GRID COORDINATE WHERE COMPONENT IS SHOWN ON APPLICABLE DIAGRAM. COMPONENT VALUES ARE SHOWN ONLY ON THE APPLICABLE DIAGRAM.

**EXAMPLE:**  
4E INDICATES THE GRID COORDINATE ON ANOTHER SCHEMATIC.

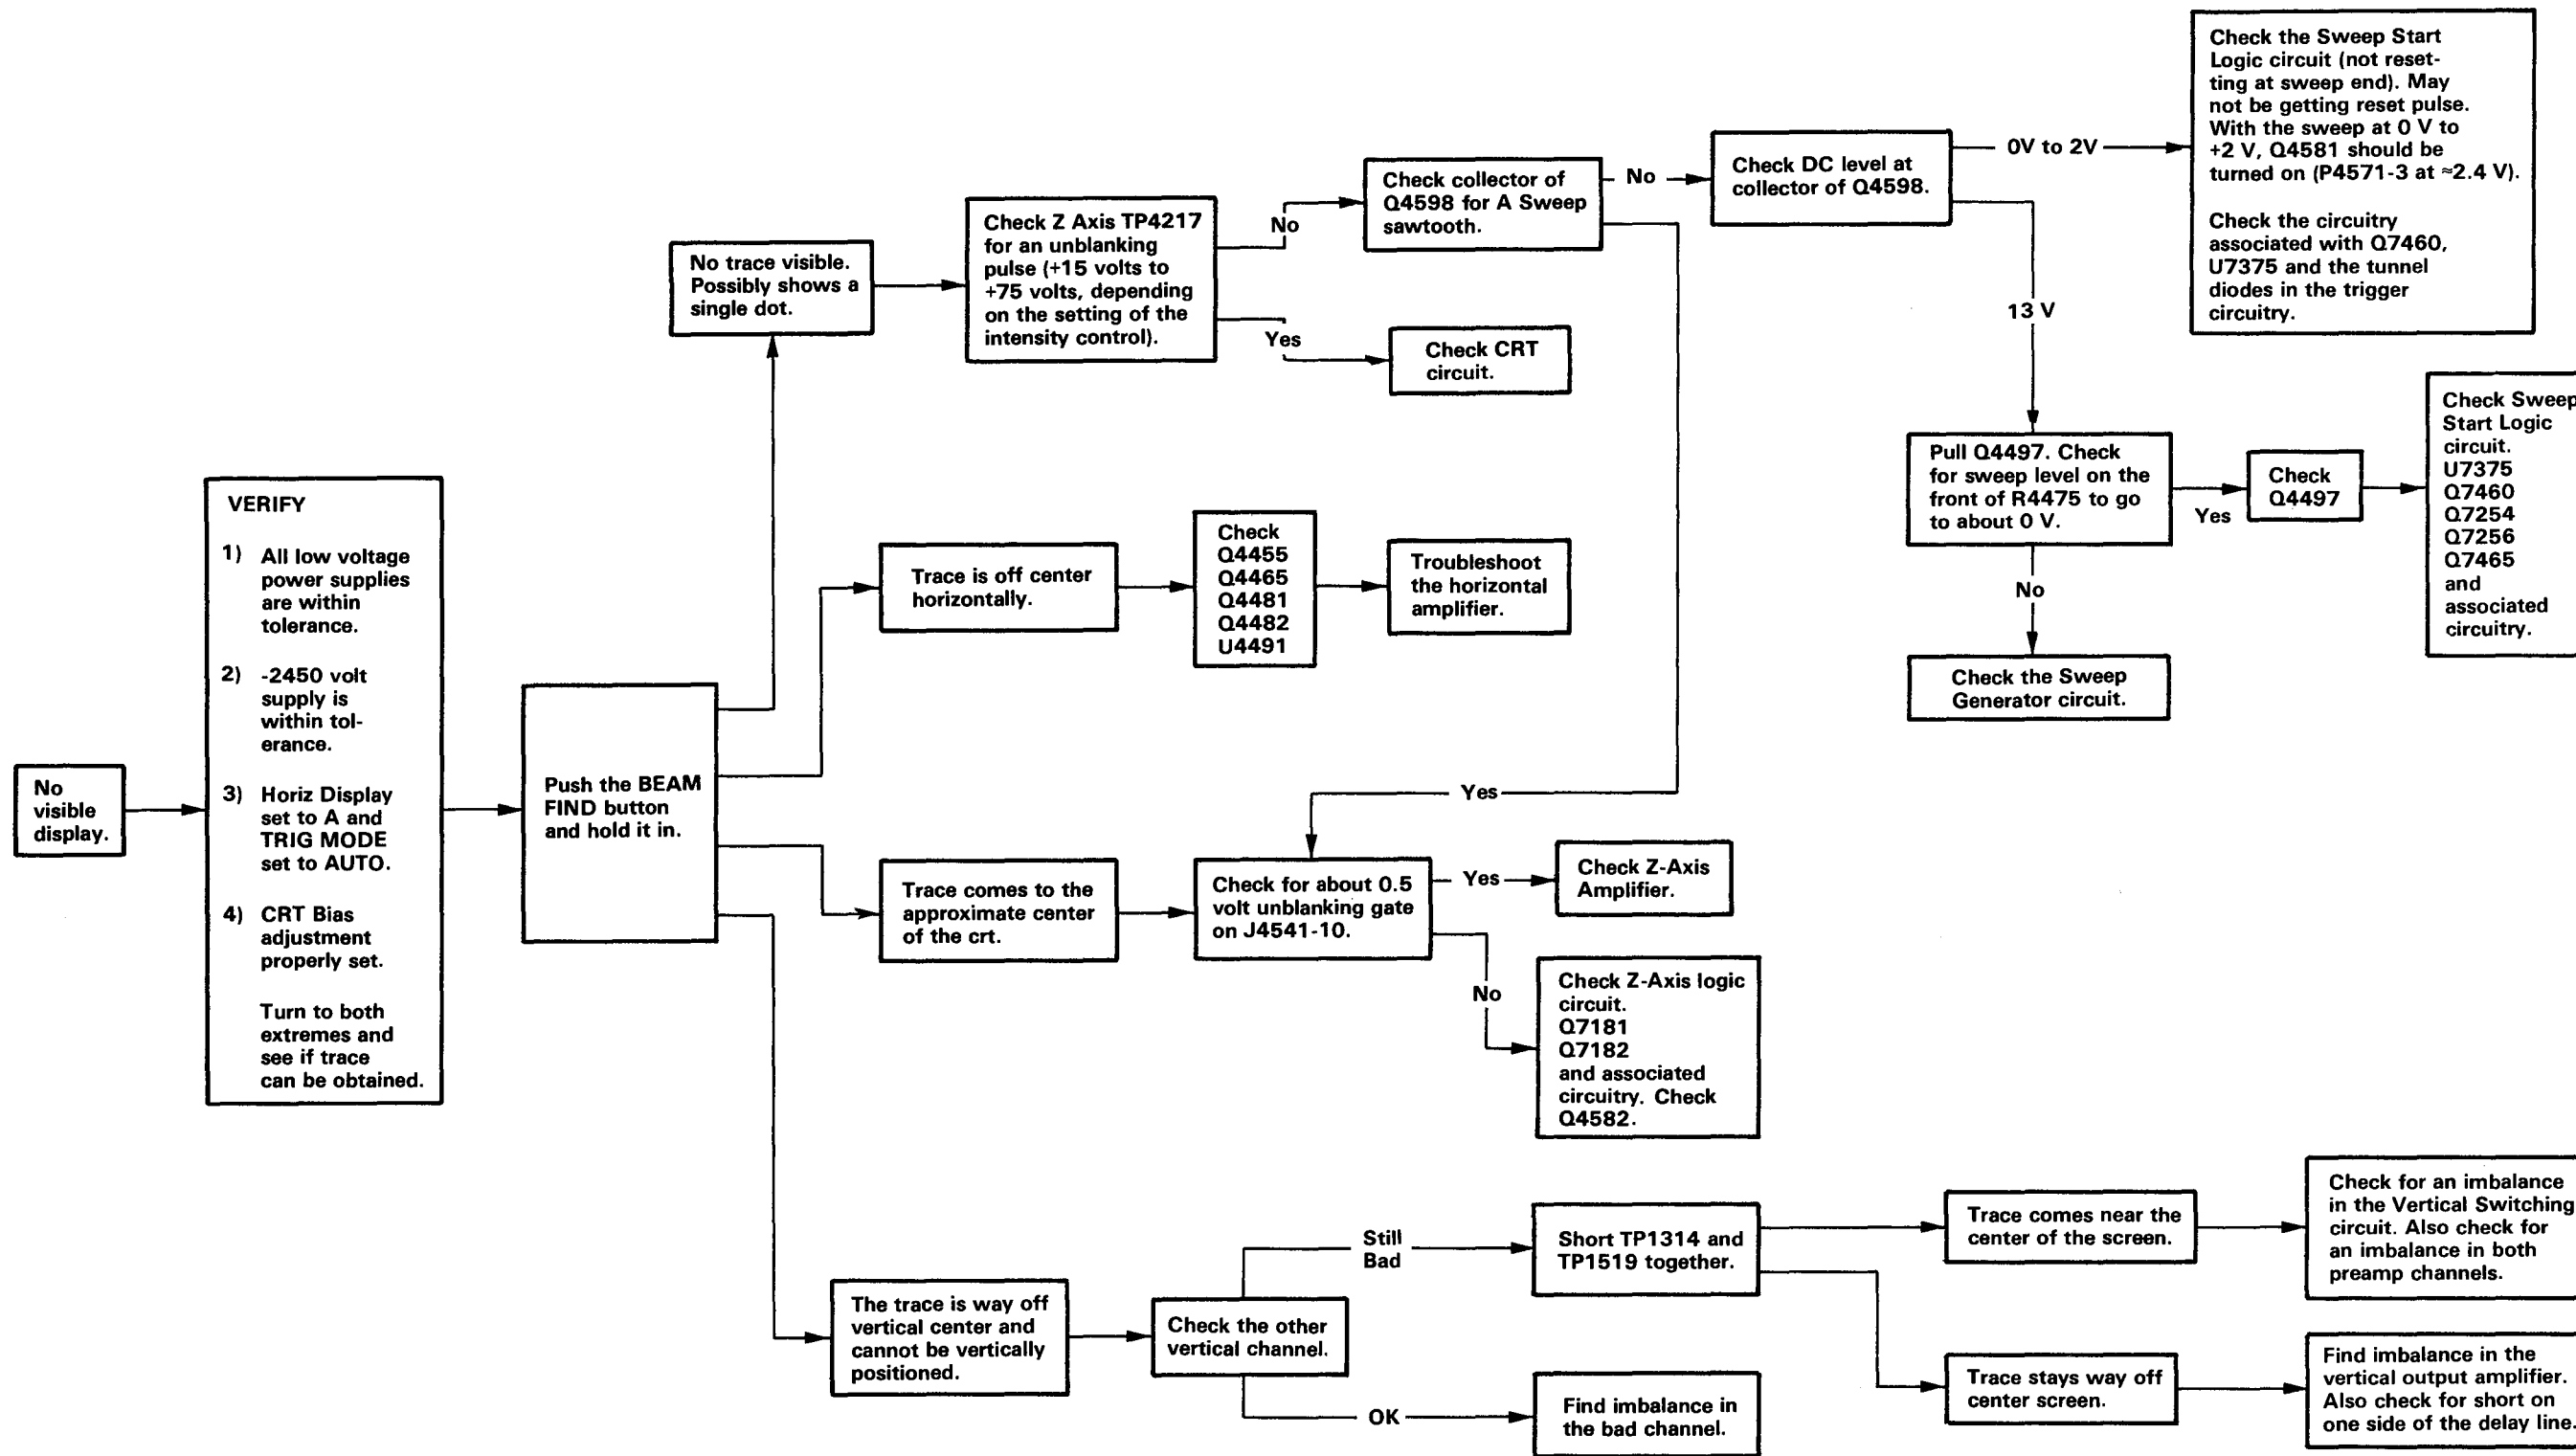


NO VISIBLE DISPLAY TROUBLESHOOTING

## POWER SUPPLY ISOLATION PROCEDURE

The following procedure is used as an aid in localizing the area in which loading of a power supply occurs. If the power supply comes up after isolating a circuit, it is very probable the problem is in that circuit. This can sometimes, however, lead to erroneous conclusions as a supply may pass through one circuit to another circuit. For instance, the +5 volt supply enters the Timing Board through P4463-4. It then passes through the timing switch (in the X-Y position only) and J4487-9 to CR4285 in the Horizontal Amplifier circuit. From J4487-9 it also passes through P4571-4 to the sweep control IC on the Trigger Board. Watch for these types of conditions when trying to localize a loading problem.

### +55 Volt Supply

1. Unsolder service jumper W4483 from the Interface board (see Figure 8-7). This isolates the Timing board and the Holdoff potentiometer.
2. To isolate the Trigger board from the +55 volt supply, it is necessary to remove the Trigger board from the instrument. The +55 volt supply connects to the Trigger board through P44751-9.
3. Unsolder one end of R4451 and R4575 on the Interface board (see Figure 8-7). This isolates the A & B Sweep Generator circuitry.
4. Unsolder one end of R4186 and R4191 from the Interface board (see Figure 8-7). This isolates the Calibrator circuitry.
5. If the +55 volt supply is still loaded, suspect the CRT circuitry, or the Horizontal Amplifier circuitry. Refer to Diagram 10 to locate +55 volt connections to the Horizontal Amplifier circuitry and to Diagram 11 to locate +55 volt connections to the CRT circuitry.

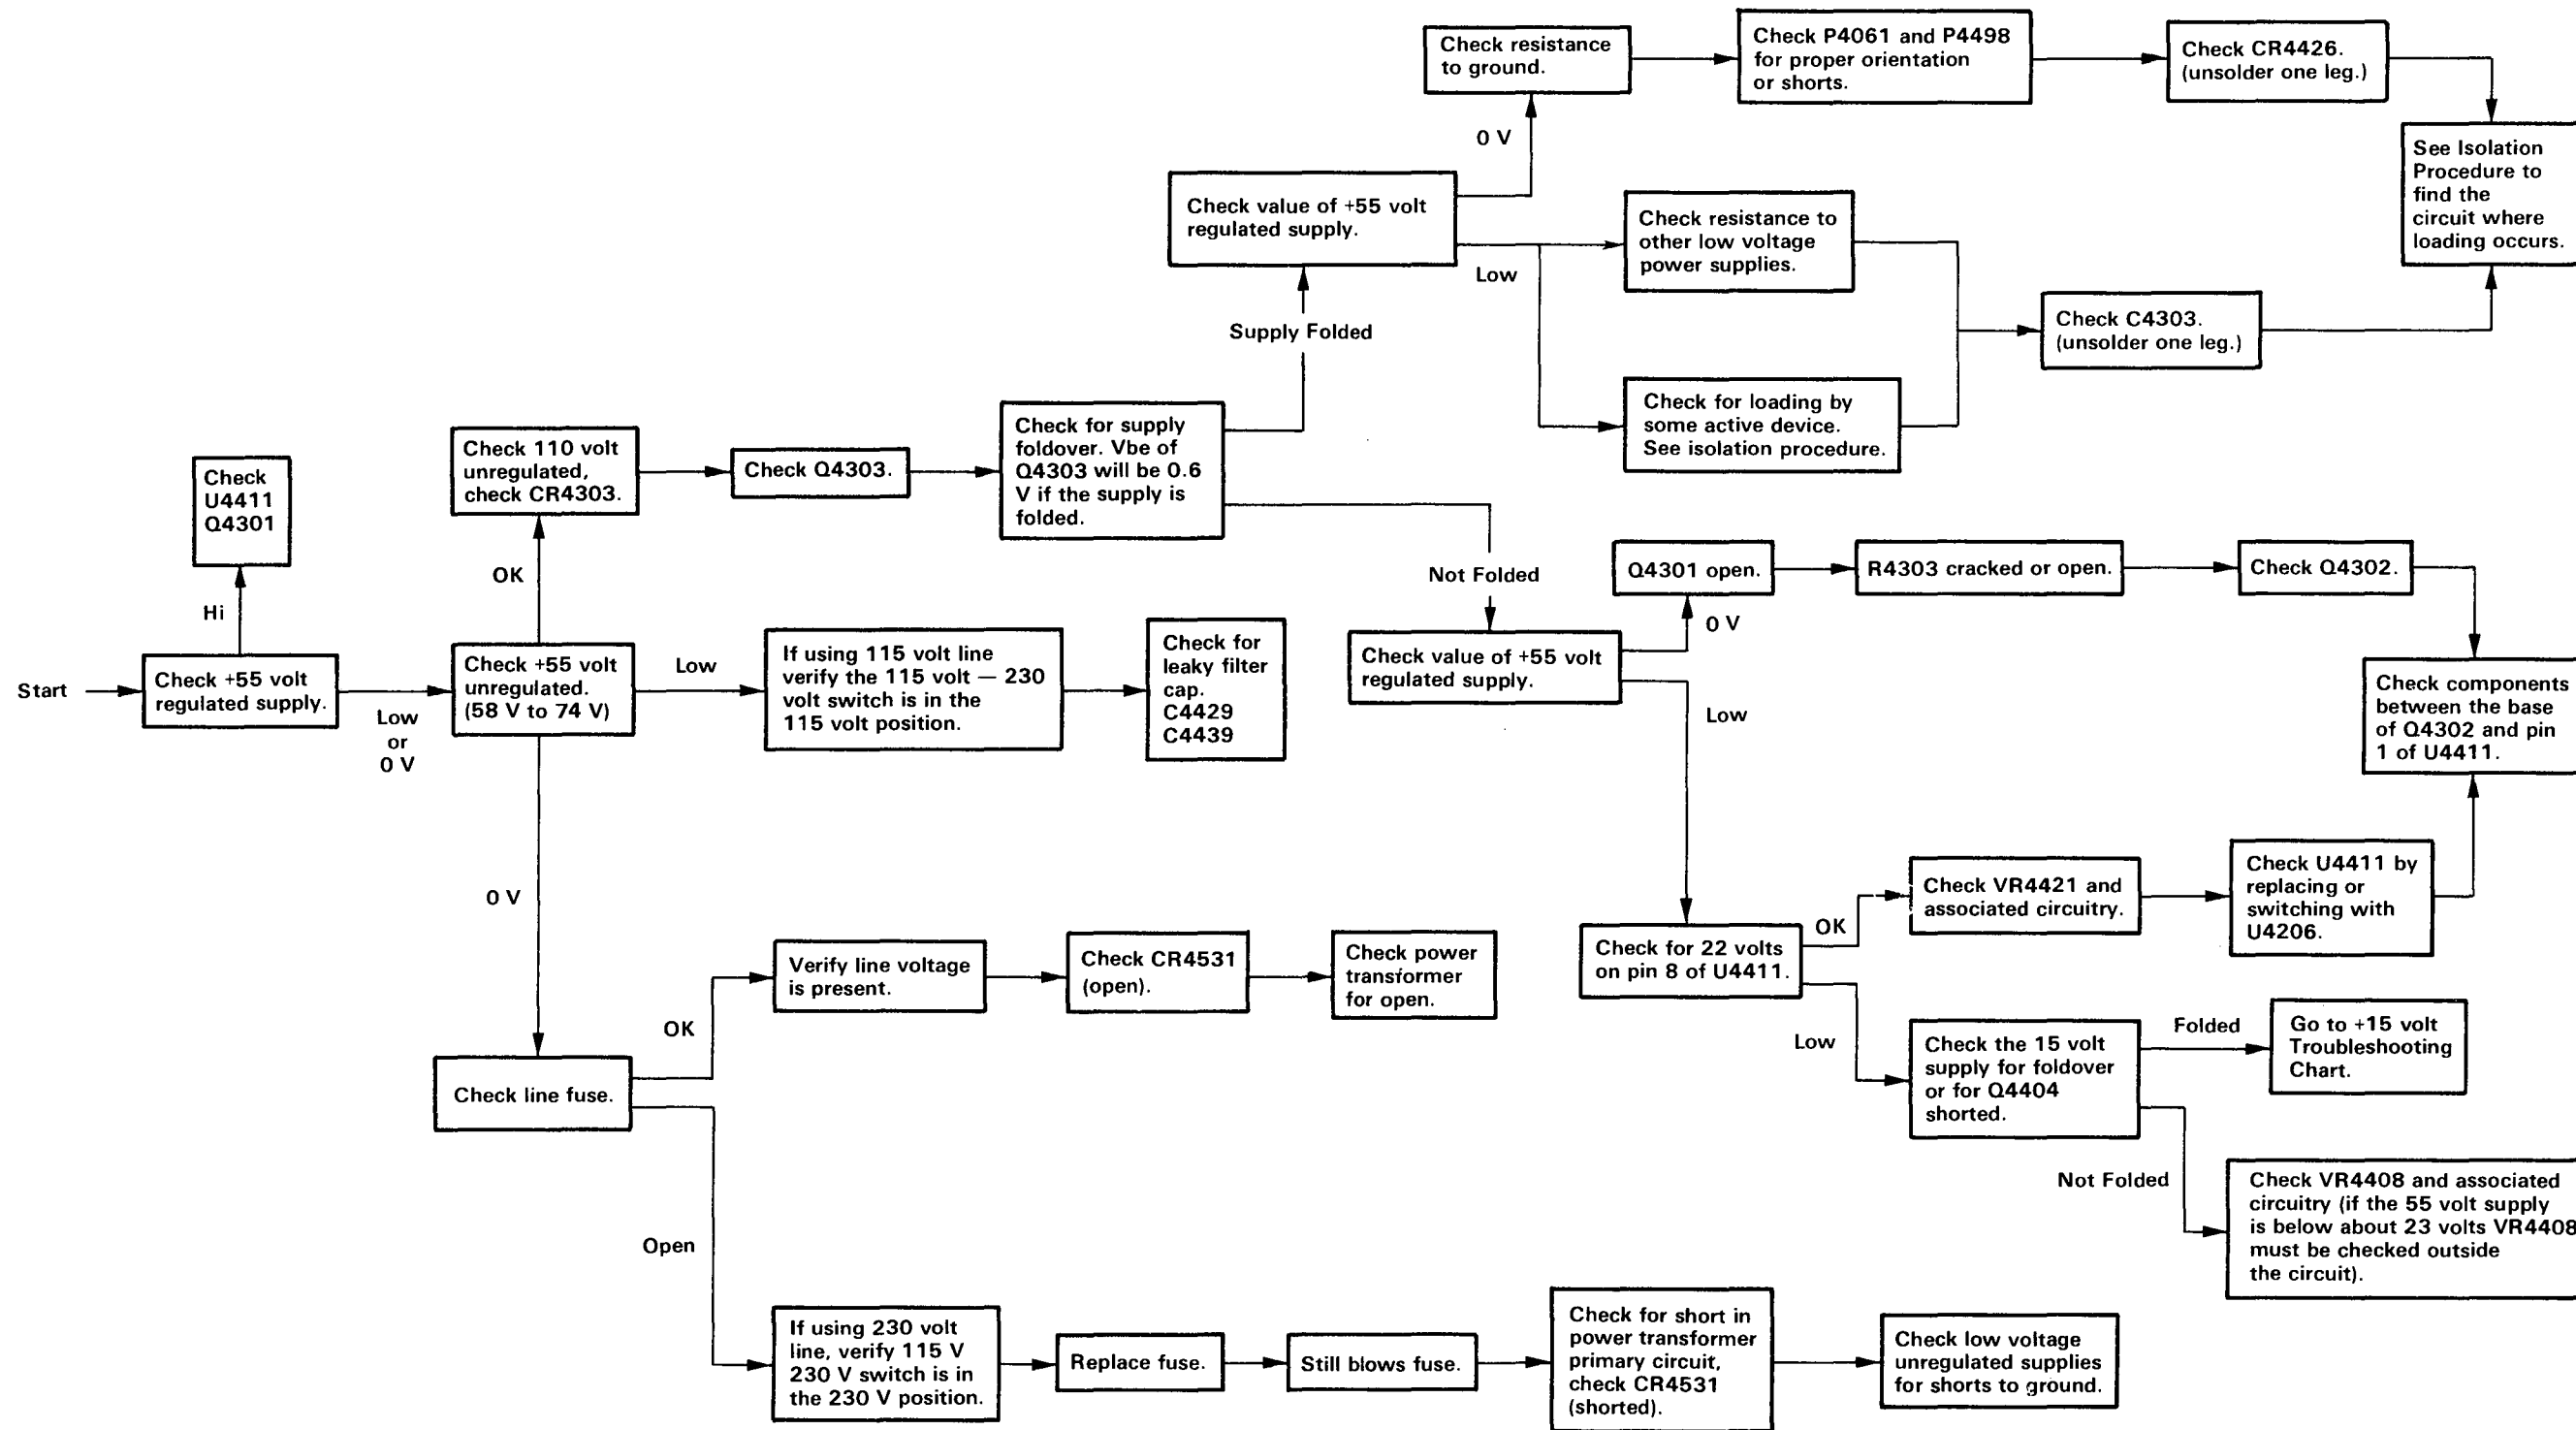

+55V SUPPLY TROUBLESHOOTING

**POWER SUPPLY ISOLATION PROCEDURE**

The following procedure is used as an aid in localizing the area in which loading of a power supply occurs. If the power supply comes up after isolating a circuit, it is very probable the problem is in that circuit. This can sometimes, however, lead to erroneous conclusions as a supply may pass through one circuit to another circuit. For instance, the +5 volt supply enters the Timing Board through P4463-4. It then passes through the timing switch (in the X-Y position only) and J4487-9 to CR4285 in the Horizontal Amplifier circuit. From J4487-9 it also passes through P4571-4 to the sweep control IC on the Trigger Board. Watch for these types of conditions when trying to localize a loading problem.

**+15 Volt Supply**


1. Pull P4061 from the Interface board. This isolates the Vertical Preamplifier board.
2. Pull P4060 from the Interface board. This isolates the Fan Motor circuit.
3. Pull P4057 from the Interface board. This isolates the Vertical Mode board.
4. Pull P4058 from the Interface board. This isolates the Vertical Output board.
5. Pull P4398 from the Interface board. This isolates the Horizontal POSITION potentiometers.
6. Unsolder service jumper W7292 on the Trigger board (see Figure 8-6). This isolates the Trigger board.
7. Unsolder service jumper W4481 from the Timing board (see Figure 8-8). This isolates the Timing board.
8. Unsolder service jumper W4440 on the Interface board (see Figure 8-8). This isolates the A & B Sweep Generator circuitry and the Horizontal Amplifier circuitry.
9. If the +15 volt supply is still loaded, suspect the CRT circuitry (Z-Axis Amplifier). Refer to Diagram 11 to locate +15 volt connection to the CRT circuitry.

**+5 Volt Supply**

1. Pull P4061 from the Interface board. This isolates the Vertical Preamplifier board.
2. Pull P4057 from the Interface board. This isolates the Vertical Mode board.
3. Pull P4058 from the Interface board. This isolates the Vertical Output board.
4. Pull P4498 from the Interface board. This isolates the HOLDOFF potentiometer.
5. Unsolder service jumper W4468 from the Interface board (see Figure 8-7). This isolates the Timing board.
6. Unsolder service jumper W7291 from the Trigger board (see Figure 8-6). This isolates the Trigger board.
7. Unsolder service jumper W4348 from the Interface board (see Figure 8-7). This isolates the A & B Sweep Generator circuitry and part of the Horizontal Amplifier circuitry.
8. Unsolder one end of R4158 and R4263 from the Interface board (see Figure 8-7). This isolates the rest of the Horizontal Amplifier circuitry.
9. Unsolder L4292 from the Interface board (see Figure 8-7). This isolates the Calibrator circuitry.
10. If the +5 volt supply is still loaded, the CRT circuitry should be suspected. Refer to Diagram 11 to locate +5 volt connections to the CRT circuitry.

**-8 Volt Supply**

1. Pull P4061 from the Interface board. This isolates the Vertical Preamplifier board.
2. Pull P4057 from the Interface board. This isolates the Vertical Mode board.
3. Pull P4058 from the Interface board. This isolates the Vertical Output Amplifier board.
4. Pull P4398 from the Interface board. This isolates the Horizontal POSITION and B INTENSITY potentiometers.
5. Unsolder service jumper W7293 from the Trigger board to isolate part of the Trigger board. Unsolder one end of R7503 from the Trigger board to isolate the rest of the Trigger board (see Figure 8-6).
6. Unsolder service jumper W4544 from the Interface board (see Figure 8-7). This isolates the Timing board, A & B Sweep Generator circuitry, and part of the Horizontal Amplifier circuitry. It will also completely remove the -8 volts from the Trigger board if step 5 is not done.
7. Check C4441 for a short or leakage.
8. If the -8 volts supply is still loaded, suspect the CRT circuitry (Z-Axis Amplifier), or the Horizontal Amplifier circuitry. Refer to Diagram 10 for the -8 volt connections to the Horizontal Amplifier circuitry and to Diagram 11 for the -8 volt connections to the CRT circuitry.

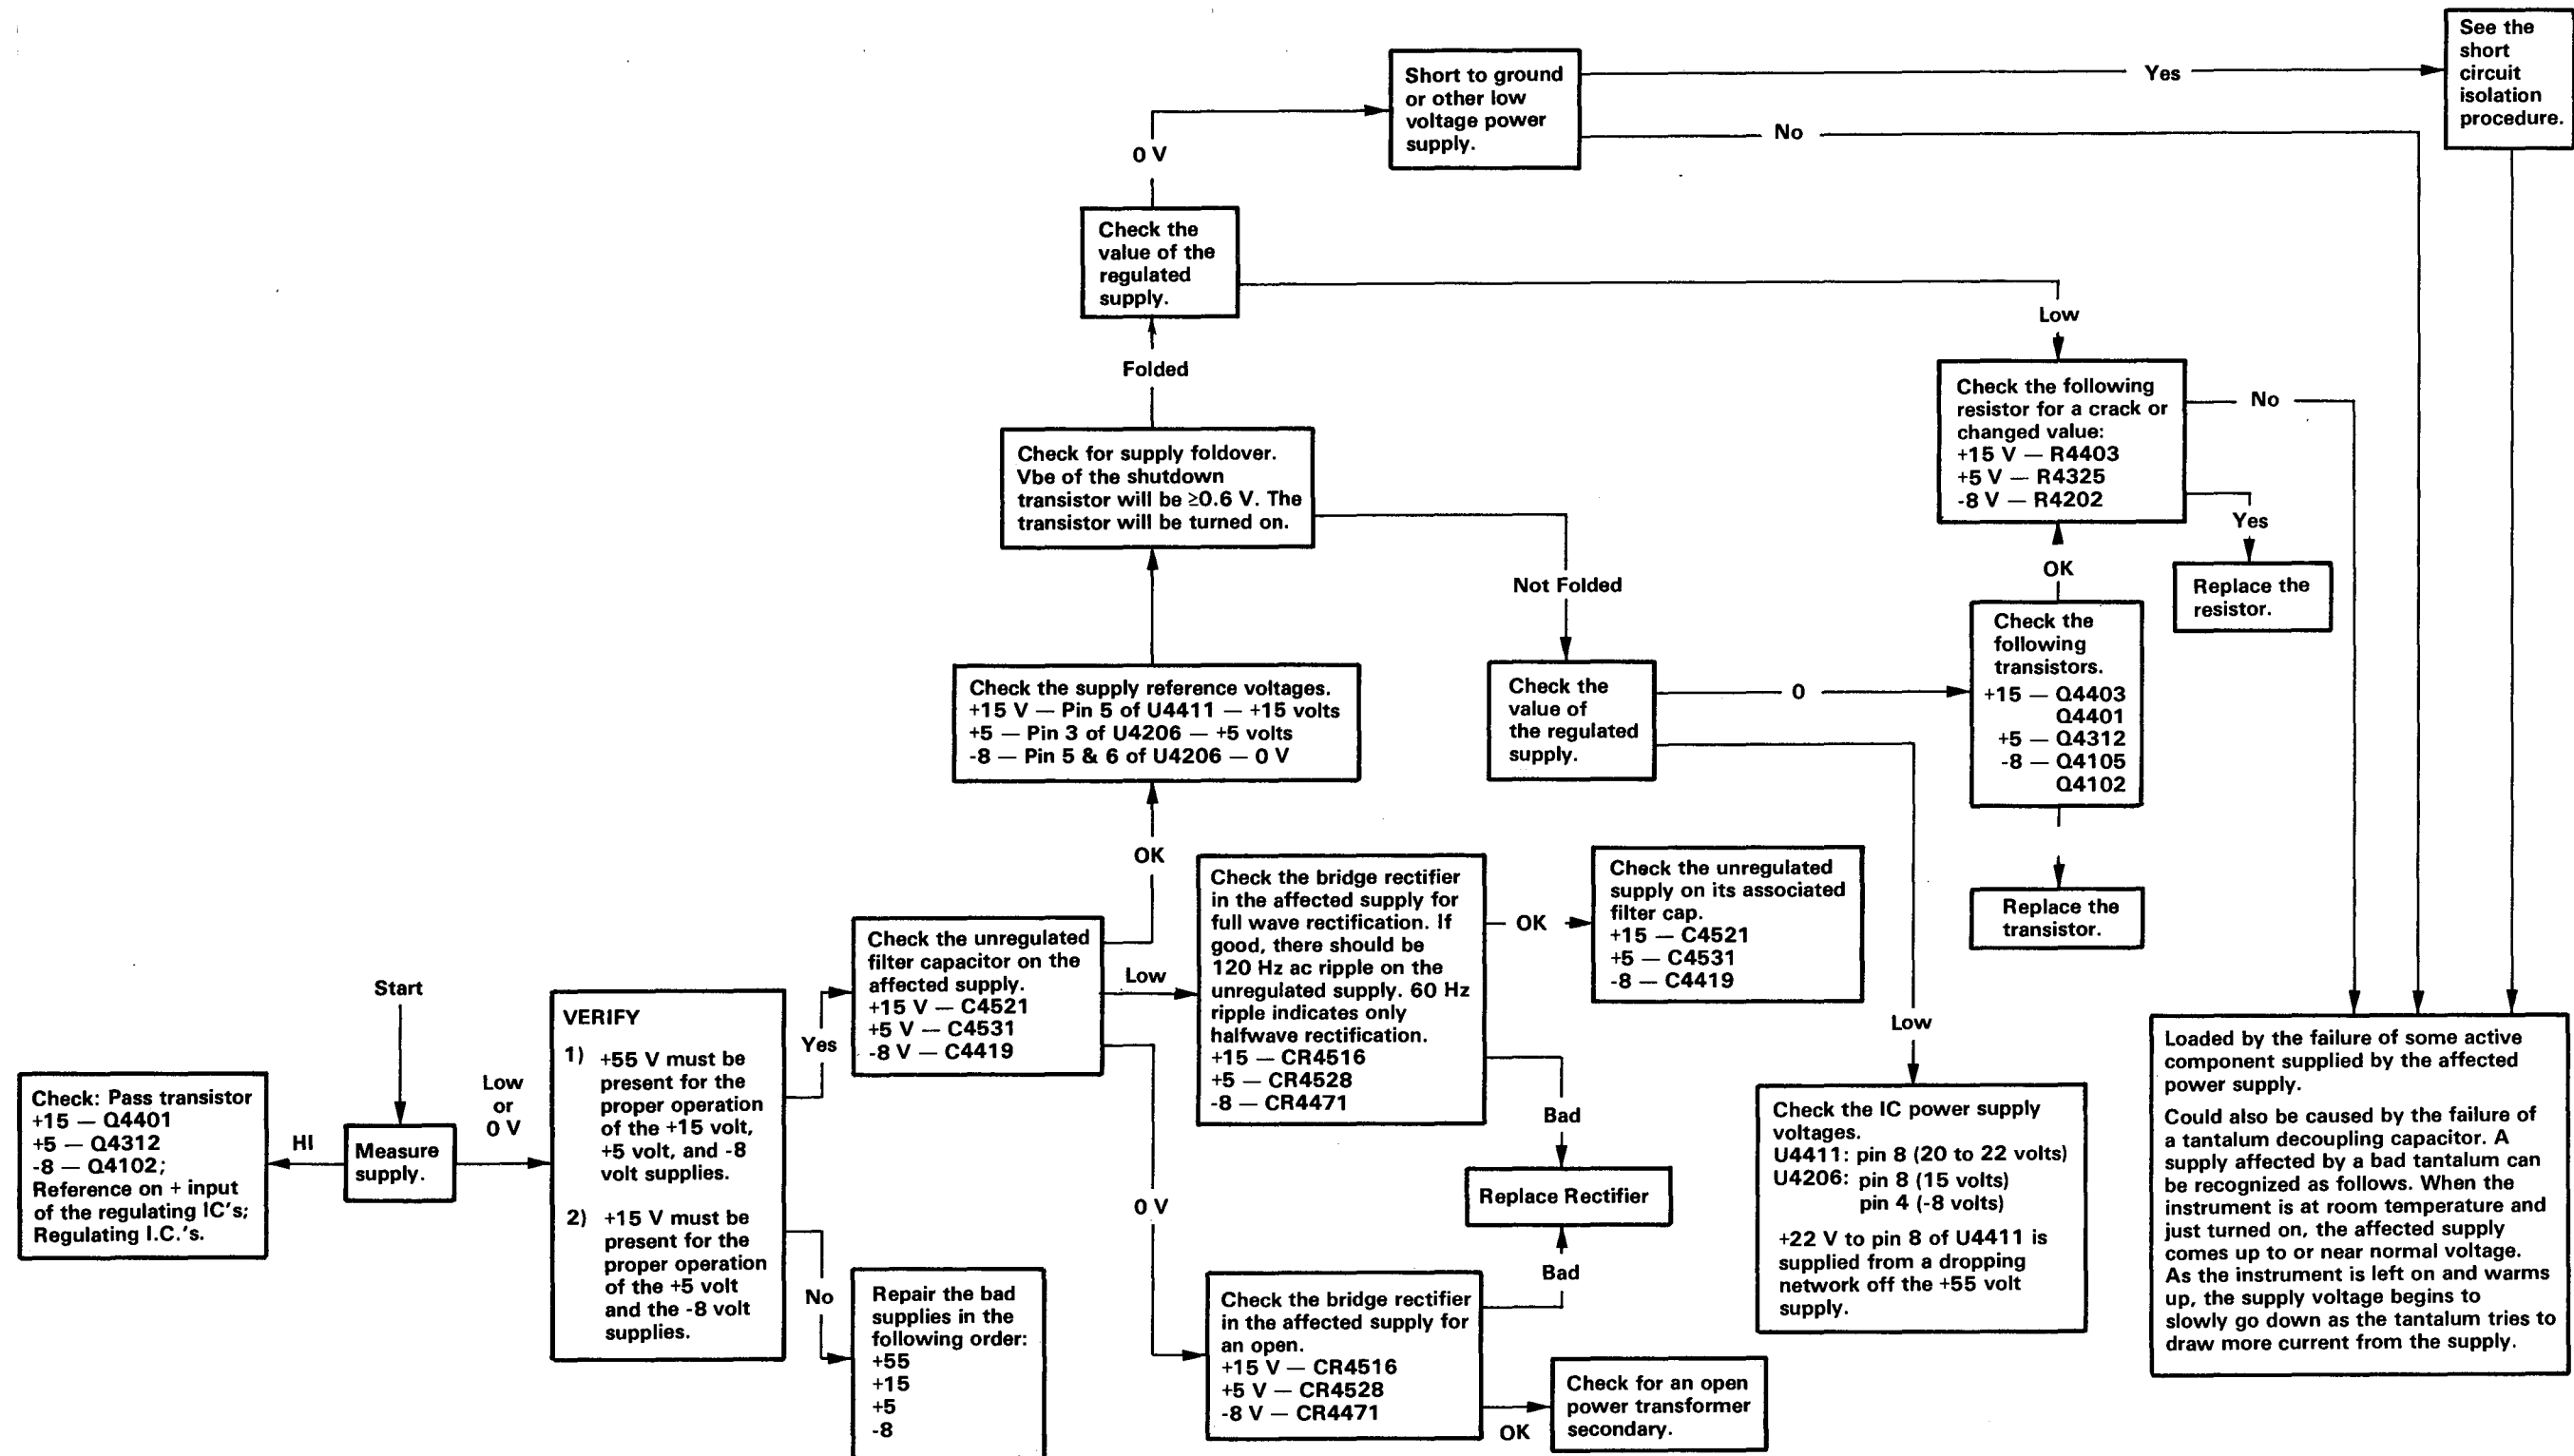

Loaded by the failure of some active component supplied by the affected power supply.  
Could also be caused by the failure of a tantalum decoupling capacitor. A supply affected by a bad tantalum can be recognized as follows. When the instrument is at room temperature and just turned on, the affected supply comes up to or near normal voltage. As the instrument is left on and warms up, the supply voltage begins to slowly go down as the tantalum tries to draw more current from the supply.


(2757-52)4273-44

**POWER SUPPLY ISOLATION PROCEDURE**


The following procedure is used as an aid in localizing the area in which loading of a power supply occurs. If the power supply comes up after isolating a circuit, it is very probable the problem is in that circuit. This can sometimes, however, lead to erroneous conclusions as a supply may pass through one circuit to another circuit. For instance, the +5 volt supply enters the Timing Board through P4463-4. It then passes through the timing switch (in the X-Y position only) and J4487-9 to CR4285 in the Horizontal Amplifier circuit. From J4487-9 it also passes through P4571-4 to the sweep control IC on the Trigger Board. Watch for these types of conditions when trying to localize a loading problem.

**+110 Volt Supply**

1. Unsolder one end of VR4341, R4145, and R4346 (see Figure 8-7). This isolates the Horizontal Amplifier circuit.
2. Unsolder one end of CR4328 and R4332 (see Figure 8-7). If loading still exist, check adjustment of R4069 (Geometry) and R4178 (ASTIG). If either does not adjust and an internal short is suspected, it will be necessary to remove R4069 and R4178 to isolate the CRT circuitry (Z-Axis Amplifier).

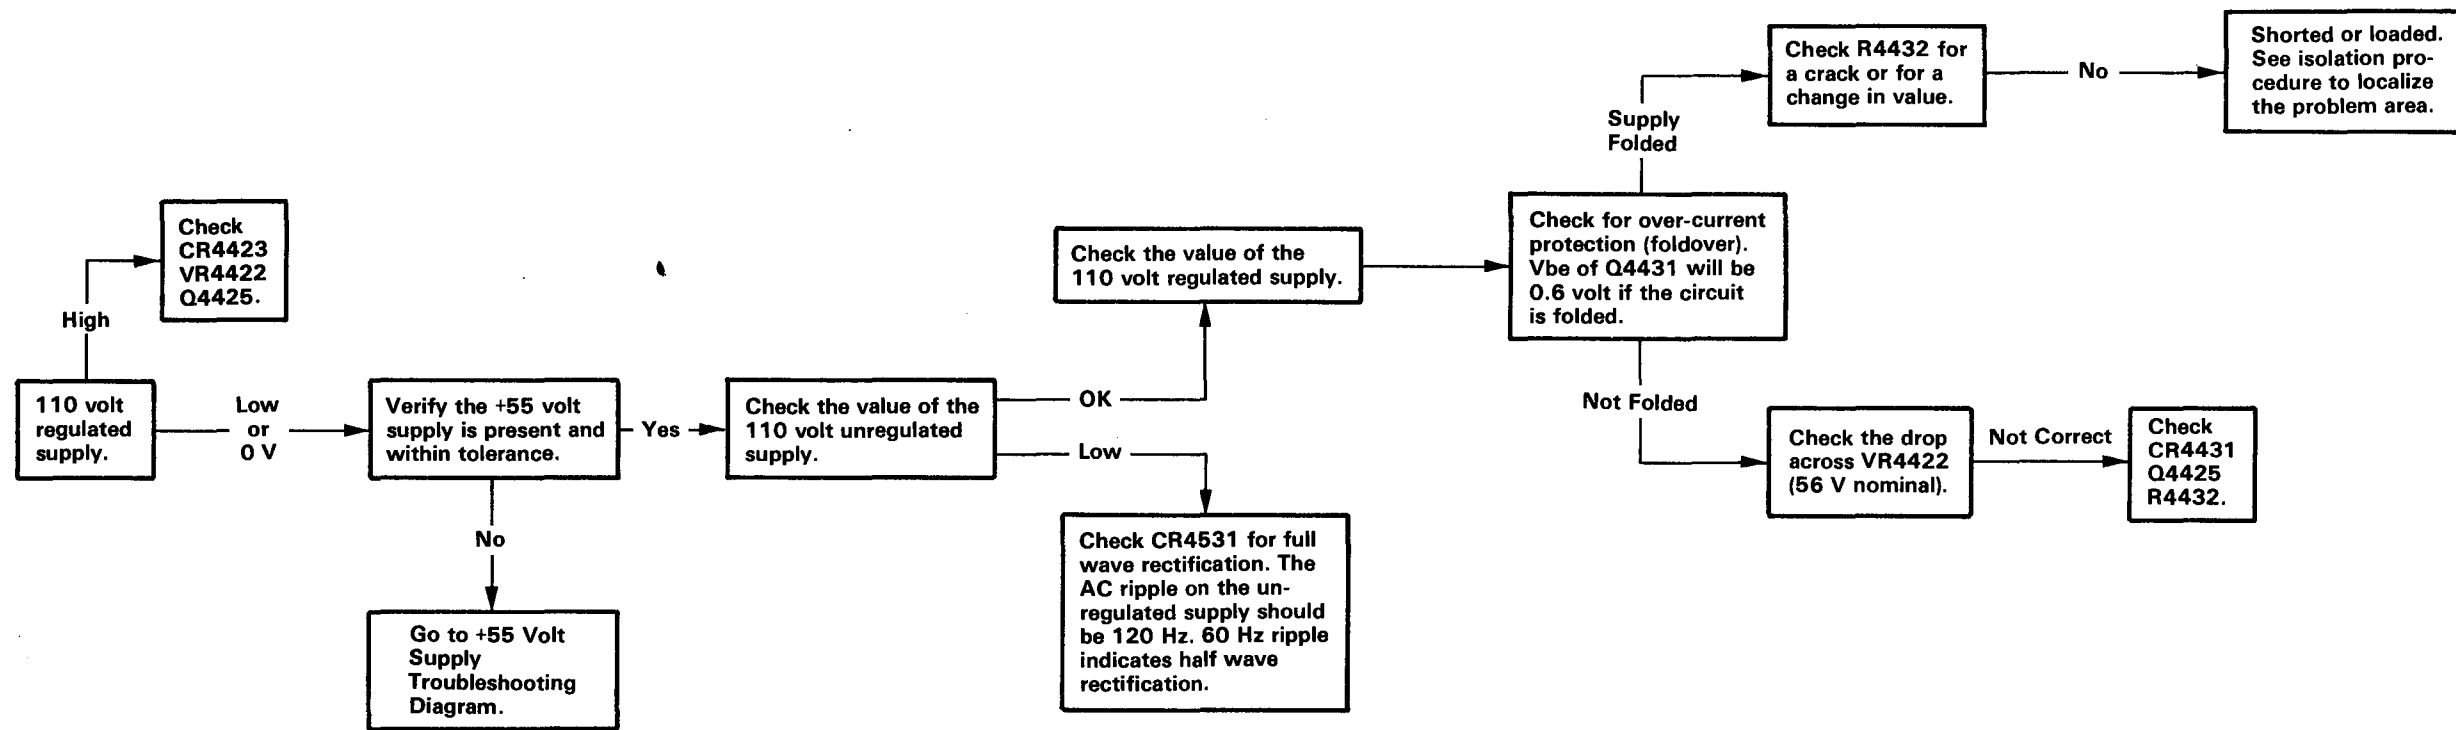



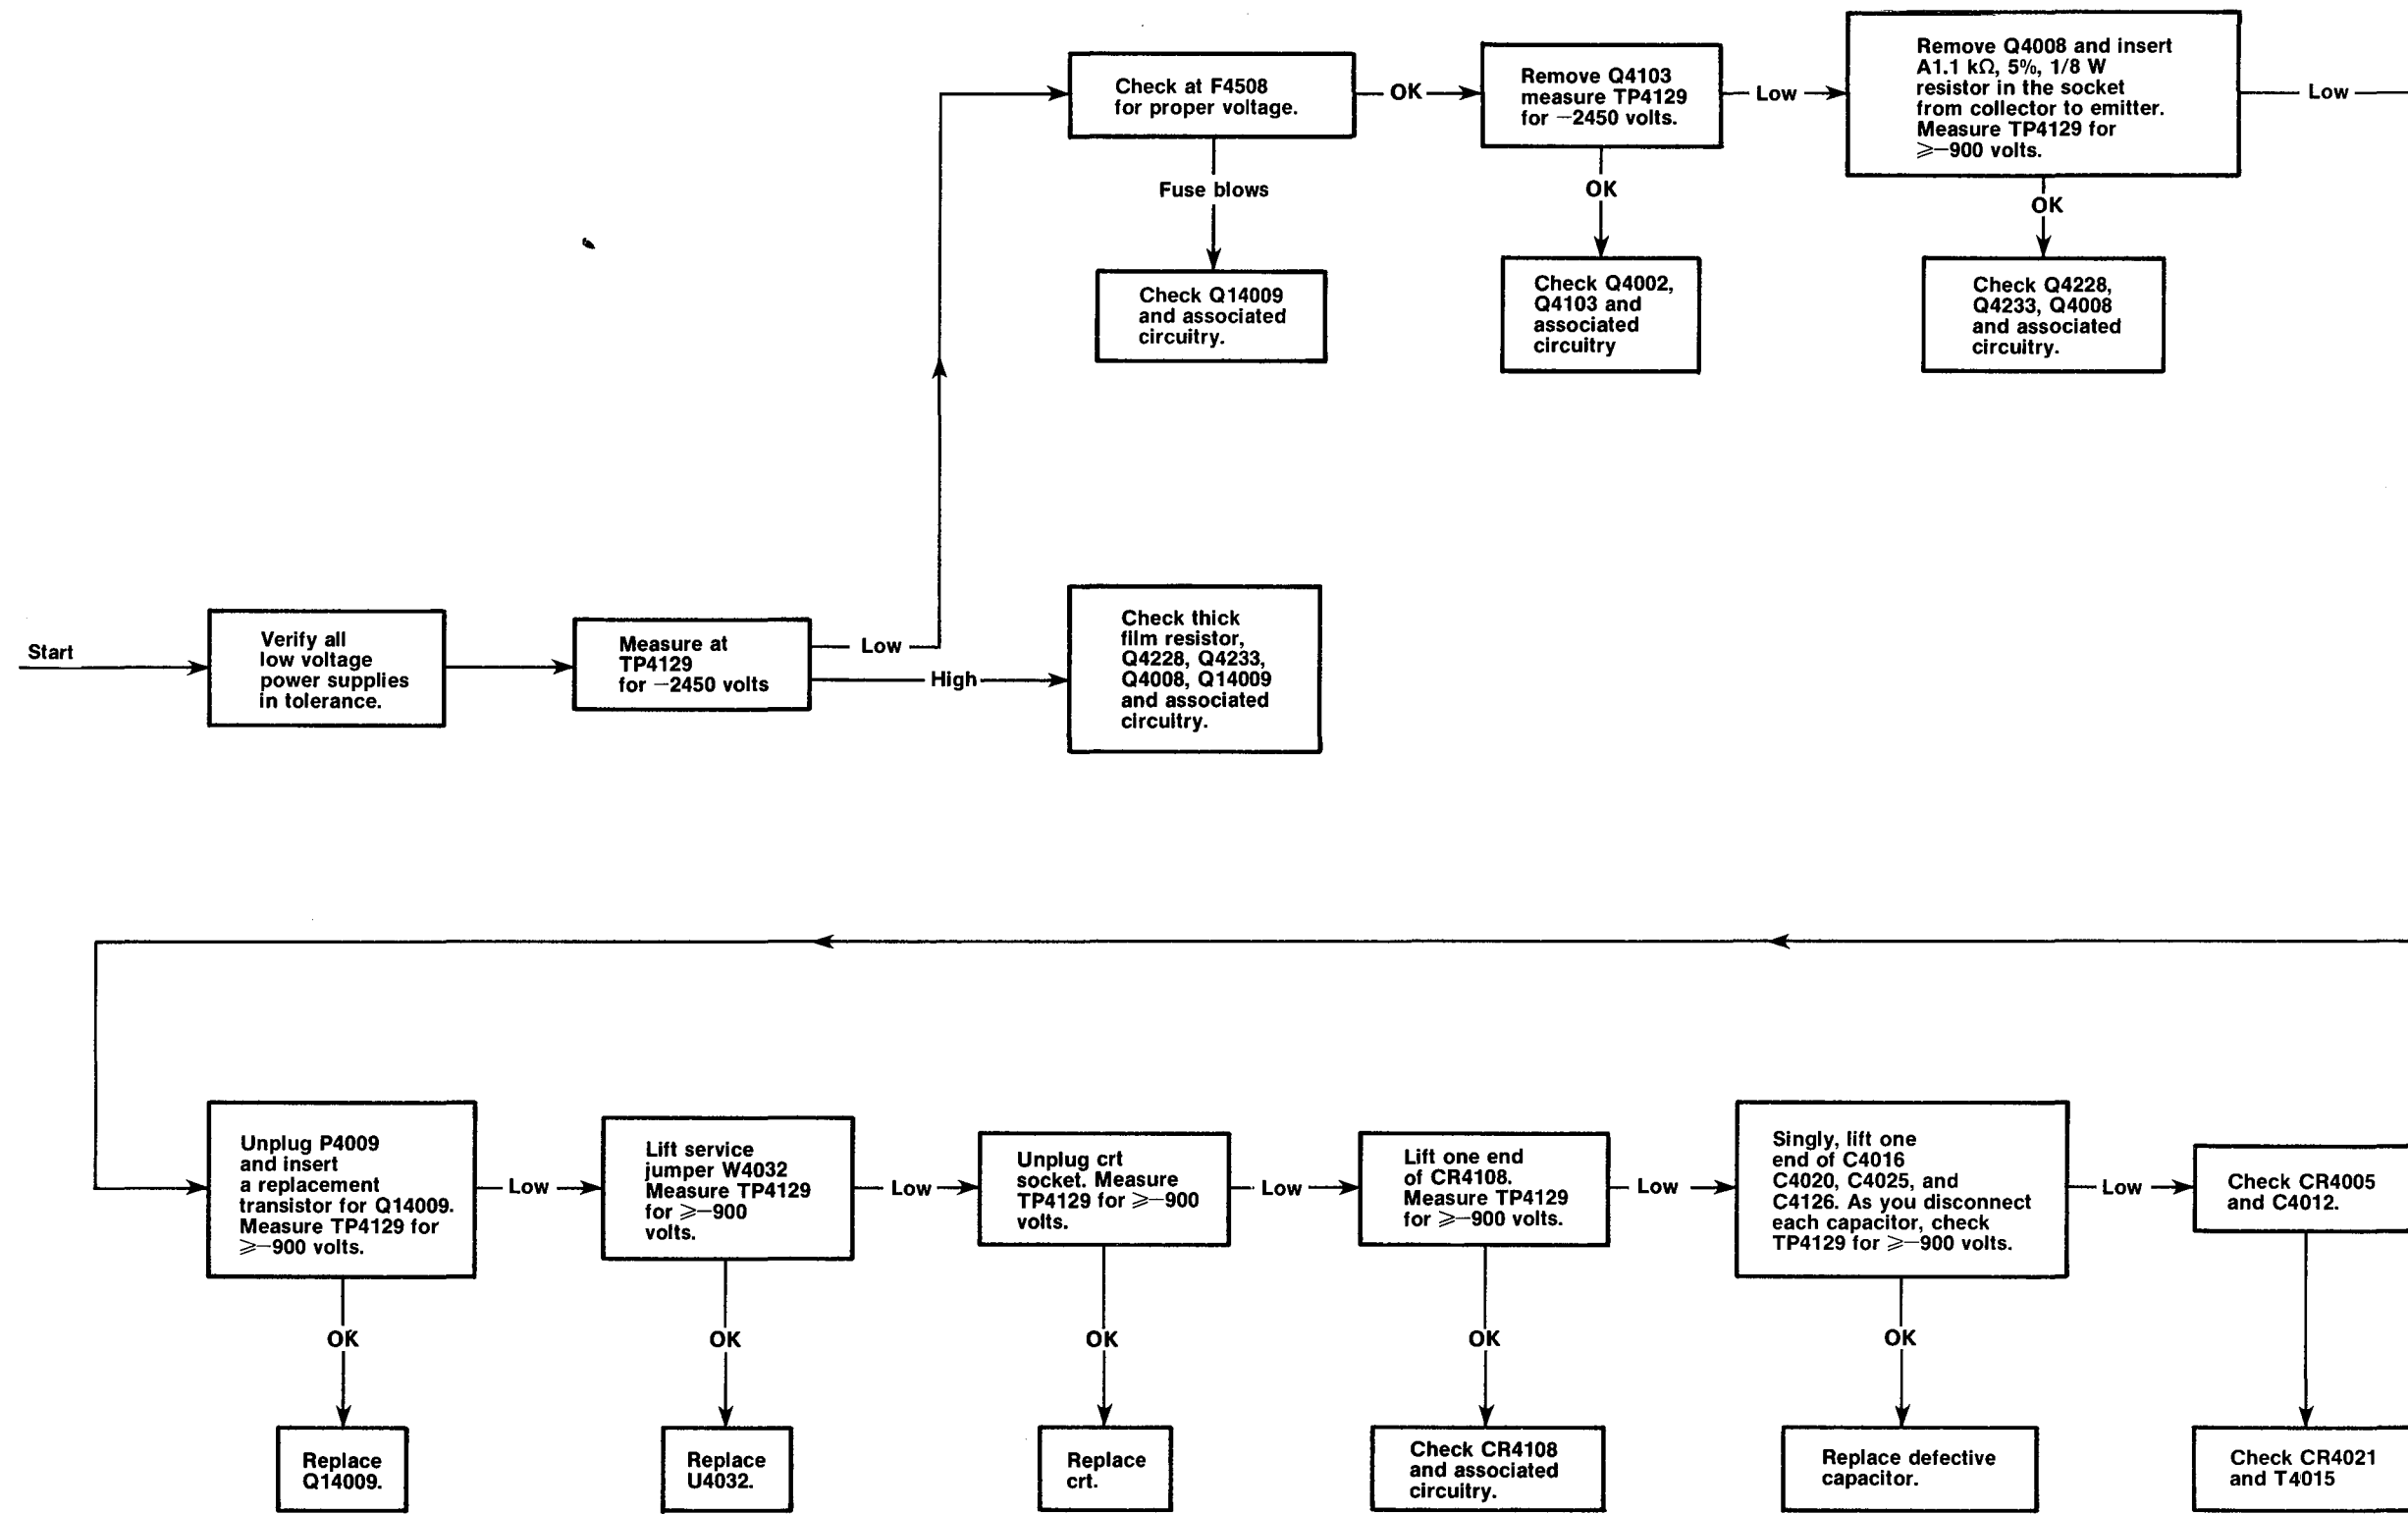

-2450V SUPPLY TROUBLESHOOTING

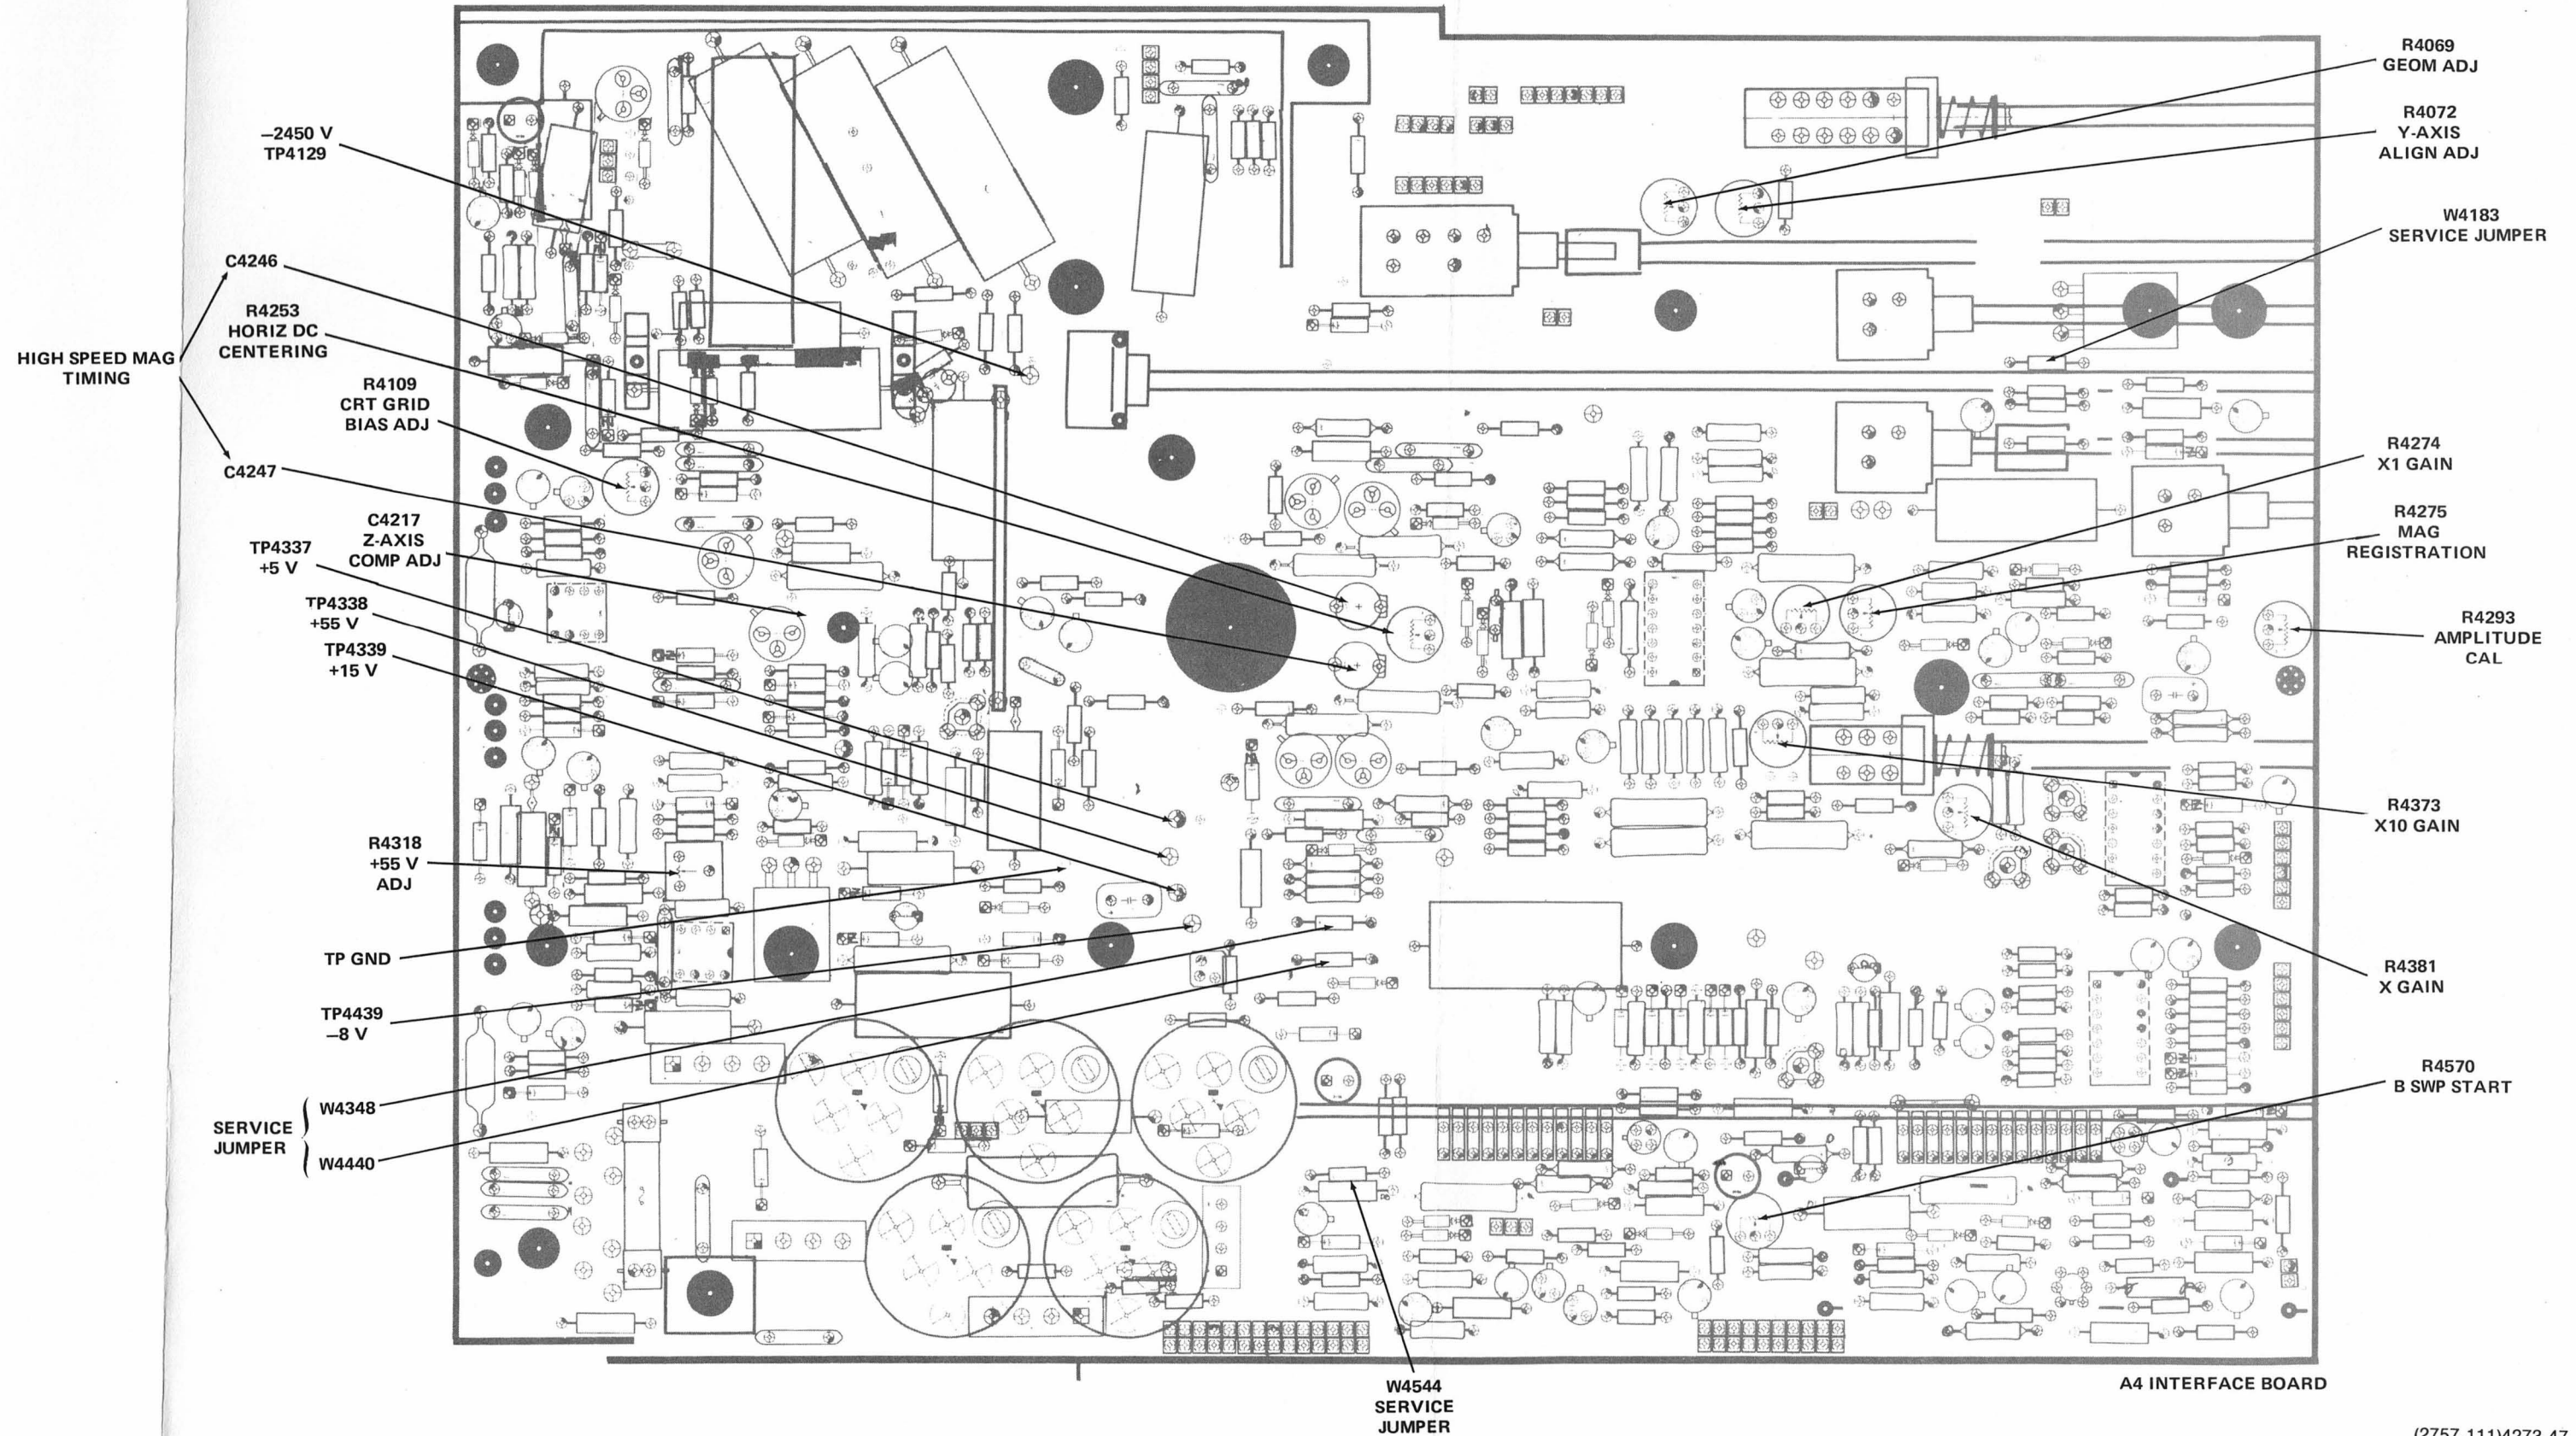


Figure 9-12. Interface circuit board adjustment locations.

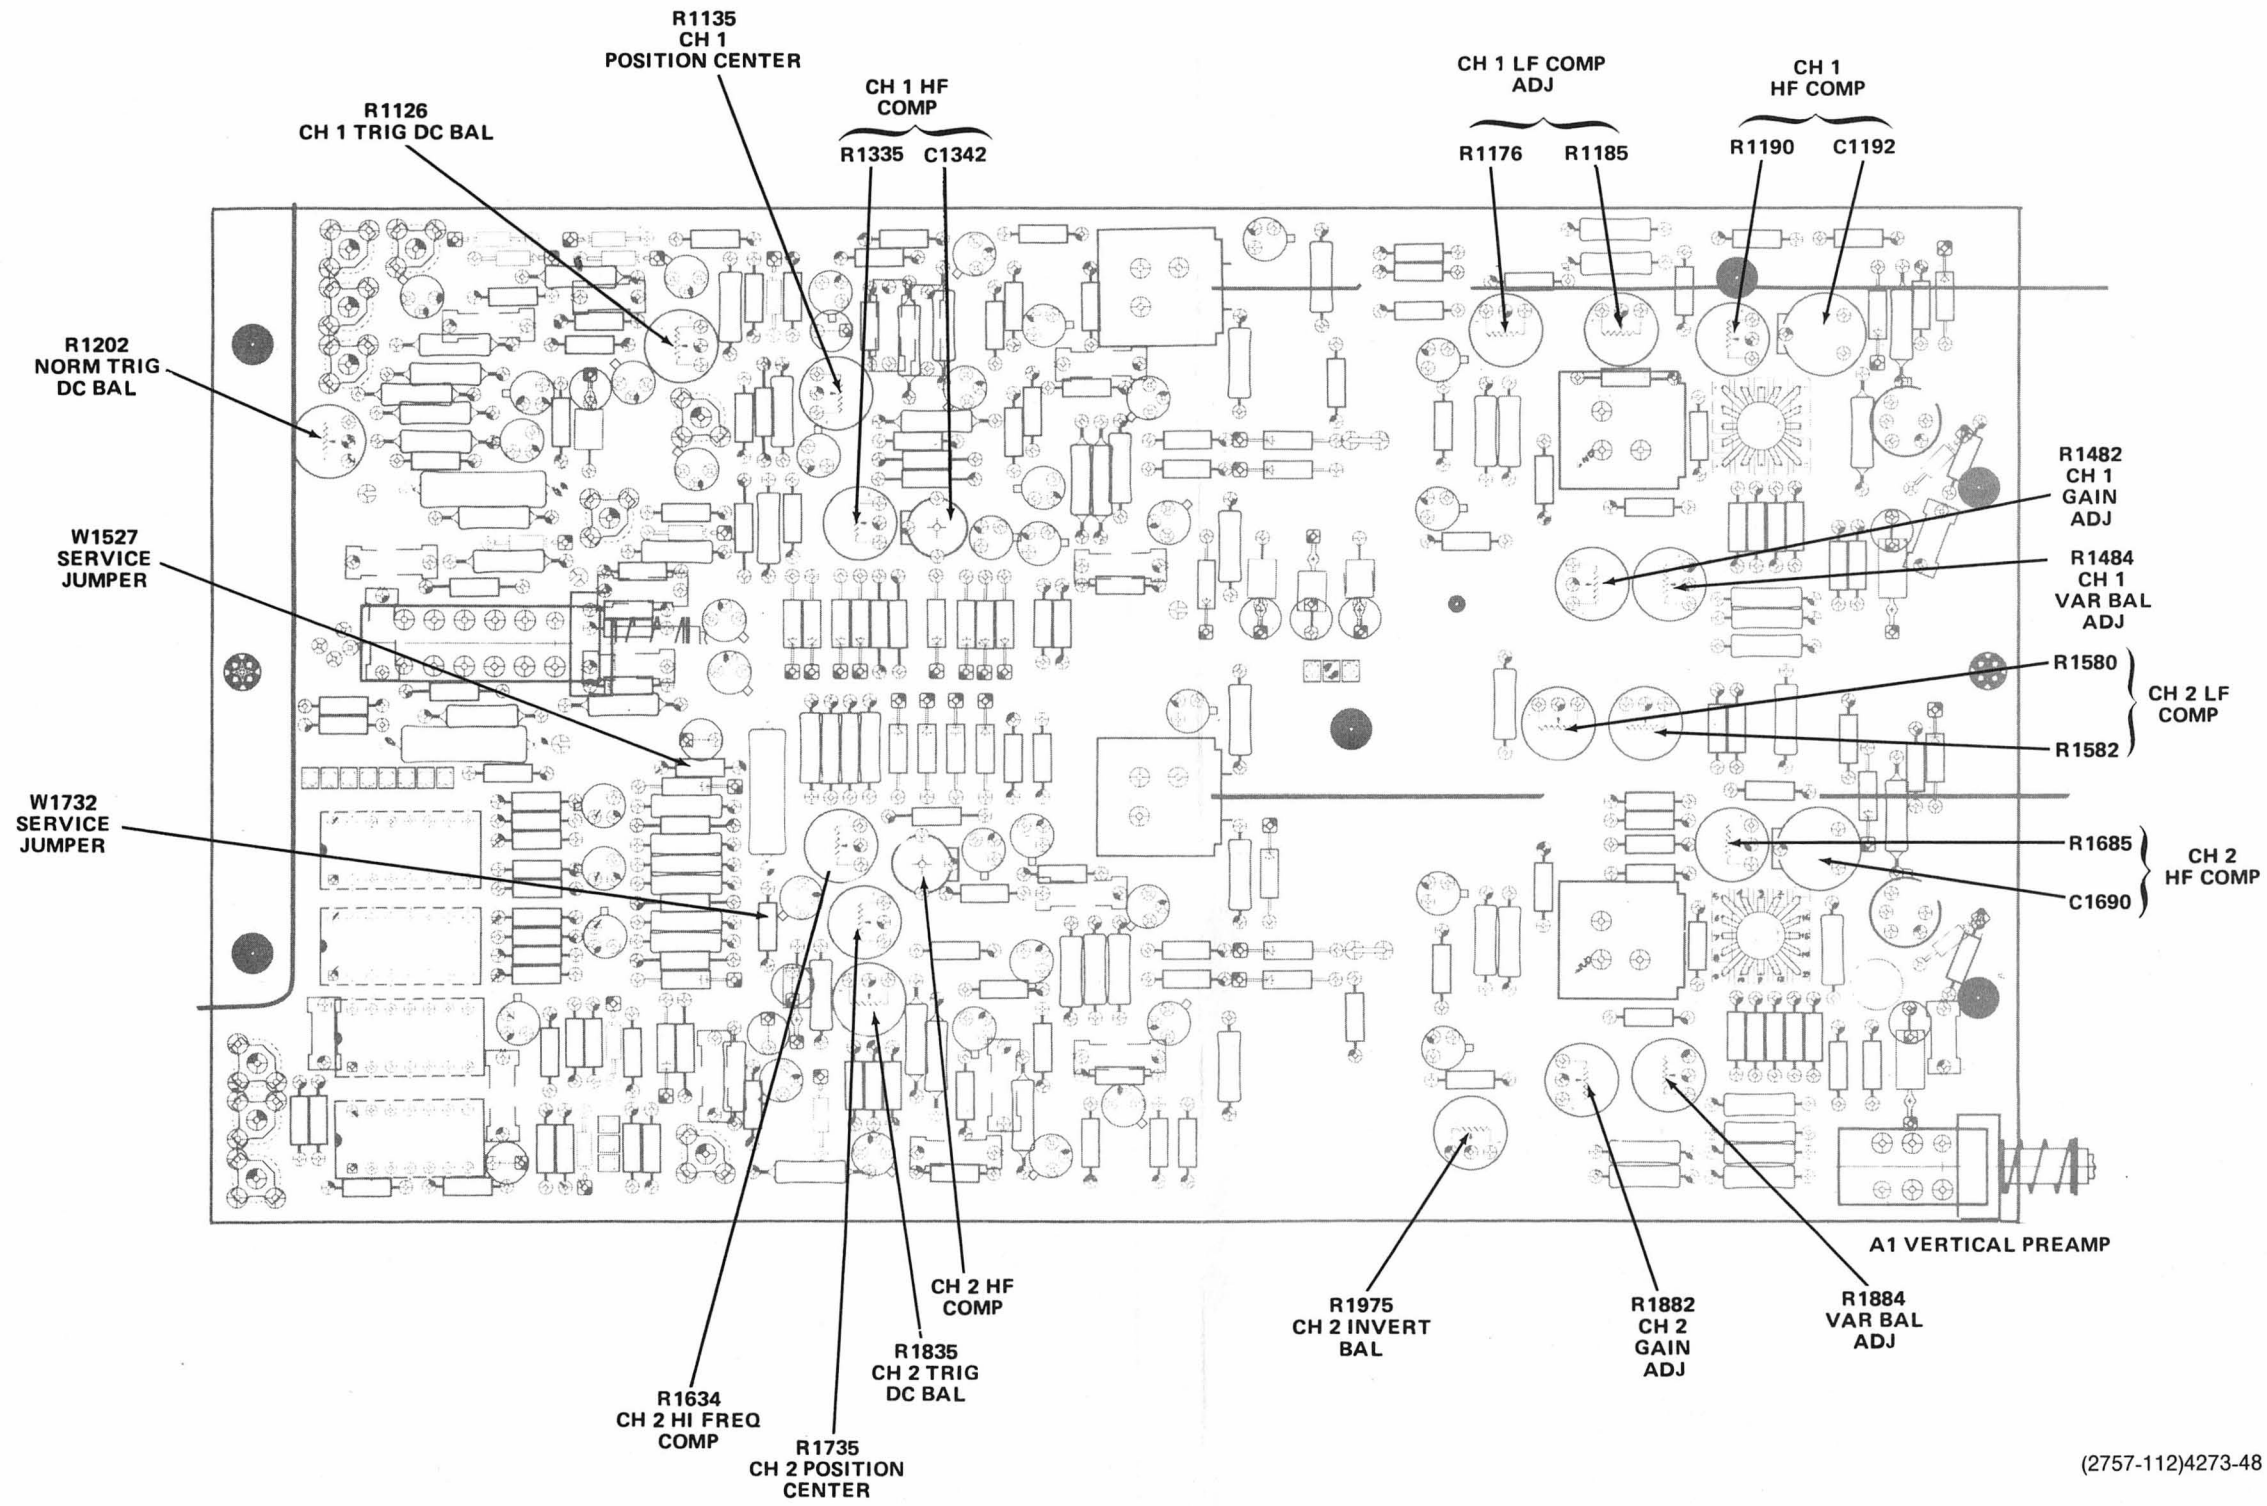


Figure 9-13. Vertical Preamplifier circuit board adjustment locations

(2757-112)4273-48

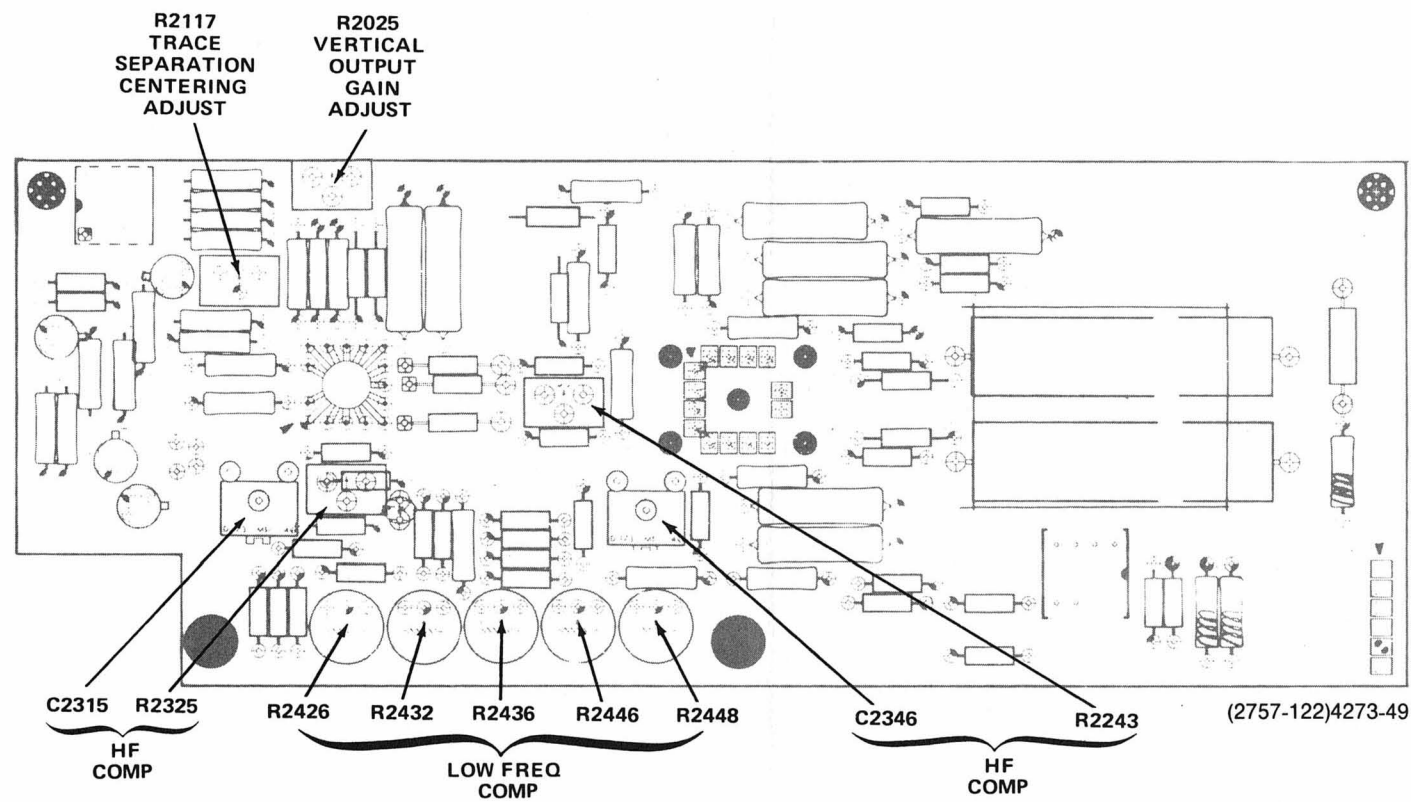


Figure 9-14. A2 Vertical Output Amplifier circuit board adjustment locations.

ADJUSTMENT LOCATIONS 4

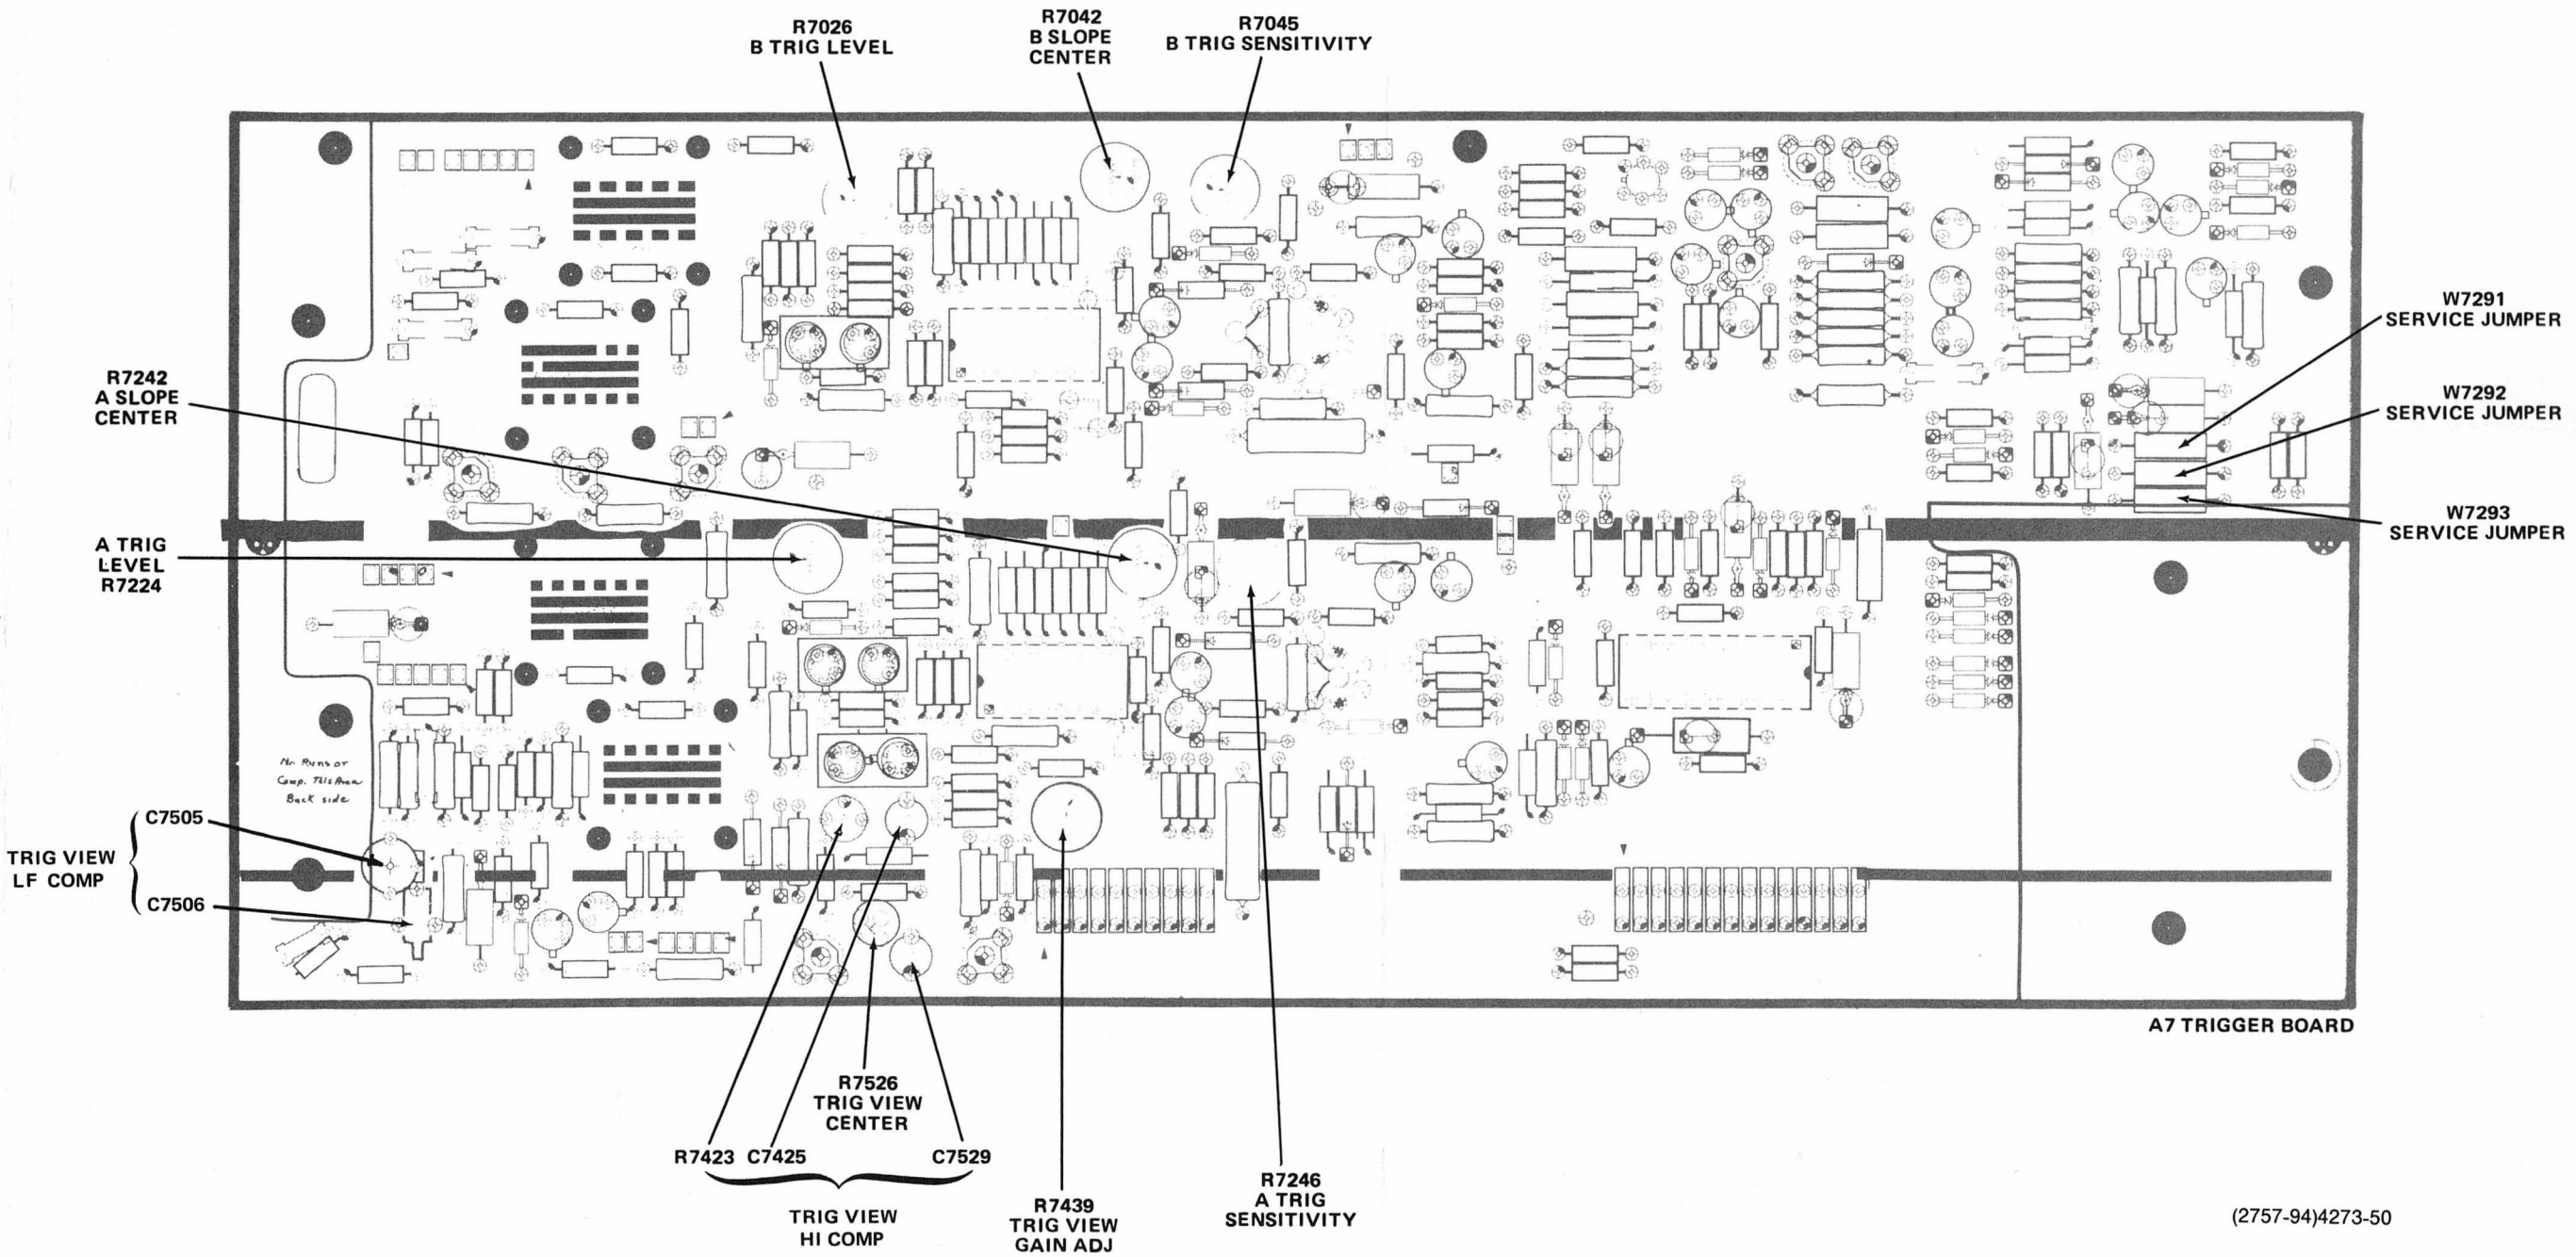


Figure 9-15. Trigger Generator and Sweep Logic circuit board adjustment locations.

(2757-94)4273-50

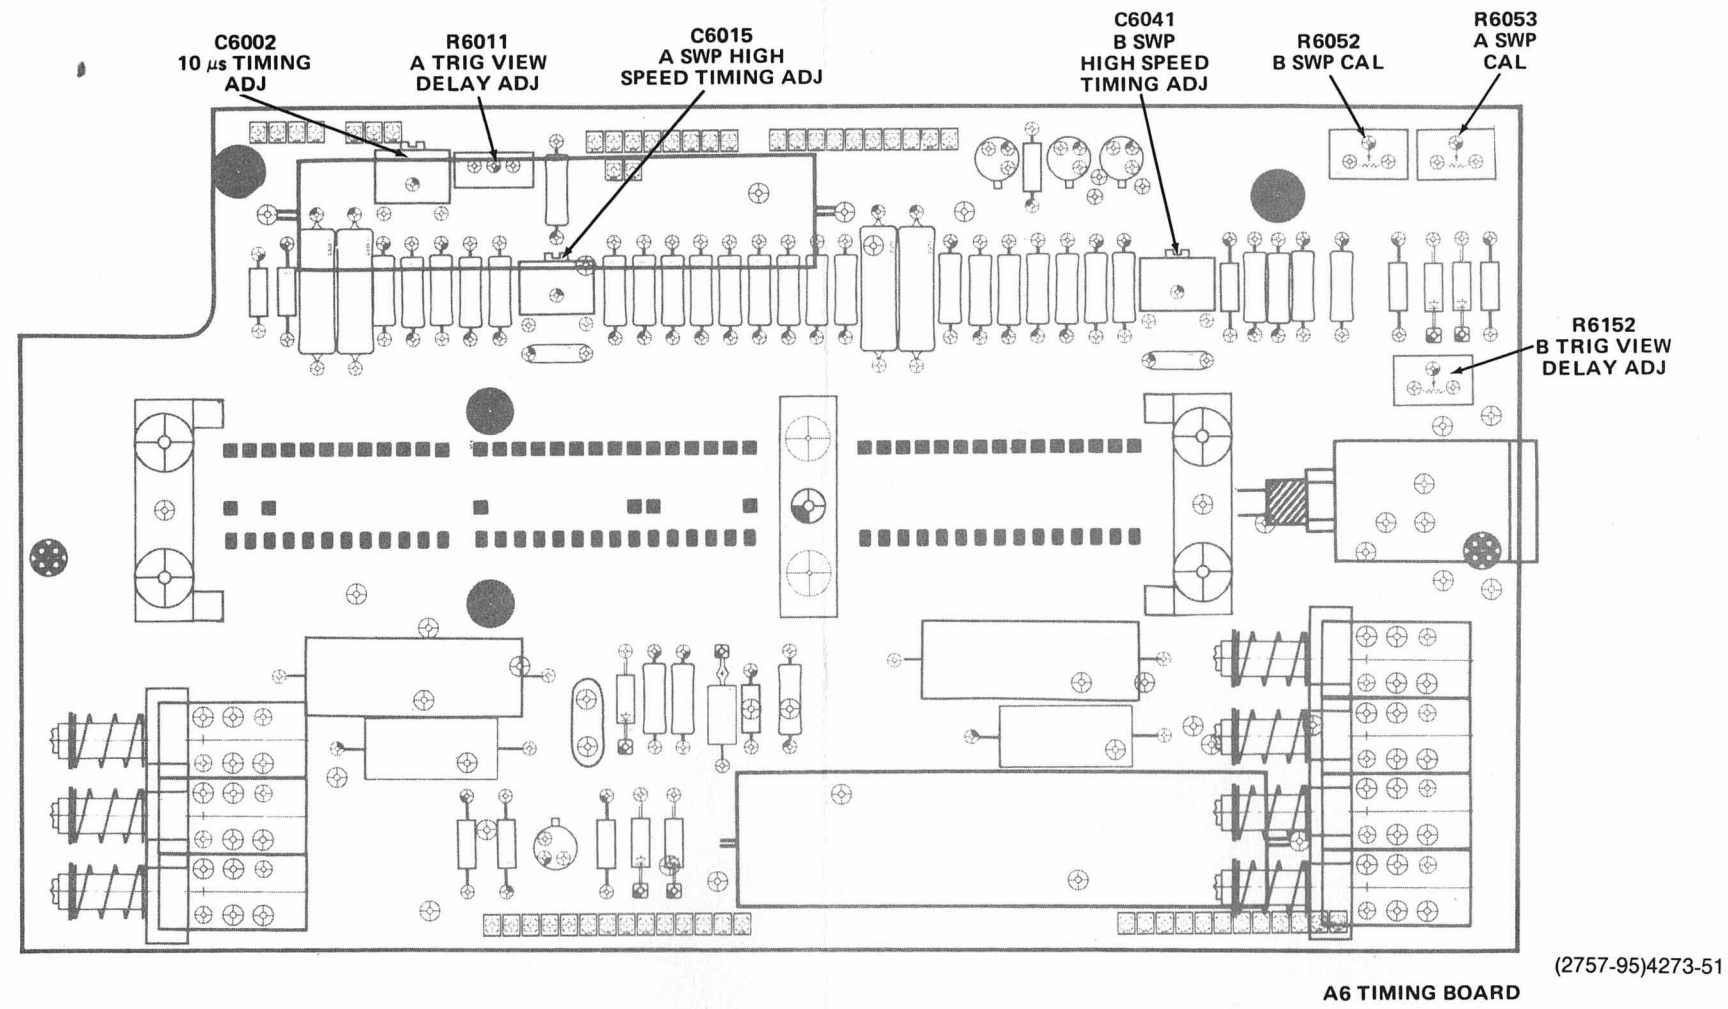


Figure 9-16. Timing circuit board adjustment locations.

# REPLACEABLE MECHANICAL PARTS

## PARTS ORDERING INFORMATION

Replacement parts are available from or through your local Tektronix, Inc. Field Office or representative.

Changes to Tektronix instruments are sometimes made to accommodate improved components as they become available, and to give you the benefit of the latest circuit improvements developed in our engineering department. It is therefore important, when ordering parts, to, include the following information in your order: Part number, instrument type or number, serial number, and modification number if applicable.

If a part you have ordered has been replaced with a new or improved part, your local Tektronix, Inc. Field Office or representative will contact you concerning any change in part number.

Change information, if any, is located at the rear of this manual.

## ITEM NAME

In the Parts List, an Item Name is separated from the description by a colon (:). Because of space limitations, an Item Name may sometimes appear as incomplete. For further Item Name identification, the U.S. Federal Cataloging Handbook H6-1 can be utilized where possible.

## FIGURE AND INDEX NUMBERS

Items in this section are referenced by figure and index numbers to the illustrations.

## INDENTATION SYSTEM

This mechanical parts list is indented to indicate item relationships. Following is an example of the indentation system used in the description column.

```

1 2 3 4 5           Name & Description
Assembly and/or Component
Attaching parts for Assembly and/or Component
    ....END ATTACHING PARTS....
Detail Part of Assembly and/or Component
Attaching parts for Detail Part
    ....END ATTACHING PARTS....
Parts of Detail Part
Attaching parts for Parts of Detail Part
    ....END ATTACHING PARTS....

```

Attaching Parts always appear in the same indentation as the item it mounts, while the detail parts are indented to the right. Indented items are part of, and included with, the next higher indentation.

**Attaching parts must be purchased separately, unless otherwise specified.**

## ABBREVIATIONS

#	INCH	ELCTRN	ELECTRON	IN	INCH	SE	SINGLE END
ACTR	NUMBER SIZE	ELEC	ELECTRICAL	INCAND	INCANDESCENT	SECT	SECTION
ADPTR	ACTUATOR	ELCTLT	ELECTROLYTIC	INSUL	INSULATOR	SEMICON	SEMICONDUCTOR
ADPTR	ADAPTER	ELEM	ELEMENT	INTL	INTERNAL	SHLD	SHIELD
ALIGN	ALIGNMENT	EPL	ELECTRICAL PARTS LIST	LPHLDR	LAMPHOLDER	SHLDR	SHOULDERED
AL	ALUMINUM	EOPT	EQUIPMENT	MACH	MACHINE	SKT	SOCKET
ASSEM	ASSEMBLED	EXT	EXTERNAL	MECH	MECHANICAL	SL	SLIDE
ASSY	ASSEMBLY	FIL	FILLISTER HEAD	MTG	MOUNTING	SLFLKG	SELF-LOCKING
ATTEN	ATTENUATOR	FLEX	FLEXIBLE	NIP	NIPPLE	SLVG	SLEEVING
AWG	AMERICAN WIRE GAGE	FLH	FLAT HEAD	NON WIRE	NOT WIRE WOUND	SPR	SPRING
BD	BOARD	FLTR	FILTER	OBD	ORDER BY DESCRIPTION	SO	SQUARE
BRKT	BRACKET	FR	FRAME or FRONT	OD	OUTSIDE DIAMETER	SST	STAINLESS STEEL
BRS	BRASS	FSTNR	FASTENER	OVH	OVAL HEAD	STL	STEEL
BRZ	BRONZE	FT	FOOT	PH BRZ	PHOSPHOR BRONZE	SW	SWITCH
BSHG	BUSHING	FXD	FIXED	PL	PLAIN or PLATE	T	TUBE
CAB	CABINET	GSKT	GASKET	PLSTC	PLASTIC	TERM	TERMINAL
CAP	CAPACITOR	HDL	HANDLE	PN	PART NUMBER	THD	THREAD
CER	CERAMIC	HEX	HEXAGON	PNH	PAN HEAD	THK	THICK
CHAS	CHASSIS	HEX HD	HEXAGONAL HEAD	PWR	POWER	TNSN	TENSION
CKT	CIRCUIT	HEX SOC	HEXAGONAL SOCKET	RCPT	RECEPTACLE	TPG	TAPPING
COMP	COMPOSITION	HLCPS	HELICAL COMPRESSION	RES	RESISTOR	TRH	TRUSS HEAD
CONN	CONNECTOR	HLEXT	HELICAL EXTENSION	RGD	RIGID	V	VOLTAGE
COV	COVER	HV	HIGH VOLTAGE	RLF	RELIEF	VAR	VARIABLE
CPLG	COUPLING	IC	INTEGRATED CIRCUIT	RTNR	RETAINER	W-	WITH
CRT	CATHODE RAY TUBE	ID	INSIDE DIAMETER	SCH	SOCKET HEAD	WSHR	WASHER
DEG	DEGREE	IDNT	IDENTIFICATION	SCOPE	OSCILLOSCOPE	XFMR	TRANSFORMER
DWR	DRAWER	IMPLR	IMPELLER	SCR	SCREW	XSTR	TRANSISTOR

CROSS INDEX—MFR. CODE NUMBER TO MANUFACTURER

Mfr. Code	Manufacturer	Address	City, State, Zip
000BK	STAUFFER SUPPLY	105 SE TAYLOR	PORTLAND, OR 97214
000CY	NORTHWEST FASTENER SALES, INC.	7923 SW CIRRUS DRIVE	BEAVERTON, OR 97005
000EX	O'HARA METAL PRODUCT COMPANY	542 BRANNAN STREET	SAN FRANCISCO, CA 94107
000GE	SCREWMATIC INC.	925 WEST FIRST ST.	AZUZA, CA 91702
000HA	BAHRS DIE & STAMPING CO., INC.	4375 ROSS PLAIN RD.	CINCINNATI, OH 45236
00779	AMP, INC.	P.O. BOX 3608	HARRISBURG, PA 17105
01536	CAMCAR DIV OF TEXTRON INC. SEMS PRODUCTS UNIT	1818 CHRISTINA ST.	ROCKFORD, IL 61108
01963	CHERRY ELECTRICAL PRODUCTS CORPORATION	3600 SUNSET AVENUE	WAUKEGAN, IL 60085
05006	TWENTIETH CENTURY PLASTICS, INC.	415 E WASHINGTON BLVD.	LOS ANGELES, CA 90015
05129	KILO ENGINEERING COMPANY	2015 D	LA VERNE, CA 91750
06666	GENERAL DEVICES CO., INC.	525 S. WEBSTER AVE.	INDIANAPOLIS, IN 46219
06950	VSI CORP., SCREWCORP DIVISION	13001 E. TEMPLE AVE.	CITY OF INDUSTRY, CA 91746
07700	TECHNICAL WIRE AND PRODUCTS, INC.	129 DERMODY ST.	CRANFORD, NJ 07016
08261	SPECTRA-STRIP CORP.	7100 LAMPSON AVE.	GARDEN GROVE, CA 92642
08530	RELIANCE MICA CORP.	342-39TH ST.	BROOKLYN, NY 11232
09922	BURNDY CORPORATION	RICHARDS AVENUE	NORWALK, CT 06852
12014	CHICAGO RIVET AND MACHINE CO.	950 S. 25TH AVENUE	BELLWOOD, IL 60104
12327	FREEWAY CORPORATION	9301 ALLEN DRIVE	CLEVELAND, OH 44125
12360	ALBANY PRODUCTS CO., DIV. OF PNEUMO DYNAMICS CORPORATION	145 WOODWARD AVENUE	SOUTH NORWALK, CT 06586
13511	AMPHENOL CARDRE DIV., BUNKER RAMO CORP.		LOS GATOS, CA 95030
22526	BERG ELECTRONICS, INC.	YOUK EXPRESSWAY	NEW CUMBERLAND, PA 17070
23050	PRODUCT COMPONENTS CORP	30 LORRAINE AVE.	MT VERNON, NY 10553
24011	ELECTRONIZED CHEMICALS CORPORATION	S BEDFORD STREET	BURLINGTON, MA 01803
24931	SPECIALITY CONNECTOR CO., INC.	2620 ENDRESS PLACE	GREENWOOD, IN 46142
26233	USM CORP NYLOC FASTENER DIV.	1501 W SEPULVEDA BLVD. P.O. BOX 3158	TORRANCE, CA 90510
27143	ATLAS SPRING AND MFG. CO.	1805 N. SPAULDING AVE.	CHICAGO, IL 60647
28520	HEYMAN MFG. CO.	147 N. MICHIGAN AVE.	KENILWORTH, NJ 07033
28817	CAL-METEX CORP., SUBSIDIARY OF METEX CORP.	509 HINDRY AVE.	INGLEWOOD, CA 90301
42838	NATIONAL RIVET AND MFG. CO.	1-21 EAST JEFFERSON ST.	WAUPUN, WI 53963
46384	PENN ENGINEERING AND MFG. CORP.	P O BOX 311	DOYLESTOWN, PA 18901
51316	ANGELUS WASHER AND STAMPING CO.	1411 ESPERANZA ST.	LOS ANGELES, CA 90023
56878	STANDARD PRESSED STEEL COMPANY	BENSON EAST	JENKINTOWN, PA 19046
57668	R-OHM CORP.	16931 MILLIKEN AVE.	IRVINE, CA 92713
57771	STIMPSON, EDWIN B., CO. INC.	900 SYLVAN AVENUE	BAYPORT, NY 11705
63743	WARD LEONARD ELECTRIC CO., INC.	31 SOUTH ST.	MOUNT VERNON, NY 10550
70278	ALLIED STEEL AND CONVEYORS, DIV. OF SPARTON CORP.	17333 HEALY	DETROIT, MI 48212
70485	ATLANTIC INDIA RUBBER WORKS, INC.	571 W. POLK ST.	CHICAGO, IL 60607
70903	BELDEN CORP.	2000 S BATAVIA AVENUE	GENEVA, IL 60134
71159	BRISTOL SOCKET SCREW, DIV. OF AMERICAN CHAIN AND CABLE CO., INC.	P O BOX 2244, 40 BRISTOL ST.	WATERBURY, CT 06720
71279	CAMBRIDGE THERMIONIC CORP.	445 CONCORD AVE.	CAMBRIDGE, MA 02138
71400	BUSSMAN MFG., DIVISION OF MCGRAW-EDISON CO.	2536 W. UNIVERSITY ST.	ST. LOUIS, MO 63107
71590	CENTRALAB ELECTRONICS, DIV. OF GLOBE-UNION, INC.	P O BOX 858	FORT DODGE, IA 50501
73743	FISCHER SPECIAL MFG. CO.	446 MORGAN ST.	CINCINNATI, OH 45206
73803	TEXAS INSTRUMENTS, INC., METALLURGICAL MATERIALS DIV.	34 FOREST STREET	ATTLEBORO, MA 02703
74445	HOLO-KROME CO.	31 BROOK ST. WEST	HARTFORD, CT 06110
75497	LAMSON AND SESSIONS CO.	5000 TIEDEMAN ROAD	CLEVELAND, OH 44144
75915	LITTELFUSE, INC.	800 E. NORTHWEST HWY	DES PLAINES, IL 60016
77250	PHEOLL MANUFACTURING CO., DIVISION OF ALLIED PRODUCTS CORP.	5700 W. ROOSEVELT RD.	CHICAGO, IL 60650
77900	SHAKEPROOF DIV OF ILLINOIS TOOL WORKS	SAINT CHARLES RD	ELGIN, IL 60120
78189	ILLINOIS TOOL WORKS, INC. SHAKEPROOF DIVISION	ST. CHARLES ROAD	ELGIN, IL 60120
79136	WALDES, KOHINOOR, INC.	47-16 AUSTEL PLACE	LONG ISLAND CITY, NY 11101
80009	TEKTRONIX, INC.	P O BOX 500	BEAVERTON, OR 97077
80033	PRESTOLE EVERLOCK, INC.	P. O. BOX 278, 1345 MIAMI ST.	TOLEDO, OH 43605
80126	PACIFIC ELECTRICORD CO.	747 W. REDONDO BEACH, P O BOX 10	GARDENA, CA 90247
83294	ARROW FASTENER CO., INC.	271 MAYHILL ST.	SADDLE BROOK, NJ 07662
83385	CENTRAL SCREW CO.	2530 CRESCENT DR.	BROADVIEW, IL 60153



## CROSS INDEX—MFR. CODE NUMBER TO MANUFACTURER

Mfr. Code	Manufacturer	Address	City, State, Zip
83486	ELCO INDUSTRIES, INC.	1103 SAMUELSON ROAD	ROCKFORD, IL 61101
86445	PENN FIBRE AND SPECIALTY CO., INC.	2032 E. WESTMORELAND ST.	PHILADELPHIA, PA 19134
86928	SEASTROM MFG. COMPANY, INC.	701 SONORA AVENUE	GLENDALE, CA 91201
87308	N. L. INDUSTRIES, INC., SOUTHERN SCREW DIV.	P. O. BOX 1360	STATESVILLE, NC 28677
88245	LITTON SYSTEMS, INC., USECO DIV.	13536 SATICOY ST.	VAN NUYS, CA 91409
91260	CONNOR SPRING AND MFG. CO.	1729 JUNCTION AVE.	SAN JOSE, CA 95112
93907	TEXTRON INC. CAMCAR DIV	600 18TH AVE	ROCKFORD, IL 61101
95987	WECKESSER CO., INC.	4444 WEST IRVING PARK RD.	CHICAGO, IL 60641
97464	INDUSTRIAL RETAINING RING CO.	57 CORDIER ST.	IRVINGTON, NJ 07111
S3109	C/O PANEL COMPONENTS CORP.	P.O. BOX 6626	SANTA ROSA, CA 95406
T0435	LEWIS SCREW CO.	4114 SOUTH PERORIA AVE.	CHICAGO, IL 60609

Fig. & Index No.	Tektronix Part No.	Serial/Model No.		Qty	Name & Description					Mfr Code	Mfr Part Number
		Eff	Dscont		1	2	3	4	5		
1-1	200-1411-00			1	RTNR,IMPLOSION:5.422 X 4.743 X 0.441,GRAY					80009	200-1411-00
-2	213-0313-00			4	.THUMBSCREW:4-40 X 0.45 INCH,KNURLED					83486	ORD BY DESCR
-3	337-1674-00			1	SHLD,ELCTR NUB:CRT					80009	337-1674-00
-4	366-0494-00			5	KNOB:GRAY WITH SETSCREW					80009	366-0494-00
	213-0153-00			1	.SETSCREW:5-40 X 0.125,STL BK OXD,HEX					000CY	ORD BY DESCR
-5	366-1031-02			2	KNOB:RED,VAR,0.127 ID X 0.392 OD					80009	366-1031-02
	213-0153-00			1	.SETSCREW:5-40 X 0.125,STL BK OXD,HEX					000CY	ORD BY DESCR
-6	366-1426-00			2	KNOB:GRAY					80009	366-1426-00
	213-0153-00			1	.SETSCREW:5-40 X 0.125,STL BK OXD,HEX					000CY	ORD BY DESCR
-7	366-0215-02			2	KNOB:LEVER SWITCH					80009	366-0215-02
-8	366-1559-00			16	PUSH BUTTON:SIL GY,0.18 SQ X 0.43					80009	366-1559-00
-9	366-0494-00			3	KNOB:GRAY WITH SETSCREW					80009	366-0494-00
	213-0153-00			1	.SETSCREW:5-40 X 0.125,STL BK OXD,HEX					000CY	ORD BY DESCR
-10	366-0494-00			1	KNOB:GRAY WITH SETSCREW					80009	366-0494-00
	213-0153-00			1	.SETSCREW:5-40 X 0.125,STL BK OXD,HEX					000CY	ORD BY DESCR
-11	331-0328-00			1	DIAL,CONTROL:10 TURN FOR 0.25 DIA SHAFT					05129	461-S-70
	213-0048-00			1	.SETSCREW:4-40 X 0.125,STL BLK OXD					74445	ORD BY DESCR
-12	366-1346-02			1	KNOB:RED					80009	366-1346-00
	213-0153-00			1	.SETSCREW:5-40 X 0.125,STL BK OXD,HEX					000CY	ORD BY DESCR
-13	366-1219-01			1	KNOB:GY,DLYD SWP,0.203 ID X 0.97					80009	366-1219-01
	213-0890-00			2	.SETSCREW:6-32 X 0.25 L,STL BLK OXD					83294	ORD BY DESCR
-14	354-0442-01			1	RING,KNOB SKIRT:CLEAR,1.45 OD					80009	354-0442-01
	213-0005-00			1	.SETSCREW:8-32 X 1.25 INCH,HEX SOC ST					74445	ORD BY DESCR
-15	401-0080-01			1	BRG,KNOB SKIRT:0.789 ID X 8.66"OD PLASTIC					80009	401-0080-01
-16	366-0494-00			3	KNOB:GRAY WITH SETSCREW					80009	366-0494-00
	213-0153-00			1	.SETSCREW:5-40 X 0.125,STL BK OXD,HEX					000CY	ORD BY DESCR
-17	366-1278-00			2	KNOB:GY,0.08 ID X 0.392 OD X 0.4					80009	366-1278-00
	213-0153-00			1	.SETSCREW:5-40 X 0.125,STL BK OXD,HEX					000CY	ORD BY DESCR
-18	366-1280-00			1	KNOB:GRAY					80009	366-1278-00
	213-0153-00			1	.SETSCREW:5-40 X 0.125,STL BK OXD,HEX					000CY	ORD BY DESCR
	366-0494-00			1	KNOB:GRAY WITH SETSCREW					80009	366-0494-00
	213-0246-00			1	.SETSCREW:5-40 X 0.093 ITL BK OXD,HEX					71159	ORD BY DESCR
-19	426-1072-00			16	FRAME,PUSH BTN:PLASTIC					80009	426-1072-00
-20	358-0216-00			1	BUSHING,PLASTIC:0.257 ID X 0.412 INCH OD					80009	358-0216-00
-21	358-0599-00			5	BUSHING,SLEEVE:0.125 ID X 0.234 THK,PLSTC					28520	B-187-125
-22	358-0540-00			2	BSHG,MACH.THD:0.25-32 X 0.128 ID X 0.24" *****ATTACHING PARTS)*****					80009	358-0540-00
-23	210-0583-00			2	NUT,PLAIN,HEX:0.25-32 X 0.312 INCH,BRS					73743	2X20317-402
-24	210-0940-00			2	WASHER,FLAT:0.25 ID X 0.375 INCH OD,STL *****END ATTACHING PARTS)*****					12327	ORD BY DESCR
-25	378-0635-00			4	LENS,LIGHT:WHITE					80009	378-0635-00
-26	— —			1	RES.,VAR,NONWIR:(SEE R16002 REPL)						
-27	— —			1	RES.,VAR,NONWIR:(SEE R14288,R14289 REPL) *****ATTACHING PARTS)*****						
-28	210-0583-00			1	NUT,PLAIN,HEX:0.25-32 X 0.312 INCH,BRS					73743	2X20317-402
-29	210-0940-00			1	WASHER,FLAT:0.25 ID X 0.375 INCH OD,STL *****END ATTACHING PARTS)*****					12327	ORD BY DESCR
-30	— —			1	RES.,VAR,NONWIR:(SEE R14398 REPL) *****ATTACHING PARTS)*****						
-31	210-0583-00			1	NUT,PLAIN,HEX:0.25-32 X 0.312 INCH,BRS					73743	2X20317-402
-32	210-0940-00			1	WASHER,FLAT:0.25 ID X 0.375 INCH OD,STL *****END ATTACHING PARTS)*****					12327	ORD BY DESCR
-33	210-0046-00			1	WASHER,LOCK:0.261 ID,INTL,0.018 THK,BRS					77900	1214-05-00-0541C
-34	— —			1	RES.,VAR,NONWIR:(SEE R15102 REPL) *****ATTACHING PARTS)*****						
-35	210-0583-00			1	NUT,PLAIN,HEX:0.25-32 X 0.312 INCH,BRS					73743	2X20317-402
-36	210-0940-00			1	WASHER,FLAT:0.25 ID X 0.375 INCH OD,STL *****END ATTACHING PARTS)*****					12327	ORD BY DESCR
-37	210-0046-00			1	WASHER,LOCK:0.261 ID,INTL,0.018 THK,BRS					77900	1214-05-00-0541C
-38	— —			1	RES.,VAR.,NONWIR:(SEE R14498 REPL) *****ATTACHING PARTS)*****						
-39	210-0583-00			1	NUT,PLAIN,HEX:0.25-32 X 0.312 INCH,BRS					73743	2X20317-402
-40	210-0940-00			1	WASHER,FLAT:0.25 ID X 0.375 INCH OD,STL *****END ATTACHING PARTS)*****					12327	ORD BY DESCR

Fig. & Index No.	Tektronix Part No.	Serial/Model No.		Qty	1 2 3 4 5	Name & Description	Mfr Code	Mfr Part Number
		Eff	Dscont					
1-41	— —			2		RES.,VAR,NONWIR:(SEE R17105,R17305 REPL) ***** (ATTACHING PARTS)*****		
-42	210-0583-00			2		NUT,PLAIN,HEX:0.25-32 X 0.312 INCH,BRS	73743	2X20317-402
-43	210-0940-00			2		WASHER,FLAT:0.25 ID X 0.375 INCH OD,STL ***** (END ATTACHING PARTS)*****	12327	ORD BY DESCR
-44	333-2524-00			1		PANEL,FRONT:	80009	333-2524-00
-45	352-0477-00			8		HOLDER,LED:	80009	352-0477-00
-46	131-0955-00			2		CONN,RCPT,ELEC:BNC,FEMALE	13511	31-279
-47	386-2340-00			4		SUPPORT,CRT:FRONT	80009	386-2340-00
-48	— —			1		CKT BD ASSY:CRT SCALE ILLUM(SEE A10 REPL)		
-49	352-0329-00			1		.LAMPHOLDER:SCALE ILLUMINATION	80009	352-0329-00
	198-2862-00			1		.WIRE SET,ELEC:	80009	198-2862-00
-50	378-0728-00			1		.REFLECTOR,LIGHT:SCALE ILLUMINATION	80009	378-0728-00
-51	175-0825-00			FT		..WIRE,ELECTRICAL:2 WIRE RIBBON	80009	175-0825-00
-52	131-0707-00			2		..CONTACT,ELEC:22-26 AWG,BRS & CU BE GOLD	22526	47439-000
-53	352-0169-02			1		..HLDR,TERM CONN:2 WIRE,RED	80009	352-0169-00
-54	348-0276-00			FT		SHLD,GSKT,ELEK:0.026 OD NPRN W/WIRE NET CO	28817	01-0404-3719
-55	426-1607-00			1		FRAME,CABINET:FRONT ***** (ATTACHING PARTS)*****	80009	426-1607-00
-56	213-0183-00			4		SCR,TPG,THD FOR:6-20 X 0.5 TYPE B,PNH,STL ***** (END ATTACHING PARTS)*****	93907	ORD BY DESCR
-57	129-0385-00			1		SPACER,POST:1.77 L,W/6-32 & 4-40 THD EN	80009	129-0385-00
-58	348-0115-00			1		GROMMET,PLASTIC:U-SHP,0.548 X 0.462 INCH	80009	348-0115-00
-59	337-1688-03			1		SHIELD,ELEC:HIGH VOLTAGE ***** (ATTACHING PARTS)*****	80009	337-1688-03
-60	211-0661-00			3		SCREW,MACHINE:4-40 X 0.25 INCH,PNH,STL ***** (END ATTACHING PARTS)*****	78189	ORD BY DESCR
-61	— —			1		CKT BOARD ASSY:FAN MOTOR(SEE A8 REPL)		
-62	131-0608-00			2		.TERMINAL,PIN:0.365 L X 0.025 PH BRZ GOLD	22526	48283-036
-63	136-0252-07			3		.SOCKET,PIN CONN:W/O DIMPLE	22526	75060-012
-64	136-0269-02			1		.SKT,PL-IN ELEK:MICROCIRCUIT,14 DIP	09922	DILB14P-108T
-65	— —			1		.MOTOR,DC:(SEE B8045 REPL)		
-66	426-0781-00			1		.MOUNT,MOTOR: ***** (ATTACHING PARTS)*****	80009	426-0781-00
-67	213-0088-00			2		SCR,TPG,THD CTG:4-24 X 0.25 INCH,PNH STL ***** (END ATTACHING PARTS)*****	83385	ORD BY DESCR
-68	337-1762-00			1		SHLD,ELECTRICAL:FAN MOTOR	80009	337-1762-00
-69	426-0781-00			1		MOUNT,MOTOR: ***** (ATTACHING PARTS)*****	80009	426-0781-00
-70	213-0088-00			2		SCR,TPG,THD CTG:4-24 X 0.25 INCH,PNH STL ***** (END ATTACHING PARTS)*****	83385	ORD BY DESCR
	644-0150-00			1		XSTR BRKT ASSY: ***** (ATTACHING PARTS)*****	80009	644-0150-00
-71	210-0586-00			2		NUT,PL,ASSEM WA:4-40 X 0.25,STL CD PL ***** (END ATTACHING PARTS)*****	T0435	ORD BY DESCR
-72	— —			-		TRANS BRKT ASSY INCLUDES: .TRANSISTOR:(SEE Q14009 REPL) ***** (ATTACHING PARTS)*****		
-73	211-0012-00			2		.SCREW,MACHINE:4-40 X 0.375,PNH STL CD PL	83385	ORD BY DESCR
-74	358-0214-00			2		.INSULATOR,BSHG:0.25 DIA X 0.188 INCH L	24011	ORD BY DESCR
-75	210-0205-00			1		.TERMINAL,LUG:4-40 X 0.42,RDH,SST,RLV SHK ***** (END ATTACHING PARTS)*****	86928	5442-7
-76	214-1610-00			1		.HEAT SINK,ELEC:TRANSISTOR	80009	214-1610-00
-77	407-1153-00			1		.BRACKET,XSTR:ALUMINUM	80009	407-1153-00
-78	348-0253-00			1		GROMMET,PLASTIC:BLACK,OBLONG,3.0 X 0.925	80009	348-0253-00
-79	348-0064-00			2		GROMMET,PLASTIC:GRAY,ROUND,0.582 ID	80009	348-0064-00
-80	348-0056-00			1		GROMMET,PLASTIC:0.375 INCH DIA	80009	348-0056-00
	348-0442-00			1		GROMMET,PLASTIC:BLACK,ROUND,0.375" ID	28520	SB-500-6
	348-0517-00			2		GROMMET,PLASTIC:BLACK,ROUND,0.25 ID	28520	SB-375-4
	348-0518-00			1		GROMMET,PLASTIC:BLACK,ROUND,0.5 ID	28520	2073SB-625-8BLK
	358-0540-00			2		BSHG,MACH.THD:0.25-32 X 0.128 ID X 0.24"	80009	358-0540-00
-81	407-1138-00			1		BRKT,DELAY LINE:ALUMINUM ***** (ATTACHING PARTS)*****	80009	407-1138-00
-82	210-0457-00			1		NUT,PL,ASSEM WA:6-32 X 0.312,STL CD PL ***** (END ATTACHING PARTS)*****	83385	ORD BY DESCR

Fig. & Index No.	Tektronix Part No.	Serial/Model No.		Qty	Name & Description					Mfr Code	Mfr Part Number
		Eff	Dscont		1	2	3	4	5		
1-	343-0144-00			1						95987	1-8-2
-83	---			1							
	131-1002-02			1						80009	131-1002-02
	131-1313-00			1						80009	131-1313-00
-84	---			1							
-85	344-0250-00			1						80033	E50005-007
-86	211-0008-00			1						83385	ORD BY DESCR
-87	210-0586-00			1						T0435	ORD BY DESCR
-88	337-1763-01			1						80009	337-1763-01
-89	348-0349-00			FT						07700	2143951
-90	348-0339-00			4						80009	348-0339-00
-91	212-0020-00			4						93907	ORD BY DESCR
-92	426-0970-00			1						80009	426-0970-00
-93	211-0516-00			2						83385	ORD BY DESCR
-94	210-1002-00			2						12327	ORD BY DESCR
-95	378-0044-01			1						80009	378-0044-01
-96	131-0955-00			4						13511	31-279
-97	210-0255-00			4						80009	210-0255-00
-98	386-2408-00			1						80009	386-2408-00
	200-1414-09			1						80009	200-1414-09
-99	211-0101-00			2						83385	ORD BY DESCR
	---			-							
-100	---			1							
-101	378-0807-01			1						80009	378-0807-01
-102	200-1399-02			1						80009	200-1399-02
-103	369-0031-00			1						80009	369-0031-00
	213-0022-00			1						74445	ORD BY DESCR
-104	200-1445-05			1						80009	200-1445-05
-105	352-0102-00			1						80009	352-0102-00
-106	213-0717-00			2						93907	ORD BY DESCR
-107	204-0549-03			1						80009	204-0549-03
-108	210-0407-00			2						73743	3038-402
-109	210-0006-00			2						77900	1206-00-00-0541C
	---			-							
	131-1318-01			2						80009	131-1318-01
	210-0666-00			2						12014	3329-3-16LONG
	214-0778-01			1						80009	214-0778-01
	344-0135-00			2						80009	344-0135-00
-110	161-0033-07			1						80009	161-0033-07
	---			-							
	161-0033-35			1						S3109	ORD BY DESCR
	---			-							
	161-0033-36			1						80126	ORD BY DESCR
	---			-							
	161-0033-37			1						S3109	ORD BY DESCR
	---			-							
	161-0033-38			1						80126	0-8961-008-BL
	---			-							
-111	358-0161-00			1						28520	1147 SR-5P-4
	---			-							
	334-1529-00			1						80009	334-1529-00
	---			-							

Fig. & Index No.	Tektronix Part No.	Serial/Model No.		Qty	1 2 3 4 5	Name & Description	Mfr Code	Mfr Part Number
		Eff	Dscont					
1-112	386-2332-10			1		PANEL,REAR: ***** (ATTACHING PARTS)*****	80009	386-2332-10
-113	211-0105-00			1		SCREW,MACHINE:4-40 X 0.188,100 DEG,FLH ST	83385	ORD BY DESCR
-114	211-0138-00			1		SCREW,MACHINE:5-40 X 2.562 INCH,PNH STL	83486	ORD BY DESCR
-115	210-0586-00			1		NUT,PL,ASSEM WA:4-40 X 0.25,STL CD PL	T0435	ORD BY DESCR
-116	210-0202-00			1		TERMINAL,LUG:0.146 ID,LOCKING,BRZ,TIN PL ***** (END ATTACHING PARTS)*****	86928	A-373-158-2
-117	---			1		SW,THERMOSTATIC:(SEE S14520 REPL) ***** (ATTACHING PARTS)*****		
-118	213-0138-00			2		SCR,TPG,TF:4-24 X 0.188 INCH,PNH STL ***** (END ATTACHING PARTS)*****	83385	ORD BY DESCR
-119	---			1		TRANSFORMER:(SEE T14500 REPL) ***** (ATTACHING PARTS)*****		
-120	211-0538-00			2		SCREW,MACHINE:6-32 X 0.312"100 DEG,FLH	83385	ORD BY DESCR
-121	210-0457-00			2		NUT,PL,ASSEM WA:6-32 X 0.312,STL CD PL	83385	ORD BY DESCR
	211-0114-00			1		SCREW,MACHINE:4-40 X 0.438 INCH,FLH STL	93907	ORD BY DESCR
	210-0551-00			1		NUT,PLAIN,HEX.:4-40 X 0.25 INCH,STL ***** (END ATTACHING PARTS)*****	000BK	ORD BY DESCR
	---			-		TRANSFORMER INCLUDES:		
	---			-		. (WIRES AND CONTACTS NOT REPLACEABLE)		
-122	407-1066-00			1		.BRACKET,XFMR:ALUMINUM	80009	407-1066-00
-123	212-0523-00			4		.SCREW,MACHINE:10-32 X 2.750,HEX HD STL	83385	ORD BY DESCR
-124	210-0812-00			4		.WASHER,NONMETAL:#10,FIBER	86445	ORD BY DESCR
-125	166-0457-00			4		.INSUL SLVG,ELEC:0.19 ID X 1.875"LONG MYLA	80009	166-0457-00
-126	200-1544-00			1		.COVER,ELEC XFMR:3.0 X 2.5 X 0.65,STEEL	000HA	C-100
-127	220-0561-00			4		.NUT,PLAIN,HEX.:10-32 X 0.25 INCH,BRS	80009	220-0561-00
-128	210-0056-00			4		.WASHER,LOCK:SPLIT,0.195 ID X 0.32" OD,P	86928	ORD BY DESCR
-129	210-0202-00			1		TERMINAL,LUG:0.146 ID,LOCKING,BRZ,TIN PL ***** (ATTACHING PARTS)*****	86928	A-373-158-2
-130	210-0586-00			1		NUT,PL,ASSEM WA:4-40 X 0.25,STL CD PL ***** (END ATTACHING PARTS)*****	T0435	ORD BY DESCR
-131	---			2		TRANSISTOR:(SEE Q4102,Q4401 REPL)		
	---			1		TRANSISTOR:(SEE Q4301 REPL) ***** (ATTACHING PARTS)*****		
-132	211-0012-00			3		SCREW,MACHINE:4-40 X 0.375,PNH STL CD PL	83385	ORD BY DESCR
-133	210-0071-00			3		WASHER,SPR TNSN:0.146 ID X 0.323" OD,STL ***** (END ATTACHING PARTS)*****	78189	4706-05-01-0531
-134	342-0163-00			3		INSULR,PLATE:XSTR,0.675 X 0.625 X 0.001"	80009	342-0163-00
-135	441-1084-05			1		CHASSIS,SCOPE:W/HARDWARE	80009	441-1084-05
-136	129-0394-00			4		.SPACER,POST:0.50L,W/8-32 THD	46384	S0-8322-16
-137	214-0291-00			1		.CONTACT,SPRING:1.188 X 0.375 X 0.25 INCH	80009	214-0291-00
	136-0515-01			1		SKT,PL-IN ELEK:ELCTR N TUBE,14 CONT W/LEAD	80009	136-0515-01
-138	136-0202-01			1		.SKT,PL-IN ELEK:ELECTRON TUBE,14 CONTACT	80009	136-0202-01
-139	131-0707-00			4		.CONTACT,ELEC:22-26 AWG,BRS & CU BE GOLD	22526	47439-000
-140	352-0162-00			1		.HLDR,TERM CONN:4 WIRE,BLACK	80009	352-0162-00
-141	179-2670-00			1		WIRING HARNESS:MAIN	80009	179-2670-00
-142	352-0169-00			1		.HLDR,TERM CONN:2 WIRE,BLACK	80009	352-0169-00
-143	352-0161-00			1		.HLDR,TERM CONN:3 WIRE,BLACK	80009	352-0161-00
-144	210-0774-00			23		.EYELET,METALLIC:0.152 OD X 0.245 INCH L,	80009	210-0774-00
-145	210-0775-00			23		.EYELET,METALLIC:0.126 OD X 0.23 INCH L,	80009	210-0775-00

FIG. 1 FRONT & REAR


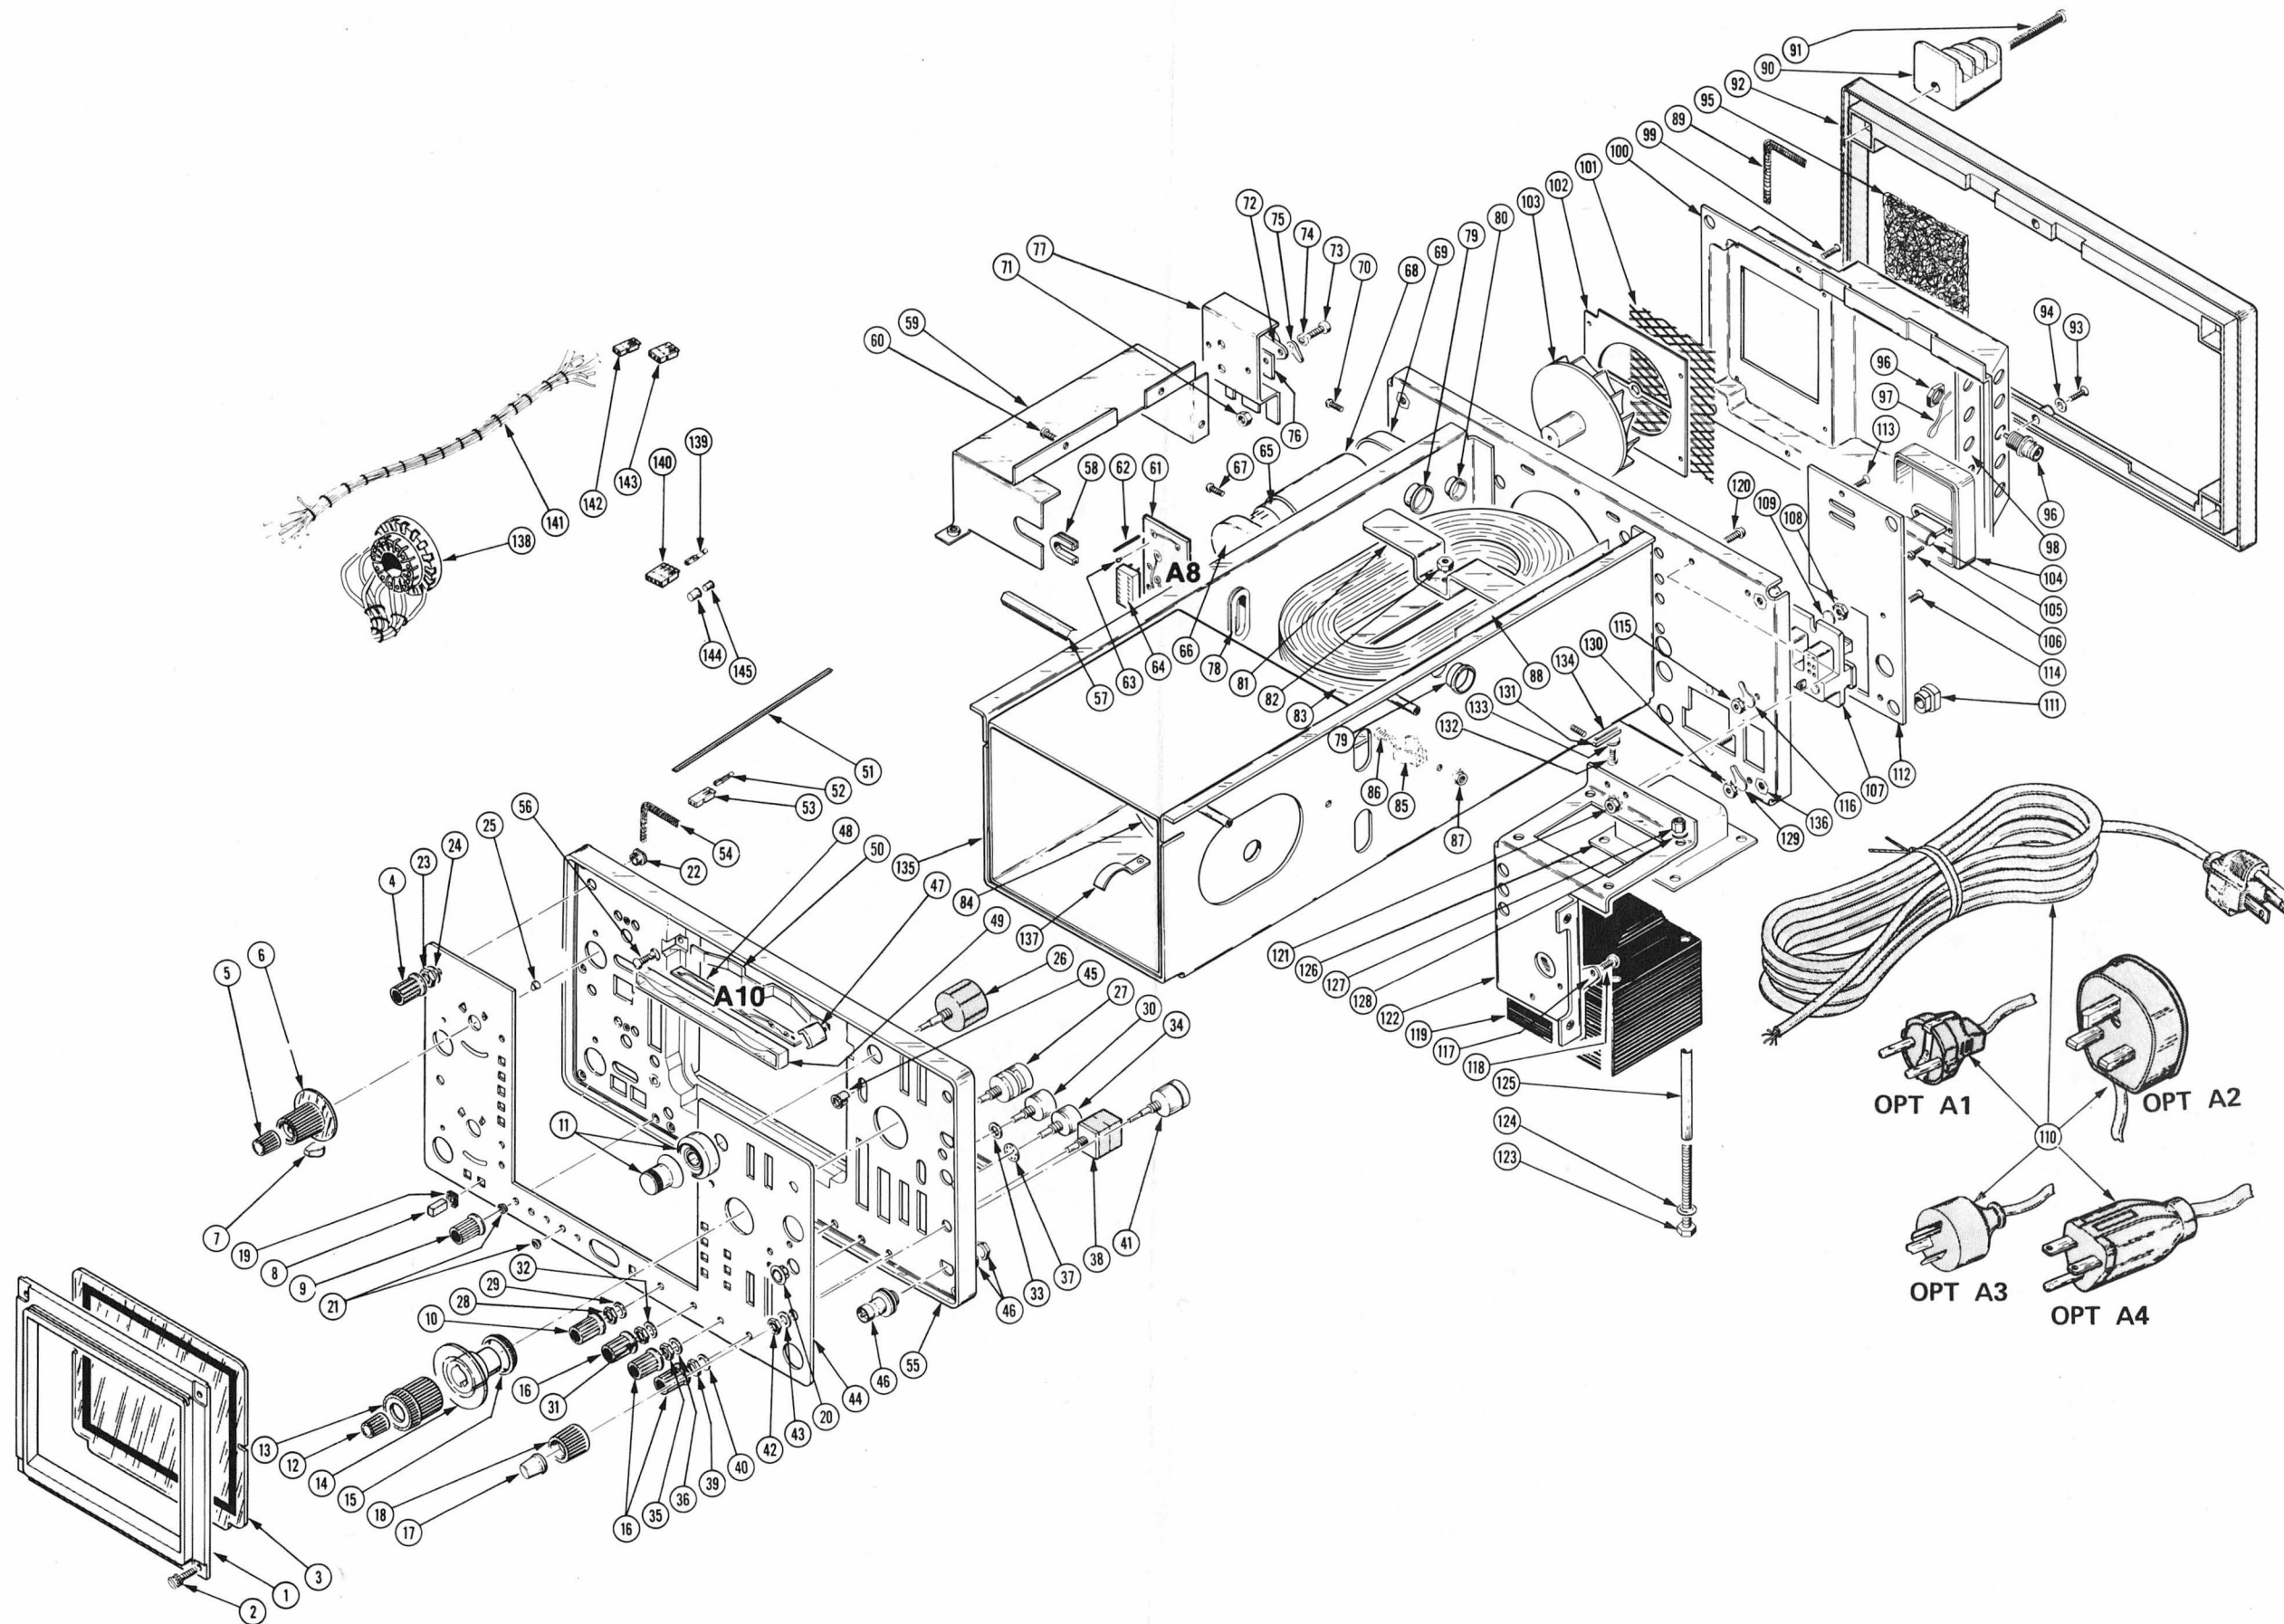


FIG. 2 CRT & CIRCUIT BOARDS

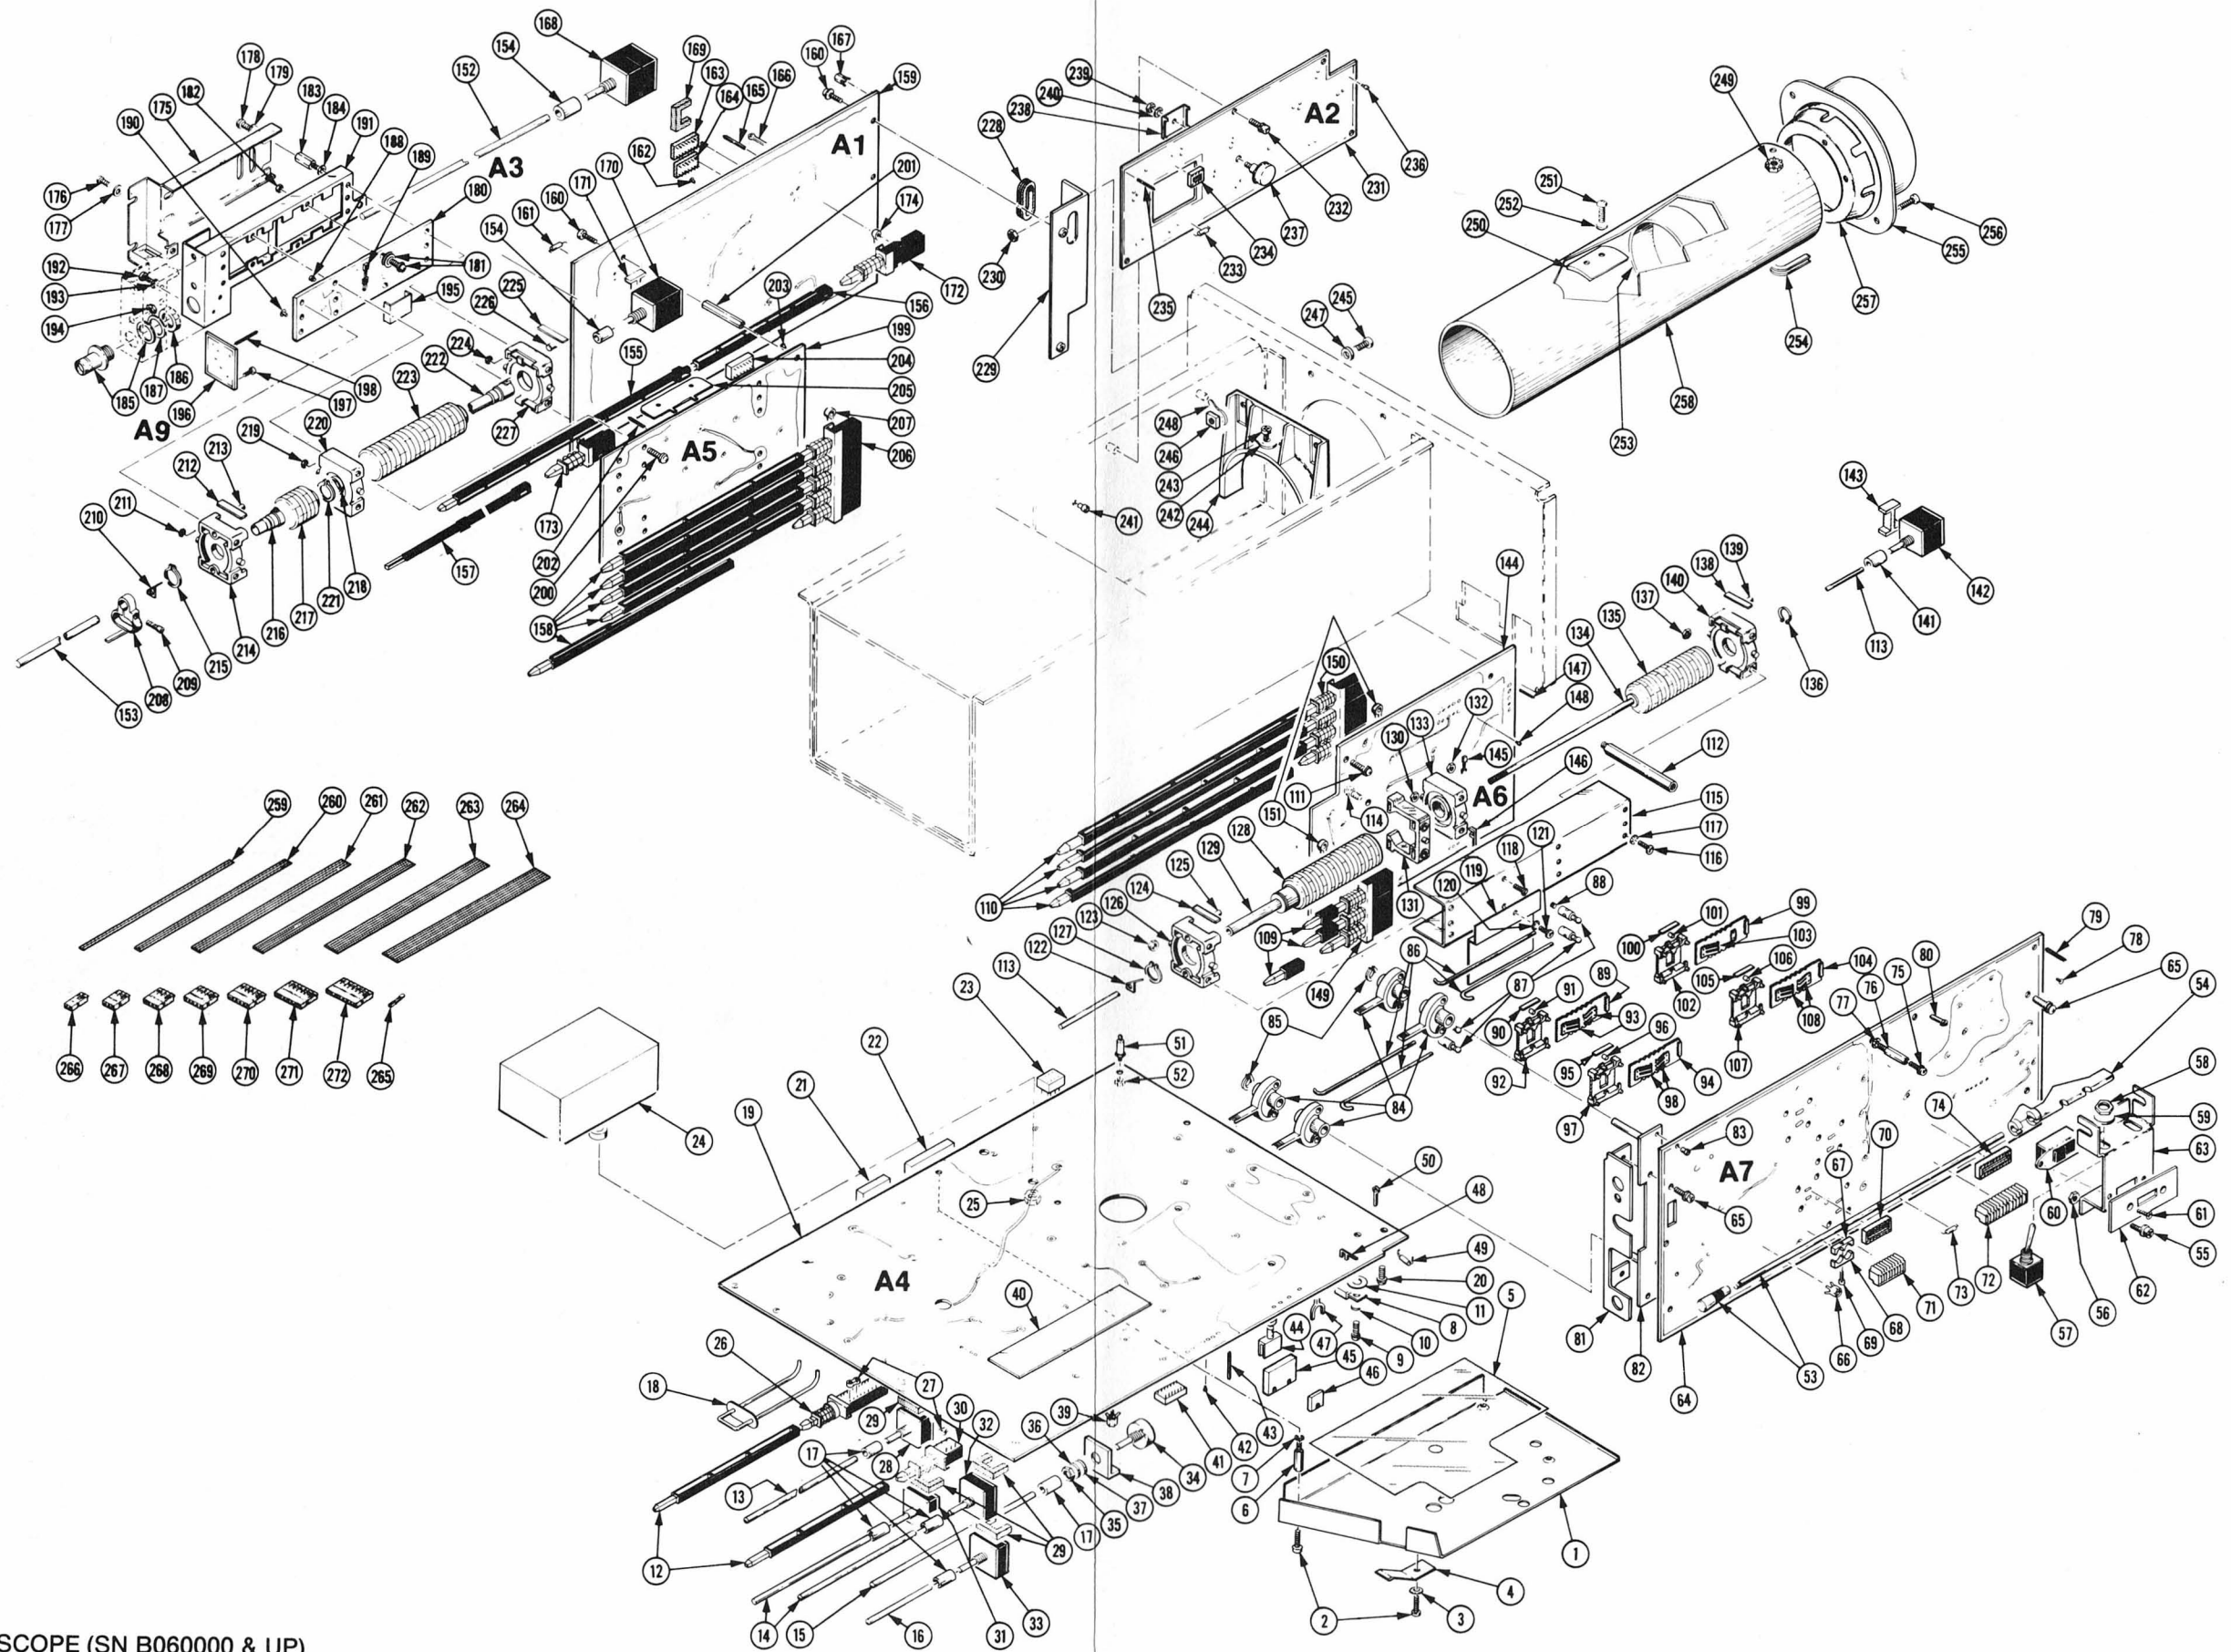

465B OSCILLOSCOPE (SN B060000 & UP)

Fig. & Index No.	Tektronix Part No.	Serial/Model No.		Qty	1 2 3 4 5	Name & Description	Mfr Code	Mfr Part Number
		Eff	Dscont					
2-1	337-1711-03			1		SHIELD,ELEC:HIGH VOLTAGE ***** (ATTACHING PARTS)*****	80009	337-1711-03
-2	211-0244-00			3		SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH STL	78189	ORD BY DESCR
-3	210-0004-00			4		WASHER,LOCK:#4 INTL,0.015 THK,STL CD PL ***** (END ATTACHING PARTS)*****	77900	1204-00-000541C
	131-1428-00			1		CONTACT,ELEC:GROUNDING CLIP ***** (ATTACHING PARTS)*****	80009	131-1428-00
	211-0012-00			1		SCREW,MACHINE:4-40 X 0.375,PNH STL CD PL	83385	ORD BY DESCR
	210-0851-00			1		WASHER,FLAT:0.119 ID X 0.375 INCH OD,ST ***** (END ATTACHING PARTS)*****	12327	ORD BY DESCR
-4	131-1428-00			1		CONTACT,ELEC:GROUNDING CLIP	80009	131-1428-00
-5	342-0175-00			1		INSULATOR,FILM:3.65 X 4.70 INCH	80009	342-0175-00
-6	129-0413-01			4		SPACER,POST:0.538 L,W/4-40 TAP 1 END	80009	129-0413-01
-7	210-0994-00			4		WASHER,FLAT:0.125 ID X 0.25" OD,STL	86928	5702-201-20
-8	---			2		TRANSISTOR:(SEE Q4190,Q4312 REPL) ***** (ATTACHING PARTS)*****		
-9	211-0182-00			2		SCR,ASSEM WSHR:2-56 X 0.312 INCH,PNH,STL	12360	ORD BY DESCR
-10	210-1156-00			2		WASHER,SHLDR:0.09 ID X 0.085 D,NYL,0.2 O ***** (END ATTACHING PARTS)*****	80009	210-1156-00
-11	342-0166-00			2		INSULATOR,PLATE:TRANSISTOR	80009	342-0166-00
-12	384-1408-00			2		EXTENSION SHAFT:3.8 L,MOLDED PLASTIC	80009	384-1408-00
-13	384-0457-00			1		EXTENSION SHAFT:6.7 L X 0.123 OD EPOXY-GL	80009	384-0457-00
-14	384-1187-00			2		EXTENSION SHAFT:3.40 INCH LONG	80009	384-1187-00
-15	384-1179-00			1		EXTENSION SHAFT:9.312 INCH LONG	80009	384-1179-00
-16	384-1174-00			1		EXTENSION SHAFT:1.80 INCH LONG	80009	384-1174-00
-17	376-0029-00			4		CPLG,SHAFT,RGD:0.128 ID X 0.312 OD X 0.5"L	80009	376-0029-00
	376-0051-01			1		CPLG,SHAFT,FLEX:0.127 ID X 0.375 OD	80009	376-0051-01
	---			-		EACH COUPLING SHAFT INCLUDES:		
	213-0075-00			2		.SETSCREW:4-40 X 0.094,STL BK OXD,HEX	000BK	ORD BY DESCR
-18	195-0276-01			1		LEAD,ELECTRICAL:0.062 DIA,BRS,W/MLD COLLAR	80009	195-0276-01
-19	---			1		CKT BOARD ASSY:INTERFACE(SEE A4 REPL) ***** (ATTACHING PARTS)*****		
-20	211-0244-00			7		SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH STL ***** (END ATTACHING PARTS)*****	78189	ORD BY DESCR
	---			-		CKT BOARD ASSY INCLUDES:		
-21	136-0499-12			1		.CONN,RCPT,ELEC:CKT BD,1 X 12,0.1 SPACING	00779	4-380949-2
-22	136-0499-14			1		.CONNECTOR,RCPT,14 CONTACT	00779	4-380949-4
-23	136-0514-00	B060000	B063314	1		.SKT,PL-IN ELEC:MICROCIRCUIT,8 DIP	09922	DILB8P-108
-24	---			1		.SEMICON DVC,DI:V MULTI(SEE U4032 REPL) ***** (ATTACHING PARTS)*****		
-25	220-0736-00			1		.NUT,PL,EXT WSHR:8-32 X 0.344 HEX,NYLON ***** (END ATTACHING PARTS)*****	23050	ORD BY DESCR
-26	---			1		.SWITCH,PUSH SW:BEAMFIND(SEE S4075 REPL)		
-27	361-0608-00			4		.SPACER,PUSH SW:PLASTIC	80009	361-0608-00
-28	---			1		.RES.,VAR,NONWIR:INTENSITY(SEE R4059 REPL)		
-29	361-0607-00			4		.SPACER,SWITCH:PLASTIC	80009	361-0607-00
-30	---			1		.SWITCH,PUSH SW:X10 MAG(SEE S4371 REPL)		
-31	---			1		.RES.,VAR,NONWIR:ASTIG(SEE R4178 REPL)		
-32	---			1		.RES.,VAR,NONWIR:TRACE ROTATION (SEE R4179 REPL)		
-33	---			1		.RES.,VAR,NONWIR:SCALE ILLUM (SEE R4195 REPL)		
-34	---			1		.RES.,VAR,NONWIR:FOCUS(SEE R4132 REPL) ***** (ATTACHING PARTS)*****		
-35	210-0583-00			1		.NUT,PLAIN,HEX:0.25-32 X 0.312 INCH,BRS	73743	2X20317-402
-36	210-0046-00			1		.WASHER,LOCK:0.261 ID,INTL,0.018 THK,BRS	77900	1214-05-00-0541C
-37	210-0940-00			1		.WASHER,FLAT:0.25 ID X 0.375 INCH OD,STL ***** (END ATTACHING PARTS)*****	12327	ORD BY DESCR
-38	386-2433-00			1		.SUPPORT,VAR RES:CIRCUIT BOARD MOUNTING	80009	386-2433-00
-39	131-1003-00			5		.CONN,RCPT,ELEC:CKT BD MT,3 PRONG	80009	131-1003-00
-40	337-1759-00			1		.SHLD,ELECTRICAL:SWEEP	80009	337-1759-00
-41	136-0269-02	B060000	B063314	3		.SKT,PL-IN ELEC:MICROCIRCUIT,14 DIP	09922	DILB14P-108T
	136-0728-00	B063315		1		.SKT,PL-IN ELEC:MICROCKT,14 CONTACT	09922	DILB14P-108



Fig. & Index No.	Tektronix Part No.	Serial/Model No.		Qty	1 2 3 4 5	Name & Description	Mfr Code	Mfr Part Number
		Eff	Dscont					
2-42	136-0252-07			165		.SOCKET,PIN CONN:W/O DIMPLE	22526	75060-012
-43	131-0608-00			41		.TERMINAL,PIN:0.365 L X 0.025 PH BRZ GOLD	22526	48283-036
-44	361-0007-00			3		.SPACER,SLEEVE:0.250 INCH DIA,PLASTIC	80009	361-0007-00
-45	124-0092-00			2		.TERMINAL BOARD:3 NOTCH,CERAMIC,CLIP MTD	80009	124-0092-00
-46	124-0118-00			1		.TERMINAL BOARD:1 NOTCH,CERAMIC,CLIP MTD	80009	124-0118-00
-47	344-0154-00			4		.CLIP,ELECTRICAL:FUSE,CKT BD MT	80009	344-0154-00
-48	131-1261-00			24		.CONTACT,ELEC:F-SHAPED	00779	1-380953-0
-49	131-0566-00			10		.BUS CONDUCTOR:DUMMY RES,2.375,22 AWG	57668	JWW-0200E0
-50	214-0579-02			18		.TERM,TEST POINT:BRASS	80009	214-0579-02
-51	131-0382-00			1		.TERMINAL,STUD:0.812 L,INSULATED .....(ATTACHING PARTS).....	71279	572-4822-01-05-1
-52	210-0586-00			1		.NUT,PL,ASSEM WA:4-40 X 0.25,STL CD PL .....(END ATTACHING PARTS).....	T0435	ORD BY DESCR
	198-2850-00			1		.WIRE SET,ELEC:	80009	198-2850-00
-53	384-1159-00			1		EXTENSION SHAFT:10.384 INCH LONG,W/KNOB	80009	384-1159-00
-54	214-1756-00			1		ACTUATOR,SWITCH:POWER	80009	214-1756-00
	644-0151-00			1		SWITCH ASSY: .....(ATTACHING PARTS).....	80009	644-0151-00
-55	211-0244-00			1		SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH STL	78189	ORD BY DESCR
-56	210-0551-00			1		NUT,PLAIN,HEX:4-40 X 0.25 INCH,STL	000BK	ORD BY DESCR
	210-0406-00			1		NUT,PLAIN,HEX:4-40 X 0.188,BRS,CD PL	73743	12161-50
	210-0994-00			1		WASHER,FLAT:0.125 ID X 0.25" OD,STL .....(END ATTACHING PARTS).....	86928	5702-201-20
	---			-		SWITCH ASSY INCLUDES:		
-57	---			1		.SWITCH,TOGGLE:POWER ON(SEE S14510 REPL) .....(ATTACHING PARTS).....		
-58	210-0562-00			1		.NUT,PLAIN,HEX:0.25-40 X 0.312 INCH,BBS	73743	ORD BY DESCR
-59	210-0046-00			1		.WASHER,LOCK:0.261 ID,INTL,0.018 THK,BRS .....(END ATTACHING PARTS).....	77900	1214-05-00-0541C
-60	---			1		.SWITCH,SLIDE:LINE SELECT(SEE S14500 REPL) .....(ATTACHING PARTS).....		
-61	211-0101-00			2		.SCREW,MACHINE:4-40 X 0.25,FLH,100 DEG,STL .....(END ATTACHING PARTS).....	83385	ORD BY DESCR
-62	200-1526-00			1		.CON,INV SW HOLE:	80009	200-1526-00
-63	407-1133-00			1		.BRACKET,ELEC SW:ALUMINUM	80009	407-1133-00
	386-2660-00			1		SUPPORT,CKT BD:ACETAL	80009	386-2660-00
-64	---			1		CKT BOARD ASSY:TRIG GEN & SWP(SEE A7 REPL) .....(ATTACHING PARTS).....		
-65	211-0244-00			4		SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH STL .....(END ATTACHING PARTS).....	78189	ORD BY DESCR
	---			-		CKT BOARD ASSY INCLUDES:		
-66	131-1003-00			8		.CONN,RCPT,ELEC:CKT BD MT,3 PRONG	80009	131-1003-00
-67	200-0945-00			3		.COVER,HALF XSTR:DUAL TO-18,ALUMINUM	80009	200-0945-00
-68	200-0945-01			3		.COVER,HALF XSTR:DUAL TO-18,W/2-56 THD .....(ATTACHING PARTS).....	80009	200-0945-01
-69	211-0062-00			1		.SCREW,MACHINE:2-56 X 0.312,PNH,STL .....(END ATTACHING PARTS).....	06950	ORD BY DESCR
-70	136-0260-02	B060000	B063314	2		.SKT,PL-IN ELEK:MICROCIRCUIT,16 DIP,LOW CL	09922	DILB16P-108T
-71	136-0499-10			1		.CONN,RCPT,ELEC:CKT BD,1 X 10,0.1 SPACING	00779	4-380949-0
-72	136-0499-14			1		.CONNECTOR,RCPT,:14 CONTACT	00779	4-380949-4
-73	131-0566-00			3		.BUS CONDUCTOR:DUMMY RES,2.375,22 AWG	57668	JWW-0200E0
-74	136-0634-00	B060000	B063314	1		.SOCKET,PLUG-IN:20 LEAD DIP,CKT BD MTG	73803	CS9002-20
-75	211-0244-00			1		.SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH STL	78189	ORD BY DESCR
-76	129-0413-01			1		.SPACER,POST:0.538 L,W/4-40 TAP 1 END	80009	129-0413-01
-77	210-0994-00			1		.WASHER,FLAT:0.125 ID X 0.25" OD,STL	86928	5702-201-20
-78	136-0252-07			108		.SOCKET,PIN CONN:W/O DIMPLE	22526	75060-012
-79	131-0608-00			19		.TERMINAL,PIN:0.365 L X 0.025 PH BRZ GOLD	22526	48283-036
-80	214-0579-02			3		.TERM,TEST POINT:BRASS	80009	214-0579-02
-81	407-1157-00			1		.BRACKET,ELEC SW:ALUMINUM	80009	407-1157-00
-82	386-2376-00			1		.PLATE,LEVER MTG:SLIDE SWITCH .....(ATTACHING PARTS).....	80009	386-2376-00
-83	210-0657-00			2		.EYELET,METALLIC:0.089 OD X 0.218 L,BR .....(END ATTACHING PARTS).....	57771	GS3-7
-84	214-1770-00			4		.LEVER,SLIDE SW: .....(ATTACHING PARTS).....	80009	214-1770-00
-85	354-0165-00			4		.RING,RETAINING:0.114 FREE ID X 0.025 INCH .....(END ATTACHING PARTS).....	97464	1000-15

Fig. & Index No.	Tektronix Part No.	Serial/Model No.		Qty	1	2	3	4	5	Name & Description	Mfr Code	Mfr Part Number
		Eff	Dscont									
2-86	384-1160-00			4						.EXTENSION SHAFT:LEVER SWITCH	91260	ORD BY DESCR
-87	376-0142-00			4						.ADPT,SHAFT,CPLG:SLIDE TO SHAFT	80009	376-0142-00
-88	213-0048-00			1						..SETScrew:4-40 X 0.125,STL BLK OXD	74445	ORD BY DESCR
	---			1						.SWITCH ASSY:B COUPLING(SEE S7015 REPL)		
	351-0355-01			1						..GUIDE,SLIDE SW:W/SPRINGS AND ROLLERS	80009	351-0355-01
-89	351-0355-00			1						...GUIDE,SLIDE SW:	80009	351-0355-00
-90	214-1126-01			2						...SPRING,FLAT:0.7 X 0.125,CU BE GRN CLR	80009	214-1126-01
-91	214-1127-00			2						...ROLLER,DETENT:0.125 DIA X 0.125,SST	80009	214-1127-00
-92	105-0804-00			1						..ACTUATOR,SL SW:4 OF 5 POSITIONS	80009	105-0804-00
-93	131-2235-07			1						..CONTACT,ELEC:COPPER BERYLLIUM	80009	131-2235-07
	210-0779-00			1						..RIVET,TUBULAR:0.051 OD X 0.115 INCH LONG	42838	RA-29952715
	---			1						.SWITCH ASSY:B SOURCE(SEE S7112 REPL)		
	351-0355-01			1						..GUIDE,SLIDE SW:W/SPRINGS AND ROLLERS	80009	351-0355-01
-94	351-0355-00			1						...GUIDE,SLIDE SW:	80009	351-0355-00
-95	214-1126-01			2						...SPRING,FLAT:0.7 X 0.125,CU BE GRN CLR	80009	214-1126-01
-96	214-1127-00			2						...ROLLER,DETENT:0.125 DIA X 0.125,SST	80009	214-1127-00
-97	105-0807-00			1						..ACTUATOR,SL SW:5 OF 6 POSITIONS	80009	105-0807-00
-98	131-2235-07			1						..CONTACT,ELEC:COPPER BERYLLIUM	80009	131-2235-07
	210-0779-00			1						..RIVET,TUBULAR:0.051 OD X 0.115 INCH LONG	42838	RA-29952715
	---			1						.SWITCH ASSY:A SOURCE(SEE S7415 REPL)		
	351-0355-01			1						..GUIDE,SLIDE SW:W/SPRINGS AND ROLLERS	80009	351-0355-01
-99	351-0355-00			1						...GUIDE,SLIDE SW:	80009	351-0355-00
-100	214-1126-01			2						...SPRING,FLAT:0.7 X 0.125,CU BE GRN CLR	80009	214-1126-01
-101	214-1127-00			2						...ROLLER,DETENT:0.125 DIA X 0.125,SST	80009	214-1127-00
-102	105-0805-00			1						..ACTUATOR,SL SW:4 OF 6 POSITIONS	80009	105-0805-00
-103	131-2235-07			1						..CONTACT,ELEC:COPPER BERYLLIUM	80009	131-2235-07
	210-0779-00			1						..RIVET,TUBULAR:0.051 OD X 0.115 INCH LONG	42838	RA-29952715
	---			1						.SWITCH ASSY:A SOURCE(SEE S7312 REPL)		
	351-0355-01			1						..GUIDE,SLIDE SW:W/SPRINGS AND ROLLERS	80009	351-0355-01
-104	351-0355-00			1						...GUIDE,SLIDE SW:	80009	351-0355-00
-105	214-1126-01			2						...SPRING,FLAT:0.7 X 0.125,CU BE GRN CLR	80009	214-1126-01
-106	214-1127-00			2						...ROLLER,DETENT:0.125 DIA X 0.125,SST	80009	214-1127-00
-107	105-0805-00			1						..ACTUATOR,SL SW:4 OF 6 POSITIONS	80009	105-0805-00
-108	131-2235-07			1						..CONTACT,ELEC:COPPER BERYLLIUM	80009	131-2235-07
	210-0779-00			1						..RIVET,TUBULAR:0.051 OD X 0.115 INCH LONG	42838	RA-29952715
-109	384-1136-00			3						EXTENSION SHAFT:0.95 INCH LONG	80009	384-1136-00
-110	384-1059-00			4						EXTENSION SHAFT:6.58 INCH LONG	80009	384-1059-00
	672-0781-00			1						CKT BOARD ASSY:TIMING	80009	672-0781-00
										*****ATTACHING PARTS*****		
-111	211-0244-00			1						SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH STL	78189	ORD BY DESCR
-112	129-0386-00			1						POST,ELEC-MECH:HEX,1.593 INCH LONG	80009	129-0386-00
										*****END ATTACHING PARTS*****		
				-						TIMING ASSY INCLUDES:		
-113	384-1105-00			1						.EXTENSION SHAFT:8.241 L X 0.081 INCH OD	80009	384-1105-00
	131-0963-00			1						.CONTACT,ELEC:GROUNDING	000EX	ORD BY DESCR
	334-3448-00			1						.MARKER,IDENT:MARKED NOTICE	80009	334-3448-00
	---			1						..SW CAM ACTR AS:TIME/CM(SEE S6111 REPL)		
										*****ATTACHING PARTS*****		
-114	211-0244-00			8						SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH STL	78189	ORD BY DESCR
										*****END ATTACHING PARTS*****		
				-						.ACTUATOR ASSY INCLUDES:		
-115	200-2314-00			1						..COVER,CAM SW:43 ELEMENTS,ALUMINUM	80009	200-2314-00
										*****ATTACHING PARTS*****		
-116	211-0678-00			6						..SCR,ASSEM WSHR:4-40 X 0.281 L,PNH STEEL	01536	ORD BY DESCR
-117	210-0004-00			7						..WASHER,LOCK:#4 INTL,0.015 THK,STL CD PL	77900	1204-00-000541C
-118	211-0101-00			1						..SCREW,MACHINE:4-40 X 0.25,FLH,100 DEG,ST	83385	ORD BY DESCR
										*****END ATTACHING PARTS*****		
-119	337-2621-00			1						..SHIELD,ELEC:SWITCH	80009	337-2621-00
										*****ATTACHING PARTS*****		
-120	211-0673-00			1						..SCREW,MACHINE:6-32 X 3.0 L,HEX,STL,CD PL		
-121	210-0004-00			1						..WASHER,LOCK:#4 INTL,0.015 THK,STL CD PL	77900	1204-00-000541C
										*****END ATTACHING PARTS*****		
-122	131-0963-00			1						..CONTACT,ELEC:GROUNDING	000EX	ORD BY DESCR
-123	210-0406-00			4						..NUT,PLAIN,HEX:4-40 X 0.188,BRS,CD PL	73743	12161-50
-124	214-1139-02			1						..SPRING,FLAT:GREEN COLORED	80009	214-1139-02
	214-1139-03			1						..SPRING,FLAT:RED COLORED	80009	214-1139-03

Fig. & Index No.	Tektronix Part No.	Serial/Model No.		Qty	Name & Description					Mfr Code	Mfr Part Number
		Eff	Dscont		1	2	3	4	5		
2-125	214-1752-00			2	..ROLLER,DETENT:					80009	214-1752-00
-126	401-0180-00			1	..BEARING,CAM SW:FRONT & REAR .....(ATTACHING PARTS).....					80009	401-0180-00
-127	354-0390-00			1	..RING,RETAINING:0.338 ID X 0.025" THK,STL .....(END ATTACHING PARTS).....					79136	5100-37MD
-128	105-0801-01			1	..ACTUATOR,CAM SW:TIME/CM,DRUM					80009	105-0801-01
	210-1160-00			1	..WASHER,FLAT:0.129 ID X 0.031 THK,TEFLON					86928	5612-32-31
	214-1416-00			1	..SPRING,HLCPS:0.176 OD X 0.835 INCH LONG					27143	ORD BY DESCR
-129	384-0878-22			1	..SHAFT,CAM SW:1.754 L X 0.248 OD					80009	384-0878-22
-130	210-0406-00			4	..NUT,PLAIN,HEX:4-40 X 0.188,BRS,CD PL					73743	12161-50
-131	407-1199-00			1	..BRACKET,COVER:ABS					80009	407-1199-00
-132	210-0406-00			4	..NUT,PLAIN,HEX:4-40 X 0.188,BRS,CD PL					73743	12161-50
-133	401-0178-02			1	..BEARING,CAM SW:0.428 ID,PLASTIC					80009	401-0178-02
-134	384-0882-06			1	..SHAFT,CAM SW:7.875 L,INTMD CNCTRC,W/DRIV					80009	384-0882-06
-135	105-0802-01			1	..ACTUATOR,CAM SW:TIME/CM DRUM .....(ATTACHING PARTS).....					80009	105-0802-01
-136	354-0390-00			1	..RING,RETAINING:0.338 ID X 0.025" THK,STL .....(END ATTACHING PARTS).....					79136	5100-37MD
-137	210-0406-00			4	..NUT,PLAIN,HEX:4-40 X 0.188,BRS,CD PL					73743	12161-50
-138	214-1139-02			1	..SPRING,FLAT:GREEN COLORED					80009	214-1139-02
	214-1139-03			1	..SPRING,FLAT:RED COLORED					80009	214-1139-03
-139	214-1752-00			2	..ROLLER,DETENT:					80009	214-1752-00
-140	401-0180-00			1	..BEARING,CAM SW:FRONT & REAR					80009	401-0180-00
-141	376-0039-00			1	..ADPT,SHAFT,CPLG:0.128 AND 0.082"DIA SHAFT					80009	376-0039-00
	213-0022-00			2	..SETSCREW:4-40 X 0.188 INCH,HEX SOC S					74445	ORD BY DESCR
-142	---			1	..RES.,VAR,NONWIR:(SEE R6155 REPL)						
-143	361-0515-00			1	..SPACER,SWITCH:PLASTIC					80009	361-0515-00
-144	---			1	..CKT BOARD ASSY:TIMING(SEE A6 REPL)						
-145	131-0604-00			42	..CONTACT,ELEC:CKT BD SW,SPR,CU BE					80009	131-0604-00
-146	131-1261-00			26	..CONTACT,ELEC:F-SHAPED					00779	1-380953-0
-147	131-0608-00			17	..TERMINAL,PIN:0.365 L X 0.025 PH BRZ GOLD					22526	48283-036
-148	136-0252-07			12	..SOCKET,PIN CONN:W/O DIMPLE					22526	75060-012
-149	---			1	..SW,PUSHBUTTON:3 WIDE(SEE S6205 REPL)						
-150	---			1	..SWITCH,PUSH:4 WIDE(SEE S6260 REPL)						
-151	361-0542-00			8	..SPACER,PUSH SW:0.078 L,POLYPROPYLENE					71590	J76113
-152	384-1007-01			2	EXTENSION SHAFT:8.428 L X 0.124 OD PLSTC					80009	384-1007-01
-153	384-1149-00			2	EXTENSION SHAFT:7.0 INCH LONG					80009	384-1149-00
-154	376-0051-01			2	CPLG,SHAFT,FLEX:0.127 ID X 0.375 OD					80009	376-0051-01
	213-0022-00			4	..SETSCREW:4-40 X 0.188 INCH,HEX SOC S					74445	ORD BY DESCR
	384-1542-00			1	EXTENSION SHAFT:11.682 L X 0.187 SQ,PLSTC					80009	384-1542-00
-155	384-1060-00			1	..EXTENSION SHAFT:7.831 INCH LONG					80009	384-1060-00
-156	384-1101-00			1	..EXTENSION SHAFT:4.14 INCH LONG					80009	384-1101-00
-157	384-1560-00			1	EXTENSION SHAFT:4.834 L GL FILLED NYLON					80009	384-1560-00
-158	384-1129-00			5	EXTENSION SHAFT:5.607 INCH LONG					80009	384-1129-00
-159	---			1	CKT BOARD ASSY:VERT PREAMP(SEE A1 REPL) .....(ATTACHING PARTS).....						
-160	211-0244-00			2	SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH STL .....(END ATTACHING PARTS).....					78189	ORD BY DESCR
-161	131-0566-00			-	CKT BOARD ASSY INCLUDES:						
-162	136-0252-07			2	..BUS CONDUCTOR:DUMMY RES,2.375,22 AWG					57668	JWW-0200E0
-163	136-0260-02	B060000	B063314	171	..SOCKET,PIN CONN:W/O DIMPLE					22526	75060-012
-164	136-0269-02	B060000	B063314	2	..SKT,PL-IN ELEK:MICROCIRCUIT,16 DIP,LOW CL					09922	DILB16P-108T
-165	131-0608-00			2	..SKT,PL-IN ELEK:MICROCIRCUIT,14 DIP					09922	DILB14P-108T
-166	131-0608-00			14	..TERMINAL,PIN:0.365 L X 0.025 PH BRZ GOLD					22526	48283-036
-166	214-0579-02			5	..TERM,TEST POINT:BRASS					80009	214-0579-02
-167	131-1003-00			10	..CONN,RCPT,ELEC:CKT BD MT,3 PRONG					80009	131-1003-00
-168	---			2	..RES.,VAR,NONWIR:POSITION (SEE R1055,R1558 REPL)						
-169	361-0607-00			2	..SPACER,SWITCH:PLASTIC					80009	361-0607-00
-170	---			2	..RES.,VAR,NONWIR:(SEE R1285 REPL)						
-171	361-0515-00			2	..SPACER,SWITCH:PLASTIC					80009	361-0515-00
-172	---			1	..SW,PUSHBUTTON:SW LIMIT(SEE S1414 REPL)						
-173	---			1	..SW,PUSHBUTTON:INVERT(SEE S1995 REPL)						
-174	361-0411-00			4	..SPACER,PUSH SW:0.13 W X 0.375 INCH L,PLST					71590	J64285-00
	334-3448-00			2	MARKER,IDENT:MARKED NOTICE					80009	334-3448-00

Fig. & Index No.	Tektronix Part No.	Serial/Model No.		Qty	Name & Description					Mfr Code	Mfr Part Number
		Eff	Dscont		1	2	3	4	5		
2-	672-0791-00			1	CKT BOARD ASSY:ATTENUATOR					80009	672-0791-00
-175	200-1439-00			2	COVER,CHASSIS:ATTENUATOR ***** (ATTACHING PARTS) *****					80009	200-1439-00
-176	213-0055-00			2	SCR,TPG,THD FOR:2-32 X 0.188 INCH,PNH STL					93907	ORD BY DESCR
-177	210-0938-00			2	WASHER,FLAT:0.109 ID X 0.25 INCH OD,STL					75497	AN960-3
-178	211-0661-00			8	SCREW,MACHINE:4-40 X 0.25 INCH,PNH,STL					78189	ORD BY DESCR
	131-1428-00			2	CONTACT,ELEC:GROUNDING CLIP					80009	131-1428-00
	166-0030-00			2	SPACER,SLEEVE:0.25 OD X 0.188 INCH LONG					80009	166-0030-00
	211-0012-00			2	SCREW,MACHINE:4-40 X 0.375,PNH STL CD PL					83385	ORD BY DESCR
-179	210-1307-00			8	WASHER,LOCK:0.115 ID,SPLIT,0.025 THK ***** (END ATTACHING PARTS) *****					86928	A384-25N
-180	---			2	CKT BOARD ASSY:ATTENUATOR(SEE A3 REPL) ***** (ATTACHING PARTS) *****						
-181	211-0244-00			8	SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH STL					78189	ORD BY DESCR
-182	210-0580-00			8	NUT,PLAIN,HEX:0.312-32 X 0.474 INCH,BRS					73743	ORD BY DESCR
-183	129-0299-00			8	POST,ELEC-MECH:HEX,0.333 INCH LONG					80009	129-0299-00
-184	210-1307-00			8	WASHER,LOCK:0.115 ID,SPLIT,0.025 THK ***** (END ATTACHING PARTS) *****					86928	A384-25N
-185	131-0679-02			2	EACH CKT BOARD ASSY INCLUDES: CONNECTOR,RCPT.,BNC,MALE,3 CONTACT ***** (ATTACHING PARTS) *****					24931	28JR270-1
-186	220-0695-00			2	NUT,PLAIN,DODEC:0.500-28 X 0.90 INCH,BRS					73743	ORD BY DESCR
-187	210-1039-00			2	WASHER,LOCK:INT,0.521 ID X 0.625 INCH O ***** (END ATTACHING PARTS) *****					78189	ORD BY DESCR
-188	136-0252-07			24	SOCKET,PIN CONN:W/O DIMPLE					22526	75060-012
	136-0333-00			2	SOCKET,PIN TERM:U/W 0.03 DIA PINS					00779	1-331677-4
-189	131-1030-00			10	CONT ASSY,ELEC:CAM SWITCH,BOTTOM					80009	131-1030-00
	131-1031-00			10	CONTACT ASSY,EL:CAM SWITCH,TOP					80009	131-1031-00
-190	210-3082-00			10	EYELET,METALLIC:0.047 OD X 0.133 L,BRASS					80009	210-3082-00
-191	441-1058-02			1	CHASSIS,SCOPE:ATTENUATOR ***** (ATTACHING PARTS) *****					80009	441-1058-02
-192	211-0001-00			2	SCREW,MACHINE:2-56 X 0.25 INCH,PNH STL					87308	ORD BY DESCR
-193	210-0053-00			2	WASHER,LOCK:#2 SPLIT,0.02THK STL CAD PL						ORD BY DESCR
-194	210-0405-00			2	NUT,PLAIN,HEX:2-56 X 0.188,BRS,CD PL					73743	12157-50
	210-0845-00			1	WASHER,FLAT:0.500 ID X 0.625 INCH OD,ST					12327	ORD BY DESCR
	210-1008-00			2	WASHER,FLAT:#8 INTL,0.02THK,STL CD PL ***** (END ATTACHING PARTS) *****					12327	ORD BY DESCR
-195	337-1406-00			1	SHLD,ELECTRICAL:CAM CONTACTS					80009	337-1406-00
-196	---			2	CKT BOARD ASSY:PROBE CODING(SEE A9 REPL) ***** (ATTACHING PARTS) *****						
-197	211-0065-00			2	SCREW,MACHINE:4-40 X 0.188 INCH,PNH STL ***** (END ATTACHING PARTS) *****					77250	ORD BY DESCR
-198	131-0608-00			3	CKT BOARD ASSY INCLUDES: TERMINAL,PIN:0.365 L X 0.025 PH BRZ GOLD					22526	48283-036
-199	---			1	CKT BOARD ASSY:VERT MODE SW(SEE A5 REPL)						
-200	211-0244-00			1	SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH STL					78189	ORD BY DESCR
-201	129-0457-00			1	SPACER,POST:1.07L,W/4-40 TAP 1 END ***** (END ATTACHING PARTS) *****					80009	129-0457-00
-202	131-0589-00			8	CKT BOARD ASSY INCLUDES: TERMINAL,PIN:0.46 L X 0.025 SQ					22526	48283-029
	131-0608-00			21	TERMINAL,PIN:0.365 L X 0.025 PH BRZ GOLD					22526	48283-036
-203	136-0252-07			28	SOCKET,PIN CONN:W/O DIMPLE					22526	75060-012
-204	136-0269-02	B060000	B063314	1	SKT,PL-IN ELEK:MICROCIRCUIT,14 DIP					09922	DILB14P-108T
	136-0728-00	B063315		1	SKT,PL-IN ELEK:MICROCKT,14 CONTACT					09922	DILB14P-108
-205	337-0896-00			2	PLATE,ELEC SHLD:CKT BOARD MOUNT,BRS					80009	337-0896-00
-206	---			1	SWITCH,PB:(SEE S5210 REPL)						
-207	361-0411-00			4	SPACER,PUSH SW:0.13 W X 0.375 INCH L,PLS					71590	J64285-00
-208	105-0243-00			2	ACTUATOR,SWITCH:AC,DC ***** (ATTACHING PARTS) *****					80009	105-0243-00
-209	213-0214-00			2	SCREW,CAP SCH:2-56 X 0.375*HEX HD STL ***** (END ATTACHING PARTS) *****					70278	ORD BY DESCR
	263-1065-00			2	SW CAM ACTR AS:VOLTS/DIV					80009	263-1065-00
	---			-	EACH CAM SW ACTR INCLUDES:						
-210	131-0963-00			1	CONTACT,ELEC:GROUNDING					000EX	ORD BY DESCR
-211	210-0406-00			2	NUT,PLAIN,HEX:4-40 X 0.188,BRS,CD PL					73743	12161-50

Fig. & Index No.	Tektronix Part No.	Serial/Model No.		Qty	Name & Description					Mfr Code	Mfr Part Number
		Eff	Dscont		1	2	3	4	5		
2-212	214-1139-02			2	...SPRING,FLAT:GREEN COLORED					80009	214-1139-02
-213	214-1752-00			2	...ROLLER,DETENT:					80009	214-1752-00
-214	401-0180-00			1	...BEARING,CAM SW:FRONT & REAR .....(ATTACHING PARTS).....					80009	401-0180-00
-215	354-0390-00			1	...RING,RETAINING:0.338 ID X 0.025" THK,ST .....(END ATTACHING PARTS).....					79136	5100-37MD
-216	384-0878-02			1	...SHAFT,CAM SW:					80009	384-0878-02
-217	105-0282-01			1	...ACTUATOR,CAM SW:DC,GND,AC					80009	105-0282-01
-218	210-1189-00			1	...WASHER,FLAT:0.195 ID X 0.367 INCH OD,BR					51316	ORD BY DESCR
	214-2043-00			1	...SPRING,HLCPS:CONICAL,0.20 INCH LONG					80009	214-2043-00
-219	210-0406-00			4	...NUT,PLAIN,HEX:4-40 X 0.188,BRS,CD PL					73743	12161-50
-220	401-0178-00			1	...BEARING,CAM SW:CENTER .....(ATTACHING PARTS).....					80009	401-0178-00
-221	354-0443-00			1	...RING,RETAINING:0.328 FREE ID X 0.448 OD .....(END ATTACHING PARTS).....					97464	200-37
-222	384-0880-00			1	...SHAFT,CAM SW:REAR					80009	384-0880-00
-223	105-0521-00			1	...ACTUATOR,CAM SW:ATTEN					80009	105-0521-00
-224	210-0406-00			4	...NUT,PLAIN,HEX:4-40 X 0.188,BRS,CD PL					73743	12161-50
-225	214-1139-02			1	...SPRING,FLAT:GREEN COLORED					80009	214-1139-02
	214-1139-03			1	...SPRING,FLAT:RED COLORED					80009	214-1139-03
-226	214-1752-00			1	...ROLLER,DETENT:					80009	214-1752-00
-227	401-0180-00			1	...BEARING,CAM SW:FRONT & REAR					80009	401-0180-00
-228	348-0253-00			1	GROMMET,PLASTIC:BLACK,OBLONG,3.0 X 0.925					80009	348-0253-00
-229	407-1127-00			1	BRACKET,PREAMP:REAR,BRASS CU-SN-ZN PL .....(ATTACHING PARTS).....					80009	407-1127-00
-230	210-0586-00			2	NUT,PL,ASSEM WA:4-40 X 0.25,STL CD PL .....(END ATTACHING PARTS).....					T0435	ORD BY DESCR
-231	---			1	CKT BOARD ASSY:VERT OUTPUT(SEE A2 REPL) .....(ATTACHING PARTS).....						
-232	211-0244-00			2	SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH STL .....(END ATTACHING PARTS).....					78189	ORD BY DESCR
	---			-	CKT BOARD ASSY INCLUDES:						
-233	131-0566-00			1	.BUS CONDUCTOR:DUMMY RES,2.375,22 AWG					57668	JWW-0200E0
-234	136-0514-00	B060000	B063314	1	.SKT,PL-IN ELEC:MICROCIRCUIT,8 DIP					09922	DILB8P-108
-235	131-0608-00			6	.TERMINAL,PIN:0.365 L X 0.025 PH BRZ GOLD					22526	48283-036
-236	136-0252-07			41	.SOCKET,PIN CONN:W/O DIMPLE					22526	75060-012
-237	---			1	.MICROCIRCUIT:(SEE U2260 REPL)						
-238	407-1149-00			1	.BRACKET,GND:MICROCIRCUIT,BRASS .....(ATTACHING PARTS).....					80009	407-1149-00
-239	220-0456-00			1	NUT,PLAIN,HEX.:6-32 X 0.25 INCH,STL					73743	9038
-240	210-0055-00			1	WASHER,LOCK:SPLIT,0.145 ID X 0.253 OD,S .....(END ATTACHING PARTS).....					86928	ORD BY DESCR
-241	361-0008-00			3	SPACER,SLEEVE:0.28L X 0.111 ID					80009	361-0008-00
-242	210-0202-00			1	TERMINAL,LUG:0.146 ID,LOCKING,BRZ,TIN PL .....(ATTACHING PARTS).....					86928	A-373-158-2
-243	211-0507-00			1	SCREW,MACHINE:6-32 X 0.312,PNH STL,CD PL .....(END ATTACHING PARTS).....					83385	ORD BY DESCR
	386-4225-00			1	SUPPORT,CLAMP:ALUMINUM					80009	386-4225-00
-244	407-1128-00			1	BRKT,CRT SHIELD:REAR,NYLON .....(ATTACHING PARTS).....					80009	407-1128-00
-245	211-0507-00			2	SCREW,MACHINE:6-32 X 0.312,PNH STL,CD PL					83385	ORD BY DESCR
-246	220-0419-00			2	NUT,PLAIN,SQ:6-32 X 0.312 INCH,STL					83385	ORD BY DESCR
-247	210-0803-00			1	WASHER,FLAT:0.15 ID X 0.032 THK,STL CD					12327	ORD BY DESCR
-248	210-0202-00			1	TERMINAL,LUG:0.146 ID,LOCKING,BRZ,TIN PL					86928	A-373-158-2
-249	210-0457-00			1	NUT,PL,ASSEM WA:6-32 X 0.312,STL CD PL .....(END ATTACHING PARTS).....					83385	ORD BY DESCR
-250	343-0217-00			1	CLAMP,COIL:Y-AXIS .....(ATTACHING PARTS).....					80009	343-0217-00
-251	211-0147-00			2	SCREW,MACHINE:4-40 X 0.25 INCH,PNH STL					83385	ORD BY DESCR
-252	210-0994-00			2	WASHER,FLAT:0.125 ID X 0.25" OD,STL .....(END ATTACHING PARTS).....					86928	5702-201-20
-253	---			1	COIL,DEFLECTION:Y-AXIS(SEE L14165 REPL)						
-254	348-0145-00			1	GROMMET,PLASTIC:U-SHP,1.0 X 0.42 INCH					80009	348-0145-00

Fig. & Index No.	Tektronix Part No.	Serial/Model No.		Qty	1 2 3 4 5					Name & Description	Mfr Code	Mfr Part Number
		Eff	Dscont									
2-255	200-1459-00			1						COVER,CRT:REAR ***** (ATTACHING PARTS) *****	80009	200-1459-00
-256	211-0244-00			2						SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH STL ***** (END ATTACHING PARTS) *****	78189	ORD BY DESCR
-257	386-2246-00			1						SUPPORT,CRT:REAR	80009	386-2246-00
-258	337-1644-00			1						SHLD,ELECTRICAL:CRT NECK	80009	337-1644-00
	198-4146-00			1						WIRE SET,ELEC:	80009	198-4146-00
-259	175-0825-00			FT						.WIRE,ELECTRICAL:2 WIRE RIBBON	80009	175-0825-00
-260	175-0826-00			FT						.WIRE,ELECTRICAL:3 WIRE RIBBON	80009	175-0826-00
-261	175-0827-00			FT						.CABLE,SP,ELEC:4.26 AWG,STRD,PVC JKT,RBN	08261	111-2699-954
-262	175-0828-00			FT						.WIRE,ELECTRICAL:5 WIRE RIBBON	08261	111-2699-955
-263	175-0829-00			FT						.WIRE,ELECTRICAL:6 WIRE RIBBON	08261	111-2699-973
-264	175-0830-00			FT						.WIRE,ELECTRICAL:7 WIRE RIBBON	08261	111-2699-972
-265	131-0707-00			111						.CONTACT,ELEC:22-26 AWG,BRS & CU BE GOLD	22526	47439-000
	131-0472-00			4						.CONNECTOR,PIN:FEMALE	000GE	ORD BY DESCR
-266	352-0169-00			14						.HLDR,TERM CONN:2 WIRE,BLACK	80009	352-0169-00
-267	352-0161-00			8						.HLDR,TERM CONN:3 WIRE,BLACK	80009	352-0161-00
-268	352-0162-01			1						.CONN BODY,PL,EL:4 WIRE BROWN	80009	352-0162-01
-269	352-0163-00			3						.HLDR,TERM CONN:5 WIRE,BLACK	80009	352-0163-00
-270	352-0164-00			3						.HLDR,TERM CONN:6 WIRE,BLACK	80009	352-0164-00
-271	352-0165-00			3						.HLDR,TERM CONN:7 WIRE,BLACK	80009	352-0165-00
-272	352-0166-00			1						.HLDR,TERM CONN:8 WIRE,BLACK	80009	352-0166-00
	195-0528-00			1						LEAD ELECTRICAL:22 AWG,2.0 L,0-N	80009	195-0528-00

Fig. & Index No.	Tektronix Part No.	Serial/Model No.		Qty	Name & Description					Mfr Code	Mfr Part Number
		Eff	Dscont		1	2	3	4	5		
3-1	437-0141-02			1	CAB,ELEC EQUIP:STANDARD					80009	437-0141-02
	437-0174-02			1	CABINET,SCOPE:					80009	437-0174-02
-2	348-0080-01			4	.FOOT,CABINET:BOTTOM					80009	348-0080-01
	355-0054-00			4	.STUD,PRESSMOUNT:6-32 X 0.312,STL CD PL					46384	FH-632-5CC
-3	352-0263-01			1	.HLDR,POUCH ASSY:TEK BLUE POLYCARBONATE					80009	352-0263-01
-4	200-1412-00			1	COVER,SCOPE:FRONT					80009	200-1412-00
	200-1723-00			1	COVER,SCOPE:FRONT					80009	200-1723-00
	367-0195-05			1	HANDLE,CARRYING:12.772 L,BLACK VINYL					80009	367-0195-05
-5	200-0602-00			2	.COVER,HDL LATCH:2.12 DIA X 0.7,ACETAL					80009	200-0602-00
-6	367-0195-00			1	.HANDLE,CARRYING:					80009	367-0195-00
					.*****ATTACHING PARTS*****						
				4	.SCR,TPG,THD FOR:6-32 X 0.50 DEG,FLH ST					83486	ORD BY DESCR
-7	213-0227-00				.*****END ATTACHING PARTS*****						
				1	.MARKER,IDENT:MARKED 465B					80009	334-3508-00
-8	334-3508-00			1	.MARKER,IDENT:MARKED 465B					80009	334-3508-00
-9	214-0516-00			2	.SPRING,HLCPS:0.959 DIA X 1.250 INCH LONG					80009	214-0516-00
-10	214-1987-00			2	.INDEX,HDL RING:					80009	214-1987-00
-11	214-0515-02			2	.HUB,HDL INDEX:1.42 DIA X 0.565 THK,AL CD					80009	214-0515-02
					.*****ATTACHING PARTS*****						
				2	.SCREW,SLFLKG:10-24 X 0.375,HEX HD,STL					26233	P38AS 1024 6C
-12	213-0139-01			2	.SCREW,SLFLKG:10-24 X 0.375,HEX HD,STL					26233	P38AS 1024 6C
-13	210-0805-00			2	.WASHER,FLAT:0.204 ID X 0.438 INCH OD					12327	ORD BY DESCR
					.*****END ATTACHING PARTS*****						

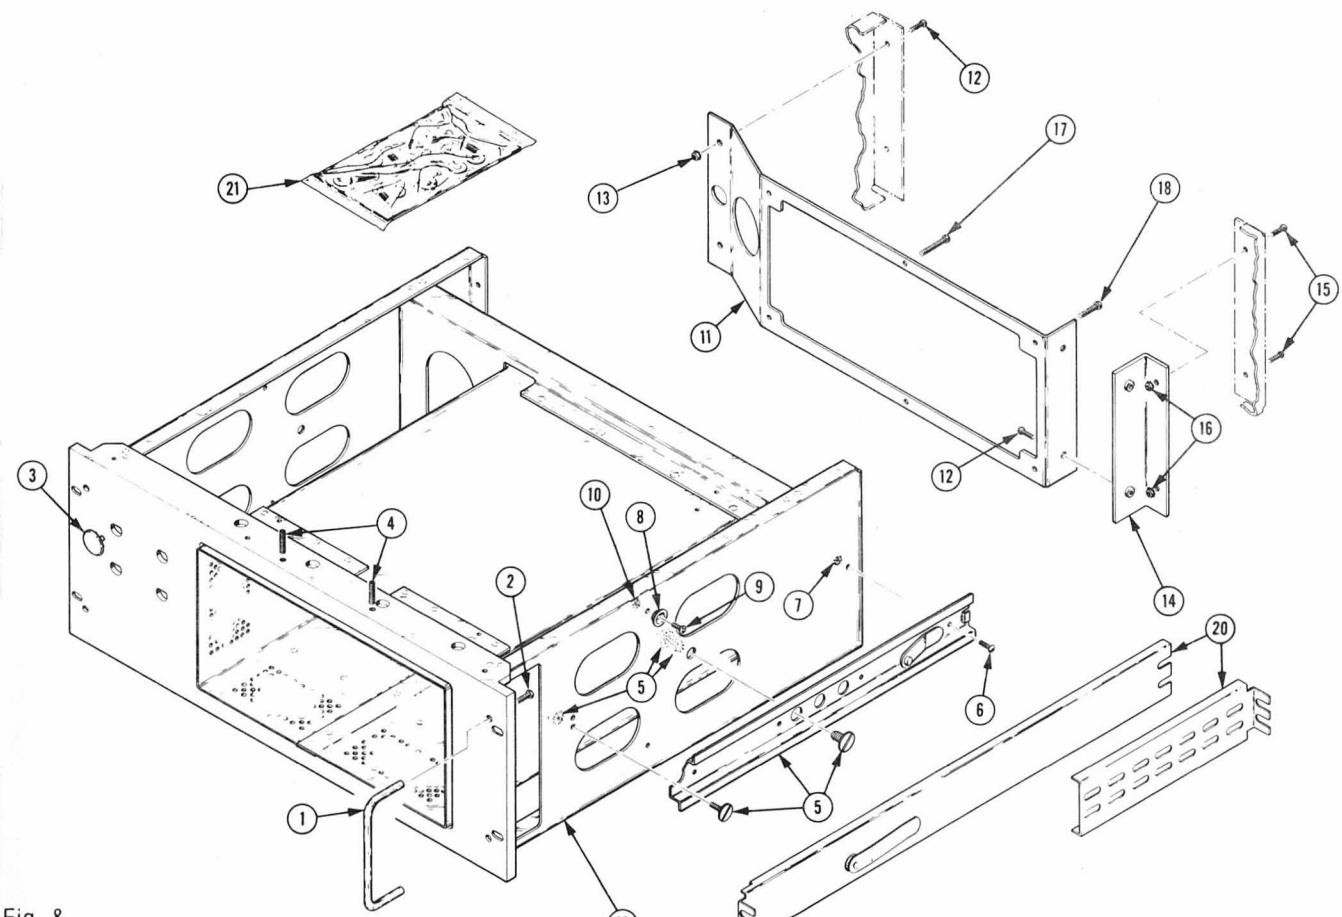
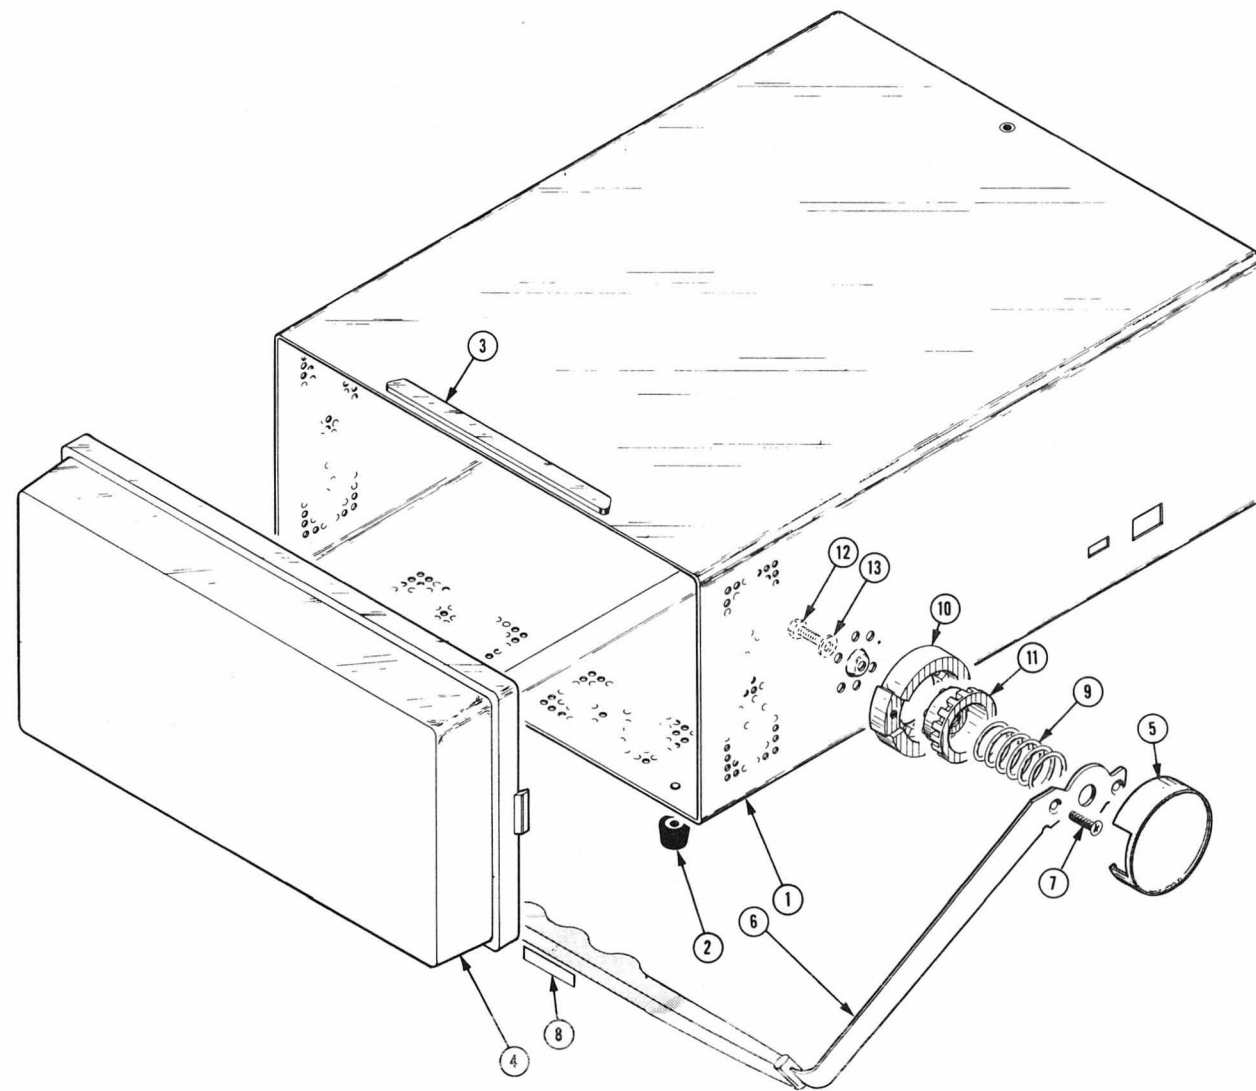


FIG. 3 & 4 CABINET & RACKMOUNT ADAPTER

Fig. & Index No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Qty	1	2	3	4	5	Name & Description	Mfr Code	Mfr Part Number
3-1	437-0141-02		1						CAB,ELEC EQUIP:STANDARD	80009	437-0141-02
	437-0174-02		1						CABINET,SCOPE:	80009	437-0174-02
-2	348-0080-01		4						FOOT,CABINET:BOTTOM	80009	348-0080-01
	355-0054-00		4						STUD,PRESSMOUNT:6-32 X 0.312,STL CD PL	46384	FH-632-5CC
-3	352-0263-01		1						HLDR,POUCH ASSY:	80009	352-0263-01
-4	200-1412-00		1						COVER,SCOPE:FRONT	80009	200-1412-00
	200-1723-00		1						COVER,SCOPE:FRONT	80009	200-1723-00
	367-0195-05		1						HANDLE,CARRYING:12.772 L,BLACK VINYL W/HARD	80009	367-0195-05
-5	200-0602-00		2						COVER,HDL LATCH:2.12 DIA X 0.7,ACETAL	80009	200-0602-00
-6	367-0195-00		1						HANDLE,CARRYING:	80009	367-0195-00
									(ATTACHING PARTS)		
-7	213-0227-00		4						SCR,TPG,THD FOR:6-32 X 0.50 DEG,FLH ST	83385	OBD
									(ATTACHING PARTS)		
-8	334-3508-00		1						MARKER,IDENT:MARKED 465B	80009	334-3508-00
-9	214-0516-00		2						SPRING,HLCPS:0.959 DIA X 1.250 INCH LONG	80009	214-0516-00
-10	214-1987-00		2						INDEX,HDL RING:	80009	214-1987-00
-11	214-0515-02		2						HUB,HDL INDEX:1.42 DIA X 0.565 THK,AL CD	80009	214-0515-02
									(ATTACHING PARTS)		
-12	213-0139-01		2						SCREW,SLFLKG:10-24 X 0.375HEX HD. STL	26233	P38AS 1024 6C
-13	210-0805-00		2						WASHER,FLAT:0.204 ID X 0.438 INCH OD,STL	12327	OBD
									(ATTACHING PARTS)		

Fig. & Index No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Qty	1	2	3	4	5	Name & Description	Mfr Code	Mfr Part Number
4-	016-0556-00		1						ADPTR,RACK MTG:KIT	80009	016-0556-00
-1	367-0022-00		2						HANDLE,BOW:1.5 X 4.5 INCH (ATTACHING PARTS)	06540	10353-B-1032-25A
-2	213-0090-00		4						SCREW,MACHINE:10-32 X 0.50 INCH,HEX	83385	OBD
									(ATTACHING PARTS)		
-3	134-0067-00		4						BUTTON,PLUG:GRAY PLASTIC	80009	134-0067-00
-4	213-0334-00		2						SETSCREW:0.250-28 X 0.750 INCH,SOC STL	56878	OBD
-5	351-0104-00		1						SLIDE SECT,DWR:12.625 X 2.25	06666	C-720-2
-6	212-0023-00		2						SCREW,MACHINE:8-32 X 0.375 INCH,PNH STL	83385	OBD
-7	210-0458-00		2						NUT,PL,ASSEM WA:8-32 X 0.344 INCH,STL	83385	OBD
									(ATTACHING PARTS)		
-8	210-0808-00		2						EYELET,METALLIC:CENTERING (ATTACHING PARTS)	63743	25151.13-3
-9	211-0507-00		2						SCREW,MACHINE:6-32 X 0.312 INCH,PNH STL	83385	OBD
-10	210-0457-00		2						NUT,PL,ASSEM WA:6-32 X 0.312 INCH,STL	83385	OBD
									(ATTACHING PARTS)		
-11	386-2669-00		1						SUPPORT,CABINET:REAR (ATTACHING PARTS)	80009	386-2669-00
-12	212-0023-00		4						SCREW,MACHINE:8-32 X 0.375 INCH,PNH STL	83385	OBD
-13	210-0458-00		2						NUT,PL,ASSEM WA:8-32 X 0.344 INCH,STL	83385	OBD
									(ATTACHING PARTS)		
-14	407-1350-00		1						BRACKET,ANGLE:VIBRATION DAMPER,ALUMINUM (ATTACHING PARTS)	80009	407-1350-00
-15	212-0023-00		2						SCREW,MACHINE:8-32 X 0.375 INCH,PNH STL	83385	OBD
-16	210-0458-00		2						NUT,PL,ASSEM WA:8-32 X 0.344 INCH,STL	83385	OBD
									(ATTACHING PARTS)		
-17	211-0517-00		2						SCREW,MACHINE:6-32 X 1 INCH,PNH,STL	83385	OBD
-18	212-0033-00		4						SCREW,MACHINE:8-32 X 0.750 INCH,PNH STL	83385	OBD
-19	437-0154-03		1						CABINET,SCOPE:	80009	437-0154-03
-20	351-0101-02		1						SLIDE,PWR,EXT:W/CLOSED MOUNTING SLOTS	80009	351-0101-02
-21	016-0099-00		1						HDW KIT,ELEK EQ:RACKMOUNT HDW	80009	016-0099-00



Fig. & Index No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Qty	1 2 3 4 5	Name & Description	Mfr Code	Mfr Part Number
4-	016-0556-00		1		ADPTR,RACK MTG:KIT	80009	016-0556-00
-1	367-0022-00		2		.HANDLE,BOW:1.5 X 4.5 INCH ***** (ATTACHING PARTS) *****	88245	15986
-2	213-0090-00		4		.SCREW,MACHINE:10-32 X 0.50,HEX HD,STL,CD ***** (END ATTACHING PARTS) *****	83385	ORD BY DESCR
-3	134-0067-00		4		.BUTTON,PLUG:GRAY PLASTIC	80009	134-0067-00
-4	213-0334-00		2		.SETSCREW:0.250-28 X 0.750 INCH,SOC S	56878	ORD BY DESCR
-5	351-0104-00		1		.SLIDE SECT,DWR:12.625 X 2.25	06666	C-1353
-6	212-0023-00		2		.SCREW,MACHINE:8-32 X 0.375,PNH,STL,CD PL	83385	ORD BY DESCR
-7	210-0458-00		2		.NUT,PL,ASSEM WA:8-32 X 0.344,STL,CD PL ***** (END ATTACHING PARTS) *****	78189	511-081800-00
-8	210-0808-00		2		.EYELET,METALLIC:CENTERING ***** (ATTACHING PARTS) *****	63743	25151.13-3
-9	211-0507-00		2		.SCREW,MACHINE:6-32 X 0.312,PNH STL,CD PL	83385	ORD BY DESCR
-10	210-0457-00		2		.NUT,PL,ASSEM WA:6-32 X 0.312,STL CD PL ***** (END ATTACHING PARTS) *****	83385	ORD BY DESCR
-11	386-2669-00		1		.SUPPORT,CABINET:REAR ***** (ATTACHING PARTS) *****	80009	386-2669-00
-12	212-0023-00		4		.SCREW,MACHINE:8-32 X 0.375,PNH,STL,CD PL	83385	ORD BY DESCR
-13	210-0458-00		2		.NUT,PL,ASSEM WA:8-32 X 0.344,STL,CD PL ***** (END ATTACHING PARTS) *****	78189	511-081800-00
-14	407-1350-00		1		.BRACKET,ANGLE:VIBRATION DAMPER,ALUMINUM ***** (ATTACHING PARTS) *****	80009	407-1350-00
-15	212-0023-00		2		.SCREW,MACHINE:8-32 X 0.375,PNH,STL,CD PL	83385	ORD BY DESCR
-16	210-0458-00		2		.NUT,PL,ASSEM WA:8-32 X 0.344,STL,CD PL ***** (END ATTACHING PARTS) *****	78189	511-081800-00
-17	211-0517-00		2		.SCREW,MACHINE:6-32 X 1 INCH,PNH,STL	83385	ORD BY DESCR
-18	212-0033-00		4		.SCREW,MACHINE:8-32 X 0.750 INCH,PNH STL	83385	ORDER BY DESCR
-19	437-0154-03		1		.CABINET,SCOPE:	80009	437-0154-03
-20	351-0101-02		1		.SLIDE,DWR,EXT:W/CLOSED MOUNTING SLOTS	80009	351-0101-02
-21	016-0099-00		1		.HDW KIT,ELEK EQ:RACKMOUNT HDW	80009	016-0099-00

Fig. & Index No.	Tektronix Part No.	Serial/Model No.		Qty						Name & Description	Mfr	
		Eff	Dscont		1	2	3	4	5		Code	Mfr Part Number
5-1	016-0535-02			1							80009	016-0535-02
	016-0594-00			1							80009	016-0594-00
-2	016-0537-00			1							05006	ZIP-6X91D
-3	010-6105-03			2							80009	010-6105-03
	010-6430-00			1							80009	010-6430-00
-4	337-1674-01			1							80009	337-1674-01
-5	134-0016-01			1							80009	134-0016-01
-6	159-0016-00			2							71400	AGC-CW-1 1/2
				-								
	159-0042-00			1							71400	AGC-CW-3/4
				-								
	161-0094-00			1							70903	ORD BY DESCR
				-								
	003-0120-00			1							80009	003-0120-00
	070-2756-00			1							80009	070-2756-00
	070-2757-00			1							80009	070-2757-00
	070-2036-01			1							80009	070-2036-01

Fig. & Index No.	Tektronix Part No.	Serial/Model No.		Qty	1 2 3 4 5					Name & Description	Mfr Code	Mfr Part Number
		Eff	Dscont									
OPTION 04												
6-	---			1						CKT BOARD ASSY:INTERFACE(SEE A4 REPL)		
	131-0382-00			1						.TERMINAL,STUD:0.812 L,INSULATED	71279	572-4822-01-05-1
	210-0586-00			1						.NUT,PL,ASSEM WA:4-40 X 0.25,STL CD PL	T0435	ORD BY DESCR
	136-0269-02	B060000	B064325	3						.SKT,PL-IN ELEK:MICROCIRCUIT,14 DIP	09922	DILB14P-108T
	136-0514-00	B060000	B064325	2						.SKT,PL-IN ELEK:MICROCIRCUIT,8 DIP	09922	DILB8P-108
	136-0728-00	B064326		1						.SKT,PL-IN ELEK:MICROCKT,14 CONTACT	09922	DILB14P-108
CHASSIS PARTS												
	119-0376-01			1						FILTER,RAD INT:2 X 3A,250V,400 HZ ***** (ATTACHING PARTS)*****	80009	119-0376-01
	211-0038-00			1						SCREW,MACHINE:4-40 X 0.312,FLH,100 DEG	83385	ORD BY DESCR
	210-0586-00			1						NUT,PL,ASSEM WA:4-40 X 0.25,STL CD PL ***** (END ATTACHING PARTS)*****	T0435	ORD BY DESCR
	131-0707-00			1						CONTACT,ELEC:22-26 AWG,BRS & CU BE GOLD	22526	47439-000
	131-0708-00			1						CONTACT,ELEC:0.48"L,28-32 AWG WIRE	22526	47437-000
	131-1310-00			1						CONTACT,ELEC:MESH FILTER GROUND	80009	131-1310-00
	131-1315-01			4						CONN,RCPT,ELEC:BNC,FEMALE	24931	28JR 306-1
	210-0774-00			2						EYELET,METALLIC:0.152 OD X 0.245 INCH L,	80009	210-0774-00
	210-0775-00			2						EYELET,METALLIC:0.126 OD X 0.23 INCH L,	80009	210-0775-00
	378-0726-00			1						FILTER,MESH:EMI	80009	378-0726-00
	334-3379-00			1						MARKER,IDENT:MARKED GROUND SYMBOL	80009	334-3379-00
	348-0239-00			1						GROMMET,PLASTIC:DK GRAY,U-SHAPE,0.27 ID	80009	348-0239-00
	179-2739-00			1						WIRING HARNESS:MAIN	80009	179-2739-00
	195-0529-00			1						LEAD,ELECTRICAL:18 AWG,2.0 L,8-0	80009	195-0529-00

Fig. & Index No.	Tektronix Part No.	Serial/Model No.		Qty						Name & Description	Mfr Code	Mfr Part Number
		Eff	Dscont		1	2	3	4	5			
OPTION 05												
7-	672-0796-00			2						CKT BOARD ASSY:ATTENUATOR	80009	672-0796-00
	333-2524-03			1						PANEL,FRONT:	80009	333-2524-03
	670-6000-01			1						CKT BOARD ASSY:TRIGGER GEN & SWEEP LOGIC (SEE A7 REPL)	80009	670-6000-01
	131-0608-00			8						.TERMINAL,PIN:0.365 L X 0.025 PH BRZ GOLD	22526	48283-036
	136-0252-04			6						.SOCKET,PIN TERM:U/W 0.016-0.018 DIA PINS CHASSIS PARTS	22526	75060-007
	337-1762-00			1						SHLD,ELECTRICAL:FAN MOTOR	80009	337-1762-00
	105-0243-00			1						ACTUATOR,SWITCH:AC,DC	80009	105-0243-00
	441-1150-00			1						CHASSIS,SCOPE:SYNC SEPARATOR	80009	441-1150-00
	211-0101-00			4						SCREW,MACHINE:4-40 X 0.25,FLH,100 DEG,STL	83385	ORD BY DESCR
	211-0244-00			4						SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH STL	78189	ORD BY DESCR
	179-2791-00			1						WIRING HARNESS:TV SYNC	80009	179-2791-00
	198-2318-00			1						WIRE SET,ELEC:	80009	198-2318-00
	131-0707-00			5						.CONTACT,ELEC:22-26 AWG,BRS & CU BE GOLD	22526	47439-000
	175-0828-00			FT						.WIRE,ELECTRICAL:5 WIRE RIBBON	08261	111-2699-955
	352-0163-00			1						.HLDR,TERM CONN:5 WIRE,BLACK	80009	352-0163-00
	407-1568-02			1						BRACKET,ANGLE:CIRCUIT BOARD,AL (465B,DM44,OPT. 5 ONLY)	80009	407-1568-02
	-----			-								

Fig. & Index No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Qty	1 2 3 4 5	Name & Description	Mfr Code	Mfr Part Number
STANDARD ACCESSORIES							
8-	337-1674-02		1		SHLD,IMPLOSION:FILTER,MKD FOR NTSC	80009	337-1674-02
	337-1674-03		1		SHLD,IMPLOSION:FILTER,MKD FOR CCIR	80009	337-1674-03
-1	441-1171-00		1		CHASSIS,SCOPE:INVERTER ***** (ATTACHING PARTS)*****	80009	441-1171-00
	211-0008-00		2		SCREW,MACHINE:4-40 X 0.250,PNH,STL,POZ	83385	ORD BY DESCR
	210-0938-00		2		WASHER,FLAT:0.109 ID X 0.25 INCH OD,STL ***** (END ATTACHING PARTS)*****	75497	AN960-3
-2	---		1		CKT BOARD ASSY:INVERTER(SEE A14 REPL)		
-3	136-0252-07		15		.SOCKET,PIN CONN:W/O DIMPLE	22526	75060-012
-4	---		1		.XFMR,TOROID:(SEE T1601 REPL) ***** (ATTACHING PARTS)*****		
-5	343-0443-00		1		.RETAINER,XFMR:	80009	343-0443-00
-6	212-0011-00		1		.SCREW,MACHINE:8-32 X 0.750 INCH,FLH STL	80009	212-0011-00
-7	210-0409-00		1		.NUT,PLAIN,HEX:8-32 X 0.312 INCH,BRS ***** (END ATTACHING PARTS)*****	73743	3046-402
-8	211-0116-00		2		SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH BRS ***** (END ATTACHING PARTS)*****	83385	ORD BY DESCR
-9	---		4		TRANSISTOR:(SEE Q1652,Q1654,Q1662, Q1664 REPL) ***** (ATTACHING PARTS)*****		
-10	210-0586-00		3		NUT,PL,ASSEM WA:4-40 X 0.25,STL CD PL	T0435	ORD BY DESCR
-11	343-0451-00		1		RETAINER,XSTR:	80009	343-0451-00
-12	342-0195-00		1		INSULATOR,PLATE:0.70 X 3 INCHES LONG ***** (END ATTACHING PARTS)*****	08530	ORD BY DESCR
-13	348-0141-00		1		GROMMET,PLASTIC:U-SHP,0.625 X 0.658 INCH	80009	348-0141-00
-14	348-0055-00		1		GROMMET,PLASTIC:0.25 INCH DIA	80009	348-0055-00
-15	352-0031-00		1		FUSEHOLDER:3AG FUSE ***** (ATTACHING PARTS)*****	75915	357001
-16	211-0507-00		1		SCREW,MACHINE:6-32 X 0.312,PNH STL,CD PL	83385	ORD BY DESCR
-17	210-0006-00		1		WASHER,LOCK:#6 INTL,0.018 THK,STL CD PL	77900	1206-00-00-0541C
-18	210-0407-00		1		NUT,PLAIN,HEX:6-32 X 0.25 INCH,BRS ***** (END ATTACHING PARTS)*****	73743	3038-402
-19	342-0228-00		1		INSULATOR,FILM:0.70 X 1.150 INCH LONG	80009	342-0228-00
-19	407-1341-00		1		BRACKET,ELEC SW:ALUMINUM ***** (ATTACHING PARTS)*****	80009	407-1341-00
-20	211-0101-00		2		SCREW,MACHINE:4-40 X 0.25,FLH,100 DEG,STL ***** (END ATTACHING PARTS)*****	83385	ORD BY DESCR
-21	105-0479-00		1		ACTUATOR,SWITCH:SLIDE,INVERTER	80009	105-0479-00
-22	260-0760-00		6		SWITCH,SENS:SUBMINIATURE,10A,125/240VAC ***** (ATTACHING PARTS)*****	01963	E62-10A
-23	211-0212-00		2		SCREW,MACHINE:2-56 X 1.75 INCH,PNH STL	83385	ORD BY DESCR
-24	210-0405-00		1		NUT,PLAIN,HEX:2-56 X 0.188,BRS,CD PL ***** (END ATTACHING PARTS)*****	73743	12157-50
-25	386-2649-00		1		PL,ACTR GUIDE:INVERTER	80009	386-2649-00
-25	214-1925-00		1		SPRING,SW ACT:POWER SOURCE	80009	214-1925-00
-26	---		1		SWITCH,TOGGLE:(SEE S1665 REPL) ***** (ATTACHING PARTS)*****		
-27	210-0562-00		1		NUT,PLAIN,HEX:0.25-40 X 0.312 INCH,BBS	73743	ORD BY DESCR
-28	210-0046-00		1		WASHER,LOCK:0.261 ID,INTL,0.018 THK,BRS ***** (END ATTACHING PARTS)*****	77900	1214-05-00-0541C
	179-1962-00		1		WIRING HARNESS:VARIABLE RESISTOR	80009	179-1962-00
	348-0005-00		1		GROMMET,RUBBER:0.50 INCH DIA	70485	230
	200-1414-11		1		COVER,SCOPE:REAR	80009	200-1414-11
	131-1333-00		1		CONNECTOR,RCPT:POWER ***** (ATTACHING PARTS)*****	80009	131-1333-00
	211-0101-00		2		SCREW,MACHINE:4-40 X 0.25,FLH,100 DEG,STL	83385	ORD BY DESCR
	348-0365-00		4		FOOT,CABINET:PLASTIC,W/LATCH GROOVE ***** (END ATTACHING PARTS)*****	80009	348-0365-00

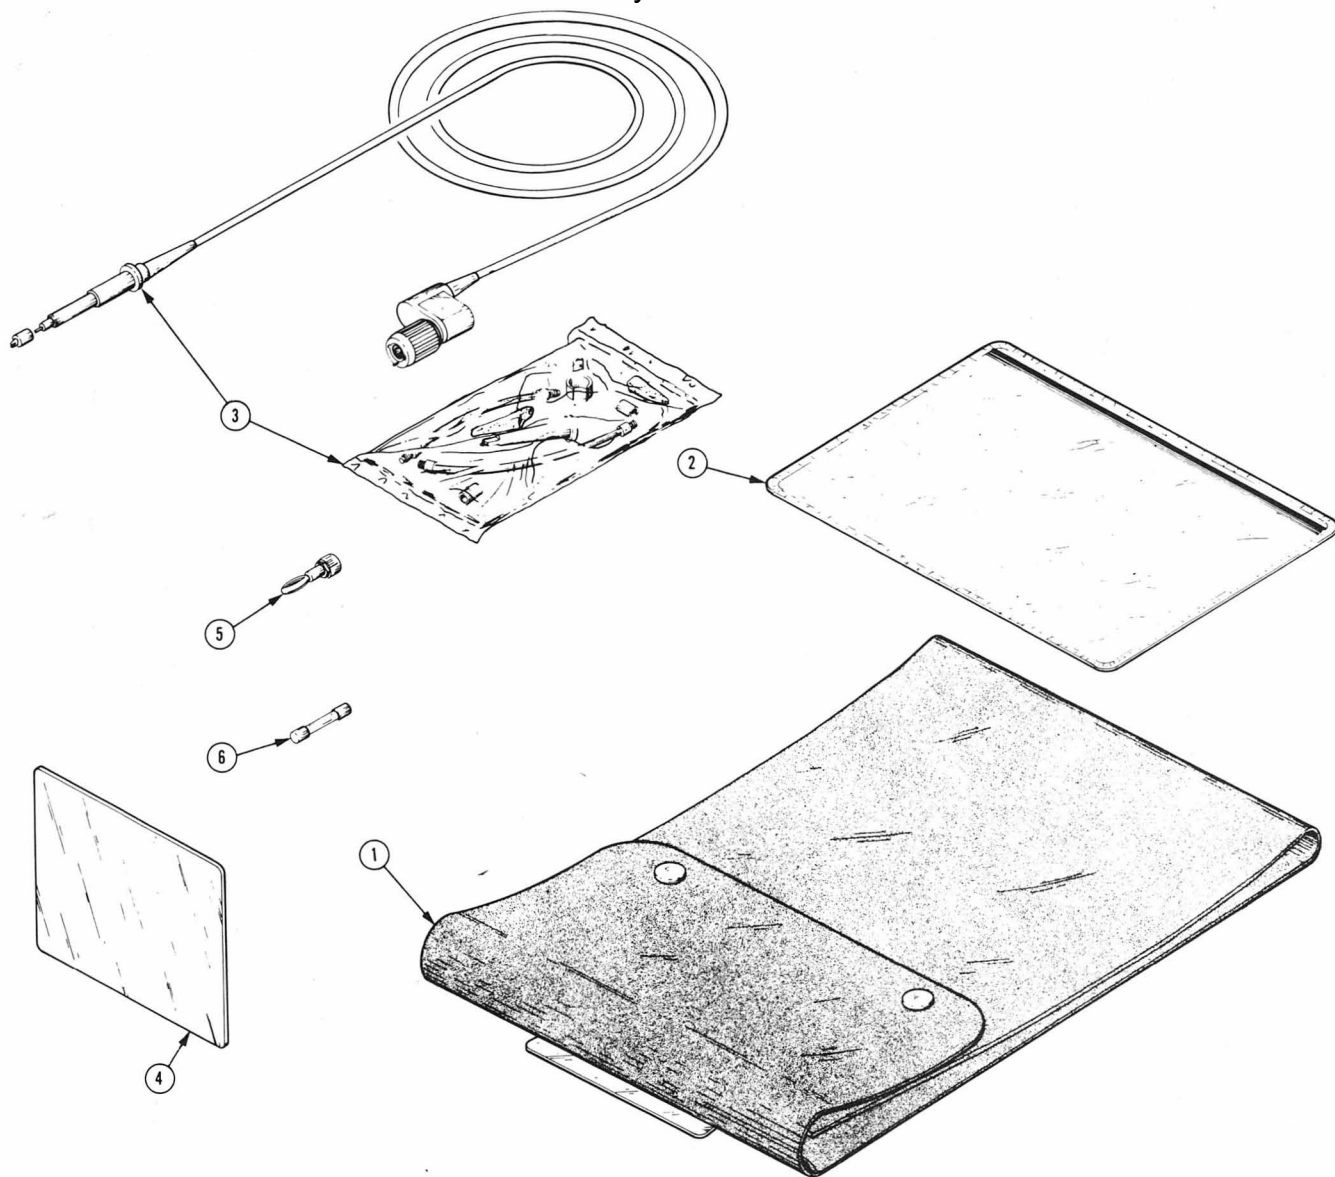


Fig. & Index No.	Tektronix Part No.	Serial/Model No. Eff	Serial/Model No. Dscont	Qty	1	2	3	4	5	Name & Description	Mfr Code	Mfr Part Number
5-1	016-0535-02			1						POUCH, ACCESSORY: W/HARDWARE, STANDARD	80009	016-0535-02
	016-0594-00			1						POUCH, ACCESSORY: W/HARDWARE (W/DM)	80009	016-0594-00
-2	016-0537-00			1						POUCH, ACCESSORY: VINYL, W/ZIPPER	05006	ZIP-6X91D
-3	010-6105-03			2						PROBE, VOLTAGE: P6105, 2 METER, 10X, W/ACCESS	80009	010-6105-03
	010-6430-00			1						PROBE, TEMP: 1.5 METER L, W/ACCESSORIES	80009	010-6430-00
-4	337-1674-01			1						SHLD, IMPLOSION: CLEAR	80009	337-1674-01
-5	134-0016-01			1						PLUG, TIP: W/BINDING POST	80009	134-0016-01
-6	159-0016-00			2						FUSE, CARTRIDGE: 3AG, 1.5A, 250V, FAST-BLOW	71400	AGC 1 1/2
	-----			-						(FOR 115V OPERATION)		
	159-0042-00			1						FUSE, CARTRIDGE: 3AG, 0.75A, 250V, FAST-BLOW	71400	AGC 3/4
	-----			-						(FOR 230V OPERATION)		
	161-0094-00			1						CABLE ASSY, PWR, :3 WIRE, 36 INCHES LONG	16428	KH7667
	-----			-						(OPTION 7 ONLY)		
	003-0120-00			1						LEAD, TEST: PAIR	80009	003-0120-00
	070-4372-00			1						MANUAL, TECH: OPERATORS	80009	070-4372-00
	070-4273-00			1						MANUAL, TECH: SERVICE	80009	070-4273-00
	070-2036-01			1						MANUAL, TECH: SERVICE	80009	070-2036-01