
L/6 単 /387ス

ESC 3234 95 01 Service Manual

Tektronix

2205 Oscilloscope

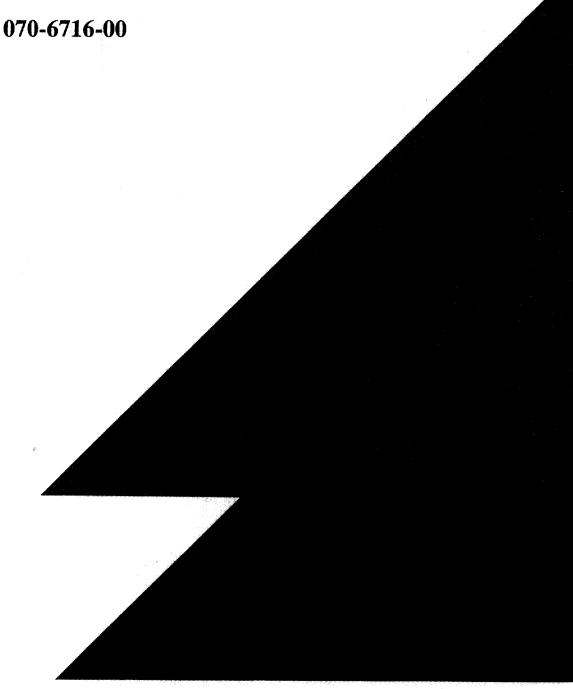

Service Manual

2205

ADTO TO THE PROPERTY OSCILLOSCOPE DE LE LA LACE DE HAS LE LA LACE DE PROPERTY DE LA LACE DE LACE DE LA LACE DE LA LACE DE LA LACE DE LAC

070-6716-00

Warning

The servicing instructions are for use by qualified personnel only. To avoid personal injury, do not perform any servicing unless you are qualified to do so. Refer to the Safety Summary prior to performing service.

Please check for change information at the rear of this manual.

First Printing: April 1988

Instrument Serial Numbers

Each instrument manufactured by Tektronix has a serial number on a panel insert or tag, or stamped on the chassis. The first letter in the serial number designates the country of manufacture. The last five digits of the serial number are assigned sequentially and are unique to each instrument. Those manufactured in the United States have six unique digits. The country of manufacture is identified as follows:

B010000	Tektronix, Inc., Beaverton, Oregon, USA
E200000	Tektronix United Kingdom, Ltd., London
J300000	Sony/Tektronix, Japan
H700000	Tektronix Holland, NV, Heerenveen, The Netherlands

Instruments manufactured for Tektronix by external vendors outside the United States are assigned a two digit alpha code to identify the country of manufacture (e.g., JP for Japan, HK for Hong Kong, IL for Israel, etc.).

Tektronix, Inc., P.O. Box 500, Beaverton, OR 97077

Printed in U.S.A.

Copyright © Tektronix, Inc., 1988. All rights reserved. Tektronix products are covered by U.S. and foreign patents, issued and pending. The following are registered trademarks: TEKTRONIX, TEK, TEKPROBE, and SCOPE-MOBILE.

WARRANTY

Tektronix warrants that this product will be free from defects in materials and workmanship for a period of one (1) year from the date of shipment. If any such product proves defective during this warranty period, Tektronix, at its option, either will repair the defective product without charge for parts and labor, or will provide a replacement in exchange for the defective product.

In order to obtain service under this warranty, Customer must notify Tektronix of the defect before the expiration of the warranty period and make suitable arrangements for the performance of service. Customer shall be responsible for packaging and shipping the defective product to the service center designated by Tektronix, with shipping charges prepaid. Tektronix shall pay for the return of the product to Customer if the shipment is to a location within the country in which the Tektronix service center is located. Customer shall be responsible for paying all shipping charges, duties, taxes, and any other charges for products returned to any other locations.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. Tektronix shall not be obligated to furnish service under this warranty a) to repair damage resulting from attempts by personnel other than Tektronix representatives to install, repair or service the product; b) to repair damage resulting from improper use or connection to incompatible equipment; or c) to service a product that has been modified or integrated with other products when the effect of such modification or integration increases the time or difficulty of servicing the product.

THIS WARRANTY IS GIVEN BY TEKTRONIX WITH RESPECT TO THIS PRODUCT IN LIEU OF ANY OTHER WARRANTIES, EXPRESSED OR IMPLIED. TEKTRONIX AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TEKTRONIX' RESPONSIBILITY TO REPAIR OR REPLACE DEFECTIVE PRODUCTS IS THE SOLE AND EXCLUSIVE REMEDY PROVIDED TO THE CUSTOMER FOR BREACH OF THIS WARRANTY TEKTRONIX AND ITS VENDORS WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES IRRESPECTIVE OF WHETHER TEKTRONIX OR THE VENDOR HAS ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES.

Certificate of the Manufacturer/Importer

We hereby certify that the _____

2205 PORTABLE OSCILLOSCOPE

AND ALL INSTALLED OPTIONS

complies with the RF Interference Suppression requirements of Amtsbl.-Vfg 1046/1984.

The German Postal Service was notified that the equipment is being marketed.

The German Postal Service has the right to re-test the series and to verify that it complies.

TEKTRONIX

and the light of the legachesis and Bescheinigung des Herstellers/Importeurs and the second state of

Hiermit wird bescheinigt, daß der/die/das ___

2205 PORTABLE OSCILLOSCOPE

AND ALL INSTALLED OPTIONS

in Übereinstimmung mit den Bestimmungen der Amtsblatt-Verfügling 1046/1984 funkentstört ist.

Der Deutschen Bundespost wurde das Inverkehrbringen dieses Gerätes angezeigt und die Berechtigung zur Überprufüng der Serie auf Einhalten der Bestimmungen eingeräumt.

TEKTRONIX

NOTICE to the user/operator:

The German Postal Service requires that Systems assembled by the operator/user of this instrument must also comply with Postal Regulation, Vfg. 1046/1984, Par. 2, Sect. 1.

HINWEIS für den Benutzer/Betreiber:

Die vom Betreiber zusammengestellte Anlage, innerhalb derer dies Gerät eingesetzt wird, muß ebenfalls den Voraussetzungen nach Par. 2, Ziff. 1 der Vfg. 1046/1984 genugen.

NOTICE to the user/operator:

The German Postal Service requires that this equipment, when used in a test setup, may only be operated if the requirements of Postal Regulation, Vfg. 1046/1984, Par. 2, Sect. 1.7.1 are complied with.

HINWEIS für den Benutzer/Betreiber:

Dies Gerät darf in Meßaufbauten nur betrieben werden, wenn die Voraussetzungen des Par. 2, Ziff. 1.7.1 der Vfg. 1046/1984 eingehalten werden.

TABLE OF CONTENTS

(2) (1) (2) (2) (2) (2) (2) (2) (2) (2) (2) (2	Page	eren gerig og gjarren og nørsten i er not e n. Pa	ge
LIST OF ILLUSTRATIONS	vi	GRATICULE	?-7 !-8
		TRACE ROTATION	•
Section 1 SPECIFICATION		ADJUSTMENT	
INTRODUCTION	. 1–1	(Option 10X Probe) 2	-5
ACCESSORIES		第二十四十八日,秦君太阳 明 明明	
PERFORMANCE CONDITIONS .	. 1–1		
TEXAS ESPAINANTES DE LA CASA DEL CASA DE LA CASA DEL CASA DE LA CA	Section :	3 THEORY OF OPERATION	
Section 2 OPERATING INFORMATION	$(x_i) \in \mathbb{F}_{q_i}$	SECTION ORGANIZATION 3	-1
PREPARATION FOR USE SAFETY LINE VOLTAGE SELECTION LINE FUSE INSTRUMENT COOLING CONTROLS, CONNECTORS, AND INDICATORS POWER AND DISPLAY VERTICAL HORIZONTAL TRIGGER REAR PANEL OPERATING CONSIDERATIONS	. 2-1 . 2-1 . 2-1 . 2-3 . 2-3 . 2-3 . 2-5 . 2-5	INTEGRATED CIRCUIT DESCRIPTIONS	-1 -3 -6 -8 -9 11
	4" "	1 (1) (1) (2) (2) (2) (2) (2) (2) (2) (2) (2) (2	

TABLE OF CONTENTS (cont)

	rage			rage
Section 4	PERFORMANCE CHECK PROCEDURE	Section 5	ADJUSTMENT PROCEDURE	
	INTRODUCTION:		INTRODUCTION	
	PURPOSE 4-1		PURPOSE	
	PERFORMANCE CHECK INTERVAL 4-1		STRUCTURE TEST EQUIPMENT REQUIRED	1.255
	STRUCTURE 4-1		LIMITS AND TOLERANCES	
	TEST EQUIPMENT REQUIRED		ADJUSTMENTS AFFECTED B REPAIRS	
	LIMITS AND TOLERANCES 4-1	e .	PREPARATION FOR	
	PREPARATION FOR CHECKS4-1		ADJUSTMENTINDEX TO ADJUSTMENT PROCEDURE STEPS	
	INDEX TO PERFORMANCE CHECK STEPS		POWER SUPPLY AND CRT DISPLAY	
	VERTICAL 4-4		INITIAL CONTROL	
	INITIAL CONTROL SETTINGS 4-4		SETTINGS PROCEDURE STEPS	. 5–4
	PROCEDURE STEPS 4-4		VERTICAL	. 5–6
	HORIZONTAL4-6	да — да — — — дарид ¹ 2 — 144 — д. — — — — — — — — — — — — — — — — —	SETTINGS	. 5-6
and the second	INITIAL CONTROL		PROCEDURE STEPS	. 5-6
	SETTINGS A. A.F		HORIZONTAL	
	PROCEDURE STEPS 4-6		INITIAL CONTROL SETTINGS	512
	TRIGGER 4-9		PROCEDURE STEPS	5-12
	INITIAL CONTROL SETTINGS		TRIGGER	5-16
	PROCEDURE STEPS 4-9		m, m, m, m	5-16
	EXTERNAL Z-AXIS AND	# Comment	PROCEDURE STEPS	5-16
	PROBE ADJUST		EXTERNAL Z-AXIS AND	F 40
	INITIAL CONTROL SETTINGS 4-12		PROBE ADJUST	
	PROCEDURE STEPS 4-12		PROCEDURE STEPS	

TABLE OF CONTENTS (cont)

aj et ^{at}	Page	Page
Section 6	MAINTENANCE	TRANSISTORS AND INTEGRATED CIRCUITS 6-12
	STATIC-SENSITIVE COMPONENTS	SOLDERING TECHNIQUES 6-12 REMOVAL AND REPLACE-
	PREVENTIVE MAINTENANCE 6-2 INTRODUCTION 6-2	MENT INSTRUCTIONS 6-13
	GENERAL CARE	Section 7 OPTIONS AND ACCESSORIES
	CLEANING	OPTION 1C
24年 - 1717 24年 - 1717 24日 - 1717 24日 - 1717 1717 1717 1717 1717 1717 1717 17	TROUBLESHOOTING	OPTION 02 7-1 OPTION 22 7-2 OPTION 23 7-2 OPTION 24 7-2 INTERNATIONAL POWER CORDS 7-2 OPTIONAL ACCESSORIES 7-2 STANDARD ACCESSORIES 7-4
	CORRECTIVE MAINTENANCE 6-10 INTRODUCTION 6-10 MAINTENANCE PRECAUTIONS 6-10 OBTAINING REPLACEMENT PARTS 6-10 MAINTENANCE AIDS 6-10 RIBBON-CABLE	Section 8 REPLACEABLE ELECTRICAL PARTS Section 9 DIAGRAMS Section 10 REPLACEABLE MECHANICAL PARTS
	CONNECTIONS 6-11	CHANGE INFORMATION

LIST OF ILLUSTRATIONS

Figur		Page
	The 220E Ossillessess	TO A MERCHANIC TO A CONTROL OF A
	The 2205 Oscilloscope	••••••••••••••••••••••••••••••••••••••
1-1	EXT INPUT OR Z connectors	ing curve for CH 1 OR X, CH 2 OR Y, and 1-7
1-2	Instrument dimensional drawing	
2-1		receptacle, and plastic clamp 2-2
22		cators 2-4
2–3		2-6
2-4		2-7
2-5	Probe compensation	2–9
		Committee of the commit
3–1		3-3
3–2		
3–3	Block diagram of the Sweep Generator and	J Logic 3–9
3-4		······ 3–11
3-5		····· 3–13
3-6	Block diagram of the Power Supply	
5-1	Attenuator trimmer adjustments	
6–1	Multi-connector holder orientation	VILLEGE KINT 6-12
9-1	Color codes for resistors.	
9-2	Semiconductor lead configurations	
93	Locating components on schematic diagram	ns and circuit board illustrations
9_4	Block diagram.	is and circuit board mostrations.
9-5	Component view of A3—Front Panel board.	
9-6	Circuit view of A3-Front Panel board.	part of the company
9-7	A2—Timebase/Attenuator board.	
9-8	A1—Main board component view.	
9-9	Circuit view of A1—Main board.	
9-10	A4—Mains Input board.	
9-11	Adjustment locations of A1—Main board con	mpopont vious
9-12	Adjustment locations of A1—Main board circ	
9-13	A2—Timebase/Attenuator board adjustment	
		iocations.
9-14	A3-Front Panel board adjustment location.	

LIST OF TABLES

Table	n de nova e qui tre con lo participate de producer de la contre do la contre de transcribitation de la contre La seguior de producer de la contre de la ge <mark>tePage</mark> La definición
1-1	Electrical Characteristics
1-2	Environmental Characteristics
1-3	Mechanical Characteristics
4-1	Test Equipment Required
4-2	Deflection Accuracy Limits4-4
4-3	Settings for Timing Accuracy Checks
4-4	Switch Combinations for Triggering Checks
5-1	Adjustments Affected by Repairs
5-2	Power Supply Limits
5-3	Deflection Accuracy Limits
5-4	Settings for Timing Accuracy Checks 5-14
5-5	Settings for Holdoff Checks 5–15
5-6	Switch Combinations for Triggering Checks
6-1	Relative Susceptibility to Static-Discharge Damage 6-1
6-2	External Inspection Checklist
6-3	Internal Inspection Checklist 6-4
6-4	Power Supply Voltage and Ripple Limits 6-7
6-5	Maintenance Aids va. v.
7-1	International Power Cords and Fuses
7–2	Optional Accessories

or section of the section of the

The property of the propert

OPERATORS SAFETY SUMMARY

The general safety information in this part of the summary is for both operating and service personnel. Specific warnings and cautions will be found throughout the manual where they apply and do not appear in this summary.

Terms in this Manual

CAUTION statements identify conditions or practices that could result in damage to the equipment or other property.

WARNING statements identify conditions or practices that could result in personal injury or loss of life.

Terms as Marked on Equipment

CAUTION indicates a personal injury hazard not immediately accessible as one reads the markings, or a hazard to property, including the equipment itself.

DANGER indicates a personal injury hazard immediately accessible as one reads the marking.

Symbols in this Manual



This symbol indicates where applicable cautionary or other information is to be found. For maximum input voltage see Table 1-1.

Symbols as Marked on Equipment



Protective ground (earth) terminal.



ATTENTION-Refer to manual.

Power Source

This product is intended to operate from a power source that does not apply more than 250 V rms between the supply conductors or between either supply conductor and ground. A protective ground connection, by way of the grounding conductor in the power cord, is essential for safe operation.

Grounding the Product

This product is grounded through the grounding conductor of the power cord. To avoid electrical shock, plug the power cord into a properly wired receptacle before making any connections to the product input or output terminals. A protective ground connection, by way of the grounding conductor in the power cord, is essential for safe operation.

Danger Arising From Loss of Ground

Upon loss of the protective-ground connection, all accessible conductive parts, including knobs and controls that may appear to be insulating, can render an electric shock.

Use the Proper Power Cord

Use only the power cord and connector specified for your product.

Use only a power cord that is in good condition.

For detailed information on power cords and connectors, see Figure 2-2.

Use the Proper Fuse

To avoid fire hazard, use only a fuse of the correct type, voltage rating and current rating as specified in the parts list for your product.

Do Not Operate in Explosive Atmosphere

To avoid explosion, do not operate this instrument in an explosive atmosphere.

Do Not Remove Covers or Panels

To avoid personal injury, do not remove the product covers or panels. Do not operate the product without the covers and panels properly installed.

SERVICING SAFETY SUMMARY

FOR QUALIFIED SERVICE PERSONNEL ONLY

Refer also to the preceding Operators Safety Summary

Do Not Service Alone

Do not perform internal service or adjustment of this product unless another person capable of rendering first aid and resuscitation is present.


Use Care When Servicing With Power On

Dangerous voltages exist at several points in this product. To avoid personal injury, do not touch exposed connections or components while power is on.

Disconnect power before removing protective panels, soldering, or replacing components.

Power Source

This product is intended to operate from a power source that does not apply more than 250 volts rms between the supply conductors or between either supply conductor and ground. A protective ground connection by way of the grounding connector in the power cord is essential for safe operation.

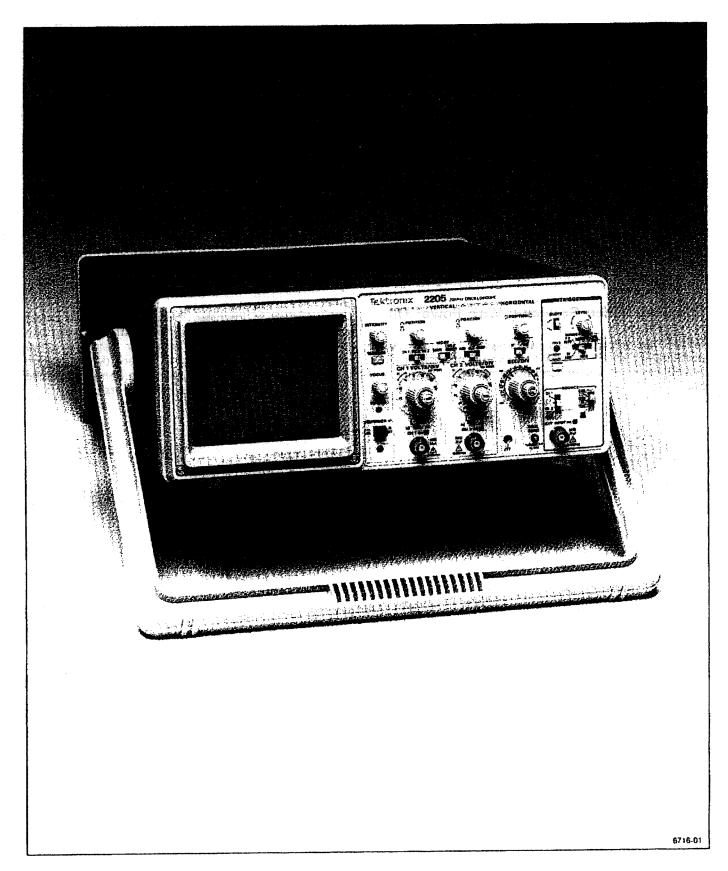

The 2205 Oscilloscope.

SPECIFICATION

The TEKTRONIX 2205 Oscilloscope is a rugged. lightweight, dual-channel, 20 MHz instrument that features a bright, sharply defined trace on an 80 by 100 mm cathode-ray tube (crt).

Its low-noise vertical system supplies calibrated deflection factors from 5 mV to 5 V per division at full bandwidth.

Stable triggering is achieved over the full bandwidth of the vertical system. The flexibility and high sensitivity of the trigger system provides a range of conveniences such as hands-free triggering with the peak-to-peak automatic mode, independent selection of TV line and TV field triggering at any sweep speed, and single-sweep triggering. The trigger signal is dc coupled. An external triggering signal or an external Z-axis modulation signal can be applied via a front-panel connector and the sourceselector switches.

The horizontal system provides calibrated sweep speeds from 0.5 s to 100 ns per division. For greater measurement accuracy, a X10 magnifier circuit extends the maximum sweep speed to 10 ns per division.

The instrument is shipped with the following accessories:

- Operators Manual
- 2 1X Signal Adapters Power Cord
- 1
- Fuses
- Power Cord Clamp 1
- Washer
- Screw

Part numbers for these standard accessories, as well as for other optional accessories, are located in Section 7, Options and Accessories. The voltagesensing signal adapters were designed specifically to complement the performance of your 2205.

PERFORMANCE CONDITIONS

The 2205 electrical characteristics listed in Table 1-1 are valid when it has been adjusted at an ambient temperature between +20 C and +30 C, has had a warm-up period of at least 20 minutes, and is operating at an ambient temperature between 0 C and +40 C (unless otherwise noted).

Environmental characteristics are given in Table 1-2. The 2205 meets the requirements of MIL-T-28800C, paragraphs 4.5.5.5.1.3, 4.5.5.1.4, and 4.5.5.1.2.2 for Type III, Class 5 equipment, except where otherwise noted.

Mechanical characteristics of the instrument are listed in Table 1-3.

Table 1-1
Electrical Characteristics

Characteristics	Performance Requirements		
VERTICAL DEFLECTION SYSTEM			
Deflection Factor Range	5 mV per division to 5 V per division in a 1-2-5 sequence of 9 steps.		
Accuracy +15°C to +35°C	±3%.		
0°C to +15°C and +35°C to +40°C	± 5%.		
Variable Control Range	Continuously variable and uncalibrated between step settings. Increases deflection factor by at least 2.5 to 1.		
Step Response (Rise Time) +5°C to +35°C	Applicable from 5 mV per division to 5 V per division. Rise times calculated from: $tr = \frac{0.35}{BW \text{ in MHz}}$ 17.5 ns or less. ^a		
0°C to +5°C and +35°C to +40°C	23.3 ns or less. 2 to the transmission of the common of th		
Bandwidth (-3 dB) +5°C to +35°C	20 MHz or more.		
0°C to +5°C and +35°C to +40°C	15 MHz or more. ^a		
Ac Coupled Lower Cutoff Frequency	10 Hz or less at -3 dB.a		
CHOP Mode Switching Rate	500 kHz ±30%.ª		
Input Characteristics Resistance	$1^{2}M\Omega^{\prime\prime}\pm2\%.^{2}$		
Capacitance	25 pF ±2%. a : 11 see		
Maximum Safe Input Voltage (DC or AC Coupled)	400 V (dc + peak ac) or 800 V ac p-p to 10 kHz or less.		
Common-mode Rejection Ratio (CMRR)	At least 10 to 1 at 10 MHz.		
Trace Shift			
With VOLTS/DIV Switch Rotation	0.75 division or less (Variable control in CAL detent).a		
With VOLTS/DIV Variable Control Rotation	1 division or less. ^a		
With Channel 2 Inverted	1.5 division or less. ^a		
Channel Isolation	Greater than 100:1 at 20 MHz.		

^aPerformance requirement not checked in manual.

Table 1-1 (cont)

Characteristics and the characteristics		Performanc	e Requirements
TRIGGER SYSTEM			
Trigger Sensitivity	ar grantaga, ta		agraema in the same of the same
 Special typing leaving agreement to see fall of the SER SER 		· · · · · · · · · · · · · · · · · · ·	
P-P AUTO/TV LINE and NORM Modes	5 MHz	30 MHz	
Internal Signal	0.3 div	1.0 div	
External Signal	40 mV	150 mV	
Lowest Usable Frequency in P-P AUTO Mode	≥ 20 Hz.ª	:	
TV FIELD Mode	1.0 division	of composite sy	/nc. ^a
External Input **Far Hashing Lasting	1 MΩ ±10		elektrologische State (1995) in der State (199
Capacitance	25 pF ±2.5	pF.ª	
Maximum Input Voltage	400 V (dc	+ peak ac) or 80	00 V ac p-p at 10 kHz or less.ª
Trigger Level Range			
NORM Mode			appropriate vertical input.
EXT Source	At least ±1.6 V, 3.2 V p-p.		
EXT/10 Source	At least ±16 V, 32 V p-p.a		
HORIZONT		ION SYSTEM	
Sweep Rate Calibrated Range	sequence.	fivision to 0.1 μs Magnification ex ed to 10 ns per	per division in a 1-2-5 tends maximum usable division. ^a
Accuracy	Magnified		
file of a production of the contract of the co	X1	X10	
+15°C to +35°C	±3%	±4%	
0°C to +15°C and +35°C to +40°C	±4% ^a	±5%ª	
	Sweep accuracy applies over the center eight divisions. Exclude the first 25 ns of the sweep for magnified sweep speeds and anything beyond the 100th magnified division.		

^aPerformance requirement not checked in manual.

Table 1-1 (cont)

Characteristics		Performanc	e Requirements
HORIZONT	AL DEFLECTION	ON SYSTEM (cor	nt)
Variable Control Range	Continuous step settin by a factor	gs. Decreases ca	ncalibrated between calibrated alibrated sweep speeds at least
Sweep Linearity	Magi	nified	The Art of Section 1997
	X1	X10	
	±5%	±7%	
POSITION Control Range	Start of sw in X10, will	eep to 10th divisi position past the	on in X1, and to 100th division center vertical graticule line.
Registration of Unmagnified and Magnified Traces	0.2 division	or less, aligned	to center vertical graticule
	Z-MODULA	TION	
Sensitivity (e.g. 2011), and ending the first control of the contr	5 V causes noticeable modulation. Positive-going input decreases intensity.		
Usable frequency range	Dc to 5 MHz. ^a		
Maximum Safe Input Voltage	400 V (dc + peak ac) or 800 V ac p-p to 10 kHz or less.a		
	OPERATION (X1 MODE)	
Deflection Factors	Same as ve	ertical deflection s	system with variable controls
Accuracy			est apere
X-Axis ±5%.			
Y-Axis	Same as Vertical Deflection System. ^a		
Bandwidth (-3 dB)			
X-Axis	Dc to at least 1 MHz.		
Y-Axis	Same as Vertical Deflection System.		
Phase difference between X- and Y-Axis Amplifiers	±3° from dc to 50 kHz.ª		
PROBE	ADJUST SIGN	IAL OUTPUT	
Voltage into 1 MΩ Load	0.5 V ±5%.		
Repetition Rate	1 kHz ±20%. ^a		

^aPerformance requirement not checked in manual.

Table 1-1 (cont)

Characteristics	Performance Requirements		
District of the position of th	WER REQUIREMENTS		
Line Voltage Ranges			
115 V Setting	95 Vac to 128 Vac.a		
230 V Setting	185 Vac to 150 Vac. ^a		
Line Frequency	48 Hz to 440 Hz. ^a		
Maximum Power Consumption	40 W (60 VA): a		
Line Fuse in the contract of t	UL 198.6 3AG (1/4 X 1 1/4 inch)		
115 V Setting	0.75 A, Slow.		
230 V Setting	0.5 A, Slow.		
	CATHODE-RAY TUBE		
Display Area	8 X 100 mm. ^a		
Standard Phosphor	GH (P31). ^a		
Nominal Accelerating Voltage	1800 V ±10%.a		
^a Performance requirement not checked in ma	nual.		

Table 1-2
Environmental Characteristics

Characteristics	Performance Requirements
Temperature	
Operating	0°C to +40°C (+32°F to +104°F).
Nonoperating	-55°C to +75°C (-67°F to +167°F).
	Tested to MIL-T-28800C, paragraphs 4.5.5.1.3 and 4.5.5.1.4, except in 4.5.5.1.3 steps 4 and 5 (0°C operating test) are performed ahead of step 2 (-55°C nonoperating test). Equipment shall remain off upon return to room ambient during step 6. Excessive condensation shall be removed before operating during step 7.
Altitude	
Operating	To 4,570 meters (15,000 feet). Maximum operating temperature decreased 1°C per 300 m (1000 feet) above 1500 m (5,000 feet).
Nonoperating	To 15,250 meters (50,000 feet).
Relative Humidity	. Pro establica and Parko delivera or the Constitution and Large of the Constitution
Operating (+30°C to +40°C)	85%, +0%, -5%.
Nonoperating (+30°C to +60°C)	85%, +0%, -5%.
Vibration	
Operating	15 minutes along each of three major axes at a total displacement of 0.015 inch p-p (2.4 g at 55 Hz) with frequency varied from 10 Hz to 55 Hz to 10 Hz in one minute sweeps. Hold for 10 minutes at 55 Hz in each of three major axes. All major resonances must be above 55 Hz.
Shock	
Operating and Nonoperating	30 g, half-sine, 11-ms duration, three shocks per axis each direction, for a total of 18 shocks.
Radiated and conducted emission requirements	Meets VDE 0871, Class B and FCC Regulations.

Table 1-3
Mechanical Characteristics

Characteristics	Description		
Weight with Power Cord	6.7 kg (14.8 lbs) or less.		
Domestic Shipping Weight	9.1 kg (20.1 lbs) or less.		
Dimensions			
Height	138 mm (5.4 in).		
Width			
With Handle	380 mm (15.0 in).		
Without Handle	327 mm (12.9 in).		
Depth			
Without Front Cover	440 mm (17.2 in).		
With Optional Front Cover	445 mm (17.5 in).		
With Handle Extended	516 mm (20.3 in).		

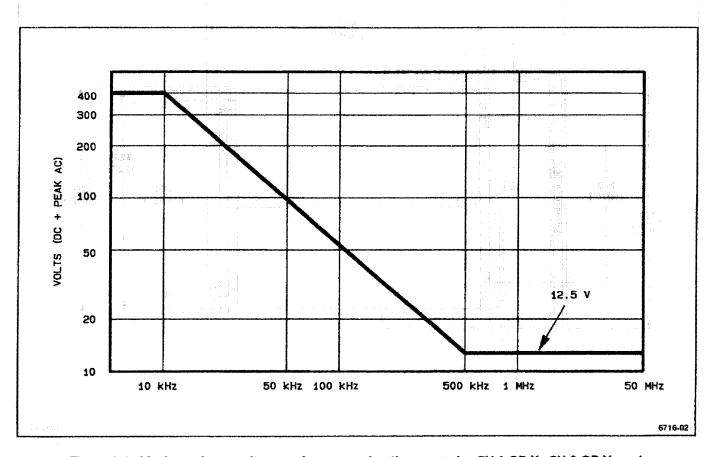


Figure 1-1. Maximum input voltage vs frequency derating curve for CH 1 OR X, CH 2 OR Y, and EXT INPUT OR Z connectors.

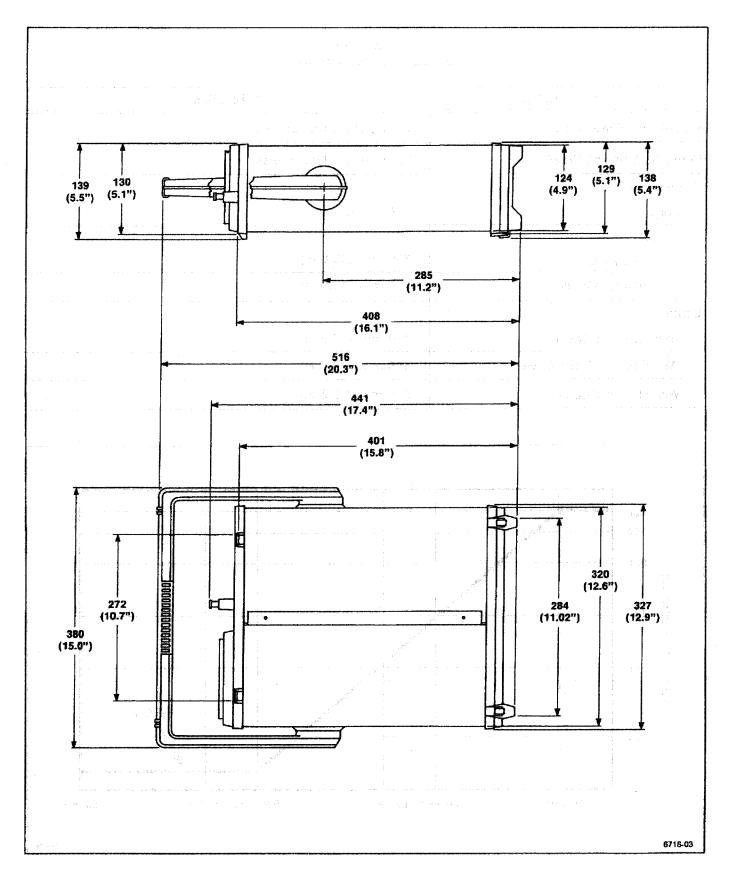


Figure 1-2. Instrument dimensional drawing.

OPERATING INFORMATION

PREPARATION FOR USE

This part gives you important safety information and tells you how to proceed with initial start-up of the TEKTRONIX 2205 Oscilloscope.

SAFETY

Before connecting the 2205 Oscilloscope to a power source, read this entire section. Also refer to the Safety Summary at the front of this manual for power source, grounding, and other safety considerations pertaining to the use of the instrument. Ensure that you have the training required to safely connect inputs to the signals you will be measuring.

ECAUTION 3

This instrument may be damaged if operated with the LINE VOLTAGE SELECTOR (on the rear panel) set for the wrong applied ac source voltage or if a wrong line fuse is installed.

LINE VOLTAGE SELECTION

The 2205 operates from either a 115-V or a 230-V nominal ac power line with any frequency from 48 Hz to 440 Hz. Before connecting the power cord to a power source, verify that the LINE VOLTAGE SELECTOR, located on the rear panel, is set correctly and that the proper line fuse is installed. Refer to Table 2-1, Figure 2-1, and the instrument rear panel.

To convert the 2205 for operation on the other line-voltage range, use a flat-bladed screwdriver to move the LINE VOLTAGE SELECTOR to the required position and install the appropriate fuse (listed on the rear panel and in Table 7-1). The detachable power cord may have to be replaced to match the particular power source.

LINE FUSE

The fuse holder is located on the rear panel and contains the line (mains) fuse. Use the following

procedure to verify that the proper fuse is installed or to install a replacement fuse.

- Unplug the power cord from the power source (if applicable).
- Press in and slightly rotate the fuse-holder cap counterclockwise to release it.
- 3. Pull the cap (with the fuse) out of the fuse holder.
- 4. Verify that the fuse is the same type listed on the back of the instrument. The two types of fuses listed are not directly interchangeable; they require different types of fuse caps.
- 5. Reinstall the fuse (or replacement fuse) in the fuse-holder cap.
- 6. Replace the fuse holder and cap.

This instrument has a detachable, three-wire power cord with a three-contact plug for connection to both the power source and protective ground. The ground contact on the plug connects through the power-cord to the external metal parts of the instrument. The power cord may be secured to the rear panel by a cord-set-securing clamp as shown in Figure 2-1. For electrical shock protection, insert this plug only into a power source outlet that has a properly grounded protective-ground contact.

Instruments are shipped with the required power cord as ordered by the customer. Power cord plug information is presented in Table 2–1, and part numbers are listed in Table 7–1.

INSTRUMENT COOLING

Maintain adequate airflow to prevent instrument damage from internally generated heat. Before turning on the power, check that the spaces around the air-intake holes on the sides of the cabinet are free of any obstruction to airflow.

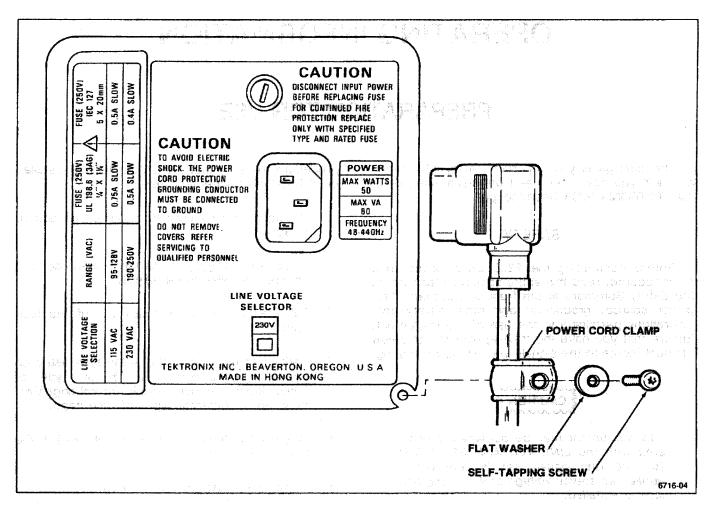


Figure 2-1. Voltage Selector switch, fuse, power-cord receptacle, and plastic clamp.

erceparas a capacidov secu

CONTROLS, CONNECTORS, AND INDICATORS

The following descriptions are intended to familiarize the operator with the location and function of the instrument's controls, connectors, and indicators.

Refer to Figure 2-2 for the location of items 1 through 28.

POWER AND DISPLAY

- 1 INTENSITY Control—Adjusts the brightness of all displayed waveforms.
- 2 BEAM FIND Button—Compresses the vertical and horizontal deflection to within the graticule area and intensifies the display to aid the user in locating traces that are overscanned or deflected outside of the crt viewing area.
- 3 FOCUS Control—Adjusts for optimum display definition. Once set, proper focusing is maintained over a wide range of display intensity.
- TRACE ROTATION Control—Permits alignment of the trace with the horizontal graticule line. This control is a screwdriver adjustment that, once set, should require little attention during normal operation.
- 5 POWER Switch—Turns instrument power on or off.
- 6 Power On Indicator—Lights up while instrument is operating.

VERTICAL

- 7 Channel 1 Vertical POSITION Control—Controls the vertical display position of the Channel 1 signal. In X-Y mode the control is inactive.
- 8 Channel 2 Vertical POSITION Control— Controls the vertical display position of the Channel 2 signal. In X-Y mode the control vertically positions the display.
- 9 MODE Switch CH 1-BOTH-CH 2—Selects either a single channel for display or the dualchannel display mode.

CH 1—Selects only the Channel 1 input signal for display.

BOTH—Selects a combination of Channel 1 and Channel 2 input signals for display. The CH 1-BOTH-CH 2 switch must be in the BOTH position for ADD, ALT, and CHOP operation.

CH 2—Selects only the Channel 2 input signal for display.

- MODE Switch NORM-CH 2 INVERT—Inverts the Channel 2 display when in the CH 2 INVERT position. With CH 2 inverted, the oscilloscope may be operated as a differential amplifier when the BOTH-ADD vertical mode is selected. For noninverting Channel 2 display, select NORM position.
- MODE Switch ADD-ALT-CHOP—Sets the dual-channel vertical display mode.

ADD—Displays the sum of Channel 1 and Channel 2 input signals when BOTH is also selected. The difference of the Channel 1 and Channel 2 input signals is displayed when the Channel 2 signal is inverted.

ALT—Alternately displays the Channel 1 and Channel 2 input signals. The alternation occurs during retrace at the end of each sweep. ALT vertical mode is most useful for viewing both channel input signals at sweep rates of 0.5 ms per division and faster.

CHOP—Switches the display between the Channel 1 and Channel 2 vertical input signals during the sweep. The chopped switching rate (CHOP frequency) is approximately 500 kHz.

(12) CH 1 and CH 2 VOLTS/DIV Switches—Select the vertical channel deflection factors from 5 mV to 5 V per division in a 1-2-5 sequence.

1X—Front-panel marking that indicates the deflection factor set by the VOLTS/DIV switch when a signal adapter, 1X probe, or a coaxial cable is attached to the channel input connector.

10X PROBE—Front-panel marking that indicates the deflection factor set by the VOLTS/DIV switch when a 10X probe is attached to the channel input connector.

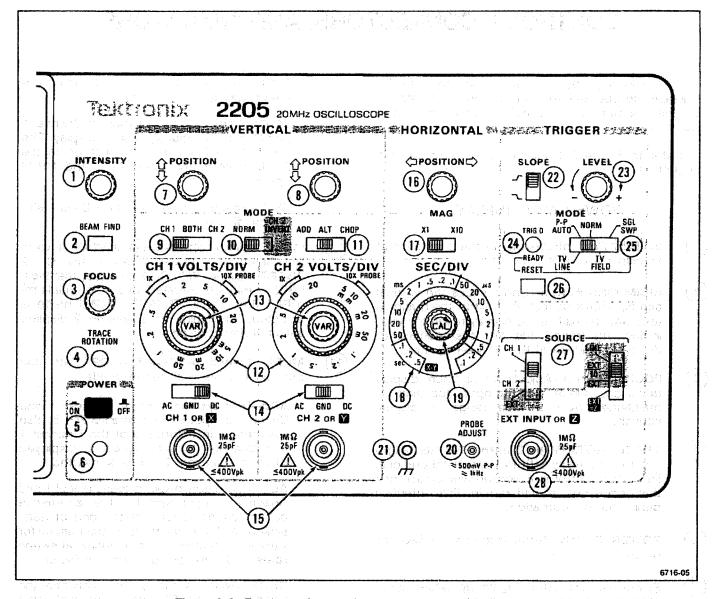


Figure 2-2. Front panel controls, connectors, and indicators.

- (13) Variable VOLTS/DIV Controls—Provide continuously variable deflection factors between calibrated positions of the VOLTS/DIV switch. Reduces gain by at least 2.5 times at the fully counterclockwise rotation of the variable knob. A detent position at full clockwise rotation indicates the calibrated VOLTS/DIV position of the variable knob.
- AC-GND-DC (Input Coupling) Switches— Select the method of coupling the input signal from the CH 1 OR X and CH 2 OR Y connectors to the vertical amplifiers.

AC—Capacitively couples the input signal to the vertical deflection system. The dc component of the input signal is blocked. The lower -3 dB bandpass is 10 Hz or less.

GND—Grounds the input of the vertical deflection channel; provides a zero (ground) reference voltage display (does not ground the input signal).

DC—All frequency components of the input signal are coupled to the vertical deflection and signal acquisition systems.

(15) CH 1 OR X and CH 2 OR Y Input Connectors— Provide for application of signals to the inputs of the deflection systems.

In X-Y mode, the signal connected to the CH 1 OR X input controls the horizontal deflection, and the signal connected to the CH 2 OR Y input controls the vertical deflection.

HORIZONTAL

- (16) POSITION Control—Positions the display horizontally in all modes.
- MAG Switch—Selects X1 or X10 sweep speed.

X1—Normal sweep speed as selected by the SEC/DIV switch.

X10—Extends the SEC/DIV switch settings by a factor of 10. The fastest sweep speed can be extended to 10 ns per division.

- 18) SEC/DIV Switch—Selects calibrated sweep rates from 0.5 s to 0.01 μs per division in a 1-2-5 sequence of 21 steps. The X-Y position selects the X-Y mode; the CH 1 OR X input signal produces horizontal deflection for X-Y displays, and the CH 2 OR Y input signal produces vertical deflection.
- (19) Variable SEC/DIV Control—Provide continuously variable, uncalibrated sweep speeds to at least 2.5 times slower than the calibrated setting. It extends the slowest sweep speed to at least 1.25 s per division.
- PROBE ADJUST Terminal—Provides an approximately 0.5-V, negative-going, square-wave signal (at about 1 kHz) for use in compensating voltage probes and checking the vertical deflection system. The PROBE ADJUST output signal is not intended as a reference for checking either the vertical or the horizontal accuracy of the instrument.
- (21) GND Connector (h)—Provides an auxiliary ground connection directly to the instrument chassis via a banana-tip jack.

TRIGGER

SLOPE Switch—Selects either the positive (____) or negative (___) slope of the trigger signal to start the sweep.

- 23 LEVEL Control—Selects the amplitude point on the trigger signal that produces triggering.
- TRIG'D/READY Indicator—A dual-function LED indicator. In P-P AUTO and NORM trigger modes, the indicator is turned on when triggering occurs. In SGL SWP trigger mode, the indicator turns on when the trigger circuit is armed, awaiting a triggering event; it turns off again as soon as the single sweep is triggered.
- Trigger MODE Switch—Determines the sweep triggering mode.

P-P AUTO-TV LINE—Triggering occurs on trigger signals having adequate amplitude and a repetition rate of about 20 Hz or faster. In the absence of a proper trigger signal, an autotrigger is generated, and the sweep freeruns.

NORM—Permits triggering at all sweep rates (an autotrigger is not generated in the absence of an adequate trigger signal). NORM trigger mode is especially useful for low-frequency and low-repetition-rate signals.

TV FIELD—Permits stable triggering on a television field signal (vertical sync). In the absence of an adequate trigger signal, the sweep freeruns. The instrument otherwise behaves as in P-P AUTO.

SGL SWP—Selects single sweep-operation.

- 26 RESET Button—Arms the trigger circuit for a single sweep. Triggering requirements are the same as in NORM trigger mode. After the completion of a triggered sweep, pressing in the SGL SWP RESET button rearms the trigger circuitry to accept the next triggering event.
- 27) Trigger SOURCE Switches—Determine the source of the internal and external trigger signal for the trigger generator circuits.

CH 1—Trigger signal is obtained from the CH 1 OR X input connector.

VERT MODE—Trigger signals are automatically obtained alternately from the CH 1 OR X and CH 2 OR Y input signals in ALT vertical mode. In CHOP vertical mode, the trigger signal source is the sum of the Channel 1 and Channel 2 input signals.

CH 2-Trigger signal is obtained from the CH 2 OR Y input. The CH 2 INVERT switch also inverts the polarity of the internal Channel 2 trigger signal when the Channel 2 display is inverted.

EXT-Selects external trigger source. The actual form these triggers take is selected by the second SOURCE switch.

LINE-Routes a sample of the ac-powerline signal to the trigger circuit.

EXT/10—Divides the external signal applied to the EXT INPUT OR Z connector by a factor of ten before applying it to the trigger circuit.

EXT-Routes an external signal applied to the EXT INPUT OR Z connector to the trigger circuit.

EXT=Z-Routes the signal applied to the EXT INPUT OR Z connector to the Z-Axis amplifier rather than the trigger circuit.


EXT INPUT OR Z Connector—Provides for connection of external signals either to the trigger circuit for external triggering or to the Z-Axis amplifier for intensity modulation of the crt display.

REAR PANEL

Refer to Figure 2-3 for items 29 through 31.

Fuse Holder-Contains the ac-power-source fuse. See the rear-panel nomenclature for fuse rating and line-voltage range.

- Receptacle-Pro-(30)Detachable-Power-Cord vides the connection point for the ac-power source to the instrument.
- (31) Line Voltage Selector Switch-Selects the line voltage operating range of either 115 Vac or 230 Vac.

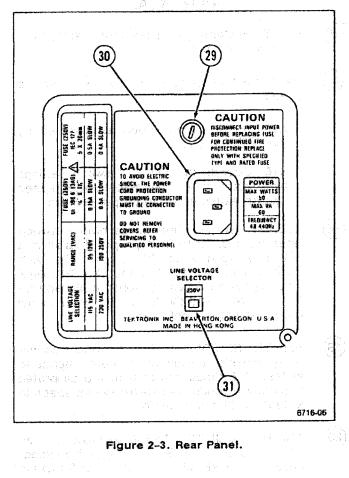

nordina. Programme of the entropy of the

OPERATING CONSIDERATIONS

This part contains basic operating information and techniques that should be considered before attempting to make any measurements with the instrument.

GRATICULE

The graticule is internally marked on the faceplate of the crt to eliminate parallax-viewing errors and to enable measurements (see Figure 2-4). The graticule is marked with eight vertical and ten horizontal major divisions. In addition, each major division is divided into five subdivisions. The vertical deflection factors and horizontal timing are calibrated to the graticule so that accurate measurements can be made directly from the crt. Also, percentage marks for the measurement of rise and fall times are located on the left side of the graticule.

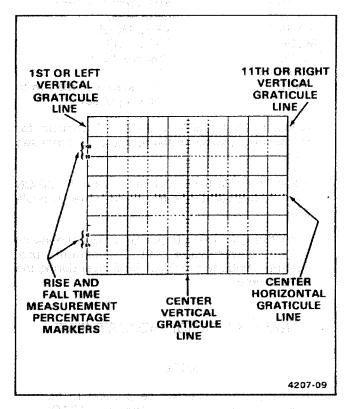


Figure 2-4. Graticule measurement markings.

CONNECTING SIGNALS

Signal Adapter

The signal adapter supplied with the instrument is usually the most convenient way to connect a signal to the 2205. These signal adapters are shielded to prevent pickup of electromagnetic interference. When connected to the 2205 input, a signal adapter presents 1 M Ω and about 100 pF impedance to the circuit under test. If this capacitance is disruptive to the circuit being tested, use the optional 10X probe.

Waveform Fidelity and Probe Grounds

When using a probe, its ground lead must be used for accurate measurements and observations. Use the shortest ground connection possible for best waveform fidelity.

In some cases, a separate ground from the unit under test to the ground receptacle on the oscilloscope front panel can reduce interference from low-frequency hum and noise. For rough checks of larger signals, such as 5 V logic, a ground lead separate from the probe – or even the safety ground connection, which is shared with the unit under test – may work for a signal ground. Fast signal transitions will be highly distorted, and extraneous noise will be induced without the probe ground connection, and/or with extra ground connections from the 2205 to the circuit being tested.

Probe Compensation (Optional 10X Probe)

Misadjustment of probe compensation is a common source of measurement error. Due to variations in oscilloscope input characteristics, probe compensation should be checked whenever a 10X probe is moved from one oscilloscope to another or from one channel to another on the same oscilloscope. Always compensate the probe to the channel on which it will be used. See the procedure in Section 4, Checks and Adjustments.

Probe Handling (Optional Probes)

Both the probe and the probe accessories should be handled carefully to prevent damage. Striking a hard surface can damage both the probe body and the probe tip. Exercise care to prevent the cable from being crushed, kinked, or excessively strained.

Coaxial Cables

To maintain good waveform fidelity and accuracy, use only high-quality, low-loss coaxial cables. When you use 50 Ω or 75 Ω coaxial cable, attach a matching external terminator. Some high frequency response will be lost without external termination.

OPERATOR'S CHECKS AND ADJUSTMENTS

To verify the operation and basic accuracy of your instrument before making measurements, perform the following checks and adjustment procedures. If adjustments are required beyond the scope of these operator's checks and adjustments, refer the instrument to qualified service personnel.

For new equipment checks, before proceeding with these instructions, refer to Preparation for Use in this manual to prepare the instrument for the initial start-up before applying power.

INITIAL SETUP

- 1. Verify that the POWER switch is OFF (switch is in the out position), and the Line Voltage Selector switch is set for the correct source voltage. Then plug the power cord into the ac power outlet.
- 2. Press in the POWER switch (ON) and set the instrument controls to obtain a baseline trace:

Display

INTENSITY FOCUS

ademar ius

Midrange

Best defined display

Vertical (Both Channels)

POSITION (both) VOLTS/DIV (both) AC-GND-DC (both)

Midrange CH 1. NORM 10 mV

DC

VOLTS/DIV Variable CAL (in detent)

(both)

Magification (both) X1 (CAL knobs

in)

Horizontal

SEC/DIV SEC/DIV Variable 0.5 ms

POSITION

CAL (in detent) Midrange

MODE

X1

Triager

HOLDOFF

MIN (fully counter-

clockwise) **VERT MODE**

SOURCE MODE SLOPE COUPLING

P-P AUTO Positive (____)

AC

LEVEL

For a stable display (with

signal applied)

- 3. Adjust the INTENSITY and FOCUS controls for the desired display brightness and best focused
- 4. Adjust the Vertical and Horizontal POSITION controls to position the trace within the graticule
- 5. Allow the instrument to warm up for 20 minutes before commencing the adjustment procedures. Reduce the INTENSITY level during the waiting time.

TRACE ROTATION ADJUSTMENT

NOTE

Normally, the trace will be parallel to the center horizontal graticule line, and TRACE ROTATION adjustment is not required.

1. Preset the instrument controls and obtain a baseline trace as described in Initial Setup.

- Use the CH 1 POSITION control to move the baseline trace to the center horizontal graticule line.
- If the baseline trace is not parallel to the center horizontal graticule line, use a small-bladed screwdriver or alignment tool to adjust the TRACE ROTATION control and align the trace with the graticule line.

PROBE COMPENSATION (Option 10X Probe)

Misadjustment of probe compensation is a source of measurement error. The attenuator probes are equipped with a compensation adjustment. To ensure optimum measurement accuracy, always check probe compensation before making measurements. Probe compensation is accomplished by the following steps:

- Preset the instrument controls and obtain a baseline trace as described in the Initial Setup.
- Connect the two 10X probes (supplied with the instrument) to the CH 1 OR X and CH 2 OR Y input connectors.
- Connect the Channel 1 probe tip to the PROBE ADJUST terminal.
- Use the CH 1 POSITION control to vertically center the display. If necessary, adjust the Trigger LEVEL control to obtain a stable display on the positive (_____) SLOPE.

NOTE

Refer to the instruction manual supplied with the probe for more complete information on the probe and probe compensation.

- Check the waveform display for overshoot and rounding (see Figure 2-5); if necessary adjust the probe's compensation. Use a lowreactance alignment tool to adjust the LF comp capacitor for a square front corner on the waveform.
- Disconnect the Channel 1 probe tip from the PROBE ADJUST terminal.
- Connect the Channel 2 probe tip to the PROBE ADJUST terminal.
- 8. Set the Vertical MODE to CH 2.
- 9. Use the CH 2 POSITION control to vertically center the display.
- 10. Repeat step 5 for the Channel 2 probe.

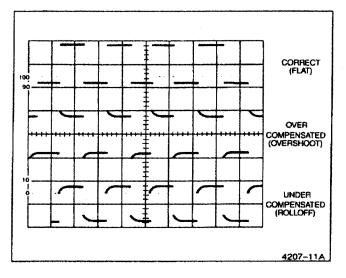


Figure 2-5. Probe compensation.

vitoria nome (vicini i transi i tri Nept Tronsi i transi dell'archivi di 20 1 de Brogo di Artes Internationale i transi i t 1 de Brogo di Artes Internationale i transi i t

The control of the second of the control of the second of

bugag da jana da andaka Hajada Kan malipin

1. An infragrant open of the article of the infraction of the article of the a

- 48 Despite to the agency of the distribution of the experience of agentical condition.
- (2) The state of the property of the second of the seco
- Miller and sees with Alland Toller and Recommend of Unit of the Paul Mill
- Advance de la comitación de la Reductión de la comoción de comoción de la comoción del comoción de la comoción del comoción de la comoción


TEN STATE

Fig. 39 of the control of the area of the control o

The state of the s

State Communication of the state of the second section of the section of

Harris Charles Service of Edition 1979

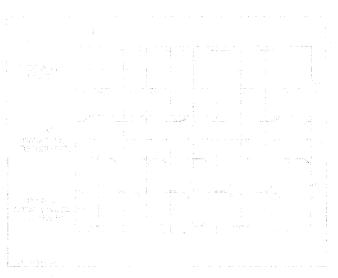

and the second second second second

THEORY OF OPERATION

SECTION ORGANIZATION

This section of the manual contains a general summary of instrument functions followed by a detailed description of each major circuit. A basic block diagram, (Figure 9-4), and the schematic diagrams are located in the tabbed Diagrams section at the back of this manual. The block diagram and schematic diagrams are used to show the interconnections between parts of the circuitry and to indicate circuit components.

The schematic diagram number associated with each description is identified in the text and is shown on the block diagrams. For best understanding of the circuit being described, refer to the appropriate schematic diagram and the block diagram.

INTEGRATED CIRCUIT DESCRIPTIONS

Digital Logic Conventions

Digital logic circuits do many functions within the instrument. Functions and operation of the logic

circuits are represented by logic symbology and terminology. Most logic functions are described using the positive-logic convention. Positive logic is a system where the more positive of two levels is the TRUE (or 1) state; the more negative level is the FALSE (or 0) state. In this logic description, the TRUE state is HI, and the FALSE state is LO. Voltage levels for a HI or a LO state vary between specific devices. For detailed device characteristics, refer to the manufacturer's data book.

displaying a final content of the cont

The operation of individual linear integrated circuit devices in this section use waveforms or other techniques such as voltage measurement and simplified diagrams to illustrate their circuit operation.

GENERAL DESCRIPTION

In the following functional description of the 2205 Oscilloscope, refer to the block diagram (Figure 9-4) located in the Diagrams section of this manual. In Figure 9-4 the numbered diamond symbol in each major block refers to the appropriate schematic diagram number.

Vertical and the second of the control of the contr

Signals to be displayed on the crt (cathode-ray tube) are applied to either or both the CH 1 OR X and the CH 2 OR Y input connectors. The signals may be coupled to the attenuator either directly (DC) or through an input-coupling capacitor (AC). The inputs may also be disconnected, and the input to the attenuators grounded, by switching to the GND position, the ac-coupling capacitor is allowed to precharge to the dc level present at the input

connector. This precharging prevents large trace shifts of the display when switching from GND to AC coupling. The Attenuators are switched by the front-panel VOLTS/DIV switches and scale the applied signal level to obtain the desired display amplitude.

The output signals from the Attenuators are applied to the Vertical Preamplifiers for amplification. The Channel 2 Preamplifier has additional circuitry, permitting the operator to invert the Channel 2 display on the cathode-ray tube (crt). Trigger pickoffs in each channel supply a trigger signal to the Trigger Amplifier when internal triggering is selected.

Input signals are selected for display by the Channel Switching circuit under control of the front-panel VERTICAL MODE switches. The output signal from the Channel Switching circuit is applied to the Vertical Output Amplifier.

Final amplification of the vertical signal is done by the Vertical Output Amplifier. This stage produces the signal levels that vertically deflect the crt electron beam. For locating the position of off-screen displays, the dynamic range of the Amplifier can be limited with the Beam Find circuitry. This circuitry also intensifies the trace and limits horizontal deflection.

Triggering

The Trigger circuitry uses either the Internal Trigger signal obtained from the input signal(s), an External Trigger signal, or a Line Trigger signal derived from the ac power source to develop trigger signals for the Sweep Generator. The P-P Auto Trigger circuit sets the range of the Trigger Level to conform to within the peak-to-peak amplitude of the selected trigger signal when either P-P Auto or TV Field Trigger mode is selected. This allows triggering on most signals without needing to adjust the TRIGGER LEVEL control. In NORM mode, the TRIGGER LEVEL control must be adjusted to the signal level before a sweep will be triggered.

The triggering circuitry contains the TV Field Sync circuit. This circuit provides stable triggering on television vertical-sync pulses when in the TV Field triggering mode. TV Line triggering is possible using P-P AUTO trigger mode.

Sweep

The Sweep Logic circuit controls the sweep generation and Z-Axis unblanking for the Sweep display. When the TRIGGER Mode switches are set to either P-P AUTO or TV FIELD and no trigger signal is present, the Auto Baseline circuit causes the Sweep Logic circuit to produce a sweep for reference purposes. In the NORM setting, the Auto Baseline circuit is disabled and sweeps are not generated until a trigger event occurs. This is useful for triggering on low-repetition rate signals. The SGL SWP (single sweep) trigger mode allows only one sweep to be generated after being reset. Following the single sweep, the Trigger circuit is disabled until the SGL SWP RESET button is pressed again.

The Sweep Logic circuit controls the operation of the Miller Sweep Generator circuit. The Sweep circuit produces a linear sweep with a ramp time that is controlled by the SEC/DIV switch setting. The sweep signal is applied to the Horizontal Preamplifier for initial amplification and then to the Horizontal

Output Amplifier to drive the crt horizontal deflection plates.

Horizontal

The Horizontal Preamplifier gain is increased by a factor of 10 when the Horizontal MAG control is used. Horizontal positioning of the display is done in the Horizontal Preamplifier circuit.

In the X-Y mode of operation, the Channel 1 signal from the internal Trigger circuitry passes through the X-Y Amplifier to the Horizontal Preamplifier. In this operating mode, the Channel 1 Internal Trigger signal supplies the horizontal deflection to the crt, and the Miller Sweep circuit is disabled to inhibit sweep generation.

Establica estaballica de la mestra de contrabación de atrodes establicas. Como de contrabación de atrodes establicas de atrodes de a

The Z-Axis drive from the Sweep Logic circuit is applied to the Z-Axis Amplifier. The output signal from the Z-Axis Amplifier circuit sets the crt intensity. When using Chop Vertical mode, a blanking signal from the Chop Oscillator circuit blanks the crt display while switching between the vertical channels.

The DC Restorer circuit applies the output voltage of the Z-Axis Amplifier between the cathode and grid of the crt. High dc potentials on these elements prohibit direct coupling to the crt.

Power Supply

l likimabbig

The Power Supply provides the necessary operating voltages for the instrument. Operating potentials are obtained from a circuit consisting of the Power Transformer, power supply control circuits, inverter, and inverter transformer. The inverter transformer secondary windings provide various ac-levels that are rectified and filtered to produce the operating voltages for the instrument.

galeword to the second of the

A front-panel PROBE ADJUST output is provided for use in adjusting probe compensation. The voltage at the PROBE ADJUST connector is a negative-going square wave that has a peak-to-peak amplitude of about 500 mV with a repetition rate about 1 kHz.

DETAILED CIRCUIT DESCRIPTION

VERTICAL

Attenuators

The Channel 1 and Channel 2 Attenuator circuits. shown on Diagram 1, are identical except for the additional Invert circuitry in the Channel 2 Paraphase Amplifier. Therefore, only the Channel 1 Attenuator is described, with the Invert circuitry of Channel 2 discussed separately.


The Attenuator circuit (see Figure 3-1) provides control of the vertical deflection factor and the variable volts/division gain. Vertical input signals for display on the crt may be connected to either or both the CH 1 OR X and the CH 2 OR Y input connectors. In the X-Y mode of operation, the input signal applied to the CH 1 OR X connector provides horizontal (X-axis) deflection for the display, and the input signal applied to the CH 2 OR Y connector provides the vertical (Y-axis) deflection for the display.

Input Coupling (AC-GND-DC)

A signal from the CH 1 OR X input connector may be ac or dc coupled to the High-Impedance Attenuator circuit or disconnected completely by the Input Coupling Switch. Signals from the CH 1 OR X input connector are routed through resistor R1 to Input Coupling switch \$101. When \$101 is set for do coupling, the Channel 1 signal goes directly to the input of the High-Impedance Attenuator stage. When ac coupled, the ac portion of the input signal passes through the dc-blocking capacitor C2. The blocking capacitor stops the dc component of the input signal from reaching the Attenuator circuit. When switched into the signal path, attenuator AT1 attenuates the input signal by factors of 100, 10, 4, or 2. When S101 is set to GND, the direct signal path is opened and the input of the attenuator is connected to ground. This provides a ground reference without the need to remove the applied signal from the input connector. The coupling capacitor precharges through R2 and R4 to prevent large trace shifts when switching from GND to AC.

Input Attenuator (1917) - 20 Trable - 10 Sept. - 200

The effective deflection factor of each vertical channel is determined by the setting of the Channel VOLTS/DIV switch. The basic deflection factor of the Vertical system is 5 mV/DIV. For VOLT/DIV switch settings above 5 mV/DIV, frequency compensated voltage dividers (attenuators) are switched into the circuit. Each channel has +2, +4, +10 and +100 attenuators that are selected in various combinations to produce the different deflection factors. Each attenuator contains an adjustable series capacitor to provide correct attenuation at high frequencies, and an adjustable shunt capacitor to provide correct input capacitance.

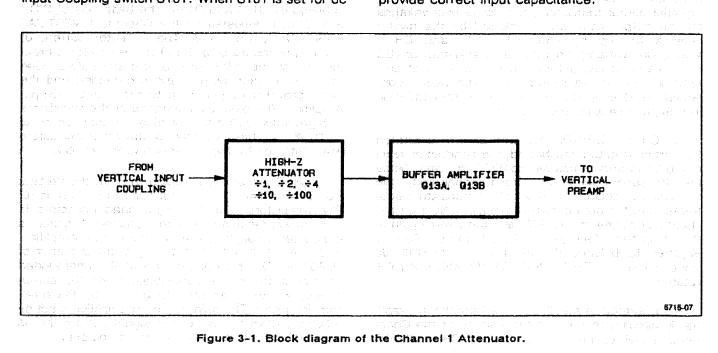

Source Follower

The Channel 1 signal from the input attenuator is connected to the source follower Q13A via R6 and C6. Resistor R5 provides the input resistance. Resistor R6 provides input current limiting for Q13A and Q14. FET Q13B is a constant current source for Q13A. Transistors Q13A and Q13B provide a high output impedance for the attenuator stage and the input drive current needed for the Paraphase Amplifier U30 (first stage of amplification).

If excessively high amplitude signals are applied to the source follower Q13A, the signal current will be limited by R6 and Q14 (connected as diode) and the gate-source junction of Q13A. If an excessive negative going signal causes Q14 to become forward biased, Q13A gate is clamped to about -9.3V. An excessive positive going signal will forward bias the gate-source junction of Q13A. As soon as gate current flows, the gate voltage will stop increasing. Gate current is limited by the high resistance of R6.

Paraphase Amplifier

Paraphase Amplifier U30 converts the singleended signal from Q13 into a differential signal for the Vertical Preamplifier. The signal from Q13A pin 5 goes to the base of one transistor in U30. The other input transistor in U30 is biased by the divider network formed by R30, R31, R32 and variable R33. Emitter current for the two input transistors is supplied by R22 and R23. Resistor R29 sets the gain for the stage. The collector current of the two input transistors serves as emitter current for the differential output transistor pairs. Base bias voltages for the output pairs are developed by the divider network formed by R39, R41, R42 and CH 1 VOLTS/DIV Variable control. The transistors of U30 have matched characteristics, so the ratio of currents in the two transistors U83B and U83C, connected as diodes, determines the current ratios in the output transistor pairs of U30.

As CH 1 VOLTS/DIV Variable control is rotated from calibrated to uncalibrated, the conduction level of the transistors connected to R35 increases. Since the transistor pairs are cross connected, the increased conduction in one pair of transistors subtracts from the output current produced by the transistor pair connected to R38, and the overall gain of the amplifier decreases. Potentiometer R33 is adjusted to balance the amplifier for minimal dc trace shift as the CH 1 VOLTS/DIV Variable control is rotated.

fier is circuitry that allows the polarity of the Channel 2 signal to be inverted. When CH 2 INVERT

switch S90 is in NORM, the transistor pairs in U80 are biased as they are in U30, and CH 2 trace is not inverted. In CH 2 INVERT position, connections to the bases of the output transistor pairs are reversed, to produce an inverted Channel 2 trace. Potentiometer R83 is adjusted for minimal dc trace shift in CH 2 INVERT when rotating CH 2 VOLTS/DIV Variable control. Potentiometer R84 is switched in with R83 when in INVERT; it is adjusted for minimal dc trace shift when rotating CH 2 VOLTS/DIV Variable control.

Vertical Preamplifiers

The Channel 1 and Channel 2 Vertical Preamplifiers, shown on Diagram 2, are identical in operation. Operation of the Channel 1 amplifier is described. Differential signal current from the Paraphase Amplifier is amplified to produce drive current for the Vertical Output Amplifier. Internal trigger signals for the Trigger circuitry are picked off before the Vertical Preamplifier. The Channel Switch circuitry controls channel selection for the crt display.

Common-base transistors Q102 and Q103, which complete the Paraphase Amplifier portion of the circuitry shown on Diagram 1, convert differential current from the Paraphase Amplifier into levelshifted voltages that drive the bases of the input transistors of Vertical Preamplifier U130 and the Internal Trigger circuitry.

Emitter current for the input transistors of U130 is supplied by Q114 and Q115. The base bias of Q114 and Q115 is adjusted by the Channel 1 VERTICAL POSITION Control R123. The collector current of each input transistor of U130 is the emitter current for two of the differential output transistors. One collector of each output pair is grounded and the other provides output drive to the Vertical Output Amplifier. The base bias voltages of the transistors with grounded collectors are held at ground potential by R136. The base voltages of the other transistors are controlled by the Channel Switch circuitry.

When Channel 1 is selected to drive the Vertical Output Amplifier, the Q output (pin 9) of U540A is HI. The transistors with the ungrounded collectors is then forward-biased, and the Channel 1 signal is conducted through to the Vertical Output Amplifier. If Channel 1 is not selected, then the Q output of U540A is LO. The transistors with the ungrounded collectors are then reverse-biased and the output signals will be conducted to ground by the other transistor pair. The gain of the Preamplifier is set by adjusting R145 to control the signal current that is shunted between the two differential outputs.

Channel Switch Logic

The Channel Switch circuitry, shown on Diagram 2, uses the front-panel VERTICAL MODE switches to select the crt display format. See Figure 3-2 for a block diagram of the circuit.

When any display mode other than X-Y is selected, the XY line connected to \$550 is at ground potential. VERTICAL MODE switches \$545 and \$550 control the connection between the XY control line and the SET(L) and RESET(L) inputs of flip-flop U540A to obtain the various display formats described below.

CHANNEL 1 DISPLAY ONLY. The CH 1 position of S550 grounds the SET input of U540A while the RESET input is held HI by pull-up resistor R539. This produces a HI and a LO on the Q and Q outputs of U540A respectively, and the Channel 1 Preamplifier signal then drives the Vertical Output Amplifier (as described in the Vertical Preamplifier section). The Channel 2 Preamplifier will be disabled.

CHANNEL 2 DISPLAY ONLY. The CH 2 position of S550 holds the RESET input of U540A LO through CR538, and the SET input is held HI by pull-up

resistor R538. The outputs of U540A are then Q LO and \overline{Q} HI enabling the Channel 2 Preamplifier signal to drive the Vertical Output Amplifier, while the CH 1 Preamplifier is disabled.

To display the ADD, ALT, or CHOP formats, S550 must be in the BOTH position to ground the A, C, and F pins of S545.

ADD DISPLAY. In the ADD position of S545, both the SET and RESET inputs of U540A are held LO by CR534 and CR537. The Q and Q outputs of U540A are then both HI, and signal currents from the Channel 1 and Channel 2 Preamplifiers add together to drive the Vertical Output Amplifier.

CHOP DISPLAY. In the CHOP position, the CHOP ENABLE line is held LO, keeping the inputs of U537D and U537C HI. This enables CHOP multivibrator U537D to begin switching. The switching rate is determined primarily by the component values of R544, R545, and C545. The output of U537C (the inverted output of the multivibrator circuit) supplies the CHOP clock to flip-flop U540A via U537A. The output of U537C also drives U537B, the CHOP Blanking Pulse Generator.

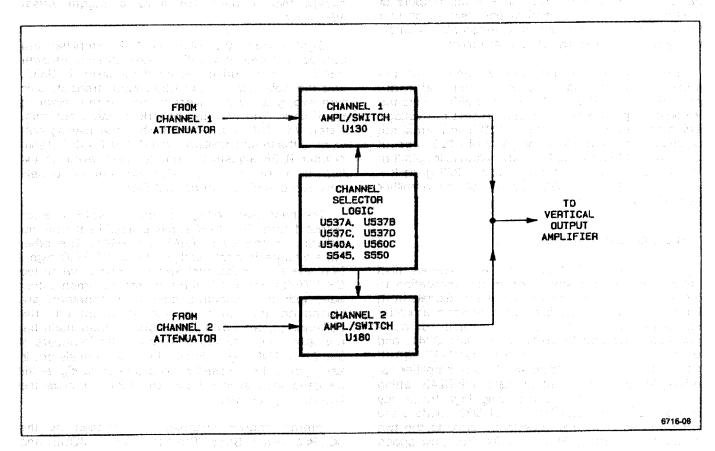


Figure 3-2. Block diagram of the Channel Switching.

Coupling capacitor C547 and resistors R547 and R548 form a differentiating circuit that produces positive-going and negative-going short duration pulses. These pulses are inverted by U537B to generate the Chop Blank signal to the Z-Axis Amplifier. The pulses blank the crt during CHOP switching times.

The Alt Sync signal applied to one input of U537A is HI except during Holdoff. This allows the output of U537C to be inverted by U537A which drives the clock input of U540A. Since the Q output of U540A is connected back to the D input, and both the SET and RESET inputs are HI, the outputs of U540A toggle (change states) with each clock input. The Vertical Output Amplifier is then driven alternately from the Channel 1 and Channel 2 Preamplifiers at the CHOP rate.

ALTERNATE DISPLAY. in ALT. the CHOP ENABLE line is held HI, disabling CHOP multivibrator U537D. The output of U537C will be HI and the Chop Blank signal from U537B will be LO. Input signals to U537A are the HI from U537C and the ALT SYNC from the Holdoff circuitry in the Sweep Generator. The output of U537A will then be the inverted ALT SYNC signal that clocks Channel Select flip-flop U540A. This causes the outputs of U540A to toggle at the end of each sweep so that the Channel 1 and Channel 2 Preamplifiers alternately drive the Vertical Output Amplifier.

Beam Find keeps the vertical trace within the graticule area for locating off-screen and over-scanned traces. BEAM FIND switch S390 adjusts the Vertical Output Amplifier biasing to limit the voltage swing at the crt plates. When S390 is in normal out position, the voltage level on pin 3 of U225 is about zero volts. When the BEAM FIND switch is in, pin 3 of U225 goes to -8.6 V, the output of U225 goes low and bias Q202 and Q203 such that the amplifier dynamic range is limited.

Vertical Output Amplifier

The Vertical Output Amplifier provides final amplification of the input signals for application to the vertical deflection plates of the crt. Signals from the preamplifier are applied to a differential amplifier composed of Q230 and Q231 with frequency compensation provided by R241, R280, and C241, and overall gain set by R233. Transistors Q232, Q236, and Q237 form a cascade-feed-back amplifier for driving the positive deflection plate with R243 setting amplifier gain and C243 providing high frequency compensation. Emitter follower of Q232 buffers the input and provides low impedance drive to the two output transistors Q236 and Q237. For slow speed signals, Q236 serves as a current source for Q237,

and at high frequencies, the signal is coupled through C232 to the base of Q236. This provides additional pull-up output current to drive the crt at high frequencies. The amplifier consisting of Q234, Q238, and Q239 drives the negative deflection plate the same way the positive deflection plate is driven.

TRIGGER AMPLIFIERS AND SWITCHING

The Trigger Amplifiers shown on Diagram 3, provide signals to the Trigger Generator circuit from either the Vertical Preamplifiers, the EXT INPUT OR Z connector, or the power line. The SOURCE switch selects Channel 1, Channel 2, external, or line as the trigger source.

Internal Trigger

Signals from the Vertical Preamplifiers drive the internal Trigger Amplifier with channel selection determined by the VERTICAL switch.

Trigger pickoff from the Preamplifiers is accomplished by Q450 and Q451 for Channel 1, and Q452 and Q453 for Channel 2. The circuitry associated with Channel 2 is the same as that for Channel 1 except that it does not have a trigger offset adjustment.

Signals from the Channel 1 Preamplifier are applied to Q450 and Q451. These emitter-follower transistors each drive one input transistor in U335, and the collectors of the U335 input transistors in turn supply emitter current to two current-steering transistors. The biasing network of the input transistors of U335 is adjustable while the biasing network of the input transistors of U310 is fixed. Potentiometer R338 adjusts the emitter bias levels of the two input transistors of U335 so that dc offsets between channels can be matched.

The base bias voltage of one transistor in each output differential amplifier pair is fixed by the divider network composed of R443 and R444. The other base voltage is controlled by the CH 1 TRIG signal from the Trigger Channel Switch circuitry. When the CH 1 TRIG signal is LO, the transistors in each output pair, with the collectors connected together, are biased on and the other transistors are off. The collector signal currents are equal in magnitude but opposite in polarity and signal cancellation occurs. If the CH 1 TRIG signal is HI, the other transistors in each pair will be biased on and an output signal will be developed across R339 and R340 to drive the Internal Trigger Amplifier.

Internal trigger channels are chosen by the SOURCE switch S555. The CH 1, VERT MODE, and CH 2 positions of S555 forward biases CR348 and

CR349 to prevent external trigger signals or the line trigger signal from reaching the Trigger Generator. Signals from the Internal Trigger Amplifier are passed to the Trigger Generator through forward-biased CR450.

CHANNEL 1. For triggering from Channel 1, the SOURCE and VERTICAL MODE switches are set to CH 1. Input pin 9 of U300C will be LO, which place a LO at the output of U300C. This LO is passed through U304B to an input of U300B. The output of U300B goes HI enabling Channel 1 signal through U335. The Channel 2 signal path is disabled by the output of U300A being LO.

CHANNEL 2. For triggering from Channel 2, the SOURCE and VERTICAL MODE switches are set to CH 2. Input pin 8 of U300C will be LO, which places a LO at the output of U300C. This LO is passes through U304A to one of the inputs of U300A. The output of U300A goes HI enabling Channel 2 signal through U335. The Channel 1 signal path is disabled by the output of U300B being LO.

VERT MODE. When the SOURCE switch is set to VERT MODE, trigger source selection is determined by the two VERTICAL MODE switches. The outputs of U300A and U300B will be HI, and triggering selection will then be determined by the inputs of U304A and U304B that are controlled by U540A in the Channel Switch circuit.

When Channel 1 is selected (VERTICAL MODE switch set to CH 1), the input to U304B will be HI. The LO from the output of U304B is applied to U300B and causes the CH 1 TRIG line to go HI and enable the Channel 1 trigger signal. The input to U304A will be LO placing a HI at the input of U300A. The LO from the output of U300A causes the Channel 2 trigger signal to be disabled.

When Channel 2 is selected (VERTICAL MODE switch set to CH 2), the outputs of U340B, U300B, U304A, and U300A will be the reverse of the states described for Channel 1 selection. The Channel 2 signal will be selected and the Channel 1 trigger signal disabled.

When selecting ALT VERTICAL MODE, the inputs of U304A and U304B will toggle with each sweep. The outputs of the two gates will also toggle and the Trigger signal source will alternate with the displayed channel.

In the ADD VERTICAL MODE position, both inputs to U304A and U304B will be LO and both gate outputs of U300A and U300B will be HI. Both Channel 1 and Channel 2 signal paths will be enabled and their output current will be summed at the inputs of the

Internal Trigger Amplifier to produce the internal trigger signal.

In CHOP VERTICAL MODE position, the CHOP ENABLE line places a LO on both inputs of U300D. The output of U300D is held HI and applied to the inputs U304A and U304B and the signal to the Internal Trigger Amplifier will be the same as for the ADD mode.

Internal Trigger Amplifier

The Internal Trigger Amplifier converts the differential trigger signals from the Vertical Preamplifiers into a single-ended signal that drives the X-Axis Amplifier and the Trigger Generator.

Signal current is applied to the emitters of U380C and U380D. The collector current of U380C is converted to a voltage across feedback resistor R357. The opposite-phase collector current of U380A causes a voltage drop across R359 that adds to the voltage at the collector of U380D. This voltage appears at the base of U415C which buffers and level shifts the signal back to 0 V. The emitter signal of U415C drives the X-Axis Amplifier, and the base of Q410. The emitter signal of Q410 in turn drives the Trigger Generator whenever CR450 is forward biased.

External Trigger Amplifier

The External Trigger Amplifier buffers signals applied to the EXT INPUT OR Z connector and line-frequency trigger signals. The output of the amplifier is applied to the Trigger Generator.

EXT. When the SOURCE switches are set to EXT, and either EXT=Z, EXT, or EXT/10 is selected, the trigger source is the signal applied to the EXT INPUT OR Z connector. In EXT/10 position the input signal is attenuated by a factor of 10 through the compensated divider composed of R377, R378, C377, and C378.

The external signal is applied to the gate of Q370. FET Q371 supplies source current for Q370 such that there will be no voltage drop across the gate-source junction of Q370. FETS Q370 and Q371 are a matched pair. The source-follower Q370 drives emitter-follower transistor Q412 which lowers the Amplifier output impedance. Protection-diode CR381 clamps the signal at the gate of Q370 to about -9 V. The Amplifier output will drive the Trigger Generator through forward-biased CR451 whenever the SOURCE switch is set to EXT. When the SOURCE switch is not set to EXT, the base-emitter junction of Q370 will be reverse biased via Q411, CR452. CR348 or CR349, and the Amplifier will be disabled.

When the SOURCE switch is set to EXT=Z position, the external signal is buffered by Q370 and applied to the Z-Axis amplifier for intensity modulation.

The line trigger from the power supply is applied to Q370 when the SOURCE switches are set to EXT and LINE positions.

TRIGGER GENERATOR

The Trigger Generator, shown on Diagram 3, supplies trigger signals to the Sweep Generator. Included in the Trigger Generator circuit are the P-P Auto Trigger, Norm Trigger, and TV Triggering circuitry.

The Trigger Level Circuit establishes voltages at the ends of the TRIGGER LEVEL potentiometer as a function of the TRIGGER Mode switch selection and trigger signals selected be the SOURCE switch. In the P-P Auto and TV Field mode, U415E is off and CR341 is reverse biased. Diode CR417 is forward biased turning U415A off. Trigger signals selected by the SOURCE switch are applied to peak detectors consisting of U415B-Q415 and U380E-Q465. These peak detectors track dc levels and have a high voltage transfer efficiency. The positive-peak and negative-peak signal levels stored by C418 and C431 are near the peak levels of the trigger signal. Amplifiers U425A and U425B are configured as voltage followers with transistors U415D and Q490 in the feedback loops. These transistors thermally compensate for U415B and Q465 and level shift the amplifier outputs back to the original dc levels of the input trigger signals. The output of U425B will be the positive peak voltage of the input trigger signal and the output of U425A will be the negative peak voltage. Potentiometers R445 and R446 adjust for do offsets in the trigger circuitry.

In the Norm mode, +8.6 V is applied to the junction of R417 and R432, turning on U415E and forward biasing CR431. Diode CR417 is reverse biased turning U415A on Input transistors U415B and Q465 are then biased off and no trigger signals will reach the Trigger Level circuit. The inputs and outputs of U425A and U425B will then be fixed voltages and independent of trigger—signal amplitude.

Trigger Level Comparator

The Trigger Level Comparator compares signals selected by the TRIGGER SOURCE switch to a voltage set by the TRIGGER LEVEL control. Positive or negative slope triggering is selected by the TRIGGER SLOPE switch.

Transistors U460B and U460E compare the wiper voltage on the TRIGGER LEVEL control to the input trigger signal, and the transistor with the higher base voltage will conduct more of the available emitter current. The output collector currents supply emitter current to two transistor pairs (U460A-U460F and U460C-4600D) which serve as cross-wired switches that are biased on or off by the TRIGGER SLOPE switch. When S460 is set to the positive slope position, U460A and U460D are biased on and U460C and U460F are biased off. For the negative slope position, the transistors reverse states to invert the comparator output polarity.

Schmitt Trigger and TV Trigger Circuit

This circuitry generates a signal that drives the Trigger Logic as a function of the Trigger Level Comparator output signal and the TRIGGER MODE switches.

The output signals from the Trigger Level Comparator drive Q400 and Q401. These transistors are configured as a current mirror that converts the differential output to a single-ended current to drive amplifier U480C. Potentiometer R481 corrects for dc offsets between positive and negative slope. Shunt-feedback amplifier U480C converts a current input to a voltage output to drive the input of the Schmitt Trigger, U480D, through R485. Positive feedback for the Schmitt Trigger is provided by potentiometer R489, and C489 reduces trigger jitter increasing positive feedback at higher frequencies. The setting of R489 determines the circuit hysteresis.

When TV FIELD is not selected, the TVF line is HI, and is buffered by Q487. Transistors Q488 and Q489 are biased off and a LO is placed on one input of U480A by R492-R493. This LO input will cause U480A to invert the output from U480D. With Q489 off, a LO will be placed on one input of U480B by R495 and U480B will also act as an inverter. The Trigger signal at the output of U480B is therefore the same as the input signal to U480A.

When TV FIELD is selected, the TVF line is LO, and is buffered by Q847. The outputs of U480D will determine the conduction states of Q488 and Q489, and the input of U480A connected to R492 will be HI. The output of U480A will be LO and U480B will invert signal at its other input. Signals at the collector of Q489 are filtered by C495, R495, and C496 to reject

TV video information and average the TV horizontal-sync pulses. Setting the trigger-level threshold near the center of the horizontal-sync-pulse swing establishes the untriggered level. When the TV vertical-sync-block occurs, the output of the filter applied to U480B pin 7 rises to a level that will cause U480B to switch. Precise TV field synchronization is obtained as a result of this filtering action. The Trigger signal output will be the inverse of the filtered signal appearing at U480B pin 7.

SWEEP GENERATOR AND LOGIC

The Sweep Generator and Logic circuitry, shown on Diagrams 4 and 5, produce a linear voltage ramp that drives the Horizontal Preamplifier. The Sweep Generator circuit also produces signals that are used to generate correct timing of the crt unblanking and intensity levels used for viewing the display. See Figure 3–3 for the block diagram of the Sweep Generator and Logic circuitry.

Miller Sweep Generator

The Miller Sweep Generator produces a linear voltage ramp that drives the Horizontal Amplifier. It produces the ramp voltage by maintaining a constant current through timing capacitors, causing a linear voltage rise across them as they charge.

Field-effect transistors Q704A and Q704B are matched devices with Q704B acting as the current source for Q704A. Since the gate and source of Q704B are connected together, the source current available to Q704A is just enough so that there is no voltage drop across the gate-source junction of Q704A.

When the sweep is not running, Q701 is biased on, holding the selected timing capacitors in a discharged state. The low impedance of Q701 in the feedback path holds the Miller Sweep output near ground potential. The voltage across Q701, in addition to the base-emitter voltage of Q706, prevents saturation of the output device.

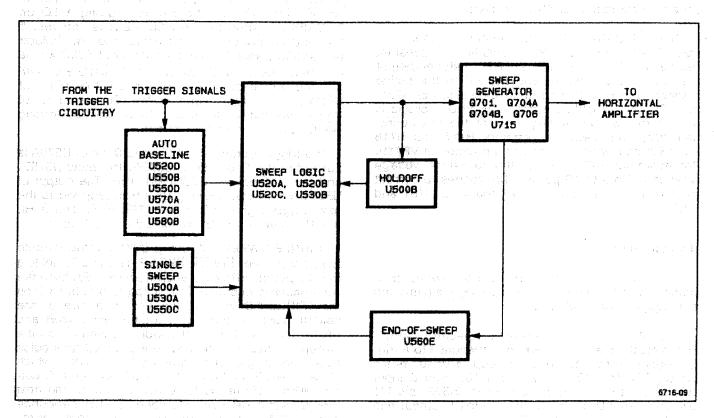


Figure 3-3. Block diagram of the Sweep Generator and Logic.

The sweep ramp starts when Q536 is biased off. The GATE signal going to the base of Q701 from the Sweep Logic circuit turns Q701 off. The timing capacitors then begin charging at a rate set by timing resistors R701, R702 and the position of the SEC/DIV switch S701. One end of timing resistor R701 is connected to the wiper of R721 and the other end is connected to the input of the Miller integrator. Due to feedback from the circuit output through the timing capacitors, the integrator input voltage at the gate of Q704A remains fixed and sets a constant voltage across the timing resistors. This constant voltage produces a constant charging current through the timing capacitors, which results in a linearly increasing voltage ramp at the output of the Miller Sweep circuit.

When the ramp reaches about 12 V, the Sweep Logic circuitry starts the holdoff period in which Q701 is turned on and the Sweep Generator is reset. This holdoff period is necessary so that the timing capacitors can be fully discharged before another sweep starts. Capacitors C704 and C703 are always in the charging circuit and are used for high sweep speeds. For medium sweep speeds, capacitors C701 and C702 are in series. For slow sweep speeds, only capacitor C701 is used.

The SEC/DIV Variable circuitry uses an operational amplifier to maintain a constant reference voltage at one end of R721 independent of the circuit load. The voltage applied to the timing resistors varies with the rotational position of R721, the SEC/DIV Variable control. A fixed dc voltage is applied to the noninverting input of the operational amplifier, and feedback resistors R717 and R718 establish double that voltage at the anode of VR719. Potentiometer R722 adjusts the reference voltage when in 0.5 ms to 10 µs SEC/DIV ranges to correct for mismatch between timing capacitors C701 and C702.

Sweep Logic

The Sweep Logic circuitry controls sweep generation, as a function of incoming trigger signals and the Trigger mode selected.

NORM. When NORM trigger is selected, the circuit is ready to start the sweep in response to a trigger signal. At the start of the sweep, a U530B has a LO on SET (pin 12), RESET (pin 13), and D input (pin 10). A trigger pulse received at U530B (pin 11) will clock the LO on the D input to the Q output and enable the sweep to start. The output of the sweep generator is fed back via W701-4 into the potential divider R501 and R502. This divider is arranged so that when the ramp voltage reaches about 12 V, U560E is turned on, producing a LO on the input of

inverter U520A. The inverted signal of U520A is applied to the input of U520B. The signal from U520B is inverted by U520C to produce an OR function, then fed to the SET input (pin 12) of U530B. This overrides the CLOCK input of U530B and puts a HI on the Q output (pin 15), resetting the sweep. The sweep reset is also fed to the input (pin 12) of the monostable U500B, which gives a holdoff time dependent on the holdoff capacitor selected and the variable holdoff resistor chain. The holdoff pulse from the monostable maintains the HI on the SET input of U530B until the end of the holdoff period, then the SET is driven LO, allowing the next trigger pulse to start the sweep.

P-P AUTO. In the P-P AUTO mode, the sweep will free-run in the absence of a trigger signal. Should there be more than 50 ms between trigger pulses, the Auto Baseline circuitry consisting of U580B, U520D, U570A and U570B will start a sweep. U580B is a 20 Hz clock pulse generator. This signal is passed through Schmitt trigger U520D to provide a fast rise time. This is to ensure that both D inputs of U570A and U570B switch at the same time.

With no trigger signal, the first clock pulse from U580B resets U570A, putting a HI on D input of U570B. This will then be clocked (giving a LO on TRIGGERED) when the next 50 ms pulse arrives. If the end of sweep has occurred and the holdoff period has elapsed, then the output of U520C will be LO. Because TRIGGERED and P-P AUTO are both LO, the output of U550D will put a LO on pin 7 of U550B. As the other input is also LO, the output of U550B will put a HI on pin 13 of U530B, forcing GATE LO and starting a sweep.

If a trigger occurs, the HI on the D pin of U570A is passed to the Q output of U570A, to resets U570B, and put a HI on the TRIGGERED line. The output of U550B will be LO, allowing U530B to respond to the next trigger signal. When the TRIGGERED line is HI, the TRIG'D/READY LED is turned on via U550A.

SINGLE SWEEP. When the SINGLE SWEEP mode is selected, the SINGLE SWEEP line is LO, holding the D input of U570A LO and effectively disabling the Auto Baseline circuitry. This action also puts a LO on the TRIGGERED line. At the end of a sweep, the holdoff pulse is latched by U530A via U520B and U550C, and the D input of U530B is driven HI and the sweep is disabled. The sweep is enabled by a pulse from the single shot monostable U500A, which clocks the LO on the D input of U530A to the Q output. With a LO at the Q output of U530A, the next trigger signal will start a sweep. Switch debounce circuit U500A along with the timing components R506 and C506 will give a pulse width of about 30 ns, which is shorter than the fastest sweep speed. U500A also sets U510B turning on the TRIG'D/READY LED via U550A. When the holdoff period starts (and U500A has timed out), U500B will clock a LO back onto the Q output of U540B, allowing the TRIG'D/READY LED to be extinguished.

X-Y. In the X-Y mode of operation, the \overline{XY} line is LO, holding the input of U520A LO through CR521. The output of U520A via U520B and U520C will hold U530B set and no sweep can be started.

HORIZONTAL

The Horizontal Amplifier circuit, shown on Diagram 5 provides the output signals that drive the horizontal crt deflection plates. Signals applied to the Horizontal Preamplifier can come from either the Miller Sweep Generator (for sweep deflection) or from the XY Amplifier (when X-Y display mode is selected). See Figure 3-4 for the block diagram of the Horizontal Amplifier.

The Horizontal Position control, X10 magnifier circuitry, and the horizontal portion of the Beam Find circuitry are also contained in the Horizontal Amplifier Circuit.

X-Y Amplifier

In the X-Y mode of operation, the XY signal (buffered by Q736) is low, biasing Q732 in the linear region. Transistors Q732 and Q737 are a transconductance amplifier that changes an input voltage to output current. The input signal is applied through gain adjust R395. The X Offset adjustment is R736. The signal current flowing out of Q737 is fed into the shunt feedback stage. The sweep is held at a constant low output level when in X-Y mode.

When in sweep mode, the \overline{XY} line is high and biases Q732 off, that biases Q737 off and disables the XY amplifier. The \overline{XY} line also turns on U380B, thereby not allowing the X axis signal to get to the amplifier. The sweep signal is applied through R740 and the gain setting resistor (R744) to the Horizontal Preamplifier stage.

Horizontal Preamplifier

The Horizontal Preamplifier amplifies input signals for application to the Horizontal Output Amplifier.

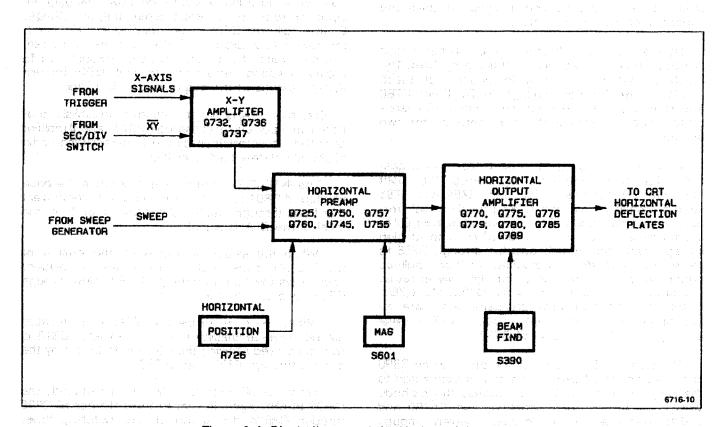


Figure 3-4. Block diagram of the Horizontal Amplifier.

The preamplifier is a cascode differential pair. The gain is set by the network connected between pins 7 of U755C and 10 of U755D. With MAG switch S601 in X1, the X1 MAG line is high, Q760 and U745E are off, and the current sources consisting of U745A and U755A are on for normal operation with the gain set by R763. When MAG switch is X10, the X1 MAG signal is LO, Q760 and U745E saturate, and the current sources consisting of U755B and U745B are on. This forward biases CR773 and CR774, a low impedance is switched in, and the X10 timing adjustment is made using X10 Mag Gain R777. Magnifier registration is adjusted by R782 so that there is no horizontal trace shift when switching between the X10 and X1 positions. The X1 MAG line is held at a constant high when in X-Y mode.

The sweep signal, or the X-Axis signal (depending on mode of operation) with the horizontal position signal from R726, is buffered by Q750 and Q759 and applied pin 6 of U745C. Pin 9 of U745D is held to a fixed voltage level by Q725. The horizontal position signal adjusts the trace horizontally in both the sweep and X-Y modes.

Horizontal Output Amplifier

The Horizontal Output Amplifier provides final amplification of the horizontal signal to drive the horizontal crt deflection plates.

Signals from the Horizontal Preamplifier circuit are used to drive two shunt feedback amplifiers. The feedback makes the input impedance of these amplifiers low. The base voltages of Q770 and Q780 are at nearly the same dc level due to forward-biased diodes CR781 and CR791 between the two emitters.

Transistors Q770, Q775, and Q779 form a cascode feedback amplifier for driving the right horizontal crt deflection plate with R784 and R785 setting amplifier gain and C783 providing high frequency compensation. For low-speed signals Q779 serves as a current source for Q775, and at high sweep rates, the ramp is coupled through C785 to the emitter of Q779. This provides additional pull-up output current to drive the crt at high sweep rates. The amplifier, consisting of Q780, Q785, and Q789, drives the left horizontal crt deflection plate as described above with zener diode VR792 level shifting the collector signal of Q780.

The BEAM FIND function is turned on when S390 is closed and the Beam Find signal is connected to the negative supply. Q776 saturates, the cathode voltage of VR776 goes negative, and CR780 and CR890 become forward biased. Current though these diodes causes the output common-mode

voltage of the two shunt-feedback amplifiers to be shifted positively to reduce the available voltage swing at the crt plates. This prevents the trace from being deflected off-screen horizontally.

Z-AXIS AMPLIFIER

The Z-Axis Amplifier, shown on Diagram 7, controls the crt intensity level via several input-signal sources. The effect of these input signals is either to increase or decrease trace intensity or to completely blank portions of the display. The Z-Axis signal current, as determined by the Z-Axis switching logic and the input current from the EXT INPUT OR Z connector (if in use), are summed at the emitter of common-base amplifier Q825 and thereby sets the collector current of the stage. The common-base amplifier provides a low-impedance termination for the input signals and isolates the signal sources from the rest of the Z-Axis Amplifier.

Common-base transistor Q829 passes a constant current through R832. This current is divided between Q825 and Q829, with the portion through Q829 driving the shunt-feedback output amplifier formed by Q835, Q840, and Q845. The bias level of Q825 therefore controls the emitter current available to Q829. The shunt feedback-resistors of R841 and R843 sets the transresistance gain for changing the input current to a proportional output voltage. Emitter-follower Q835 is dc coupled to Q840 and, for low-speed signals, Q845 acts as a current source. Fast transitions couple through C845 providing added current gain through Q845 for fast voltage swings at the output of the Amplifier.

External Z-Axis input voltages establish proportional input currents through R823, and Amplifier sensitivity is determined by the transresistance gain of the shunt-feedback amplifier.

The INTENSITY potentiometer controls the base voltage of Q804 to set the amount of emitter current that flows through that transistor and, therefore, the level of the Z-Axis signal.

When the sweep is displayed, the emitter of Q817 is LO, causing CR817 to be reverse biased. This allows the current through R818 to flow through CR818 and turn on the Z-Axis.

When X-Y is displayed, CR817 is forward biased, reverse biasing CR818. Transistor Q818 is reverse biased allowing the intensity to be set by the current through R820 and CR820.

When CHOP VERTICAL MODE is selected, the CHOP BLANK signal is sent to the collector of Q825 through CR824 during the display-switching time. Diode CR825 is reverse biased and the forward bias

of Q829 rises to the blanking level. When blanked, the output of the Z-Axis Amplifier drops to reduce the crt beam current below viewing intensity.

When the BEAM FIND button is pressed, the BEAM FIND line goes to about -8V sinking about 1 mA from the Z-Axis Amplifier, over-riding any other current combinations, and therefore unblanking the trace.

DC Restorer

The DC Restorer circuit sets the crt control-grid bias and couples the ac and dc components of the Z-Axis Amplifier output to the crt control grid. Direct coupling of the Z-Axis Amplifier output to the crt control grid is not employed because of the high potential differences involved. Refer to Figure 3-5 during the following discussion.

Ac drive to the DC Restorer circuit is obtained from pin 3 of T902. The drive voltage has an ac peak amplitude of about 100V, at a frequency of about 20 kHz and is coupled into the DC Restorer circuit through C853 and R853. The cathode of CR851 is biased by the wiper voltage of Grid Bias potentiometer R851, and the ac drive voltage is clamped whenever the positive peaks reach a level that forward biases CR851.

The Z-Axis Amplifier output voltage, which varies between +10 V and +75 V, is applied to the DC Restorer at the anode of CR853. The ac drive voltage holds CR853 reverse biased until the voltage falls below the Z-Axis Amplifier output voltage level. At that point, CR853 becomes forward biased and clamps the junction of CR851, CR853, and R854 to the Z-Axis output level. Thus, the ac-drive voltage is clamped at two levels to produce a square-wave signal with a positive dc-offset level.

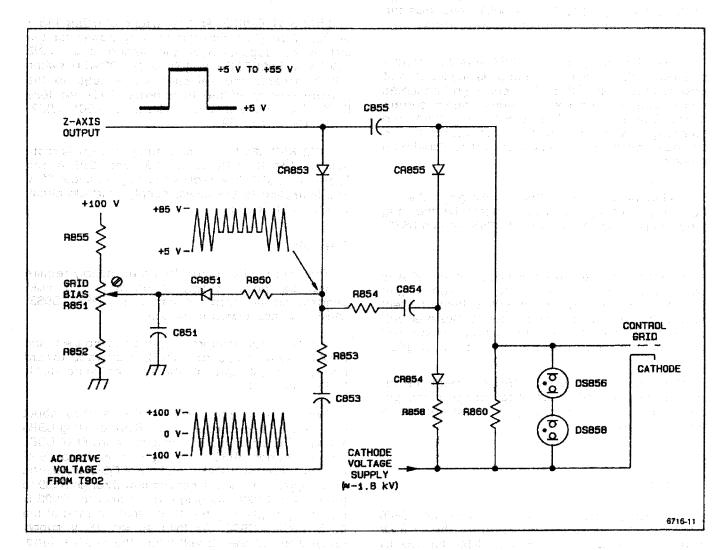


Figure 3-5. Simplified diagram of the Dc Restorer.

The DC Restorer is referenced to the -1.8 kV crt cathode voltage through R858 and CR854. Initially, both C855 and C854 charge up to a level determined by the difference between the Z-Axis output voltage and the crt cathode voltage. Capacitor C855 charges from the Z-Axis output through R858, CR854, and CR855, to the crt cathode. Capacitor C854 charges through R858, CR854, R854, and CR853 to the crt cathode.

During the positive transitions of the ac drive, from the lower clamped level toward the higher clamped level, the charge on C854 increases. The voltage increase across C854 is equal to the amplitude of the positive transition. The negative transition is coupled through C854 to reverse bias CR854 and to forward bias CR855. The increased charge of C854 is then transferred to C855 as C854 discharges toward the Z-Axis output level. Successive cycles of the ac input to the DC Restorer charge C855 to a voltage equal to the initial level plus the amplitude of the clamped square-wave input.

The added charge held by C855 sets the controlgrid bias voltage. If more charge is added to that already present on C855, the control grid becomes more negative, and less crt writing-beam current flows. Conversely, if less charge is added, the control-grid voltage level becomes closer to the cathode-voltage level, and more crt writing-beam current flows.

During periods that C854 is charging, the crt control-grid voltage is held constant by the long time-constant discharge path of C855 through R860.

Fast-rise and fast-fall transitions of the Z-Axis output signal are coupled to the crt control grid through C855 to start the crt writing-beam current toward the new intensity level. The DC Restorer output level then follows the Z-Axis output-voltage level to set the new bias voltage for the crt control grid.

Neon lamps DS858 and DS856 protect the crt from excessive grid-to-cathode voltage if the potential on either the control grid or the cathode is lost for any reason.

CRT Supply

The voltage doubler of CR975, CR976, and C980 produces -1.8 kV for the crt cathode. The -1.8 kV supply is filtered by a low-pass filter formed by R976, R978, C976, and C979.

Focus Circuit

Focus voltage is developed from the -1.8 kV supply by a voltage divider formed by R894 and R892 and FOCUS potentiometer R893.

POWER SUPPLY AND PROBE ADJUST

The Power Supply circuitry converts the ac power line voltage into the voltages needed for instrument operation. It consists of Ac Power Input, Start-Up, Current Control, Regulator, and Inverter circuits on the primary side of the high frequency power transformer. The secondary side of the high frequency power transformer provides the necessary supply voltages for the instrument. See Figure 3-6 for the block diagram of the Power Supply.

Ac Power Input

LINE SWITCHING. Ac line voltage of either 115 V or 230 V may provide the primary power for the instrument, depending on the setting of the LINE VOLTAGE SELECTOR switch S902. POWER switch S901 connects the selected line voltage to the primary winding of the transformer T901 via fuse F901. The ac line voltage is filtered by L901, L902, C903, C904, and C905.

LINE RECTIFIER. The secondary of T901 is rectified by CR901, CR902, CR903, and CR904 and filtered by C900. The rectified voltage is about 60 V and is applied to the power supply Start-Up circuit and Current Source.

Start-UP

The control circuits for the power supply require a separate power supply to operate. The independent power supply consists of Q982, Q985, Q988, and associated components.

Initially, when instrument power is applied, the positive plate of capacitor C982 is charged toward the 60 V supply through the resistor string R984, R983, and R970.

When the voltage across C982 reaches about 45 V, a 3 V drop occurs across R987 causing Q985 and Q988 to conduct. The collector current of Q985 passes through VR982, placing 16 V at the base of the emitter follower Q982. Emitter of Q982 drives the 15 V supply. This allows current flow through R989 to the base of Q988, keeping it on. Transistor Q988 is now being kept on by the 15 V supply instead of the 45 V across C982. As long as the 15 V supply remains above the 12 volt level, the positive feedback through R989 will keep Q988 saturated.

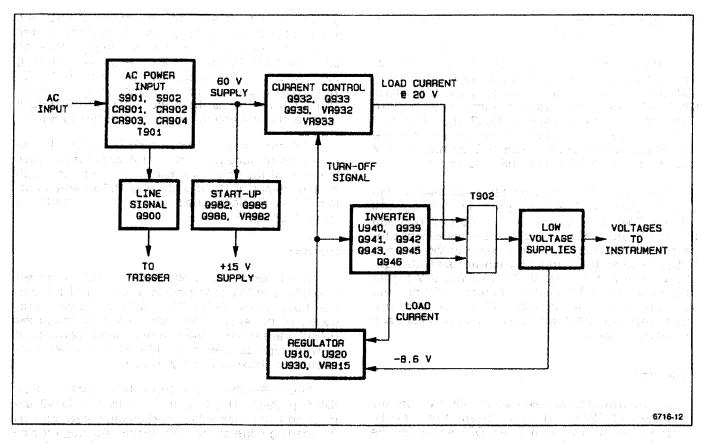


Figure 3-6. Block diagram of the Power Supply.

After the initial startup, current passed by Q982 is applied through CR980 via R971 and R980 instead of C982. If there is not enough current to C982, the 15 V supply will drop below the 12 V level turning off Q982, Q985 and Q988.

Current Source and Current Switching

The Current Source and Current Switching circuits provides a regulated dc current that produces 20 V for the high frequency power transformer T902 from the 60 V supply.

CURRENT SOURCE. The Current Source circuit is made up of power MOSFET Q933, inductor L950 and associated components. This circuit provides a triangle-shaped current pulse on top of the dc current (about 1.5 A) to transformer T902. The peak amplitude of the triangle-shaped current pulse is determined by the load requirements. The rise time varies with the voltage level of the 60 V (45 V to 75 V); the fall time is fixed at 8 μs.

A triangle current signal is developed across L950 by the switching of Q933. With MOSFET Q933 turned on, the 60 V supply from the line rectifier is

applied to one end of L950 via Q933. The other end of L950 is held to 20 V by the capacitive load that is reflected through the high frequency power transformer T902. With a 40 V difference across L950, the current in the inductor increases (rising portion of the triangle-shaped current pulse) until Q933 is turned off by the Current Switch circuit. With Q933 turned off, the stored current in L950 will continue to flow to the center tap of T902. The current decreases with the falling portion of the triangle current pulse. Diode CR950 becomes forward biased clamping Q933 drain to ground. This puts 20 V across L950, opposing the current flow. When Q933 turns on, CR950 becomes reversed biased and 60 V supply is applied to L950 again.

CURRENT SWITCHING. The Current Switching circuit applies the TURN OFF signal from the Regulator circuit to the Current Source circuit. The TURN OFF signal controls the load current through L950. The circuit consist of Q935, Q932, and associated components.

When the power is first turned on, C933 is uncharged and the emitter voltage of Q935 is LO (0 V). Capacitor C933 quickly charges toward the 60 V supply through VR932 and VR933. When C933 is

charged to the 60 V supply, the source-gate voltage of Q933 is 0 V, turning it off.

Eventually, the 15 V supply comes up. The TURN OFF signal at the base of Q935 goes LO due to insufficient current passing through L950. Transistor Q932 will now start draining some charge from C933, reducing the voltage on C933 enough to turn on Q933. C933 continues to discharge until the voltage across the source—gate of Q933 reaches 9 V causing zeners VR932 and VR933 to conduct.

When the current through L950 reaches a high enough value, the TURN OFF signal to Q935 goes HI (15 V). The 15 V is applied to one end of C933 through Q935. Since the voltage across a capacitor cannot change instantly, the voltage at the top end of C933 makes the same 15 V upward step change. The voltage at the gate of Q933 is now 6 V higher than its source (60 V supply), turning Q933 off. The 15 V level also turns off Q932. When the TURN OFF signal goes LO, Q932 and Q933 turns on again and the cycle repeats.

Regulator

The Regulator Circuit senses the -8.6 V from the secondary of T902 and load current from the inverter circuit to develop a TURN OFF signal for the Current Control and Inverter circuits.

The -8.6 V from the secondary is applied to one end of R916 -8.6 V potentiometer. The potentiometer R916 sets the reference voltage for U910B. The dc error voltage from U910B is filtered for any ac components by capacitor C925. Zener VR925 clamps the dc error voltage to 3 V and limits the amount of load current from the Current Source to about 3 amps. The dc error voltage is applied to pin 2 of Comparator U920.

The dc error voltage is proportional to the power requirements of the load. For instance, an increase in the load will lower the -8.6 V increasing the amplitude of the dc error voltage. An increase in the amplitude of the dc error voltage means that more current is needed to maintain the -8.6 V level.

Load current from Inverter circuitry is converted to a voltage level by R910 and applied to pin 3 of U910A. The voltage amplification of U910A is 1 V per ampere of load current. This voltage level represents the instantaneous value of load current.

The voltage level on pin 3 of U920 is compared to the dc error voltage on pin 2 of U920. As long as the voltage level on pin 3 remains below the dc error voltage on pin 2, the output of U920 will be high. The high from U920 will not trigger the monostable pulse

generator U930. This will hold the output of U930 in a low state and keep Q933 turned on. The load current will continue to increase until the voltage level on pin 3 exceeds the dc error voltage on pin 2 causing the output of U920 to change state from HI to LO. This LO is applied to pin 2 (trigger input) of U930. The TURN OFF signal from the output of U930 goes HI for a predetermined length of time (about 8 μs).

With the Current Source (Q933) turned off, the load current voltage from U910A decreases below the level of the dc error voltage. This will put a high on the output of U920 and, when U930 times out, the TURN OFF signal goes back to LO and starts the cycle over again.

Inverter

The Inverter circuit alternately switches current through each leg of the primary winding of the output transformer T902. This switching action produces ac currents in the secondary windings of the output transformer. The inverter circuit consists of D-type, flip-flop switches and power switches connected as discrete Darlington pairs.

The TURN OFF signal from U930 clocks D-type flip-flop U940. The Q and Q output of U940 are inverted from each other, and change state only on the leading edge of the clock signal. Although the on time of the pulse generator is not identical to the off time, the period of the on time plus the off time is the same from one cycle to the next. The output switching of U940 will produce a square wave with a 50% duty cycle to the inverter switches.

The two outputs of U940 are applied to the drivers Q939 and Q943. The drivers turn the power switches (Q941 and Q942) (Q945 and Q946) on and off alternately to produce an ac voltage in the secondary winding of the output transformer.

When Q output of U940 goes HI, power switch Q939 conducts and pulls the collector and one end of R941 to 0 V. The base of Q941 and Q942 goes to -2 V causing the emitter-base to become reverse biased turning the inverter switch off. When Q output goes LO, Q939 turns off and inverter switch emitter to base becomes forward biased, turning it on. The output of \overline{Q} performs in the same way as Q output for the other leg of the primary winding of the output transformer.

Low-Voltage Supplies

The secondary windings of T902 provides various ac voltages for rectification. The 200 V supply uses a voltage doubler consisting of CR983, CR984, C985, and C983. The 100 V is rectified by CR985 and filtered by C984. The diode bridge consisting of

CR986, CR987, CR988, and CR989 produces the 8.6 V and -8.6 V. Filtering of the 8.6 V is done by C986, C987 and L986; filtering of the -8.6 V is done by C988, C989 and L988. The 5.2 V supply is produced by CR990 and CR991 and filtered by C990, C991, and L990.

CRT Supply

The 900 V from the high-voltage winding of T902 is doubled by C980, CR975, and CR976 to produce -1.8 kV for the crt cathode. The -1.8 kV supply is filtered by a low-pass filter formed by R976, R978, C976, and C979. Neon lamps DS853 and DS856 protect against excessive voltage between the crt cathode and crt grid by conducting if the difference exceeds about 180 V.

Focus Circuit

Focus voltage is also developed from the -1.8 kV supply by a voltage divider formed by R892, R894, FOCUS potentiometer R893, R888, R889, R890, and R891.

Line Signal

Transistor Q900 is a floating differential amplifier with a dc bias network comprising R905, R904 and R902. Resistors R906 and R903 apply a small line frequency signal from the secondary of T901 to the base-emitter junction of Q900. The resultant collector current of Q900 is a line-frequency sine-wave that is applied to the trigger circuit.

Probe Adjust

The Probe Adjust circuitry, shown on Diagram 4, is a square-wave generator and diode switching network that produces a negative-going square-wave signal at PROBE ADJUST connector J590. Amplifier U580a forms a multivibrator that has an oscillation period set by the time constant of R587 and C587. When the output of the multivibrator is at the positive supply voltage, CR588 is forward biased. This reverse biases CR589, and the PROBE ADJUST connector signal is held at ground potential by R590. When the multivibrator output switches states and goes to the negative supply voltage level, CR588 is reverse biased. Diode CR589 becomes forward biased, and the circuit output level drops to about -0.5V.

A service of the control of the c

State of the state of

(4) Link the content of the property of the property of the content of the

HES AT BUILT

Miller of the control of the Control

aj dud

PERFORMANCE CHECK PROCEDURE

INTRODUCTION

PURPOSE

The Performance Check Procedure is used to verify the instrument's Performance Requirements statements listed in Table 1-1 and to determine the need for calibration. The performance checks may also be used as an acceptance test or as a preliminary troubleshooting aid.

PERFORMANCE CHECK INTERVAL

To ensure instrument accuracy, check its performance after every 2000 hours of operation, or once each year if used infrequently. A more frequent interval may be necessary if the instrument is subjected to harsh environments or severe usage.

STRUCTURE

The Performance Check Procedure is structured in subsections to permit checking individual sections of the instrument whenever a complete Performance Check is not required. At the beginning of each subsection there is an equipment–required list showing only the test equipment necessary for performing the steps in that subsection. In this list, the Item number that follows each piece of equipment corresponds to the Item number listed in Table 4–1.

Also at the beginning of each subsection is a list of all the front-panel control settings required to prepare the instrument for performing Step 1 in that subsection. Each succeeding step within a particular subsection should then be performed, both in the sequence presented and in its entirety, to ensure that control-setting changes will be correct for ensuing steps.

TEST EQUIPMENT REQUIRED

The test equipment listed in Table 4-1 is a complete list of the equipment required to accomplish both the Performance Check Procedure in this section and the Adjustment Procedure in Section 5. Test equipment specifications described in Table 4-1 are the minimum necessary to provide accurate results. Therefore, equipment used must meet or exceed the listed specifications. Detailed operating instructions for test equipment are not given in this procedure. If more operating information is required, refer to the appropriate test equipment instruction manual.

When equipment other than that recommended is used, control settings of the test setup may need to be altered. If the exact item of equipment given as an example in Table 4-1 is not available, check the Minimum Specification column to determine if any other available test equipment might suffice to perform the check or adjustment.

LIMITS AND TOLERANCES

The limits and tolerances given in this procedure are valid for an instrument that is operating in and has been previously calibrated in an ambient temperature between +20°C and +30°C. The instrument also must have had at least a 20-minute warm-up period. Refer to Table 1-1 for tolerances applicable to an instrument that is operating outside this temperature range. All tolerances specified are for the instrument only and do not include test-equipment error.

PREPARATION FOR CHECKS

It is not necessary to remove the instrument cover to accomplish any subsection in the Performance Check Procedure, since all checks are made using operator-accessible front— and rearpanel controls and connectors.

The most accurate display checks are made with a stable, well-focused, low-intensity display. Unless otherwise noted, adjust the INTENSITY, FOCUS, and Trigger LEVEL controls as needed to view the display.

Table 4-1

Test Equipment Required

Item and Description	Minimum Specification	Purpose	Example of Suitable Test Equipment
Calibration Generator	Standard-amplitude signal levels: 5 mV to 50 V. Accuracy: ±0.3%.	Signal source for gain and transient responses.	TEKTRONIX PG 506 Calibration Generator. ^a
of every like the control	High-amplitude signal levels: 1 V to 60 V. Repetition rate: 1 kHz.		
a de la France de la Participa de la Participa La Participa de la Participa de	Fast-rise signal level: 1 V. Repetition rate: 1 MHz. Rise time: 1 ns or less. Flatness: ± 0.5%.		et i den de Libert en en la pure un de la rocigiose la se un gridha sincarescan
2. Leveled Sine-Wave Generator	Frequency: 250 kHz to above 100 MHz. Output amplitude: variable from 10 mV to 5 V p-p. Output impedance: 50 Ω. Reference frequency: 50 kHz. Amplitude accuracy: constant within 3% of reference frequency as output frequency	Vertical, horizontal, and triggering checks and adjustments. Display adjustments and Z-Axis check.	Leveled Sine-Wave Generator. ^a
ATTERNAL MINISTER OF Y	changes.	The factor of the second of th	nzanta a kasa — Landa <u>et</u> Lak
3. Time-Mark Generator	Marker outputs: 10 ns to 0.5 s. Marker accuracy: ±0.1%. Trigger output: 1 ms to 0.1 μs, time-coincident with markers.	Horizontal checks and adjustments. Display adjustment.	TEKTRONIX TG 501 Time-Mark Generator.*
Test Oscilloscope with 10X Probes	Bandwidth: dc to 50 MHz, Minimum deflection factor: 5 mV/div. Accuracy: ±3%.	General troubleshoot- ing, holdoff check.	TEKTRONIX 2225 Oscilloscope.
5. Digital Voltmeter (DMM)	Range: 0 to 250 V. Dc voltage accuracy: ± 0.15%, 4-1/2 digit display.	Power supply checks and adjustments. Vertical adjustment.	TEKTRONIX DM 501A Digital Multimeter. ^a
6. Coaxial Cable (2 required)	Impedance: 50 Ω. Length: 42 in. Connectors: BNC.	Signal interconnection.	Tektronix Part Number 012-0057-01.
7. Dual Input Coupler	Connectors: BNC female-to- dual-BNC male.	Signal interconnection.	Tektronix Part Number 067-0525-01.
8. Termination	Impedance: 50 Ω Connectors: BNC.	Signal termination.	Tektronix Part Number 011-0049-01.
9. 10X Attenuator	Ratio: 10X. Impedance: 50Ω . Connectors: BNC.	Vertical compensation and triggering checks.	Tektronix Part Number 011-0059-02.
10. Adapter	Connectors: Miniature probe tip to BNC adapter.	Signal interconnection.	Tektronix Part Number 013-0084-02.
11. Alignment Tool	Length: 1-in. shaft. Bit size: 3/32 in. Low Capacitance: insulated.	Adjust variable capacitors.	Tektronix Part Number 003-0675-00.
12. 10X Probe	Bandwidth: 50 MHz. Length: 2 m.	Probe Adjust check.	Tektronix P6103

Requires a TM 500-Series Power Module.

INDEX TO PERFORMANCE CHECK STEPS	3. Check Variable Range 4-7 4. Check X Gain 4-7
Vertical Page	5. Check X Bandwidth 4-7
1. Check Deflection Accuracy and	Trigger
Variable Range	 Check Internal Triggering
Horizontal	External Z-Axis and Probe Adjust
 Check Timing Accuracy and Linearity 4-6 Check Position Range	 Check External Z-Axis Operation
enada se meneral trade de la forese de la composition della compos	
- PCHMAR A FAMILY A	Application — Facility III (1865) Magnifest of State (1865) Magnifest of State (1865)
end on early one of the first of the industries with a second of the sec	Kamasak Well gala ay ni hali ya wwiffid Kib. Kamasak Well ya Kamasak Maria da Kamasa Maria
And the second of the second o	は、Angle Angle An
	in expel·e \$
The managed All The Control of the C	
a digate i septembro ke seriat septembro di	A NATION OF THE CONTRACT OF TH
Contained to the second of the	u vidake into such a tiplomatik a
A CONTROL OF THE CONT	THE DISTRIBUTE OF THE SECOND O
	age. So the server of the fine of a server of
	報 (procession of the procession of the action of the self-cate of the se
LED CERT CONTROL CONTR	Exemple 1. The second of the s

VERTICAL: Prise in the contract of the contrac

Equipment Required (See Table 4-1):

Calibration Generator (Item 1)
Leveled Sine-Wave Generator (Item 2)

Dual-input Coupler (Item 7) $50-\Omega$ Termination (Item 8)

 $50-\Omega$ Coaxial Cable (Item 6)

INITIAL CONTROL SETTINGS

Vertical

POSITION (both)	Midrange
MODE	CH 1,NORM
VOLTS/DIV (both)	5 mV
VOLTS/DIV Variable (both)	CAL detent
AC-GND-DC	DC

Horizontal

POSITION	Midrange
MAG	X1
SEC/DIV	0.5 ms
SEC/DIV Variable	CAL detent

Trigger

SLOPE	Positive (ノー)
LEVEL	Midrange
MODE	P-P AUTO
SOURCE	VERT MODE

PROCEDURE STEPS

1. Check Deflection Accuracy and Variable Range

- a. Connect a 20-mV standard-amplitude signal from the calibration generator via a 50- Ω coaxial cable to the CH 1 OR X input connector.
- b. CHECK—Deflection accuracy is within the limits given in Table 4-2 for each CH 1 VOLTS/DIV switch setting and corresponding standard-amplitude signal. When at the 20-mV VOLTS/DIV switch setting, rotate the CH 1 VOLTS/DIV Variable control fully counterclockwise and check that the display decreases to 2 divisions or less. Then return

the CH 1 VOLTS/DIV Variable control to the CAL detent and continue with the 50-mV check.

- c. Move the cable from the CH 1 OR X input connector to the CH 2 OR Y input connector. Set the Vertical MODE switch to CH 2.
 - d. Repeat part b using the Channel 2 controls.
- e. Disconnect the test equipment from the instrument.

2. Check Bandwidth

a. Set:

VOLTS/DIV	(both)	5 mV
SEC/DIV		10 ms

Table 4-2 Deflection Accuracy Limits

VOLTS/DIV Switch Setting	STANDARD Amplitude Signal	ACCURACY Limits (Divisions)
5 mV	20 mV	3.88 to 4.12
10 mV	50 mV	4.85 to 5.15
20 mV	0.1 V	4.85 to 5.15
50 mV	0.2 V	3.88 to 4.12
0.1 V	0.5 V	4.85 to 5.15
0.2 V	1 V	4.85 to 5.15
0.5 V	2 V	3.88 to 4.12
1 V	5 V	4.85 to 5.15
2 V	10 V	4.85 to 5.15
5 V	20 V	3.88 to 4.12

- b. Connect the leveled sine-wave generator output via a $50-\Omega$ coaxial cable and a $50-\Omega$ termination to the CH 2 OR Y input connector.
- c. Set the generator to produce a 50-kHz, 6-division display.
- d. Increase the signal frequency until a 4.2-division display is obtained.
- e. CHECK-The frequency is greater than 20 MHz.
- f. Repeat parts c through e for all VOLTS/DIV settings from 10 mV to 5 V, up to the output-voltage upper limit of the sine-wave generator being used.
- g. Move the cable from the CH 2 OR Y input connector to the CH 1 OR X input connector. Set the Vertical MODE switch to CH 1.
- h. Repeat parts c through e for all indicated CH 1 VOLTS/DIV switch settings, up to the output-voltage upper limit of the sine-wave generator being used.

3. Check Channel Isolation against a construction of the construct

a. Set: pure augmenting agreement the	i kin
CH 1 VOLTS/DIV CH 2 VOLTS/DIV	1 V 0 5 V
Channel 2 AC-GND-DC	GND
SEC/DIV	0.05 ms

- b. Set the generator to produce a 20-MHz, 5-division display.
- c. Set CH 1 VOLTS/DIV switch to 0.5 V for a 10-division display.
 - d. Set Vertical MODE switch to CH 2 and ALT.
- e. CHECK-The display amplitude is less than 0.1 division.

f. Move the test-signal cable from the CH 1 OR X input connector to the CH 2 OR Y input connector.

g. Set:

Vertical MODE		CH 1
Channel 1 AC-GND-DC		GND
Channel 2 AC-GND-DC		DC

- h. CHECK-The display amplitude is less than 0.1 division.
- i. Disconnect the test equipment from the instrument.

4. Check Common Mode-Rejection Ratio

a. Set:

VOLTS/DIV (be Channel 1 AC- Vertical MODE	-GND-DC (both)	10 mV DC BOTH,
ing and the second of the seco	il in the state of	NORM, and ALT

- b. Connect the leveled sine-wave generator output via a $50-\Omega$ coaxial cable, a $50-\Omega$ termination, and dual-input coupler to the CH1 OR X and CH 2 OR Y input connectors.
- c. Set the generator to produce a 10-MHz, 6-division display.
- d. Set Vertical MODE switch to CH 2 INVERT and ADD.
- e. CHECK-Display amplitude is 0.6 division or less.
- f. Disconnect the test equipment from the instrument.

HORIZONTAL

Equipment Required (See Table 4-1):

Calibration Generator (Item 1)
Leveled Sine-Wave Generator (Item 2)
Time-Mark Generator (Item 3)

 $50-\Omega$ Coaxial Cable (Item 6) $50-\Omega$ Termination (Item 8)

INITIAL CONTROL SETTINGS

Vertical

POSITION (both)	Midrange
MODE	CH 1
VOLTS/DIV (both)	0.5 V
VOLTS/DIV Variable (both) AC-GND-DC (both)	CAL detent DC

Horizontal and the second seco

POSITION	Midrange
MAG	X1
SEC/DIV	0.05 ms
SEC/DIV Variable	CAL detent

Trigger

SLOPE	The track of the	Positive (_/_)
LEVEL		Midrange
MODE		P-P AUTO
SOURCE		CH 1

PROCEDURE STEPS

1. Check Timing Accuracy and Linearity

- a. Connect 50-ns time markers from the time-mark generator via a $50-\Omega$ coaxial cable and a $50-\Omega$ termination to the CH 1 OR X input connector.
- b. Adjust the Trigger LEVEL control for a stable, triggered display.
- c. Use the Horizontal POSITION control to align the second time marker with the second vertical graticule line.

d. CHECK—Timing accuracy is within 3% (0.24 division at the tenth vertical graticule line), and linearity is within 5% (0.10 division over any 2 of the center 8 divisions).

For checking the timing accuracy of the SECI DIV switch settings from 50 ms to 0.5 s, watch the time marker tips only at the second and tenth vertical graticule lines while adjusting the Horizontal POSITION controls to line up the time markers.

- e. Repeat parts b through d for the remaining SEC/DIV and time-mark generator setting combinations shown in Table 4-3 under "X1 Normal" column.
 - f. Set:

SEC/DIV Horizontal	MAG		0.1 μs X10
Horizontal	MAG		X10

g. Select 20-ns time markers from the timemark generator.

NOTE

The 20-ns time-markers tips are rounded off and cannot be used as measurement reference points. Use the rising edge of the time markers as measurement reference points. Vertically adjust the 50% point of the time markers on the center horizontal graticule line.

h. Use the Horizontal POSITION controls to align the first time marker that is 50 ns beyond the start of the sweep with the second vertical graticule line.

- division at the tenth vertical graticule line), and linearity is within 7% (0.14 division over any 2 of the center 8 divisions). Exclude any portion of the sweep past the 50th magnified division.
- j. Repeat parts h and i for the remaining SEC/DIV and time-mark generator setting combinations shown in Table 4-3 under the "X10 Magnified" column.

Table 4–3
Settings for Timing Accuracy Checks

SEC/DIV	Time-Mark Generator Setting				
Switch Setting	X1 Normal	X10 Magnified			
0.1 μs	0.1 μs	20 ns			
0.2 μs	0.2 μs	20 ns			
0.5 μs	0.5 μs	50 ns			
1 μs	1 μs	0.1 μs			
2 μs	2 μs	0.2 μs			
5 μs	5 μ s	0.5 μs			
10 µs	10 μs	1 μs			
20 μs	20 μ s	2 μs			
50 μs	50 μs	5 μs			
0.1 ms	0.1 ms	10 μs			
0.2 ms	0.2 ms	20 μs			
0.5 ms	0.5 ms	50 μs			
1 ms	1 ms	0.1 ms			
2 ms	2 ms	0.2 ms			
5 ms	5 ms	0.5 ms			
10 ms	10 ms	1 ms			
20 ms	20 ms	2 ms			
50 ms	50 ms	5 ms			
0.1 s	0.1 s	10 ms			
0.2 s	0.2 s	20 ms			
0.5 s	0.5 s	50 ms			

2. Check POSITION Range

a. Set:

SEC DIV		0.1	ms
Horizontal	MAG	X1	

- b. Select 0.1 ms time markers from the time-mark generator.
- c. CHECK—The start of the sweep can be positioned to the right of the center vertical graticule line by rotating the Horizontal POSITION control fully clockwise.
- d. CHECK—The tenth time marker can be positioned to the left of the center vertical graticule line by rotating the Horizontal POSITION control fully counterclockwise.
- e. Select 0.5 ms time markers from the timemark generator.
- f. Align the 3rd time marker with the center vertical graticule line using the Horizontal POSITION control.
 - g. Set the Horizontal MAG switch to X10.
- h. CHECK—Magnified time marker can be positioned to the left of the center vertical graticule line by rotating the Horizontal POSITION control fully counterclockwise.
- i. CHECK—Start of the sweep can be positioned to the right of the center vertical graticule line by rotating the Horizontal POSITION control fully clockwise.

3. Check Variable Range

- a. Set the Horizontal MAG switch to X1 and center the display.
- b. Set the SEC/DIV Variable control fully counterclockwise.
- c. CHECK—The spacing between time markers is 2 divisions or less.
- d. Return the SEC/DIV Variable knob to the CAL detent position.
- e. Disconnect the test equipment from the instrument.

4. Check X Gain

a. Set:

VOLTS/DIV (both) 1
SEC/DIV 2

10 mV X-Y

b. Connect a 50-mV, standard-amplitude signal from the calibration generator via a $50-\Omega$ coaxial cable to the CH 1 OR X input connector.

- c. CHECK—The display is between 4.85 and 5.15 divisions.
- d. Disconnect the test equipment from the instrument.

5. Check X Bandwidth

a. Set both channels VOLTS/DIV switches to 50 mV.

- b. Connect the leveled sine-wave generator output via a $50-\Omega$ coaxial cable and a $50-\Omega$ termination to the CH 1 OR X input connector.
- c. Set the generator to produce an 8-division horizontal display at an output frequency of 50 kHz.
- d. Increase the output frequency until the X-Axis (horizontal) deflection amplitude is 5.7 divisions.
 - e. CHECK-The frequency is 2 MHz or greater.
- f. Disconnect the test equipment from the instrument.

TRIGGER

Equipment Required (See Table 4-1):

Leveled Sine-Wave Generator (Item 2) 50-Ω Coaxial Cable (Item 6)

Dual-Input Coupler (Item 7) 50- Ω Termination (Item 8)

SECRETARIA SETTINGS OF A SECRETARIA SETTINGS OF A SECRETARIA SECRE

Vertical

POSITION (both)	dialate nga	Midrange
MODE		CH 1, NORM
CH 1 VOLTS/DIV		0.1 V
CH 2 VOLTS/DIV		1 V
VOLTS/DIV Variable	(both)	CAL detent
AC-GND-DC (both)	, ,	DC
i farth. Ét	response	gēdai azodu

Horizontal

	(COARSE	and	FINE)	Midrange
MAG SEC/DIV				X1
SEC/DIV	/ariable		1500a.	0.2 ms CAL detent

Trigger&ork...(Left extra, make) puedati : makeja iskuri a ti ottorenaj linakaty od totor

SLOPE		- 4 55	Positive (_/_)
LEVEL			Midrange
MODE	Walter St.		P-P AUTO
SOURCE			VERT MODE

PROCEDURE STEPS

1. Check Internal Triggering

- a. Connect the leveled sine–wave generator output via a 50– Ω coaxial cable and a 50– Ω termination to the CH 1 OR X input connector.
- b. Set the generator to produce a 3-division display at an output frequency of 5 MHz.
 - c. Set channel 1 VOLTS/DIV switch to 1 V.
- d. CHECK-Stable display can be obtained by adjusting the Trigger LEVEL control for each switch

combination given in Table 4-4. Ensure that the TRIG'D light comes on when triggered.

no viernamente tiga kongres y signilar no sing oleh min

Table 4-4
Switch Combinations for Triggering Checks

Trigger MODE	Trigger SLOPE		
NORM	Pasitive		
NORM	Negative ~		
P-P AUTO	Negative ≺∟		
P-P AUTO	Positive -		

- e. Move the test-signal cable from the CH 1 OR X input connector to the CH 2 OR Y input connector. Set the Vertical MODE switch to CH 2.
 - f. Repeat part d.
 - g. Set:

SEC/DIV 0.01 ms Horizontal MAG X10

- h. Set the generator output to produce a 30-MHz, 1-division display.
 - i. Repeat part d.
- j. Move the test-signal cable from the CH 2 on Y input connector to the CH 1 on X input connector. Set the Vertical MODE switch to CH 1.
 - k. Repeat part d. and the second second
- I. Disconnect the test equipment from the instrument.

2. Check External Triggering

a. Set:

CH 1 VOLTS/DIV SEC/DIV		20 mV 0.2 ms
Horizontal MODE	and the state of the	X1
Trigger MODE		P-P AUTO
Trigger SOURCE		EXT, EXT

- b. Connect the leveled sine-wave generator output via a $50-\Omega$ coaxial cable, a $50-\Omega$ termination, and a dual-input coupler to the CH 1 OR X input connector and EXT INPUT OR Z input connectors.
- c. Set the generator to produce a 4-division (80 mV) horizontal display at an output frequency of 5 MHz.
- d. CHECK—Stable display can be obtained by adjusting the Trigger LEVEL control for each switch combination given in Table 4-4.

e. Set:

CH 1 VOLT/DIV		50 mV
SEC/DIV		0.05 ms
Horizontal MODE		MAG

- f. Set the generator to produce a 3-division (150 mV) horizontal display at an output frequency of 30 MHz.
- no **grafiepeat part d.** Professional se proposition vary a A No Relation of the same of the strong as Association
- h. Disconnect the test equipment from the instrument.

3. Check External Trigger Range

a. Set:

CH 1 VOLTS/DIV	Contract to the second	
SEC/DIV		20 ms
Trigger SLOPE		Positive
	a the second	·(_/_)

- b. Set the leveled sine-wave generator to produce a 50-kHz, 6.4-division display.
- c. Position the waveform equally about the center horizontal graticule line.

ia julijana je d. Set:

Trigger	MODE			NORM
	SOURCE			EXT, EXT

- e. CHECK—Display is triggered along the entire positive slope of the waveform as the Trigger LEVEL control is rotated.
- f. CHECK—Display is not triggered at either extreme of rotation of the Trigger LEVEL control.
- g. Set the Trigger SLOPE switch to negative $(\ \)$.
- h. CHECK—Display is triggered along the entire negative slope of the waveform as the Trigger LEVEL control is rotated.
- i. CHECK—Display is not triggered at either extreme of rotation of the Trigger LEVEL control.
- j. Disconnect the test equipment from the instrument.

4. Check Single Sweep Operation

a. Set:

CH 1 VOLTS/DIV	10 (mV.
SEC/DIV	0.5	ms
Trigger SOURCE	CH	1
Trigger SLOPE	Pos	itive
	()

- b. Connect 50-mV, standard-amplitude signal from the calibration generator via a 50- Ω coaxial cable to the CH 1 OR X input connector.
- c. Adjust the Trigger LEVEL control to obtain a stable display.

d. Set:

Channel 1 AC-GND-DC	GND
Trigger MODE	SGL SWP

- e. Press the SGL SWP RESET button. The TRIG'D/READY LED illuminates and remains on.
- f. Set the Channel 1 AC-GND-DC switch to DC.

NOTE

The INTENSITY control may require adjustment to observe the single-sweep trace.

- g. CHECK-TRIG'D/READY LED goes out and a single sweep occurs.
- h. Press the SGL SWP RESET button several times.
- the TRIG'D/READY LED illuminates briefly every time the SGL SWP RESET button is pressed.
- j. Disconnect the test equipment from the instrument.

elei Hilai Hila

andro Francisca Sea Guardia del Francia de Albardo Alb

- Property Amerikaped Avid Avid Avid Tethanis Today (1997) - Avid Maria

and tennegal keddy' yw gel faetile a

in the second of the second of

A DESCRIPTION OF THE PROPERTY OF THE PROPERTY

District the first of the state of the control of t

ing separat new page and the separation of the second contract of th

Tigoria Ministra Mini

The second of th

Commence of the Commence of th

oustralis affordation to the early to be ex-

sterpe de la site di traditione de la salva de la citone (il color de la citone de la site de la citone de la c La cita de la citone La citone de la citone della citone de la citone de la citone de la citone de la citone della citone della

EXTERNAL Z-AXIS AND PROBE ADJUST

Equipment Required (See Table 4-1):

Calibration Generator (Item 2) Two $50-\Omega$ Coaxial Cable (Item 6) Dual-Input Coupler (Item 7) 50-Ω Termination (Item 8) 10X Probe (Item 12)

INITIAL CONTROL SETTINGS

Vertical

CH 1 POSITION

Midrange

CH 1, NORM

CH 1 VOLTS/DIV

CH 1 VOLTS/DIV Variable

Channel 1 AC-GND-DC

Midrange

CH 1, NORM

1 V

CAL detent

DC

Horizontal

POSITION	Midrange
MAG	X1
SEC/DIV	20 ms
SEC/DIV Variable	CAL detent

Trigger

SLOPE	Positive (-/-)
LEVEL	Midrange
MODE	P-P AUTO
SOURCE	EXT, EXT=Z

PROCEDURE STEPS

1. Check External Z-Axis Operation

a. Connect a 5-V standard-amplitude signal from the calibration generator via dual-input coupler to the CH 1 OR X and EXT INPUT OR Z connectors.

NOTE

The INTENSITY level may need adjustment to view the intensity modulation on the displayed waveform.

- b. CHECK—For noticeable intensity modulation. The positive part of the sine wave should be of lower intensity than the negative part.
- c. Disconnect the test equipment from the instrument.

2. Check Probe Adjust Operation

a. Set:

CH 1 VOLTS/DIV	10 mV
SEC/DIV	0.5 ms
Trigger SOURCE	CH 1

- b. Connect the 10X Probe to the CH 1 OR X input connector and clip the probe tip to the PROBE connector on the instrument front panel. If necessary, adjust the probe compensation for a flat-topped square-wave display.
- c. CHECK-Display amplitude is 4.75 to 5.25 divisions.
 - d. Disconnect the probe from the instrument.

ADJUSTMENT PROCEDURE

INTRODUCTION

HORBITA OF THE SECOND OF THE PURPOSE AND AN ARCHITECTURE

The Adjustment Procedure is used to return the instrument to conformance with the Performance Requirement statements listed in Table 1-1. Adjustments contained in this procedure should only be performed after checks from the Performance Check Procedure (Section 4) have indicated a need for readjustment or after repairs have been made to the instrument.

STRUCTURE

This procedure is structured into subsections, each of which can be performed independently to permit adjustment of individual sections of the instrument. For example, if only the Vertical section fails to meet the Performance Requirements or has been repaired, it can be readjusted with little or no effect on other sections of the instrument.

The Power Supply section, however, affects all other sections of the instrument. Therefore, if repairs or readjustments have been made that change the absolute value of any of the supply voltages, the entire Adjustment Procedure should be performed.

At the beginning of each subsection is a list of all the front-panel control settings required to prepare the instrument for performing Step 1 in that subsection. Each succeeding step within a subsection should be performed in sequence and in its entirety to ensure that control settings will be correct for ensuing steps. All steps within a subsection should be completed.

TEST EQUIPMENT REQUIRED

Table 4-1 is a complete list of the test equipment required to accomplish both the Performance Check Procedure in Section 4 and the Adjustment Procedure in this section. To assure accurate measurements, it is important that test equipment used for making these checks meet or exceed the specifications described in Table 4-1. When considering

use of equipment other than that recommended, utilize the Minimum Specification column to determine whether available test equipment will suffice.

Detailed operating instructions for test equipment are not given in this procedure. If more operating information is required, refer to the appropriate test equipment instruction manual.

LIMITS AND TOLERANCES

The limits and tolerances stated in this procedure are instrument specifications only if they are listed in the Performance Requirements column of Table1-1. Tolerances given are applicable only to the instrument undergoing adjustment and do not include test equipment error. Adjustment of the instrument must be accomplished at an ambient temperature between +20°C and +30°C, and the instrument must have had a warm-up period of at least 20 minutes.

ADJUSTMENTS AFFECTED BY REPAIRS

Repairs to a circuit may affect one or more adjustment settings of the instrument. Table 5-1 identifies the adjustment(s) affected due to repairs or replacement of components on a circuit board. Refer to Table 5-1 if a partial procedure is performed or if a circuit requires readjustment due to repairs to a circuit. To use Table 5-1, first find, in the leftmost column, the circuit that was repaired. Then move to the right, across that row, until you come to a darkened square, move up the column and check the accuracy of the adjustment found at the heading of that column. Readjust if necessary.

PREPARATION FOR ADJUSTMENT

The instrument cabinet must be removed to perform the Adjustment Procedure. See the Cabinet remove and replace instructions located in the Maintenance section of the manual.

All test equipment items listed in Table 4-1 in the Performance Check Procedure section are required to accomplish a complete Adjustment Procedure. At the beginning of each subsection there is an equipment-required list showing only the test equipment necessary for performing the steps in that subsection. In this list, the item number following each piece of equipment corresponds to the item number listed in Table 4-1.

Before performing this procedure, do not preset any internal adjustments and do not change the -8.6 V power-supply adjustment. Altering this adjustment may necessitate a complete

readjustment of the instrument, whereas only a partial adjustment might otherwise be required. Only change an internal adjustment setting if a Performance Characteristic cannot be met with the original setting.

Before performing any procedure in this section, set the POWER switch to ON and allow a 20-minute warm-up period.

The most accurate display adjustments are made with a stable, well-focused, low-intensity display. Unless otherwise noted, adjust the INTENSITY, FOCUS, and Trigger LEVEL controls as needed to view the display.

Table 5-1
Adjustments Affected by Repairs

															سمجينتين		_			
REPAIRS MADE INTERNAL ADJUSTMENTS AFFECTED																				
Constitution for the constitution of the const			D GEOM	INVERT BAL		COMPENSATION	SY COMPENSATION			SISTRATION	0. 1-µS TIMING				SENSITIVITY					
enggan and gright		-8.6 V ADJ	GRID BIAS AND	BAL G	VERTICAL GAIN	ATTENUATOR CO	HIGH-FREQUENCY	1-mS TIMING	MAGNIFIER GAIN	MAGNIFIER REGISTRATION	0.1-mS AND 0.	HIGH-SPEED T	X-Y GAIN AND OFFSE	THIGGER OFFSET	THIGGER SENSI	1	1			
en tradition and the second	utti militari kan kan mengan mengan kenalah sebagai kenalah sebagai kenalah sebagai kenalah sebagai kenalah se Berapakan 1966 mengan berapakan berapakan berapakan berapakan berapakan berapakan berapakan berapakan berapaka	1	6	YA A	3	4	F	77	¥	MA	o	H	×	Ħ	Ħ	d d	47.5			
	POWER SUPPLIES	17	17	///	07	17	77	77	77	77	77	"	77	77	77)	77				
ana akan barat	VERTICAL ATTENUATORS	1//	/ //	1	11	<i>H</i>		44	44	224	4	22	44	H	#	// /		1		
	PREAMPS & CHANNEL SW	 		1	\mathcal{H}	// /	M	14.10					_	44	44	44			11.	
				//	//	44	14							24	44					
	VERTICAL OUTPUT												1	///	\mathbb{Z}					
	TRIGGER CIRCUIT				E									$/\!\!/$		$/\!/\!/$				
	SWEEP GENERATOR							//	<i>77</i>	<i>7</i> //	//		7			~~.				
e gradi subversi i	HORIZONTAL AMPLIFIER										11		#	\dashv						
	CRT								\mathcal{A}	4			A			IJ				

10942000 - Hilmon Hollow 190 (400) (**5716-13**, 111 - Hill (418)

INDEX TO ADJUSTMENT PROCEDURE STEPS	15. Check Common-Mode Rejection Ratio 5-10
01210	Horizontal
Power Supply and CRT Display Page	1. Adjust 1-ms Timing 5-11
1. Check/Adjust Power Supply DC Levels 5–4 2. Adjust CRT Grid Bias 5–4 3. Adjust Astigmatism 5–5 4. Adjust Trace Alignment 5–5 5. Adjust Geometry 5–5	2. Adjust Magnifier Gain
Vertical	8. Check Timing Accuracy and Linearity 5-12 9. Adjust X-Y Gain and Offset 5-13
1. Adjust Channel 1 Variable Balance 5-6 2. Adjust Channel 2 Variable Balance 5-6 3. Adjust Channel 2 Invert Balance 5-7 4. Adjust Vertical Gain 5-7	10. Check X Bandwidth
5. Check Deflection Accuracy and VOLTS/DIV Variable Range	1. Adjust Trigger Offset
14. Check Channel Isolation	 Check External Z-Axis Operation 5-18 Check Probe Adjust Operation 5-18

POWER SUPPLY AND CRT DISPLAY

Equipment Required (See Table 4-1):

Leveled Sine-Wave Generator (Item 2) Time-Mark Generator (Item 3) Digital Voltmeter (Item 5) $50-\Omega$ Coaxial Cable (Item 6) $50-\Omega$ Termination (Item 8) Alignment Tool (Item 11)

See ADJUSTMENT LOCATIONS 1 and ADJUSTMENT LOCATIONS 2

at the back of this manual for adjustment locations.

INITIAL CONTROL SETTINGS

INTENSITY

Visible display

Vertical

Si	POSITION (both)	Midrange
5.1	MODE	CH 1, NORM
4	VOLTS/DIV (both)	10 mV
	VOLTS/DIV Variable (both)	CAL detent
	AC-GND-DC (both)	GND

Horizontal

POSITION	Midrange
MAG	X1
SEC/DIV	X-Y (fully
	ccw)
SEC/DIV Variable	CAL detent

Trigger

SLOPE	Positive (_/_)
LEVEL	Midrange
MODE	P-P AUTO
SOURCE	EXT, EXT

PROCEDURE STEPS

1. Check/Adjust Power Supply DC Levels (R916)

NOTE

Review the information at the beginning of the Adjustment Procedure before starting this step.

- a. Connect the digital voltmeter low lead to chassis ground and connect the volts lead to the $-8.6\ V_1$ supply (W989).
- b. CHECK-Voltmeter reading is -8.5 V to -8.7 V. If the reading is within these limits, skip to part d.
- c. ADJUST—The -8.6 V₁ Adj potentiometer (R916) for a voltmeter reading of -8.6 V.
- d. CHECK-Voltage levels of the remaining power supplies listed in Table 5-2 are within the specified limits.
- e. Disconnect the test equipment from the instrument.

Table 5-2
Power Supply Limits

Power Supply	Test Point	Reading (Volts)
-8.6 V₁	W989	-8.56 to -8.64
+5.0 V ₁	W991	+4.85 to +5.15
+8.6 V ₁	W987	+8.34 to +8.86
+102.0 V	W984	+98.9 to +105.0
+205.0 V	W985	+198.8 to +211.1
+22 V unreg	W752	Approx. +24 V

2. Adjust CRT Grid Bias (R851)

a. Adjust the front-panel FOCUS control to produce a well-defined dot.

- b. Rotate the INTENSITY control fully counterclockwise.
- c. ADJUST-Grid Bias (R851) for a visible dot, then back off the Grid Bias potentiometer until the dot just disappears.

3. Adjust Astigmatism (R870)

a. Set:

Vertical MODE	CH 1
Channel 1 AC-GND-DC	DC
SEC/DIV	-5 μs
Trigger Source	CH 1

- b. Connect the leveled sine-wave generator output via a 50- Ω coaxial cable and a 50- Ω termination to the CH 1 OR X input connector.
- c. Set the generator to produce a 50-kHz, 4-division display.
- d. ADJUST-Astig (R870) and the front-panel FOCUS control for the best defined waveform.
- e. Disconnect the test equipment from the instrument.

4. Adjust Trace Alignment

- a. Position the trace to the center horizontal graticule line.
- b. ADJUST-Front-panel TRACE ROTATION control for optimum alignment of the trace with the center horizontal graticule line.

Note that the Berger of the Berger of the Stage of the Section of

control fully 5. Adjust Geometry (R871)

a. Set:

CH 1 VOLTS/DIV		50 mV
SEC/DIV	The second of the second	0.1 ms

- b. Connect 50-ms time markers from the time-mark generator via a $50-\Omega$ coaxial cable and a $50-\Omega$ termination to the CH 1 OR X input connector.
- c. Position the baseline part of the display below the bottom horizontal graticule line using the CH 1 POSITION control.
- Adjust the SEC/DIV Variable control for five markers per division.
- e. ADJUST—Geom (R871) for minimum curvature of the time markers at the left and right edges of the graticule.
 - f. Set Channel 1 AC-GND-DC switch to GND.
- g. ADJUST—Geom (R871) for minimum curvature of the baseline trace when positioned at the top and bottom horizontal graticule lines using the CH 1 POSITION control.
 - h. Set the Channel 1 AC-GND-DC switch to DC.
- i. Repeat parts e through h for optimum compromise between the vertical and horizontal displays.
- j. Disconnect the test equipment from the instrument.

Dept. of Security

VERTICAL

Equipment Required (See Table 4-1):

Calibration Generator (Item 1)

Leveled Sine-Wave Generator (Item 2)

50-Ω Coaxial Cable (Item 6)

Dual-Input Coupler (Item 7)

50-Ω Termination (Item 8)

10X Attenuator (Item 9)

Miniature Probe Tip to BNC Adapter (Item 10)

Alignment Tool (Item 11)

10X Probe (Item 12)

See ADJUSTMENT LOCATIONS 1 and ADJUSTMENT LOCATIONS 2

at the back of this manual for adjustment locations.

INITIAL CONTROL SETTINGS

Vertical and the same state of	Control Section 1
oto kali amitograda o parko sikolika	CANADARA MINIS
POSITION (both)	Midrange
MODE	CH 1, NORM
VOLTS/DIV (both)	5 mV
VOLTS/DIV Variable (both)	Cal detent
AC-GND-DC (both)	GND

Horizontal gain calcon protesta e a como de fector a calc

POSITION	Midrange
MAG	X1
SEC/DIV	0.5 ms
SEC/DIV Variable	CAL detent

Trigger

SLOPE	Positive ()
LEVEL	Midrange
MODE	P-P AUTO
SOURCE	EXT, EXT

PROCEDURE STEPS

- 1. Adjust Channel 1 Variable Balance (R33)
- a. Rotate the CH 1 VOLTS/DIV Variable control fully counterclockwise.

- b. Position the trace on the center horizontal graticule line using the CH 1 POSITION control.
- c. Rotate the CH 1 VOLTS/DIV Variable control clockwise to the CAL detent.
- d. ADJUST-CH 1 Var Bal (R33) to set the trace to the center horizontal graticule line.
- e. Repeat parts a through d until there is no trace shift between the fully clockwise and the fully counterclockwise positions of the CH 1 VOLTS/DIV Variable control.
- f. Return the CH 1 VOLTS/DIV Variable control to the CAL detent.
- 2. Adjust Channel 2 Variable Balance (R83)
 - a. Set Vertical MODE switch to CH 2.
- b. Rotate the CH 2 VOLTS/DIV Variable control fully counterclockwise.
- c. Position the trace on the center horizontal graticule line using the CH 2 POSITION control.
- d. Rotate the CH 2 VOLTS/DIV Variable control clockwise to the CAL detent.
- e. ADJUST-CH 2 Var Bal (R83) to set the trace to the center horizontal graticule line.
- f. Repeat parts a through d until there is no trace shift between the fully clockwise and the fully counterclockwise positions of the CH 1 VOLTS/DIV Variable control.

g. Return the CH 1 VOLTS/DIV Variable control to the CAL detent

3. Adjust Channel 2 Invert Balance (R84)

- a. Position the trace on the center horizontal graticule line using the Channel 2 POSITION control.
 - b. Set Vertical MODE switch to CH 2 INVERT.
- c. ADJUST-CH 2 Invert Bal (R84) to set the trace to the center horizontal graticule line.
 - d. Set Vertical MODE switch to NORM.
- e. Repeat parts a through d'until there is no trace shift when switching from NORM to CH 2 INVERT.

4. Adjust Vertical Gain (R145 and R195)

a. Set:

Vertical MODE	CH 1, NORM
CH 1 VOLTS/DIV Variable	CAL detent
AC-GND-DC (both)	DC
Trigger SOURCE	VERT MODE

- b. Connect a 20-mV, standard-amplitude signal from the calibration generator via a 50- Ω coaxial cable to the CH 1 OR X input connector.
- c. Center the display within the graticule using the CH 1 POSITION control.
- d. ADJUST-CH 1 Gain (R145) for an exact 4-division display.
- e. Move the test-signal cable from the CH 1 OR X input connector to the CH 2 OR Y input connector.
 - f. Set the Vertical MODE switch to CH 2.
- g. Center the display within the graticule using the CH 2 POSITION control.
- h. ADJUST-CH 2 Gain (R195) for an exact 4-division display.
- i. Repeat parts b through h until the gain of the two channels is identical.

5. Check Deflection Accuracy and VOLTS/DIV Variable Range

a. CHECK—Deflection accuracy is within the limits given in Table 5-3 for each CH 1 VOLTS/DIV switch setting and corresponding standard-amplitude signal. When at the 20-mV VOLTS/DIV switch setting.

rotate the CH 1 VOLTS/DIV Variable control fully counterclockwise and CHECK that the display decreases to two divisions or less. Then return the CH 1 VOLTS/DIV Variable control to the CAL detent and continue with the 50-mV check.

- b. Move the cable from the CH 1 OR X input connector to the CH 2 OR Y input connector. Set the Vertical MODE switch to CH 2.
 - c. Repeat part b using the Channel 2 controls.

Table 5-3
Deflection Accuracy Limits

VOLTS/DIV Switch Setting	STANDARD Amplitude Signal	ACCURACY Limits (Divisions)
5 mV	20 mV	3.88 to 4.12
10 mV	50 mV	4.85 to 5.15
20 mV	0.1 V	4.85 to 5.15
50 mV	0.2 V	3.88 to 4.12
0.1 V	0.5 V	4.85 to 5.15
0.2 V	**: -14° V (# 1.)	4.85 to 5.15
0.5 V	2 V	3.88 to 4.12
1 V	5 V	4.85 to 5.15
: 444 2 ;V*	10 V	4.85 to 5.15
5 V	20 V	3.88 to 4.12

6. Check Input Coupling

- a. Set the AC-GND-DC switches (both channels) to GND.
- b. Position the trace on the center horizontal graticule line using the CH 2 POSITION control.
 - c. Change the generator output to 50 mV.
 - d. Set the Channel 2 AC-GND-DC switch to AC.
- e. CHECK-The display is centered about the center horizontal graticule line.
 - f. Set the Channel 2 AC-GND-DC switch to DC.
- g. CHECK—The display is ground referenced on the center horizontal graticule line.
- input connector to the CH 1 OR X input connector.

- i. Set the Vertical MODE switch to CH 1.
- j. Repeat parts b through g using the Channel 1 controls.

7. Check Position Range

a. Set:

VOLTS/DIV (both)	10 mV
AC-GND-DC (both)	AC
SEC/DIV	0.2 ms
Trigger COUPLING	AC

- b. Set the calibration generator for 0.1 V.
- c. Adjust the CH 1 VOLTS/DIV Variable control to produce a 5.25-division display.
 - d. Set the CH 1 VOLTS/DIV to 5 mV.
- e. Set the calibration generator to produce a 0.2 V signal.
- f. CHECK—The bottom and top of the trace may be positioned above and below the center horizontal graticule line by rotating the CH 1 POSITION control fully clockwise and counterclockwise respectively.
- g. Move the cable from the CH 1 OR X input connector to the CH 2 OR Y input connector,
 - h. Set the Vertical MODE switch to CH 2.
- i. Repeat parts b through f using the Channel 2 controls.
- j. Disconnect the test equipment from the instrument.

8. Adjust Attenuator Compensation

a. Set:

VOLTS/DIV (both)	10 mV
AC-GND-DC (both)	DC

- b. Connect the high-amplitude, square-wave output from the calibration generator via a $50-\Omega$ termination, a miniature probe tip to BNC adapter, and the 10X probe to the CH 2 OR Y input connector.
- c. Set the generator to produce a 1-kHz, 5-division display and compensate the probe using the probe compensation adjustment (see the probe instruction manual).

- d. Replace the probe and miniature probe tip to BNC adapter with a 50- Ω coaxial cable and 50- Ω termination.
- e. Set the generator to produce a 5-division display.
- f. ADJUST—Trimmer "1" for flattest response on the square wave signal. See Figure 5–1 for location of the trimmers.

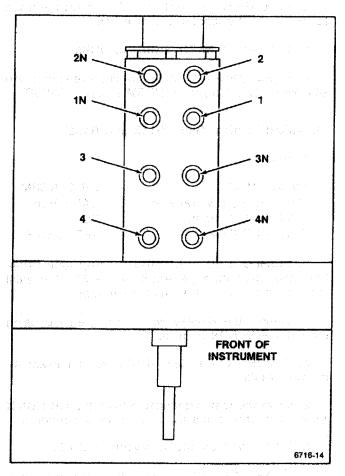


Figure 5-1. Attenuator trimmer adjustments.

- g. Replace the $50-\Omega$ coaxial cable and $50-\Omega$ termination with the probe and miniature probe tip to BNC adapter.
- h. Set the generator to produce a 5-division square wave.
- i. ADJUST-Trimmer "1N" for flattest response on square wave.
 - j. Set the CH 2 VOLTS/DIV switch to 20 mV.
- k. Repeat parts d through i except adjust the "2" and "2N" trimmers in parts f and i respectively.

- I. Set the CH 2 VOLTS/DIV switch to 50 mV.
- m. Repeat parts d through i except adjust the "3" and "3N" trimmers in parts f and i respectively.
 - n. Set the CH 2 VOLTS/DIV switch to 0.5 V.
- o. Repeat parts d through i except adjust the "4" and "4N" trimmers in parts f and i respectively.
 - p. Set the Vertical MODE switch to CH 1.
- q. Repeat parts b through p for the Channel 1 Attenuators.
- r. Disconnect the test equipment from the instrument.

9. Check Vertical ALT Operation

Fig. Set: The many of the set of

AC-GND-DC (both)	GND
Vertical MODE	BOTH, NORM,
	and ALT
SEC/DIV	0.1 s
Trigger SOURCE	CH 1

- b. Position the Channel 1 and Channel 2 traces about two divisions apart using the CH 1 and CH 2 POSITION controls.
- c. CHECK—Channel 1 and Channel 2 traces move across the screen alternately.
 - d. Set Vertical switch to CHOP.
- e. CHECK—Channel 1 and Channel 2 traces move across the screen at the same time.

10. Adjust CHOP Switch Balance (R140)

a. Set:

SEC/DIV	1 ms
Trigger MODE	NORM
Trigger SOURCE	VERT MODE

- b. Connect the 10X probe to the rear of R242 on top of the A1-Main circuit board and adjust test oscilloscope for a 4-division display.
- c. ADJUST-Chop-Sw Bal (R140) for no triggering on chop segments when rotating the Trigger LEVEL control.

11. Check ADD MODE Operation

a. Set:

VOLTS/DIV (both)	20 mV
AC-GND-DC (both)	DC
Vertical MODE	BOTH, NORM,
	and ALT
SEC/DIV	0.5 ms
Horizontal MODE	X1
Trigger SOURCE	CH 1

- b. Position both traces on the center horizontal graticule line using the CH 1 and CH 2 POSITION controls.
- c. Set the calibration generator to produce a 50-mV signal.
- d. Connect the output of the calibration generator to both the CH 1 OR X input and the CH 2 OR Y input with dual-input coupler.
- e. Check that both channels show a 2.5-division display.
 - f. Set: Vertical MODE switch to ADD.
- g. CHECK—The resultant display is five divisions 3% (4.85 to 5.15 divisions).
- h. Disconnect the test equipment from the instrument.

12. Adjust High-Frequency Compensation (C241, C242, C243, and R241)

a. Set:

VOLTS/DIV (both)	10 mV
Vertical MODE	CH 1
SEC/DIV	0.2 ms

- b. Connect the positive-going, fast-rise, square-wave output from the calibration generator via a $50-\Omega$ coaxial cable, a 10X attenuator, and a $50-\Omega$ termination to the CH 1 OR X input connector.
- c. Set the generator to produce a 1-MHz, 5-division display.
- d. Set the top of the display to the center horizontal graticule line using the CH 1 POSITION control.
- e. ADJUST-HF Comp (C242 and C243) for the 5% or less overshoot (0.3 division) on the displayed signal.

- f. ADJUST—HF Comp (C241 and R241) for best flat top on the front corner.
- g. Repeat parts e and f until on further improvement is noted.
 - h. Set the CH 1 VOLTS/DIV switch to 5 mV.
- i. Set the generator to produce a 5-division display.
- j. Check for aberrations of 5% (0.3 division) or less.
- k. Repeat part j for each CH 1 VOLTS/DIV switch settings from 5 mV through 0.5 V. Adjust the generator output and add or remove the 10X attenuator as necessary to maintain a 5-division display at each VOLTS/DIV switch setting.
- I. Move the cable from the CH 1 OR X input connector to the CH 2 OR Y input connector. Set the Vertical MODE switch to CH 2.
- m. Repeat part k for Channel 2.
- n. Disconnect the test equipment from the instrument.

ranga agawan menghalik salah sebagai s Sebagai sebaga

Install the instrument cabinet for the remaining vertical checks and allow a 20-minute warm-up period before continuing with the "Adjustment Procedure". See the "Cabinet" remove and replace instructions located in the "Maintenance" section of the manual.

13. Check Bandwidth

a. Set:

VOLTS/DIV (both)		5 mV
Vertical MODE		CH 1
SEC/DIV	No. 64 f	10 ms
Trigger SOURCE		VERT MODE
Anjal Green to teleporiti i i i un gener	of the second second second	

- b. Connect the leveled sine–wave generator output via a 50– Ω coaxial cable and a 50– Ω termination to the CH 1 OR X input connector.
- c. Set the generator to produce a 50-kHz, 6-division display.
- d. Increase the sine-wave frequency until a 4.2-division display is obtained.
 - e. CHECK-the frequency is greater than 20 MHz.

- f. Repeat parts c through e for all CH 1 VOLTS/ DIV switch settings, up to the output-voltage upper limit of the sine-wave generator being used.
- g. Move the cable from the CH 1 OR X input connector to the CH 2 OR Y input connector. Set the Vertical MODE switch to CH 2.
- h. Repeat parts c through e for all CH 2 VOLTS/ DIV switch settings, up to the output-voltage upper limit of the sine-wave generator being used.

14. Check Channel Isolation

a. Set:

CH 1 VOLTS/DIV	0.5 V
CH 2 VOLTS/DIV	1 V
Channel 1 AC-GND-DC	GND
SEC/DIV HOUSE AND A SECOND	0.05 ms

- b. Set the generator to produce a 20-MHz, 5-division display.
- c. Set CH 2 VOLTS/DIV switch to 0.5 V for a 10-division display.
 - d. Set Vertical MODE switch to CH 1 and ALT.
- e. CHECK—The display amplitude is less than 0.1 division.
- f. Move the test-signal cable from the CH 2 OR Y input connector to the CH 1 OR X input connector.

n Set

Vertical MODE		CH 2
Channel 1 AC-GND-DC	1.00	DC
Channel 2 AC-GND-DC		GND
caaaggest oo gaarkan bibliid oo	Part of the	

- h. CHECK-The display amplitude is less than 0.1 division.
- i. Disconnect the test equipment from the instrument.

15. Check Common-Mode Rejection Ratio

a. Set:

VOLTS/DIV (both)	10 mV
Channel 2 AC-GND-DC	DC
Vertical MODE	BOTH, NORM, and ALT

b. Connect the leveled sine-wave generator output via a 50- Ω coaxial cable, a 50- Ω termination, and a dual-input coupler to the CH 1 OR X and CH 2 OR Y input connectors.

- 6-division display.
 - c. Set the generator to produce a 10-MHz, f. Disconnect the test equipment from the division display.
- d. Set Vertical MODE switch to CH 2 INV and ADD.

NOTE

e. CHECK-Display amplitude is 0.6 division or less.

有效。 "我们就是我们的事情的事情,我们就是什么。"他们

To continue with the "Adjustment Procedure", remove the instrument cabinet and allow a 20-minute warm-up period. See the "Cabinet" removal instructions located in the "Maintenance" section of the manual.

HORIZONTAL

Equipment Required (See Table 4-1):

Calibration Generator (Item 1)

Leveled Sine-Wave Generator (Item 2)

Time-Mark Generator (Item 3)

Test Oscilloscope (Item 4)

50-Ω Coaxial Cable (Item 6)

50-Ω Termination (Item 8)

Alignment Tool (Item 11)

See ADJUSTMENT LOCATIONS 1 and ADJUSTMENT LOCATIONS 2

at the back of this manual for test point and adjustment locations.

INITIAL CONTROL SETTINGS

Vertical

POSITION (both)	Midrange
MODE	CH 1
VOLTS/DIV (both)	0.5 V
VOLTS/DIV Variable (both)	Cal detent
AC-GND-DC (both)	DC

Horizontal

POSITION	Midrange
MAG	X1
SEC/DIV	1 ms
SEC/DIV Variable	CAL detent

Trigger

SLOPE	Positive (_/_)
LEVEL	Midrange
MODE	P-P AUTO
SOURCE	CH 1

PROCEDURE STEPS

1. Adjust 1-ms Timing (R744)

- a. Connect 1-ms time markers from the time-mark generator via a $50-\Omega$ coaxial cable and a $50-\Omega$ termination to the CH 1 OR X input connector.
- b. Align the first time marker with the first (extreme left) vertical graticule line using the Horizontal POSITION control.

NOTE

When making timing measurements, use the tips of the time markers positioned at the center horizontal graticule line as the measurement reference points.

c. ADJUST-X1 Gain (R744) for one marker per division over the center eight divisions.

2. Adjust Magnifier Gain (R777)

- a. Set the MAG switch to X10.
- b. Select 100 μs time markers from the time-mark generator.
- c. Align the first time marker with the first (extreme left) vertical graticule line using the Horizontal POSITION control.
- d. ADJUST-X10 Mag Gain (R777) for 1 time marker per division.

3. Adjust Magnifier Registration (R782)

- a. Set the SEC/DIV switch to 0.2 ms.
- b. Select 1 ms time markers from the time-mark generator.
- c. Position the middle time marker to the center vertical graticule line using the Horizontal POSITION control.
 - d. Set the MAG switch from X10 to X1 position.
- e. ADJUST-Mag Reg (R782) to position the middle time marker to the center vertical graticule line.

- f. Set the MAG switch from X1 to X10 position and CHECK for no horizontal shift in the time marker.
- g. Repeat parts c through f until no further improvement is noted.

4. Check Position Range

a. Set:

SEC/DIV

0.1 ms

Horizontal MAG

X1

- b. Select 0.1 ms time markers from the time-mark generator.
- c. CHECK—The start of the sweep can be positioned to the right of the center vertical graticule line by rotating the Horizontal POSITION control fully clockwise.
- d. CHECK—The tenth time marker can be positioned to the left of the center vertical graticule line by rotating the Horizontal POSITION control fully counterclockwise.
- e. Select 0.5 ms time markers from the time-mark generator.
- f. Align the 3rd time marker with the center vertical graticule line using the Horizontal POSITION control.
 - g. Set the Horizontal MAG switch to X10.
- h. Check—Magnified time marker can be positioned to the left of the center vertical graticule line by rotating the Horizontal POSITION control fully counterclockwise.
- i. Check—The tenth time marker can be positioned to the right of the center vertical graticule by rotating the Horizontal POSITION control fully clockwise.

5. Check Variable Range

- a. Set Horizontal MAG switch to X1 and center the display.
- b. Set the SEC/DIV Variable control knob fully counterclockwise.
- c. CHECK-The spacing between time markers is 2 divisions or less.
- d. Return the SEC/DIV Variable knob to the CAL detent position.

- Adjust 0.1-ms and 0.1- μs Timing (R722 and C703)
 - a. Set the SEC/DIV switch to 0.1 ms.
- b. Select 0.1-ms time markers from the time-mark generator.
- c. ADJUST-0.1-ms Timing (R722) for 1 marker per division.
 - d. Set the SEC/DIV switch to 0.1 µs.
- e. Select $0.1-\mu s$ time markers from the time-mark generator.
- f. ADJUST-0.1-µs Timing (C703) for 1 marker per division.

7. Adjust High-Speed Timing (C783, C794)

a. Set:

Channel 1 AC-GND-DC

AC

Horizontal MAG

X10

- b. Select 20-ns time markers from the timemark generator and set the display for maximum amplitude within the graticule area.
- c. Adjust the Trigger LEVEL control for a stable triggered display.
- d. ADJUST-HS Timing (C783 and C794) for two divisions between each time marker.

NOTE

The 20-ns time-markers tips are rounded off and cannot be used as measurement reference points. Use the rising edge of the time markers as measurement reference points to adjust the high-speed timing capacitors. Vertically adjust the 50% point of the time markers on the center horizontal graticule line.

8. Check Timing Accuracy and Linearity

a. Set:

CH VOLTS/DIV

0.5 V

Horizontal MAG

¥1

- b. Select 0.1-μs time markers from the timemark generator.
- c. Adjust the Trigger LEVEL control for a stable, triggered display.

- the second time marker with the second vertical graticule line.
- e. CHECK—Timing accuracy is within 3% (0.24 division at the tenth vertical graticule line), and linearity is within 5% (0.10 division over any two of the center eight divisions).

NOTE

When checking the timing accuracy for SECI DIV switch settings from 50 ms to 0.5 s, watch the time marker tips only at the second and tenth vertical graticule lines while adjusting the Horizontal POSITION control.

f. Repeat parts c through e for the remaining SEC/DIV and time-mark-generator setting combinations shown in Table 5-4 under the "X1 Normal" column.

...g. Set:

SEC/DIV	40,50	0.1 μs
Horizontal	MAG	X10

- h. Select 20-ns time markers from the time-mark generator.
- i. Use the Horizontal POSITION controls to align the first time marker that is 50 ns beyond the start of the sweep with the second vertical graticule line.
- j. CHECK—Timing accuracy is within 4% (0.32 division at the tenth vertical graticule line), and linearity is within 7% (0.14 division over any 2 of the center 8 divisions). Exclude any portion of the sweep past the 50th magnified division.
- k. Repeat parts i and j for the remaining SEC/DIV and time-mark generator setting combination shown in Table 5-4 under the "X10 Magnified" column.
- I. Disconnect the test equipment from the instrument.

9. Adjust X-Axis Gain (R395)

a. Set:

VOLTS/DIV (both)	10 mV
SEC/DIV	X-Y
Horizontal MAG	∑ X1

Table 5-4
Settings for Timing Accuracy Checks

SEC/DIV	Time-Mark (Generator Setting			
Switch Setting	X1 Normal	X10 Magnified			
0.1 μs	0.1 μs	20 ns			
0.2 μs	0.2 μs	20 ns			
0.5 μs	0.5 μs	50 ns			
1 μs	1 μs	0.1 μs			
2 μs	2 μs	0.2 μs			
5 μs	5 μs	0.5 μs			
10 μs	10 μs	1 µs			
20 μs	20 μs	2 μs			
50 μs	50 µs	5 μ s			
0.1 ms	0.1 ms	10 μs			
0.2 ms	0.2 ms	20 μs			
0.5 ms	0.5 ms	50 μs			
Lineage (Lay ms go	≠ y no as it ms ne ∂	.e ≅0.13∴ms⊖ e			
2 ms	2 ms	0.2 ms			
5 ms	5 ms	0.5 ms			
10 ms	10 ms	1 ms _{1,947} se			
20 ms	20 ms	2 ms			
50 ms	50 ms	5 ms			
0.1 s	0.1 s	10 ms			
0.2 s	0.2 s	20 ms			
0.5 s	0.5 s	- 50 a ms 1 a la la la la			

- b. Connect a 50-mV, standard-amplitude signal from the calibration generator via a $50-\Omega$ coaxial cable to the CH 1 OR X input connector.
- c. ADJUST-X Gain (R395) for exactly 5 divisions of horizontal deflection.

10. Adjust X Offset (R736)

a. Set:

Channel	1	AC-GND-DC	٠,			G	ND
SEC/DIV						1	ms

b. Position the trace vertically to the center horizontal graticule line.

- c. Position the trace horizontally so the start of the trace begins at the first vertical graticule line (extreme left).
- d. Set the SEC/DIV switch to X-Y (fully counterclockwise).
- e. ADJUST—X Offset (R736) to position the spot at the seventh vertical graticule line,
- f. Disconnect the test equipment from the instrument.

10. Check X Bandwidth

a. Set:

VOLTS/DIV (both) 50 mV AC-GND-DC (both) DC Trigger SOURCE CH 1

- b. Connect the leveled sine-wave generator output via a 50- Ω coaxial cable and a 50- Ω termination to the CH 1 OR X input connector.
- c. Set the generator to produce an 8-division horizontal display at an output frequency of 50 kHz.
- d. Increase the signal frequency until the horizontal deflection (X-axis) is equal to 5.7 divisions in length.
 - e. CHECK-The frequency is greater than 2 MHz.
- f. Disconnect the test equipment from the instrument.

11. Check Sweep Holdoff

a. Set:

VOLTS/DIV (both) 1 V
AC-GND-DC (both) GND
SEC/DIV 1 ms
Trigger SOURCE EXT, EXT

- b. Connect the test oscilloscope's 10X probe tip to the front end of R704 (toward the front panel). R704 is on the Timing circuit board.
- 3.0 ms.
 - d. Repeat part c for SEC/DIV switch settings in Table 5-5.
 - e. Disconnect the 10X probe from R704.

Table 5-5
Settings for Holdoff Checks

SEC/DIV	Holdoff Time
0.1 ms	0.2 ms to 0.3 ms
10 µs	15 μs to 30 μs
1 μs	1.5 μs to 3.0 μs

organica in a company of the second

TRIGGER

Equipment Required (See Table 4-1):

Leveled Sine-Wave Generator (Item 2)

 $50-\Omega$ Coaxial Cale (Item 6) Dual-Input Coupler (Item 7)

50-Ω Termination (Item 8)
Alignment Tool (Item 11)

See ADJUSTMENT LOCATIONS 1

at the back of this manual for adjustment locations.

INITIAL CONTROL SETTINGS

Vertical

POSITION (both)		Midrange
MODE		BOTH, NORM
and it stands at		and ALT
VOLTS/DIV (both)		50 mV
VOLTS/DIV Variable	(both)	Cal detent
AC-GND-DC (both)		DC

Horizontal

POSITION	Midrange
MAG	X1
SEC/DIV	2 μs
SEC/DIV Variable	CAL detent

Trigger

SLOPE	Positive (_/_)
LEVEL	Midrange
MODE	P-P AUTO
SOURCE	CH 2

PROCEDURE STEPS

1. Adjust Trigger Offset Balance (R338)

a. Set the Channel 1 trace and the Channel 2 trace to the center horizontal graticule line using the Channel 1 and Channel 2 POSITION controls.

- b. Connect the digital voltmeter low lead to chassis ground and the high (volts) lead to TP350 (base of Q410).
- c. CHECK—The offset voltage reading is less than 100 mV. Note the reading for use in part e.
- d. Set the Trigger SOURCE switch to CH 1.
- e. ADJUST-Trig Offset Bal (R338) so that the voltage reading is the same as that obtained in part c.
 - f. Set the Trigger SOURCE switch to CH 2.
- g. Repeat parts c through f until there is 1 mV or less difference in the voltmeter readings between the CH 1 and CH 2 positions of the Trigger SOURCE switch.
- h. Disconnect the test equipment from the instrument.

2. Adjust Trigger Sensitivity (R489)

a. Set:

Vertical MODE	CH 1
CH 1 VOLTS/DIV	0.1 V
AC-GND-DC (both)	AC
SEC/DIV	10 μs
Trigger SOURCE	VERT MODE

- b. Connect the leveled sine-wave generator output via a 50- Ω cable and a 50- Ω termination to the CH 1 OR X input connector.
- c. Set the generator to produce a 50-kHz, 2.2-division display.

- d. Set the CH 1 VOLTS/DIV switch to 1 V.
- e. ADJUST-Trig Sensitivity (R489) while rotating the Trigger LEVEL control slowly so that the trigger is just able to be maintained.
- f. CHECK—The TRIG'D/READY LED is on when triggered.

3. Adjust Slope Balance (R481)

- a. Set the CH 1 VOLTS/DIV switch to 50 mV.
- b. Set the generator to produce a 4-division display.
- c. ADJUST—Slope Bal (R481) for a downward vertical shift of 0.22-division at the start of the sweep when changing the Trigger SLOPE switch between the positive (_/_) and negative (__) positions.

4. Adjust Auto Level (R445 and R446)

a. Set:

Trigger SLOPE
Trigger LEVEL

Positive (____)
Fully clockwise

- b. Set the generator to produce a 5-division display.
 - c. Set the CH 1 VOLTS/DIV switch to 0.5 V.
- d. ADJUST-(+) Auto Level (R446) so that the vertical display just solidly triggers on the positive peak of the signal.
 - e. Set:

Trigger SLOPE Trigger LEVEL

Negative (_)

counterclockwise

f. ADJUST—(-) Auto Level (R445) so that the display just solidly triggers on the negative peak of the signal.

5. Check Internal Triggering

a. Set:

CH 1 VOLTS/DIV	5 mV
CH 2 VOLTS/DIV	50 mV
SEC/DIV	0.2 μs

- b. Set the generator to produce a 5-MHz, 3-division display.
 - c. Set the CH 1 VOLTS/DIV switch to 50 mV.
- d. CHECK—Stable display can be obtained by adjusting the Trigger LEVEL control for each switch combination given in Table 5-6. Ensure that the TRIG'D/READY LED comes on when triggered.

Table 5-6
Switch Combinations for Triggering Checks

Trigger MODE	Trigger SLOPE	
NORM TO BE THE	Positive	
NORM	Negative ~	
P-P AUTO	Negative ¬_	
P-P AUTO	Positive -	

- e. Move the cable from the CH 1 OR X input connector to the CH 2 OR Y input connector. Set the Vertical MODE switch to CH 2.
 - f. Repeat part d.
 - g. Set:

SEC/DIV Horizontal MAG 0.1 μs X10

- h. Set the generator to produce a 30-MHz, 1.0-division display.
 - i. Repeat part d.
- j. Move the cable from the CH 2 OR Y input connector to the CH 1 OR X input connector. Set the Vertical Mode switch to CH 1.
 - k. Repeat part d.
- Disconnect the test equipment from the instrument.

6. Check External Triggering

a. Set:

CH 1 VOLTS/DIV 20 mV
SEC/DIV 0.2 ms
Horizontal MODE X1
Trigger MODE P-P AUTO
Trigger SOURCE EXT, EXT

b. Connect the leveled sine—wave generator output via a $50-\Omega$ coaxial cable, a $50-\Omega$ termination,

and a dual-input coupler to the CH 1 OR X input connector and EXT INPUT OR Z input connectors.

- c. Set the generator to produce a 4-division (80 mV) horizontal display at an output frequency of 5 MHz.
- d. CHECK—Stable display can be obtained by adjusting the Trigger LEVEL control for each switch combination given in Table 4-4.
 - e. Set:

CH 1 VOLT/DIV 50 mV SEC/DIV 0.05 ms Horizontal MODE MAG

- f. Set the leveled sine-wave generator to produce a 50-kHz, 3-division (150 mV) display.
 - g. Set the generator output to 30 MHz.
 - h. Repeat part d.

7. Check External Trigger Range

a. Set:

CH 1 VOLTS/DIV 0.5 V
SEC/DIV 20 ms
Trigger SLOPE Positive (_/__)

- b. Set the leveled sine-wave generator to produce a 50-kHz, 6.4-division display.
- c. Position the waveform equally about the center horizontal graticule line.
- d. Set:

Trigger MODE NORM
Trigger SOURCE EXT, EXT

- e. CHECK—Display is triggered along the entire positive slope of the waveform as the Trigger LEVEL control is rotated.
- f. CHECK—Display is not triggered at either extreme of rotation of the Trigger LEVEL control.
 - g. Set the Trigger SLOPE switch to negative (~).

- h. CHECK-Display is triggered along the entire negative slope of the waveform as the Trigger LEVEL control is rotated.
- i. CHECK—Display is not triggered at either extreme of rotation of the Trigger LEVEL control.
- j. Disconnect the test equipment from the instrument.

8. Check Single Sweep Operation

a. Set:

CH 1 VOLTS/DIV 10 mV
SEC/DIV 0.5 ms
Trigger SOURCE CH 1
Trigger SLOPE Positive (-/-)

- b. Connect 50-mV, standard-amplitude signal from the calibration generator via a $50-\Omega$ coaxial cable to the CH 1 OR X input connector.
- c. Adjust the Trigger LEVEL control to obtain a stable display.
 - d. Set:

Channel 1 AC-GND-DC GND
Trigger MODE SGL SWP

- e. Press the SGL SWP RESET button. The TRIG'D/READY LED illuminates and remains on.
 - f. Set the Channel 1 AC-GND-DC switch to DC.

NOTE

The INTENSITY control may require adjustment to observe the single-sweep trace.

- g. CHECK-TRIG'D/READY LED goes out and a single sweep occurs.
- h. Press the SGL SWP RESET button several times.
- i. CHECK—A single-sweep trace occurs, and the TRIG'D/READY LED illuminates briefly every time the SGL SWP RESET button is pressed.
- j. Disconnect the test equipment from the instrument.

EXTERNAL Z-AXIS AND PROBE ADJUST

Equipment Required (See Table 4-1):

Calibration Generator (Item 1) Two $50-\Omega$ Coaxial Cables (Item 6) Dual-Input Coupler (Item 7)

 $50-\Omega$ Termination (Item 8) 10X Probe (Item 12)

INITIAL CONTROL SETTINGS

Vertical

CH 1 POSITION Midrange
MODE CH 1, NORM
CH 1 VOLTS/DIV 1 V
CH 1 VOLTS/DIV Variable
Channel 1 AC-GND-DC DC

Horizontal

POSITION Midrange
MAG X1
SEC/DIV 20 ms
SEC/DIV Variable CAL detent

Trigger

PROCEDURE STEPS

1. Check External Z-Axis Operation

a. Connect a 5-V standard-amplitude signal from the calibration generator via dual-input coupler to the CH 1 OR X and EXT INPUT OR Z connectors.

NOTE

The INTENSITY level may need adjustment to view the intensity modulation on the displayed waveform.

- b. CHECK—For noticeable intensity modulation. The positive part of the sine wave should be of lower intensity than the negative part.
- c. Disconnect the test equipment from the instrument.

2. Check Probe Adjust Operation

a. Set:

CH 1 VOLTS/DIV 10 mV SEC/DIV 0.5 ms Trigger SOURCE CH 1

- b. Connect the 10X Probe to the CH 1 OR X input connector and clip the probe tip to the PROBE connector on the instrument front panel. If necessary, adjust the probe compensation for a flat-topped square-wave display.
- c. CHECK-Display amplitude is 4.75 to 5.25 divisions.
 - d. Disconnect the probe from the instrument.

TENDERS OF THE SEASON OF THE THE THE

enda artist (174	电线电流 医原物 医电影
nakuki kata	# 15 B#
	The part of the second section is a figure
	Mark the Committee of the
4.40.1	The state of the state of

svegagi a paravičijiš	er en betrette
	· · · · · · · · · · · · · · · · · · ·
Cartain 197	and sale restriction to the series

and the second second	
egimen M	
jagan jaga salah	The The The Barrier Commence of the Commence o
	Fig. 5. Dec

(Machine)	Contact of the section	
सुन्दा हो।		
7 1 C	in the month of a profession	

MAINTENANCE

This section contains information for conducting preventive maintenance, troubleshooting, and corrective maintenance on the instrument. Circuit

board removal procedures are included in the Corrective Maintenance part of this section.

STATIC-SENSITIVE COMPONENTS

PERMANDE SANT BUILDERS BER

The following precautions are applicable when performing any maintenance involving internal access to the instrument.

ent de la familia de la companya de de de la companya della companya della companya de la companya de la companya della com

Static discharge can damage any semiconductor component in this instrument.

This instrument contains electrical components that are susceptible to damage from static discharge. Table 6-1 lists the relative susceptibility of various classes of semiconductors. Static voltages of 1 KV to 30 KV are common in unprotected environments.

When performing maintenance, observe the following precautions to avoid component damage:

- 1. Minimize handling of static-sensitive components.
- 2. Transport and store static-sensitive components or assemblies in their original containers or on a metal rail. Label any package that contains static-sensitive components or assemblies.
- 3. Discharge the static voltage from your body by wearing a grounded antistatic wrist strap while handling these components. Servicing static-sensitive components or assemblies should be performed only at a static-free work station by qualified service personnel.
- 4. Nothing capable of generating or holding a static charge should be allowed on the work station surface.

Table 6-1
Relative Susceptibility to Static-Discharge
Damage

and the second s	i di <u>ana ayaya dagan</u> an ayaa ayaa a
Semiconductor Classes	Relative Susceptibility Levels ^a
MOS or CMOS microcircuits or discretes, or linear microcircuits with MOS inputs (Most Sensi- tive)	1
e ECL a gryler on all a gryler galler	50 58 2 84
Schottky signal diodes	
Schottky TTL	· · · · · · · · · · · · · · · · · · ·
High-frequency bipolar transistors	eznaj posta opsta osta je odanj strok 5 objektalasta
JFET	6
Linear microcircuits	7
Low-power Schottky TTL	, e., 8 e.:
TTL (Least Sensitive)	9

 $^{\rm a}$ Voltage equivalent for levels (voltage discharged from a 100-pF capacitor through a resistance of 100 Ω):

1 = 100 to 500 V	6 = 600 to 800 V
2 = 200 to 500 V	7 = 400 to 1000 V (est)
3 = 250 V	8 = 900 V
4 = 500 V	9 = 1200 V
5 = 400 to 600 V	y = 4000 = \$445, p

- 5. Keep the component leads shorted together whenever possible.
- 6. Pick up components by their bodies, never by their leads.

- surface. earth ground.
- 8. Avoid handling components in areas that have a floor or work-surface covering capable of generating a static charge.
- 7. Do not slide the components over any 9. Use a soldering iron that is connected to
 - 10. Use only approved antistatic, vacuum-type desoldering tools for component removal.

PREVENTIVE MAINTENANCE

INTRODUCTION

Preventive maintenance consists of cleaning, visual inspection, and checking instrument performance. When performed regularly, it may prevent instrument malfunction and enhance instrument reliability. The severity of the environment in which the instrument is used determines the required frequency of maintenance. An appropriate time to accomplish preventive maintenance is just before instrument adjustment. , adjostmett. Transportation (STEC) is 7674 gallot systematique for systematic

GENERAL CARE

The cabinet minimizes accumulation of dust inside the instrument and should normally be in place when operating the oscilloscope. The optional front cover for the instrument provides both dust and damage protection for the front panel and crt. Whenever the instrument is stored or is being transported, the front cover should be used.

& CAUTION &

Do not use chemical cleaning agents that might damage the plastics used in this instrument. Use a nonresidue-type cleaner, preferably isopropyl alcohol or a solution of 1% mild detergent with 99% water. Before using any other type of cleaner, consult your Tektronix Service Center or representative.

INSPECTION AND CLEANING

The instrument should be inspected and cleaned as often as operating conditions require. Accumulation of dust in the instrument can cause overheating and component breakdown. Dust on components acts as an insulating blanket, preventing efficient heat dissipation. It also provides an electrical conduction

path that could result in instrument failure, especially under high-humidity conditions. engo yedhadi da sebi eksplorebab gilwe ee ei aqeeba qaa eask oo gaskara gara kira er oo oole, a

Exterior

INSPECTION. Inspect the external portions of the instrument for damage, wear, and missing parts; use Table 6-2 as a guide. Instruments that appear to have been dropped or otherwise abused should be checked thoroughly to verify correct operation and performance. Any problems found that could cause personal injury or could lead to further damage to the instrument should be repaired immediately.

to enacting operation of Economic Control of the Co

Do not allow moisture to get inside the instrument during external cleaning. Use only enough liquid to dampen the cloth or applicator. The application of an observe gibble of

CLEANING. Loose dust on the outside of the instrument can be removed with a soft cloth or small soft-bristle brush. The brush is particularly useful for dislodging dirt on and around the controls and connectors. Dirt that remains can be removed with a soft cloth dampened in a mild detergent-and-water solution. Do not use abrasive cleaners.

A plastic light filter is provided with the oscilloscope. Clean the light filter and the crt face with a soft lint-free cloth dampened with either isopropyl alcohol or a mild detergent-and-water solution. tave gran si en engrada ossili gasanda Gagada kaldaratan ga ares sa tave a darak

Interior and a serior details of this beautiful

To gain access to internal portions of the instrument for inspection and cleaning, refer to the Removal and Replacement Instructions in the Corrective Maintenance part of this section.

Table 6-2
External Inspection Checklist

Item at Nogelf	Inspect For the state of	Repair Action	
Cabinet and Front Panel	Cracks, scratches, deformations, and damaged hardware or gaskets.	Touch up paint scratches and replace defective parts.	
Front-panel controls	Missing, damaged, or loose knobs, buttons, and controls.	Repair or replace missing or defective items.	
Connectors **Connectors **Co	Broken shells, cracked insulation, and deformed contacts. Dirt in connectors.	Replace defective parts. Clean or wash out dirt.	
Carrying Handle	Correct operation.	Replace defective parts.	
Accessories and description	Missing items or parts of items, bent pins, broken or frayed cables, and damaged connectors.	Replace damaged or missing items, frayed cables, and defective parts.	
Cabinet and Front Panel	Cracks, scratches, deformations, and damaged hardware or gaskets.	Touch up paint scratches and replace defective parts.	
Front-panel controls	Missing, damaged, or loose knobs, buttons, and controls.	Repair or replace missing or defective items.	
Connectors	Broken shells, cracked insulation, and deformed contacts. Dirt in connectors.	Replace defective parts. Clean or wash out dirt.	
Carrying Handle	Correct operation.	Replace defective parts.	
Accessories	Missing items or parts of items, bent pins, broken or frayed cables, and damaged connectors.	Replace damaged or missing items, frayed cables, and defective parts.	

INSPECTION. Inspect the internal portions of the instrument for damage and wear, using Table 6-3 as a guide. Deficiencies found should be repaired immediately. The corrective procedure for most visible defects is obvious; however, particular care must be taken if heat-damaged components are found. Overheating usually indicates other trouble in the instrument; therefore, it is important that the cause of overheating be corrected to prevent recurrence of the damage.

If any electrical component is replaced, conduct a performance check for the affected circuit and for other closely related circuits (see Section 4). If repair or replacement work is done on any of the power supplies, conduct a complete performance check and, if so indicated, an instrument readjustment (see Sections 4 and 5).



To prevent damage from electrical arcing, ensure that circuit boards and components are dry before applying power to the instrument.

umini an Amd

CLEANING. To clean the interior, blow off dust with dry, low-pressure air (approximately 9 psi). Remove any remaining dust with a soft brush or a cloth dampened with a solution of mild detergent and water. A cotton-tipped applicator is useful for cleaning in narrow spaces and on circuit boards.

VOLT/DIV And SEC/DIV SWITCHES. These are maintenance free, DO NOT CLEAN.

Table 6-3
Internal Inspection Checklist

Itemina en 16 an	Inspect For an analysis	Repair Action
	Loose, broken, or corroded solder connections. Burned circuit boards. Burned, broken, or cracked circuit-run plating.	
Resistors	Burned, cracked, broken, or blistered.	Replace defective resistors. Check for cause of burned component and repair as necessary.
Solder Connections	Cold solder or rosin joints.	Resolder joint and clean with isopropyl alcohol.
Capacitors	Damaged or leaking cases. Corroded solder on leads or terminals.	Replace defective capacitors. Clean solder connections and flush with isopropyl alcohol.
Wiring and Cables	Loose plugs or connectors. Burned, broken, or frayed wiring.	Firmly seat connectors. Repair or replace defective wires or cables.
Chassis	Dents, deformations, and damaged hardware.	Straighten, repair, or replace defective hardware.

ECAUTION 3

Most spray-type circuit coolants contain Freon 12 as a propellant. Because many Freons adversely affect switch contacts, do not use spray-type coolants on the switches or attenuators. Carbon based solvents will damage the circuit board material.

LUBRICATION

Most of the potentiometers used in this instrument are permanently sealed and generally do not require periodic lubrication. All switches, both rotary— and lever—type, are installed with proper lubrication applied where necessary and will rarely require any additional lubrication. A regular periodic lubrication program for the instrument is, therefore, not recommended.

SEMICONDUCTOR CHECKS

Periodic checks of the transistors and other semiconductors in the oscilloscope are not recommended. The best check of semiconductor performance is actual operation in the instrument.

PERIODIC READJUSTMENT

To ensure accurate measurements, check the performance of this instrument every 2000 hours of operation, or if used infrequently, once each year. In addition, replacement of components may necessitate readjustment of the affected circuits.

Complete performance check and adjustment instructions are given in Sections 4 and 5. The performance check procedure can also be helpful in localizing certain troubles in the instrument. In some cases, minor problems may be revealed or corrected by readjustment. If only a partial adjustment is performed, see the interaction chart, Table 5-1, for possible adjustment interaction with other circuits.

TROUBLESHOOTING

INTRODUCTION

Preventive maintenance performed on a regular basis should reveal most potential problems before an instrument malfunctions. However, should troubleshooting be required, the following information is provided to facilitate location of a fault. In addition, the material presented in the Theory of Operation and Diagrams sections of this manual may be helpful while troubleshooting.

TROUBLESHOOTING AIDS

Schematic Diagrams

Complete schematic diagrams are located on tabbed foldout pages in the Diagrams section. Portions of circuitry mounted on each circuit board are enclosed by heavy black lines. The assembly number and name of the circuit are shown near either the top or the bottom edge of the enclosed area.

Functional blocks on schematic diagrams are outlined with a wide grey line. Components within the outlined area perform the function designated by the block label. The Theory of Operation uses these functional block names when describing circuit operation as an aid in cross-referencing between the theory and the schematic diagrams.

Component numbers and electrical values of components in this instrument are shown on the schematic diagrams. Refer to the first page of the Diagrams section for the reference designators and symbols used to identify components. Important voltages and waveform reference numbers (enclosed in hexagonal-shaped boxes) are also shown on each diagram. Waveform illustrations are located adjacent to their respective schematic diagram.

erano fericaliano (see anti-estimatente etimatente etim

Circuit Board Illustrations

Circuit board illustrations showing the physical location of each component are provided for use in conjunction with each schematic diagram. Each circuit board illustration is found in the Diagrams section on the back of a foldout page, preceding the first schematic diagram(s) to which it relates.

The locations of waveform test points are marked on the circuit board illustrations with hexagonal outlined numbers corresponding to the waveform numbers on both the schematic diagram and the waveform illustrations.

Also provided in the Diagrams section is an illustration of the bottom side of the Main circuit board. This illustration aids in troubleshooting by showing the connection pads for the components mounted on the top side of the circuit board. By using this illustration, circuit tracing and probing for voltages and signals that are inaccessible from the top side of the circuit board may be achieved without dismantling portions of the instrument.

Circuit Board Locations

The placement of each circuit board in the instrument is shown in circuit board locator illustrations. These illustrations are located on foldout pages along with the circuit board illustration.

Circuit Board Interconnections

Circuit Board Interconnections (Diagram 9) is provided as an aid in tracing a signal path between circuit boards. All wire, plug, and jack numbers are shown along with their associated wire or pin numbers.

Power Distribution and a second of the second

Power Distribution (Diagram 8) is provided to aid in troubleshooting power-supply problems. This diagram shows the service jumper connections used to apply power to the various circuit boards. Excessive loading on a power supply by a circuit board fault may be isolated by disconnecting the appropriate service jumpers.

Grid Coordinate System

Each schematic diagram and circuit board illustration has a grid border along its left and top edges. A table located adjacent to each diagram lists the grid coordinates of each component shown on that diagram. To aid in physically locating components on the circuit board, this table also lists the grid coordinates of each component on the circuit board illustration.

Near each circuit board illustration is an alphanumeric listing of all components mounted on that circuit board. The second column in each listing identifies the schematic diagram in which each component can be found. These component-locator tables are especially useful when more than one schematic diagram is associated with a particular circuit board.

Component Color Coding

Information regarding color codes and markings of resistors and capacitors is located on the colorcoding illustration (Figure 9-1) at the beginning of the Diagrams section.

RESISTOR COLOR CODE. Resistors used in this instrument are carbon-film, composition, or precision metal-film types. They are usually color coded with the EIA color code; however, some metal-film type resistors may have the value printed on the body. The color code is interpreted starting with the stripe nearest to one end of the resistor. Composition resistors have four stripes: these represent two significant digits, a multiplier, and a tolerance value. Metal-film resistors have five stripes representing three significant digits, a multiplier, and a tolerance value.

CAPACITOR MARKINGS. Capacitance values of common plastic capacitors and small electrolytics are marked on the side of the capacitor body. Small, machine-insertable capacitors are numerically coded in picofarads. The first two numbers are the significant digits and the third number (if a three-number code) is the number of zeros following the digits. When there are two numbers separated by the letter "R", the two numbers are the significant digits; the letter marks the radix (decimal point). Some examples of this type of capacitor coding are as follows:

475 = 47 00000 pF = 4.7 μF 472 = 47 00 pF = 0.0047 μF 471 = 47.0 pF4R7 = 4.7 pF

The code numbers may be difficult to locate and read on installed parts. Capacitor values may be found by referencing the circuit designation number

in the Replaceable Electrical Parts list.

DIODE COLOR CODE. The cathode end of each glass-encased diode is indicated by either a stripe, a series of stripes or a dot. For most diodes marked with a series of stripes, the color combination of the stripes identifies three digits of the Tektronix Part Number, using the resistor color-code system. The cathode and anode ends of a metal-encased diode may be identified by the diode symbol marked on its body.

Semiconductor Lead Configurations

Figure 9-2 in the Diagrams section shows the lead configurations for semiconductor devices used in the instrument. These lead configurations and case styles are typical of those used at completion of the instrument design. Vendor changes and performance improvement changes may result in changes of case styles or lead configurations. If the device in question does not appear to match the configuration shown in Figure 9-2, examine the associated circuitry or consult the manufacturer's data sheet.

TROUBLESHOOTING EQUIPMENT

The equipment listed in Table 4-1 of this manual. or equivalent equipment, may be useful when troubleshooting this instrument.

TROUBLESHOOTING TECHNIQUES

rateuwa arabigaki

The following procedure is arranged in an order that enables checking simple trouble possibilities before requiring more extensive troubleshooting. The first four steps ensure proper control settings, connections, operation, and adjustment. If the trouble is not located by these checks, the remaining steps will aid in locating the defective component. When the defective component is located, replace it using the appropriate replacement procedure given under Corrective Maintenance in this section.

ECAUTION }

Before using any test equipment to make measurements on static-sensitive, currentsensitive, or voltage-sensitive components or assemblies, ensure that any voltage or current supplied by the test equipment does not exceed the limits of the component to be tested.

1. Check Control Settings

Incorrect control settings can give a false indication of instrument malfunction. If there is any question about the correct function or operation of any control, refer to either the Operating Information in Section 2 of this manual or to the Operators Manual.

2. Check Associated Equipment

Before proceeding, ensure that any equipment used with the instrument is operating correctly. Verify that input signals are properly connected and that the interconnecting cables are not defective. Check that the ac-power-source voltage to all equipment is correct.

To avoid electrical shock, disconnect the instrument from the ac power source before making a visual inspection of the internal circuitry.

3. Visual Check

and the same

Perform a visual inspection. This check may reveal broken connections or wires, damaged components, semiconductors not firmly mounted. damaged circuit boards, or other clues to the cause of an instrument malfunction.

WARNING TO SEE THE SECOND OF SECOND S

Dangerous potentials exist at several points throughout this instrument. If it is operated with the cabinet removed, do not touch exposed connections or components.

4. Check Instrument Performance and Adjustment 3

Check the performance of either those circuits where trouble appears to exist or the entire instrument. The apparent trouble may be the result of misadjustment. Complete performance check and adjustment instructions are given in Sections 4 and 5 of this manual.

5. Isolate Trouble to a Circuit

To isolate problems to a particular area, use any symptoms noticed to help locate the trouble. Refer to the troubleshooting charts in the Diagrams section as an aid in locating a faulty circuit.

6. Check Power Supplies

When trouble symptoms appear in more that one circuit, first check the power supplies; then check the affected circuits by taking voltage and waveform readings. Check first for the correct output voltage of each individual supply. These voltages are measured between the power supply test points and ground (see the associated circuit board illustration and Table 6-5).

Voltage levels may be measured either with a DMM or with an oscilloscope. Voltage ripple amplitudes must be measured using an oscilloscope. Before checking power-supply circuitry, set the INTENSITY control to normal brightness, the SEC/DIV switch to 0.1 ms, the Trigger MODE to P-P AUTO, and the Vertical MODE switch to CH 1.

When measuring ripple, use a 1X probe. The ripple values listed are based on a system limited in bandwidth to 30 kHz. Using a system with wider bandwidth will result in higher readings.

If the power-supply voltages and ripple are within the ranges listed in Table 6-4, the supply can be assumed to be working correctly. If they are outside the range, the supply may be either misadjusted or operating incorrectly. Use the Power Supply and CRT Display subsection in the Adjustment Procedure to adjust the -8.6-V supply.

A defective component elsewhere in the instrument can create the appearance of a power-supply problem and may also affect the operation of other circuits.

Acceptance of the control of the con Table 6-4 Power Supply Voltage and Ripple Limits

Power Supply	Test Point	Reading (Volts)	P-P Ripple
		-8.56 to -8.64	5 mV
+5.0 V ₁	W991	+4.85 to +5.15	5 mV
+8.6 V ₁	w987	+8.34 to +8.86	5 mV
+102.0 V	e (e et la la W984 e e esten les	+98.9 to +105.0	20 mV
+205.0 V	W985	+198.8 to +211.1	50 mV
+22°V unreg	W752	Approx. +24 V	Approx. 1 V a
^a Set SEC/DIV switch to X-Y		A SECULAR SECTION OF A SEC	

7. Check Circuit Board Interconnections

After the trouble has been isolated to a particular circuit, again check for loose or broken connections, improperly seated semiconductors, and heat-damaged components.

8. Check Voltages and Waveforms

Often the defective component can be located by checking circuit voltages or waveforms. Typical voltages are listed on the schematic diagrams. Waveforms indicated on the schematic diagrams by hexagonal-outlined numbers are shown adjacent to the diagrams. Waveform test points are shown on the circuit board illustrations.

am jak jaka meran**note**k ma

Voltages and waveforms Indicated on the schematic diagrams are not absolute and may vary slightly between instruments. To establish operating conditions similar to those used to obtain these readings, see the Voltage and Waveform Setup Conditions preceding the waveform illustrations in the Diagrams section. Note the recommended test equipment, front-panel control settings, voltage and waveform conditions, and cableconnection instructions. Any special control settings required to obtain a given waveform are noted under the waveform illustration. Changes to the control settings from the initial setup, other than those noted, are not required.

9. Check Individual Components

WARNING

To avoid electric shock, always disconnect the instrument from the ac power source before removing or replacing components.

The following procedures describe methods of checking individual components. Two-lead components that are soldered in place are most accurately checked by first disconnecting one end from the circuit board. This isolates the measurement from the effects of the surrounding circuitry.

See Figure 9-1 for component value identification and Figure 9-2 for semiconductor lead configurations.

CAUTION

When checking semiconductors, observe the static-sensitivity precautions located at the beginning of this section.

TRANSISTORS. A good check of a transistor is actual performance under operating conditions. A transistor can most effectively be checked by substituting a known-good component. However, be sure that circuit conditions are not such that a replacement transistor might also be damaged. If substitute transistors are not available, use a dynamic-type transistor checker for testing. Static-type transistor checkers are not recommended, since they do not check operation under simulated operating conditions.

When troubleshooting transistors in the circuit with a voltmeter, measure both the emitter-to-base and emitter-to-collector voltages to determine whether they are consistent with normal circuit voltages. Voltages across a transistor may vary with the type of device and its circuit function.

Some of these voltages are predictable. The emitter-to-base voltage for a conducting silicon transistor will normally range from 0.6 V to 0.8 V. The emitter-to-collector voltage for a saturated transistor is about 0.2 V. Because these values are small, the best way to check them is by connecting a sensitive voltmeter across the junction rather than comparing two voltages taken with respect to ground. If the former method is used, both leads of the voltmeter must be isolated from ground.

If voltage values measured are less than those just given, either the device is shorted or no current is flowing in the external circuit. If values exceed the emitter-to-base values given, either the junction is reverse biased or the device is defective. Voltages exceeding those given for typical emitter-to-collector values could indicate either a nonsaturated device operating normally or a defective (open-circuited) transistor. If the device is conducting, voltage will be developed across the resistors in series with it; if open, no voltage will be developed across the resistors unless current is being supplied by a parallel path.

E CAUTION &

When checking emitter-to-base junctions, do not use an ohmmeter range that has a high internal current. High current may damage the transistor. Reverse biasing the emitter-to-base junction with a high current may degrade the current-transfer ratio (Beta) of the transistor.

A transistor emitter-to-base junction also can be checked for an open or shorted condition by measuring the resistance between terminals with an ohmmeter set to a range having a low internal source current, such as the R X 1-kW range. The junction resistance should be very high in one direction and much lower when the meter leads are reversed.

When troubleshooting a field-effect transistor (FET), the voltage across its elements can be checked in the same manner as previously described for other transistors. However, remember that in the normal depletion mode of operation, the gate-to-source junction is reverse biased; in the enhanced mode, the junction is forward biased.

INTEGRATED CIRCUITS. An integrated circuit (IC) can be checked with a voltmeter, test oscilloscope, or by direct substitution. A good understanding of circuit operation is essential when troubleshooting a circuit having IC components. Use care when checking voltages and waveforms around the IC so that adjacent leads are not shorted together. An IC test clip provides a convenient means of clipping a test probe to an IC.

ECAUTION }

When checking a diode, do not use an ohmmeter scale that has a high internal current. High current may damage a diode. Checks on diodes can be performed in much the same manner as those on transistor emitterto-base junctions.

DIODES. A diode can be checked for either an open or a shorted condition by measuring the

resistance between terminals with an ohmmeter set to a range having a low internal source current, such as the R \times 1-k Ω range. The diode resistance should be very high in one direction and much lower when the meter leads are reversed.

Silicon diodes should have 0.6 V to 0.8 V across their junctions when conducting; Schottky diodes about 0.2 V to 0.4 V. Higher readings indicate that they are either reverse biased or defective, depending on polarity.

RESISTORS. Check resistors with an ohmmeter. Refer to the Replaceable Electrical Parts list for the tolerances of resistors used in this instrument. A resistor normally does not require replacement unless its measured value varies widely from its specified value and tolerance.

INDUCTORS. Check for open inductors by checking continuity with an ohmmeter. Shorted or partially shorted inductors can usually be found by checking the waveform response when high-frequency signals are passed through the circuit.

CAPACITORS. A leaky or shorted capacitor can best be detected by checking resistance with an ohmmeter set to one of the highest ranges. Do not exceed the voltage rating of the capacitor. The resistance reading should be high after the capacitor is charged to the output voltage of the ohmmeter. An open capacitor can be detected with a capacitance meter or by checking whether the capacitor passes ac signals.

10. Repair and Adjust the Circuit

If any defective parts are located, follow the replacement procedures given under Corrective Maintenance in this section. After any electrical component has been replaced, the performance of that circuit and any other closely related circuit should be checked. Since the power supplies affect all circuits, performance of the entire instrument should be checked if work has been done on the power supplies or if the power transformer has been replaced. Readjustment of the affected circuitry may be necessary. Refer to the Performance Check Procedure and Adjustment Procedure, Sections 4 and 5 of this manual and to Table 5–1 (Adjustments Affected by Repairs).

CORRECTIVE MAINTENANCE

INTRODUCTION

Corrective maintenance consists of component replacement and instrument repair. This part of the manual describes special techniques and procedures required to replace components in this instrument. If it is necessary to ship your instrument to a Tektronix Service Center for repair or service, refer to the repackaging information in Section 2 of this manual.

MAINTENANCE PRECAUTIONS

To reduce the possibility of personal injury or instrument damage, observe the following precautions.

- 1. Disconnect the instrument from the acpower source before removing or installing components.
- 2. Verify that the line-rectifier filter capacitors are discharged prior to performing any servicing.
- 3. Use care not to interconnect instrument grounds which may be at different potentials (cross grounding).
- 4. When soldering on circuit boards or small insulated wires, use only a 15-watt, pencil-type soldering iron.

Suggest of the Carlotte State of the Carlott

OBTAINING REPLACEMENT PARTS

Most electrical and mechanical parts can be obtained through your local Tektronix Field Office or representative. However, many of the standard electronic components can usually be obtained from a local commercial source. Before purchasing or ordering a part from a source other than Tektronix, Inc., please check the Replaceable Electrical Parts list for the proper value, rating, tolerance, and description.

NOTE

Physical size and shape of a component may affect instrument performance, particularly at high frequencies. Always use direct-replacement components, unless it is known that a substitute will not degrade instrument performance.

Special Parts

In addition to the standard electronic components, some special parts are used in the instrument. These components are manufactured or selected by Tektronix, Inc., to meet specific performance requirements, or are manufactured for Tektronix, Inc., in accordance with our specifications. The various manufacturers can be identified by referring to the Cross Index-Manufacturer's Code number to Manufacturer at the beginning of the Replaceable Electrical Parts list. Most of the mechanical parts used in this instrument were manufactured by Tektronix, Inc. Order all special parts directly from your local Tektronix Field Office or representative.

Ordering Parts and the second of the production of the second of the sec

When ordering replacement parts from Tektronix, Inc., be sure to include all of the following information:

- 1. Instrument type (include all modification and option numbers).
 - 2. Instrument serial number.
- 3. A description of the part (if electrical, include its full circuit component number).
 - 4. Tektronix part number.

MAINTENANCE AIDS

The maintenance aids listed in Table 6-5 include items required for performing most of the maintenance procedures in this instrument. Equivalent products may be substituted for those given, provided their characteristics are similar.

Table 6-5
Maintenance Aids

Description	Specification	Usage	Example
1. Soldering Iron	15 to 25 W.	General soldering and unsoldering.	Antex Precision Model C.
2. Torx Screwdriver	Torx tips #T9 and #T15.	Assembly and disassembly.	Tektronix p/n #T9 003-0965-00 #T15 003-0966-00.
3. Nutdrivers	1/4 inch, 7/16 inch, and 1/2 inch.	Assembly and disassembly.	Xcelite #8, #10, #14, and #16.
4. Open-end Wrench	5/16 inch and 1/2 inch.	Channel Input, EXT BNC connectors and Transformer.	era (n. 1915) 1 Torresto de Austria
5. Hex Wrenches	1/16 inch.	Assembly and disassembly.	Allen wrenches.
6. Long-nose Pliers		Component removal and replacement.	
7. Diagonal Cutters	, de totale, sije politike i sije. In tre ne i verketerek i krite, ko Longrafia i kriteria i na l	Component removal and replacement.	
8. Vacuum Solder Extractor	No Static Charge Retention.	Unsoldering components.	Pace Model PC-10.
9. 1X Probe	The state of the s	Power supply ripple check.	Tektronix P6101 Probe (X1), p/n 010-6101-03.
10. Lubricant	No-Noise.®	Switch lubrication.	Tektronix p/n 006-0442-02.

RIBBON-CABLE CONNECTIONS

Connections between circuit boards are accomplished with ribbon cables. One end of the ribbon cables is inserted into the multipin connector while the other end is soldered to the circuit board. The ribbon cable to the multipin connector can be removed or installed by pressing down on the release bar of the connector as shown in Figure 6-1. To remove the ribbon cable, pull it straight out from the connector; to install the ribbon cable, insert the bare wires up to the insulation into the connector. Remove pressure from the release bare, the ribbon cable will be lock firmly into the connector.

To provide correct orientation of a cable, a number "1" is stamped on the circuit board and on top of the multipin connector. The Index wire of the ribbon is striped a different color than the rest of the cable. Align the index wire with the pin 1 indicator when reinserting the ribbon cable into its connector. Ensure the ribbon cable is evenly trimmed and 5 mm of wire (about 1/4 inch) is exposed for correct insertion into the connector.

If any individual wire in the cable is faulty, the entire ribbon cable should be replaced. When unsoldering the ribbon cable from the circuit board, note the location of the ribbon cable for reinstallation purposes. Align the index wire with the square pad on the circuit board.

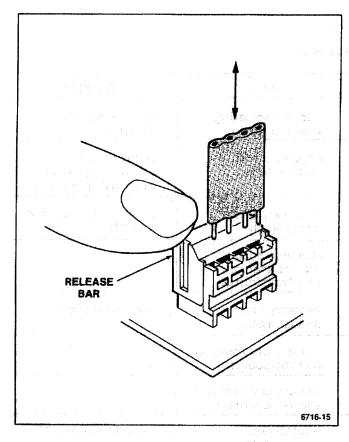


Figure 6-1. Multi-connector holder orientation.

TRANSISTORS AND INTEGRATED CIRCUITS

Transistors and integrated circuits should not be replaced unless they are actually defective. If removed from their sockets or unsoldered from the circuit board during routine maintenance, return them to their original circuit board locations. Unnecessary replacement or transposing of semi-conductor devices may affect the adjustment of the instrument. When a semiconductor is replaced, check the performance of any circuit that may be affected.

Any replacement component should be of the original type or a direct replacement. Bend transistor leads to fit their circuit board holes, and cut the leads to the same length as the original component. See Figure 9-2 in the Diagrams section for lead-configuration illustrations.

Power-supply transistors Q933, Q942, and Q946 are insulated from the chassis by a heat-transferring pad and insulation bushing. Reinstall the pad and bushing when replacing this transistor.

NOTE

After replacing a power transistor, check that the collector is not shorted to the chassis before applying power to the instrument.

To remove socketed, dual-in-line-packaged (DIP) integrated circuits, pull slowly and evenly on both ends of the device. Avoid disengaging one end of the integrated circuit from the socket before the other, since this may damage the pins.

To remove a soldered DIP IC when it is going to be replaced, clip all the leads of the device and remove the leads from the circuit board one at a time. If the device must be removed intact for possible reinstallation, do not heat adjacent conductors consecutively. Apply heat to pins at alternate sides and ends of the IC as solder is removed. Allow a moment for the circuit board to cool before proceeding to the next pin.

SOLDERING TECHNIQUES

The reliability and accuracy of this instrument can be maintained only if proper soldering techniques are used to remove or replace parts. General soldering techniques, which apply to maintenance of any precision electronic equipment, should be used when working on this instrument.

WARNING

To avoid an electric-shock hazard, observe the following precautions before attempting any soldering: turn the instrument off, disconnect it from the ac power source, and wait at least three minutes for the line-rectifier filter capacitors to discharge.

Use rosin-core wire solder containing 63% tin and 37% lead. Contact your local Tektronix Field Office or representative to obtain the names of approved solder types.

When soldering on circuit boards or small insulated wires, use only a 15-watt, pencil-type soldering iron. A higher wattage soldering iron may cause etched-circuit conductors to separate from the circuit board base material and melt the insulation on small wires. Always keep the soldering-iron tip properly tinned to ensure best heat transfer from the iron tip to the solder joint. Apply only enough solder to make a firm joint. After soldering, clean the area around the solder connection with an approved flux-removing solvent (such as isopropyl alcohol) and allow it to air dry.

Attempts to unsolder, remove, and resolder leads from the component side of a circuit board may cause damage to the reverse side of the circuit board.

The following techniques should be used to replace a component on a circuit board:

1. Touch the vacuum desoldering tool to the lead at the solder connection. Never place the iron directly on the circuit board; doing so may damage the circuit board.

NOTE

Some components are difficult to remove from the circuit board due to a bend placed in the component leads during machine insertion. To make removal of machine-inserted components easier, straighten the component leads on the reverse side of the circuit board.

2. When removing a multipin component, especially an IC, do not heat adjacent pins consecutively. Apply heat to the pins at alternate sides and ends of the IC as solder is removed. Allow a moment for the circuit board to cool before proceeding to the next pin.

ECAUTION 3

Excessive heat can cause the etched-circuit conductors to separate from the circuit board. Never allow the solder extractor tip to remain at one place on the circuit board for more than three seconds. Damage caused by poor soldering techniques can void the instrument warranty.

- 3. Bend the leads of the replacement component to fit the holes in the circuit board. If the component is replaced while the circuit board is installed in the instrument, cut the leads so they protrude only a small amount through the reverse side of the circuit board. Excess lead length may cause shorting to other conductive parts.
- 4. Insert the leads into the holes of the circuit board so that the replacement component is positioned the same as the original component. Most components should be firmly seated against the circuit board.
- 5. Touch the soldering iron to the connection and apply enough solder to make a firm solder joint.

Do not move the component while the solder hardens.

- 6. Cut off any excess lead protruding through the circuit board (if not clipped to the correct length in step 3).
- 7. Clean the area around the solder connection with an approved flux-removing solvent. Be careful not to remove any of the printed information from the circuit board.

REMOVAL AND REPLACEMENT INSTRUCTIONS

The exploded view drawings in the Replaceable Mechanical Parts list (Section 10) may be helpful during the removal and reinstallation of individual subassemblies or components. Circuit board and component locations are shown in the Diagrams section.

Variedy (groupe a second).

Cabinet

WARNING

To avoid electric shock, disconnect the instrument from the ac-power-input source before removing or replacing any component or assembly.

To remove the instrument cabinet, perform the following steps:

- 1. Disconnect the power cord from the instrument. For instruments with a power-cord securing clamp, remove the Phillips-head screw holding the power-cord securing clamp before disconnecting the power cord.
- 2. Remove two screws and the two power cord retainers from the rear panel (located on each side). Remove the rear panel.
- 3. Remove two screws from the rear panel (located on each side) and remove it from the instrument.
- 4. Remove four screws, one from the left-rear side and three from the right-rear side of the cabinet.
- 5. Use one hand to rise the center rear of the cabinet until the tab clears the slot in the rear chassis. With the other hand, push the instrument chassis forward until it clears the cabinet tab.

- 6. Pull the front panel and attached chassis forward and out of the cabinet.
- 7. To reinstall the cabinet, perform the reverse of the preceding steps. Ensure that the cabinet tab is inserted in the rear-chassis slot, and the cabinet is flush with the rear of the chassis.
- 8. Reinstall the rear panel. Ensure the rear chassis tabs are inserted into the slots in the rear panel properly (slots are located just above the bottom rear feet), and the screw holes in the rear chassis and rear panel are properly aligned.
- 9. Reconnect the power cord and power-cord securing clamp (if removed in step 1).

Cathode-Ray Tube in the rest was each grown have teached when the grown and teached against and the company again.

WARNING

Use care when handling a crt. Breakage of the crt may cause high-velocity scattering of glass fragments (implosion). Protective clothing and safety glasses should be worn. Avoid striking the crt on any object which may cause it to crack or implode. When storing a crt, either place it in a protective carton or set it face down on a smooth surface in a protected location with a soft mat under the faceplate.

The crt can be removed and reinstalled as follows:

- 1. Unsolder the Trace Rotation wires (J987) from the Front-Panel circuit board (note the connection locations and wire colors for reinstallation reference).
- 2. Remove two front-panel screws that retain the plastic crt frame and light filter to the front panel. Remove the crt frame and light filter from the instrument.
- 3. With the rear of the instrument facing you, place the fingers of both hands over the front edge of the front subpanel. Then, using both thumbs, press forward gently on the crt funnel near the front of the crt. When the crt base pins disengage from the socket, remove the crt and the crt shield through the instrument front panel. Place the crt in a safe place until it is reinstalled. If the plastic crt corner pads fall out, save them for reinstallation.

hatheware of the property NOTE and the property and the second of the property of the second of the

When installing the crt into the instrument, reinstall any loose plastic crt corner pads that are out of place. Ensure all crt pins are straight and that the indexing keys on the crt base, socket, and shield are aligned. Ensure that the ground clip from the crt support bracket makes contact only with the outside of the crt shield.

To reinstall the crt, perform the reverse of the preceding steps.

Power Transformer

The Power Transformer (T901) can be removed and reinstalled as follows:

- 1. Remove the top Power Supply shield by performing the following instructions.
- a. Rotate the instrument until the rear chassis is facing you.
- b. Using both hands, place the fingers underneath and the thumbs on top of the Power Supply shield.
 - c. Gently push the Power Supply shield towards the rear chassis and at the same time pull up on the shield until the tabs are clear of the slots in the inner chassis.
 - d. Pull the Power Supply shield towards the front of the instrument with a slight upward tilt until the rear tabs are clear of the slots in the rear chassis.
- 2. Disconnect P902, a seven-wire connector from J902 on the Mains Input circuit board. Note the orientation of the connector for proper reinstallation.
- 3. Remove the four nuts and lock washers from the Power Transformer (inside the instrument) without removing the support screws (supporting the transformer) from the rear panel. Note the physical orientation of the Power Transformer.
- 4. Supporting the Transformer with one hand, pull the four screws out until the transformer is free (leaving the screws inside of the supports). Remove the transformer and the four screws and supports from the instrument.

To reinstall the Power Transformer, perform the reverse of the preceding steps.

Mains Input Circuit Board

The Mains Input circuit board can be removed and reinstalled as follows:

- 1. Perform steps 1 and 2 of the Power Transformer procedure.
- 2. Unsolder W903, a three wire ribbon from Mains Input circuit board.
- 3. Remove the POWER knob shaft by inserting a scribe (or similar tool) in the notch between the end of the knob shaft and the end of the Power switch shaft and gentry pry the connection apart. Pull the POWER knob shaft out through the front panel.
- 4. Remove the two screws and nuts that secure the power cord receptacle to the rear chassis.
- 5. Remove the grounding screw and nut (top corner) that secure the Mains Input circuit board to the inner chassis.
- 6. Pull the Mains Input circuit board and attached shield towards the inner chassis and up out of the instrument.

To reinstall the Mains Input circuit board, perform the reverse of the preceding steps.

Timebase/Attenuator Circuit Board Assembly

The Timebase/Attenuator circuit board assembly can be removed and reinstalled as follows:

- 1. Place the instrument on its side (CRT down) and unsolder the following wire straps and resistors, noting their locations for reinstallation reference:
 - a. Unsolder the two resistors from the CH 1 VOLTS/DIV and CH 2 VOLTS/DIV switches to the Front-Panel circuit board.
 - b. Unsolder the wire strap to the CH 1 OR X connector ground lug from the Timebase/ Attenuator circuit board wire strap.
 - c. Unsolder the wire strap to the CH 2 OR Y connector ground lug from the Timebase/ Attenuator circuit board wire strap.
 - d. Unsolder and pull the two wire straps from the Front-Panel circuit board that comes from the Attenuator circuit board.

- 2. Place the instrument down (normal position) and use a 1/16-inch hex wrench to loosen the set screws on the CH 1 VOLTS/DIV, CH 2 VOLTS/DIV, and SEC/DIV Variable knobs.
- 3. Remove CH 1 VOLTS/DIV, CH 2 VOLTS/DIV, and SEC/DIV Variable knobs and switch knobs from the instrument.
- 4. Disconnect the following cables from the Timebase/Attenuator circuit board assembly, noting their locations for reinstallation reference:
 - a. J90, a six-wire cable located at the rear edge of the circuit board.
- b. J755, a four-wire cable located at the rear aright-hand corner of the circuit board.
 - c. J30, a four-wire cable located to the left of the CH 1 attenuator switch.
 - d. J80, a four-wire cable located between the CH 1 and CH 2 attenuator switches.
 - e. J7, a six-wire cable located between the CH 2 attenuator switch and the SEC/DIV switch.
 - f. J701, a six-wire cable located at the front right-hand corner of the circuit board.
- 5. Remove the following three screws that secure the Timebase/Attenuator circuit board to the post spacers.
- a. One screw from the right-rear corner of the Timebase/Attenuator circuit board assembly.
- b. Two screws from the extreme left side of the Timebase/Attenuator circuit board assembly.
- 6. Remove the Focus knob shaft by pulling the shaft with one hand towards the front while holding the Focus pot shaft with the other hand.
- 7. Pull the Timebase/Attenuator circuit assembly board straight back from the front of the instrument until the attenuator switches are clear of the Front-Panel circuit board. Then lift out the entire assembly through the top of the instrument.

NOTE

If accessibility to the bottom of the Timebasel Attenuator circuit board is desired perform steps 8 through 10.

- 8. Remove one screw from the center front bottom of the attenuator shield.
- 9. Remove two screws from the front corners of the Timebase/Attenuator circuit board and two nuts from the front corners of the attenuator shield.
- 10. Remove the attenuator shield by pulling it back until the shield tab clears the Timebase/Attenuator ground bracket.

To reinstall the Timebase/Attenuator circuit board assembly, perform the reverse of the preceding steps.

Front-Panel Circuit Board

The Front-Panel circuit board can be removed and reinstalled as follows:

- 1. Perform the Timebase/Attenuator circuit board assembly removal procedure.
- 2. Remove the knobs from the following control shafts by pulling them straight out from the front panel:
 - a. INTENSITY.
- b. Channel 1 and Channel 2 POSITION.
 - c. Horizontal POSITION
- **** e. LEVEL.
- 3. Turn the instrument on its side (CRT down) and unsolder the following wire straps and resistors underneath the instrument, noting their locations for reinstallation reference:
 - a. Unsolder the two resistors and bare straps to the CH 1 OR X and CH 2 OR Y connectors and ground lugs from the Front-Panel circuit board.
 - b. Unsolder the resistor and ground strap to the EXT INPUT OR Z connector and ground lug from the Front-Panel circuit board.
- 4. Turn the instrument over again and unsolder the Trace Rotation wires (J987) from the Front-Panel circuit board (note the connection locations and wire colors for reinstallation reference).
- 5. Remove the Power Switch extension shaft by disengaging from power switch and pulling it out through the Front-Panel circuit board.
- 6. Disconnect the following six-wire cables from the front edge of Main circuit board, noting their locations for reinstallation reference: J1, J2, J3, J5, and J6.

- 7. Remove the five screws that secure the Front-Panel circuit board to the front chassis, noting their respective positions.
- 8. Remove the Front-Panel circuit board from the front chassis taking care not to lose the slider switch covers.

To reinstall the Front-Panel circuit board, perform the reverse of the preceding steps.

Main Circuit Board

All components on the Main circuit board are accessible either directly or by removing either the crt, Power Transformer or the Timebase/Attenuator circuit board assembly. Removal of the Main circuit board is required only when it is necessary to replace the circuit board with a new one.

The Main circuit board can be removed and reinstalled as follows:

- 1. Perform the Cathode-Ray Tube removal procedure.
- 2. Perform step 1 of the Power Transformer procedure.
- 3. Unsolder the three-wire cable from the FOCUS potentiometer. The FOCUS potentiometer is located on the rear of the inner chassis.
- 4. Unsolder W893 from the Main circuit board. The cable is connected to the Focus pot located on the rear of the inner chassis.
- 5. Unsolder W903, a three ribbon from the Mains Input circuit board.
- 6. Disconnect the following cables from the Timebase/Attenuator circuit board assembly, noting their locations for reinstallation reference:
 - a. J90, a six-wire cable located at the rear edge of the circuit board.
 - b. J755, a four-wire cable located at the rear right-hand corner of the circuit board.
 - c. J30, a four-wire cable located to the left of the CH 1 attenuator switch.
 - d. J80, a four-wire cable located between the CH 1 and CH 2 attenuator switches.
 - e. J7, a six-wire cable located between the CH 2 attenuator switch and the SEC/DIV switch.
 - f. J701, a six-wire cable located at the front right-hand corner of the circuit board.

- 7. Rotate the instrument until the rear chassis is facing you.
- 8. Remove the two screws (lower right corner) that secure the heat sink for the vertical output transistors to the rear chassis.
- 9. Remove the one screw (lower left corner) that secures the heat sink for the power supply transistors to the rear chassis.
- 10. Turn instrument upside down and rotate it until the front is facing you.
- 11. Unsolder the wire connected to the PROBE ADJUST terminal from the Main circuit board.
- 12. Remove the bottom power supply shield by inserting a narrow-blade screwdriver at each corner of the projecting edge and gently pry up until the two tabs are cleared of the slots in the Main circuit board. Pull and remove the shield out from underneath the rear chassis.
- 13. Remove four screws from the middle of the Main circuit board that secures the Timebase/Attenuator post spacers and inner chassis to the Main circuit board.
- 14. Remove three screws and two nuts that secure the Main circuit board and Timebase/Attenuator spacer post to the left side of the chassis frame.

- 15. Remove three screws and nuts that secure the Main circuit board to the right side of the chassis frame.
- 16. Pull the Main circuit board forward to clear the guides on the rear chassis.

NOTE

The front edge of the Main circuit board needs to be tilted out and away from the instrument to allow the removal of the ribbon cables.

- 17. Disconnect the following six-wire cables from the front edge of Main circuit board, noting their locations for reinstallation reference: J1, J2, J3, J5, and J6.
- 18. Lift the Main circuit board out of the instrument.

To reinstall the Main circuit board, perform the reverse of the preceding steps. Ensure that the Main circuit board is secure in the guides of the rear chassis.

ng meganah di dinangkan di terbesah sebesah sebesah di dinangkan sebesah sebesah

· Hand State (1995) - The Company of the American Ameri

ranness, sine Elemente de Solonie et la Opfinia en Novi (1917) Alannes de Sagrada et la regional de Solonie et la desarra de Solonie et la Solonie et la Solonie et la Solonie Elemente de Solonie et la Solonie et la

And the property of the property

(4) A section of the control of t

(Additional Processor Section of the Control of the Control of the Section of the Control of the Section of the Control of

n de proposition de la general de la companie de l La companie de la companie de

The product of the second of th

All Delegan

Enter in a tropical in a filt of the provincial of the deficontribution for growing makes their population of the content of the define of a residence makes and the content of the content of the first of the content of the conten

The first services a society is a wind of a stringer of the st

ger (fig. 16 mer 1955) er i mar (1966) erin er filler i det (1966). Alexandre

ents and ទៅមនុស្ស (Constitut Clubbon) នៅទីទើកការដំបែលការ៉ូបនៅបានបើ នេះសាស្តីស្វាយការប្រទេស (Seam Lasting) នៅសេចសាស់សាស់សាស់សាស់សាស់សាស់ ការមេស (Bessel Ha) (Seam) (Bessel Mark Constitution (Constitution Constitution (Constitution Constitution Cons

OPTIONS AND ACCESSORIES

This section contains a general description of options that can be included with the original instrument order. Options available at the time of manual publication are listed as follows:

Option 1C	Low Cost Camera
Option 1K	Instrument Cart
Option 1R	Rackmounting
Option 1T	Transit Case
Option 02	Front Panel Cover
	and Accessories
	Pouch
Option 22	24-1X Signal
	Adapters
Option 23	Two-10X Standard
	P6103 Probes
Option 24	Two-1X to 10X
	P6062B Selectable-
	Attenuation Probes
Options A1-A5	International Power
	Cords

To obtain any of these options or other accessories after the instrument has been received, refer to Tables 7-1 (Power Cords and Fuses) and Tables 7-2 (Optional Accessories), in this section. For additional information about instrument options and other optional accessories, consult the current Tektronix Product Catalog or contact your local Tektronix Sales Office or distributor.

OPTION 1C

When Option 1C is specified, a Tektronix C-5c Option 04 low-cost camera is included in the shipment. The camera is useful for capturing single events and documenting measurement results.

OPTION 1K

When Option 1K is specified, a K212 Portable Instrument Cart is included in the shipment. The cart provides a stable, movable platform that is well suited for on-site instrument mobility.

OPTION 1R

When the oscilloscope is ordered with Option 1R, it is shipped in a configuration that permits easy installation into virtually any 19-inch wide electronic equipment rack. All hardware is supplied for mounting the instrument into the main frame.

Complete rack mounting instructions are provided in a separate document. These instructions also contain the procedures for converting a standard instrument into the Option 1R configuration by using the separately orderable rack-mounting conversion kit.

OPTION 1T

When Option 1T is specified, a composite case of 24.5" X 16.5" X 11.5" that weighs 12 lbs. 6 oz. is included in the shipment. The composite case is useful as a reusable shipping container or a carryon luggage container for the instrument.

OPTION 02

Option 02 is intended for users who need added front-panel protection and accessories-carrying ease. It includes a protective front panel cover and an accessories pouch that attaches to the top of the instrument.

OPTION 22

When Option 22 is specified, 24 1X Signal Adapters are included with the instrument. Each cable has one BNC Male connector on one end and two clip heads on the other end of the cable.

OPTION 23

When Option 23 is specified, two P6103 10X Probes are included with the instrument.

OPTION 24

When Option 24 is specified, two P6062B 1X to 10X Selectable-Attenuation Probes are included with the instrument.

OPTIONS A1-A5 INTERNATIONAL POWER CORDS

Instruments are shipped with the detachable power cord and fuse configuration ordered by the customer. Table 7-1 identifies the Tektronix part numbers for international power cords and associated fuses. Descriptive information about power cord options is provided in Section 1, Preparation for Use.

OPTIONAL ACCESSORIES

Table 7-2 lists recommended optional accessories for your instrument.

Table 7–1

International Power Cords and Fuses

Description	Part Number
Option A1 (Europe)	
as the River Power Cord, 2.5 m	161-0104-06
Fuse, 0.5 A, 250 V, 3AG, 1/4"x 11/4", Slow	159-0032-00
Option A2 (United Kingdom)	
Power Cord, 2.5 m	161-0104-07
Fuse, 0.5 A, 250 V, 3AG, 1/4"x 11/4", Slow	159-0032-00
Option A3 (Australia)	
Power Cord, 2.5 m	161-0104-05
Fuse, 0.5 A, 250 V, 3AG, 1/4"x 11/4", Slow	159-0032-00
Option A4 (North America)	
Power Cord, 2.5 m	161-0104-08
Fuse, 0.5 A, 250 V, 3AG, 1/4"x 11/4", Slow	159-0032-00
Option A5 (Switzerland)	The second of th
Power Cord, 2.5 m	161-0167-00
Fuse, 0.5 A, 250 V, 3AG, 1/4"x 11/4", Slow	159-0032-00

Table 7-2
Optional Accessories

Front Panel Protective Cover	200-3397-00
Accessory Pouch	016–0677–02
Front Panel Protective Cover and Accessory Pouch	020–1514–00
Transit Case	016-0792-01
CRT Light Filter, Clear	337-2775-01
Rack Mount Conversion Kit	016-0819-00
Viewing Hoods	
Collapsible	016-0592-00
Polarised	016-0180-00 A. (1946 - 449-44) . (A. 1946 -
Binocular	016-0566-00
Probe, 10X, 2 m, with accessories	P6103
Alternative Power Cords	CONTROL CONTRO
Standard (United States)	161-0104-00
European	020-0859-00
United Kingdom	020-0860-00
Australian	020-0861-00
North American	020-0862-00
Swiss	020-0863-00
Attenuator Voltage Probes	
10X Standard	P6103
10X Subminiature	P6130
1X-10X Environmental	P6008
1X-10X Selectable	P6062B
100X High Voltage	P6009 114 (W. 1.1. (W. 1.1. 1.1. 1.1. 1.1. 1.1. 1
1000X High Voltage	P6015
Current Probes	P6021, P6022, A6302/AM503, A6303/AM503
Current-Probe Amplifier	# 134
Probe 10X, FET	P6202A
Active-probe Power Supply	1101A
Ground Isolation Monitor	A6901
Isolator (for multiple, inde- pendently referenced, differential measurements)	A6902B
DC Inverter	1107
DC Inverter Mounting Kit	016-0785-00

Table 7-2 (cont)

Description	Part Number
Portable Power Supply	, h 1105
Battery Pack	1106
Oscilloscope Cameras Low-cost	C-5C Option 04
Motorized	C-7 Option 03 and Option 30
Portable Instrument Cart	K212
2205 Service Manual	070-6716-00

STANDARD ACCESSORIES

Each instrument is shipped with the following standard accessories.

		**
Quantity	Description	Part Number
2	1X Signal Adapters	103-0275-00
1	Operator's Manual	070-6717-00
1	Standard (United States) Power Cord,	
	2.5 m	161-0230-01
1	Fuse, 0.75 A, 25 V, 3AG, 1/4" x 1 1/4",	
	slow	159-0042-00
1	Fuse, 0.5 A, 250 V, 3AG, 1/4" x 1 1/4", slow	15940032-00
	For optional power cord and fuse see Table 7-1	135-6032-00
1	Power Cord Clamp	343-0003-00
1	Screw, 6-32	211-0721-00
. 1	Washer	210-0803-00

REPLACEABLE ELECTRICAL PARTS

PARTS ORDERING INFORMATION

Replacement parts are available from or through your local Tektronix, Inc. Field Office or representative.

Changes to Tektronix instruments are sometimes made to accommodate improved components as they become available, and to give you the benefit of the latest circuit improvements developed in our engineering department. It is therefore important, when ordering parts, to include the following information in your order: Part number, instrument type or number, serial number, and modification number if applicable.

If a part you have ordered has been replaced with a new or improved part, your local Textronix, Inc. Field Office or representative will contact you concerning any change in part number.

Change information, if any, is located at the rear of this manual.

LIST OF ASSEMBLIES

A list of assemblies can be found at the beginning of the Electrical Parts List. The assemblies are listed in numerical order. When the complete component number of a part is known, this list will identify the assembly in which the part is located.

CROSS INDEX-MFR. CODE NUMBER TO MANUFACTURER


The Mfr. Code Number to Manufacturer index for the Electrical Parts List is located immediately after this page. The Cross Index provides codes, names and addresses of manufacturers of components listed in the Electrical Parts List.

ABBREVIATIONS


Abbreviations conform to American National Standard Y1.1

COMPONENT NUMBER (column one of the Electrical Parts List)

A numbering method has been used to identify assemblies, subassemblies and parts. Examples of this numbering method and typical expansions are illustrated by the following:

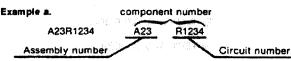

Read: Resistor 1234 of Assembly 23

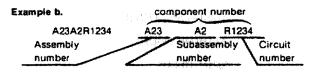

Read: Resistor 1234 of Subassembly 2 of Assembly 23

Only the circuit number will appear on the diagrams and circuit board illustrations. Each diagram and circuit board illustration is clearly marked with the assembly number. Assembly numbers are also marked on the mechanical exploded views located in the Mechanical Parts List. The component number is obtained by adding the assembly number prefix to the circuit number.

The Electrical Parts List is divided and arranged by assemblies in numerical sequence (e.g., assembly A1 with its subassemblies and parts, precedes assembly A2 with its subassemblies and parts).

Chassis-mounted parts have no assembly number prefix and are located at the end of the Electrical Parts List.

TEKTRONIX PART NO. (column two of the Electrical Parts List)

Indicates part number to be used when ordering replacement part from Tektronix.

SERIAL/MODEL NO. (columns three and four of the Electrical Parts List)

Column three (3) indicates the serial number at which the part was first used. Column four (4) indicates the serial number at which the part was removed. No serial number entered indicates part is good for all serial numbers.

NAME & DESCRIPTION (column five of the Electrical Parts List)

In the Parts List, an Item Name is separated from the description by a colon (:). Because of space limitations, an Item Name may sometimes appear as incomplete. For further Item Name identification, the U.S. Federal Cataloging Handbook H6-1 can be utilized where possible.

MFR. CODE (column six of the Electrical Parts List)

Indicates the code number of the actual manufacturer of the part. (Code to name and address cross reference can be found immediately after this page.)

MFR. PART NUMBER (column seven of the Electrical Parts List)

Indicates actual manufacturers part number.

CROSS INDEX - MFR. CODE NUMBER TO MANUFACTURER

Code	Manufacturer	Address	City, State, Zip Code
00213	NYTRONICS COMPONENTS GROUP INC SUBSIDIARY OF NYTRONICS INC	ORANGE ST	DARLINGTON SC 29532
00853	SANGAMO WESTON INC. COMPONENTS DIV	SANGAMO RD PO BOX 128	PICKENS SC 29671-9716 MILWAUKEE WI 53204-2410 DALLAS TX 75265 SOMERVILLE NJ 08876 AUBURN NY 13021
01121	ALLEN-BRADLEY CO	1201 S 2ND ST	MILWAUKFF VI 53204-2410
01295	TEXAS INSTRUMENTS INC	13500 N CENTRAL EXPY	DALLAS TX 75265
02735	RCA CORP	ROUTE 202	SOMERVILLE NJ 08876
03508	CONT CONDUCTOR DESCRIPTO OCOT		AUBURN NY 13021
14222	AVX CERAMICS DIV OF AVX CORP ITW SWITCHES	19TH AVE SOUTH P O BOX 867	MYRTLE BEACH SC 29577
)4426	ITW SWITCHES DIV OF ILLINOIS TOOL WORKS INC	6615 W IRVING PARK RD	CHICAGO IL 60634-2410
14713	MOTOROLA INC SEMICONDUCTOR PRODUCTS SECTOR	5005 E MCDOWELL RD	PHOENIX AZ 85008-4229
5397	UNION CARBIDE CORP	11901 MADISON AVE	CLEVELAND OH 44101
5828	MATERIALS SYSTEMS DIV GENERAL INSTRUMENT CORP GOVERNMENT SYSTEMS DIV		HICKSVILLE NY 11802
7716	TRW INC TRW IRC FIXED RESISTORS/BURLINGTON	2850 MT PLEASANT AVE	BURLINGTON IA 52601
3511	a salinia arma a sana a sana disalinia	전기 및	LOS GATOS CA
4193	CAL-R INC	1601 OLYMPIC BLVD PO BOX 1397	SANTA MONICA CA 90406
14752 19396	ELECTRO CUBE INC ILLINOIS TOOL WORKS INC	1710 S DEL MAR AVE 1205 MCCONVILLE RD	SAN GABRIEL CA 91776-3825 LYNCHBURG VA 24502-4535
19701	AMPHENDL CADRE DIV BUNKER RAMO CORP CAL-R INC ELECTRO CUBE INC ILLINOIS TOOL WORKS INC PAKTRON DIV MEPCO/CENTRALAB A NORTH AMERICAN PHILIPS CO MINERAL WELLS AIRPORT	PO BOX 760	MINERAL WELLS TX 76067-0760
24546	CORNING GLASS WORKS	EEN UICH CT	BRADFORD PA 16701-3737
	TTT COUNTY THE	DOM THAT ARE DO	EDEN PRAIRIE MN 55344-2224
1918 2997	ITT SCHADOW INC. BOURNS, INC. TRIMBOT DIV	1200 COLUMRIA AVE	RIVERSIDE CA 92507-2114
4899	EATO_DITE DOCNIETE CODE	1 POMMEDOTAL BOLL	LIMITETTE AND TOTOO
4899 1406	TRIMPOT DIV FAIR-RITE PRODUCTS CORP MURATA ERIE NORTH AMERICA INC HEADQUARTERS AND GEORGIA OPERATIONS	2200 LAKE PARK DR	SMYRNA GA 30080
2769	SPRAGUE-GOODMAN ELECTRONICS INC	134 FULTON AVE	GARDEN CITY PARK NY 11040-5352
4583 5680	TOV CLECTOOUTER COOD	12 HARBOR PARK DR 927 E STATE PKY	PORT WASHINGTON NY 11550 SCHAUMBURG IL 60195-4526
6289	NICHICON /AMERICA/ CORP SPRAGUE ELECTRIC CO WORLD HEADQUARTERS ROHM CORP	92 HAYDEN AVE	LEXINGTON MA 02173-7929
7668	August 1 of the Mill to Art a Mayor to the Control of the Control	8 WHATNEY PO BOX 19515	IRVINE CA 92713
9660	LISONIX INC. Service of the service	7741 N BUSINESS PARK DR PO BOX 37144	TUCSON AZ 85740-7144
5042	IRC ELECTRONIC COMPONENTS PHILADELPHIA DIV TRW FIXED RESISTORS	401 N BROAD ST	PHILADELPHIA PA 19108-1001
5915	LITTELFUSE INC SUB TRACOR INC	800 E NORTHWEST HWY	DES PLAINES IL 60016-3049
0009	TEKTRONIX INC	14150 SW KARL BRAUN DR PO BOX 500	BEAVERTON OR 97077-0001
3003	NARO INC. SARA ARTIST AND ARTIST	PO BOX 401426	GARLAND TX 75042
1637	DALE ELECTRONICS INC	2064 12TH AVE PO 80X 609	COLUMBUS NE 68601-3632
5243	ROEDERSTEIN E SPEZIALFABRIK FUER KONDENSATOREN GMBN	LUDMILLASTRASSE 23-25	8300 LANDSHUT GERMANY
0491	SEALECTRO LTD	WALTON ROAD FARLINGTON	PORTSMOUNT ENGLAND
5856	RCA LTD BEECH HOUSE	373-399 LONDON ROAD CAMBERLEY	SURREY ENGLAND
		and the second of the second o	医三角 医二角性 医二角性 医二角性 医抗毒素 医二甲基酚 医二甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基

CROSS INDEX - MFR. CODE NUMBER TO MANUFACTURER

Mfr. Code	Manufacturer	Address	City, State, Zip Code
K7779	STEMENS LTD STEMENS HOUSE	WINDMILL ROAD SUNBURY-ON-THAMES	MIDDLESEX TW16 7HS ENGLAND
K8788	PIHER INTERNATIONAL LTD	HORTON ROAD WEST DRAYTON	MIDDLESEX ENGLAND
K8996	MULLARD LIMITED	MULLARD HOUSE TORRINGTON PLACE	LONDON WC1 7 HD ENGLAND
TK00A TK0213	G ENGLISH ELECTRONICS LTD TOPTRON CORP	34 BOWATER ROAD	LONDOH SE18 5TF ENGLAND TOKYO JAPAN
TK0515	ERICSSON COMPONENTS INC	403 INTERNATIONAL PKY PO BOX 853904	RICHARDSON TX 75085-3904
TK0900	UNITED CHEMI-CON INC	9801 W HIGGINS SUITE 430	ROSEMONT IL 60018-4704
TKODY	A F BULGIN & CO LTD	BYE PASS ROAD BARKING	ESSEX ENGLAND
TKOEA	ARMON ELECTRONICS HERON HOUSE	109 WEMBLY HILL ROAD WEMBLY	MIDDX ENGLAND
TKOED	COMPONENTS BUREAU UNIT 4	135 DITTON WAY	CAMBRIDGE ENGLAND
TKOEM	MOLEX ELECTRONICS MOLEX HOUSE	Farnham Road Bordon	HAMPSHIRE ENGLAND
TK1450	TOKYO COSMOS ELECTRIC CO LTD	2-268 SOBUDAI ZAWA	KANAGAWA 228 JAPAN
TK1727	PHILIPS NEDERLAND BV AFD ELONCO	POSTBUS 90050	5600 PB EINDHOVEN THE NETHERLANDS
TK1815	NOBLE - USA ELECTRONIC COMPONENTS GROUP	5450 METALBROOK INDUSTRIAL CT	ROLLING MEADOWS IL 60008
U3771	STANLER COMPONENTS BUSINESS CENTRE	HEY LANE	BRAINTREE ENGLAND

Component No.		(Hashagasha Rike (Nahayah Kangara Kanga) Name & Description	So de Code Mfr. Part No.
A1 A2 A3 A4	671-0392-00 671-0391-00	CIRCUIT BD ASSY:MAIN CIRCUIT BD ASSY:TIMEBASE/ATTEN CIRCUIT BD ASSY:FRONT PANEL CIRCUIT BD ASSY:MAIN INPUT	80009 671-0425-00 80009 671-0390-00 80009 671-0392-00 80009 671-0391-00
	table for the control of		and the property of the second
		罗斯斯克克克斯	
			25 Minus Haffairy in Colorania.
		[4] (西川) · 西川 · 斯山	
		State of Father and	to committee and the result of the second
	Alexandria Defendant of the engineering		22 \$10 \$1 (1988)
		the comment of the co	dad outbounded in the least of annual
		depth of the stage of	
	and the second s		The Company of the State of the
		18.1 货币 [1]	(4) 1. 1. 多类的现在分词 1. 多数。
		·····································	
		10. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1.	That is the second
	。 《京····································		All the graduate the graduate the graduate that the graduate the gradu
	を表しています。 1000 日本	e dia non di manganta di m	
	한 사람이 함께 기술이 되었다.	a and the	
			,特别提出的。 Part Hone
	###	e de la companya dela companya dela companya dela companya de la c	
		and the second of the second o	- 「原」、集組をは、新聞登録作品 「転から」 - 「無関を記録」は、タイプのようではある。
		American Company of the Company of t	ing to more any and an extra contraction of the second
		in the state that it have to be used	n de la companya de La companya de la co
		and the second s	
		tyta mar	

Companent No.	Tektronix Part No.	Serial/Assembly No. Effective Oscont	ust of the late of		fr. Part No.
A1	671-0425-00		CIRCUIT BD ASSY:MAIN	80009 6	71-0425-00
A1C114	281-0767-00	e fighter to	CAP, FXD, CER DI:330PF, 20%, 100V		A106C331MAA
ALC115	281-0767-00		CAP, FXD, CER DI: 330PF, 20%, 100V	04222 M	A106C331MAA
AIC116	281-0775-01		CAP, FXD, CER DI:0.1UF, 20%, 50V	04222 S/	A105E104MAA
A1C124	281-0775-01	a William Carlo	CAP, FXD, CER DI: 0.1UF, 20%, 50V	04222 S/	A105E104MAA
AIC125	281-0772-00	n grande de la companya de la compa	CAP, FXD, CER DI: 4700PF, 10%, 100V	04222 N	A201C472KAA
A1C126	283-0051-02	11 m 12 m 12 m	CAP, FXD, CER DI: 0.0033UF, 5%, 100V		R211A332JAATR
	283-0108-00		CAP, FXD, CER DI: 220PF, 10%, 200V		U152A221KAA
A1C133	man a. a.				1101A680KAA
A1C164	281-0767-00	Mark 1			106C331MAA
A1C165 A1C174	281-0767-00 281-0775-01		CAP, FXD, CER DI:330PF, 20%, 100V CAP, FXD, CER DI:0.1UF, 20%, 50V		106C331MAA 105E104MAA
A1C175	901 0779 00				
A1C175 A1C176	MD2 011 M 00	and a	CAP, FXD, CER DI: 4700PF, 10%, 100V		201C472KAA
AIC176	283-0051-02		CAP, FXD, CER DI: 0.0033UF, 5%, 100V		211A332JAATR
AlC198			CAP, FXD, CER D1:220PF, 10%, 200V		152A221KAA
A1C202			CAP, FXD, ELCTLT: 1UF, 10%, 35V		228105K035AS
	290-0183-00 281-0775-01	Tall State of the Control of the Con	CAP, FXD, ELCTLT: 1UF, 10%, 35V		228105K035AS
MICE15			CAP, FXD, CER 01:0.1UF, 20%, 50V	04222 SA	105E104MAA
	283-0057-00	summer of	CAP, FXD, CER DI:0.1UF, +80-20%, 200V	04222 SR	306E104ZAA
A1C225	281-0812-00	and the second of the second o	CAP, FXD, CER DI: 1000PF, 10%, 100V	04222 MA	101C102KAA
A1C232	WWW 0114 W	valid a Science	CAP, FXD, CER DI: 2200PF, 20%, 200V		106E222MAA
A1C235	281 -077 1-00		CAP, FXD, CER DI: 2200PF, 20%, 200V		106E222MAA
	281-0771-00	6441. The 45	CAP, FXD, CER 01:2200PF, 20%, 200V		106E222MAA
AIC240	281-0771-00		CAP, FXD, CER DI:2200PF, 20%, 200V	04222 SA	106E222MAA
ALC241	281-0205-00		CAP, VAR, PLASTIC: 5.5-65 PF, 100V		22-808-32659
	281-0064-00	Yorkey AME of the	CAP, VAR, PLASTIC: 0.25-1.5PF, 600V		-530-013
A1C243			CAP, VAR, PLASTIC: 0.25-1.5PF, 600V		-530-013
A1C245		and the second			105E104MAA
A1C246 A1C247		報 (2 (2億1) _に 。 (2011) (2 (2 (2 (2 (2 (2 (2 (2 (2 (2 (2 (2 (2	CAP, FXD, CER DI:0.1UF, 20%, 50V CAP, FXD, CER DI:0.1UF, 20%, 50V	1 10 10 100	105E104MAA 105E104MAA
			, , , , , , , , , , , , , , , , , , , ,		
A1C248	281-0775-01				105E104MAA
A1C320			nen in an amaren anne i musicone.		228105K035AS
A1C321 A1C322		Secretary for a			228105K035AS
	290-0183-00 281-0775-01	54 FA	CAP, FXD, ELCTLT: 1UF, 10%, 35V		228105K035AS
		PHILIP, LEADING THE	CAP, FXD, CER DI:0.1UF, 20%, 50V		LOSE 104MAA
A1C381	281-0775-01		CAP, FXD, CER DI: 0.1UF, 20%, 50V	04222 SA	105E104MAA
A1C387 A1C389	281-0775-01		CAP, FXD, CER DI :0.1UF, 20%, 50V		105E104MAA
A1C401	281-0775-01 281-0775-01	n de la companya de La companya de la co	CAP, FXD, CER DI 10. 1UF, 20%, 50V		LOSE104MAA
A1C402	290-0183-00		CAP, FXD, CER DI:0.1UF, 20%, 50V	i control in the	LOSE104MAA
A1C408	. And the second of the second of the second of		CAP, FXD, ELCTLT: 1UF, 10%, 35V		228105K035AS
AIC418	281-0775-01 290-1150-00		CAP, FXD, CER DI:0.1UF,20%,50V CAP, FXD, ELCTLT:15UF,+50%-10%,16WVDC		.05E104MAA)-25159
A1C431	290-1150-00		CAP, FXD, ELCTLT: 15UF, +50%-10%, 16WVDC	K8996 030)-25159
A1C480	281-0775-01		CAP.FXD.CER.DI:0.1UF.20%.50V		05E104MAA
A1C481	281-0775-01				05E104MAA
41C489			CAP,FXD,CER DI:0.1UF,20%,50V CAP,FXD,CER DI:5.6PF,+/~0.5PF,100V		01A5R6DAA
41C489 41C490	281-0775-01		CAP, FXU, CER DI:5.5PF, +7-0.5PF, 100V		OSE104MAA
******	281-0773-00		CAP, FXD, CER DI:0.01UF, 10%, 100V		01C103KAA
N1C496	281-0773-00	e Mileja. T.	CAPJEXD, CER DI : 0.01UF, 10%, 100V	04222 MA2	01C103KAA
A1C500	281-0775-01		CAP, FXD, CER DI : 0.1UF, 20%, 50V		05E104MAA
AIC501	281-0810-00		CAP, FXD, CER DI:5.6PF,+/-0.5PF,100V		O1A5R6DAA
VIC503	281-0812-00		CAP.FXD.CER DI:1000PF.10%.100V		01C102KAA
A1C505	281-0775-01	\$ 55 35	CAP. FXO, CER DI:0.1UF.20%, 50V		OSE104MAA
\1C506	281-0767-00	建设有效。	CAP, FXD, CER DI:330PF, 20%, 100V		06C331MAA
N1C520 # 2011 # 10	281-0775-01	Maring Arthur	CAP, FXD, CER DI:0.1UF, 20%, 50V	04222 SA1	05E104MAA
\1C525	281-0758-00	1884 March	CAP, FXD, CER DI: 15PF, 20%, 100V	04222 SA1	OZA150MAA
V1C530	281-0775-01		CAP, FXD, CER DI:0.1UF, 20%, 50V	04222 SA1	05E104MAA
N1C536	281-0814-00	(D.V.) (1)	CAP, FXD, CER DI:100 PF, 10%, 100V	04222 MA1	01A101KAA
			the state of the s		

ALC538 281-0812-00	. Part No.
AICS38 281-0812-00	D5E104MAA
AICS40 290-1153-00	01C102KAA
AIC5540 290-1153-00)1C102KAA
ALC545 283-0119-02	-24479
ALCS50 281-0757-01 CAP, FXD, CER D1: 300F, 20X, 10V 04222 SA108 ALCS54 281-0812-00 CAP, FXD, CER D1: 1000F, 10X, 10V 04222 SA108 ALCS55 281-0775-01 CAP, FXD, CER D1: 0100F, 10X, 10V 04222 SA108 ALCS65 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALCS61 281-0812-00 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALCS61 281-0812-00 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALCS62 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALCS62 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALCS67 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALCS72 281-0785-00 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALCS72 281-0785-00 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALCS72 281-0785-00 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALCS73 281-0785-00 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALCS74 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALCS75 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALCS76 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALC762 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALC762 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALC762 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALC762 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALC762 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALC762 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALC762 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALC762 281-0775-01 CAP, FXD, CER D1: 20XDPF, 20X, 20V 04222 SA108 ALC763 281-0775-01 CAP, FXD, CER D1: 20XDPF, 20X, 20V 04222 SA108 ALC764 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALC765 285-1101-00 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALC765 285-10775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALC765 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALC765 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALC765 281-0775-01 CAP, FXD, CER D1: 01.0F, 20X, 50V 04222 SA108 ALC765 281-0775-01 CAP, FXD,	-402-Y5E0222J
ALCSSS 281-0812-00 ALCSSS 281-0775-01 CAP_FDD_CER D1: 0.11F_20X_SOV 04222 SAL0S ALCSS1 281-0775-01 CAP_FDD_CER D1: 0.11F_20X_SOV 04222 SAL0S ALCSS1 281-0775-01 CAP_FDD_CER D1: 0.11F_20X_SOV 04222 SAL0S ALCSS1 281-0755-00 CAP_FDD_CER D1: 0.11F_20X_SOV 04222 SAL0S ALCSS1 281-0755-00 CAP_FDD_CER D1: 0.11F_20X_SOV 04222 SAL0S ALCSS3 281-0773-00 CAP_FDD_CER D1: 0.11F_20X_SOV 04222 SAL0S ALCSS3 281-0773-00 CAP_FDD_CER D1: 0.11F_20X_SOV 04222 SAL0S ALC762 281-0773-01 CAP_FDD_CER D1: 0.11F_20X_SOV 04222 SAL0S ALC763 281-0775-01 CAP_FDD_CER D1: 0.10F_20X_SOV 04222 SAL0S ALC764 281-07675-01 CAP_FDD_CER D1: 0.10F_20X_SOV 04222 SAL0S ALC764 281-07675-01 CAP_FDD_CER D1: 0.10F_20X_SOV 04222 SAL0S ALC765 281-0775-01 CAP_FDD_CER D1: 0.10F_20X_SOV 04222 SAL0S ALC765 281-0	06C331MAA
ALCSSS 281-0775-01)5E104MAA
ALCS66 281-0775-01 CAP_FXD_CER D1:0.0 LUF_2CK_5OV 04222 SAL05 ALCS62 281-0775-01 CAP_FXD_CER D1:0.0 LUF_2CK_5OV 04222 SAL05 ALCS62 281-0775-01 CAP_FXD_CER D1:0.0 LUF_2CK_5OV 04222 SAL05 ALCS70 281-0775-01 CAP_FXD_CER D1:0.0 LUF_2CK_5OV 04222 SAL05 ALCS71 281-0785-00 CAP_FXD_CER D1:0.0 LUF_2CK_5OV 04222 SAL05 ALCS72 281-0785-00 CAP_FXD_CER D1:0.0 LUF_2CK_5OV 04222 SAL05 ALCS84 281-0775-01 CAP_FXD_CER D1:0.0 LUF_2CK_5OV 04222 SAL05 ALC785 281-0775-01 CAP_FXD_CER D1:0.0 LUF_2CK_5OV 04222 SAL05 ALC786 281-0775-01 CAP_FXD_CER D1:0.0 LUF_2CK_5OV 04222 SAL05 ALC786 281-0775-01 CAP_FXD_CER D1:0.0 LUF_2CK_5OV 04222 SAL05 ALC785 281-101-00 CAP_FXD_CER D1:0.1 LUF_2CK_5OV 04222 SAL05 ALC785 281-101-00 CAP_FXD_CER D1:0.1 LUF_2CK_5OV 04222 SAL05 ALC786 281-0771-00 CAP_FXD_CER D1:0.0 LUF_2CK_5OV 04222 SAL05 ALC789 281-0771-00 CAP_FXD_CER D1:0.1 LUF_2CK_5OV 19396 Ex-33 ALC795 281-101-00 CAP_FXD_CER D1:0.1 LUF_2CK_5OV 19396 Ex-33 ALC796 281-0771-00 CAP_FXD_CER D1:0.0 LUF_2CK_5OV 04222 SAL05 ALC798 281-0771-00 CAP_FXD_CER D1:0.0 LUF_2CK_5OV 04222 SAL05 ALC798 281-0771-00 CAP_FXD_CER D1:0.LUF_2CK_5OV 04222 SAL05 ALC798 281-0771-00 CAP_FXD_CER D1:0.LUF_2CK_5OV 04222 SAL05 ALC824 281-0785-00 CAP_FXD_CER D1:0.LUF_2CK_5OV 04222 SAL05 ALC824 281-0785-00 CAP_FXD_CER D1:0.LUF_2CK_5OV 04222 SAL05 ALC825 281-0775-01 CAP_FXD_CER D1:0.LUF_2CK_5OV 04222 SAL05 ALC836 283-0057-00 CAP_FXD_CER D1:0.LUF_2CK_5OV 04222 SAL05 ALC836 283-0057-00 CAP_FXD_CER D1:0.LUF_2CK_5OV 04222 SAL05 ALC836 283-0057-00 CAP_FXD_CE	DIC102KAA
ALCSES 281-0812-00 ALCSES 281-0775-01 CAP, FXD, CER D1: 0.10 LZW, 50V 04222 SAL05 ALCS70 281-0775-01 CAP, FXD, CER D1: 0.10 LZW, 50V 04222 SAL05 ALCS71 281-0758-00 CAP, FXD, CER D1: 0.10 LZW, 50V 04222 SAL05 ALCS72 281-0758-00 CAP, FXD, CER D1: 50F, FXD, 100V 04222 SAL05 ALCS83 281-0775-01 CAP, FXD, CER D1: 0.10 LW, 20X, 50V 04222 SAL05 ALCS83 281-0773-00 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALCS85 281-0773-00 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALCS85 281-0773-01 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALC786 281-0775-01 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALC782 281-0775-01 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALC782 281-0775-01 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALC785 281-0775-01 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALC785 281-0771-00 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALC784 281-0771-00 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALC794 281-0064-00 CAP, FXD, CER D1: 0.2 LW, 10X, 200V 04222 SAL05 ALC794 281-0071-00 CAP, FXD, PLASTIC: 0.0 22-LW, 10X, 200V 04222 SAL05 ALC795 285-1101-00 CAP, FXD, CER D1: 200PF, 20X, 200V 04222 SAL05 ALC795 281-1075-01 CAP, FXD, CER D1: 200PF, 20X, 200V 04222 SAL05 ALC795 281-075-01 CAP, FXD, CER D1: 200PF, 20X, 200V 04222 SAL05 ALC888 281-0775-01 CAP, FXD, CER D1: 200PF, 20X, 200V 04222 SAL05 ALC883 281-0775-01 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALC884 281-0775-01 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALC885 281-0775-01 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALC885 281-0775-01 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALC885 281-0775-01 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALC885 281-0775-01 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALC885 281-0775-01 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALC895 281-0875-00 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 ALC895 281-0875-00 CAP, FXD, CER D1: 0.1 LW, 20X, 50V 04222 SAL05 AL	15E104MAA
ALCSSE 281-0812-00 ALCSSP 281-0775-01 CAP, FXD, CER D1: D. IUF, 20X, 50V 04222 SAL05 ALCS71 281-0786-00 CAP, FXD, CER D1: D. IUF, 20X, 50V 04222 SAL05 ALCS72 281-0775-01 CAP, FXD, CER D1: D. IUF, 20X, 50V 04222 SAL05 ALCS73 281-0775-00 CAP, FXD, CER D1: D. IUF, 20X, 50V 04222 SAL05 ALCS84 281-0775-01 CAP, FXD, CER D1: D. IUF, 20X, 50V 04222 SAL05 ALCS85 281-0773-00 CAP, FXD, CER D1: D. IUF, 20X, 50V 04222 SAL05 ALCS87 281-0775-01 CAP, FXD, CER D1: D. IUF, 20X, 50V 04222 SAL05 ALCS87 281-0775-01 CAP, FXD, CER D1: D. IUF, 20X, 50V 04222 SAL05 ALC782 281-0775-01 CAP, FXD, CER D1: D. IUF, 20X, 50V 04222 SAL05 ALC782 281-0775-01 CAP, FXD, CER D1: D. IUF, 20X, 50V 04222 SAL05 ALC782 281-0775-01 CAP, FXD, CER D1: D. IUF, 20X, 50V 04222 SAL05 ALC783 281-066-00 CAP, FXD, CER D1: D. IUF, 20X, 50V 04222 SAL05 ALC785 285-1101-00 CAP, FXD, CER D1: D. SEP, ESOV 1ALC794 281-0054-00 CAP, FXD, PLASTIC: D. 22-I, 10X, 20VV 19396 223KD ALC794 281-0054-00 CAP, FXD, CER D1: 2200PF, 20X, 20VV 04222 SAL05 ALC795 285-1101-00 CAP, FXD, PLASTIC: D. 02-IF, 10X, 20VV 19396 223KD ALC795 285-1101-00 CAP, FXD, CER D1: 2200PF, 20X, 20VV 04222 SAL05 ALC795 285-1101-00 CAP, FXD, CER D1: 2200PF, 20X, 20VV 04222 SAL05 ALC795 285-1101-00 CAP, FXD, CER D1: 2200PF, 20X, 20VV 04222 SAL05 ALC795 285-1101-00 CAP, FXD, CER D1: 2200PF, 20X, 20VV 04222 SAL05 ALC795 281-0775-01 CAP, FXD, CER D1: 2200PF, 20X, 20VV 04222 SAL05 ALC882 281-0775-01 CAP, FXD, CER D1: 2200PF, 20X, 20VV 04222 SAL05 ALC883 281-0775-01 CAP, FXD, CER D1: 20DPF, 20X, 20VV 04222 SAL05 ALC883 281-0775-01 CAP, FXD, CER D1: 20DPF, 20X, 20VV 04222 SAL05 ALC885 281-0775-01 CAP, FXD, CER D1: 20DPF, 20X, 20VV 04222 SAL05 ALC885 281-0775-01 CAP, FXD, CER D1: 20DPF, 20X, 20VV 04222 SAL05 ALC885 281-0775-01 CAP, FXD, CER D1: 30DPF, 20X, 50VV 04222 SAL05 ALC885 281-0775-01 CAP, FXD, CER D1: 30DPF, 20X, 50VV 04222 SAL05 ALC885 281-0775-01 CAP, FXD, CER D1: 30DPF, 20X, 50VV 04222 SAL05 ALC895 281-0775-01 CAP, FXD	15E104MAA
AIC570 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC571 281-0785-00 CAP_FXD_CER_DI: 689F_1CX_100V 04222 SAIOS AIC584 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC584 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC585 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC576 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC780 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC780 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC780 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC782 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC782 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC785 285-1101-00 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 19396 2330 AIC795 285-1101-00 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 19396 2330 AIC796 281-0771-00 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 19396 2330 AIC796 281-0771-00 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 19396 2330 AIC796 281-0771-00 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC796 281-0771-00 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 19396 2330 AIC796 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 19396 2330 AIC796 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC882 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC883 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC884 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC885 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC885 281-0775-01 CAP_FXD_CER_DI: 0.1UF_2CX_SOV 04222 SAIOS AIC886 281-0775-01 CAP_FXD_CER_DI: 0.1UF_FCX_SOV 04222 SAIOS AIC886 281-0775-01 CAP_FXD_CER_DI: 0.1UF_FCX_SOV 04222 SAIOS AIC885 281-0775-01 CAP_FXD_CER_DI: 0.1UF_FCX_SOV 04222 SAIOS AIC886 283-0657-00 CAP_FXD_CER_DI: 0.1UF_FCX_SOV 04222 SAIOS AIC896 283-0657-00 CAP_FXD_CER_DI: 0.1UF_FCX_SOV 04222 SAIOS AIC896 283-0677-00 CAP_FXD_CER_DI: 0.1UF_FCX_SOV 04222 SAIOS AIC896 283-0677-00 CAP_FXD_CER_DI: 0.1U	1C102KAA
ALC572	SE104MAA
ALC572 281-075-01 CAP_FXD_CER D1: 0.11F_FZ, 20X_100V 04222 SA105 ALC588 281-0775-01 CAP_FXD_CER D1: 0.10F_10X_100V 04222 SA105 ALC587 281-0775-01 CAP_FXD_CER D1: 0.10F_10X_100V 04222 SA105 ALC768 281-0775-01 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC768 281-0775-01 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC783 281-0054-00 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC783 281-0054-00 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC789 281-0771-00 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC799 281-0771-00 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC799 281-0771-00 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC799 281-0771-00 CAP_FXD_CER D1: 0.2200F_20X_20V 04222 SA105 ALC828 281-0775-01 CAP_FXD_CER D1: 0.2200F_20X_20V 04222 SA105 ALC828 281-0775-01 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC834 281-0775-01 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC834 281-0775-01 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC835 281-0775-01 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC836 281-0775-01 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC836 281-0775-01 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC835 281-0775-01 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC836 281-0775-01 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC836 281-0775-01 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC836 281-0775-01 CAP_FXD_CER D1: 0.10F_480-20X_20V 04222 SA105 ALC836 281-0775-01 CAP_FXD_CER D1: 0.10F_20X_50V 04222 SA105 ALC831 281-0875-01 CAP_FXD_CER D1: 0.00F_10X_100V 04	5E104MAA
ALCSB8 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SAL05 ALC776 281-0775-01 CAP_FXD_CER_D1:0.1UF_10X_50V 04222 SAL05 ALC776 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SAL05 ALC780 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SAL05 ALC782 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SAL05 ALC782 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SAL05 ALC783 281-0664-00 CAP_FXD_FAR_PLASTIC:0.25-1.5P_560V 52769 EP-53 ALC785 285-1101-00 CAP_FXD_FAR_PLASTIC:0.25-1.5P_560V 19396 223X0 ALC789 281-0771-00 CAP_FXD_CER_D1:2200P_20X_200V 04222 SAL05 ALC794 281-0064-00 CAP_FXD_CER_D1:2200P_20X_200V 04222 SAL05 ALC795 285-1101-00 CAP_FXD_CER_D1:2200P_20X_200V 04222 SAL05 ALC799 281-0771-00 CAP_FXD_CER_D1:2200P_20X_200V 04222 SAL05 ALC824 281-0785-00 CAP_FXD_CER_D1:200P_20X_200V 04222 SAL05 ALC828 281-0775-01 CAP_FXD_CER_D1:200P_20X_200V 04222 SAL05 ALC828 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SAL05 ALC834 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SAL05 ALC835 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SAL05 ALC835 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SAL05 ALC836 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SAL05 ALC837 283-0057-00 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SAL05 ALC838 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SAL05 ALC839 283-0057-00 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SAL05 ALC839 283-0057-00 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SAL05 ALC839 283-0057-00 CAP_FXD_CER_D1:0.1UF_40D-20X_200V 04222 SAL05 ALC839 283-0057-00 CAP_FXD_CER_D1:0.1UF_40D-20X_200V 04222 SAL05 ALC839 283-0057-00 CAP_FXD_CER_D1:0.1UF_40D-20X_200V 04222 SAL05 ALC839 283-0057-00 CAP_FXD_CER_D1:0.001UF_20X_50V 04222 SAL05 ALC839 283-0057-00 CA	1A680KAA
ALCS87 281-0775-01 CAP_FXD_CER_D1:0.01UF_10X_100V 04222 SA105 ALC776 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SA105 ALC780 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SA105 ALC783 281-0075-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SA106 ALC783 281-0075-00 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SA106 ALC788 281-0771-00 CAP_FXD_CER_D1:0.02UF_10X_200V 04222 SA106 ALC789 281-0771-00 CAP_FXD_CER_D1:2200PF_20X_200V 04222 SA106 ALC798 281-0771-00 CAP_FXD_CER_D1:2200PF_20X_200V 04222 SA106 ALC795 285-1101-00 CAP_FXD_CER_D1:2200PF_20X_200V 04222 SA106 ALC795 285-1101-00 CAP_FXD_CER_D1:2200PF_20X_200V 04222 SA106 ALC795 285-1101-00 CAP_FXD_CER_D1:2200PF_20X_200V 04222 SA106 ALC828 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SA106 ALC832 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SA106 ALC833 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SA106 ALC835 281-0775-01 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SA106 ALC836 281-0775-00 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SA106 ALC836 281-0775-00 CAP_FXD_CER_D1:0.1UF_20X_50V 04222 SA106 ALC836 283-0057-00 CAP_FXD_CER_D1:0.1UF_8-00X_200V 04222 SA106 ALC836 283-0057-00 CAP_FXD_CER_D1:0.1UF_8-00X_200V 04222 SA306 ALC837 283-0057-00 CAP_FXD_CER_D1:0.1UF_8-00X_200V 04222 SA306 ALC836 ALC937 ALC836 ALC937 ALC930 CAP_FXD_CER_D1:0.0UF_8-00X_300V 04222 SA306 ALC836 ALC937 ALC930 CAP_FXD_CER_D1:0.0UF_8-00X_300V 04222 S	2A150MAA
ALC776 281-0775-01 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 SAI.05 ALC780 281-0775-01 CAP, FXD, CER DI: 2200PF, 20%, 50V 04222 SAI.05 ALC782 281-0775-01 CAP, FXD, CER DI: 21200PF, 20%, 50V 04222 SAI.05 ALC785 285-1101-00 CAP, FXD, PLASTIC: 0.025-1.5PF, 500V 52789 EP-53 ALC785 285-1101-00 CAP, FXD, PLASTIC: 0.025-1.5PF, 500V 04222 SAI.05 ALC789 281-0771-00 CAP, FXD, PLASTIC: 0.025-1.5PF, 500V 04222 SAI.05 ALC789 281-0771-00 CAP, FXD, PLASTIC: 0.025-1.5PF, 500V 04222 SAI.05 ALC799 281-0771-00 CAP, FXD, FLASTIC: 0.025-1.5PF, 500V 52789 EP-53 ALC799 281-0771-00 CAP, FXD, CER DI: 2200PF, 20%, 200V 04222 SAI.05 ALC799 281-0775-01 CAP, FXD, CER DI: 280PF, 10%, 200V 04222 SAI.05 ALC828 281-0775-01 CAP, FXD, CER DI: 280PF, 10%, 100V 04222 SAI.05 ALC832 281-0775-01 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 SAI.05 ALC834 281-0775-01 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 SAI.05 ALC834 281-0775-01 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 SAI.05 ALC835 281-0775-01 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 SAI.05 ALC835 281-0775-01 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 SAI.05 ALC836 281-0775-01 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 SAI.05 ALC836 281-0775-01 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 SAI.05 ALC836 281-0775-00 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 SAI.05 ALC836 281-0775-00 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 SAI.05 ALC837 283-0057-00 CAP, FXD, CER DI: 0.1UF, 480-20%, 200V 04222 SAI.05 ALC836 283-0057-00 CAP, FXD, CER DI: 0.1UF, 480-20%, 200V 04222 SAI.05 ALC836 283-0057-00 CAP, FXD, CER DI: 0.1UF, 480-20%, 200V 04222 SAI.05 ALC836 283-0057-00 CAP, FXD, CER DI: 0.1UF, 400-20%, 200V 04222 SAI.05 ALC836 283-0057-00 CAP, FXD, CER DI: 0.1UF, 400-20%, 200V 04222 SAI.05 ALC836 283-0057-00 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 SAI.05 ALC837 283-0057-00 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 SAI.05 ALC837 283-0057-00 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 SAI.05 ALC837 283-0057-00 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 SAI.05 ALC839 283-0057-00 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222	SE104MAA
ALC780 281-0771-00 CAP, FXD, CER D1:2200PF, 20%, 200V 04222 SA105 ALC782 281-0775-01 CAP, FXD, CER D1:0.1 LF, 20%, 50V 04222 SA105 ALC783 281-0064-00 CAP, FXD, CER D1:0.1 LF, 20%, 50V 04222 SA105 ALC785 285-1101-00 CAP, FXD, PLASTIC:0.252-1.59F, 500V 52769 ER-53 ALC789 281-0771-00 CAP, FXD, PLASTIC:0.022LF, 10%, 200V 19395 223KO ALC789 281-0771-00 CAP, FXD, PLASTIC:0.022LF, 10%, 200V 04222 SA105 ALC794 281-0064-00 CAP, FXD, CER D1:2200PF, 20%, 200V 04222 SA106 ALC795 285-1101-00 CAP, FXD, CER D1:2200PF, 20%, 200V 19396 223KO ALC799 281-0771-00 CAP, FXD, CER D1:2200PF, 20%, 200V 04222 SA106 ALC824 281-0775-01 CAP, FXD, CER D1:2200PF, 20%, 200V 04222 MA101 ALC828 281-0775-01 CAP, FXD, CER D1:0.1 LF, 20%, 50V 04222 SA105 ALC834 281-0775-01 CAP, FXD, CER D1:0.1 LF, 20%, 50V 04222 SA105 ALC834 281-0775-01 CAP, FXD, CER D1:0.1 LF, 20%, 50V 04222 SA105 ALC835 281-0775-01 CAP, FXD, CER D1:0.1 LF, 20%, 50V 04222 SA105 ALC835 281-0775-01 CAP, FXD, CER D1:0.1 LF, 20%, 50V 04222 SA105 ALC835 281-0775-01 CAP, FXD, CER D1:0.1 LF, 20%, 50V 04222 SA105 ALC835 281-0775-00 CAP, FXD, CER D1:0.1 LF, 20%, 50V 04222 SA105 ALC835 281-0775-00 CAP, FXD, CER D1:0.1 LF, 80-20%, 200V 04222 SA105 ALC835 281-0775-00 CAP, FXD, CER D1:0.1 LF, 80-20%, 200V 04222 SA105 ALC836 283-0057-00 CAP, FXD, CER D1:0.1 LF, 80-20%, 200V 04222 SA105 ALC836 283-0057-00 CAP, FXD, CER D1:0.1 LF, 80-20%, 200V 04222 SA305 ALC836 283-0057-00 CAP, FXD, CER D1:0.1 LF, 80-20%, 200V 04222 SA305 ALC836 283-0057-00 CAP, FXD, CER D1:0.1 LF, 80-20%, 200V 04222 SA305 ALC837 283-0057-00 CAP, FXD, CER D1:0.1 LF, 80-20%, 200V 04222 SA305 ALC836 283-0057-00 CAP, FXD, CER D1:0.1 LF, 80-20%, 200V 04222 SA305 ALC837 283-0057-00 CAP, FXD, CER D1:0.1 LF, 80-20%, 200V 04222 SA305 ALC836 283-0057-00 CAP, FXD, CER D1:0.1 LF, 80-20%, 200V 04222 SA305 ALC837 283-0057-00 CAP, FXD, CER D1:0.1 LF, 80-20%, 200V 04222 SA305 ALC837 283-0057-00 CAP, FXD, CER D1:0.1 LF, FXD, SDV 04222 SA305 ALC837 283-0057-00 CAP, FXD, CER D1:0.1 LF, FXD, SDV 04222 SA305 ALC837 283-0057-00 CAP, FXD, CER D1:0.1	1C103KAA
ALC782 281-0775-01 CAP_FXD_CER DI: 0.1UF_20X_50V 04222 SAL05 ALC783 281-0064-00 CAP_VAR_PLASTIC: 0.25-1.5PF_600V 52769 ER-53 ALC789 281-0771-00 CAP_FXD_PLASTIC: 0.022UF_10X_200V 19398 223XO ALC789 281-0771-00 CAP_FXD_PLASTIC: 0.022UF_10X_200V 04222 SAL05 ALC794 281-064-00 CAP_FXD_CER DI: 2200PF_20X_200V 04222 SAL05 ALC795 285-1101-00 CAP_FXD_CER DI: 2200PF_20X_200V 19396 223XO ALC795 281-0771-00 CAP_FXD_CER DI: 2200PF_20X_200V 19396 223XO ALC799 281-0771-00 CAP_FXD_CER DI: 2200PF_20X_200V 04222 SAL05 ALC824 281-0775-01 CAP_FXD_CER DI: 2200PF_20X_200V 04222 MAL01 ALC828 281-0775-01 CAP_FXD_CER DI: 68PF_10X_50V 04222 SAL05 ALC832 281-0775-01 CAP_FXD_CER DI: 0.1UF_20X_50V 04222 SAL05 ALC834 281-0775-01 CAP_FXD_CER DI: 0.1UF_20X_50V 04222 SAL05 ALC835 281-0775-01 CAP_FXD_CER DI: 0.1UF_20X_50V 04222 SAL05 ALC835 281-0775-01 CAP_FXD_CER DI: 0.1UF_20X_50V 04222 SAL05 ALC836 281-0775-01 CAP_FXD_CER DI: 0.1UF_20X_50V 04222 SAL05 ALC836 281-0775-01 CAP_FXD_CER DI: 0.1UF_20X_50V 04222 SAL05 ALC835 281-0775-00 CAP_FXD_CER DI: 0.1UF_20X_50V 04222 SAL05 ALC836 281-0775-00 CAP_FXD_CER DI: 0.1UF_40X_50V 04222 SAL05 ALC836 281-0775-00 CAP_FXD_CER DI: 0.1UF_40X_50V 04222 SAL05 ALC836 283-0057-00 CAP_FXD_CER DI: 0.1UF_40X_50V 04222 SAL05 ALC836 283-0057-00 CAP_FXD_CER DI: 0.1UF_40X_50V 04222 SAL05 ALC836 283-0057-00 CAP_FXD_CER DI: 0.1UF_400-20X_200V 04222 SAL05 ALC851 283-0057-00 CAP_FXD_CER DI: 0.1UF_400-20X_200V 04222 SAL05 ALC853 281-0767-00 CAP_FXD_CER DI: 0.1UF_400-20X_200V 04222 SAL05 ALC853 283-0057-00 CAP_FXD_CER DI: 0.1UF_400-20X_200V 04222 SAL05 ALC851 283-0057-00 CAP_FXD_CER DI: 0.1UF_400-20X_200V 04222 SAL05 ALC853 283-0057-00 CAP_FXD_CER DI: 0.1UF_400-20X_200V 04222 SAL05 ALC853 283-0057-00 CAP_FXD_CER DI: 0.1UF_400-20X_200V 04222 SAL05 ALC853 283-0057-00 CAP_FXD_CER DI: 0.1UF_400-20X_200V 04222 SAL05 ALC854 283-0279-00 CAP_FXD_CER DI: 0.1UF_400-20X_200V 04222 SAL05 ALC853 283-0057-00 CAP_FXD_CER DI: 0.1UF_400-20X_200V 04222 SAL05 ALC853 283-0057-00 CAP_FXD_CER DI: 0.1UF_50X_50V 04222 SAL05 ALC952 283-0015-00 CAP_FX	5E104MAA
ALC785 285-1101-00 CAP, FXD, CER DI: 2200FF, 20X, 200V 19396 223XC ALC789 281-0771-00 CAP, FXD, PLASTIC: 0, 222IF, 10X, 200V 19396 223XC ALC789 281-0771-00 CAP, FXD, CER DI: 2200FF, 20X, 200V 04222 SA106 ALC795 285-1101-00 CAP, FXD, CER DI: 2200FF, 20X, 200V 19396 223XC ALC795 281-0771-00 CAP, FXD, CER DI: 2200FF, 20X, 200V 19396 223XC ALC799 281-0771-00 CAP, FXD, CER DI: 2200FF, 20X, 200V 19396 223XC ALC799 281-0771-00 CAP, FXD, CER DI: 2200FF, 20X, 200V 04222 SA105 ALC799 281-0775-01 CAP, FXD, CER DI: 2200FF, 20X, 200V 04222 SA105 ALC832 281-0775-01 CAP, FXD, CER DI: 0.10F, 20X, 50V 04222 SA105 ALC834 281-0775-01 CAP, FXD, CER DI: 0.10F, 20X, 50V 04222 SA105 ALC834 281-0775-01 CAP, FXD, CER DI: 0.10F, 20X, 50V 04222 SA105 ALC834 281-0775-01 CAP, FXD, CER DI: 0.10F, 20X, 50V 04222 SA105 ALC834 281-0775-01 CAP, FXD, CER DI: 0.10F, 20X, 50V 04222 SA105 ALC834 281-0775-01 CAP, FXD, CER DI: 0.10F, 20X, 50V 04222 SA105 ALC834 281-0775-00 CAP, FXD, CER DI: 0.10F, 20X, 50V 04222 SA105 ALC849 283-0057-00 CAP, FXD, CER DI: 0.10F, 20X, 50V 04222 SA105 ALC849 283-0057-00 CAP, FXD, CER DI: 0.10F, 20X, 200V 04222 SA105 ALC849 283-0057-00 CAP, FXD, CER DI: 0.10F, 80-20X, 200V 04222 SA105 ALC851 283-0057-00 CAP, FXD, CER DI: 0.10F, 80-20X, 200V 04222 SA105 ALC851 283-0057-00 CAP, FXD, CER DI: 0.10F, 80-20X, 200V 04222 SA105 ALC851 283-0057-00 CAP, FXD, CER DI: 0.10F, 80-20X, 200V 04222 SA105 ALC851 283-0057-00 CAP, FXD, CER DI: 0.10F, 80-20X, 200V 04222 SA105 ALC851 283-0057-00 CAP, FXD, CER DI: 0.10F, 80-20X, 200V 04222 SA105 ALC851 283-0057-00 CAP, FXD, CER DI: 0.10F, 80-20X, 200V 04222 SA105 ALC851 283-0057-00 CAP, FXD, CER DI: 0.10F, 80-20X, 200V 04222 SA105 ALC851 283-0057-00 CAP, FXD, CER DI: 0.10F, 80-20X, 200V 04222 SA105 ALC851 283-0057-00 CAP, FXD, CER DI: 0.10F, 80-20X, 200V 04222 SA105 ALC851 283-0057-00 CAP, FXD, CER DI: 0.10F, 80-20X, 200V 04222 SA105 ALC851 283-0057-00 CAP, FXD, CER DI: 0.10F, 80-20X, 200V 04222 SA105 ALC851 283-0057-00 CAP, FXD, CER DI: 0.10F, 20X, 500V 04222 SA105 ALC891 283-0057-00 CAP, FXD	6E222MAA
ALC785 285-1101-00 CAP, FXD, CER DI: 2200F, 20X, 200V 19386 223KD ALC789 281-0771-00 CAP, FXD, CER DI: 2200F, 20X, 200V 04222 SAL06 ALC789 281-0084-00 CAP, WAR, PLASTIC: 0. 022UF, 10X, 200V 52799 EF-53 ALC795 285-1101-00 CAP, FXD, CER DI: 2200FF, 20X, 200V 19386 223KD ALC799 281-0771-00 CAP, FXD, CER DI: 2200FF, 20X, 200V 04222 SAL06 ALC799 281-0775-01 CAP, FXD, CER DI: 0210FF, 10X, 100V 04222 SAL06 ALC828 281-0775-01 CAP, FXD, CER DI: 01. UF, 20X, 50V 04222 SAL05 ALC832 281-0775-01 CAP, FXD, CER DI: 0.1 UF, 20X, 50V 04222 SAL05 ALC834 281-0775-01 CAP, FXD, CER DI: 0.1 UF, 20X, 50V 04222 SAL05 ALC834 281-0775-01 CAP, FXD, CER DI: 0.1 UF, 20X, 50V 04222 SAL05 ALC834 281-0775-01 CAP, FXD, CER DI: 0.1 UF, 20X, 50V 04222 SAL05 ALC834 281-0775-01 CAP, FXD, CER DI: 0.1 UF, 20X, 50V 04222 SAL05 ALC834 281-0775-00 CAP, FXD, CER DI: 0.1 UF, 20X, 50V 04222 SAL05 ALC835 281-0775-00 CAP, FXD, CER DI: 0.1 UF, 20X, 50V 04222 SAL05 ALC835 281-0775-00 CAP, FXD, CER DI: 0.1 UF, 80-20X, 200V 04222 SAL05 ALC847 283-0057-00 CAP, FXD, CER DI: 0.1 UF, 80-20X, 200V 04222 SR306 ALC849 283-0057-00 CAP, FXD, CER DI: 0.1 UF, 80-20X, 200V 04222 SR306 ALC849 283-0057-00 CAP, FXD, CER DI: 0.1 UF, 80-20X, 200V 04222 SR306 ALC851 283-0057-00 CAP, FXD, CER DI: 0.1 UF, 80-20X, 200V 04222 SR306 ALC851 283-0057-00 CAP, FXD, CER DI: 0.1 UF, 80-20X, 200V 04222 SR306 ALC853 281-0767-00 CAP, FXD, CER DI: 0.1 UF, 80-20X, 200V 04222 SR306 ALC853 283-0259-00 CAP, FXD, CER DI: 0.0 UF, 20X, 3000V 51406 DR12 CAP, FXD, CER DI: 0.0 UF, 20X, 3000V 51406 DR12 CAP, FXD, CER DI: 0.0 UF, 20X, 3000V 51406 DR12 CAP, FXD, CER DI: 0.0 UF, 20X, 3000V 51406 DR12 CAP, FXD, CER DI: 0.0 UF, 20X, 3000V 51406 DR12 CAP, FXD, CER DI: 0.0 UF, 20X, 3000V 51406 DR12 CAP, FXD, CER DI: 0.0 UF, 20X, 3000V 51406 DR12 CAP, FXD, CER DI: 0.0 UF, 20X, 3000V 51406 DR12 CAP, FXD, CER DI: 0.0 UF, 20X, 50V 04222 SR306 CAP, FXD, CER DI: 0.0 UF, 20X, 50V 04222 SR306 CAP, FXD, CER DI: 0.0 UF, 20X, 50V 04222 SR306 CAP, FXD, CER DI: 0.0 UF, 20X, 50V 04222 SR306 CAP, FXD, CER DI: 0.0 UF, 20X, 50V	5E104MAA
ALC789 281-0771-00 CAP,FXD,CER D1:2200PF,20%,200V 04222 SA106 ALC794 281-0064-00 CAP,VAR,PLASTIC:0.25-1.5PF,600V 52769 ER-53 ALC795 285-1101-00 CAP,FXD,CER D1:2200PF,20%,200V 19396 223K0 ALC795 281-0771-00 CAP,FXD,CER D1:2200PF,20%,200V 04222 SA105 ALC824 281-0785-01 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SA105 ALC828 281-0775-01 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SA105 ALC834 281-0775-01 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SA105 ALC834 281-0775-01 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SA105 ALC834 281-0775-01 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SA105 ALC835 281-0775-01 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SA105 ALC845 281-0771-00 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SA105 ALC847 283-0057-00 CAP,FXD,CER D1:0.1UF,80-20%,200V 04222 SR306 ALC847 283-0057-00 CAP,FXD,CER D1:0.1UF,80-20%,200V 04222 SR306 ALC849 283-0057-00 CAP,FXD,CER D1:0.1UF,80-20%,200V 04222 SR306 ALC851 283-0057-00 CAP,FXD,CER D1:0.1UF,80-20%,200V 04222 SR306 ALC853 281-0767-00 CAP,FXD,CER D1:0.1UF,80-20%,200V 04222 SR306 ALC854 283-0279-00 CAP,FXD,CER D1:0.1UF,20%,3000V 51406 DR127 ALC854 283-057-00 CAP,FXD,CER D1:0.1UF,20%,3000V 51406 DR127 ALC854 283-057-00 CAP,FXD,CER D1:0.0UF,20%,3000V 51406 DR127 ALC855 285-1184-00 CAP,FXD,CER D1:0.1UF,20%,3000V 51406 DR127 ALC856 283-057-00 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SR3061 ALC857 283-057-00 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SR3061 ALC893 283-057-00 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SR3061 ALC893 283-057-00 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SR3061 ALC902 281-0816-00 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SR3065 ALC902 281-0816-00 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SR3061 ALC902 281-0816-00 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SR3061 ALC902 281-0816-00 CAP,FXD,CER D1:0.1UF,10%,100V 04222 SR3061 ALC935 281-0775-01 CAP,FXD,CER D1:0.1UF,10%,100V 04222 SR3061 ALC935 281-0775-01 CAP,FXD,CER D1:0.1UF,10%,100V 04222 SR3061 ALC932 290	30-013
ALC789 281-0771-00 CAP,FXD,CER D1:2200PF,20%,200V 04222 SA106 ALC794 281-0064-00 CAP,VAR,PLASTIC:0.25-1.5PF,600V 52769 ER-53 ALC795 285-1101-00 CAP,FXD,CER D1:2200PF,20%,200V 19396 223K0 ALC795 281-0771-00 CAP,FXD,CER D1:2200PF,20%,200V 04222 SA105 ALC824 281-0785-01 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SA105 ALC828 281-0775-01 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SA105 ALC834 281-0775-01 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SA105 ALC834 281-0775-01 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SA105 ALC834 281-0775-01 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SA105 ALC835 281-0775-01 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SA105 ALC845 281-0771-00 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SA105 ALC847 283-0057-00 CAP,FXD,CER D1:0.1UF,80-20%,200V 04222 SR306 ALC847 283-0057-00 CAP,FXD,CER D1:0.1UF,80-20%,200V 04222 SR306 ALC849 283-0057-00 CAP,FXD,CER D1:0.1UF,80-20%,200V 04222 SR306 ALC851 283-0057-00 CAP,FXD,CER D1:0.1UF,80-20%,200V 04222 SR306 ALC853 281-0767-00 CAP,FXD,CER D1:0.1UF,80-20%,200V 04222 SR306 ALC854 283-0279-00 CAP,FXD,CER D1:0.1UF,20%,3000V 51406 DR127 ALC854 283-057-00 CAP,FXD,CER D1:0.1UF,20%,3000V 51406 DR127 ALC854 283-057-00 CAP,FXD,CER D1:0.0UF,20%,3000V 51406 DR127 ALC855 285-1184-00 CAP,FXD,CER D1:0.1UF,20%,3000V 51406 DR127 ALC856 283-057-00 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SR3061 ALC857 283-057-00 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SR3061 ALC893 283-057-00 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SR3061 ALC893 283-057-00 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SR3061 ALC902 281-0816-00 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SR3065 ALC902 281-0816-00 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SR3061 ALC902 281-0816-00 CAP,FXD,CER D1:0.1UF,20%,50V 04222 SR3061 ALC902 281-0816-00 CAP,FXD,CER D1:0.1UF,10%,100V 04222 SR3061 ALC935 281-0775-01 CAP,FXD,CER D1:0.1UF,10%,100V 04222 SR3061 ALC935 281-0775-01 CAP,FXD,CER D1:0.1UF,10%,100V 04222 SR3061 ALC932 290	02PT485
A1C795 285-1101-00 CAP, EXD, PLASTIC: 0.022UF, 10%, 200V 19396 223K0 A1C795 281-0771-00 CAP, EXD, CER D1: 2200PF, 20%, 200V 04222 SA106 A1C824 281-0785-00 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SA105 A1C832 281-0775-01 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SA105 A1C834 281-0775-01 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SA105 A1C834 281-0775-01 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SA105 A1C835 281-0775-01 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SA105 A1C835 281-0775-01 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SA105 A1C845 281-0771-00 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SA105 A1C845 281-0771-00 CAP, EXD, CER D1: 0.1UF, 20%, 20V 04222 SA105 A1C845 281-0771-00 CAP, EXD, CER D1: 0.1UF, 80-20%, 200V 04222 SA106 A1C849 283-0057-00 CAP, EXD, CER D1: 0.1UF, 80-20%, 200V 04222 SR306 A1C849 283-0057-00 CAP, EXD, CER D1: 0.1UF, 80-20%, 200V 04222 SR306 A1C851 283-0057-00 CAP, EXD, CER D1: 300F, 20%, 4000V 04222 SR306 A1C851 283-0057-00 CAP, EXD, CER D1: 300F, 20%, 4000V 04222 MA108 A1C854 283-0279-00 CAP, EXD, CER D1: 0.1UF, 20%, 3000V 51406 DRR12 A1C855 285-1184-00 CAP, EXD, CER D1: 0.1UF, 20%, 3000V 51406 DRR12 A1C875 283-0057-00 CAP, EXD, CER D1: 0.1UF, 20%, 3000V 51406 DRR12 A1C875 283-057-00 CAP, EXD, CER D1: 0.1UF, 20%, 3000V 51406 DRR12 A1C875 283-057-00 CAP, EXD, CER D1: 0.1UF, 20%, 3000V 51406 DRR12 CAP, EXD, CER D1: 0.1UF, 20%, 3000V 51406 DRR12 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SR306 A1C895 283-0759-00 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SR306 DRR12 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SR306 DRR12 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SR306 DRR12 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SR306 DRR12 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SR306 DRR12 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SR306 DRR12 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SR306 DRR12 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SR306 DRR12 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SR306 DRR12 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SR306 DRR12 CAP, EXD, CER D1: 0.1UF, 20%, 50V 04222 SR306 DRR12 CAP, EXD, CER D1: 0.1UF, 10%, 100	6E222MAA
ALC799 281-0771-00 CAP_FXD_CER_DI:2200PF_20X_200V 04222 SA106 ALC824 281-0785-00 CAP_FXD_CER_DI:2200PF_20X_200V 04222 SA106 ALC828 281-0775-01 CAP_FXD_CER_DI:0.1UF_20X_50V 04222 SA105 ALC832 281-0775-01 CAP_FXD_CER_DI:0.1UF_20X_50V 04222 SA105 ALC834 281-0775-01 CAP_FXD_CER_DI:0.1UF_20X_50V 04222 SA105 ALC835 281-0775-01 CAP_FXD_CER_DI:0.1UF_20X_50V 04222 SA105 ALC835 281-0775-01 CAP_FXD_CER_DI:0.1UF_20X_50V 04222 SA105 ALC835 281-0771-00 CAP_FXD_CER_DI:0.1UF_20X_50V 04222 SA105 ALC847 283-0057-00 CAP_FXD_CER_DI:0.1UF_80-20X_200V 04222 SA106 ALC849 283-0057-00 CAP_FXD_CER_DI:0.1UF_80-20X_200V 04222 SR306 ALC849 283-0057-00 CAP_FXD_CER_DI:0.1UF_80-20X_200V 04222 SR306 ALC851 283-0057-00 CAP_FXD_CER_DI:0.1UF_80-20X_200V 04222 SR306 ALC853 281-0767-00 CAP_FXD_CER_DI:0.1UF_80-20X_200V 04222 SR306 ALC855 281-0767-00 CAP_FXD_CER_DI:0.1UF_80-20X_200V 04222 SR306 ALC855 283-0057-00 CAP_FXD_CER_DI:0.1UF_80-20X_200V 04222 SR306 ALC855 283-0279-00 CAP_FXD_CER_DI:0.0UF_20X_3000V 51406 DHR12 ALC855 283-0057-00 CAP_FXD_CER_DI:0.0UF_20X_3000V 56289 430P5 ALC875 283-0057-00 CAP_FXD_CER_DI:0.0UF_80-20X_200V 04222 SR306 ALC893 283-0279-00 CAP_FXD_CER_DI:0.0UF_80-20X_200V 04222 SR306 ALC893 283-0279-00 CAP_FXD_CER_DI:0.0UF_20X_50V 04222 SR306 ALC893 283-0279-00 CAP_FXD_CER_DI:0.0UF_20X_50V 04222 SR306 ALC893 283-0279-00 CAP_FXD_CER_DI:0.0UF_20X_50V 04222 SR306 ALC893 283-0815-00 CAP_FXD_CER_DI:0.0UF_20X_50V 04222 SR306 ALC893 281-0812-00 CAP_FXD_CER_DI:0.0UF_20X_50V 04222 SR306 ALC893 281-0812-00 CAP	30-013
AICB28 281-0785-00 CAP_FXD_CER_DI:08PF_10X_100V 04222 MA10B1 AICB28 281-0775-01 CAP_FXD_CER_DI:0.1UF_20X_50V 04222 SA105 AICB32 281-0775-01 CAP_FXD_CER_DI:0.1UF_20X_50V 04222 SA105 AICB34 281-0775-01 CAP_FXD_CER_DI:0.1UF_20X_50V 04222 SA105 AICB35 281-0775-01 CAP_FXD_CER_DI:0.1UF_20X_50V 04222 SA105 AICB35 281-0775-01 CAP_FXD_CER_DI:0.1UF_20X_50V 04222 SA105 AICB35 281-0771-00 CAP_FXD_CER_DI:0.1UF_20X_50V 04222 SA106 AICB47 283-0057-00 CAP_FXD_CER_DI:0.1UF_480-20X_200V 04222 SR306 AICB49 283-0057-00 CAP_FXD_CER_DI:0.1UF_480-20X_200V 04222 SR306 AICB49 283-0057-00 CAP_FXD_CER_DI:0.1UF_480-20X_200V 04222 SR306 AICB51 283-0057-00 CAP_FXD_CER_DI:0.1UF_480-20X_200V 04222 SR306 AICB53 281-0767-00 CAP_FXD_CER_DI:0.1UF_480-20X_200V 04222 SR306 AICB53 281-0767-00 CAP_FXD_CER_DI:0.1UF_480-20X_200V 04222 SR306 AICB54 283-0279-00 CAP_FXD_CER_DI:0.1UF_480-20X_200V 55289 430P5 AICB55 285-1184-00 CAP_FXD_CER_DI:0.1UF_480-20X_200V 55289 430P5 AICB75 283-0057-00 CAP_FXD_CER_DI:0.1UF_480-20X_200V 04222 SR306 AICB75 283-0057-00 CAP_FXD_CER_DI:0.1UF_480-20X_200V 04222 SR306 AICB93 283-0279-00 CAP_FXD_CER_DI:0.1UF_480-20X_200V 04222 SR306 AICB93 283-0279-00 CAP_FXD_CER_DI:0.1UF_480-20X_200V 04222 SR306 AICB91 281-0815-00 CAP_FXD_CER_DI:0.1UF_480-20X_200V 04222 SR306 AICB91 281-0815-00 CAP_FXD_CER_DI:0.1UF_20X_50V 04222 SR306 AICB92 281-0775-01 CAP_FXD_CER_DI:0.1UF_20X_50V 04222 SR306 AICB93 281-0775-01 CAP_FXD_CER_DI:0.1UF_20X_50V 04222 SR306	02PT485
ALC828 281-0775-01 CAP_FXD_CER_D1:0.1UF_20%_50V 04222 SA105 ALC832 281-0775-01 CAP_FXD_CER_D1:0.1UF_20%_50V 04222 SA105 ALC835 281-0775-01 CAP_FXD_CER_D1:0.1UF_20%_50V 04222 SA105 ALC835 281-0775-01 CAP_FXD_CER_D1:0.1UF_20%_50V 04222 SA105 ALC845 281-0771-00 CAP_FXD_CER_D1:0.1UF_20%_50V 04222 SA105 ALC845 283-0057-00 CAP_FXD_CER_D1:0.1UF_480-20%_200V 04222 SA106 ALC849 283-0057-00 CAP_FXD_CER_D1:0.1UF_480-20%_200V 04222 SR306 ALC849 283-0057-00 CAP_FXD_CER_D1:0.1UF_480-20%_200V 04222 SR306 ALC851 283-0057-00 CAP_FXD_CER_D1:0.1UF_480-20%_200V 04222 SR306 ALC853 281-0767-00 CAP_FXD_CER_D1:0.1UF_20%_500V 04222 MA108 ALC854 283-0279-00 CAP_FXD_CER_D1:0.01UF_20%_3000V 51406 DHR12 ALC855 285-1184-00 CAP_FXD_CER_D1:0.01UF_20%_4000V 56289 430P5 ALC871 283-0057-00 CAP_FXD_CER_D1:0.1UF_480-20%_200V 04222 SR306 ALC871 283-0057-00 CAP_FXD_CER_D1:0.1UF_480-20%_200V 04222 SR306 ALC871 283-0057-00 CAP_FXD_CER_D1:0.1UF_20%_500V 04222 SR306 ALC893 283-0279-00 CAP_FXD_CER_D1:0.1UF_20%_500V 04222 SR306 ALC893 283-0279-00 CAP_FXD_CER_D1:0.1UF_20%_500V 04222 SR306 ALC893 283-0279-00 CAP_FXD_CER_D1:0.027UF_20%_500V 04222 SR306 ALC902 281-075-01 CAP_FXD_CER_D1:0.027UF_20%_500V 04222 SR306 ALC902 281-075-01 CAP_FXD_CER_D1:0.01UF_20%_500V 04222 SA1051 ALC902 281-0812-00 CAP_FXD_CER_D1:0.01UF_20%_500V 04222 SA1051 ALC903 281-0812-00 CAP_FXD_CER_D1:0.1UF_20%_50V 04222 SA1051 ALC933 281-0775-01 CAP_FXD_CER_D1:0.01UF_20%_50V 04222 SA1051 ALC933 281-0775-01 CAP_FXD_CER_D1:0.01UF_20%_50V 04222 SA1051 ALC935 280-075-01 CAP_FXD_CER_D1:0.01UF_20%_50V 04222 SA1051 ALC935 280-075-01 CAP_FXD_CER_D1:0.01UF_20%_50V 04222 SA1051 ALC935 281-0775-01 CAP_FXD_CER_D1:0.01UF_20%_50V 04222 SA1051 ALC935 281-0775-01 CAP_FXD_CER_D1:0.01UF_20%_50V 04222 SA1051 ALC936 281-0773-00 CAP_FXD_CER_D1:0.01UF_10%_100V 04222 M	6E222MAA
ALC832 281-0775-01 CAP_FXD_CER_DI: 0.1UF_20X_50V 04222 SA105 ALC834 281-0775-01 CAP_FXD_CER_DI: 0.1UF_20X_50V 04222 SA105 ALC835 281-0775-01 CAP_FXD_CER_DI: 0.1UF_20X_50V 04222 SA105 ALC845 281-0771-00 CAP_FXD_CER_DI: 0.1UF_20X_50V 04222 SA106 ALC847 283-0057-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SA106 ALC849 283-0057-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC851 283-0057-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC851 283-057-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC853 281-0767-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC854 283-0279-00 CAP_FXD_CER_DI: 0.001UF_20X_3000V 5288 430P5 ALC855 285-1184-00 CAP_FXD_CER_DI: 0.01UF_20X_3000V 5288 430P5 ALC857 283-0057-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC855 283-057-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC855 283-057-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC856 283-0279-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC857 283-057-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC858 283-073-00 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306 ALC859 281-081-00 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306 ALC859 281-081-00 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306 ALC859 281-0812-00 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306 ALC859 281-0812-00 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306 ALC859 281-0812-00 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306 ALC859 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306 ALC859 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306 ALC859 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306	1A680KAA
ALC832 281-0775-01 CAP_FXD_CER_DI: 0.1UF_20X_50V 04222 SA105 ALC834 281-0775-01 CAP_FXD_CER_DI: 0.1UF_20X_50V 04222 SA105 ALC835 281-0775-01 CAP_FXD_CER_DI: 0.1UF_20X_50V 04222 SA105 ALC845 281-0771-00 CAP_FXD_CER_DI: 0.1UF_20X_50V 04222 SA106 ALC847 283-0057-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SA106 ALC849 283-0057-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC851 283-0057-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC851 283-057-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC853 281-0767-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC854 283-0279-00 CAP_FXD_CER_DI: 0.001UF_20X_3000V 5288 430P5 ALC855 285-1184-00 CAP_FXD_CER_DI: 0.01UF_20X_3000V 5288 430P5 ALC857 283-0057-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC855 283-057-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC855 283-057-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC856 283-0279-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC857 283-057-00 CAP_FXD_CER_DI: 0.1UF_80-20X_200V 04222 SR306 ALC858 283-073-00 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306 ALC859 281-081-00 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306 ALC859 281-081-00 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306 ALC859 281-0812-00 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306 ALC859 281-0812-00 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306 ALC859 281-0812-00 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306 ALC859 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306 ALC859 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306 ALC859 CAP_FXD_CER_DI: 0.1UF_80X_50V 04222 SR306	SE104MAA
ALC834 281-0775-01 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 SA105 ALC845 281-0771-00 CAP, FXD, CER DI: 2200PF, 20%, 200V 04222 SA106 ALC847 283-0657-00 CAP, FXD, CER DI: 2200PF, 20%, 200V 04222 SR306 ALC849 283-0057-00 CAP, FXD, CER DI: 0.1UF, +80-20%, 200V 04222 SR306 ALC849 283-0057-00 CAP, FXD, CER DI: 0.1UF, +80-20%, 200V 04222 SR306 ALC851 283-0057-00 CAP, FXD, CER DI: 0.1UF, +80-20%, 200V 04222 SR306 ALC853 281-0767-00 CAP, FXD, CER DI: 0.1UF, +80-20%, 200V 04222 SR306 ALC853 281-0767-00 CAP, FXD, CER DI: 3.0PF, 20%, 100V 04222 MA106 ALC854 283-0279-00 CAP, FXD, CER DI: 0.001UF, 20%, 4000V 56289 430P5 ALC855 285-1184-00 CAP, FXD, CER DI: 0.1UF, +80-20%, 200V 04222 SR306 ALC857 283-0057-00 CAP, FXD, CER DI: 0.1UF, +80-20%, 200V 04222 SR306 ALC857 283-0057-00 CAP, FXD, CER DI: 0.1UF, +80-20%, 200V 04222 SR306 ALC893 283-0279-00 CAP, FXD, CER DI: 0.1UF, +80-20%, 200V 04222 SR306 ALC893 283-0279-00 CAP, FXD, CER DI: 0.1UF, 20%, 3000V 51406 DHR12 ALC901 281-0815-00 CAP, FXD, CER DI: 0.027UF, 20%, 50V 04222 SA1051 ALC902 281-0775-01 CAP, FXD, CER DI: 10.0 PF, 10%, 100V 04222 MA1016 ALC914 281-0814-00 CAP, FXD, CER DI: 10.0 PF, 10%, 100V 04222 MA1016 ALC915 281-0775-01 CAP, FXD, CER DI: 10.0 PF, 10%, 100V 04222 SA1051 ALC920 281-0812-00 CAP, FXD, CER DI: 0.1 UF, 20%, 50V 04222 SA1051 ALC932 280-0806-00 CAP, FXD, CER DI: 0.0 UF, 20%, 50V 04222 SA1051 ALC933 281-0775-01 CAP, FXD, CER DI: 0.0 UF, 20%, 50V 04222 SA1051 ALC933 281-0775-01 CAP, FXD, CER DI: 0.0 UF, 10%, 100V 04222 MA1016 ALC935 281-0775-01 CAP, FXD, CER DI: 0.0 UF, 20%, 50V 04222 SA1051 ALC935 281-0775-01 CAP, FXD, CER DI: 0.0 UF, 20%, 50V 04222 SA1051 ALC935 281-0775-01 CAP, FXD, CER DI: 0.0 UF, 20%, 50V 04222 SA1051 ALC936 281-0775-01 CAP, FXD, CER DI: 0.0 UF, 20%, 50V 04222 SA1051 ALC936 281-0773-00 CAP, FXD, CER DI: 0.0 UF, 20%, 50V 04222 SA1051 ALC936 281-0775-01 CAP, FXD, CER DI: 0.0 UF, 20%, 50V 04222 SA1051 ALC931 281-0775-01 CAP, FXD, CER DI: 0.0 UF, 20%, 50V 04222 SA1051 ALC931 281-0775-01 CAP, FXD, CER DI: 0.0 UF, 20%, 50V 04222 SA1051 ALC93	SE104MAA
A1C845 281-0771-00 CAP_FXD_CER_DI:2200PF, 20%, 200V 04222 SA106 A1C847 283-0057-00 CAP_FXD_CER_DI:0.1UF_+80-20%, 200V 04222 SR306 A1C849 283-057-00 CAP_FXD_CER_DI:0.1UF_+80-20%, 200V 04222 SR306 A1C851 283-057-00 CAP_FXD_CER_DI:0.1UF_+80-20%, 200V 04222 SR306 A1C853 281-0767-00 CAP_FXD_CER_DI:330PF, 20%, 100V 04222 MA106 A1C853 281-0767-00 CAP_FXD_CER_DI:330PF, 20%, 3000V 51406 DHR12* A1C854 283-0279-00 CAP_FXD_CER_DI:0.10F_+80-20%, 200V 04222 SR306 A1C855 285-1184-00 CAP_FXD_CER_DI:0.10F_+80-20%, 200V 04222 SR306 A1C871 283-057-00 CAP_FXD_CER_DI:0.10F_+80-20%, 200V 04222 SR306 A1C875 283-057-00 CAP_FXD_CER_DI:0.10F_+80-20%, 200V 04222 SR306 A1C893 283-0279-00 CAP_FXD_CER_DI:0.10F_+80-20%, 3000V 51406 DHR12* A1C901 281-0815-00 CAP_FXD_CER_DI:0.10F_, 20%, 3000V 51406 DHR12* A1C902 281-0815-00 CAP_FXD_CER_DI:0.10F_, 20%, 50V 04222 MA2050 A1C914 281-0814-00 CAP_FXD_CER_DI:0.10F_, 20%, 50V 04222 SA1051 A1C915 281-0775-01 CAP_FXD_CER_DI:0.10F_, 20%, 50V 04222 SA1051 A1C920 281-0812-00 CAP_FXD_CER_DI:0.10F_, 20%, 50V 04222 SA1051 A1C932 290-0806-00 CAP_FXD_CER_DI:0.10F_, 20%, 50V 04222 SA1051 A1C933 281-0775-01 CAP_FXD_CER_DI:0.10F_, 20%, 50V 04222 SA1051 A1C933 281-0775-01 CAP_FXD_CER_DI:0.10F_, 20%, 50V 04222 SA1051 A1C934 290-0806-00 CAP_FXD_CER_DI:0.10F_, 20%, 50V 04222 SA1051 A1C935 281-0775-01 CAP_FXD_CER_DI:0.10F_, 20%, 50V 04222 SA1051 A1C935 281-0775-01 CAP_FXD_CER_DI:0.10F_, 20%, 50V 04222 SA1051 A1C936 281-0775-00 CAP_FXD_CER_DI:0.10F_, 20%,	5E104MAA
A1C847 283-0057-00 CAP, FXD, CER DI: 0.1UF, +80-20%, 200V 04222 SR306 A1C849 283-0057-00 CAP, FXD, CER DI: 0.1UF, +80-20%, 200V 04222 SR306 CAP, FXD, CER DI: 0.1UF, +80-20%, 200V 04222 SR306 A1C851 283-0057-00 CAP, FXD, CER DI: 0.1UF, +80-20%, 200V 04222 SR306 CAP, FXD, CER DI: 330PF, 20%, 100V 04222 MA1060 A1C853 281-0767-00 CAP, FXD, CER DI: 330PF, 20%, 100V 04222 MA1060 A1C855 285-1184-00 CAP, FXD, CER DI: 0.10UF, 20%, 4000V 56289 430P5 A1C871 283-0057-00 CAP, FXD, CER DI: 0.1UF, +80-20%, 200V 04222 SR3060 A1C875 283-0057-00 CAP, FXD, CER DI: 0.1UF, +80-20%, 200V 04222 SR3060 A1C893 283-0279-00 CAP, FXD, CER DI: 0.1UF, +80-20%, 200V 04222 SR3060 A1C893 283-0279-00 CAP, FXD, CER DI: 0.001UF, 20%, 3000V 51406 DHR12 A1C901 281-0815-00 CAP, FXD, CER DI: 0.001UF, 20%, 3000V 51406 DHR12 A1C901 281-0815-00 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 MA2050 A1C902 281-0775-01 CAP, FXD, CER DI: 0.1UF, 20%, 50V 04222 SA1050 CAP, FXD, CER DI: 0.1UF, 20%, 50V 0422	5E104MAA
A1C849 283-0057-00 CAP_FXD_CER_DI:0.1UF_+80-20%_200V 04222 SR306 A1C851 283-0057-00 CAP_FXD_CER_DI:0.1UF_+80-20%_200V 04222 SR306 A1C853 281-0767-00 CAP_FXD_CER_DI:330PF_20%_100V 04222 SR306 A1C853 281-0767-00 CAP_FXD_CER_DI:330PF_20%_100V 04222 MA106 A1C854 283-0279-00 CAP_FXD_CER_DI:0.001UF_20%_3000V 51406 DHR12 A1C855 285-1184-00 CAP_FXD_CER_DI:0.1UF_+80-20%_200V 04222 SR306 A1C875 283-0057-00 CAP_FXD_CER_DI:0.1UF_+80-20%_200V 04222 SR306 A1C875 283-0057-00 CAP_FXD_CER_DI:0.1UF_+80-20%_200V 04222 SR306 A1C893 283-0279-00 CAP_FXD_CER_DI:0.001UF_20%_3000V 51406 DHR12 A1C901 281-0815-00 CAP_FXD_CER_DI:0.027UF_20%_50V 04222 MA2050 A1C902 281-0775-01 CAP_FXD_CER_DI:0.027UF_20%_50V 04222 SA1051 A1C914 281-0814-00 CAP_FXD_CER_DI:0.1UF_20%_50V 04222 SA1051 A1C915 281-0775-01 CAP_FXD_CER_DI:0.1UF_20%_50V 04222 SA1051 A1C920 281-0812-00 CAP_FXD_CER_DI:0.1UF_20%_50V 04222 SA1051 A1C930 281-0812-00 CAP_FXD_CER_DI:0.1UF_20%_50V 04222 SA1051 A1C932 290-0806-00 CAP_FXD_CER_DI:0.01UF_20%_50V 04222 MA1010 A1C932 290-0806-00 CAP_FXD_CER_DI:0.01UF_20%_50V 04222 MA1010 A1C932 290-0806-00 CAP_FXD_CER_DI:0.01UF_20%_50V 04222 MA1010 A1C933 281-0775-01 CAP_FXD_CER_DI:0.01UF_20%_50V 04222 SA1051 A1C935 281-0775-01 CAP_FXD_CER_DI:0.01UF_20%_50V 04222 SA1051 A1C936 281-0775-01 CAP_FXD_CER_DI:0.01UF_20%_50V 04222 SA1051 A1C936 281-0775-01 CAP_FXD_CER_DI:0.01UF_20%_50V 04222 SA1051 A1C936 281-0775-01 CAP_FXD_CER_DI:0.01UF_20%_50V 04222 SA1051 A1C942 281-0773-00 CAP_FXD_CER_DI:0.01UF_20%_50V 04222 SA1051 A1C942 281-0773-00 CAP_FXD_CER_DI:0.01UF_20%_50V 04222 SA1051 A1C942 281-0773-00 CAP_FXD_CER_DI:0.01UF_20%_50V 04222 SA1051	GE222MAA
ACRS 283-0057-00	
CAP_FXD_CER_DI:330PF_20%,100V O4222 MA106 CAP_FXD_CER_DI:330PF_20%,100V O4222 MA106 CAP_FXD_CER_DI:0.001UF_20%,3000V S1406 DHR12' CAP_FXD_MTLZD:0.01 UF_20%,4000V S6289 430P5 CAP_FXD_CER_DI:0.1UF_80-20%,200V O4222 SR306 CAP_FXD_CER_DI:0.1UF_80-20%,200V O4222 SR306 CAP_FXD_CER_DI:0.1UF_80-20%,200V O4222 SR306 CAP_FXD_CER_DI:0.001UF_20%,3000V S1406 DHR12' CAP_FXD_CER_DI:0.001UF_20%,3000V S1406 DHR12' CAP_FXD_CER_DI:0.0027UF_20%,50V O4222 MA205 CAP_FXD_CER_DI:0.0027UF_20%,50V O4222 MA205 CAP_FXD_CER_DI:0.1UF_20%,50V O4222 MA1010' CAP_FXD_CER_DI:0.1UF_20%,50V O4222 MA2010' CAP_FXD_CER_DI:0.1UF_20%,50V O4222 MA2	E104ZAA
CAP, FXD, CER DI:0.001UF, 20%, 3000V 51406 DHR12	E104ZAA
A1C855 285-1184-00 CAP, FXD, MTLZD: 0.01 UF, 20%, 4000V S6289 430P56 A1C871 283-0057-00 CAP, FXD, CER DI: 0.1UF, +80-20%, 200V O4222 SR3066 A1C893 283-0279-00 CAP, FXD, CER DI: 0.001UF, 20%, 3000V S1406 DHR12* CAP, FXD, CER DI: 0.001UF, 20%, 3000V S1406 DHR12* CAP, FXD, CER DI: 0.027UF, 20%, 50V O4222 MA2056 CAP, FXD, CER DI: 0.027UF, 20%, 50V O4222 MA2056 CAP, FXD, CER DI: 0.027UF, 20%, 50V O4222 MA2056 CAP, FXD, CER DI: 0.001UF, 20%, 50V O4222 MA2056 CAP, FXD, CER DI: 0.001UF, 20%, 50V O4222 MA1010UF, CAP, FXD, CER DI: 0.001UF, 20%, 50V O4222 CAP, FXD, CER DI: 0.001UF, 10%, 100V O4222 CAP, FXD, CER DI: 0.001UF, 20%, 50V O4	BC331MAA
A1C871 283-0057-00 CAP, FXD, CER DI:0.1UF, +80-20%, 200V 04222 SR306(A1C875 283-0057-00 CAP, FXD, CER DI:0.1UF, +80-20%, 200V 04222 SR306(A1C893 283-0279-00 CAP, FXD, CER DI:0.001UF, 20%, 3000V 51406 OHR12' A1C901 281-0815-00 CAP, FXD, CER DI:0.0027UF, 20%, 50V 04222 MA205(A1C902 281-0775-01 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA105(A1C914 281-0814-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA105(A1C915 281-0775-01 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA105(A1C920 281-0812-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA105(A1C920 281-0812-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA105(A1C925 281-0775-01 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA105(A1C930 281-0812-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA105(A1C932 290-0806-00 CAP, FXD, CER DI:0.01UF, 10%, 100V 04222 MA101(A1C932 290-0806-00 CAP, FXD, CER DI:0.01UF, 10%, 100V 04222 MA201(A1C933 281-0773-00 CAP, FXD, CER DI:0.01UF, 10%, 100V 04222 SA105(A1C935 281-0775-01 CAP, FXD, CER DI:0.01UF, 20%, 50V 04222 SA105(A1C941 281-0773-00 CAP, FXD, CER DI:0.01UF, 20%, 50V 04222 SA105(A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 20%, 50V 04222 SA105(A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 20%, 50V 04222 SA105(A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 20%, 50V 04222 SA105(A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 20%, 50V 04222 SA105(A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 20%, 50V 04222 SA105(A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 20%, 50V 04222 SA105(A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 20%, 50V 04222 SA105(A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 20%, 50V 04222 SA105(A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 20%, 50V 04222 SA105(A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 20%, 50V 04222 SA105(A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 20%, 50V 04222 SA105(A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 10%, 100V 04222 MA201(A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 10%, 100V 04222 MA201(A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 10%, 100V 04222 MA201(A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 10%, 100V	PY5SIO2M3KV
A1C875 283-0057-00 CAP, FXD, CER DI:0.1UF, +80-20%, 200V A222 SR306 A1C893 283-0279-00 CAP, FXD, CER DI:0.001UF, 20%, 3000V 51406 DHR12* A1C901 281-0815-00 CAP, FXD, CER DI:0.027UF, 20%, 50V 04222 MA205 A1C902 281-0775-01 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA105 A1C914 281-0814-00 CAP, FXD, CER DI:100 PF, 10%, 100V 04222 MA101/ A1C915 281-0775-01 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA105 A1C920 281-0812-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 MA101/ A1C925 281-0775-01 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA105 A1C930 281-0812-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 MA101/ A1C932 290-0806-00 CAP, FXD, CER DI:0.00PF, 10%, 100V 04222 MA101/ A1C932 290-0806-00 CAP, FXD, CER DI:0.01UF, 10%, 100V 04222 MA201/ A1C933 281-0773-00 CAP, FXD, CER DI:0.01UF, 20%, 50V 04222 SA105 A1C941 281-0775-01 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA105 A1C942 281-0773-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA105 A1C942 281-0773-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA105 A1C942 281-0773-00 CAP, FXD, CER DI:0.0UF, 10%, 100V 04222 MA201/ A1C942 281-0773-00 CAP, FXD, CER DI:0.0UF, 10%, 100V 04222 MA201/ A1C942 281-0773-00 CAP, FXD, CER DI:0.0UF, 10%, 100V 04222 MA201/ A1C942 281-0773-00 CAP, FXD, CER DI:0.0UF, 10%, 100V 04222 MA201/ A1C942 281-0773-00 CAP, FXD, CER DI:0.0UF, 10%, 100V 04222 MA201/ A1C942 281-0773-00 CAP, FXD, CER DI:0.0UF, 10%, 100V 04222 MA201/ A1C942 281-0773-00 CAP, FXD, CER DI:0.0UF, 10%, 100V 04222 MA201/ A1C942 281-0773-00 CAP, FXD, CER DI:0.0UF, 10%, 100V 04222 MA201/ A1C942 281-0773-00 CAP, FXD, CER DI:0.0UF, 10%, 100V 04222 MA201/ A1C942 281-0773-00 CAP, FXD, CER DI:0.0UF, 10%, 100V 04222 MA201/ A1C942 281-0773-00 CAP, FXD, CER DI:0.0UF, 10%, 100V 04222 MA201/ A1C942 A1C942 A1C942 MA201/ A1C942 A1C942 MA201/ A1C942 A1C942 MA201/ A1C942 A1C942 MA201/ A1C942	
A1C893 283-0279-00 CAP, FXD, CER DI:0.001UF, 20%, 3000V 51406 DHR12' A1C901 281-0815-00 CAP, FXD, CER DI:0.027UF, 20%, 50V 04222 MA2050' A1C902 281-0775-01 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA1051' A1C914 281-0814-00 CAP, FXD, CER DI:100 PF, 10%, 100V 04222 MA1011' A1C915 281-0775-01 CAP, FXD, CER DI:1000PF, 10%, 100V 04222 SA1051' A1C920 281-0812-00 CAP, FXD, CER DI:1000PF, 10%, 100V 04222 MA1010' A1C925 281-0775-01 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA1051' A1C930 281-0812-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 MA1010' A1C932 290-0806-00 CAP, FXD, CER DI:1000PF, 10%, 100V 04222 MA1010' A1C932 290-0806-00 CAP, FXD, CER DI:0.01UF, 10%, 350VDC 55680 UHU2V3' A1C933 281-0773-00 CAP, FXD, CER DI:0.01UF, 10%, 100V 04222 MA2010' A1C935 281-0775-01 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA1051' A1C941 281-0773-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA1051' A1C942 281-0773-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA1051' A1C942 281-0773-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA1051' A1C942 281-0773-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA1051' A1C942 281-0773-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA1051' A1C942 281-0773-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA1051' A1C942 281-0773-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA1051' A1C942 281-0773-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA1051' A1C942 281-0773-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA1051' A1C942 281-0773-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA1051' A1C942 281-0773-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA1051' A1C942 281-0773-00 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA1051' A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 10%, 100V 04222 MA2010' A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 10%, 100V 04222 MA2010' A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 10%, 100V 04222 MA2010' A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 10%, 100V 04222 MA2010' A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 10%, 100V 04222 MA2010' A1C942 281-0773-00 CAP, FXD, CER DI:0.01UF, 10%, 100V 04222 MA2010' A1C942 281-0773-00 CAP, FXD, CER DI	
CAP, FXD, CER DI:0.027UF, 20%, 50V 04222 MA2050 M	
A1C914 281-0814-00 CAP_FXD_CER_DI:100_PF,10%,100V 04222 MA101/LO915 281-0775-01 CAP_FXD_CER_DI:0.1UF,20%,50V 04222 SA105 LO920 281-0812-00 CAP_FXD_CER_DI:1000PF,10%,100V 04222 MA101025 281-0775-01 CAP_FXD_CER_DI:0.1UF,20%,50V 04222 SA105 LO930 281-0812-00 CAP_FXD_CER_DI:1000PF,10%,100V 04222 MA1010232 290-0806-00 CAP_FXD_CER_DI:1000PF,10%,100V 04222 MA1010233 281-0773-00 CAP_FXD_CER_DI:0.01UF,10%,100V 04222 MA2010235 281-0775-01 CAP_FXD_CER_DI:0.1UF,20%,50V 04222 SA105 LO941 281-0775-01 CAP_FXD_CER_DI:0.1UF,20%,50V 04222 SA105 LO942 281-0773-00 CAP_FXD_CER_DI:0.1UF,20%,50V 04222 SA105 LO942 281-0773-00 CAP_FXD_CER_DI:0.1UF,20%,50V 04222 SA105 LO942 281-0773-00 CAP_FXD_CER_DI:0.01UF,10%,100V 04222 MA20102 CAP_FXD_CER_DI:0.01UF,10%,100V 04222 CAP_FXD_CER_DI:0.01UF,10%,100V 04	2Y5S102M3KV 5C273MAA
A1C914 281-0814-00 CAP, FXD, CER DI:100 PF, 10%, 100V 04222 MA101/	CE 1 DAMAA
\text{A1C915} 281-0775-01 CAP,FXD,CER DI:0.1UF,20%,50V 04222 SA105I CAP,FXD,CER DI:1000PF,10%,100V 04222 MA101C925 281-0775-01 CAP,FXD,CER DI:0.1UF,20%,50V 04222 SA105I CAP,FXD,CER DI:0.00PF,10%,100V 04222 MA101C932 290-0806-00 CAP,FXD,CER DI:0.01UF,10%,100V 04222 MA201C933 281-0773-00 CAP,FXD,CER DI:0.01UF,10%,100V 04222 MA201C935 281-0775-01 CAP,FXD,CER DI:0.1UF,20%,50V 04222 SA105I CAP,FXD,CER DI:0.1UF,20%,50V 04222 SA105I CAP,FXD,CER DI:0.01UF,10%,100V 04222 SA105I CAP,FXD,CER DI:0.01UF,10%,100V 04222 SA105I CAP,FXD,CER DI:0.01UF,10%,100V 04222 MA201C9 CAP,FXD,CER DI:0.01UF,10%,100V 04222 CAP,FXD,CER DI:0.01UF,10%,100V 04222 MA201C9 CAP,FXD,CER DI:0.01UF,10%,100V 04222 MA201	
\text{\tert{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{	
\text{1C925} \text{281-0775-01} \text{CAP,FXD,CER DI:0.1UF,20%,50V} \text{04222} \text{SA1056} \\ \text{1C930} \text{281-0812-00} \text{CAP,FXD,CER DI:1000PF,10%,100V} \text{04222} \text{MA1010} \\ \text{1C932} \text{290-0806-00} \text{CAP,FXD,ELCTLT:3.3UF,+75-10%,350VDC} \text{55680} \text{UHU2V3} \\ \text{1C933} \text{281-0773-00} \text{CAP,FXD,CER DI:0.01UF,10%,100V} \text{04222} \text{MA2010} \\ \text{1C935} \text{281-0775-01} \text{CAP,FXD,CER DI:0.1UF,20%,50V} \text{04222} \text{SA1056} \\ \text{1C942} \text{281-0773-00} \text{CAP,FXD,CER DI:0.01UF,10%,100V} \text{04222} \text{MA2010} \\ \text{CAP,FXD,CER DI:0.01UF,10%,100V} \text{04222} \text{MA2010} \\ \text{04222} \text{MA2010} \\ \text{04222} \text{CAP,FXD,CER DI:0.01UF,10%,100V} \text{04222} \text{MA2010} \\ \text{04222} \text{04222} \\ \text{04222}	
1C930 281-0812-00 CAP,FXD,CER DI:1000PF,10%,100V 04222 MA1010 1C932 290-0806-00 CAP,FXD,ELCTLT:3.3UF,+75-10%,350VDC 55680 UHU2V3 1C933 281-0773-00 CAP,FXD,CER DI:0.01UF,10%,100V 04222 MA2010 1C935 281-0775-01 CAP,FXD,CER DI:0.1UF,20%,50V 04222 SA1058 1C941 281-0775-01 CAP,FXD,CER DI:0.1UF,20%,50V 04222 SA1058 1C942 281-0773-00 CAP,FXD,CER DI:0.01UF,10%,100V 04222 MA2010	CT DAMAA
1C932 290-0806-00 CAP,FXD,ELCTLT:3.3UF,+75-10%,350VDC 55680 UHU2V3 1C933 281-0773-00 CAP,FXD,CER DI:0.01UF,10%,100V 04222 MA2010 1C935 281-0775-01 CAP,FXD,CER DI:0.1UF,20%,50V 04222 SA1058 1C941 281-0775-01 CAP,FXD,CER DI:0.1UF,20%,50V 04222 SA1058 1C942 281-0773-00 CAP,FXD,CER DI:0.01UF,10%,100V 04222 MA2010	
11C933 281-0773-00 CAP_FXD_CER_DI:0.01UF_10%_100V 04222 MA2010 11C935 281-0775-01 CAP_FXD_CER_DI:0.1UF_20%_50V 04222 SA1056 11C941 281-0775-01 CAP_FXD_CER_DI:0.1UF_20%_50V 04222 SA1056 11C942 281-0773-00 CAP_FXD_CER_DI:0.01UF_10%_100V 04222 MA2010	
\(1C935\) 281-0775-01 CAP,FXD,CER DI:0.1UF,20%,50V 04222 SA105E \\ \(1C941\) 281-0775-01 CAP,FXD,CER DI:0.1UF,20%,50V 04222 SA105E \\ \(1C942\) 281-0773-00 CAP,FXD,CER DI:0.01UF,10%,100V 04222 MA2010	/3R3TPA
NC941 281-0775-01 CAP, FXD, CER DI:0.1UF, 20%, 50V 04222 SA105E	
NIC942 079981 - 8.773-00 94222 MA2010 04222 MA2010	
	C103KAA A101KAA
11C945 281-0775-01 CAP_FXD_CER_DI:0.1UF_20%,50V 04222 SA105E	E104MAA
	A101KAA
	E104MAA
	A181JAA

Componen	rt No.	Tektronix Part No.	Serial/Assembly No. Effective Dscont	Name & Description	Mfr
A1C976 A1C979 A1C980 A1C982 A1C983 A1C984		285-1184-00 285-1184-00 285-1184-00 290-0947-00 290-0806-00 290-0947-00		CAP, FXD, MTLZD: 0.01 UF, 20%, 4000V CAP, FXD, MTLZD: 0.01 UF, 20%, 4000V CAP, FXD, MTLZD: 0.01 UF, 20%, 4000V CAP, FXD, ELCTLT: 33UF, +50-10%, 160V W/SLEEVE CAP, FXD, ELCTLT: 3.3UF, +75-10%, 350VDC CAP, FXD, ELCTLT: 33UF, +50-10%, 160V W/SLEEVE	56289 430P591 56289 430P591 56289 430P591 55680 UHC2C330TFA 55680 UHC2C330TFA
A1C985 A1C986 A1C987 A1C988 A1C989 A1C990	(1) (2) (2) (2) (3) (3) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4			CAP, FXD, ELCTLT:3.3UF,+75-10%,350VDC CAP, FXD, ELCTLT:1000UF,20%,16V	55680 UHUZV3R3TPA TKOED TWSS TKOED TWSS TKOED TWSS TKOED TWSS TKOED TWSS TKOED TWSS
A1C991 A1C992 A1CR133 A1CR136 A1CR139 A1CR183	변기 (1841) 전시대 발표기대	290-1159-00 283-0057-00 152-0141-02 152-0141-02 152-0141-02 152-0141-02		CAP,FXD,ELCTLT:1000UF,20%,16V CAP,FXD,CER DI:0.1UF,+80-20%,200V SEMICOND DVC,DI:SW,SI,30V,150MA,30V,D0-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,D0-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,D0-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,D0-35	TKOED TWSS 04222 SR306E104ZAA 03508 DA2527 (1N4152) 03508 DA2527 (1N4152) 03508 DA2527 (1N4152) 03508 DA2527 (1N4152)
A1CR186 A1CR189 A1CR265 A1CR266 A1CR300 A1CR301		152-0141-02 152-0141-02 152-0141-02 152-0141-02 152-0141-02 152-0141-02		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508 DA2527 (1N4152) 03508 DA2527 (1N4152) 03508 DA2527 (1N4152) 03508 DA2527 (1N4152) 03508 DA2527 (1N4152) 03508 DA2527 (1N4152)
A1CR302 A1CR319 A1CR344 A1CR348 A1CR349 A1CR381		152-0141-02 152-0141-02 152-0141-02 152-0141-02 152-0141-02 152-0141-02		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508
A1CR417 A1CR431 A1CR450 A1CR451 A1CR452 A1CR521	(460, 140, 150, 150, 150, 150, 150, 150, 150, 15	152-0141-02 152-0141-02 152-0141-02 152-0141-02 152-0141-02 152-0141-02		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508 DA2527 (1N4152)
A1CR530 A1CR539 A1CR540 A1CR571 A1CR584 A1CR588		152-0141-02 152-0141-02 152-0141-02 152-0141-02 152-0141-02 152-0141-02	도 설 제 설 제 설 제 설 제 설계	SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35 SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35	03508 DA2527 (1N4152) 03508 DA2527 (1N4152) 03508 DA2527 (1N4152) 03508 DA2527 (1N4152) 03508 DA2527 (1N4152) 03508 DA2527 (1N4152)
A1CR589 A1CR780 A1CR781 A1CR790 A1CR791 A1CR817		152-0141-02 152-0141-02 152-0141-02 152-0141-02 152-0141-02 152-0141-02	-	SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35 SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35	03508 DA2527 (1N4152) 03508 DA2527 (1N4152) 03508 DA2527 (1N4152) 03508 DA2527 (1N4152) 03508 DA2527 (1N4152) 03508 DA2527 (1N4152)
A1CR818 A1CR819 A1CR820 A1CR824 A1CR825 A1CR827		152-0141-02 152-0141-02 152-0141-02 152-0141-02 152-0141-02 152-0141-02	(1) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4	SEMICOND DVC, D1:SW, S1, 30V, 150MA, 30V, D0-35	03508 DA2527 (1N4152)
A1CR828 A1CR829 A1CR840 A1CR845		152-0141-02 152-0141-02 152-0141-02 152-0141-02	. 90) 1 - 44, 9	SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508

Component No.	Tektronix Part No.	Serial/Assembly No. Effective Discont	will granters with success Name & Description with success to the first terms of the second section of the sec	Mfr. Code Mfr. Part No.
A1CR851 A1CR853 A1CR854 A1CR855 A1CR933 A1CR941	152-0400-00 152-0400-00 152-0400-00 152-0400-00 152-0141-02 152-0400-00	(2017年) (日本) (日本) (日本) (日本) (日本) (日本) (日本) (日本)	SEMICOND DVC,DI:RECT,SI,400V,1A SEMICOND DVC,DI:RECT,SI,400V,1A SEMICOND DVC,DI:RECT,SI,400V,1A SEMICOND DVC,DI:RECT,SI,400V,1A SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:RECT,SI,400V,1A	04713 SR1977KRL 04713 SR1977KRL 04713 SR1977KRL 04713 SR1977KRL 03508 DA2527 (1N4152) 04713 SR1977KRL
A1CR942 A1CR945 A1CR946 A1CR947 A1CR950 A1CR975	152-0400-00 152-0400-00 152-0400-00 152-0400-00 152-0906-00 152-0429-00	## A	SEMICOND DVC,DI:RECT,SI,400V,1A SEMICOND DVC,DI:RECT,SI,400V,1A SEMICOND DVC,DI:RECT,SI,400V,1A SEMICOND DVC,DI:RECT,SI,400V,1A SEMICOND DVC,DI:RECT,SI,400V,3 AMP,50 NS SEMICOND DVC,DI:RECT,SI,5KV,10MA,ED2137	04713 SR1977KRL 04713 SR1977KRL 04713 SR1977KRL 04713 SR1977KRL 80009 152-0906-00 83003 VG5X-1
A1CR981 A1CR982 A1CR983	152-0429-00 152-0400-00 152-0141-02 152-0400-00 152-0400-00 152-0400-00	486 (1970) (17 480) (18 (1970) (1970) (18 (1970) (1970) (1970) (1970) (1980) (1970) (1970) (1970)	SEMICOND DVC, DI:RECT, SI, 5KV, 10MA, ED2137 SEMICOND DVC, DI:RECT, SI, 400V, 1A	83003 VG5X-1 04713 SR1977KRL 03508 DA2527 (1N4152) 04713 SR1977KRL 04713 SR1977KRL 04713 SR1977KRL
A1CR986 A1CR987 A1CR988	152-0400-00 152-0400-00 152-0400-00 152-0400-00 152-0400-00 152-0400-00		SEMICOND DVC,DI:RECT,SI,400V,1A SEMICOND DVC,DI:RECT,SI,400V,1A SEMICOND DVC,DI:RECT,SI,400V,1A SEMICOND DVC,DI:RECT,SI,400V,1A SEMICOND DVC,DI:RECT,SI,400V,1A SEMICOND DVC,DI:RECT,SI,400V,1A	04713 SR1977KRL 04713 SR1977KRL 04713 SR1977KRL 04713 SR1977KRL 04713 SR1977KRL 04713 SR1977KRL
A1DS858	152-0400-00 150-0035-00 150-0035-00 108-1281-00 108-1281-00 108-1416-00	Constitution of the consti	SEMICOND DVC,DI:RECT,SI,400V,1A LAMP,GLOW:90V MAX,O.3MA,AID-T,WIRE LD LAMP,GLOW:90V MAX,O.3MA,AID-T,WIRE LD COIL,RF:FXD,Z.2UH,10% COIL,RF:FXD,Z.2UH,10% COIL,RF:POWER INDUCTOR,300UH-400UH,3A	04713 SR1977KRL TK0213 JH005/3011JA TK0213 JH005/3011JA 54583 SP0305-2R2K 54583 SP0305-2R2K 80009 108-1416-00
A11986 A11988 A11990 A1P910 A1Q102 A1Q103	108-1375-00 108-1375-00 136-0984-00 151-0188-00	 (1) (1) (数字) (2) (2) (2) (2) (2) (3) (4) (3) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4) (5) (4) (4) (4) (4) (6) (4) (4) (4) (4) (7) (4) (4) (4) (8) (4) (4) (4) (4) (9) (4) (4) (4) (4) (9) (4) (4)<	COIL, RF: FXD, 82UH, 1A COIL, RF: FXD, 82UH, 1A COIL, RF: FXD, 82UH, 1A SKT, PL-IN ELEK: CRT, 14 PIN, CABLE ASSY TRANSISTOR: PNP, SI, TO-92 TRANSISTOR: PNP, SI, TO-92	TK00A RL-1218-820K-1A TK00A RL-1218-820K-1A TK00A RL-1218-820K-1A 80009 136-0984-00 80009 151-0188-00 80009 151-0188-00
A1Q104 A1Q105 A1Q114 A1Q115 A1Q152 A1Q153	151-0190-00 151-0190-00 151-0190-00 151-0190-00 151-0188-00 151-0188-00		TRANSISTOR:NPN,SI,TO-92 TRANSISTOR:NPN,SI,TO-92 TRANSISTOR:NPN,SI,TO-92 TRANSISTOR:NPN,SI,TO-92 TRANSISTOR:PNP,SI,TO-92 TRANSISTOR:PNP,SI,TO-92 TRANSISTOR:PNP,SI,TO-92	80009 151-0190-00 80009 151-0190-00 80009 151-0190-00 80009 151-0190-00 80009 151-0188-00 80009 151-0188-00
A1Q164	151-0190-00 151-0190-00 151-0190-00 151-0190-00 151-0190-00 151-0190-00		TRANSISTOR: NPN, SI, TO-92	80009 151-0190-00 80009 151-0190-00 80009 151-0190-00 80009 151-0190-00 80009 151-0190-00 80009 151-0190-00
A10230 A10231 A10232	151-0188-00 151-0188-00 151-0424-00 151-0424-00 151-0711-00 151-0711-00		TRANSISTOR: PNP, SI, TO-92 TRANSISTOR: PNP, SI, TO-92 TRANSISTOR: NPN, SI, TO-92 TRANSISTOR: NPN, SI, TO-92 TRANSISTOR: NPN, SI, TO-92B TRANSISTOR: NPN, SI, TO-92B TRANSISTOR: NPN, SI, TO-92B	80009 151-0188-00 80009 151-0188-00 04713 SPS8246 04713 SPS8246 80009 151-0711-00 80009 151-0711-00
	151-0270-00 151-0124-00 151-0270-00 151-0124-00	11 (809 km) (128 986 1 11 (17 1 km) (18 1 1 18 (14 1 km) (17 1 1 8 (18 1 2 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	TRANSISTOR: PNP,SI,TO-39 TRANSISTOR: MPN,SI,TO-39 TRANSISTOR: PNP,SI,TO-39 TRANSISTOR: NPN,SI,TO-39	04713 ST919 04713 SM8138 04713 ST919 04713 SM8138

Component No		Tektronix Part No.	Serial/Assembly No. Effective Dscont	The Bankame & Description (Napple Control of Section 1)	Mfr. Code	Mfr. Part No.
A1Q370	Marya a	151-1042-00		SEMICOND DVC SE:FET,SI,TO-92	80009	151-1042-00
A10371			100 m	(MATCHED PAIR WITH A1Q370)		
A1Q400		151-0712-00		TRANSISTOR: PNP, SI, TO-92	04713	SPS8223
A1Q401		151-0712-00		TRANSISTOR: PNP, SI, TO-92	04713	SPS8223
A10410		151-0190-00		TRANSISTOR:NPN,SI,TO-92	80009	151-0190-00
A1Q411		151-0190-00	140 Sp. Jan	TRANSISTOR:NPN,SI,TO-92	80009	151-0190-00
A1Q412		151-0190-00	All San Arma	TRANSISTOR: NPN,SI,TO-92	80009	151-0190-00
A1Q415		151-0188-00	1966年 - 1966年	TRANSISTOR: PNP, SI, TO-92	80009	151-0188-00
A1Q450		151-0190-00		TRANSISTOR: NPN, SI, TO-92	80009	151-0190-00
A1Q451		151-0190-00		TRANSISTOR: NPN, SI, TO-92	80009	151-0190-00
A1Q452		151-0190-00		TRANSISTOR: NPN, SI, TO-92	80009	151-0190-00
A1Q453		151-0190-00		TRANSISTOR: NPN, SI, TO-92	80009	151-0190-00
A1Q465		151-0188-00	1 1	TRANSISTOR: PNP, SI, TO-92	80009	151-0188-00 151-0188-00
A1Q487		151-0188-00		TRANSISTOR: PNP, SI, TO-92	80009	*** · · ·
A1Q488		151-0188-00		TRANSISTOR: PNP, SI, TO-92	80009	151-0188-00
A1Q489		151-0188-00	er folk	TRANSISTOR: PNP, SI, TO-92	80009	151-0188-00
A1Q490 A1Q535		151-01 88-0 0 151-0188-00		TRANSISTOR: PNP, SI, TO-92 TRANSISTOR: PNP, SI, TO-92	80009 80009	151-0188-00 151-0188-00
						161_0100_00
		151-0188-00		TRANSISTOR: PNP, SI, TO-92	80009 80009	151-0188-00 151-0188-00
A10770		151-0188-00		TRANSISTOR: PNP, SI, TO-92	80009	
A10775		151-0573-00		TRANSISTOR: PAR, NPN, TO-126	80009	151-0573-00 151-0188-00
A1Q776 A1Q779		151-0188-00 151-0574-00		TRANSISTOR: PNP, SI, TO-92 TRANSISTOR: PNR, PNP, TO-126	80009	151-0100-00
		151-0374-00 151-0190-00		TRANSISTOR: NPN, SI, TO-92	80009	151-0190-00
A10785	ni mini	151-0573-00		TRANSISTOR: PWR, NPN, TO-126	80009	151-0573-00
A10789		151-0574-00		TRANSISTOR: PWR, PNP, TO-126	80009	151-0574-00
A1Q804		151-0188-00		TRANSISTOR: PNP, SI, TO-92	80009	151-0188-00
		151-0190-00		TRANSISTOR: NPN, SI, TO-92	80009	151-0190-00
		151-0190-00	The state of the s	TRANSISTOR: NPN, SI, TO-92	80009	151-0190-00
		151-0188-00		TRANSISTOR: PNP, SI, TO-92	80009	151-0188-00
A1Q835	1	L51-0199 - 00		TRANSISTOR: PNP, SI, TO-92	80009	151-0199-00
A1Q840	1461	L51-0347-02	Notice of	TRANSISTOR NPN, SI, TO-92	56289	CT7916
41Q845		L51-0350-00		TRANSISTOR: PNP, SI, TO-92	04713	SPS6700
A1Q932	5.11	151-0347-02	an was an basin de	TRANSISTOR:NPN,SI,TO-92	56289	CT7916
A1Q933		151-1252-00		TRANSISTOR: PWR, MOS FET, P-CHANNEL, 180V, 1 OHM	80009	151-1252-00
A1Q935	100	151-0190-00	di, eq.	TRANSISTOR NPN, S1, TO-92	80009	151-0190-00
A1 Q93 9		51-0190-00	$\mathfrak{s}^{(n)} = \{1,$	TRANSISTOR: NPN, S1, TO-92	80009	
IT ALC: IT		51-0347-02		TRANSISTOR:NPN,SI,TO-92	56289	CT7916
A1Q942		51-0476-00		TRANSISTOR: NPN, SI, TO-220	80009	151-0476-00
11Q943		51-0190-00		TRANSISTOR: NPN, SI, TO-92	80009	151-0190-00
\1Q945 \1Q946		51-0347-02 51-0476-00		TRANSISTOR:NPN,S1,TO-92 TRANSISTOR:NPN,S1,TO-220	56289 80009	CT7916 151-0476-00
110982		51-0347-02		TRANSISTOR: NPN.SI., TO-92	56289	CT7916
110985		51-0350-00		TRANSISTOR: PNP, SI, TO-92	04713	SPS6700
/10388 /110382		.51-0350-00 .51-0347-02		TRANSISTOR: NPN, SI, TO-92	56289	CT7916
11Q300 \1R100	•	115-0510-00		RES, FXD, FILM: 51 OHM, 5%, 0.25W	19701	5043CX51R00J
		115-0510-00 115-0510-00		RES, FXD, FILM:51 OHM, 5%, 0.25W	19701	5043CX51R00J
V1R102		115-0155-00	ma Cuatrua.	RES,FXD,FILM:1.5M OHM,5%,0.25W	19701	5043CX1M500J
\1R103		15-0155-00		RES, FXD, FILM: 1.5M OHM, 5%, 0.25V	19701	5043CX1M500J
VIR104		21-0094-00		RES.FXD.FILM:93.1 OHM, 1%, 0.125W, TC=TO	91637	CMF55116G93R10F
1R105		21-0094-00		RES.FXD.FILM:93.1 OHM,1%,0.125W,TC=TO	91637	CMF55116G93R10F
\1R106		21-0170-00	w., - 1 - 2 - 2		07716	CEAD576ROF
\1R108		21-0223-00		RES.FXD.FILM: 2.05K OHM, 1%, 0.125W, TC=T0	19701	5033ED2K05F
1R109		21-0223-00		RES, FXD, FILM: 2.05K OHM, 1%, 0.125W, TC=T0	19701	5033ED2K05F
MR114	3	21-0223-00		RES.FXD, FILM: 2.05K OHN, 1%, 0.125W, TC=TO	19701	
1R115	3	21-0223-00	manage Addition	RES, FXD, FILM: 2.05K OHM, 1%, 0.125W, TC=T0	19701	5033ED2K05F
VIR116		15-0101-00		RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
N1R117	3	15-0101-00		RES,FXD,FILM:100.0HM,5%,0.25V	57668	NTR25J-E 100E

Component	: No.	Tektronix Part No.	Serial/Assembly No. Effective Oscont	Name & Description	Mfr. Code	Mfr. Part No.
A1R118 A1R119 A1R120 A1R121 A1R122 A1R124		315-0821-00 315-0821-00 321-0123-00 321-0123-00 321-0089-00 315-0472-00		RES, FXD, FILM:820 OHM, 5%, 0.25W RES, FXD, FILM:820 OHM, 5%, 0.25W RES, FXD, FILM:187 OHM, 1%, 0.125W, TC=TO RES, FXD, FILM:187 OHM, 1%, 0.125W, TC=TO RES, FXD, FILM:82.5 OHM, 1%, 0.125W, TC=TO RES, FXD, FILM:417K OHM, 5%, 0.25W	19701 19701 07716 07716 91637 57668	CEAD187R0F
A1R125 A1R126 A1R127 A1R130 A1R131 A1R132		315-0392-00 315-0162-00 321-0068-00 315-0510-00 315-0510-00 315-0511-00		RES, FXD, FILM: 3.9K OHM, 5%, 0.25W RES, FXD, FILM: 1.6K OHM, 5%, 0.25W RES, FXD, FILM: 49.9 OHM, 0.1%, 0.125W, TC=T0 RES, FXD, FILM: 51 OHM, 5%, 0.25W RES, FXD, FILM: 51 OHM, 5%, 0.25W RES, FXD, FILM: 510 OHM, 5%, 0.25W	57668 19701 91637 19701 19701	CMF55116G49R90F
A1R133 A1R135 A1R136 A1R139 A1R140 A1R142		315-0101-00 315-0101-00 315-0101-00 315-0102-00 311-2364-00 315-0101-00	13	RES, FXD, FILM: 100 OHM, 5%, 0.25W RES, FXD, FILM: 100 OHM, 5%, 0.25W RES, FXD, FILM: 100 OHM, 5%, 0.25W RES, FXD, FILM: 1K OHM, 5%, 0.25W RES, VAR, NONWW: TRMR, 4.7K OHM, 0.5W RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668 57668 57668 57668 57668 57668	
A1R143 A1R144 A1R145 A1R150 A1R151 A1R152		315-0101-00 315-0471-00 311-2364-00 315-0510-00 315-0510-00 321-0155=00	#11 10.43 20.47 4.47 4.48 1.48	RES.FXD.FILM:100 OHM,5%,0.25W RES.FXD.FILM:470 OHM,5%,0.25W RES.VAR.NONWH:TRNR,4.7K OHM,0.5W RES.FXD.FILM:51 OHM,5%,0.25W RES.FXD.FILM:51 OHM,5%,0.25W RES.FXD.FILM:402 OHM,1%,0.125W,TC=T0	19701 19701	NTR25J-E470E TC10-LV10-4K7/A
AIR153 AIR154 AIR155 AIR156 AIR158 AIR159		321-0155-00 321-0094-00 321-0094-00 321-0170-00 321-0223-00 321-0223-00		RES, FXD, F1LM: 402 OHM, 1%, 0.125W, TC=TO RES, FXD, F1LM: 93.1 OHM, 1%, 0.125W, TC=TO RES, FXD, F1LM: 93.1 OHM, 1%, 0.125W, TC=TO RES, FXD, F1LM: 576 OHM, 1%, 0.125W, TC=TO RES, FXD, F1LM: 2.05K OHM, 1%, 0.125W, TC=TO RES, FXD, F1LM: 2.05K OHM, 1%, 0.125W, TC=TO	07716 91637 91637 07716 19701	CMF55116G93R10F CMF55116G93R10F CEAD576R0F 5033ED2K05F
A1R161 A1R162 A1R164 A1R165 A1R166 A1R167		307-0106-00 307-0106-00 321-0223-00 321-0223-00 315-0101-00 315-0101-00	Ville Medical Medical States (1997) Medical States (1997) Medical States (1997)	RES,FXD,CMPSN:4.7 OHM,5%,0.25W RES,FXD,CMPSN:4.7 OHM,5%,0.25W RES,FXD,FILM:2.05K OHM,1%,0.125W,TC=T0 RES,FXD,FILM:2.05K OHM,1%,0.125W,TC=T0 RES,FXD,FILM:100 OHM,5%,0.25W RES,FXD,FILM:100 OHM,5%,0.25W	19701 19701 57668	CB 47G5 CB 47G5 5033ED2K05F 5033ED2K05F NTR25J-E 100E NTR25J-E 100E
A1R158 A1R169 A1R170 A1R171 A1R172 A1R174		315-0821-00 315-0821-00 321-0123-00 321-0123-00 321-0089-00 315-0472-00	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	RES, FXD, FILM:820 OHM, 5%, 0.25W RES, FXD, FILM:820 OHM, 5%, 0.25W RES, FXD, FILM:187 OHM, 1%, 0.125W, TC=TO RES, FXD, FILM:187 OHM, 1%, 0.125W, TC=TO RES, FXD, FILM:82:5 OHM, 1%, 0.125W, TC=TO RES, FXD, FILM:4.7K OHM, 5%, 0.25W		5043CX820R0J 5043CX820R0J CEAD187R0F CEAD187R0F CMF55116G82R50F NTR25J-E04K7
A1R181		315-0392-00 315-0162-00 321-0068-00 315-0510-00 315-0510-00 315-0511-00	(1) (1) (2) (2) (3) (4) (4) (4) (4) (5)	RES.FXD.FILM:3.9K OHM,5%,0.25W RES.FXD.FILM:1.6K OHM,5%,0.25W RES.FXD.FILM:49.9 OHM,0.1%,0.125W,TC=TO RES.FXD.FILM:51 OHM,5%,0.25W RES.FXD.FILM:51 OHM,5%,0.25W RES.FXD.FILM:510 OHM,5%,0.25W	57668 19701 91637 19701 19701	NTR25J-E03K9 5043CX1K600J CMF55116649R90F 5043CX51R00J 5043CX51R00J 5043CX510R0J
A1R185 A1R186 A1R189		315-0101-00 315-0101-00 315-0101-00 315-0392-00 315-0101-00 315-0101-00	A STORY AND AN AND AN AND AN AND AN AND AN AND AND	RES,FXD,FILM:100 OHN,5%,0.25W RES,FXD,FILM:100 OHN,5%,0.25W RES,FXD,FILM:100 OHN,5%,0.25W RES,FXD,FILM:3.9K OHM,5%,0.25W RES,FXD,FILM:100 OHN,5%,0.25W RES,FXD,FILM:100 OHM,5%,0.25W	57668 57668 57668 57668 57668 57668	NTR25J-E 100E NTR25J-E 100E NTR25J-E 100E NTR25J-E03K9 NTR25J-E 100E NTR25J-E 100E
A1R194 A1R195 A1R202 A1R203		315-0471-00 311-2364-00 321-0178-00 321-0178-00		RES,FXD,FILM:470 OHM,5%,0.25W RES,VAR,NONMW:TRMR,4.7K OHM,0.5W RES,FXD,FILM:698 OHM,1%,0.125W,TC=TO RES,FXD,FILM:698 OHM,1%,0.125W,TC=TO	57668 K8788 07716 07716	NTR25J-E470E TC10-LV10-4K7/A CEAD69BR0F CEAD69BR0F

Component No.	Tektronix Part No.	Serial/Assembly No. Effective Oscont	Name & Description	Mfr. Code	Mfr. Part No.
A1R204	321-0089-00		RES, FXD, FILM:82.5 OHM, 1%, 0.125W, TC=T0	91637	CMF55116G82R50F
A1R206	315-0271-00		RES, FXD, FILM: 270 OHM, 5%, 0.25W	57668	NTR25J-E270E
A1R207	315-0271-00		RES. FXD. FILM: 270 OHM, 5%, 0.25W	57668	NTR25J-E270E
A1R212	321-0094-00		RES. FXD. FILM:93.1 OHM, 1%, 0.125W, TC=T0	91637	CMF55116G93R10F
A1R213	321-0094-00		RES, FXD, FILM:93.1 OHM, 1%, 0.125W, TC=T0	91637	CMF55116G93R10F
A1R215	315-0241-00		RES, FXD, FILM: 240 OHM, 5%, 0.25V	19701	5043CX240R0J
AIR216	321-0163-00		RES, FXD, FILM: 487 OHN, 1%, 0.125W, TC=T0	07716	CEAD487R0F
A1R217	321-0163-00		RES, FXD, FTLM: 487 OHM, 1%, 0.125W, TC=T0	07716	CEAD487ROF
A1R218	321-0109-00		RES. FXD. FILM: 133 OHM, 1%, 0.125W, TC=TO	07716 07716	CEAD133R0F CEAD133R0F
A1R219	321-0109-00		RES, FXD, FILM: 133 OHM, 1%, 0.125W, TC=TO	19701	5043CX10RROOJ
A1R220 A1R221	315-0100-00 315-0100-00		RES, FXO, FILM: 10 OHM, 5%, 0.25W RES, FXO, FILM: 10 OHM, 5%, 0.25W	19701	5043CX10RR00J
A1R222	321-0318-00		RES.FXD.FILM:20.0K 0HM,1%,0.125W,TC=T0	19701	5033ED20K00F
A1R223	321-0318-00		RES, FXD, FILM: 20.0K OHM, 1%, 0.125W, TC=T0	19701	5033ED20K00F
AIR225	315-0752-00		RES, FXD, FILM: 7.5K OHM, 5%, 0.25W	57668	NTR25J-E07K5
AIR226	315-0512-00		RES.FXD.FILM:5.1K OHM.5%,0.25W	57668	NTR25J-E05K1
AIR232	321-0238-00		RES. FXD. FILM: 2.94K OHM, 1%, 0.125W, TC=T0	07716	CEAD29400F
A1R233	321-0139-00		RES, FXD, FTLM: 274 OHM, 1%, 0.125W, TC=TO	07716	CEAD274R0F
A1R235	321-0238-00	to entre of each	RES.FXD, FILM: 2.94K OHM, 1%, 0.125W, TC=TO	07716	CEAD29400F
A1R237	315-0120-00		RES, FXD, FILM: 12 OHM, 5%, 0.25W	57668	NTR25J-R12
\1R238	315-0913-00	The same of the first	RES, FXD, FILM: 91K OHM, 5%, 0.25W	19701	5043CX91K00J
A1R239	315-0331-00		RES, FXD, FILM: 330 OHN, 5%, 0.25W	57668	NTR25J-E330E
A1R241	311-2363-00		RES, VAR, NONWY: TRMR, 1K OHM, 0 5W	K8788	TC10-LV10-1K/A
A1R242	323-0310-00		RES, FXD, FILM: 16.5K OHM, 1%, 0.5W, TC=TO	75042	CECTO-1652F
A1R243	323-0310-00	1. A 4.	RES.FXD.FILM:16.5K OHM,1%,0.5W,TC=TO	75042	CECTO-1652F
\1R244	307-0106-00	and the second s	RES, FXD, CMPSN: 4.7 OHM, 5%, 0.25W	01121	CB 47G5
\1R245	315-0222-00		RES, FXD, FILM: 2.2K OHM, 5%, 0.25W	57668	NTR25J-E02K2
\1R246	315-0620-00	754 (1997) 1997 (1997) 1997 (1997) 1997	RES, FXD, FILM: 62 OHM, 5%, 0.25W	19701	5043CX63R00J
\1R247 \1R248	315-0120-00 315-0331-00		RES, FXD, FILM: 12 OHM, 5%, 0.25W RES, FXD, FILM: 330 OHM, 5%, 0.25W	57668 57668	NTR25J-R12 NTR25J-E330E
A1R249	315-0913-00		RES, FXD, FILM: 91K OHM, 5%, 0.25W	19701	5043CX91K00J
11R250	315-0222-00		RES, FXD, FILM: 2.2K OHM, 5%, 0.25W	57668	NTR25J-E02K2
\1R251	307-0105-00		RES, FXD, CMPSN: 4.7 OHM, 5%, 0.25W	01121	CB 47G5
1R252	315-0620-00		RES, FXD, FILM: 62 OHM, 5%, 0.25V	19701 57668	5043CX63R00J NTR25J-E02K7
11R253 11R258	315-0272-00 315-0272-00		RES,FXD,FILM:2.7K OHM,5%,0.25W RES,FXD,FILM:2.7K OHM,5%,0.25W	57668	NTR25J-E02K7
	er Victoria di Sala		nee eve erras of may by a and	57668	NTR25J-E24E0
\1R260 \1R262	315-0240-00		RES, FXD, FILM:24 OHM, 5%, 0.25W RES, FXD, FILM:10K OHM, 5%, 0.25W	19701	5043CX10K00J
	315-0103-00		RES, FXD, F1LM: 430 OHM, 5%, 0.5W	19701	5053CX430R0J
1R263 1R264	301-0431-00 301-0431-00		RES.FXO.FILM:430 OHM,5%,0.5W	19701	5053CX430R0J
1R265	315-0510-00	1.193	RES, FXO, FILM:51 OHM, 5%, 0.25W	19701	5043CX51R00J
1R266	315-0510-00		RES, FXD, FILM:51 OHM, 5%, 0.25V	19701	5043CX51R00J
1R267	308-0286-00		RES, FXD, WW: 8.2K OHM, 5%, 3W	00213	12405-8200-5
1R268	308-0286-00		RES. FXD. WW:8.2K OHM, 5%, 3W	00213	12405-8200-5
1R269	315-0510-00		RES, FXD, FILM:51 OHM, 5%, 0.25W	19701	5043CX51R00J
1R280	321-0148-00	, " H ₂ 1 8	RES, FXD, FILM: 340 OHM, 1%, 0.125W, TC=TO	07716	CEAD340R0F
1R300	315-0273-00		RES, FXD, FILM: 27K OHM, 5%, 0.25W	57668	NTR25J-E27KO
1R301	315-0273-00		RES.FXD.FILM:27K OHM,5%,0.25W	57668	NTR25J-E27K0
1R302	315-0103-00		RES, FXD, FILM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J
11R303	315-0203-00		RES, FXD, FILM: 20K OHM, 5%, 0.25W	57668	NTR25J-E 20K
1R304	315-0103-00		RES, FXD, FILM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J
UR305	315-0103-00	and the second section of the second section of the second section of the second section of the second section	RES, FXD, FILM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J 5043CX10K00J
UR306 UR308	315-0103-00 315-0203-00		RES.FXD,FILM:10K OHM,5%,0.25W RES.FXD,FILM:20K OHM,5%,0.25W	19701 57668	NTR25J-E 20K
	1.84		RES, FXD, FILM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J
1R309	315-0103-00		RES.FXD.CMPSN:4.7 OHM,5%,0.25W	01121	CB 47G5
1R310 1R311	307-0106-00 307-0106-00		RES.FXD.CMPSN:4.7 OHM.5%,0.25W	01121	CB 47G5
NR311 NR312	307-0106-00		RES.FXD.CMPSN:4.7 OHM, 5%, 0.25W	01121	CB 47G5
HUSTE	201-0100-00		ESCOLITION SEEDINGS OF THE SECTION O	****	

Component No.	Tektronix Part No.	Serial/Assembly No. Effective Dscont	Name & Description	Mfr. Code	Mfr. Part No.
A1R316 A1R317 A1R318 A1R319 A1R320 A1R322	321-0098-00 315-0241-00 315-0241-00 315-0102-00 315-0102-00 321-0203-00		RES.FXD, FILM:102 OHM, 1%, 0.125W, TC=TO RES, FXD, FILM:240 OHM, 5%, 0.25W RES, FXD, FILM:240 OHM, 5%, 0.25W RES, FXD, FILM:1K OHM, 5%, 0.25W RES, FXD, FILM:1K OHM, 5%, 0.25W RES, FXD, FILM:1K OHM, 5%, 0.25W RES, FXD, FILM:1.27K OHM, 1%, 0.125W, TC=TO	07716 19701 19701 57668 57668 07716	CEAD102R0F 5043CX240R0J 5043CX240R0J NTR25JE01K0 NTR25JE01K0 CEAD12700F
A1R323 A1R325 A1R326 A1R329 A1R330 A1R331	321-0203-00 321-0170-00 321-0170-00 321-0314-00 321-0317-00 315-0241-00		RES.FXD.FILM:1.27K OHM,1%,0.125W,TC=TO RES.FXD.FILM:576 OHM,1%,0.125W,TC=TO RES.FXD.FILM:576 OHM,1%,0.125W,TC=TO RES.FXD.FILM:18.2K OHM,1%,0.125W,TC=TO RES.FXD.FILM:19.6K OHM,1%,0.125W,TC=TO RES.FXD.FILM:240 OHM,5%,0.25W	07716 07716 07716 19701 07716 19701	CEAD12700F CEAD576R0F CEAD576R0F 5043ED18K20F CEAD19601F 5043CX240R0J
A1R332 A1R333 A1R334 A1R335 A1R336 A1R337	315-0241-00 315-0102-00 315-0102-00 321-0098-00 321-0194-00 321-0194-00	# 14 - 14 Z 10 Z # N. C.N. 15 # 1 N. A. # # 2 12 2 1 N. W. 15 12 2 2 13	RES.FXD.FILM:240 OHM,5%,0.25W RES.FXD.FILM:1K OHM,5%,0.25W RES.FXD.FILM:1K OHM,5%,0.25W RES.FXD.FILM:102 OHM,1%,0.125W,TC=TO RES.FXD.FILM:1.02K OHM,1%,0.125W,TC=TO RES.FXD.FILM:1.02K OHM,1%,0.125W,TC=TO	19701 57668 57668 07716 07716	5043CX240R0J NTR25JE01K0 NTR25JE01K0 CEAD102R0F CEAD10200F CEAD10200F
A1R338 A1R339 A1R340 A1R343 A1R344 A1R350	311-2365-00 321-0170-00 321-0170-00 321-0314-00 321-0317-00 315-0470-00		RES, VAR, NONNW: TRMR, 470 OHM, 0.75W RES, FXD, FILM: 576 OHM, 1%, 0.125W, TC=T0 RES, FXD, FILM: 576 OHM, 1%, 0.125W, TC=T0 RES, FXD, FILM: 18.2K OHM, 1%, 0.125W, TC=T0 RES, FXD, FILM: 19.6K OHM, 1%, 0.125W, TC=T0 RES, FXD, FILM: 47 OHM, 5%, 0.25W	K8788 07716 07716 19701 07716 57668	TC10-LV10-470K/A CEAD576R0F CEAD576R0F 5043ED18K20F CEAD19601F NTR25J-E47E0
A1R351 A1R352 A1R353 A1R354 A1R356 A1R357	315-0470-00 321-0274-00 321-0274-00 315-0272-00 315-0622-00 321-0149-00	20 年7 年 - 1 日本 12 日本 1	RES, FXD, FILM: 47 OHM, 5%, 0.25W RES, FXD, FILM: 6.98K OHM, 1%, 0.125W, TC=TO RES, FXD, FILM: 6.98K OHM, 1%, 0.125W, TC=TO RES, FXD, FILM: 2.7K OHM, 5%, 0.25W RES, FXD, FILM: 6.2K OHM, 5%, 0.25W RES, FXD, FILM: 348 OHM, 1%, 0.125W, TC=TO	57668 19701 19701 57668 19701 07716	NTR25J-E47E0 5043ED6K980F 5043ED6K980F NTR25J-E02K7 5043CX6K200J CEAD348R0F
A1R358 A1R359 A1R360 A1R361 A1R362 A1R363	315-0101-00 321-0148-00 321-0156-00 315-0202-00 315-0112-00 315-0392-00		RES, FXD, FILM: 100 OHM, 5%, 0.25W RES, FXD, FILM: 340 OHM, 1%, 0.125W, TC=TO RES, FXD, FILM: 412 OHM, 1%, 0.125W, TC=TO RES, FXD, FILM: 2K OHM, 5%, 0.25W RES, FXD, FILM: 1.1K OHM, 5%, 0.25W RES, FXD, FILM: 3.9K OHM, 5%, 0.25W	57668 07716 07716 57668 19701 57668	NTR25J-E 100E CEAD340R0F CEAD412R0F NTR25J-E 2K 5043CX1K100J NTR25J-E03K9
A1R364 A1R366 A1R367 A1R368 A1R369 A1R370	315-0104-00 315-0242-00 315-0392-00 315-0152-00 315-0432-00 315-0470-00	84 - 41 - 38 14 - 4 - 2 - 14 14 - 4 - 4 - 4	RES, FXD, FILM: 100K 0HM, 5%, 0.25W RES, FXD, FILM: 2.4K 0HM, 5%, 0.25W RES, FXD, FILM: 3.9K 0HM, 5%, 0.25W RES, FXD, FILM: 1.5K 0HM, 5%, 0.25W RES, FXD, FILM: 4.3K 0HM, 5%, 0.25W RES, FXD, FILM: 47 0HM, 5%, 0.25W	57668 57668 57668 57668 57668 57668	NTR25J-E100K NTR25J-E02K4 NTR25J-E03K9 NTR25J-E01K5 NTR25J-E04K3 NTR25J-E47E0
A1R371 A1R372 A1R373 A1R374 A1R380 A1R381	315-0121-00 315-0101-00 315-0120-00 315-0101-00 315-0202-00 315-0101-00		RES, FXD, FILM: 120 OHM, 5%, 0.25W RES, FXD, FILM: 100 OHM, 5%, 0.25W RES, FXD, FILM: 12 OHM, 5%, 0.25W RES, FXD, FILM: 100 OHM, 5%, 0.25W RES, FXD, FILM: 2K OHM, 5%, 0.25W RES, FXD, FILM: 100 OHM, 5%, 0.25W	19701 57668 57668 57668 57668 57668	5043CX120R0J NTR25J-E 100E NTR25J-R12 NTR25J-E 100E NTR25J-E 2K NTR25J-E 100E
A1R389 A1R394 A1R395 A1R396 A1R400 A1R401	315-0100-00 315-0103-00 311-2365-00 315-0751-00 321-0089-00 321-0089-00		RES, FXD, FILM: 10 OHM, 5%, 0.25W RES, FXD, FILM: 10K, OHM, 5%, 0.25W RES, VAR, NONAW: TRNR, 470 OHM, 0.75W RES, FXD, FILM: 750 OHM, 5%, 0.25W RES, FXD, FILM: 82:5 OHM, 1%, 0.125W, TC=TO RES, FXD, FILM: 82:5 OHM, 1%, 0.125W, TC=TO	19701 19701 K8788 57668 91637 91637	5043CX10RR00J 5043CX10K00J TC10-LV10-470K/A NTR25J-E750E CMF55116682R50F CMF55116682R50F
A1R402 A1R403 A1R404 A1R405	315-0102-00 315-0470-00 315-0204-00 315-0103-00		RES, FXD, FILM: 1K. OHM, 5%, 0.25W RES, FXD, FILM: 47 OHM, 5%, 0.25W RES, FXD, FILM: 200K OHM, 5%, 0.25W RES, FXD, FILM: 10K OHM, 5%, 0.25W	57668 57668 19701 19701	NTR25JE01K0 NTR25J-E47E0 5043CX200K0J 5043CX10K00J

Compon	ent No.	Tektronix Part No.	Serial/Assembly No. Effective Discont	Name & Description	Santa Sa	Mfr. Code	Mfr. Part No.	
A1R406		315-0202-00		RES. FXD. FILM: 2K OHM, 5%, 0.25W		57668	NTR25J-E 2K	
A1R407		315-0102-00	1	RES, FXD, FILM: 1K OHM, 5%, 0.25W		57668	NTR25JE01K0	
A1R408		315-0202-00	48.5	RES. FXD. FILM: 2K OHM, 5%, 0.25W		57668		
A1R409		315-0302-00		RES.FXD.FILM:3K OHM,5%,0.25W		57668	NTR25J-E03KO	
A1R410		315-0392-00		RES. FXD. FILM: 3.9K OHM. 5%, 0.2		57668		
AIR411		315-0432-00		RES. FXD. FILM: 4.3K OHM. 5%, 0.2		57668		
UTIVATT		010 0405 00		TEMPTORY SERVER OF THE COOP OF THE	JN.	07 000	THE CO LUTTE	
A1R412		315-0103-00		RES. FXD. FILM: 10K OHM, 5%, 0.25	u	19701	5043CX10K00J	
A1R413		315-0751-00	46 & 100 \$40	RES, FXD, FILM: 750 OHM, 5%, 0.25		57668	NTR25J-E750E	
A1R414		315-0752-00		RES, FXD, FILM: 7.5K OHM, 5%, 0.2		57668	NTR25J-E07K5	
A1R415		315-0120-00		RES. FXD. FILM: 12 OHM. 5%. 0. 25W		57668		
A1R416		315-0823-00		RES, FXD, FILM: 82K OHM, 5%, 0. 25		57658	NTR25J-E82K	
A1R417		315-0562-00	William I	RES. FXD. FILM: 5.6K OHM. 5%, 0.2		57668		
UTIGATA		010 0005 00	* . *	NEGITABLE TERROLON OF FILMS, D.E.	J#	ar oqu	HINESS ESSINO	
A1R418		315-0204-00		RES. FXD. FILM: 200K OHM. 5%, 0.25	5₩	19701	5043CX200K0J	
A1R419		315-0470-00		RES. FXD. FILM: 47 OHM, 5%, 0.25W		57668		
A1R426		315-0751-00	in the second	RES. FXD. FILM: 750 OHM. 5%, 0.25		57668	NTR25J-E750E	
A1R427		315-0362-00	from a construction of the			19701	5043CX3K600J	
A1R428		315-0752-00		RES.FXD.FILM:7.5K OHM.5%.0.25		57668		
A1R429		315-0204-00	en e	RES. FXD. FILM: 200K OHM. 5%. 0.25		19701		
MINACO		313-020-100		RES, FAD, FILMS COOK OFFI, 5/6, U.E.	л	10701	CONTRACTOR CONTRACT	
A1R430		315-0823-00	and the second second	RES.FXD.FILM:82K OHM,5%,0.25V	J	57668	NTR25J-E82K	
A1R430	ray masay Tanggan Sanggan Sangga Tanggan Sanggan Sangga	307-0106-00		RES.FXD, CMPSN: 4.7 OHM, 5%, 0.25		01121		
A1R432	TOTAL CONTRACTOR	315-0204-00		RES.FXD.FILM:200K OHM.5%.0.25		19701		
A1R433		315-0223-00				19701	5043CX22K00J92U	
A1R435		315-0223-00		RES, FXD, FILM: 22K OHM, 5%, 0.25V RES, FXD, FILM: 12 OHM, 5%, 0.25V	•		NTR25J-R12	
	Control of Control		- 第123 日本の日本の日本の日本の日本の日本の日本の日本の日本の日本の日本の日本の日本の日	RESTAU, FILMILC UMM, DA, U. COM	OF L TOWTO		CEAD29400F	
A1R441	1 1 10 10 10	321-0238-00	e Total Control of the Control of th	RES, FXD, FILM: 2.94K OHM, 1%, 0.1	COW, IC=IU	0//10	LEAUZ94UUF	
410440	and the second	291 0200:00		RES.FXD.FILM:1.43K OHM.1%.0.1	OCI TOTO	19701	5033ED1K43F	
A1R442		321-0208-00	*** 1.1 (1.1 (1.1 (1.1 (1.1 (1.1 (1.1 (1					been of
A1R443	Table 1	321-0238-00		RES, FXD, FILM: 2.94K OHM, 1%, 0.1		07716	- Annah	
A1R444		321-0208-00		RES.FXD.FILM:1.43K OHM,1%,0.1		19701 32997	5033ED1K43F 3352T-1-205	100
A1R445		311-1550-00		RES, VAR, NONWAY: TRMR, 2M OHM, 0.5				
A1R446		311-1550-00		RES, VAR, NONW: TRMR, 2M OHM, 0.5	OW .	32997	3352T-1-205	* * *
A1R450		315-0202-00		RES,FXO,FILM:2K OHM,5%,0.25W		57668	NTR25J-E 2K	
AIDAEI		00 toto 31c:		DEC TVD ETT WITCO OUN EV A SEL	,	£7660 ·	NTR25J-E 100E	
A1R451		315-0101-00		RES, FXD, F1LM:100 OHM, 5%, 0.25W		57668		
A1R480		315-0103-00		RES, FXD, FILM: 10K OHM, 5%, 0.25W	, ,	19701	5043CX10K00J	100
A1R481		311-2361-00		RES, VAR, NONWY: TRMR, 10K OHM, O.	₩ •	K8788	TC10-LV10-10K/A	4.55
A1R482		315-0271-00		RES, FXD, F1LM: 270 OHM, 5%, 0.25W			NTR25J-E270E	
A1R483		315-0431-00		RES, FXD, FILM: 430 OHM, 5%, 0.25W		19701	5043CX430R0J	4 4 7 1 L T
A1R485		321-0089-00		RES, FXD, FILM: 82.5 OHM, 1%, 0.12	5W, IC=10	31037	CMF55116682R50F	
410400		*** AAAA AA		DEC EVO ETIMO OV OIM EN O OF		FICCO	NEGOC 1 COOKS	
A1R486		315-0222-00		RES, FXD, FILM: 2.2K OHM, 5%, 0.25			NTR25J-E02K2	
A1R487		315-0103-00		RES, FXD, FILM: 10K, 0HM, 5%, 0.25W			5043CX10K00J	
A1R488		315-0391-00		RES, FXD, FILM: 390 OHM, 5%, 0.25W			NTR25J-E390E	
A1R489		311-2352-00	nun Maria ann a diffe	RES, VAR, NONWY: TRMR, 220 OHM, O.	5₩		TC10LV2.5220R	14" is .
A1R490		315-0392-00		RES, FXD, FILM: 3.9K OHM, 5%, 0.25			NTR25J-E03K9	- 11
A1R491		315-0391-00		RES, FXD, FILM: 390 OHM, 5%, 0.25W		3/000	NTR25J-E390E	." ",
410400		215 0100 00		OFF THE PROPERTY OF A OFF		czeco	HTDOE ICAIPA	
A1R492		315-0102-00		RES, FXD, FILM: 1K OHM, 5%, 0.25W		57668	NTR25JE01K0	
A1R493		315-0103-00	užitu nici i nici nici pisali. Pratini nici nici nici nici nici nici nici	RES, FXD, FILM: 10K OHM, 5%, 0.25W			5043CX10K00J	
A1R495		315-0752-00		RES, FXD, FILM: 7.5K OHM, 5%, 0.25			NTR25J-E07K5	
A1R496		315-0752-00		RES, FXD, FILM: 7.5K OHM, 5%, 0.25			NTR25J-E07K5	1. P. De
A1R497		315-0471-00		RES, FXD, FILM: 470 OHM, 5%, 0.25W		57668	NTR25J-E470E	
A1R498		315-0431-00	Marine Light No.	RES, FXD, FILM: 430 OHM, 5%, 0.25W		19701	5043CX430R0J	
410501		*** ***		nee eun etial no 12 Alex A 10 A	100 L TO TO	10701	ENDO ENGOVA AC	
A1R501		321-0322-00		RES, FXD, FILM: 22.1K OHM, 0.1%, 0		19701	5033ED22K10F	
A1R502		321-0318-00	B. 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1	RES, FXD, FILM: 20.0K OHM, 1%, 0.1	CDW, IC≖IU	19701	5033ED20K00F	Marin San
A1R503		321-0318-00		RES, FXD, FILM: 20.0K OHM, 1%, 0.1	Z⊃W,IC™IU	19701	5033ED20K00F	
A1R504		315-0202-00		RES, FXD, FILM: 2K OHM, 5%, 0.25W		57668	NTR25J-E 2K	
A1R505		315-0334-00		RES, FXD, FILM: 330K OHM, 5%, 0.25	d .	57668	NTR25J-E 330K	
A1R506		315-0202-00		RES, FXD, FILM: 2K OHM, 5%, 0.25W		57668	NTR25J-E 2K	s, s, f
						F7888	APPROP SPANNA	
A1R508	to a	315-0102-00	i sa isa isa 100 km	RES, FXD, FILM: 1K OHM, 5%, 0.25W				perdition of
AIR512		315-0102-00		RES, FXD, FILM: 1K OHM, 5%, 0.25W				
A1R515		315-0101-00		RES, FXD, F1LM: 100 OHM, 5%, 0.25W			NTR25J-E 100E	W. N. C.
A1R517	hill, avV	315-0682-00	en a Mari	RES.FXD,FTLM:6.8K OHM,5%,0.25	*	57668	NTR25J-E06K8	e, tregits

Component.	No.	Tektronix Part No.	Serial/Assembly No. Effective Dscont	Name & Description		fr. ode	Mfr. Part No.	يناسن المسترين
A1R518		315-0912-00		RES.FXD.FILM:9.1K OHM,5%,0.2	5W 57	7668	NTR25J-E09K1	
A1R520		315-0102-00		RES.FXD.FILM:1K OHM,5%,0.25W		7668	NTR25JE01KO	
A1R521		315-0182-00	are the second	RES.FXD.FILM:1.8K 0HM,5%,0.2	5W 57	7668	NTR25J-E1KB	
A1R522		315-0102-00		RES.FXD.FILM:1K OHM, 5%, 0.25W			NTR25JE01KO	
A1R523		315-0102-00		RES, FXD, FILM: 1K OHM, 5%, 0.25W			NTR25JE01KO	
							NTR25JE01K0	
A1R524		315-0102-00		RES, FXD, FILM: 1K OHM, 5%, 0.25W	: 01	1900	MIKEOUEUIKU	
A1R525		315-0222-00	997 - 1 - 10 - 1	RES, FXD, FILM: 2.2K OHM, 5%, 0.25			NTR25J-E02K2	
A1R526		315-0222-00	er en de Maria de	RES, FXD, FILM: 2.2K OHM, 5%, 0.25			NTR25J-E02K2	
A1R530		315-0101-00	and Carlotte	RES. FXD. FILM: 100 OHM, 5%, 0.25	<i>l</i> 57	7668	NTR25J-E 100E	12.4
A1R531		315-0102-00	17 × W.)	RES. FXD. FILM: 1K OHM. 5%. 0.25W	57	668	NTR25JE01K0	
A1R532		315-0222-00		RES.FXD.FILM: 2.2K OHM, 5%, 0.25	W 57	668	NTR25J-E02K2	
A1R533	- AT 12 13	315-0511-00	196 to 87 (4)			701	5043CX510R0J	i
A25524		215 0511 00		. nee minimissis out m/ a on	. 10	701	5043CX510R0J	
A1R534	the second	315-0511-00	The distribution of the second	RES, FXD, FILM: 510 OHM, 5%, 0.25V			NTR25J-E180E	
A1R535		315-0181-00		RES, FXD, FILM: 180 OHM, 5%, 0.25				
A1R536		315-0181-00		RES, FXD, FILM: 180 OHM, 5%, 0.25			NTR25J-E180E	
A1R537		315-0221-00	And the second	RES, FXD, FILM: 220 OHM, 5%, 0.25			NTR25J-E220E	
A1R538	and the second	315-0512-00		RES, FXD, FILM: 5.1K OHM, 5%, 0.25			NTR25.)-E05K1	
A1R539	Description (SE)	315-0512-00		RES, FXD, FILM: 5.1K OHM, 5%, 0.25	W 57	668	NTR25J-E05K1	
1R540	, <u>1</u>	315-0511-00		RES.FXD.FILM:510 OHM,5%,0.25%	1 10	701	5043CX510R0J	
A1R541		315-0511-00		RES, FXD, FILM: 510 DHM, 5%, 0.25%				1,141
			・	RESERVA CTIMESTON OF THE COLOR	13			edika.
1R542		315-0103-00		RES, FXD, FILM: 10K OHM, 5%, 0.25k	. 19			NO 601
1R543		315-0103-00		RES, FXD, FILM: 10K OHM, 5%, 0.25h			5043CX10K00J	
1R544		315-0431-00		RES, FXD, F1LM: 430 OHM, 5%, 0.25%			5043CX430R0J	
1R545		315-0102-00	u difficialisti II storact	RES, FXD, FILM:1K OHM, 5%, 0.25W	57	668	NTR25JE01K0	
\1R547	e par 1	315-0102-00	A Charles And	RES, FXD, FILM:1K OHM, 5%, 0.25W	:57	668	NTR25JE01K0	
1R548		315-0102-00					NTR25JE01K0	
1R549		315-0621-00	in the mount of the way	RES, FXD, FILM: 620 OHM, 5%, 0.25W			NTR25J-E620E	
1R550	100	315-0512-00	and the second of the second o		71.		NTR25J-E05K1	
	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			RES. FXD, FILM: 5.1K OHM, 5%, 0.25				
1R551		315-0182-00		RES, FXD, FILM: 1.8K OHM, 5%, 0.25			NTR25J-E1K8	
1R552		315-0222-00		RES, FXD, FILM: 2.2K OHM, 5%, 0.25	W 5/1	568	NTR25J-E02K2	
\1R 5 53		315-0511-00		RES, FXD, FILM: 510 OHM, 5%, 0.25W	19	701	5043CX510R0J	
1R554	error e la	315-0222-00	□ 操力。有一贯 考	RES. FXD. F1LM: 2.2K OHM, 5%, 0.25	V 57	668	NTR25J-E02K2	
1R555		315-0391-00	والمعاول والمالية	RES. FXD. FILM: 390 OHM, 5%, 0.25W		668	NTR25J-E390E	
1R556	124 124 4	315-0222-00	and the second of the second	RES, FXD, F1LM: 2.2K OHM, 5%, 0.25			VTR25J-E02K2	
1R557		315-0102-00	141g 11 - 12 - 13 - 13 - 13 - 13 - 13 - 13 -	RES, FXD, FILM: 1K OHM, 5%, 0.25W			VTR25JE01KO	
	s edel di	315-0271-00			711			4414
1R561		315-0512-00	TRIL GURL STE	RES, FXD, FILM: 5.1K OHM, 5%, 0.25 RES, FXD, FILM: 3.9K OHM, 5%, 0.25	M 570		(TR25.)-E05K1 (TR25.)-E03K9	August Huggs
1R562		315-0392-00	140 a 1 240 AM	KES, FAU, FILM: 3.9K UPM, 5%, U.25	V 3/1			
1R563		315-0222-00	entrales habitales	RES, FXD, FILM: 2.2K OHM, 5%, 0.25			(TR25.)-E02K2	Hope"
1R564	TALL TRA	315-0511-00		RES, FXD, FILM: 510 OHM, 5%, 0.25W	197		5043CX510R0J	
	3 THE	315-0103-00		RES, FXD, F1LM: 10K OHM, 5%, 0.25W	197			
1R566		315-0752-00		RES, FXD, FILM: 7.5K OHM, 5%, 0.25	J 570	668 I	TR25J-E07K5	
1R567		315-0103-00		RES. FXD. FILM: 10K DHM. 5%, 0.25W	197	701	5043CX10K00J	5.004
1R570		315-0392-00		RES. FXD. FILM: 3.9K OHM, 5%, 0.25	√ 57€	668 I	ITR25.J-E03K9	
		315-0392-00	and the second s	RES, FXD, FILM: 3.9K OHM, 5%, 0.25			ITR25J-E03K9	
1R572		315-0322-00	en la companya da series de la companya da series de la companya da series de la companya de la companya de la La companya da series de la companya da series de la companya de la companya de la companya de la companya de	RES. FXD. FILM: 2. 2K OHM, 5%, 0.25				. Hukipi
								er etalen Geral
1R573		315-0222-00		RES, FXD, FILM: 2.2K OHM, 5%, 0.25				
1R574		315-0222-00	and the second s	RES, FXD, FILM: 2.2K OHM, 5%, 0.25	V 576	1 000	ITR25J-E02K2	
1R576		315-0222-00		RES, FXD, F1LM: 2.2K OHM, 5%, 0.25			TR25J-E02K2	
1R579	and today	315-0221-00		RES, FXD, F1LM: 220 OHM, 5%, 0.25W	576	368 M	TR25J-E220E	7.7
		315-0103-00	BER CARDOLLER LANG	RES. FXD. FILM: 10K OHM, 5%, 0.25W	197	701 5	i043CX10K00J	1
1R582		321-0361-00		RES, FXD, FILM: 56.2K OHM, 1%, 0.12			EAD56201F	
1R583		315-0204-00		RES. FXD. FILM: 200K OHM. 5%. 0. 25			043CX200K0J	'
1R584		315-0474-00		RES, FXD, FILM: 470K OHN, 5%, 0.25			043CX470K0J92U	
Inchr		01# 010* 00	w	Simo, mais - mai sau simore mai a a mar minor	j ene	:co •	TD9E 1E100V	
1R585		315-0104-00		RES.FXD.FILM:100K OHN,5%,0.25k			TR25J-E100K TR25J-E 330K	Miller Mejalija
10000					- 3/6	acaent B	MUCL TLUDUM	*** #* A.
1R586		315-0334-00						
LR586 LR587 1R588		315-0104-00 315-0182-00		RES, FXD, FILM: 100K OHM, 5%, 0.25k RES, FXD, FILM: 1.8K OHM, 5%, 0.25k	<i>l</i> 576	i68 h	TR25J-E100K	

Compone	ent No.	Tektronix Part No.	Serial/Assembly No. Effective Discont	Name & Description pears and second	Mfr. Code	Mfr. Part No.
A1R589	i jar	321-0318-00		RES, FXD, FILM: 20.0K OHM, 1%, 0.125W, TC=TO	19701	5033ED20K00F
A1R590		321-0205-00	240 g 1 to	RES, FXD, FILM: 1.33K OHM, 1%, 0.125W, TC=TO	19701	5033ED1K330F
A1R775		315-0181-00		RES, FXD, FILM: 180 OHM, 5%, 0.25W	57668	NTR25J-E180E
A1R776		315-0102-00		RES, FXD, FILM: 1K OHM, 5%, 0.25V	57668	NTR25JE01K0
A1R778	MART JANE	321-0396-00	ag - 51 34.	RES, FXD, FILM: 130K OHM, 1%, 0.125W, TC=T0	07716	CEAD13002F
A1R779		321-0306-00	Vien un ni peri	RES, FXD, FILM: 15.0K OHM, 1%, 0.125W, TC=TO	19701	5033ED15J00F
A1R780		315-0510-00		RES, FXD, FILM: 51 OHM, 5X, 0.25W	19701	5043CX51R00J
A1R781		321-0146-00	HT 1 I F 1 H Maria I F 1 H	RES, FXD, FILM: 324 OHM, 1%, 0.125W, TC=T0	07716	CEAD324ROF
A1R783		315-0623-00		RES, FXO, FILM: 62K OHM, 5%, 0.25W	19701	5043CX62K00J
A1R784 A1R785		323-0314-00		RES, FXD, FILM: 18:2K OHM, 1%, 0.5W, TC=TO	75042 75042	CECTO-1822F CECTO-1822F
A1R786		323-0314-00 321-0185-00		RES.FXD,FILM:18:2K OHM,1%,0.5W,TC=T0 RES.FXD,FILM:825 OHM,1%,0.125W,TC=T0	07716	CEAD825ROF
A1R787	nagerst.	315-0101-00		RES, FXD, FILM: 100 OHM, 5%, 0.25V	57668	NTR25J-E 100E
A1R788	b a will	321-0249-00		RES, FXD, FILM: 3.83K OHM, 1%, 0.125W, TC=TO	19701	5033ED3K83F
A1R789		315-0510-00		RES, FXD, FILM: 51 OHN, 5%, 0. 25W	19701	5043CX51R00J
A1R790	Harara Araba	315-0510-00		RES, FXO, FILM: 51 OHN, 5%, 0.25W	19701	5043CX51R00J
A1R791		321-0139-00	in the second section of the section of the second section of the	RES.FXD, F1LM:274 OHM,1%,0.125W,TC=T0	07716	CEAD274R0F
A1R792		321-0135-00		RES, FXD, FILM: 249 OHM, 1%, 0.125W, TC=T0	07716	CEAD249R0F
A1R793		315-0623-00		RES, FXD, FILM: 62K OHN, 5%, 0.25W	19701	5043CX62K00J
A1R794	- al (31)	323-0314-00	tera dijali da	RES, FXD, FILM: 18.2K OHM, 1%, 0.5W, TC=T0	75042	
A1R795	20, 13, 13	323-0314-00	Sales and the	RES, FXD, FILM: 18.2K OHM, 1%, 0.5W, TC=TO	75042	CECT0-1822F
A1R796		321-0207-00		RES, FXD, FILM: 1.40K OHM, 1%, 0.125W, TC=TO	19701	5033ED1K400F
A1R797	Lat.			RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
A1R798	taleas fil	321-0249-00		RES, FXD, FILM: 3.83K OHM, 1%, 0.125W, TC=TO	19701	5033ED3K83F
A1R799	ABADEL EDI. Abadel La		and control to	RES, FXD, FILM: 51 OHM, 5%, 0.25W	19701	5043CX51R00J
A1R804	n en salar da Diskaran	315-0102-00	and the color of t	RES, FXD, FILM: 1K OHM, 5%, 0.25W	57668	NTR25JE01K0 NTR25J-F05K6
A1R805		315-0562-00		RES, FXD, FILM: 5.6K OHM, 5%, 0.25V	57668	
A1R818				RES, FXD, FILM: 2.7K OHN, 5%, 0.25W	57568	
A1R819 A1R820		315-0103-00 315-0362-00		RES, FXD, FILM: 10K OHM, 5%, 0.25W RES, FXD, FILM: 3.6K OHM, 5%, 0.25W	19701 19701	5043CX10K00J 5043CX3K500J
A1R822		321-0361-00		RES, FXD, FILM: 56.2K OHM, 1%, 0.125W, TC=T0	07716	CEAD56201F
A1R823	ing a special	315-0472-00	unity similar		57668	NTR25J-E04K7
A1R825	walley y H	315-0101-00		RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
A1R828		315-0203-00		RES, FXD, FILM: 20K OHM, 5%, 0.25W	57668	NTR25J-E 20K
A1R830		321-0205-00	多德国 计多数数	RES, FXD, FILM: 1.33K OFM, 1%, 0.125W, TC=TO	19701	5033ED1K330F
A1R832		321-0223-00	ta Romanii de	RES.FXD, FILM: 2.05K OHM, 1%, 0.125W, TC=TO	19701	5033ED2K05F
A1R834		315-0101-00	Patrick (1.1.1)	RES. FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
A1R835				RES, FXD, FILM: 2.61K OHM, 1%, 0.125W, TC=TO	07716	CEAD26100F
A1R836		315-0102-00		RES, FXD, FILM: 1K OHM, 5%, 0.25W	57668	
A1R840		315-0511-00		RES, FXD, FILM: 510 OHM, 5%, 0.25V	19701	
A1R841 A1R842	APPENDING APPENDING	321-0344-00 315-0241-00	Silizza de la Silizza de l Silizza de la Silizza de l	RES, FXD, FILM:37.4K OHM, 1%, 0.125W, TC=TO RES, FXD, FILM:240 OHM, 5%, 0.25W	19701 19701	5033ED 37K40F 5043CX240R0J
A1R843		321-0344-00		RES.FXD.F1LM:37.4K OHM,1%,0.125W,TC=T0	19701	5033ED 37K40F
A1R844	1,50	315-0104-00		RES, FXD, FILM: 100K OHM, 5%, 0.25W	57668	NTR25J-E100K
A1R845	161% F F	315-0472-00		RES, FXD, FILM: 4.7K OHM, 5%, 0.25W	57668	NTR25J-E04K7
A1R849		315-0102-00		RES, FXD, FILM:1K OHM, 5%, 0.25W	57668	NTR25JE01KO
A1R850		315-0102-00		RES, FXD, FILM:1K OHM, 5%, 0.25W	57668	NTR25JE01KO
A1R851		311-2367-00		RES, VAR, NONWY: TRMR, 22K OHM, 0.5W	K8788	TC10-LV10-22K/A
A1R852		315-0103-00		RES, FXD, FILM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J
A1R853	250	315-0204-00		RES, FXD, FILM: 200K OHM, 5%, 0.25V	19701	5043CX200KQJ
A1R854		315-0472-00		RES, FXD, FILM: 4.7K OHM, 5%, 0.25W	57668	NTR25J-E04K7
A1R855		315-0202-00		RES, FXD, FTLM: 2K OHM, 5X, 0.25W	57668	NTR25J-E 2K
A1R858	Aud III.	315-0511-00		RES, FXD, FILM:510 OHM, 5%, 0.25W	19701	5043CX510R0J
A1R860	tight to the	315-0625-00		RES,FXD,FILM:6.2M OHM,5%,0.25W	01121	CB6255
A1R870		311-2358-00	28 28	RES, VAR, NONW:TRMR, 100K OHM, 0.5W	K8788	TC10-LV10-100K/A
A1R871		311-2358-00		RES, VAR, NONWY: TRMR, 100K OHM, 0.5W	K8788	TC10-LV10-100K/A
A1R874		010 0010 00		RES, FXD, FILM: 51K OHM, 5X, 0.25W	57668	NTR25J-E51K0 NTR25J-E51K0
A1R875		315-0513-00		RES, FXD, FILM: 51K OHM, 5%, 0.25W	57668	NTR25J-E51KO

C		Tektronix	Serial/Assembly No.	to the second of	Mfr.	
Component	no.	Part No.	Effective Dscont	Name & Description	Code	Mfr. Part No.
A1R888		301-0514-00		RES, FXD, FILM: 510K OHM, 5%, 0.5W	19701	5053CX510K0J
A1R889		301-0514-00		RES.FXD,FILM:510K OHM,5%,0.5W	19701	5053CX510K0J
A1R890		301-0514-00		RES,FXD,FILM:510K OHM,5%,0.5W	19701	
A1R891		301-0514-00		RES, FXD, FILM: 510K OHM, 5%, 0.5W	19701	5053CX510K0J
A1R892	a givila a	301-0514-00		RES, FXD, FILM: 510K OHM, 5%, 0.5W	19701	
A1R894		315-0753-00		RES, FXD, FILM: 75K OHM, 5%, 0.25W	57668	NTR25J-E75K0
A1R899		315-0102-00		RES, FXD, FILM: 1K OHM, 5%, 0.25W	57668	NTR25JE01K0
A1R900		315-0105-00		RES, FXD, FILM: 1M OHM, 5%, 0.25W	19701	5043CX1M000J
A1R901		315-0103-00	그 사람이 가장 하는 것이 되었다.	RES, FXD, FILM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J
A1R910		308-0499-00		RES, FXD, WW: 0.5 OHM, 10%, 2.5W, AXIAL	14193	SA31 R500K
A1R911		315-0102-00		RES, FXD, FILM: 1K OHM, 5%, 0.25W	57668	NTR25JE01K0
A1R912		315-0102-00		RES, FXD, FILM: 1K OHM, 5%, 0.25W	57668	NTR25JE01KO
A1R913		315-0102-00	24 1 2 19	RES, FXD, FILM: 1K OHM, 5%, 0.25W	57668	NTR25JE01K0
A1R914	TRUE IN	315-0202-00		RES, FXD, FILM: 2K OHM, 5%, 0.25W	57668	NTR25J-E 2K
		315-0512-00		RES,FXD,FILM:5.1K OHM,5%,0.25W	57668	NTR25J-E05K1
A1R916		311-2364-00		RES, VAR, NONWY:TRMR, 4.7K OHM, 0.5W	K8788	TC10-LV10-4K7/A
A1R917		315-0513-00		RES, FXD, FILM: 51K OHM, 5%, 0.25W	57668	NTR25J-E51KO
A1R918	greti, b	321-0344-00		RES, FXD, FILM: 37.4K OFM, 1%, 0.125W, TC=TO	19701	5033ED 37K40F
A1R919		315-0102-00		RES, FXD, FILM: 1K OHM, 5%, 0.25W	57668	NTR25JE01KO
A1R920	Surface 1	315-0303-00		RES, FXD, FILM: 30K OHM, 5%, 0.25W	19701	5043CX30K00J
A1R922		315-0202-0 0	그 그 보고 보고하게 된다.	RES, FXD, FILM: 2K OHM, 5%, 0.25W	57668	NTR25J-E 2K
A1R926		315-01 0 3-00		RES, FXD, F1LM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J
A1R927		315-0106-00		RES, FXD, FILM: 10M OHM, 5%, 0.25W	01121	CB1065
A1R928		315-0103-00	property and all comments	RES, FXD, FILM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J
	of period			RES, FXD, FILM: 10K: 0HM, 5%, D. 25W	19701	5043CX10K00J
A1R930		315-0511-00		RES, FXD, FILM: 510 OHM, 5%, 0.25W	19701	5043CX510R0J
, , , , , , , , , , , , , , , , , , , ,		315-0822-00		RES, FXD, FILM:8.2K OHM, 5%, 0.25W	19701	5043CX8K200J
		315-0822-00		RES, FXD, FILM: 8.2K OHM, 5%, 0.25W	19701	5043CX8K200J
A1R933		315-0241-00	新疆 计正常影响	RES, FXD, FILM: 240 OHM, 5%, 0.25W	19701	5043CX240R0J
A1R934		315-0303-00		RES, FXD, FILM: 30K OHM, 5%, 0.25W	19701	5043CX30K00J
A1R935		315-0303-00	The state of the	RES, FXD, FILM: 30K OHM, 5%, 0.25W	19701	5043CX30K00J
A1R935		315-0512-00		RES, FXD, F1LM: 5.1K OHM, 5%, 0.25W	57668	NTR25J-E05K1
A1R939	a e	315-0303-00	and a second	RES, FXD, FILM: 30K OHM, 5%, 0.25W	19701	5043CX30K00J
		315-0102-00	N., 1986	RES, FXD, FILM: 1K: OHM, 5%, 0.25W	57668	NTR25JE01KO
		315-0241-00	the state of the state of the state of	RES, FXD, FTLM: 240 OHM, 5%, 0.25W	19701	5043CX240R0J
A1R942		315-0510-00		RES, FXD, F1LM: 51 OHM, 5%, 0.25W	19701	5043CX51R00J
A1R943		315-0303-00		RES, FXD, FILM: 30K OHM, 5%, 0.25W	19701	5043CX30K00J
A1R944		315-0102-00	er in Augustia i saturata	RESTEXD, FILM: IK: OHM, 5%, 0.25W	57668	NTR25JE01K0
A1R945		315-0241-00	a Landa de Carlos	RES, FXD, FILM: 240 OHM, 5%, 0.25W	19701	5043CX240R0J
A1R946		315-0510-00		RES, FXD, FILM: 51 OHM, 5%, 0.25W	19701	5043CX51R00J
A1R947		315-0241-00		RES, FXD, F1LM: 240 OHM, 5%, 0.25W	19701	5043CX240R0J
A1R948		315-0241-00	garan San San San San San San San San San S	RES, FXD, FILM: 240 OHM, 5%, 0.25W	19701	5043CX240R0J
		307-0106-00		RES, FXD, CMPSN: 4.7 OHM, 5%, 0.25W	01121	CB 47G5
A1R955		315-0511-00		RES.FXD.FILM:510 0HM,5%,0.25W	19701	5043CX510R0J
		315-0103-00	er Parchur and	RES, FXD, FILM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J
		315-0103-00		RES, FXD, FILM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J
		315-0303-00		RES, FXD, FILM: 30K OHM, 5%, 0.25W	19701	5043CX30K00J
A1R970		301-0102-00	Programme i	RES, FXD, CMPSN: 1K OHM, 5%, 0.50W	19701	5053CX1K000J
		301-0101-00	Harris Company	RES, FXD, FILM: 100 OHM, 5%, 0.5W	01121	EB1015
A1R972		315-0512-00		RES.FXD, FILM: 5.1K OHM, 5%, 0.25W	57668	
A1R977		315-0303-00		RES.FXD, FILM: 30K OHM, 5%, 0.25W	19701	5043CX30KD0J
A1R978		315-0512-00		RES, FXD, FILM: 5.1K OHM, 5%, 0.25W	57668	HERMAN COURS
A1R979		315-0301-00			57668	NTR25J-E300E
A1R980		315-0512-00		RES, FXD, FILM: 5.1K OHM, 5%, 0.25W	57668	NTR25J-E05K1
	ele e la comp	315-0513-00		RES.FXD.FILM:51K OHM.5%,0.25W	57668	NTR25J-E51KO
		315-0512-00		RES, FXD, FILM: 5.1K OHM, 5%, 0.25W	57668	NTR25J-E05K1
1371/000		301-0102-00		RES, FXD, CMPSN: 1K OHM, 5%, 0.50W	19701	5053CX1K000J
A1R984		301-0102-00		RES, FXD, CMPSN: 1K-OHM, 5%, 0.50W	19701	5053CX1K000J

Component No.	Tektronix Part No.	Serial/Assembly No. Effective Dscont	a team Name & Description	Mfr. Code	Mfr. Part No.
A1R985	315-0303-00		- inmost trade amount of all orders are	19701	5043CX30K00J
A1R986	315-0272-00		RES, FXD, FILM: 2.7K OHM, 5%, 0.25W	57668	NTR25J-E02K7
A1R987	315-0272-00		RES, FXD, FILM: 2.7K OHM, 5%, 0.25W	57668	NTR25J-E02K7
A1R988	315-0303-00		RES, FXD, FILM: 30K OHM, 5%, 0.25W	19701	5043CX30K00J
A1R989	315-0103-00	The Youngland	RES, FXD, FILM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J
A1R990	301-0102-00		RES, FXD, CMPSN: 1K OHM, 5%, 0.50W	19701	5053CX1K000J
A1R991	301-0102-00			19701	5053CX1K000J
A1R992	301-0102-00		RES, FXD, CMPSN:1K OHM, 5%, 0.50W	19701	TOTAL TIMOOOD
A1R995	301-0103-02		RES, FXD, CMPSN: 10K OHM, 5%, 0.5W	01121	LUITOOS
A1T902 A1U130	120-1788-00 156-0534-00		XFMR.PMR, STPON:HIGH FREQUENCY, HIGH VOLTAGE		120 1100 00
A1U180	156-0534-00		MICROCKT, LINEAR: DUAL DIFF AMPL MICROCKT, LINEAR: DUAL DIFF AMPL	02735 02735	CA3102E-98 CA3102E-98
A1U225	156-0067-00		MICROCKT, LINEAR:BIPOLAR, OPNL AMPL	04713	MC1741CP1
ALU300	156-2988-00		MICROCKT, DGTL: CMOS, QUAD 2 IP NOR	K5856	CD4001BE
A1U304	156-2986-00		MICROCKT, DGTL: CMOS, QUAD 4 IP NOR	K5856	CD4002BE
A1U310	156-2956-00		MICROCKT, LINEAR: DUAL, INDEP PIFF AMPL	K5856	CA 3054
A1U335	156-2956-00		MICROCKT, LINEAR: DUAL, INDEP PIFF AMPL	K5856	CA 3054
A1U380	156-2902-00		MICROCKT, LINEAR:	K5856	CA 3046
A1U415	156-2902-00		MICROCKT, LINEAR:	K5856	CA 3046
A1U425	156-0853-00		MICROCKT, LINEAR: OPNL AMPL, DUAL	04713	LM358N
A1U460	156-2956-00		MICROCKT, LINEAR: DUAL, INDEP PIFF AMPL	K5856	CA 3054
A1U480	156-0205-03		MICROCKT, DGTL: ECL, QUAD 2-INPUT NOR GATE	04713	MC10102 L OR P
A1U500	156-1335-00		MICROCKT,DGTL:LSTTL,DUAL RETRIGGERABLE RESE TTABLE MONOSTABLE MV,SCRN	80009	156-1335-00
A1U520	156-0205-03		MICROCKT, DGTL: ECL, QUAD 2-INPUT NOR GATE	04713	MC10102 L OR P
A1U530	156-1639-00		MICROCKT, DGTL: ECL, DUAL D MA-SLAVE FF	04713	MC10H131(P OR L)
A1U537	156-0721-02		MICROCKT, DGTL: QUAD ST 2-INP NAND GATES	80009	156-0721-02
A1U540	156-0388-03		MICROCKT, DGTL: DUAL D FLIP-FLOP, SCRN	80009	156-0388-03
A1U550	156-0205-03		MICROCKT, DGTL: ECL, QUAD 2-INPUT NOR GATE	04713	MC10102 L OR P
A1U560	156-2902-00		MICROCKT, LINEAR:	K5856	CA 3046
A1U570	156-1639-00		MICROCKT, DGTL: ECL, DUAL D MA-SLAVE FF	04713	MC10H131(P OR L)
A1U580	156-0853-00		MICROCKT, LINEAR: OPNL AMPL, DUAL	04713	LM358N
A1U910	156-0853-00		MICROCKT, LINEAR: OPNL AMPL, DUAL	04713	LM358N
A1U920	156-1126-00		MICROCKT, LINEAR: VOLTAGE COMPARATOR	01295	LM311P
A1U930	156-1408-02		MICROCKT, LINEAR: TIMER	01295	TLC555CP
A1U940	156-0366-00		MICROCKT, DGTL: DUAL D FLIP-FLOP	02735	C04013BF
A1VR776	152-0217-00		SEMICOND DVC.DI:ZEN,SI.8.2V.5%,O.4W.DO-7	04713	SZG20
A1VR792	152-0647-00		SEMICOND DVC, DI:ZENER, SI, 6.8V, 5%, 400MW, DO-7		1N957B
A1VR915	152-0647-00		SEMICOND DVC, DI:ZENER, SI, 6.8V, 5%, 400MW, DO-7		1N957B
A1VR925 A1VR932	152-0278-00		SEMICOND DVC, DI:ZEN, SI, 3V, 5%, 0.4W, DO-7	80009	152-0278-00
A1VR933	152-0217-00 152-0217-00		SEMICOND DVC.DI:ZEN.SI.8.2V,5%,0.4W.DO-7 SEMICOND DVC.DI:ZEN.SI,8.2V,5%,0.4W.DO-7	04713 04713	SZG20 SZG20
A1VR982	152-0571-00		SEMICOND DVC.DI:ZEN.SI.16V.5%.0.4W.DO-7	04713	SZG35014KIRL
A1VR985	152-0278-00		SEMICOND DVC, DI:ZEN, SI, 3V, 5%, 0.4W, 00-7	80009	152-0278-00
A1VR988	152-0278-00		SEMICOND DVC, DI:ZEN, SI.3V, 5%, 0.4W, DO-7	80009	152-0278-00
A1W30	174-0640-00		CA ASSY, SP, ELEC: 4, 26 AWG, 135MM L, RIBBON	TKOEM	820265804(135mm)
A1W80	174-0640-00		CA ASSY, SP, ELEC: 4, 26 AWG, 135MM L, RIBBON	TKOEM	820265804(135mm)
Alw90	174-0635-00		CA ASSY, SP, ELEC: 6, 26 AWG, 120MM L, RIBBON	TKOEM	82265806(120mm)
A1W224	174-1166-00		CA ASSY,SP,ELEC:2,26 AWG,8.0 L	80009	174-1166-00
A1W225	174-1166-00		CA ASSY, SP, ELEC: 2,26 AWG, 8.0 L	80009	174-1166-00
\1W500	131-0566-00		BUS, CONDUCTOR: DUMMY RES, 0.094 OD X 0.225 L	24546	OMA 07
\1V590	195-3407-00		LEAD, ELECTRICAL: 26 AMG, 3.0 L, 9-3	80009	195-3407-00
NIW701	174-0637-00		CA ASSY, SP, ELEC: 6, 26 AWG, 300MM L, RIBBON	TKOEM	82265806(300mm)
N1W755	1 74-0640-0 0		CA ASSY,SP,ELEC:4,26 AWG,135MM L,RIBBON	TKOEM	820265804(135mm)
A1W893	174-0642-00		CA ASSY, SP, ELEC: 3, 26 AWG, 100MM L, RIBBON	TKOEM	82265803(100mm)
N1W903	174-0636-00		CA ASSY, SP. ELEC: 3,26 AWG, 150MM L. RIBBON	TKOEM	82265803 (150mm)
\1W920	131-0566-00		BUS, CONDUCTOR: DUMMY RES, 0.094 OD X 0.225 L	24546	ONA 07

	ektronix art No.	Serial/Assembly No. Effective Dscont		lauf i klamin Mitter een Miter jag i beskringen in de Miter	Mfr. Mfr. Pari	t Nocale a ref
	31-0566-00 31-0566-00		BUS, CONDUCTOR: DUMMY BUS, CONDUCTOR: DUMMY BUS, CONDUCTOR: DUMMY BUS, CONDUCTOR: DUMMY BUS, CONDUCTOR: DUMMY	RES, 0.094 OD X 0.225 L RES, 0.094 OD X 0.225 L	24546 OMA 07 24546 OMA 07 24546 OMA 07 24546 OMA 07	
1W984 13 1W985 13 1W987 13 1W989 13		us en la guistra de la compansión de la co La compansión de la compa La compansión de la compa	BUS, CONDUCTOR: DUMMY BUS, CONDUCTOR: DUMMY BUS, CONDUCTOR: DUMMY BUS, CONDUCTOR: DUMMY		24546 OMA 07 24546 OMA 07 24546 OMA 07 24546 OMA 07 24546 OMA 07 24546 OMA 07	9367 F 1970 G 1026 M 1036 A 1075 A 1175 A
(2)。 (中)或有4.5 (4)。(4)。 (4)。(4)。 (4)(4)。 (4)(4)。 (4)(4)。 (4)(4)(4)(4)(4)。 (4)(4)(4)(4)(4)(4)(4)(4)(4)(4)(4)(4)(4)(4)(4)(THE COLOR COLOR OF HER THE COLOR COLOR TO SEE THE COLOR COLOR TWO SEED TO SEE THE COLOR COLOR TWO SEEDS TO SEE THE COLOR C	er (1970) et 2 <mark>00</mark> 1e Konstant Fransista 1980 - Fransis		* 1817 (2) #10+94655 (2) #10-10-10-10-10-10-10-10-10-10-10-10-10-1	70 0 000 146, 04 0 4 0 1, 04 4 14
※3項目 第4項目 ・整理目の サール・スタインで スタインを表する。		(131) (12) (12) (12) (12) (13) (13) (14) (12) (13) (13) (13) (13) (12) (13) (13) (13) (13) (13) (13) (13) (13) (13) (13) (13)	#韓紀부탁 10 왕 명하는데 3월 - 12일 기가 20 학교 위 10 양화 20 - 영화병		THE ANT COMMITTEE TO COMMITTE	Albertua Portug Abraha Abraha Abraha
TO HE LE TRADICA THE BASE OF THE PROPERTY OF	The state of the s	#1962 人名 (1.5 mm - 5 (1.755)。) (2. 1499 日 - 49 (1.1 1.754)。) (3. 1499 日 - 49 (1.1 1.754)。) (4. 1499 日 - 49 (1.1 1.754)。) (4. 1789 日 - 49 (1.1 1.754)。) (4. 1789 日 - 49 (1.1 1.754)。)			Control of the second of the s	
(1) 例 付款値(2) P 値(2) 例 編纂 例 - 12 他(1) 20 「気濃水道		av Salverina i esta j Salverina esta Liberaria esta esta Victoria esta esta Salverina esta esta Salverina esta esta			1000 (100) (1000)(1000 (1000 (1000 (1000 (1000 (1000 (1000 (1000 (1000 (1000 (100) (1000 (1000 (1000 (1000 (1000 (1000 (1000 (1000 (1000 (1000 (1000 (100) (1000 (1000 (1000 (100) (1000 (1000 (100) (1000 (1000)(1000 (1000 (100) (1000 (100) (1000 (1000 (100) (1000 (100) (100) (1000 (100) (1000 (100) (1000 (100) (1000 (100) (1000 (100) (1000 (100) (1000 (100) (1000 (100) (1000 (100) (1000 (100) (1000) (1000 (100) (1000 (100) (1000 (100) (1000) (1000 (100) (1000)	(1) 主义家 (1) (4) (4) (2) (4) (4) (3) (4) (4) (4) (4) (4) (4)
. 4% 	i di ⊕1 Si bana di				And Address of Section 1997 (1997) (1	Haller (1995) Selfer fan Haller (1995) Haller (1995) Selfer (1995) Richter (1995)
The Control of the Co		A CLEAN CONTRACTOR SECTION SEC			(1) (1) (1) (1) (1) (1) (1) (1) (1) (1)	(Agr - 1) (Agr
Land Control of the c		 See a control of the part of the officer page. 			A THE STATE OF THE	
alais (17 kilos) ar Artistina ja asuat Artistina ja apa		i de la filipa de la companya de la Recompanya de la companya de la comp				

Component No.	Tektronix Part No.	Serial/Assembly No. Effective Dscort	Jan Maine & Description Electron Libraries	Mfr. Code	Mfr. Part No.
A2 A2AT1 A2AT51	671-0390-00 260-2409-00 260-2409-00	1. 15 1 5.7 - 17 (fs. a - 1 5.4 (fs.	CIRCUIT BD ASSY:TIMEBASE/ATTEN SWITCH,ROTARY:1M OHM,10 POS ATTENUATOR SWITCH,ROTARY:1M OHM,10 POS ATTENUATOR	80009 TK1815 TK1815	671-0390-00
A2C6 A2C13 A2C30	283-0000-00 281-0775-01 281-0775-01		CAP, FXD, CER DI: 0.001UF, +100-0%, 500V CAP, FXD, CER DI: 0.1UF, 20%, 50V CAP, FXD, CER DI: 0.1UF, 20%, 50V	59660 04222 0422 2	831-610-Y5U0102P SA105E104MAA SA105E104MAA
A2C31 A2C35 A2C38	281-0812-00 281-0812-00 281-0812-00		CAP, FXD, CER DI:1000PF, 10%, 100V CAP, FXD, CER DI:1000PF, 10%, 100V CAP, FXD, CER DI:1000PF, 10%, 100V	04222 04222 04222	MA101C102KAA MA101C102KAA MA101C102KAA
A2C56 A2C63 A2C80	283-0000-00 281-0775-01 281-0775-01	18 12 1 18 1 18 1 18 1	CAP, FXD, CER 01:0.001UF, +100-0%, 500V CAP, FXD, CER 01:0.1UF, 20%, 50V CAP, FXD, CER 01:0.1UF, 20%, 50V	59660 04222 04222	831-610-Y5U0102P SA105E104MAA SA105E104MAA
A2C81 A2C85 A2C88 A2C93 A2C94 A2C95	281-0812-00 281-0775-01 281-0812-00 290-1153-00 281-0775-01 281-0775-01	が、ます。 754 年 - 中 - 225 年 。 45 年 - 237 日 - 237 日 日 - 247 日 日	CAP, FXD, CER DI: 1000PF, 10%, 100V CAP, FXD, CER DI: 0: 1UF, 20%, 50V CAP, FXD, CER DI: 1000PF, 10%, 100V CAP, FXD, ELCTLT: 47UF, +50-10%, 10V CAP, FXD, CER DI: 0: 1UF, 20%, 50V CAP, FXD, CER DI: 0: 1UF, 20%, 50V	04222 04222 04222 K8996 04222 04222	MA101C102KAA SA105E104MAA MA101C102KAA 030-24479 SA105E104MAA SA105E104MAA
A2C96 A2C97 A2C98 A2C701 A2C702 A2C703	290-1153-00 281-0775-01 281-0775-01 285-1409-00 285-1408-00 281-0207-00	\$ 7 mm (100 ft) (100	CAP, FXD, ELCTLT: 47UF, +50-10%, 10V CAP, FXD, CER DI: 0.1UF, 20%, 50V CAP, FXD, CER DI: 0.1UF, 20%, 50V CAP, FXD, MTLZD: 1UF, 1%, 160V, AXIAL, TUB, MI CAP, FXD, MTLZD: 10UF, 1%, 250V, AXIAL, TUB, MI CAP, VAR, PLASTIC: 2-18PF, 100V		030-24479 SA105E104MAA SA105E104MAA ORDER BY DESCR ORDER BY DESCR GXA 18000
A2C704 A2C705 A2C706 A2C708 A2C709 A2C710	283-0674-00 281-0813-00 281-0775-01 281-0756-00 281-0775-01 281-0775-01		CAP, FXD, MICA DI:85PF, 1%, 500V CAP, FXD, CER DI:0.047UF, 20%, 50V CAP, FXD, CER DI:0.1UF, 20%, 50V CAP, FXD, CER DI:2.2PF, +/-0.5PF, 200V CAP, FXD, CER DI:0.1UF, 20%, 50V CAP, FXD, CER DI:0.1UF, 20%, 50V		D155F850F0 C412C473M5V2CA SA105E104MAA SA102AZR2DAA SA105E104MAA SA105E104MAA
A2C712 A2C713 A2C715 A2C722 A2C723 A2C724	290-1153-00 290-1153-00 290-1153-00 281-0773-00 290-0183-00 281-0775-01	#5/2 - 3 1 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	CAP, FXD, ELCTLT: 47UF, +50-10%, 10V CAP, FXD, ELCTLT: 47UF, +50-10%, 10V CAP, FXD, ELCTLT: 47UF, +50-10%, 10V CAP, FXD, CER DI: 0.01UF, 10%, 100V CAP, FXD, ELCTLT: 1UF, 10%, 35V CAP, FXD, CER DI: 0.1UF, 20%, 50V	K8996 04222 05397	030-24479 030-24479 030-24479 MA201C103KAA T3228105K035AS SA105E104MAA
A2C727 A2C733 A2C755 A2C767 A2CR14 A2CR64	281-0775-01 281-0758-00 281-0775-01 281-0785-00 152-0141-02 152-0141-02	ABOUT TO THE TOTAL THE TOTAL TO THE TOTAL TOTAL TO THE TO	CAP, FXD, CER DI: 0.1UF, 20%, 50V CAP, FXD, CER DI: 15PF, 20%, 100V CAP, FXD, CER DI: 0.1UF, 20%, 50V CAP, FXD, CER DI: 150PF, 10%, 100V SEMICOND DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 SEMICOND DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35	04222 04222 04222 (03508	SA105E104MAA SA102A150MAA SA105E104MAA MA101A151KAA DA2527 (1M4152)
A2CR758 A2CR761 A2CR762 A2CR769 A2CR773 A2CR774	152-0141-02 152-0141-02 152-0141-02 152-0141-02 152-0141-02 152-0141-02	That we the second of the seco	SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508 03508 03508 03508 03508	DA2527 (1N4152) DA2527 (1N4152) DA2527 (1N4152) DA2527 (1N4152) DA2527 (1N4152) DA2527 (1N4152) DA2527 (1N4152)
A2E90 A2E91 A2E92 A2E93 A2L93 A2L96	276-0752-00 276-0752-00 276-0752-00 276-0752-00 120-1631-00 120-1631-00	APP (Fig. 18), and the second of the second	CORE, EM: FERRITE CORE, EM: FERRITE CORE, EM: FERRITE CORE, EM: FERRITE COIL, RF: FXD, 210UH COIL, RF: FXD, 210UH	34899 3 34899 3 34899 3 1KOOA 0	2743001111 2743001111 2743001111 2743001111 2743001111 270ER BY DESCR 270ER BY DESCR
A2L712 A2L713 A2Q13 A2Q14	120-1631-00 120-1631-00 151-1054-00 151-1025-00	12 (14) (15) (16) (16) (16) (16) (16) (16) (16) (16	COIL,RF:FXD,210UH COIL,RF:FXD,210UH TRANSISTOR:FET,N-CHAN,SI,TO-71 TRANSISTOR:FET,N-CHAN,SI,TO-92	TK00A (80009 1	RDER BY DESCR RDER BY DESCR 151-1054-00 PF3036

Component	No.	Tektronix Part No.	Serial/Assembly No. Effective Dscont	Name & Description Served	Mfr. Code	Mfr. Part No.
A2Q63		151-1054-00		TRANSISTOR: FET, N-CHAN, SI, TO-71	80009	151-1054-00
A2Q64		151-1025-00	allanda tida	TRANSISTOR: FET, N-CHAN, SI, TO-92	04713	SPF3036
A20701		151-0424-00		TRANSISTOR: NPN, SI, TO-92	04713	SPS8246
A2Q704		151-1042-00		SEMICOND DVC SE:FET,SI,TO-92	80009	151-1042-00
A20706	sten	151-0736-00	ABOUT TO THE STATE OF THE STATE	(LOCATIONS A & B) TRANSISTOR:NPN,SI,TO-92	80009	151-0736-00
A2Q725		151-0190-00		TRANSISTOR: NPN, SI, TO-92	80009	151-0190-00
N2Q732	efull) is elid Salaras istos	151-0190-00	and the second of A	TRANSISTOR: NPN, SI, TO-92	80009	151-0190-00
120736	igentine de la companya de la compa La companya de la co	151-0190-00		TRANSISTOR: NPN. SI. TO-92	80009	151-0190-00
20737	an an an an an Tanàna	151-0188-00	ng managan ang managan an Managan ang managan ang ma	TRANSISTOR: PNP, SI, TO-92	80009	151-0188-00
20750	and the	151-0188-00		TRANSISTOR: PNP, SI, TO-92	80009	151-0188-00
20759 20760		151-0188-00 151-0188-00		TRANSISTOR: PNP, SI, TO-92 TRANSISTOR: PNP, SI, TO-92	80009 80009	151-0188-00 151-0188-00
•					Jan Ajan	
2R3	t Projec	315-0330-00	y favor services	RES, FXD, FILM:33 OHM, 5%, 0.25W	19701	
2R5	100%	322-0481-01	第一点指示 的	RES, FXD, F1LM: 1M OHM, 0.5%, 0.25W, TC=T0	75042	CEBTO-10040
2R6 2R13		315-0474-00 315-0470-00		RES, FXD, FILM: 470K OHM, 5%, 0.25W	19701 57668	5043CX470K0J92U NTR25J-E47E0
2R14	and the second	315-0470-00		RES, FXD, FILM: 47 OHM, 5%, 0.25W RES, FXD, FILM: 20 OHM, 5%, 0.25W	19701	5043CX20R00J
2R15	受権 はび	315-0200-00		RES, FXD, FILM: 20 OHM, 5%, 0.25W	19701	5043CX20R00J
2R22	1,440	321-0210-00		RES, FXD. FILM: 1.50K OHM. 1%. 0.125W. TC=T0	19701	5033ED1K50F
2R23	and the state of the	321-0210-00		RES. FXD. FILM: 1.50K OHN, 1%, 0.125W, TC=TO	19701	5033ED1K50F
R29		321-0068-00		RES, FXD, FILM: 49.9 OHM, 0.1%, 0.125W, TC=T0	91637	CMF55116G49R90F
2R30		315-0472-00		RES, FXD, FILM: 4.7K OHM, 5%, 0.25W	57668	NTR25J-E04K7
2R31	0.494	315-0101-00	and control	RES, FXO, FILM: 100, OHM, 5%, 0.25W	57668	NTR25J-E 100E
2R32	a fara care	315-0472-00		RES, FXO, FILM: 4.7K OHM, 5%, 0.25W	57668	NTR25J-E04K7
2R33	oranio Publik Cabala	311-2368-00	9 Haller 1 (1)	RES, VAR, NONWY: TRMR, 47K OHM, 0.5W	K8788	TC10-LV10-47K/A
2R35	inetiin	321-0144-00	The state of the s	RES, FXD, FILM: 309 OHM, 1%, 0.125W, TC=T0	07715	CEAD309R0F
2R36	y, etc. c	315-0101-00	Marine Bertoline and	RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
2R37	135,2000 -	315-0102-00		RES, FXD, FILM: 1K OHM, 5%, 0.25W	57668	NTR25JE01K0
2R38 2R39	5445°°4	321-0144-00 315-0242-00	raw (1975), 3	RES, FXD, F1LM:309 OHM, 1%, 0.125W, TC=T0 RES, FXD, F1LM:2.4K OHM, 5%, 0.25W	07716 57668	CEAD309R0F NTR25J-E02K4
2R41		321-0154-00		RES.FXD, FILM: 392 OHM.1%.0.125W, TC=T0	07716	CEAD392R0F
2R42		315-0333-00		RES. FXD. FILM: 33K OHM, 5%, 0.25W	57668	NTR25J-E33K0
2R53		315-0330-00		RES. FXD. FILM:33 OHM. 5%, 0.25W	19701	5043CX33R00J
2R55		322-0481-01		RES, FXD, FILM: 1M OHM, 0.5%, 0.25W, TC=TO	75042	CEBTO-1004D
2R56	, 480 N. H. J. W.	315-0474-00		RES, FXD, FILM: 470K OHM, 5%, 0.25W	19701	5043CX470K0J92U
2R63		315-0470-00		RES, FXD, FILM: 47 OHM, 5%, 0.25W	57668	NTR25J-E47E0
2R64		315-0200-00		RES, FXD, FILM: 20 OHM, 5%, 0.25W	19701	5043CX20R00J
2R65		315-0200-00		RES, FXO, FILM: 20 OHM, 5%, 0.25W	19701	5043CX20R00J
2R72		321-0210-00	and the state of	RES, FXD, F1LM: 1.50K OHM, 1%, 0.125W, TC=T0	19701	5033ED1K50F
		321-0210-00	ong hay the Arthur by built to	RES, FXD, F1LM:1.50K OHM, 1%, 0.125W, TC=TO	19701	5033ED1K50F
2R78 2R79		315-0102-00 321-0068-00	e di de frança de la secola de la composición dela composición de la composición de la composición de la composición dela composición dela composición dela composición de la composición de la composición de la composición de la composición dela composici	RES, FXD, F1LM:1K:0HM, 5%, 0.25W RES, FXD, F1LM:49.9 OHM, 0.1%, 0.125W, TC=TO	57668 91637	NTR25JE01K0 CMF55116G49R90F
2R80		315-0472-00		RES.FXD.FILM:4.7K OHM.5%.0.25W	57668	NTR25J-E04K7
		315-04/2-00	in de la Name Colora de la la La Richa Marie, la Marie de la California	RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
	is a	315-0472-00		RES. FXD. FILM: 4.7K. OHM, 5%, 0.25W	57668	NTR25J-E04K7
		311-2368-00			K8788	TC10-LV10-47K/A
R85		321-0144-00	and the contract of	RES, FXD, FILM: 309 OHM, 1%, 0.125W, TC=TO	07716	CEAD309R0F
2R86		315-0101-00		RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
2R87		315-0102-00		RES, FXD, F1LM:1K OHM, 5%, 0.25W	57668	NTR25JE01K0
2R88		321-0144-00		RES, FXD, FILM: 309 OHM, 1%, 0.125W, TC=TO	07716	CEAD309R0F
R91		321-0154-00		RES, FXD, F1LM: 392 OHM, 1%, 0.125W, TC=TO	07716	CEAD392ROF
R701		307-0780-01		RES MTWK, FXD, FI:TIMING	80009	307-0780-01 CCAD24002D
2R702 2R703		322-0519-01 315-0100-00		RES, FXD, FILM: 2.49M OHM, 0.5%, 0.25W, TC=TO RES, FXD, FILM: 10 OHM, 5%, 0.25W	07716 19701	CCAD24903D 5043CX10RR00J
2R704		315-0101-00		RES.FXD.FILM:100 0HM.5%,0.25W	57668	NTR25J-E 100E
	e de la companya de	DIG VIVE TUV		NEWS AND LANGUAGE WITH JAM, V. COM		
2R705		315-0151-00		RES.FXD, FILM: 150 OHN, 5%, 0.25W	57668	NTR25J-E150E NTR25JE01K0

Component No.	Tektronix Part No.	Serial/Assembly No. Effective Dscont Name & Descript	su helesel ion dinende inequal de	Mfr. Code	Mfr. Part No.
A2R715	321-0231-00	RES.FXO, FILM: 2.49K	OHM.1%.0.125W.TC=T0	19701	5033ED2K49F
A2R716	321-0225-00		OHM, 1%, 0.125W, TC=TO	19701	5033ED2K15F
A2R717	321-0306-00	· · · · · · · · · · · · · · · · · · ·	OHM.1%.0.125W.TC=TO	19701	5033ED15J00F
A2R718	321-0306-00		OHM, 1%, 0.125W, TC=TO	19701	5033ED15J00F
				19701	
A2R719	315-0330-00	RES, FXD, FILM: 33 OH			5043CX33R00J
A2R720	315-0201-00	RES, FXD, FILM: 200 O	HM,5%,0.25W	57668	NTR25J-E200E
A2R721	311-2356-00	RES, VAR, NONWA: PNL,		K8996	2322 50190194
A2R722	311-2361-00	RES, VAR, NONWY: TRMR	,10K OHM,0.5W	K8788	TC10-LV10-10K/A
A2R723	315-0104-00	RES, FXD, FILM: 100K	OHM, 5%, 0.25W	57668	NTR25J-E100K
A2R724	315-0302-00	RES, FXD, FILM: 3K OH	4,5%,0.25W	57668	NTR25J-E03KO
A2R725	321-0222-00	RES. FXD. FILM: 2.00K	OHM, 1%, 0.125W, TC=T0	19701	5033ED2K00F
A2R726	315-0101-00	RES, FXD, FILM: 100 O		57668	NTR25J-E 100E
A2R727	321-0254-00	RES EXD FILM-4 32K	OHM, 1%, 0.125W, TC=T0	07716	CEAD43200F
A2R728	315-0392-00	RES, FXD, FILM: 3.9K		57668	NTR25J-E03K9
A2R729	315-0512-00	RES.FXD.FILM:5.1K		57668	NTR25J-E05K1
A2R732	321-0254-00		OHM, 1%, 0.125W, TC=T0	07716	CEAD43200F
A2R733	321-0231-00		OHM, 1%, 0.125W, TC=TO	19701	5033ED2K49F
A2R734	315-0272-00	RES, FXD, FILM: 2.7K	JHM, 5%, 0.25W	57 6 68	NTR25J-E02K7
A2R735	315-0103-00	RES, FXD, FILM: 10K OF	M,5%,0.25W	19701	5043CX10K00J
A2R736	311-2363-00	RES, VAR, NONWY: TRMR,	,1K OHM,0.5W	K8788	TC10-LV10-1K/A
A2R737	321-0197-00	RES, FXD, FILM: 1.10K	OHM, 1%, 0.125W, TC=T0	07716	CEAD11000F
A2R738	315-0562-00	RES, FXD, FILM: 5.6K (HM.5%.0.25W	57668	NTR25J-E05K6
A2R740	321-0273-00		OHM, 1%, 0.125W, TC=TO	07716	CEAD68100F
A2R741	321-0232-00		OHM, 1%, 0.125W, TC=TO	19701	5043E02K550F
A2R743	315-0112-00	RES, FXD, FILM: 1.1K C	HAM ES A SELI	19701	5043CX1K100J
A2R744	311-2232-00		2K OHM, 20%, 0.5W LINEAR	TK1450	
A2R745				57668	NTR25J-E680E
A2R756	315-0681-00	RES, FXD, FILM: 680 OF		57668	
	315-0203-00	RES, FXD, FILM: 20K OH			NTR25J-E 20K
A2R757 A2R758	321-0272-00 321-0207-00		OHM, 1%, 0.125W, TC=T0 OHM, 1%, 0.125W, TC=T0	19701 19701	5043ED6K650F 5033ED1K400F
40D7C1	201 2040 20	DEC DVD EXIM C COV	MIN 18/ A 1051/ TO TA	07710	orthogogor
A2R761	321-0240-00		OHM, 1%, 0.125W, TC=T0	07716	CEAD30900F
A2R762	321-0240-00		OHM, 1%, 0.125W, TC=TO	07716	CEAD30900F
A2R763	321-0207-00		OHM, 1%, 0.125W, TC=T0	19701	5033ED1K400F
A2R765	315-0623-00	RES, FXD, FILM: 62K OH	M,5%,0.25W	19701	5043CX62K00J
A2R766	315-0203-00	RES, FXD, FILM: 20K OH	M,5%,0.25W	57668	ntr25j-e 20k
A2R767	315-0820-00	RES,FXD,FILM:82 OHM	,5%,0.25W	57668	NTR25J-E82E0
A2R768	321-0214-00	RES.FXD.FILM:1.65K	OHM. 1%, 0. 125W, TC=TO	19701	5033ED1K65F
A2R769	315-0512-00	RES, FXD, FILM: 5.1K O		57668	NTR25J-E05K1
A2R770	321-0214-00	RES, FXD, FILM: 1.65K		19701	5033ED1K65F
A2R771	321-0133-00	RES.FXD.FILM:237 OH		07716	CEAD237ROF
A2R772	321-0133-00	RES.FXD.FILM:237 OH		07716	CEAD237ROF
A2R773	321-0133-00	RES, FXD, F1LM: 237 OH		07716	CEAD237ROF
1.2D774	221 0122 00	DEC EVE ETIM. 227 DU	M 19 A 19D/ TC-TA	07716	CEARO27DOE
A2R774	321-0133-00	RES, FXD, FILM: 237 OH		07716	CEAD237R0F
A2R777	311-2355-00	RES, VAR, NONW: TRMR,		K8788	TC10-LV10-100R/A
A2R780	321-0261-00	RES, FXD, FILM: 5.11K		19701	5033ED5K110F
42R782	311-2363-00	res, var, nonim: trmr,		K8788	TC10-LV10-1K/A
A2S701	260-2408-00	SWITCH, ROTARY: 4 POL		80009	260-2408-00
A2U30	156-0534-00	MICROCKT, LINEAR:DUA	L DIFF AMPL	02735	CA3102E-98
A2U80	156-0534-00	MICROCKT, LINEAR: DUA	L DIFF AMPL	02735	CA3102E-98
A2U83	156-2902-00	MICROCKT, LINEAR:		K5856	CA 3045
N2U715	156-0067-00	MICROCKT, LINEAR: BIP	DLAR.OPNL AMPL	04713	MC1741CP1
N2U745	156-2902-00	MICROCKT, LINEAR:		K5856	CA 3046
20755	156-2902-00	MICROCKT.LINEAR:		K5856	CA 3046
12VR704	152-0571-00		.SI,16V,5%,0.4W,DO-7	04713	SZG35014KIRL
12VR710	152-0571-00	CEMITONE BUT DI . 7EU	.SI.16V.5%,0.4W.DO-7	04713	SZG35014KIRL
~2VR710 \2VR719	152-0217-00		,SI,8.2V,5%,0.4W,DO-7	04713	SZG20
N2W711	131-0566-00	BUS, CONDUCTOR: DUMMY	RES, 0.094 OD X 0.225 L	24546	OMA 07

		Tektronix	Serial/Assembly No.	paling what the interest of a consequence	Mfr.
Compane	nt No.	Part No.	Effective Discont	Name & Description	Code Mfr. Part No.
A2W742		131-0566-00		BUS, CONDUCTOR: DUMMY RES, 0.094 OD X 0.225 L	24546 OMA 07
A2W752		131-0566-00	and the second	BUS, CONDUCTOR: DUMMY RES, 0.094 OD X 0.225 L	24546 OMA 07
			Markey Strategic		

Component No.	Tektronix Part No.	Serial/Assembly No. Effective Dscont	Name & Description	Mfr. Code	Mfr. Part No.
A3	671-0392-00		CIRCUIT BD ASSY:FRONT PANEL	80009	671-0392-00
A3C2	285-1106-00		CAP, FXD, PLASTIC: 0.022UF, 20%, 600V	14752	230B1F223
A3C52	285-1106-00		CAP, FXD, PLASTIC: 0.022UF, 20%, 600V	14752	230B1F223
A3C377	285-1385-00		CAP, FXD, PLASTIC: 43PF, 2.5%, 630V	K7779	B31063-A6430-H6
A3C378	285-1386-00		CAP, FXD, PLASTIC:390PF, 2.5%, 630V	K7779	B31063-A6391-H6
A3C383	285-1385-00		CAP, FXD, PLASTIC: 43PF, 2.5%, 630V	K7779	831063-A6430-H6
A3C392	281-0815-00		CAP, FXD, CER DI:0.027UF, 20%, 50V	04222	MA205C273MAA
A3CR401	152-0141-02		SEMICOND DVC.DI:SW.SI,30V.150MA,30V.DO-35	03508	DA2527 (1N4152)
A3CR534 A3CR537	152-0141-02 152-0141-02	14.1.	SEMICOND DVC.DI:SW, SI, 30V, 150MA, 30V, DO-35	03508	DA2527 (1N4152)
A3CR538	152-0141-02		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508 03508	DA2527 (1N4152) DA2527 (1N4152)
A3DS370			LT EMITTING DIO:GREEN	TKOOA	LN31GPHLEXLEDSGS
A3DS560	150-1187-00		LT EMITTING DIO:GREEN	TKOOA	LN31GPHLEXLED5GS
A3R2	315-0105-00	ej e e gjelet	RES, FXD, FILM: 1M OHM, 5%, 0.25W	19701	5043CX1M000J
A3R4	315-0100-00	i, i v	RES, FXD, FILM: 10 OHM, 5%, 0.25W	19701	5043CX10RR00J
A3R52	315-0105-00		RES. FXD. FILM: 1M OHM, 5%, 0.25W	19701	5043CX1M000J
A3R54	315-0100-00		RES, FXD, FILM: 10 OHM, 5%, 0.25W	19701	5043CX10RR00J
A3R84	311-2368-00	The second of th	RES, VAR, NONWW:TRMR, 47K DHM, 0.5W	K8788	TC10-LV10-47K/A
A3R89	315-0222-00		RES, FXD, FILM: 2.2K OHM, 5%, 0.25W	57668	NTR25J-E02K2
A3R92	315-0333-00		RES, FXD, FTLM: 33K OHM, 5%, 0.25W	57668	NTR25J-E33K0
A3R94	315-0333-00 321-0251-00	and the second s	RES, FXD, FILM: 33K, OHM, 5%, 0.25W	57668	NTR25J-E33KO
A3R113 A3R123	321-0251-00	e e Miller State II. Ne e e e Julius e e e	RES, FXD, FILM: 4.02K OHM, 1%, 0.125W, TC=TO	19701 K8996	5033ED4K020F PP17/000HFA0A234
A3R163	321-0251-00			19701	5033ED4K020F
MINIO .	JE1-0231-00		**************************************	19/01	
A3R173	311-2366-00		RES, VAR, NONWA: PNL, 470 OHM, 20%, 0.2W	K8996	PP17/000HFAQA234
A3R365	315-0621-00		RES, FXD, FILM: 620 OHM, 5%, 0.25W	57668	NTR25J-E620E
A3R376	315-0101-00		RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
A3R377	315-0394-00		RES, FXD, FILM: 390K OHM, 5%, 0.25W	57668	NTR25J-E390K
A3R378 A3R379	315-0433-00 315-0470-00		RES, FXD, FILM: 43K OHM, 5%, 0.25W RES, FXD, FILM: 47 OHM, 5%, 0.25W	19701 57 668	5043CX43K00J NTR25J-E47E0
A3R383	315-0564-00		RES.FXD.FILM:560K OHM.5%.0.25W	19701	5043CX560K0J
A3R426	311-2366-00		RES, VAR, NONWY: PNL, 470 OHM, 20%, 0.2W	K8996	PP17/000HFAQA234
A3R726	311-2366-00		RES. VAR, NOWWY: PNL, 470 OHM, 20%, 0.2W	K8996	PP17/000HFAQA234
A3R800	315-0682-00		RES, FXD, FILM: 6.8K OHM, 5%, 0.25W	57668	NTR25J-E06K8
A3R802	311-2359-00		RES, VAR, NONW: PNL, 10K OHM, 20%, 0.2W	K8996	PP17000HGA0A4110
A3R986	311-2364-00		RES, VAR, NONWY: TRMR, 4.7K OHM, 0.5W	K8788	TC10-LV10-4K7/A
A3R987	315-0201-00		RES,FXD,FILM:200 OHM,5%,0.25W	57668	NTR25J-E200E
A3S90	260-2291-00		SWITCH, SLIDE: DPDT, 250MA, 100VAC	U3771	607/TK 2 POS
A3S101	260-2293-00		SWITCH, SLIDE: DPDT, 250MA, 100VAC	U3771	607/TEK 3 POS
A3S201	260-2293-00		SWITCH, SLIDE: DPDT, 250MA, 100VAC	U3771	607/TEK 3 POS
A3S390 A3S392	260-2290-00 260-2292-00		SWITCH, PUSH: 1 BUTTON, 1 POLE, MOMENTARY SWITCH, SLIDE: DPDT, 250MA, 100VAC	TKOEA U3771	SKECCAAOBIA 607/TEK 4 POS
A3S401	260-2292-00			112771	
A35401 A35460	260-2292-00		SWITCH, SLIDE: DPDT, 250MA, 100VAC SWITCH, SLIDE: DPDT, 250MA, 100VAC	U3771 U3771	607/TEK 4 POS 607/TK 2 POS
A35400 A3S505	260-2291-00		SWITCH, SCIDE: DPD1, 250MA, 100VAC SWITCH, PUSH: 1 BUTTON, 1 POLE, MOMENTARY	TKOEA	SKECCAAO61A
A3S545	260-2293-00		SWITCH, FUSICITIES DE L'ACTUAL SWITCH, SLIDE: DPDT, 250MA, 100VAC	U3771	607/TEK 3 POS
A3S550	260-2293-00		SWITCH, SLIDE: DPDT, 250MA, 100VAC	U3771	607/TEK 3 POS
A3S555	260-2292-00		SWITCH, SLIDE: DPDT, 250MA, 100VAC	U3771	607/TEK 4 POS
A3S601	260-2291-00		SWITCH, SLIDE: DPDT, 250MA, 100VAC	U3771	607/TK 2 POS
A3W1	174-0639-00		CA ASSY, SP, ELEC: 6,26 AWG, 110MM L, RIBBON	TKOEM	82026-5806(95mm)
A3W2	174-0638-00		CA ASSY, SP, ELEC: 6, 26 AWG, 165MM L, RIBBON	TKOEM	82265806(165mm)
A3W3	174-0639-00		CA ASSY, SP, ELEC: 6,26 AMG, 110MM L, RIBBON	TKOEM	82026-5806(95mm)
A3W5	174-0639-00		CA ASSY, SP, ELEC: 6, 26 AWG, 110MM L, RIBBON	TKOEM	82026-5806(95mm)
A3W6	174-0635-00		CA ASSY, SP. ELEC: 6,26 AWG, 120MM L, RIBBON	TKOEM	82265806(120mm)
A3W7	174-0638-00		CA ASSY,SP,ELEC:6,26 AWG,165MM L,RIBBON	TKOEM	82265806(165mm)

Component No.	Tektronix Part No.	Serial/Assembly No. Effective Dscont	Name & Description	Nfr. Code Mfr. Part No.
A4 ""	671-0391-00		CIRCUIT BD ASSY:MAIN INPUT	80009 671-0391-00
A4C900	290-1201-00	Asia da Santa da San	CAP, FXD, ELCTLT: 2200UF, 100V, 30 X 35MM	TK0900
A4C903	285-1192-00		CAP, FXD, PPR DI:0.0022 UF, 20%, 250VAC	TK0515 PME271Y510
A4C904	285-1192-00		CAP, FXD, PPR DI:0.0022 UF, 20%, 250VAC	TK0515 PME271Y510
A4C905	285-1252-00		CAP, FXD, PLASTIC: 0.15UF, 10%, 250VAC	05243 F1772-415-2000
A4C907	283-0057-00		CAP, FXD, CER DI:0.1UF,+80-20%,200V	04222 SR306E104ZAA
A4CR901	152-0066-00		SEMICOND DVC,DI:RECT,SI,400V,1A,DO-41	05828 GP10G-020
A4CR902	152-0066-00		SEMICOND DVC.DI:RECT.SI.400V.1A.DO-41	05828 GP10G-020
A4CR903	152-0066-00	PARKER RELIGIOUS	SEMICOND DVC, DI:RECT, SI, 400V, 1A, DO-41	05828 GP10G-020
A4CR904	152-0066-00	Colored State Co	SEMICOND DVC.DI:RECT.SI.400V.1A.DO-41	05828 GP10G-020
A4J901	131-3905-00		CONN.RCPT.ELEC:PWR.250VAC.6A,CKT BD MT	TK0DY L2157
A4L901	108-1375-00		COTE, RF: FXD, 82UH, 1A	TK00A RL-1218-820K-1A
	108-1375-00		COIL, RF: FXD, 82UH, 1A	TK00A RL-1218-820K-1A
FITT WWG			(PART OF T901)	- Mading on the second of the second
	151-0350-00		TRANSISTOR: PNP, SI, TO-92	04713 SPS6700
	315-0473-00		RES, FXD, FILM: 47K OHM, 5%, 0.25W	57668 NTR25.J-E47K0
	315-0243-00		RES, FXD, FILM: 24K OHM, 5%, 0.25W	57668 NTR25J-E24K0
A4R904	315-0562-00	$g_{ij} = g_{ij} + g$	RES, FXD, FILM: 5, 6K OHM, 5%, 0.25W	57668 NTR25J-E05K6
A4R905	315-0104-00		RES., FXD., FILM: 100K OHM, 5%, 0.25W	57668 NTR25J-E100K
A4R906	315-0105-00	au Propinsi	RES, FXD, FILM: 1M OHM, 5%, 0.25W	19701 5043CX1M000J
A4R907	315-0510-00	and the second s	RES. FXD. FILM: 51 OHM, 5%, 0.25W	19701 5043CX51R00J
A4S901	260-1849-05	The state of the s	SWITCH, PUSH: DPDT, 4A, 250VAC, W/BRACKET	31918 NE-15 SERIES
A4S902	260-2116-00	and the second second	SWITCH, SLIDE: DPDT, 10A, 125VAC, LINE SEL	04426 18-000-0019
	174-0636-00		CA ASSY, SP. ELEC: 3, 26 AWG, 150MM L, RIBBON	TKOEM 82265803 (150mm)

(2) これでは、大力には、最終的、対象的、対象のでは、 では、対象の対象を発展するです。 点 でする。対象の対象を対象の対象を対象が、 を認って、対象の対象を対象が、対象の、企会 には、対象の対象を対象が、対象の、企会 に対象の対象の対象が、対象の、対象の、 できないできません。 またい、ときない。

Component No.	Tektronix Part No.	Serial/Ass Effective	-	Name & Description	Mfr. Code	Mfr. Part No.
FS901	159-0042-00			FUSE, CARTRIDGE: 3AG, 0.75A, 250V, 0.15SEC	75915	312.750
J100	131-0955-00			CONN, RCPT, ELEC: BNC, FEMALE	13511	31-279
J151	131-0955-00			CONN, RCPT, ELEC: BNC, FEMALE	13511	31-279
J300	131-0955-00			CONN, RCPT, ELEC: BNC, FEMALE	13511	31-279
J590	131-3898-00			TERM, FEEDTHRU: 0.658 M X 0.75 DIA, BRS, AU PL	K0491	001-1401-041140P
R1	315-0470-00			RES, FXD, FILM: 47 OHM, 5%, 0.25W	57668	NTR25J-E47E0
R51	315-0470-00			RES, FXD, FILM: 47 OHM, 5%, 0.25W	57668	NTR25J-E47E0
R382	315-0470-00			RES, FXD, FILM: 47 OHM, 5%, 0.25W	57668	NTR25J-E47E0
R893	311-2357-00	HK10100	HK11183	RES, VAR, NONWAY: PNL, 2.2M OHM, 20%, 0.25W	TK00C	ORDER BY DESCR
R893	311-2444-00	HK11184		RES, VAR, NONWY: TRMR, 2.2, 30%, 0.25W, PLASTIC SI	80009	311-2444-00
				DE ADJ, LINEAR		
T 90 1	120-1787-00			XFMR, PWR, STPDN: LOW FREQUENCY	80009	120-1787-00
V900	154-0929-00			ELECTRON TUBE: CRT, W/TRACE	80009	154-0929-00

		다음 전 수 있는 것이 되었다. 		
	Tank Funda Tank Funda Funda Funda	A CONTRACTOR OF THE CONTRACTOR		
TOWER YOR TOWN HER TO AND TOWN HE TOWN HE	as roll (I DR 1705 (I) (III)	LENGTH AND THE CONTROL OF THE CONTRO	- 一般の 10 - 東京 10 - 東京 10 日本 10 - 東京 10 - 東京 10	19 19 13 13A

VERTICAL PREAMP & OUTPUT AMPLIFIER DIAGRAM 2

CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD
C114	2F	2H	Q102	1C	1H	R145	2Н	1K	R238		
C115	3F	1H	Q103	3C	1111	R150	98	3H	R238 R239	3P	10K
C116	2E	2.1	Q104	1C	2H	R151	118	3H	R241	4R 6N	10K
C124 C125	2F 3F	IJ	Q105	3C	1H	R152	88	3H	R242	4M	81. 8K
C126	3F	13	0114	1F	2.1	R153	10B	214	R243	7M	8K
C130	3F 2G	1J	Q115	3F	1J	R154	9C	3H	R244	3P	104
C133	5H	2K 4L	Q152 Q153	8C	3Н	R155	10C	2H	R245	3P	944
C164	9F	3H	Q154	11C	3H	R156	9C	3H	R246	3P	84
C165	10F	2H	Q155	8C 11C	3H	R158	9B	3H	R247	5P	111
C174	9F	21	Q164	8F	2H 3J	R159	108	3H	R248	7R	38
C175	10F	2.1	Q165	11F	2J	R161	10L	3F	R249	89	10L
C176	10F	ຂັ້ນ	0202	5K	2K	R162 R164	10N	2F	R250	86	9L
C180	9F	3K	0203	6K	2K	R165	9E 10E	3H	R251	8P	94.
C198	11L	3G	0206	5L	2K	R168	9C	2H	R252	8P	9L
C505	10N	2G	Q207	6 L	2K	R157	10C	3H 2H	R253	2G	2K
C215	5K	3K	Q230	5M	8K	R168	80	271 3H	R258	10G	3K
C220	88	8L	Q231	6M	8L	R169	110	2H	R260 R263	10P	7L
C225	7K	1K	Q232	7N .	8L.	R170	9F	3H	R264	6N	9L.
C232 C235	7P	10L	Q234	4N	9K	R171	10E	ži	R265	4N 8P	9K
C239	4P 6R	10K	Q236	8P	11K	R172	9F	30	R266	3P	9L 9K
C240	5P	11K	0237	7P	11L	R174	10F	Ži l	R267	7P	10L
C241	5N	11K	Q238	3P	11K	R175	9F	3.1	R268	3P	10K
C242	4N	8K 9K	Q239	4P	11K	R176	9F	3J	R269	5P	10K
C243	7N	9K	R100		[R177	9G	3K	R280	5N	8K
C245	7N	8L	R101	1B 3B	111	R180	9F	3.1	R538	5G	51.
C246	6N	BL.	R102	18	1H	R181	10G	ટા	R539	7F	5K
C247	5N	8K	R103	3B	1H 1H	R182	6G	5L	R540	5G	5L
C248	4N	9K	R104	2C	2H	R183 R185	6H	4K	R541	6G	5K
C536	6F	6K	R105	3C	1H	A186	10G	3K	R544	6E	6K
C537	9N	6K	R106	20	iii l	R189	8G 6H	2K	R545	6E	6K
C538	5F	5L.	R108	26	111	R192	BJ	4L 2J	R547	5F	6K
C539	7F	5K	R109	28	1H	R193	9H	یے 3K	R548	5F	6K
C540	9M	. 3J	R114	2E	2H	R194	9H	2)	R549 R561	5G	6 K
C545	6E	6L	R115	3E	1H	R195	10.	3K	R566	5D	ВK
C547	5F	6K	R116	1C	2H	R202	5.1	žk	R567	5D 6D	5K
C561 C562	6D	6K	R117	3C	1H	R203	6.1	2K		9U	SL.
COOZ	5C	5K	B118	1C	2H	R204	5K	3K	U130	1G	1J
CR133	5H		R119	4C	1H	R206	4K	3L	U180	11G	3.1
CR136	3H	4L	R120	2F	2H	R207	7K	3L	U225	10N	1K
CR139	3H	1K 2J	R121 R122	3E 2F	111	R212	SL.	21.	U225	10N	1K
CR183	7H	4L	R124	2F	13	R213	8L	21.	U537A	6F	6K
CR186	8G	2K	R125	3F 2F	1J 2J	R215	5L	21.	U537B	5F	6K
CR189	8H	30	R126	2F	111	R216	4K	2K	U537C	5E	6K
CR265	86	9 <u>L</u>	R127	2G	2K	R217	6K	3K	U537D	5E	6K
CR266	3P	9K	R130	2G	ຂົນ	R218	4L	2K	U537	10M	6K
CR539	7E	5G	R131	3G	11	R219 R220	7L	эк	U540A	6G	5K
		· · · · · · · · · · · · · · · · · · ·	R132	6G	5L	R221	6N	91.	U540	10M	5K
J1	3E	1F	R133	5G	41	R222	4N 5L	9K	U560C	5C	5H
J2	5C	1E	R135	1G	2K	R223	SL 6L	2L	uma	. 1	
	I	1	R136	4G	1K	R225	8K	2L 1L	W30	18	1G
L321	3R	10K	R139	5H	4L	R226	8K	11.	W80	8B	3G
L322	7R	10L	R140	6H	3K	R232	6N	81	W224	5L	21.
I	1	1	R142	2./	IJ	R233	5M	8K	W224 W225	6L	21.
			R143	3H	2K	R235	5N	8K	W225 W225	5M	7K
P904	4R	10K	R144	214	1.)	R237	6P	11K	******	6M	7K
L									1	- 1	

ASSEMBLY A3

			·		·						
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
CR534 CR537 CR538	6A 6B 7B	28 28 28	R113 R123 R163 R173	2D 2E 10D 10E	18 18 1C 1C	\$545 \$550	5A 7A	2C 2B	W1 W2 W2	2D 5C 9D	4A 2A 2A

Partial A3 also shown on diagrams 1, 3, 4, 6 and 8.

TRIGGER DIAGRAM 3

	I	T	T	1	}	7		·			
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BO
C320	1K	3E	R303	20	28	R381	2F	3C	Can		1
C321	1J	5D	R304	2E	3C	R389	6C	26	R495 R496	71.	
C322	1H	58	R305	18	2C	R394	4M	4D	R497	7M	
C380	3G	4C	R306	18	2C	R395	314	4D	R498	8M 7M	1
C381	2F	30	R308	28	28	R396	3H	4C	R532	/M 4G	1
C387 C389	4C 58	2B 28	R309	20	2C	R400	6F	5C	R542	10	
C401	56 6G	28 5C	R310	1K	3E	R401	6G	5C	R543	38	
C402	1L	5C 8C	R311 R312	IJ	6D	R402	9F	58			
C408	8H	6B	R315	1H 5G	68	R403	9 G	6A	U300A	3E	
C418	6C	4B	R317	5G 5E	4E 4E	R404	9H	6A	U300B	10	
C431	8C	3B	R318	5H	3E	R405	8E	3B	U300C	20	
C450	2N	5C	R319	5F	3E 4E	R406 R407	8H	66	U300D	1C	
C481	7G	60	R320	ŠH	3E	R408	81 81	68	U300	2M	
C489	7.3	4C	R322	5F	4E	R409	&F	68	U304A	20	
C490	ᅄ	6A	R323	5G	4E	8410	8F	6B 6B	U304B	3E	
C495	7L.	6D	R325	3F	4D	R411	3E	3C	U304	2N	
C496	7M	6D	R326	3G	4E	R412	6E	4C	U310A U310B	4F 5F	
	1		R329	4F	5E	R413	70	4B	U3105		
CR300	1E	3D	R330	4H	5E	R414	70	48	U310D	4H 4G	
CR301	2E	2C	R331	51	3E	R415	60	48	U310E	5G	
CR302 CR319	2E	2C	R332	5M	2E	R416	70	4B	U310F	4G	
CR344	4G 4K	40	R333	en l	3E	R417	70	48	U310	1M	
CR348	2B	3D 28	R334	BL BL	2E	R418	6C	4B	U335A	الله	
CR349	28	28	R335	5K	3E	R419	9G	6A	U335B	5K	
CR381	5B	28	R336 R337	6K	3E	R426	8D	3B	U335C	4L	
CR417	70	48	R338	6L 6K	2E 2E	R427	80	38	U335D	4L	
CR431	ab	30	R339	3K	3D	R428	8D	3B	U335E	5L	- 1
CR450	3D	3C	R340	3L	3E	R429 R430	7C	38	U335F	4K	1
CR451	4D	3C	R343	51.	3D	R431	8C	4A .	U335	1M	4
CR452	48	38	R344	Ĩ.	3€	R432	9D	6C	U380A	3H	:
ı	1	1	R350	2K	3D	R433	9D	4B	U380B	3M	5
73	68	12B	R351	3.1	3D	R435	70	48 3C	U380C	31	3
1		į.	R352	21	3D	R441	4G	3E	U380D U380E	2.1	\$
Q370	4C	2A	R353	3.1	3D	R442	4G	3E	U415A	8D	3
0371	5C	2A	R354	2.1	3D	R443	5K	2E	U4158	70 7E	4
0400	7F	5B	R356	2H	4C	R444	5K	ž I	U415C	/E 2G	4
Q401 Q410	7G 2F	58	R357	2H	3C	R445	7C	58	U415D	7B	
0411	4C	3C	R358	21	30	R446	80	5A	U415E	90	1
Q412	5C	38 28	R359	2G	40	R450	4D	38	U425A	78	3
0415	70	48	R360 R361	2H	4C	R451	8E	4C	U425B	69	3
Q450	5L	2E	R362	3C 3D	38	R480	7G	5C	U425	2M	3
0451	5.1	3E	R363	3D	3C 3C	R481	7H	6B	U460A	8F	Ē
Q452	5H	4E	R364	48		R482	7H	5C	U460B	9F	
Q453	5E	4E	R366	4B	3B 3B	R483	7.1	5C	U460C	8G	Š
Q465	7E	3C	R367	4D	3B	R485	7.1	5C	U460D	8G	5
Q487	6K	6C	R368	40	3B	R486 R487	7K	6C	U460E	9G	5
C488	7K	5C	R369	50	38	R488	6K 7K	60	U460F	8F	5
Q489	7L	5D	R370	48	28	R489	aŭ l	60	U460	1N	5
Q490	88	3A	R371	5C	28	R490	7K	4C 6D	U480A	8L	5
	į	j	R372	40	28	R491	8K	4C	U480B	7M	5
R300	10	4K	R373	5C	28	R492	71.	8C	U480C	7H	5
R301	3C	4K	R374	58	28	R493	BL	ငိ	U480D U480	7J	5
R302	1B [2C	R380	2G	4C		W	~	U46U	2M	50


Partial A1 also shown on diagrams 2, 4, 5, 6, 7 and 8.

۸	SS	EN	BI	v	A-2

CIRCUIT	SCHEM	BOARD	CIRCUIT	SCHEM	BOARD	CIRCUIT	SCHEM	BOARD	CIRCUIT	SCHEM	BOARI
NUMBER	LOCATION	LOCATION	NUMBER	LOCATION	LOCATION	NUMBER	LOCATION	LOCATION	NUMBER	LOCATION	LOCATK
R428	7A	1F	W3	6A	4D				224-084		

Partial A3 also shown on diagrams 1, 2, 4, 6 and 8.

WAVEFORMS FOR DIAGRAM 4

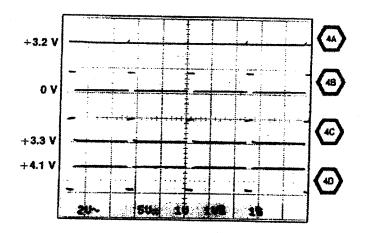

AC Waveforms for 4E through 4N


VOLTS/DIV


0.1 V

AC-GND-DC SEC/DIV AC 5μs

Input signal

4-division, 50 kHz reference sine wave

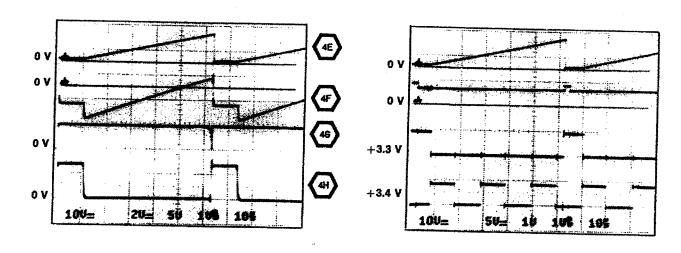

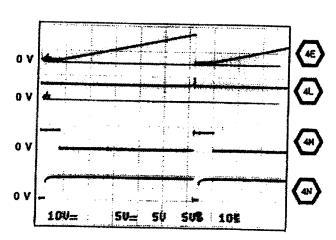

6716-31

9-14

WAVEFORMS FOR DIAGRAM 4

REPLACEABLE MECHANICAL PARTS

医毛术硬膜 有二数 医皮肤管

PARTS ORDERING INFORMATION

Replacement parts are available from or through your local Tektronix, Inc. Field Office or representative.

Changes to Tektronix instruments are sometimes made to accommodate improved components as they become available, and to give you the benefit of the latest circuit improvements developed in our engineering department. It is therefore important, when ordering parts, to include the following information in your order: Part number, instrument type or number, serial number, and modification number if applicable.

If a part you have ordered has been replaced with a new or improved part, your local Tektronix, Inc. Field Office or representative will contact you concerning any change in part number.

Change information, if any, is located at the rear of this manual.

ITEM NAME

In the Parts List, an item Name is separated from the description by a colon(:). Because of space limitations, an Item Name may sometimes appear as incomplete. For further Item Name identification, the U.S. Federal Cataloging Handbook H6-1 can be utilized where possible.

FIGURE AND INDEX NUMBERS

Items in this section are referenced by figure and index numbers to the illustrations.

INDENTATION SYSTEM

This mechanical parts list is indented to indicate item relationships. Following is an example of the indentation system used in the description column.

1 2 3 4 5

Name & Description

Assembly and/or Component Attaching parts for Assembly and/or Component

END ATTACHING PARTS

Detail Part of Assembly and/or Component Attaching parts for Detail Part

END ATTACHING PARTS

Parts of Detail Part Attaching parts for Parts of Detail Part

END ATTACHING PARTS

Attaching Parts always appear in the same indentation as the item it mounts, while the detail parts are indented to the right. Indented items are part of, and included with, the next higher indentation.

Attaching parts must be purchased separately, unless otherwise specified.

ABBREVIATIONS

Abbreviations conform to American National Standards Institute YI.I

CROSS INDEX - MFR. CODE NUMBER TO MANUFACTURER


lfr. Code	Manufacturer	Address	i a e-13	City, State, Zip Code
01536	TEXTRON INC CAMCAR DIV SEMS PRODUCTS UNIT RICHCO PLASTIC CO NELSON NAME PLATE CO FREENAY CORP AMPHENOL CADRE			ROCKFORD IL 61108
	CAMCAR DIV	1818 CHRISTINA ST		
	SEMS PRODUCTS UNIT			
06915	RICHCO PLASTIC CO	5825 N TRIPP AVE		CHICAGO IL 60646-6013
07416	NELSON NAME PLATE CO	3191 CASITAS		LOS ANGELES CA 90039-2410
12327	EDEFLIAY COOD	GROT ALLEN DE	19.754	CLEVELAND OH AA125-AG32
13511	AMPLEMO CAPPE	ODOL MEETIN DIC		INS GATOS CA
19311	MALINIA CARA	Caratta May 11 4		the partition of the state of t
	DIV DUNKEN KAPAJ LUKY	ARAM DET		DIOLEMAN IN ATOTA
16428	COOPER BELDEN ELECTRONIC WIRE AND CA	NW N SI		KICHMONU IN 4/3/4
	SUB OF COOPER INDUSTRIES INC			LOS GATOS CA RICHMOND IN 47374 RAYPORT NY 11705-1012
57771	STIMPSON CO INC	900 SYLVAN AVE		BAYPORT NY 11705-1012 PETALLMA CA 94952-1152 GENEVA IL 60134-3325
31935	SCHURTER INC	1016 CLEGG COURT	Note that the search	PETALUMA CA 94952-1152
70903	COOPER BELDEN ELECTRONICS WIRE AND C	2000 S BATAVIA AVE	5 . 5 . 25 8 8	GENEVA IL 60134-3325
	SUB OF COOPER INDUSTRIES INC		a transfer to	ST LOUIS MO 63178 COLD SPRING KY 41076-9749 DES PLAINES IL 60016-3049
1400	RUSSMANN	114 OLD STATE RD	ett de diet de die	ST LOUIS NO 63178
A 100	DIV OF COOPED THINKS TOTES THE	DO BOY 14460	Committee of the second	
3743	ETCCUED COECTAL MEG CO	111 THRUCTOIN DR	respect to the	COLD SPRING KY 41076-9749
	LITTER FIRST TAND	DOD C MODILECT IN		OCC MATER IL CONTO DOIO
75915	LITTELFUSE INC	BUU E MUKIMWESI MWY		NEQ LEWINES IF ONNTO-2048
	SUB TRACOR INC	9144 C		· was
78189	SUB TRACK INC ILLINOIS TOOL WORKS INC SHAKEPROOF DIV	ST CHARLES ROAD		ELGIN IL 60120
	SHAKEPROOF DIV		Menty to the Police	grander of the control of the contro
30009			A STATE OF THE STA	BEAVERTON OR 97077-0001
		PO ROX 500		The second secon
2330	LITCHMAN CODD THE	10 DOX 300		OAK PARK MI 48237-3103 TROY MI 48098
	WICKMAN CORP THE MICRODOT MFG INC	TOOKS CHELLYE WAS		TONY HI 40000
13385	MICROCOL MEG INC	SZZI W BIG BEAVER KU		IKUT MI 40030
	MICRODOT MFG INC GREER-CENTRAL DIV			ROCKFORD IL 61101 KEENE NH 03431-3628
3486				ROCKFORD IL 61101
36113	MICRODOT MFG INC	149 EMERALD ST		KEENE NH 03431-3628
	CENTRAL SCREW-KEENE DIV			
3907	TEXTRON INC.	600 18TH AVE		ROCKFORD IL 61108-5181
Till seem	CAMCAD DIV	This but to		
(1935	MICRODOT MFG INC CENTRAL SCREW-KEENE DIV TEXTRON INC CAMCAR DIV JERMYN DISTRIBUTION VESTRY ESTATE	OTENDO DOMO	Herman in the con-	KENT ENGLAND
(1993	UCTOV CCTATE	CENTROPEC	and the second	NEW FOREST CHILD
	VESIKI ESIAIE	SEACUNAVS	The second second	manman armining salising their shows that it is the
2504	KS COMPONENTS LTD	PU BUX 99		CORBY NORTHANTS NN17 9RS ENGLAND Summerset NJ 08873 PORTLAND OR 97211 PORTLAND OR 97217-3920
3109	p FELLER of the average of the first of the state of	72 Veronica Ave	percutation for	Summerset NJ 08873
	Element of the control of the second of the control	Unit 4		rojegich en chant bereit bereit det betreit de Caraty Derking b
K0174	BADGLEY MFG CO	1620 NE ARGYLE		PORTLAND OR 97211
K0433	PORTLAND SCREW CO	6520 N BASIN		PORTLAND OR 97217-3920
K0892	GEROME CORP	OLIVER PD		INTONTOUN PA 15041
1 TOWNE	CLISCA IL. CONT	DO DOV 1000		and be presented to the second
WALL	CADON FINE CERVITOR	10 11 CTATION CLOCE	3.37	LIEDTE ENGLAND
KOEC	PHENN END SEKATOE	TO-IT SIMITON CROSE		PORTLAND OR 97217 PORTLAND OR 97217 UNIONTOWN PA 15041 HERTS ENGLAND
KOEH	UNKTON SEKTINGS	HARLOW		ESSEX ENGLAND
	I + 2 ROYDONBURY IND EST			
	THE PINNACLES			
KOEJ	IMP WORKS	ESSEX ROAD		HERTS ENGLAND
· • • • • • • • • • • • • • • • • • • •		HODDESDON		The same of the same time
KOEL	MOLBRY LTD	HOLLAND WAY		DORSET ENGLAND
NUCL	PALONI LIV			DURDLI ENGLAND
	O. 1107 170 6 700.	BLANDFORD		CALCULA THE ALIE
Koeo	PLANET JIG & TOOL	BAKER STREET		BUCKS ENGLAND
		HIGH WYCOMBE		•
		BATH ROAD		WILTSHIRE ENGLAND
K0ES	SMALL POWER MACHINE CO			
K0ES		CHTPPFNHAM		
	INDUSTRIAL ESTATE	CHIPPENHAM CHADIUMONS BOAD		FAST GRINDSTFAR FNGLAND
	INDUSTRIAL ESTATE WARTH INTERNATIONAL	CHIPPENHAM CHARLWOODS ROAD		EAST GRINDSTEAD ENGLAND
K0ET	INDUSTRIAL ESTATE WARTH INTERNATIONAL CHARLWOODS BUSINESS CENTER	CHARLWOODS ROAD		
COET C1319	INDUSTRIAL ESTATE WARTH INTERNATIONAL CHARLWOODS BUSINESS CENTER MORELLIS Q & D PLASTICS	CHARLWOODS ROAD 1812 16-TH AVE		FOREST GROVE OR 97116
KOET K1319	INDUSTRIAL ESTATE WARTH INTERNATIONAL CHARLWOODS BUSINESS CENTER MORELLIS Q & D PLASTICS	CHARLWOODS ROAD		
K0ES K0ET K1319 K1336 K1373	INDUSTRIAL ESTATE WARTH INTERNATIONAL CHARLWOODS BUSINESS CENTER MORELLIS Q & D PLASTICS PARSONS MFG CORP	CHARLWOODS ROAD 1812 16-TH AVE		FOREST GROVE OR 97116

Fig. & Index	Tektronix	Serial/Assembly No.			Mfr.
No.	Part No.	Effective Dscont	Oty	12345 Name & Description	Code Mfr. Part No.
1-1	426-1765-02		1	FRAME,CRT:POLYCARBONATE,GRAY ATTACHING PARTS	TK2165 ORDER BY DESCR
-2	211-0690-01		2	SCREW,MACHINE:6-32 X 0.875 PNH,SST END ATTACHING PARTS	86113 ORDER BY DESCR
-3	337-2775-00		1	SHLD, IMPLOSION: FILTER, BLUE 2211/2213/2215	80009 337-2775-00
-4	348-0660-00		4	CUSHION, CRT: POLYURETHANE	80009 348-0660-00
-5	366-0636-00		5	KNOB:GRAY,10MM X 12MM H	TKOEJ ORDER BY DESCR
-6	384-1575-00		1	EXTENSION SHAFT: 8.805 L, W/KNOB, PLASTIC	80009 384-1575-00
-7	358-0550-00		1	BUSHING, SHAFT: 0.15 ID X 0.488 L, PLSTC	TK2165 ORDER BY DESCR
-8	366-1480-03		1	PUSH BUTTON:BLACK, OFF	80009 366-1480-03
-9	384-1364-00		1	EXTENSION SHAFT: 10.818 L X 0.187 SQ, NYL, BLK	TK2165 ORDER BY DESCR
-10	331-0498-00		2	DIAL,CONTROL:32MM X 3.75MM,MKD 1 THRU 50	TKOEJ ORDER BY DESCR
-11	210-1436-00		2	Washer, Flat: 9.4MM ID X 12.5MM OD X 2MM THK, ALUMINUM	TKOEL ORDER BY DESCR
-12	366-0640-00		3	KNOB:GRAY,CAL W/ARROW,10MM X 2MM X 12MM H DIAL,CONTROL:32MM X 3.75MM,MKD 2 X LINES	TKOES ORDER BY DESCR
-13	331-0499-00		1	DIAL, CONTROL: 32MM X 3.75MM, MKD 2 X LINES	TKOEJ ORDER BY DESCR
-14	366-0635-00		2	PUSH BUTTON: GRAY, 4.45MM X 7.75MM X	TKOEJ ORDER BY DESCR
-15			1	TERM, FEEDTHRU: (SEE J590 REPL)	
-16	also and 1996 are 1984 and also date from the term		3	CONN, RCPT, ELEC:BNC, FEMALE (SEE J100, J151, J300 REPL)	
-17	210-0255-00		3	TERMINAL, LUG: 0.391 ID, LOCKING, BRS CD PL	12327 ORDER BY DESCR
-18	386-5483-00		1	SUBPANEL, FRONT:	TKOEJ ORDER BY DESCR
-19	333-3565-00		1	PANEL, FRONT:	80009 333-3565-00
-20	334-7234-00		1	MARKER, IDENT: MARKED VOLTAGE/FUSE SELECT	80009 334-7234-00
-21	334-7088-00		1	MARKER, IDENT: MARKED CAUTION	80009 334-7088-00
-22	200-3335-01		1	COVER, REAR: ATTACHING PARTS	80009 200-3335-01
-23	211-0712-00		2	SCR,ASSEM WSHR:6-32 X 1.25, PNH, STL, TORX END ATTACHING PARTS	
-24	343-1278-00		2	RTNR, POWER CORD: POLYCARBONATE GRAY FOOT, REAR COVER: BLACK, PLASTIC	TK2165 ORDER BY DESCR
-25	348-0964-00		2	FOOT, REAR COVER: BLACK, PLASTIC	TKOEJ ORDER BY DESCR
-26	437-0370-01		1	ATTACHING PARTS	INDEU UNDER DI DESCR
-27	211-0730-00		4	SCR,ASSEM WSHR:6-32 X 0.375,PNH,STL CD PL, TORX T15 END ATTACHING PARTS	
-28	367-0356-00		1	HANDLE, CARRYING: ATTACHING PARTS	TKOEJ ORDER BY DESCR
-29	212-0144-00		2	SCREW,TPG,TF:8-16 X 0.562 L,PLASTITE,SPCL HD	93907 225-38131-012
				END ATTACHING PARTS	
-30	214-3984-00		2	SPRING, HLCPS: 0.71 OD X 12.0MM L, OPEN ENDS	TKOEH ORDER BY DESCR

Fig. & Index No.	Tektronix Part No.	Serial/Asse Effective		Qty	12345 Name & Description	Win. Gris	Mfr. Part No.	
2-1	441-1752-01			1	CHASSIS, SCOPE: FRONT	TKOEO	ORDER BY DESCR	
C_1	447_1\3C_01				ATTACHING PARTS			4
-2	211-0718-00	4 1 1		2	SCREW, MACHINE: 6-32 X 0.312, FLH, 100 DEG, STU		ORDER BY DESCR	
-2.1	213-0882-00			ī	SCREW, TPG, TR: 6-32 X 0.437 TAPTITE, PNH, STL			
					END ATTACHING PARTS			
-3	337-3397-00			1	SHIELD, ELEC: CH1, CH2 SEPARATION	TKOEO	ORDER BY DESCR	
-4	407-3714-00			1	BRKT, CRT SPRT: REAR	80009	407-3714-00	
					ATTACHING PARTS			
-5	211-0730-00			3	SCR, ASSEM WSHR: 6-32 X 0.375, PNH, STL CD PL,	80009	211-0730-00	
					TORX T15			
					END ATTACHING PARTS		A41	
-6	214-1061-06			1			214-1061-06	
-7	426-1766-00			1	MOUNT, RESILIENT: CRT, REAR	80009	426-1766-00	
-8		1.73		1			74 Table 1	
	the state of the s				(SEE A1P910 REPL)			
-9	337-3468-00		HK10499	1			337-3468-00	
	337-3468-01	HK10500		1	SHIELD, ELEC: 2205 MAGNETIC METAL		ORDER BY DESCR	
-10	334-1379-00			1	· · · · · · · · · · · · · · · · · · ·		ORDER BY DESCR	
-11	386-5360-00	* * *		1	SUPPORT, CKT_BD: POLYCARBONATE	IKUŁJ	ORDER BY DESCR	
	urithan i Mirty Lagan Sama Albara			1 Jan 1995 ***	ter trade and the contraction in	00000	211_0720_00	41
-12	211-0730-00			1		80009	211-0730-00	
	none mecanic				TORX T15	onnor	ARRES DV DECCD	
-12.1	213-0882-00			1	SCREW, TPG, TR:6-32 X 0.437 TAPTITE, PNH, STL	83385	ORDER BY DESCR	
			" " '		END ATTACHING PARTS			
-13	tena tena			1	CIRCUIT BD ASSY: TIMEBASE/ATTEN (SEE A2)			
		74. 4.7		_	ATTACHING PARTS	00000	211 0720 00	
-14	211-0730-00		39.1	4	SCR, ASSEM WSHR: 6-32 X 0.375, PNH, STL CD PL,	80009	211-0730-00	
					TORX T15 had all had a	70100	511-061800-00	
-15	210-0457-00			2	NUT, PL, ASSEM WA:6-32 X 0.312, STL CD PL	/8189	211-001900-00	
					END ATTACHING PARTS	TVACC	ORDER BY DESCR	
-16	376-0224-01 384-1714-00			1	CPLG, SHAFT, RGD:W/213-0153-00	80009		4
-17				. 1		00003	304-11/14-00	
-18	سحديش حششيت			1	CIRCUIT BD ASSY: FRONT PANEL (SEE A3 REPL)			
10	011 0205 60				ATTACHING PARTS	01536	ORDER BY DESCR	
-19	211-0305-00			6	SCR,ASSEM WSHR:4-40 X 0.437,PNH,STL,CD PL	01330	ORDER DI DESCR	
20	337-3365-00			1	SHIELD, ELEC: ATTENUATOR	TKOEO	ORDER BY DESCR	
-20	337-3303-00				ATTACHING PARTS	TTOLO	Original pri manant	
-21	211-0730-00			3	SCR, ASSEM WSHR: 6-32 X 0.375, PNH, STL CD PL,	80009	211-0730-00	
-21	211-0/30-00			5	TORX T15	50505		
					END ATTACHING PARTS		sart Matters	
-22	129-1105-00	1.74		2	SPACER, POST: 23.5MM L, 4-40 BOTH ENDS, AL, HEX	TKOEL	ORDER BY DESCR	
C.C.	129-1106-00			ī	SPACER, POST: 25.4MM L, W 6-32 THD THRU, BRASS		ORDER BY DESCR	
				-	6.3MM HEX CONTROL		1910 P. New York	
-23	211-0325-00			1	SCR, ASSEM WSHR: 4-40 X 0.25, PNH, STL, TORX T9	01536	ORDER BY DESCR	
-24	337-3364-01		ALTER E	Ž	SHIELD, ELEC: POWER SUPPLY	TKOEJ	ORDER BY DESCR	
-25				1	RES, VAR, NONWAY: (SEE R893 REPL)			
-26	384-1710-00	HK10100 H	K11183	ī	EXTENSION SHAFT: 13MM X 7MM OD, W/STEP, 4MM II		ORDER BY DESCR	
-27	441-1751-02			1	CHASSIS, SCOPE: INNER	80009	441-1751-02	
	,,, _,				ATTACHING PARTS			
-29	211-0730-00			2	SCR, ASSEM WSHR: 6-32 X 0.375, PNH, STL CD PL,	80009	211-0730-00	
					TORX T15			
					END ATTACHING PARTS			
-30				1	CIRCUIT BD ASSY: MAIN INPUT (SEE A4 REPL)			
					ATTACHING PARTS			
-31	211-0730-00			4	SCR, ASSEM WSHR: 6-32 X 0.375, PNH, STL CD PL,	80009	211-0730-00	
					TORX T15			
-32	211-0730-00			6	SCR, ASSEM WSHR:6-32 X 0.375, PNH, STL CD PL,	80009	211-0730-00	
					TORX T15			
-33	210-0457-00			2	NUT, PL, ASSEM WA:6-32 X 0.312, STL CD PL	78189	511-061800-00	
					END ATTACHING PARTS			
-34	337-3484-00			1	SHIELD, ELEC: MAINS INPUT		337-3484-00	
-35	358-0281-00			1	GROMMET, PLASTIC: BLACK U-SHAPED, 0.375 ID	TK1319		
-36	200-3647-00			1	CAP, FUSE: USE W/0.25 X 1.25 FUSE		345-101-020	
	200-3648-00			1	CAP, FUSE: USE W/5 X 20MM FUSE		345-121-020	
-37	352-0895-00			1	FUSEHOLDER: 15 A, 250V	75915	345-101-010	
-38				1	XFMR, PWR, STDN: (SEE T901 REPL)			
				-	ATTACHING PARTS			

Fig. & Index No.	Tektronix Part No.	Serial/A Effecti	ssembly No. ve Oscont	Qty	12345 Name & Description	Mfr. Code	Иfr. Part No.	: *4. ji
2-39	212-0093-00			4	SCREW.MACHINE:8-32 X 2.625, HEX HD, STL	83385	ORDER BY DESCR	25
-40	220-0555-00	HK10100	HK10499	4	NUT. PLAIN. HEX: 8-32 X 0.25 HEX, STL CD PL	TK0433	ORDER BY DESCR	
	210-0409-00		111111111111111111111111111111111111111	4	NUT, PLAIN, HEX:8-32 X 0.312, BRS CD PL		3046-402	
	210-0007-00	TREGUO	t Political		WASHER, LOCK: #8 EXT, 0. 02 THK, STL. END ATTACHING PARTS		1108-00-00-0541C	
-41	361-0561-00			4	SPACER, SLEEVE: 0.95 L X 0.218 ID, AL	80009	361-0561-00	
-42	بنشست سنيشت	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1	CIRCUIT BD ASSY:MAIN (SEE A1 REPL) ATTACHING PARTS			
-43	211-0730-00	NV.		5:	SCR, ASSEM WSHR: 6-32 X 0.375, PNH, STL CD PL, TORX T15	80009	211-0730-00	
-44	210-0457-00			5	NUT, PL, ASSEM WA: 6-32 X 0.312, STL CD PL	78189	511-061800-00	
-45	407-3539-00			1	BRACKET, HEAT SK: ALUMINUM	TKOEO	ORDER BY DESCR	
-46	211-0730-00			1	SCR, ASSEM WSHR: 6-32 X 0.375, PNH, STL CD PL,	80009	211-0730-00	
-47	213-0882-00			1	.SCREW, TPG, TR:6-32 X O.437 TAPTITE, PNH, STL	83385	ORDER BY DESCR	
-48				3 :	.TRANSISTOR: (SEE A10933, 0942, 0946 REPL)	* 5.4 * *		
-49	211-0305-00			3	.SCR, ASSEM WSHR: 4-40 X 0.437, PNH, STL, CD PL	01536	ORDER BY DESCR	
-50	210-0586-00				.NUT.PL,ASSEN WA:4-40 X D 25,STL CD PL END ATTACHING PARTS	78189	211-041800-00	
-51	342-0829-00		. 2484 1.	3	.INSULATOR, PLATE: TRANSISTOR, SIL-PAD	TKOET	ORDER BY DESCR	
	342-0804-00		(\$\$	3	.INSULATOR, WSHR: 5.6MM OD X 3.0MM ID X 1.6MM	80009	342-0804-00	
-52	214-4112-00			1	.HEAT SINK: ALUMINUM, 2205	80009	214-4112-00	
	warder ber		1 May 12		ATTACHING PARTS		- 44-0kg (d) - 1	
-53	211-0730-00			2	.SCR,ASSEM WSHR:6-32 X 0.375,PNH,STL CD PL,	80009	211-0730-00	
					TORX T15 END ATTACHING PARTS		afe filter i die	
-54	214-4039-00			4	.HEAT SINK,XSTR:TO-5,ALLMINUM	K1935	J25-1204	
-55	361-1435-00			4	.SPACER, XSTR: POLYPROPYLENE, TO-5	K2504		
-56	441-1830-00				CHASSIS, SCOPE: REAR, ALUMINUM ATTACHING PARTS	80009	441-1830-00	
-57	211-0718-00			2	END ATTACHING PARTS	83486	ORDER BY DESCR	
-58	134-0202-00			1	PLUG, BUTTON: STEEL	57771	D2587	
	33 4-7256-0 0		4. 4.	1	MARKER, IDENT: MARKED CAUTION	80009	334-7256-00	
	337-3384-00		Maria Series	7	(A10ID139) SHIELD, ELEC:	TKOEJ	ORDER BY DESCR	
	337-3385-00	. :0 =1 : :=====	Milen (a.v., Zern German), pilo	7	(A101D49) SHIELD, ELEC:	TKOEJ	ORDER BY DESCR	
	337-3422-00	e de la companya de l		3	(A1DID50) SHIELD, ELEC:	TKOEJ	ORDER BY DESCR	
	342-0803-00		ma www.	2	(A1010121) INSULATOR, WSHR: 6.4MM OD X 2.54MM ID X 4.5MM	80009	342-0803-00	
			of the State State of		THK, POLYPROPYLENE (A10ID111)	W. 1971		
	2 42	5, 47, 24			a Castro Borasa, in transition de la companya de l Castro de la companya			
					unit file transcer in Process (Alexander Community Com			

Fig. & Index No.	Tektronix Part Mo.	Serial/As: Effective		Qty	12345	Name & Description	Mfr. Code	
3-								
					S.	TANDARD ACCESSORIES		
	070-6717-00			1	MANUAL,	TECH: OPERATORS, 2205		9 070-6717-00
	103-0275-00			2		R,CONN:X1 SIGNAL		9 103-0275-00
	159-0121-00			1		ARTRIDGE:DIN, 0.4A, 250V, 5S		5 FSF034.1512
	159-0182-00			1		ARTRIOGE:5 X 20MM,0.5A,25		0 19200 .5A
	159-0032-00	HK10100	HK10499	1		ARTRIDGE:3AG,0.5A,250V,SL		0 MDL 1/2
-1	161-0104-00			1		SSY, PWR,:3 WIRE,98.0 L,W		8 CH8352, FH-8352
-2	343-0003-00			1		OOP: 0.25 ID, PLASTIC		5 E4 CLEAR ROUND 6 ORDER BY DESCR
-3	211-0721-00			1		MACHINE:6-32 X 0.375, PNH,		
-4	210-0803-00	18/10100	UK 10400	1		FLAT:0.15 ID X 0.375 OD X	X V.U32,51L 1232 8000	
	020-0859-00		HK10499	1		INT KIT:EUROPEAN INT KIT:EUROPEAN POWER CO		
5	020-1684-00	UKTOOOO		1 1		ASSY, PWR.:3 X 0.75MM SQ.		
~ ⊃	161-0104-06			1		N Al ONLY)	2207,30.0 L 3310	O GROEN D. DESCR
	020-0860-00	HK10100	HK10499	1		NT KIT:UNITED KINGDOM	8000	9 020-0860-00
•	020-1685-00			ĩ		NT KIT: UNITED KINGDOM PW	R CORD AS 8000	9 020-1685-00
-6	161-0104-07			1		ASSY, PWR, :3 X 0.75MM SQ,		73 A25UK-RA
					. (OPTIC	N A2 ONLY)		
	020-0861-00	HK10100	HK10499	1	COMPONE	NT KIT:AUSTRALIAN	8000	
	020-1686-00	HK10500		1		'NT KIT:AUSTRALIAN PWR COI		
-7	161-0104-05			1		ASSY, PWR, :3,18 AWG, 240V, 9	98.0 L S310	9 ORDER BY DESCR
						N A3 ONLY)	0000	0.000.0000.00
	020-0862-00		HK10499	1		NT KIT:NORTH AMERICAN	8000	
_	020-1687-00	HK10500		1		NT KIT:NORTH AMERICAN PWF		
-8	161-0104-08			1		ASSY, PWR,:3,18 AWG,240V,9	98.0 L 7090	3 ORDER BY DESCR
	020-0863-00	UK10100	HK10499	1	· ·	N A4 ONLY) NT KIT:SWISS	80008	9 020-0863-00
	020-1688-00		18/10422	1		NT KIT:SWISS POWER CORD A		
-9	161-0167-00	18(10300		1		ASSY, PWR, :3.0 X 0.75,6A,2		ORDER BY DESCR
•	101 0107 00			*		N AS ONLY)	,	
					•	·		
					EACH CO	MPONENT KIT CONTAINS THE	APPROPRIATE	
						ORD, 159-0032-00 FUSE CAR		
						3-00 LOOP CLAMP, 211-0721	-00 SCREW,	
					AND 210	-0803-00 WASHER.		
					OP	TIONAL ACCESSORIES		
	016-0180-00			1	VISOR_C	RT:FOLDING	TK210	55 ORDER BY DESCR
	016-0566-00			î	VISOR,C			55 ORDER BY DESCR
	016-0592-00			1	VISOR,C		TK210	55 ORDER BY DESCR
	016-0677-02			ī		CCESSORY:W/PLATE	TK017	74 016-0677-02
					(OPTION	02)		
	016-0785-00			1		RY KIT:MOUNTING,1107 TO 2		016-0785-00
	016-0792-01			1		RRYING: 24.5 X 16.5 X 11.5	TK133	36 ORDER BY DESCR
	nto 8010 11				(OPTION		0000	016-0010-02
	016-0819-02			1		, RACK: RACKMOUNT	80008	016-0819-02
	000 1514 00			,	(OPTION	•	80009	020-1514-00
	020-1514-00			1	ACCESSO			070-6716-00
	070-6716-00			1 1		TECH:SERVICE,2205 COPE:FRONT	80009	
	200-3397-00			1	(OPTION		3000	www. wo
	337-2775-01			1		PLOSION:	80009	337-2775-01
	our cird or			•	ra g 81 11		5555	***

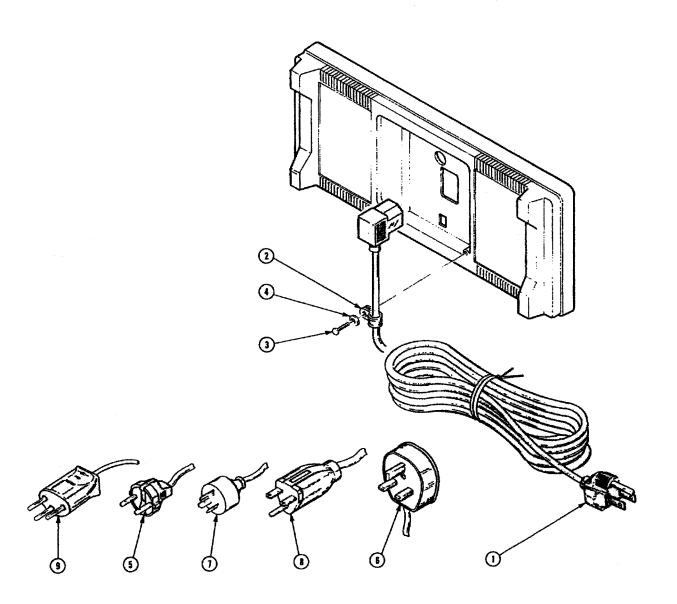



REVISION INFORMATION

Ivialitual Falt	NO. 0/0-6/16-00	rust runding	ADIII 1988

Product: 2205 Service Manual R	levised
--------------------------------	---------

Manual Insert Status

DATE	CHANGE REFERENCE	STATUS
MAY 8 1988	C1/0588	Effective
FEB 15 1989	M67537	Effective
FEB 20 1989	M67538	Effective
MAY 2 1989	M68110	Effective
JAN 20 1990	M67539	Effective
FEB 2 1990	C1/0290	Effective
MAR 20 1990	C2/0390	Effective
AUG 23 1991	M73789 (REV)	Effective
FEB 5 1992	C3/0292	Effective
JUL 23 1992	M77514	Effective
JUL 23 1992	M74107	Effective
FEB 10 1993	M75549 (REV)	Effective



MANUAL CHANGE INFORMATION

Date: ____5-5-88

Change Reference: _

C1/0588

Product: _

2205 SERVICE

Manual Part No.: .

070-6716-00

DESCRIPTION

Product Group 46

EFFECTIVE ALL SERIAL NUMBERS

DIAGRAM CHANGES

DIAGRAM 2 VERTICAL PREAMP & OUTPUT AMPLIFIER

Change the voltage for the "ON" condition at pin 3 of U225 (location 8K) to -5.0V.

DIAGRAM 5 SWEEP GENERATOR & HORIZONTAL AMPLIFIER

At the Collector of Q780 (location 3L) remove the voltage level of ± 14.4 V from the circuit. The correct voltage level is ± 6.2 V.

DIAGRAM 7 POWER SUPPLY, Z-AXIS, & CRT

At transistors Q941 and Q945 (location 7J) remove the connection shown between the Base and Emitter of each transistor.



MANUAL CHANGE INFORMATION

Date: 2-15-89

Change Reference:

M67537

Product: 2205 SERVICE

Manual Part Number:

070-6716-00

DESCRIPTION

Product Group 46

SEE BELOW FOR EFFECTIVE SERIAL NUMBERS:

REPLACEABLE ELECTRICAL PARTS LIST CHANGES

ADD:

A2CR14 A2CR64

151-0141-02 151-0141-02

HK10100 HK10100 SEMICOND DVC,DI: SW,SI,30V,150MA,30V,DO-35

SEMICOND DVC,DI: SW,SI,30V,150MA,30V,DO-35

REPLACEABLE MECHANICAL PARTS LIST CHANGES

CHANGE TO:

2-9

337-3468-01

HK10500


1 SHIELD, CRT:

DIAGRAM CHANGES



VERTICAL ATTENUATORS

Add diodes CR14 and CR64 to pins 2 and 3 of U30 and U80 respectively as shown with the partial schematics. Schematic locations are 2G and 6G.

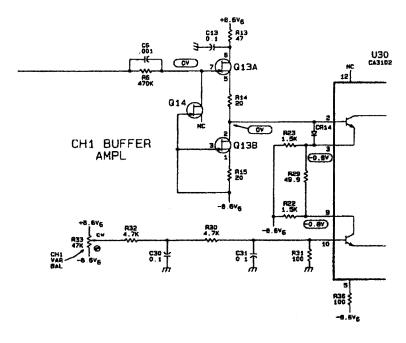

MANUAL CHANGE INFORMATION

Product: 2205 SERVICE

Date: 2-15-89

Change Reference: M67537


DESCRIPTION

Product Group 46

DIAGRAM CHANGES (cont)



VERTICAL ATTENUATORS (cont)

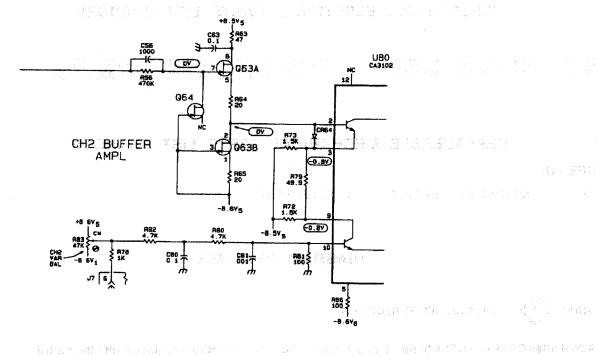



Date: <u>2-20-89</u>

Change Reference: ____

M67538

Product: 2205 SERVICE

Manual Part Number:

070-6716-00

DESCRIPTION

Product Group 46

EFFECTIVE SERIAL NUMBER: HK10500

REPLACEABLE MECHANICAL PARTS LIST CHANGES

CHANGE TO:

2-40

210-0409-00 HK10500

4 NUT, PLAIN, HEX: 8-32 X 0.312, BRS CD PL

STANDARD ACCESSORIES

Replace the power cord kits, Options A1 through A5 as follows:

	With:	.
	020-1684-00	(Option A1)
\longrightarrow	020-1685-00	(Option A2)
$\xrightarrow{\hspace*{1cm}}$	020-1686-00	(Option A3)
\longrightarrow	020-1687-00	(Option A4)
	020-1688-00	(Option A5)
		

The new power cord kits contain the following accessories:

a)	Appropriate Power Cord	
b)	159-0032-00	Fuse Cartridge
c)	343-0003-00	Loop Clamp
d)	211-0721-00	Screw
e)	210-0803-00	Washer

COTAMBURIA ENALEMANDO DE SEAS DE **LE LIBERTA DE LA COLLEGIA DEL COLLEGIA DE LA COLLEGIA DEL COLLEGIA**

unitaria de la composition della composition del

名中的水晶形容 一足長,在不過本門。[[本]]中 以底於海賊,亞德德內區 [[本]]中國中

通过的企业的企业。 1987年 - 1988年1977年 - 1987年 - 1988年 - 1987年 - 1

SERVERSENTE ELECTRONISTE

,我是我们的人,我们就是这个人,我们不是这个人的,我们就是这个人的。""我们是这个人,我们就是

	11 T. 14		
	Strikt B	en e	
, o magg			
		The second secon	
1911 - 14 Hulli	$\{ \{ \{ j_1 \}_{j_1 \in \mathcal{I}_{i_1}}^{(j_1)} \}_{j_1 \in \mathcal{I}_{i_1}}^{(j_1)} = \{ \{ j_1 \}_{j_1 \in \mathcal{I}_{i_1}}^{(j_1)} \}_{j_1 \in \mathcal{I}_{i_1}}^{(j_1)} = \{ j_1 \in \mathcal{I}_{i_1} \in $		
Athen Walley Ja	Note that I have been		유민 전 그는 역기

the saccept prompted of the remainstance prompted with

	far in	Alamangang Pales
gradia e geredi		
		The second second second
		enginatuajahennisti kabu



Date: <u>5-2-89</u>

Change Reference: _

M68110

Product: 2205 SERVICE

Manual Part Number:

070-6716-00

DESCRIPTION

Product Group 46

EFFECTIVE SERIAL NUMBER: HK11184

REPLACEABLE ELECTRICAL PARTS LIST CHANGES

(CHASSIS PARTS)

CHANGE TO:

R893

311-2444-00

RES, VAR, NONWW: TRMR, 2.2M OHM, 30%

REPLACEABLE MECHANICAL PARTS LIST CHANGES

REMOVE:

Fig. & Index	Part Number	Qty	Name & Description
2-26	384-1710-00	1	EXTENSION SHAFT: 13MM X 7MM OD,W/STEP,4MM ID

SEE TABLE DEED BORESEED DECISION

The first of the second of the

THE SECRETARY OF THE SE

The Control of the Co

的复数形式物理 计算用码 建铁铁矿 法共同分割 医腱管位性现代法

CONTRACTOR ATRACTOR STATE OF THE STATE OF TH

思想的最高知识。"1980年,是TREET 166. 自然展现了任何。全国各类是印象。如果理

A 1974 Constitute Mills Seed to the 1982 of the

The state of the s



Date: 01-20-90

Change Reference: _____

M67539

Product: 2205 SERVICE

Manual Part Number: ____070-6716-00

DESCRIPTION

Product Group 46

EFFECTIVE SERIAL NUMBER: HK10500

REPLACEABLE ELECTRICAL PARTS LIST CHANGES

CHANGE TO:

U940 U540 156-0366-00 156-0388-00 4013DUAL FLIP-FLOP

74LS74N DUAL FLIP-FLOP

REPLACEABLE MECHANICAL PARTS LIST CHANGES

REMOVE: Fig. &

Index	Part Number	Qty	Name & Description
	342-0804-00	3	
	211-0305-00	6	
ADD:			H _{all} the second section of the second section is a second section of the second section of the second section is a second section of the section of the second section of the section of the second section of the section o
	211-1178-00	3	Washer, shoulder: u/w TO-220 transistor
	211-0304-00	6	4-40 X .312, pan head, T9 torx

NOTE

To keep the vertical output transistors cool add a thin layer of thermal grease #249 thermalloy (006-2655-00) on the cases of vertical output translators Q236, Q237,Q238, Q239 and on both sides of the white washer which is part of (214-4039-00) that is shown as Item 54 in exploded view Fig.2 of the service manual.

EFFECTIVE SERIAL NUMBER: HK10700

A3 FRONT PANEL CIRCUIT BOARD ASSEMBLY

CHANGE TO:

C378

281-0767-00

CAPACITOR, 330 pF, 20%, 100V.



Date: __01-20-90 __ Change Reference: ____M67539

Product: 2205 SERVICE

Manual Part Number: ____070-6716-00

DESCRIPTION Product Group 46

DIAGRAM CHANGES



Change the value of capacitor C378 (location 8H) to 330 pF.

EFFECTIVE SERIAL NUMBER: HK11110 THE COURT CLOSE POSSET TRANSPORT

REPLACEABLE ELECTRICAL PARTS LIST CHANGES

DELETE:

L712	120-1631-00
L713	120-1631-00
L93	120-1631-00
L96	120-1631-00
E90	276-0752-00
E91	276-0752-00
E92	276-0752-00
E93	276-0752-00

CHANGE TO:

L93	R97	307-0106-00 RESISTOR, FIXED; 4.7 Ω, 5% 1/4W.
L96	R96	307-0106-00 RESISTOR, FIXED; 4.7 Ω, 5% 1/4W.
E90	R92	307-0106-00 RESISTOR, FIXED; 4.7 Ω, 5% 1/4W.
E91	R93	307-0106-00 RESISTOR, FIXED; 4.7 Ω, 5% 1/4W.
E92	R94	307-0106-00 RESISTOR, FIXED; 4.7 Ω, 5% 1/4W.
E93	R95	307-0106-00 RESISTOR, FIXED; 4.7 Ω, 5% 1/4W.
L712	W712	131-0566-03 DUMMY RESISTOR.
1713	W713	131_0566_03 DUMMY DECICTOR

FIG. 9-7

A2 TIMEBASE/ATTENUATOR BOARD.

CHANGE TO:

L712	W712 grid location (1C).
L713	W713 grid location (1C).
L93	R97 grid location (1B).
L96	R96 grid location (1C).
E90	R92 grid location (1A).
E91	R93 grid location (1B).
E92	R94 grid location (1A),
E93	R95 grid location (1B).



Date: 01-20-90

Change Reference: _

M67539

Product: 2205 SERVICE

Manual Part Number: _

070-6716-00

DESCRIPTION

Product Group 4

DIAGRAM CHANGES

DIAGRAM <

VERTICAL ATTENUATORS

Change the value and circuit number of L93 (location 7B) to R97 4.7 $\Omega_{\rm c}$


Change the value and circuit number of L96 (location 7B) to R96 4.7 Ω .

Change the value and circuit number of E90 (location 8B) to R92 4.7 $\Omega_{\rm c}$


Change the value and circuit number of E91 (location 7B) to R93 4.7 Ω .

Change the value and circuit number of E92 (location 8B) to R94 4.7 $\Omega_{\rm c}$

Change the value and circuit number of E93 (location 7B) to R95 4.7 $\Omega_{\rm c}$

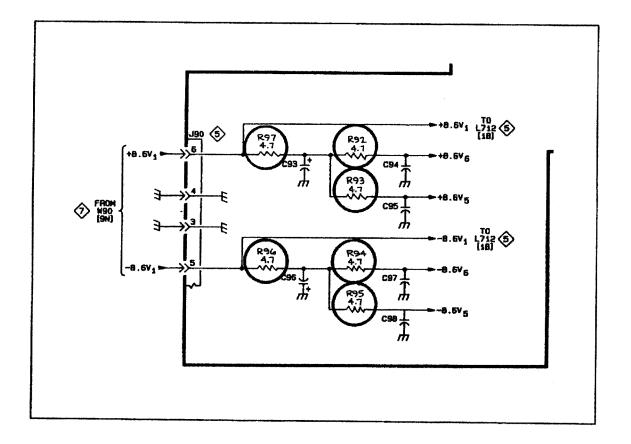



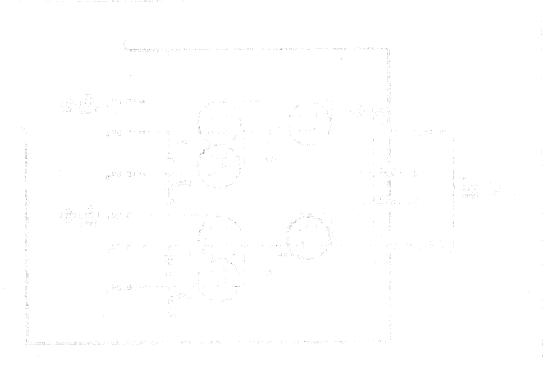



Date: 02-02-90

Change Reference: ___

C1/0290

Product: 2205 SERVICE

Manual Part Number: ____070-6716-00

DESCRIPTION

Product Group 46

SEE BELOW FOR EFFECTIVE SERIAL NUMBERS

Section 7 **OPTIONS AND ACCESSORIES**

Page 7-1.

Option 23

Two P6119 1X-10X

Selectable-attenuation

Probes

Page 7-2.

Option 23

Two P6119 1X-10X Selectable-attenuation Probes are provided in place of the standard P6103 10X Probes.

Page 7-3.

Table 7-2 **Optional Accessories**

Description	Part Number
Attenuator Voltage Probes	
10X Standard	P6103
10X Submininature	P6130
10X Environmental	P6008
1X-10X Selectable	P6119
100X High Voltage	P6009
1000X High Voltage	P6015

BENKAMBORS IDMARD GLARAM

Trabelle i ki

and the second of the second o

Saturate Section

PRESIDENT STREET STOLEN STREET STOLEN SER

Talbak akk ekkroda sak kubires

1 1 7 4 4 74

*

Same to the second

 $(M, s, n) \mapsto (M, s)$

under 1919 de 1918 <mark>Sektembre des</mark> un 1914 de des seus de 1915. Autorité de la substitute de 1916 de 1917 de 1918 de 1

T 6,050

er er er 1971 Omberger og det er bligter (1981) allet klædt

and the second second		The state of the s
		um cod spisky dokumika k
6,74		STEELENSKE BOOK
		octoramine Cater
1,000,014		with pulsaria and despto the fo
1,311,53		British Pringer Ar
		ppedito of plantifica
atta, etc.	4 11	tari e e drugë dijikë



Date: 3-20-90

Change Reference:

C2/0390

Product: 2205 OSCILLOSCOPE SERVICE

Manual Part Number: _

070-6716-00

DESCRIPTION

Product Group 46

EFFECTIVE SERIAL NUMBER: ALL

TEXT CHANGES

PAGE 1-4

CHANGE TO:

Table 1-1 (cont)

Characteristics		Performance Require	ments
Sweep Linearity	Mag	nified	
	X1	X10	
	±7%¹	± 10%²	
	¹ Linearity measu ² Linearity measu first 40 ns.	red over any 2 of the center a red over any 2 of the center 8	8 divisions. 8 divisions, excluding the

PAGE 4-6

CHANGE:

Step 1, parts d and h.

- d. CHECK—Timing accuracy is within 3% (0.24 division at the tenth vertical graticule line) and linearity is within 7% (0.14 division over any 2 of the center 8 divisions).
- h. Use the Horizontal POSITION controls to align the first time marker that is 40 ns beyond the start of the sweep with the second vertical graticule line.

PAGE 4-7

CHANGE:

Step 1, part i.

 CHECK—Timing accuracy is within 4% (0.32 division at the tenth vertical graticule line) and linearlty is within 10% (0.2 division over any 2 of the center 8 divisions). Exclude any portion of the sweep past the 50th magnified division.

PAGE 5-14

CHANGE:

Step 8, parts e, I, and j.

- e. CHECK—Timing accuracy is within 3% (0.24 division at the tenth vertical graticule line) and linearity is within 7% (0.14 division over any 2 of the center 8 divisions).
- Use the Horizontal POSITION controls to align the first time marker that is 40 ns beyond the start of the sweep with the second vertical graticule line.
- j. CHECK—Timing accuracy is within 4% (0.32 division at the tenth vertical graticule line) and linearity is within 10% (0.2 division over any 2 of the center 8 divisions). Exclude any portion of the sweep past the 50th magnified division.

DIA MEGNATUANDO HOTOBORA BEQUIDED TYPE ampare all parties and a second of the secon ingkur au 3--- #504 ingan elektronis in til en hindrig til i flytter some medlem de fill skiller for eller i en and phase on terminal water of the control of Element La Alberta A Light Constitution of the control of the control of the transfer of the control of the contro



Date: 8-23-91

Change Reference: _

M73789(Rev)

Product: 2205 SERVICE MANUAL

Manual Part Number: ___

070-6716-00

DESCRIPTION

Product Group 46

EFFECTIVE SERIAL NUMBER: HK54509 and HK12226

TEXT CHANGES

Page 4-2

Table 4-1

TEST EQUIPMENT REQUIRED

Auto Transformer

Load: 95 Vac to128 Vac. 40W (60 VA).

Adjust switching frequency of power supply Tecnipower® W10MT3W

PAGE 5-4

ADD:

Check/Adjust Switching Frequency (R998)

(The following steps must be performed at the beginning of the power supply adjustment procedure.)

- a. ADJUST-R998 (SW FREQ ADJ) fully counterclockwise. Set the LINE VOLTAGE SELECTOR switch to 115V.
- b. Connect the power cord from the auto transformer to the instrument. Turn the instrument power on.
- c. Increase auto transformer voltage to 128V. Allow at least 10 minutes warm up time before proceeding with the following adjustments and checks.
- d. Set up test oscilloscope:

VERTICAL MODE to CH1

CH1 to 1V/DIV (X10 probe) or 10V/DIV (X1 probe), DC Coupled

HORIZONTAL MODE to X1, 5µs/DIV

TRIGGER MODE to P-P AUTO, CH1 SOURCE

- e. Monitor the waveform at W951 via X1 or X10 probe. The period of the waveform will be approximately 3 divisions or 15us.
- f. ADJUST R998 (SW FREQ ADJ) until the period of the waveform is 4.8 divisions or 24 µs.
- g. CHECK—Period of the waveform is within 20 to 25µs (4.0 to 5.0 divisions) while the auto transformer voltage is adjusted through the range of 95 to 128V.
- h. Readjust R998, if necessary, to keep the period of the waveform within specification through the rated line voltage range.

REPLACEABLE ELECTRICAL PARTS LIST CHANGES

REMOVE:

A6CR992

A6VR989

A1C932 290-0806-00

CAP,FXD,ELCTLT:3.3UF, +75-10%,350VDC

ADD:

A6 671-2115-00

152-0141-02

152-0217-00

CIRCUIT BD ASSY:FREQUENCY STABILIZING CIRCUIT

A6C932 290-0806-00 CAP,FXD,ELCTLT:3.3UF, +75-10%,350VDC A6C993 290-1150-00 CAP,FXD,ELCTLT:15UF, + 50-10%,16VDC A6R996 315-0362-00 RES,FXD,FILM:3.6K OHM,5%,0.25W A6R997 315-0362-00 RES,FXD,FILM:3.6K OHM,5%,0.25W A6R998 311-2421-01

RES, VAR, NONWW:TRMR, 1K

DIODE, SIG: ULTRA FAST; 40V, 150MA, 4NS, 2PF, 1N4152

DIODE, ZENER: 8.2V, 5%, 0.4W; 1N756A FMLY

Page 1 of 2

Product: 2205 SERVICE Date: 8-23-91 Change Reference: M73789(Rev)

DESCRIPTION

Product Group 46

DIAGRAM CHANGES


DIAGRAM 7 POWER SUPPLY

Remove C932 (location 5E) and add A6 Frequency Stabilizing Circuit Board to power supply:

Connect J901-1 to + hole where C932 was previously installed.

Connect J901-2 to - hole (ground) where C932 was previously installed on A1.

Connect W301 to U930 pin 5 (location 7F).

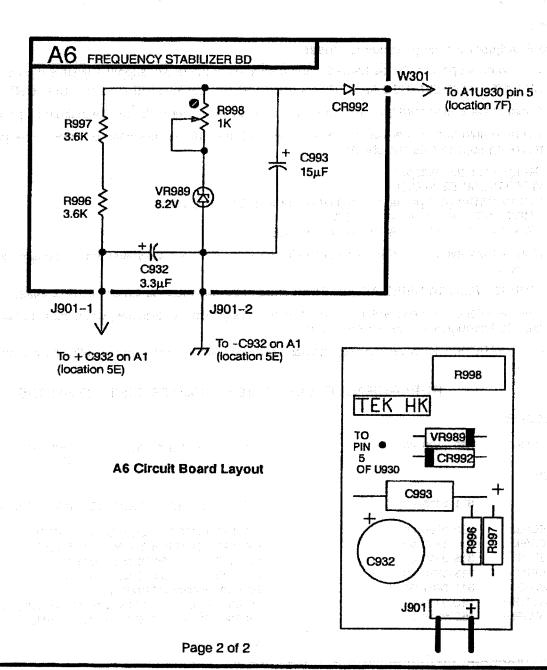



Date: 2-5-92 Change Reference: C3/0292

Product: 2205 SERVICE MANUAL

Manual Part Number: 070-6716-00

DESCRIPTION

Product Group 46

SEE BELOW FOR EFFECTIVE SERIAL NUMBERS

REPLACEABLE ELECTRICAL PARTS LIST CHANGES

CHANGE TO:

Comp.	Tektronix Part No.	Effective Serial Number	Description	Change Ref.
A1C584	285-1341-00	HK53916	CAP,FXD,PLASTIC,METALIZED FILM: 0.1 UF,20%,100V	M70965
A1R145	311-2363-00	HK58461	RES, VAR, NONWW: TRMR, 1K OHM, 0.5 W (NOMINAL)	M74371
A1R145	311-2364-00	HK58461	RES, VAR, NONWW: TRMR, 4.7K OHM, 0.5 W (TEST SELECTABLE)	M74371
A1R195	311-2363-00	HK58461	RES, VAR, NONWW: TRMR, 1K OHM, 0.5 W (NOMINAL)	M74371
A1R195	311-2364-00	HK58461	RES, VAR, NONWW: TRMR, 4.7K OHM, 0.5 W (TEST SELECTABLE)	M74371
A1R238	315-0513-00	HK51241	RES,FXD,FILM: 51K OHM,5%,0.25W	M69394
A1R245	315-0132-00	HK51241	RES,FXD,FILM: 1.3K OHM,5%,0.25W	M69394
A1R249	315-0513-00	HK51241	RES,FXD,FILM: 51K OHM,5%,0.25W	M69394
A1R250	315-0132-00	HK51241	RES,FXD,FILM: 1.3K OHM,5%,0.25W	M69394
A1R368	315-0112-00	HK51712	RES,FXD,FILM: 1.1K OHM,5%,0.25W	M70018
A1R432	315-0104-00	HK54142	RES,FXD,FILM: 100K OHM,5%,0.25W	M70967
A1R445	311-2470-00	HK52626	RES, VAR, NONWW: TRMR, 470K OHM, 0.5 W	M70276
A1R446	311-2470-00	HK52626	RES, VAR, NONWW: TRMR, 470K OHM, 0.5 W	M70276
A2R740	321-0270-00	HK51241	RES,FXD,FILM: 6.34K OHM,1%,0.125W	M70017


REPLACEABLE MECHANICAL PARTS LIST CHANGES

			JEE 111.2	. 62.71 40		
Fig. & Index No.	Tektronix Part No.	Serial Nu Effective	ımber Dscont.	Qty.	Description	i
0.1440	70-					
CHANGE	: 10:					
1-27	211-0730-00		HK51711	4	SCR,ASSEM WSHR: 6-32 X 0.375,PNH,STL	M70276
	211-0730-00	HK51712		2	SCR,ASSEM WSHR: 6-32 X 0.375,PNH,STL	M70276
1-27.1	213-0882-00	HK51712		2	SCR,TPG,TR: 6-32 X 0.437 TAPTITE,PNH,STL	M70276
Note	See the partial ill	ustration on t	ne following	page illu	ustrating the locations of the screws for Index No. $1-2$	7 and 1-27.1.
2-40	220-0555-00		HK53430	4	NUT,PLAIN,HEX: 8-32 X 0.25 HEX,STL CD PL	M70966
	210-0458-00	HK53431		4	NUT,PL,ASSEM,WA: 8-32 X 0.344,STL CD PL	M70966
	210-0007-00		HK53430	4	WASHER,LOCK: #8 EXT,0.02 THK,STL	M70966
ADD:						
2-39.1	210-0804-00	HK50001		4	WASHER, FLAT: 0.17 ID X 0.375 OD X 0.032 STL CE	M76496
Note	These four wash			on with t	the four screws (Index No. 2-39) that secure the tran	sformer to the

Product: 2205 SERVICE MANUAL Date: 2-5-92 Change Reference: C3/0292

DESCRIPTION

Product Group 46

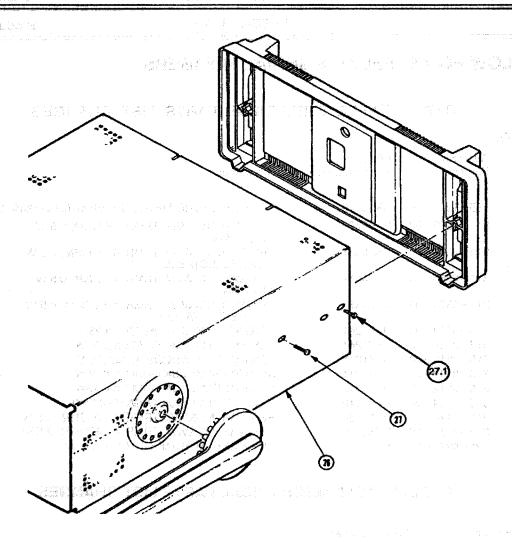

Books and

Partial Figure 2 Exploded View

Product: 2205 SERVICE MANUAL Change Reference: <u>C3/0292</u> Date: 2-5-92 DESCRIPTION Product Group 46 DIAGRAM CHANGES Effective Ref. Serial Number Number DIAGRAM **VERTICAL PREAMP & OUTPUT AMPLIFIER** HK51241 M69394 Change the value of resistor R245 (location 3P) to 1.3 k Ω . M69394 Change the value of resistor R238 (location 3P) to 51 k Ω . HK51241 M69394 Change the value of resistor R249 (location 8P) to 51 k Ω . HK51241 M69394 Change the value of resistor R250 (location 8P) to 1.3 k Ω . HK51241 M74371 Change the nominal value of variable resistor R145 (location 2J) to 1 k Ω . HK58461 M74371 Change the nominal value of variable resistor R195 (location 10J) to 1 k Ω . HK58461 **TRIGGER** DIAGRAM

Change the value of resistor R368 (location 4C) to 1.1 k Ω .

Change the value of variable resistor R445 (location 7C) to 470 kΩ.

Change the value of variable resistor R446 (location 8C) to 470 k Ω .

Change the value of resistor R740 (location 4E) to 6.34 kΩ. HK51241 M70017

HK51712

HK52626

HK52626

HK54142

M70018

M70276

M70276

M70967

gan en en	the second secon		
	i de la companya de l		
			TOWARD DISCUSSION OF SERVICES AND WAS INCIDENT.
			region with the area of the control
e de la composición dela composición de la composición de la composición dela composición dela composición dela composición de la composición de la composición de la composición dela composición de la composición dela c	12/16	· · · · · · · · · · · · · · · · · · ·	the control of the second control of the second
1.60(4.1)		en e	ing district the state of the s
15748713			
	Maria Carlo		The Art District Control of the Hardward Control of Egyptic
原外 [数]	#1 # 31 for 1		terner in a cinamina a sina daga menggalang
3000000		in the state of th	The Control of the Co
egan that the	Para San Control		Military benedeparted a sector of the equation of
TO A	AND STATE		eath na cair i ghathaga le cuir each eith ri air gcan a
	5.38音量[22]	gual (all the control of a control of the control	emente de la la companya de la comp
		होतुः : म _ा	PARTER SANCE TO ARREST ACTION OF A SANCE OF
	1.18 (1.20)	probability at a same	
			iledia.



Date: 7-23-92 Change Reference: M77514

Product: 2205 SERVICE MANUAL

Manual Part Number: ___

070-6716-00

DESCRIPTION

Product Group 46

EFFECTIVE SERIAL NUMBER: HK10001

REPLACEABLE ELECTRICAL PARTS LIST CHANGES

CHANGE TO:

F901

159-0301-00

FUSE, CARTRIDGE: 0.75A, 250V, SLOW BLOW

- 1、通过智能 ASCO 翻译 15 4 20 等间均隔降配

PREPARED TELL TERRET MONTERER ELEMENTAJNES



Date: 7-23-92 Change Reference: M74107

Product: 2205 SERVICE MANUAL

Manual Part Number: ___

070-6716-00

DESCRIPTION

Product Group 46

EFFECTIVE SERIAL NUMBER: HK61981

REPLACEABLE ELECTRICAL PARTS LIST CHANGES

CHANGE TO:

A4S901

260-1849-00

SWITCH, PUSH: DPDT, 4A, 250VAC

REPLACEABLE MECHANICAL PARTS LIST CHANGES

Fig &

Index No.

Part No.

Qty

NAME & DESCRIPTION

REMOVE:

2-

200-2735-00

1 COVER, POWER SW: BLACK, POLYCARBONATE

	A STORY CONTRACTOR	
		edisor film military, see an
man and the second of the seco		[1] All Control of the Control of
		· · · · · · · · · · · · · · · · · · ·
	H 58 (40, 180 G 5, 18 6, 18)	AURIS AND THE
		(277-75時中),(): -
	adi seng ili di	and the second s
		Bed Date of the
	alia i ng ngali ajasi.	
		## ## ## ## ## ## ## ## ## ## ## ## ##
		*
		9 4 8
		THE RESERVE OF THE PERSON OF T
		· · · · · · · · · · · · · · · · · · ·
		1. 18 to 1888
		· · · · · · · · · · · · · · · · · · ·

, and the contract of the contract of



Date: 2-10-93

Change Reference: M75549 (Rev)

Product: 2205 SERVICE MANUAL

Manual Part Number: ___

070-6716-00

DESCRIPTION

Product Group 46

EFFECTIVE SERIAL NUMBERS: HK58740 - HK61954

HK61981 - HK62321 HK62331 & Above

REPLACEABLE ELECTRICAL PARTS LIST CHANGES

CHANGE TO:

Comp.

Tektronix

Part No.

Description

A2S701

671-0390-01 260-2408-01 CIRCUIT BOARD ASSY: TIMEBASE/ATTEN

(INCLUDES A2R721)

REPLACEABLE MECHANICAL PARTS LIST CHANGES

Fig. &

Index No.

Tektronix

Part No.

Qty.

Description


REMOVE:

2-16 376-0224-01

384-1714-00

CPLG,SHAFT,RGDR: W/213-0153-00

EXTENSION SHAFT: 133MM L X 2MM OD, SST

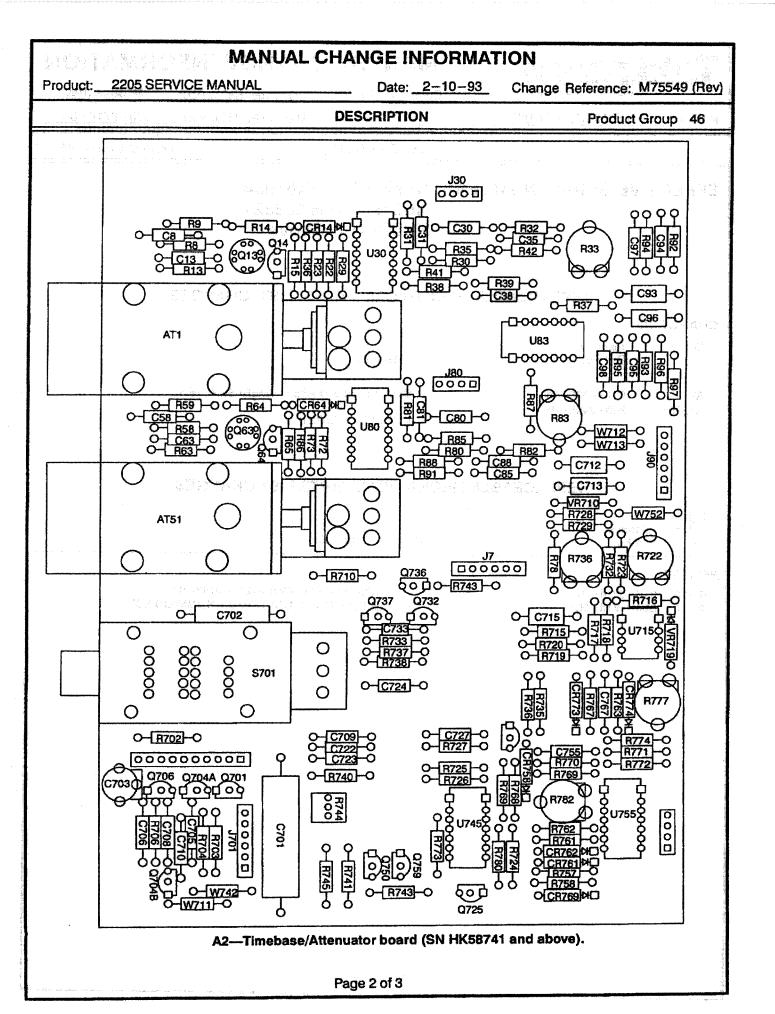

Product: 2205 SERVICE MANUAL

Date: 2-10-93

Change Reference: M75549 (Rev)

DESCRIPTION


Product Group 46

DIAGRAM CHANGES



SWEEP GENERATOR & HORIZONTAL AMPLIFIER

The new S701 has several modifications which require circuit wiring modifications. These changes are illustrated with the partial schematic below.

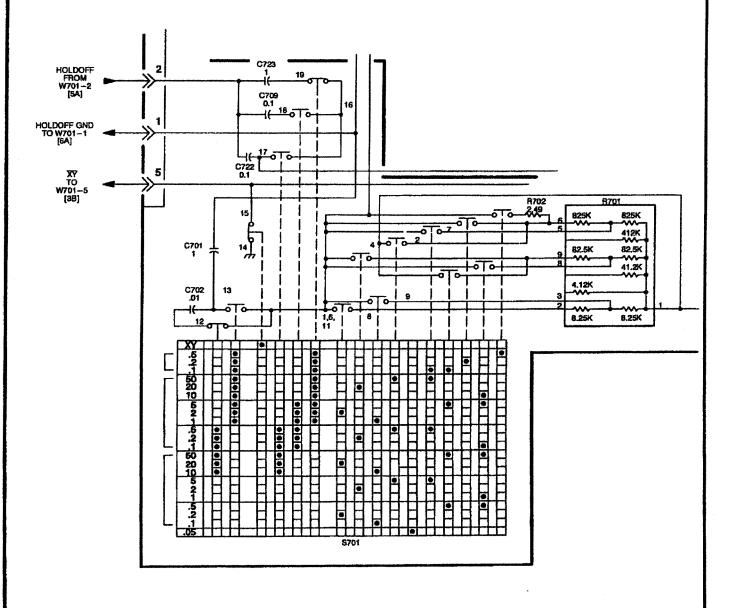


想塞对政策对任 使无知道的证据

Total Control of the					
Timer-vizuerama.					
H. ALBERTA	•				
anne de la company					
Harten					
Thomas is					
T					
1					
Mary and Mary and American					
The state of the s					
					energen communication construction

		William of the state of the sta
		- Transporter
		The state of the s
		Harris Ha
	-	

		Promonent
		minim (minima
		W

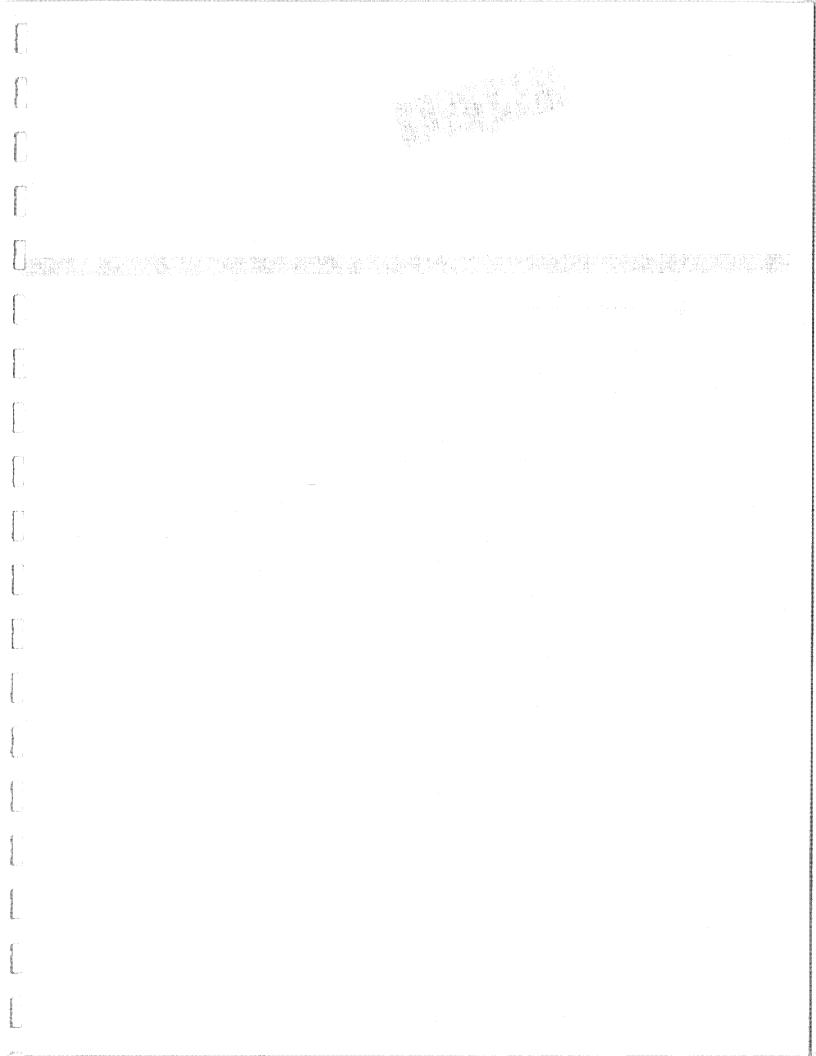



Printed on recyclable paper. Please recycle

DIAGRAMS AND CIRCUIT BOARD ILLUSTRATIONS

Graphic symbols and class designation letters are based on ANSI Standard Y32.2-1975.

Logic symbology is based on ANSI/IEEE 91-1984. Logic symbols depict the logic function performed and may differ from the manufacturer's data.

The overline on a signal name indicates that the signal performs its intended function when it is in the LO state.

Abbreviations are based on ANSI Y1.1-1972.

Other ANSI standards that are used in the preparation of diagrams by Tektronix, Inc., are:

Y14.15-1966 Y14.2M-1979 **Drafting Practices.**

Line Conventions and Lettering. ANSI/IEEE 280-1985 Letter Symbols for Quantities Used in Electrical Science and Electrical Engineering.

> American National Standards Institute 1430 Broadway New York, New York 10018

Component Values

Electrical components shown on the diagrams are in the following units unless noted otherwise:

Capacitors Values one or greater are in picofarads (pF). Values less than one are in microfarads (μ F).


Ohms (Ω) .


The information and special symbols below may appear in this manual.—

Assembly Numbers and Grid Coordinates

Each assembly in the instrument is assigned an assembly number (e.g., A20). The assembly number appears on the circuit board outline on the diagram, in the title for the circuit board component location illustration, and in the lookup table for the schematic diagram and corresponding component locator illustration. The Replaceable Electrical Parts list is arranged by assemblies in numerical sequence; the components are listed by component number *(see following illustration for constructing a component number).


The schematic diagram and circuit board component location illustration have grids. A lookup table with the grid coordinates is provided for ease of locating the component. Only the components illustrated on the facing diagram are listed in the lookup table. When more than one schematic diagram is used to illustrate the circuitry on a circuit board, the circuit board illustration may only appear opposite the first diagram on which it was illustrated; the lookup table will list the diagram number of other diagrams that the circuitry of the circuit board

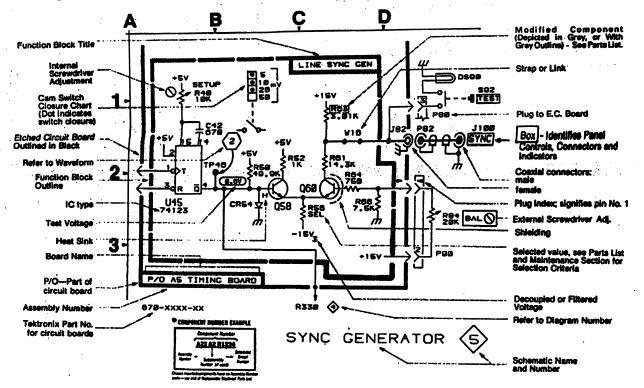

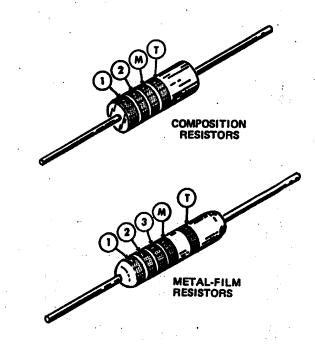

COLOR	SIGNIFICANT			
1	FIGURES	MULTIPLIER	TOLERANCE	
	·			
BLACK	0	1		
BROWN	1	10	±1%	
RED	2	10 ² or 100	±2%	
ORANGE	3	10 ³ or 1 K	±3%	
YELLOW	4	10 ⁴ or 10 K	±4%	
GREEN	5	10 ⁵ or 100 K	±%%	
BLUE	6	10 ⁶ or 1 M	±%%	
VIOLET	. 7		±1/10%	
GRAY	8			
WHITE	9			
GOLD	_	10 ⁻¹ or 0.1	±5%	
SILVER		10 ⁻² or 0.01	±10%	
NONE	-		±20%	

Figure 9-1. Color codes for resistors

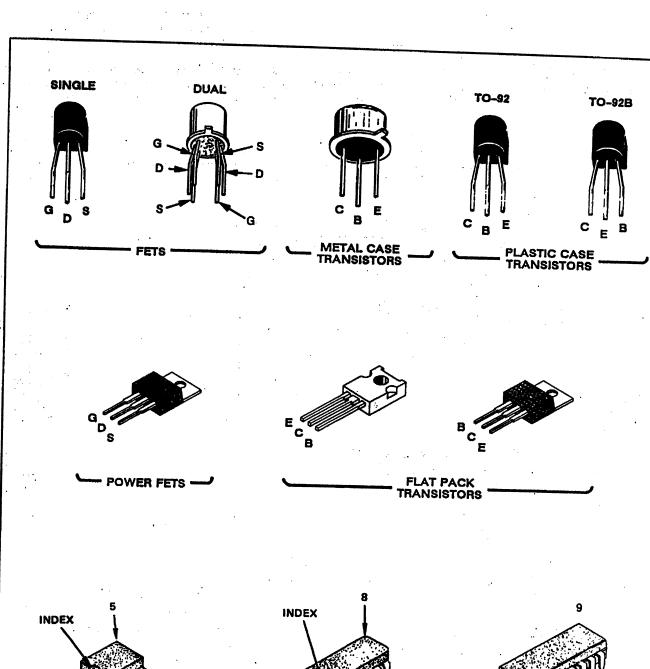

LEAD CONFIGURATIONS AND CASE STYLES ARE TYPICAL, BUT MAY VARY DUE TO VENDOR CHANGES OR INSTRUMENT MODIFICATIONS.

INTEGRATED CIRCUITS



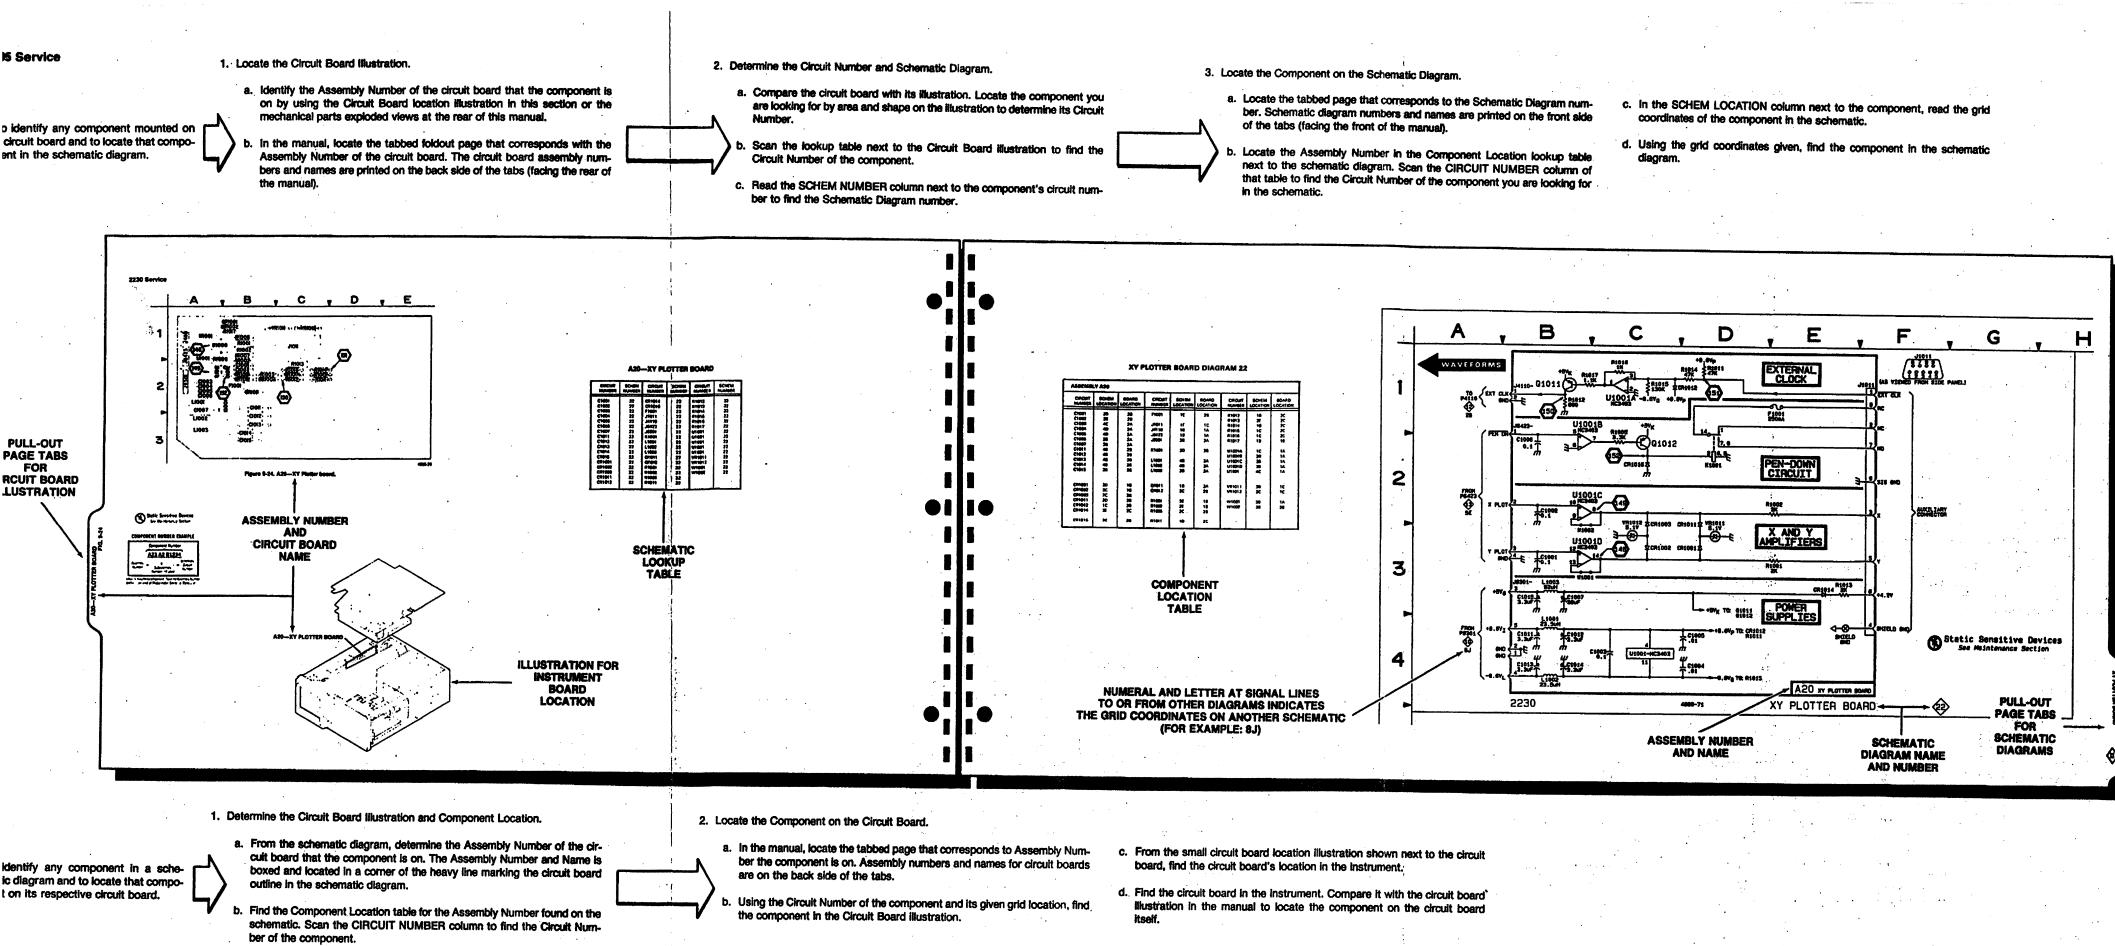


Figure 9-3. Locating components on schematic diagrams and circuit board illustrations.


c. Look in the BOARD LOCATION column next to the component number


and read its circuit board grid coordinates.

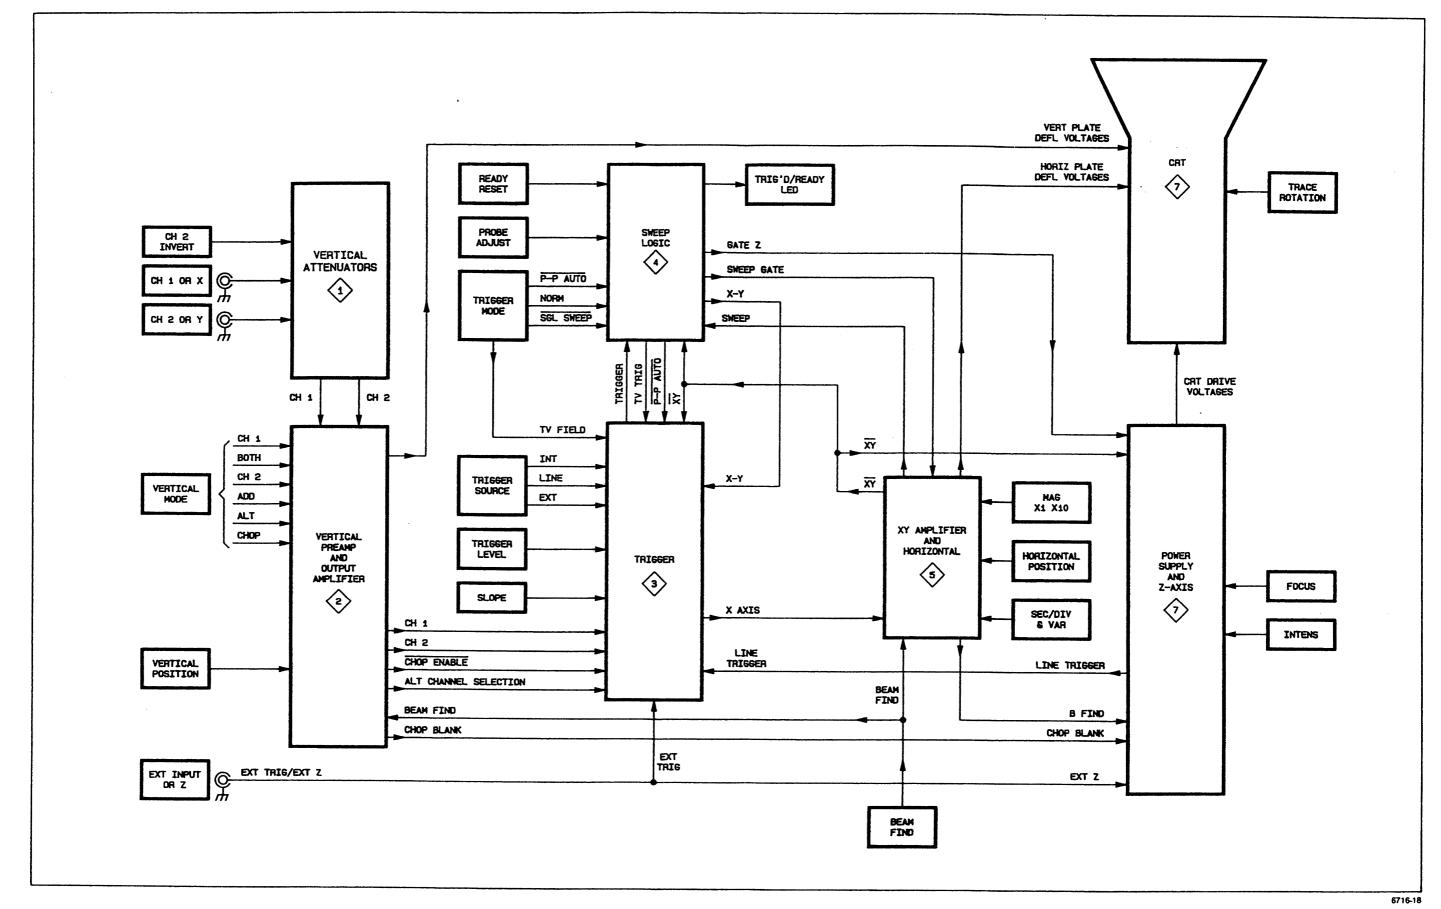

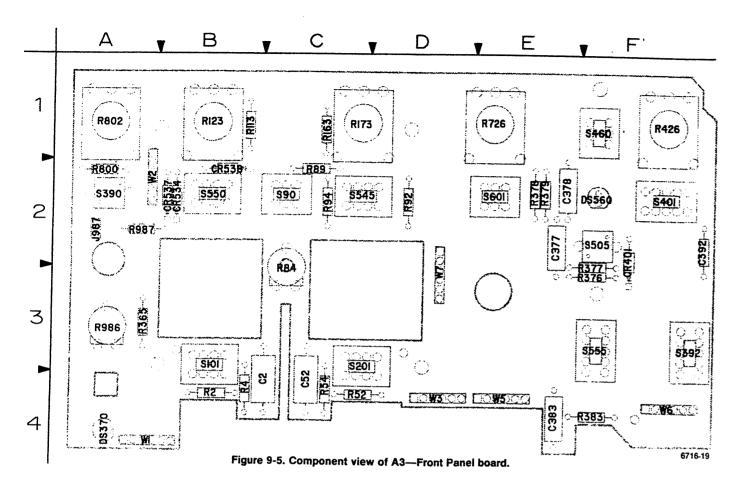

A3—FRONT PANEL BOARD						
CIRCUIT NUMBER	SCHEM NUMBER	CIRCUIT NUMBER	SCHEM NUMBER	CIRCUIT NUMBER	SCHEM NUMBER	
C2	1	R84	6	S101	6	
C2	6	R89	1	S201	1	
C52	1	R89	6	S201	6	
C52	6	R92	1 1	S390	6	
C377	6	R92	6	S392	6	
C378	6	R94	1	S401	6	
C383	6	R94	6	S460	6	
C392	6	R113	2	S505	4	
	1	R113	6	S505	6	
CR401	6	R123	2	S545	2	
CR534	2	R123	6	S545	6	
CR534	6	R163	2	S550	2	
CR537	2	R163	6	S550	6	
CR537	6	R173	2	S555	6	
CR538	2	R173	6	S601	6	
CR538	6	R365	6	555.	٥	
		R376	6	W1	2	
DS370	6	R377	6	Wi	4	
DS560	4	R378	6	W1	6	
DS560	6	R379	6	W2	2	
		R383	6	W2	6	
J987	6	R426	3	W3	3	
		R426	6	W3	6	
R2	1	R726	6	W3	8	
R2	6	R800	6	W5	4	
R4	1	R802	6	W5	6	
R4	6	R986	6	W6	4	
R52	1	R987	6	W6	6	
R52	6		-	W7	1	
R54	1	S90	1	W7	6	
R54	6	S90	6	"	٠	
R84	1	S101	i			

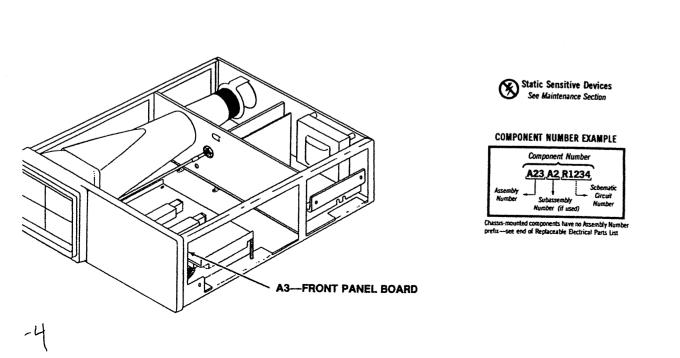

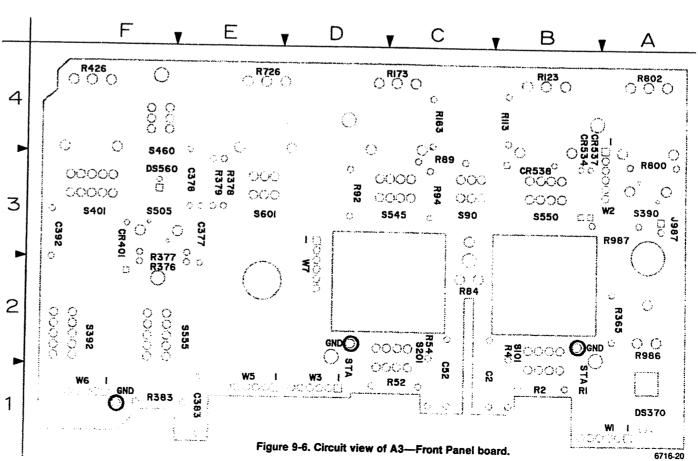

VOLTAGE/WAVEFORM SETUP CONDITIONS

WAVEFORMS

On the left-handed pages preceding the schematic diagrams are test waveform illustrations that are intended to aid in troubleshooting the instrument. To test the instrument for these waveforms, perform the Initial Measurements Setup procedure first. Changes to the Initial Measurement Setup are noted at the beginning of each set of waveforms.

DC VOLTAGES

Typical voltage measurements located on the schematic diagrams were obtained with the instrument operating under the conditions specified in the Initial Measurements Setup procedure. Controlsetting changes required for specific voltages are indicated on each waveform page. Voltage measurements are referenced to the chassis ground.

INITIAL MEASUREMENTS SETUP

To test the instrument for waveforms and voltages, set the initial control settings as follows:

Vertical (Both Channels)

POSITION	Midrange
MODE	CH 1, NORM
VOLTS/DIV	5 mV
VOLTS/DIV Variable	CAL detent
AC-GND-DC	GND

Horizontal

POSITION	Midrange
MAG	X1
SEC/DIV	0.2 ms
SEC/DIV Variable	CAL detent

Trigger

SLOPE	Positive (_/_)
MODE	P-P AUTO
SOURCE	VERT MODE

RECOMMENDED TEST EQUIPMENT

Test equipment in Table 4-1 in the Performance Check Procedure, Section 4, of this manual meets the required specifications for testing this instrument.


POWER SUPPLY ISOLATION PROCEDURE

Each regulated supply has numerous feed points to external loads through the instrument. Diagram 8, power distribution, is used in conjunction with the schematic diagrams to determine the service jumper or component that may be lifted to isolate loads from the power supply.

If a supply comes up after lifting one of the isolating jumpers, it is very probable that short exists in the circuitry on that supply line. By lifting jumpers or other components in the supply line farther down the line, the circuit in which a short exists may be located.

Always set the POWER switch to OFF before soldering or unsoldering service jumpers or other components and before attempting to measure component resistance values.

OTHER PARTS					
CIRCUIT NUMBER	SCHEM NUMBER	CIRCUIT NUMBER	SCHEM NUMBER	CIRCUIT NUMBER	SCHEM NUMBER
J100 J100 J151 J151 J300 J590	1 6 1 6 6	P902 P906 P910 R1 R1 R51	7 7 7 1 6	R51 R382 R983 T901 V900	6 6 7 7

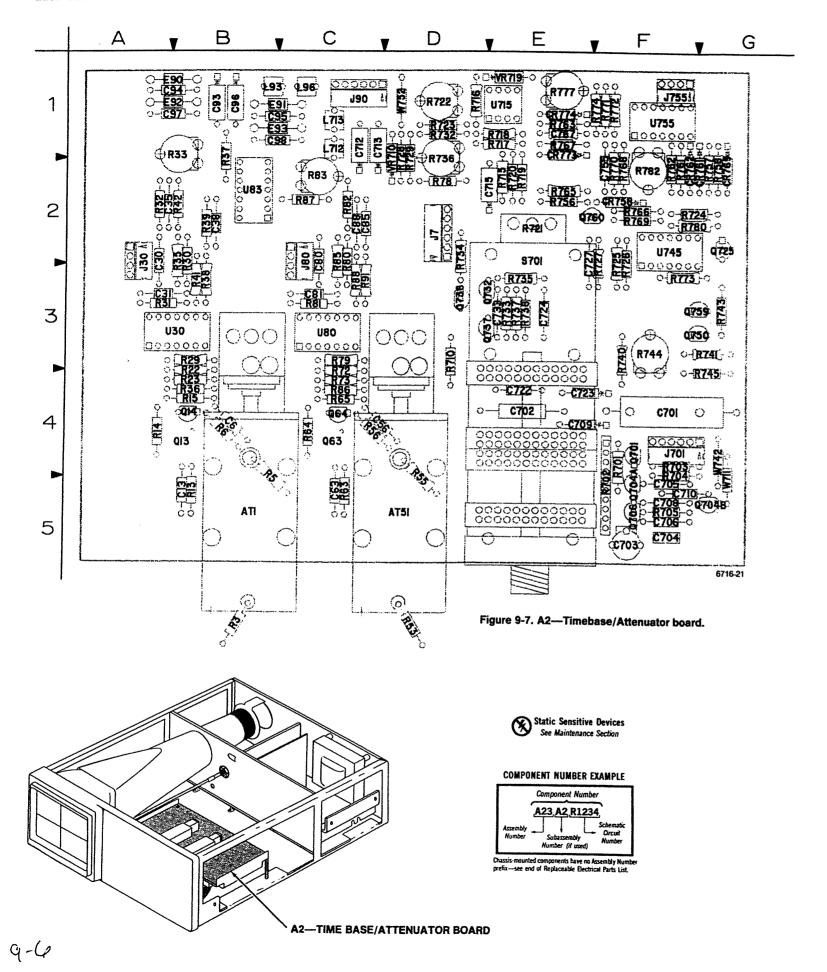



A2—TIMEB	ASE/ATTENUAT	OR BOARD
----------	--------------	----------

CIRCUIT NUMBER	SCHEM NUMBER	CIRCUIT NUMBER	SCHEM NUMBER	CIRCUIT	SCHEM NUMBER	CIRCUIT	SCHEM
AT1	1	E90	8	R30	1	R729	
AT1	6	E91	1	R31	;	R732	5
AT51	1	E91	8	R32	i	R733	
AT51	6	E92	1	R33	;	R734	5 5
		E92	8	R35	li	R735	5
C6	1	E93	1	R36	li	R736	5
C13	1	E93	8	R37	li	R737	5
C30	1		l	R38	1	R738	5
C31	1	J7	1	R39	1	R740	5
C35	1	J7	5	R41	1	R741	5
C38	1	J7	6	R42	1	R743	5 5
C56	1	J30	1	R53	1	R744	5
C63	1	J80	1	R53	6	R745	5
C80	1	J90	1	R55	1	R756	5
C81 C85	1	J90	5	R56	1	R757	5
C85 C88	1	J90	8	RES	1	R758	5
C93	1	J701	5	R64	1	R761	5
C93	1	J755	5	R65	1	R762	5
C95	1		_	R72	1	R763	5
C95	1	L93	1	R73	1	R765	5
C97	1	L96	T	R78	1	R766	5
C97	1	L712	5	R79	1	R767	5
C701	1	L712	8	R80	1	R768	5
C701	5	L713	5	R81	1	R769	5
C702	5 5	L713	8	R82	1	R770	5
C703	5	010		R83	1	R771	5
C704	5	Q13 Q14	1	R85	1	R772	5
C705	5	Q63	1	R86	1	R773	5
C708	5	Q64	1 1	R87	1	R774	5
C709	5	Q701	5	R88	1	R777	5
C710	5	Q704	5	R91 R701	1	R780	5
C712	5	Q706	5	R702	5	R782	5
C713	5	Q725	5	R702	5		_
C715	5	Q732	5	R704	5 5	S701	5
C722	5	Q736	5	R705			_
C723	5	Q737	5	R710	5 5	U30 U80	1
C724	5	Q750	5	R715	5	U83	1
C727	5	Q759	5	R716	5	U715	1 5
C733	5	Q760	5	R717	5	U745	5 5
C755	5	1	- 1	R718	5	U755	5
C767	5	R3	1	R719	5	0/35	5
	 	R3	6	R720	5	VR710	5
CR758	5	R5	1	R721	5	VR719	5
CR761	5	R6 .	1	R722	5	******	3
CR762	5	R13	1	R723	5	W711	5
CR769	5	R14	1	R724	5	W742	5
CR773	5	R15	1 1	R725	5	W752	5
CR774	5	R22	1	R726	5		•
	l	R23	1	R727	5	-	
E90	1	R29	1	R728	5	1	

VERTICAL ATTENUATORS DIAGRAM 1


ASSEM	BLY A2										
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION									
AT1 AT51	1D 4D	58 5D	E91 E92 E93	7C 7C 8C	1C 18 1B	R13 R14 R15	1F 2F	58 4A	R85 R72	6F 6F	40 40
C6	1E	4B		~	15	R22	2F 3F	4B 48	R73 R78	5F 6E	4C 2D
C13 C30	1F	68	57	7E	2D	R23	2F	4B	R79	6F	3C
C31	3E 3F	2A 3A	J7 J30	8G 1L	2D 2A	R29 R30	2F 3F	3B 28	R80 R81	6F 6G	2C
C35	4H	2A	J80	5L	20	R31	3F	3A	R82	8E	3C 2C
C38	41	28	Jeo	7B	10	R32	3E	2A	R83	80	20
C56 · C63	4E 4F	4D 5C	Les	7B	1B	R33	3D 4G	1B	R85	7G	20
CSO	6E	20	L96	78	10	R36	4G	2B 4B	R86 R87	7G 6H	4C 2C
C81	6F	3C	1			R37	3H	18	R88	73	30
C85 C88	7G	2C	Q13A	1F	4B	R38	41	38	R91	7H	3C
C93	8J 7B	2C 1B	Q13B Q14	2F 2E	4B 4B	R39 R41	4J 4H	28			
C94	70	l iB	CBSA	5F	40	R42	4F1 4G	3B 2B	U30 U80	1G 5G	3B 3C
, C95	70	10	Q63B	5F	40	R53	5C	5D	UBSA	511	28
C96	8B 8C	1B 1B	Q64 .	5E	4C	R55		4D	U83B	5H	2B
COS	8C	1 10	R3	20	5B	R56 R63	- 5E 4F	4C 5C	U83C U83D	2H 2H	28
			R5	20	4B	R64	5F	2 C	UBSE	2H 4K	28 28
E90	70	1B	· R6	2E	4B	1			1	""	-
Pertial A2 a		agrams 5, 6 and	18.						4.		
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT	SCHEM LOCATION	BOARD LOCATION	CIRCUIT	SCHEM	BOARD LOCATION
C2 C52	28 58	. 4C	R52	5B	4C	R92	. 8F	20	\$101	20	3B
COZ.	38	- C	R54 R84	6B 8E	4C 3C	R94	7F	20	\$201	5C	30
R2	2B	48	R89	7F	20	S90	8E	20	W7	7F	3D
R4	28	48				l i	-				
Partial A3 al	so shown on di	agrams 2, 3, 4, 6	and 8.						· .		
CHASSI	S MOUNTE	D PARTS									
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION									
J100	2A	CHASSIS	J151	- 5A	CHASSIS	R1	2B	CHASSIS	R51	58	CHASSIS

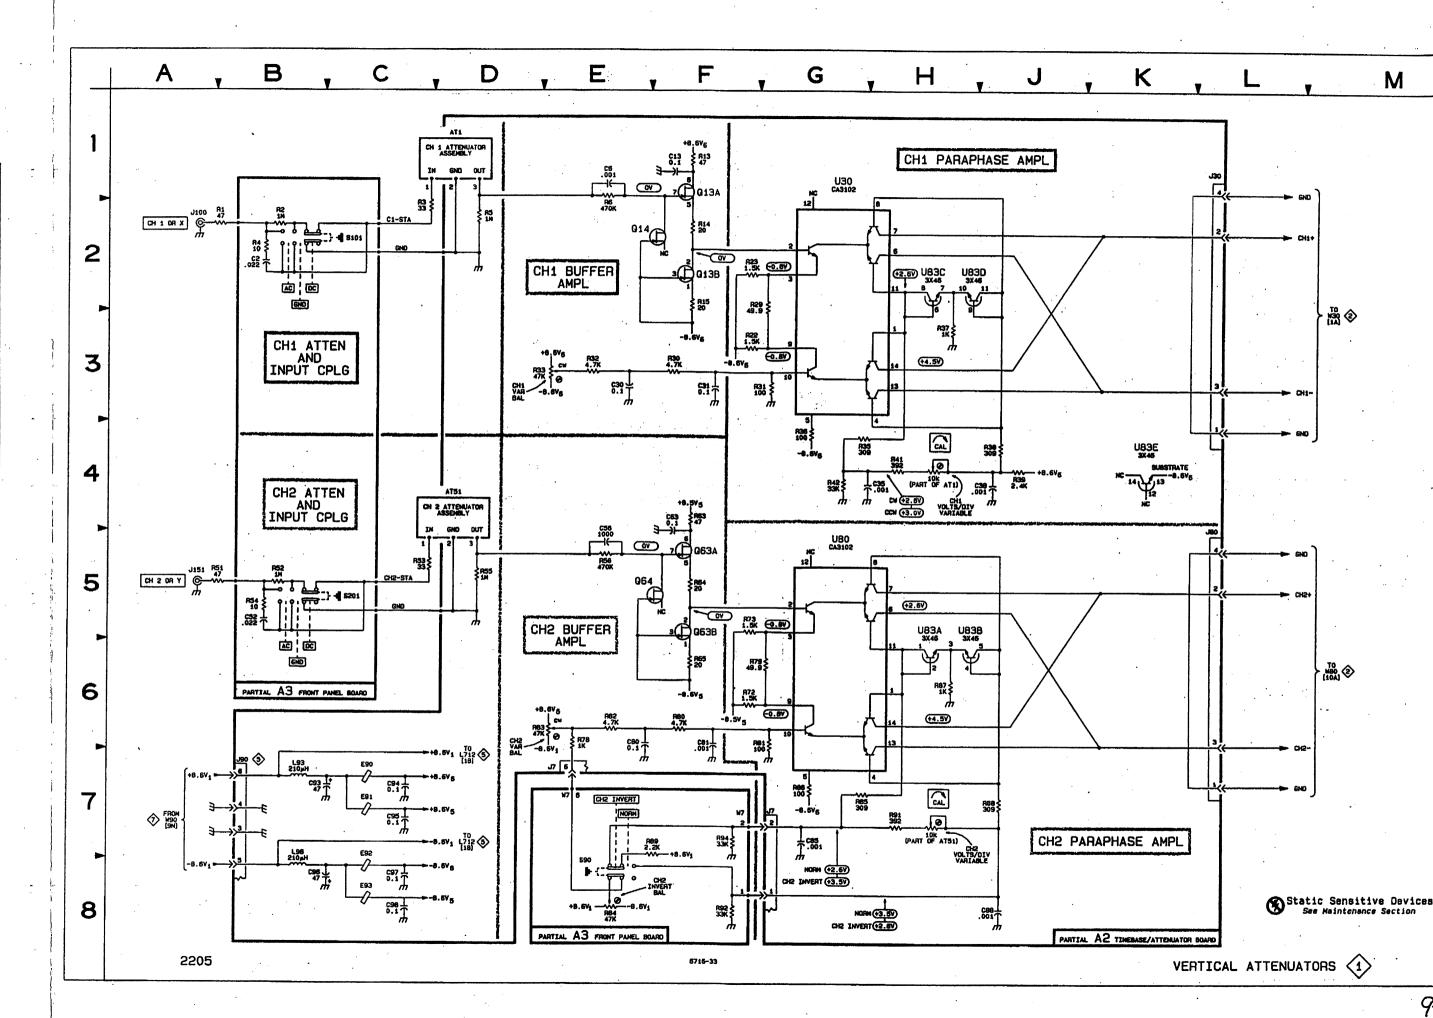

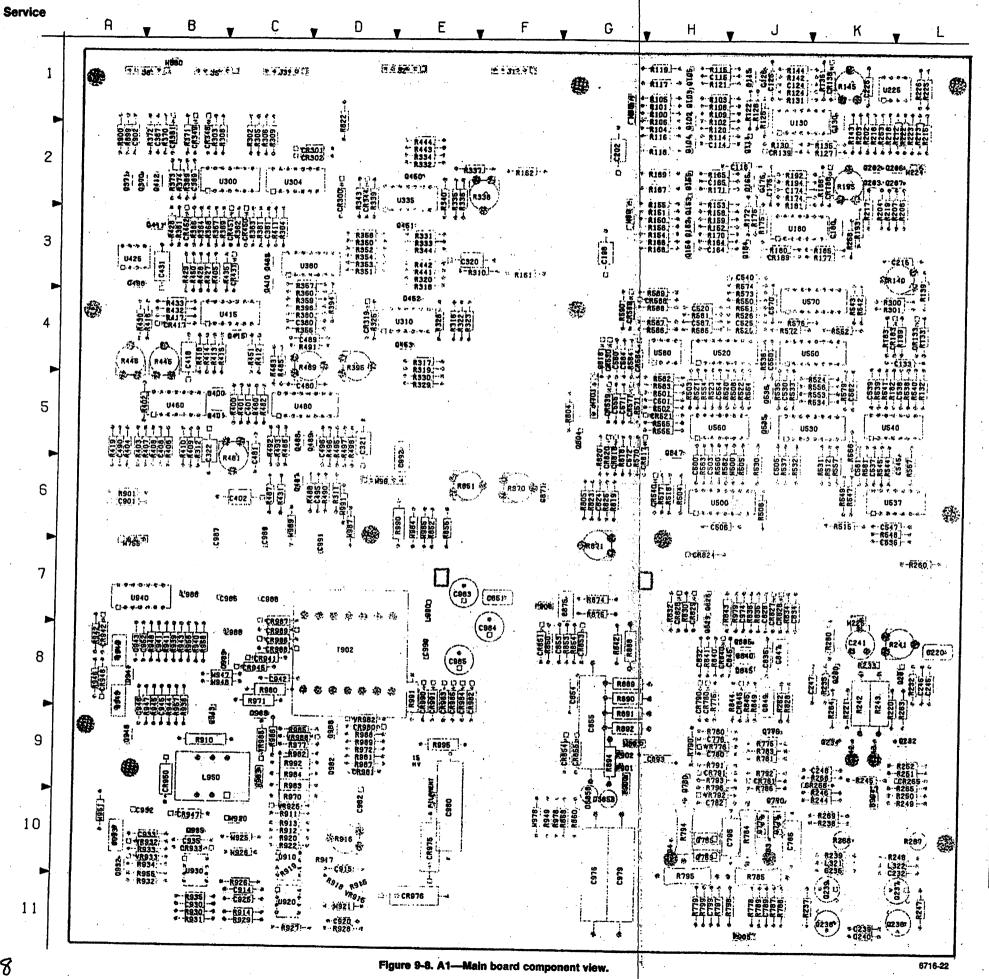



Assembly Subassembly Number Subassembly Humber (if used) Chestis-mounted components have no Assembly Number

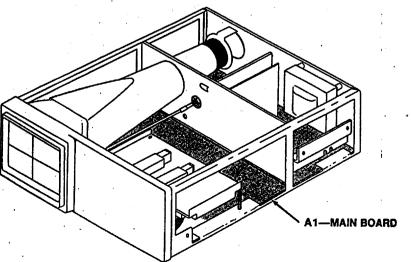


A1-MAIN BOARD

CIRCUIT NUMBER	SCHEM NUMBER	CIRCUIT NUMBER	SCHEM NUMBER	CIRCUIT NUMBER	SCHEM NUMBER	CIRCUIT	SCHEM NUMBER	CIRCUIT	SCHEM NUMBER	CIRCUIT	SCHEM NUMBER
C114	2	C794	5	CR781	5	Q165	2	R126	2	R246	
C115	2	C795	5 .	CR790	5	Q202	2	R127	2	R247	2
C116	2 .	C799	5	CR791	5	Q203	2	R130	2.	R248	2 2
C124	2	C824	7	CR817	7	Q206	2	R131	2	R249	2
C125 C126	2 2	C828	7	CR818	7	Q207	2	R132	2	R250	ا ءَ
C130	2	C832 C834	7 7 .	CR820	7	Q230	2	R133	2	R251	2
C133	2	C835	7	CR824 CR825	7	Q231	2 .	R135	2	R252	2
C164	2	C845	7	CR827	7 7	Q232 Q234	2	R136	2	R253	2
C165	2	C847	7	CR828	;	Q236	2 2	R139 R140	2	R258	2
C174	2	C849	7	CR829	1 7	Q237	2	R142	2 2	R260 R260	2
C175	2	C851	. 7	CR840	7	Q238	2	R143	2	R262	8 5
C176 C180	2	C853	7	CR845	7	Q239	2 .	R144	2	R263	2
C198	2	C854 C855	7	CR851	7	Q370	3	R145	2	R264	Ž
C202	2	C871	7	CR853 CR854	7 7	Q371	3	R150	2	R265	2
C215	2	C875	7	CR855	7	Q400 Q401	3	R151	2	R266	2 ·
C220	2	C893	7	CR933	7	Q410	3	R152 R153	2	R267	2
C225	2	C901	7	CR941	. 7	Q411	3	R154	. 2	R268	2
C232	2	C902	7	CR942	7	Q412	3	R155	2	R269 R280	2
C235	2	C914	7.	CR945	7	Q415	3	R156	2	R300	2 3
C239	2	C915	7	CR946	7	Q450	3	R158	2	R301	3
C240 C241	2	C920	7	CR947	7	Q451	3	R159	2	R302	3
C241	2 2	C925 C930	7	CR950	7	Q452	3	R161	2	R303	3
C243	2	C930 C932	7 7	CR975 CR976	7	Q453	3	R161	8	R304	3
C245	2	C933	7	CR980	7	Q465	3	R162	2	R305	3
C246	Ž į	C935	7	CR981	7	Q487 Q488	3	R162	8	R306	3
C247	2	C941	7	CR982	7	Q488 Q489	3	R164 R165	2	R308	3
C248	2	C942	7	CR983	, ,	Q499	3	R166	2 2	R309	3
C320	3	C943	7	CR984	7	Q535	.4	R167	2	R310 R310	3 °
C321	3	C945	7	CR985	7	Q536	4	R168	2	R311	3
C322	3	C946	7	CR986	7	Q770	5	R169	2	R311	8
C380 C381	3 3	C952	. 7	CR987	. 7	Q775	5	R170	2	R312	3
C387	3	C974 C976	7	CR988	7	Q776	5	R171	2	R312	8
C389	3	C979	7 7	CR989 CR990	7	Q779	5	R172	2	R316	3
C401	· š	C980	, ' l	CR991	7	Q780 Q785	5	R174	2	R317	3
C402	3	C982	7		' !	Q789	5 5	R175 R176	2	R318	3
C40B	3	C983	7	DS856	7	Q804	7	R177	2 2	R319 R320	3
C418	3	C984	7	DS858	7	Q817	, i	R180	2	R320	3
C431	3	C985	. 7		[Q818	7	R181	2	R323	3
C480	3	C986	7	Ji .	2	Q825	7	R182	2	R325	3
C481 C489	3	C987	7	11	4	Q829	7	R183	2	R326	3 1
C489 C490	3 3	C988 C989	7	7	6	Q835	7	R185	2	R329	3
C495	3	C990	7 7	J2 J2	2	Q840	7	R186	2	R330	3
C496	3	C991	. 7	J2 J3	6 3	Q845 Q932	7 7	R189	2	R331	3.
C500	4	C992	, j	ži	6	Q933	7	R192 R193	2 2	R332	3
C501	41			J3	8	Q935	. 7	R194	2 2	R333 R334	3 3
C503	4	CR133	2	J5	4	Q939	7	R195	ž	R335	3
C505	4 1	CR136	2	J5	6	Q941	7	R202	2	R336	3
C506 C520	4 1	CR139	2	J6	4	Q942	7	R203	2	R337	3
2525	4 1	CR183	2	J6	6	Q943	7	R204	2	R338	3
2530	- 1	CR186 CR189	2	1201	. 1	Q945	7	R206	2	R339	3
2536	2	CR265	2 2	L321 L322	2 2	Q946	?	R207	2 .	R340	3
5537	2	CR266	. 2	L950	7	Q982 Q985	7 7	R212	2	R343	3
538	2	CR300	3	L986	7	Q988	7	R213 R215	2	R344	. 3
2539	2	CR301	3	L988	7	2000	′	R216	2 2	R350 R351	3
2540	2	CR302	3	L990	7	R100	2	R217	2	R352	3
545	2	CR319	3		· 1	R101	2	R218	2	R353	3
2547	2	CR344	3	P900	7	R102	. 2	R219	2	R354	
550	4 1	CR348	3	P901	7	R103	. 2	R220	2	R356	3 3
S554	4 1	CR349	3	P902	7	R104	2	R221	2	R357	3
3555 560	1 1	CR381	3	P903	7	R105	2	R222 .	2	R358 .	3
2560 2561	4	CR417	3	P904	2	R106	2	R223	2	R359	. 3
562	2 2	CR431 CR450	3	P905	5	R108	2	R225	2	R360	3
2570	1	CH450 CR451	3 3	Q102	_ 1	R109	. 2	R226	2	R361	3
571		CR452	3	Q102 Q103	2 2	R114	2	R232	2	R362	3
572	7 1	CR521	4	Q104	2 2	R115	2	R233	2	R363	'3
584	4	CR530	- 1	Q105	2	R116 R117	2 2	R235	2	R364	3
:587 ·	4	CR539	2	Q114	2	R117	2 2	R237 R238	2	R366	3
776	5	CR540	4 1	Q115	2	R119	2	R238	2 2	R367 R368	3
780	5	CR571	4 1	Q152	2	R120	2	R241	2 2	R369	3 3
782	5	CR584	4 1	Q153	2	R121	2 .	R242	2	R370	3 3
783	5	CR588	4	Q154	2	R122	2	R243	2	R371	3
785	5	CR589 CR780	4	Q155	2 2	R124	2	R244	2	R372	3
789				Q164		R125	2	R245	2		

A1-MAIN BOARD (cont)

				. A1-	-MAIN D	o) anno	oirt)				
CIRCUIT NUMBER	SCHEM NUMBER	CIRCUIT NUMBER	SCHEM NUMBER	CIRCUIT NUMBER	SCHEM NUMBER	CIRCUIT NUMBER	SCHEM NUMBER	CIRCUIT NUMBER	SCHEM NUMBER	CIRCUIT NUMBER	SCHEM NUMBER
R374	3	R491	3	R562	4	R830	7	R936	7	U540	2
R380	3	R492	3	R563	4	R832	7	R939	7	U540	4
R381	3	R493	3	R564	4	R834	7	R940	7	U550	- 4
R389	3	R495	3	R565	4	R835	7	R941	7	U560	2
R394	3	R496	3	R566	2	R836	7	R942	7	U560	4
: R395	. 3	R497	3	R567	2	R840	7	R943	7	U570	4
R396	3	R498	3	R570	4	R841	7	R944	7	U580	1 1
R400	3	R501	4	R571	1 4	R842	7	R945	7	U910	7
R401	3	R502	4	R572	1 !	R843	7	R946	7	U920	7 7
R402	3	R503	4	R573	1 :	R844	7	R947 R948	7 7	U930 U940	7
R403	3	R504	4	R574	1 :	R845 R849	7 7	R949	7	0940	1 '
R404	3	R505	4	R576	1 :	R850	. 7	R955	7	VR776	5
R405	3	R506	4	R579	1 :	R851	7	R956	1 . 7	VR792	5
R406	3	R508	4	R581 R582	1	R852	7	R957	7	VR915	7
R407	3	R512 R515	4	R583	1 :	R853	7	R958	1 7	VR925	7
R408	3	R517		R584	1 7	R854	1 7	R970	1 7	VR932	7
R409 R410	3	R518	1 4	R585	1 7	R855	7	R971	1 7	VR933	7
R411	3	R520	1 4	R586		R858	1 7	R972	1 7	VR962	7
R412	3	R521	1 7	R587	1 7	R860	7	R977	7	VR985	7
R413	3 .	R522	1 7	R588	1 I	R870	1 7	R978	1 7	VR988	7
R414	3	R523	1 4	R589	1 1	R871	7	R979	7		1
R415	3	R524	1 7	R590	1 7	R874	7	R980	7	W30	2
R416	3	R525	1 4	R775	5	R875	7	R981	7	wao :	2
R417	3	R528	1 4	R776	5	R888	7	R982	7	W90	7
R418	3	R530	1 4	R778	5 /	R889	7	R983	7	W90	l a
R419	š	R531	4	R779	5	R890	7	R984	7	W224	2
R426	3	R532	3	R780	5	F1891	7	R985	7	W225	2
R427	3	R532	1 4	R781	5	R892	7	R986	7	W500	4
R428	3	R533	4	R783	5	R894	7	R967	. 7	W590	4
R429	3	R534	4	R784	5	R899	7	R988	7	W701	4
R430	3	R535	4	R785	5	R900	7	R989	7	W755	5
R431 .	3	R536	4	R786	5	R901	7	R990	7	W893	7
R431	8	R537	4	R787	5	R910	7	R991	7	W903	7
R432	3	R538	2	R788	5	R911	7	R992	7	W920	7
R433	3	R539	2	R789	5 '	R912	7	R995	7	W921	7
R435	3	R540	2	R790	5	R913	7			W925	7
R441	3	R541	2	R791	5	R914	7	T902	7	W926	7
R442	3	R542	3	R792	5	R915	7	i		W947	7
R443	3	R543	3	R793	5	R916	7	U130	2	W948	7.
R444	3	R544	2	R794	5	R917	7	U180	2	W951	7
R445	3	R545	2	R795	5	R918	<u> 7</u>	U225	2	W976	7
R445	3 .	R547	2	R796	5	R919	7	U300	3	W984	7
R450	3	R548 R549	2	R797 R798	5 5	R920 R922	7 7	U304 U310	3 3	W984	8 7
R451	3	R549 R550	2	R798 R799	5	R922 R926	7	U310 U335	3 3	W985	',
R480	3	H550 R551		R804	7	H925 R927	7	U335 U380	3	W987 W987	8
R481 R482	3	R552	;	R805	+	R928	1 7	U415	3	W989	7
R483	3.	R553	;	R818	1 7	R929	1 7	U425	3	W989	l á
R485	3	R554	1 7	R819	1 7	R930	1 7	U460	3	W991	
R486	3	R555		R820	1 7	R931	7	U480	3	W991	Ŕ
R487	3	R556	1	R822	7	R932	7.	U500	1 4	1 """	ľ
R488	3	R557	1 4	R823	7	R933	'7'	U520	1 4		1
R489	3	R560	1	R825	1 7	R934	1 7	U530	1 7	1	1
R490	3	R561	2	R828	5	R935	,	U537	2		l
.1700	•	,,,,,,	•	11020			'	1 550	, -	ł	l

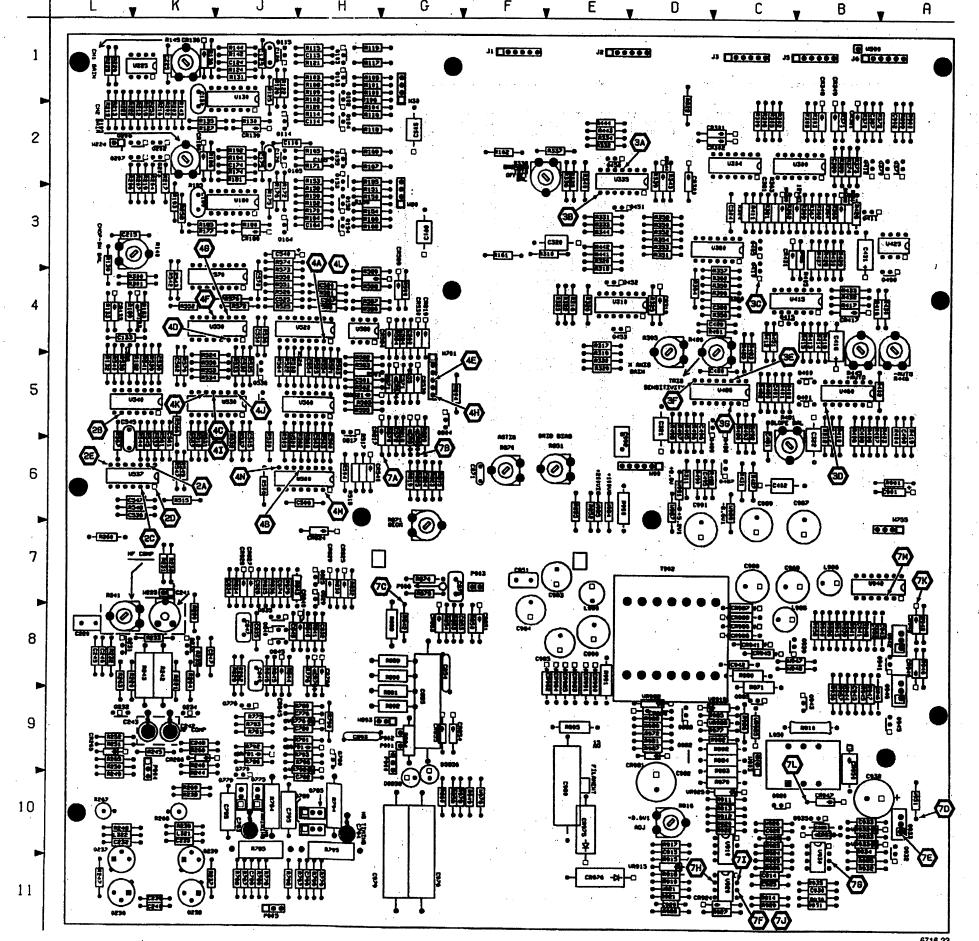



igure 9-9. Circuit view of A1-Main board.


WAVEFORMS FOR DIAGRAM 2

AC Waveforms

VERTICAL MODE BOTH and CHOP

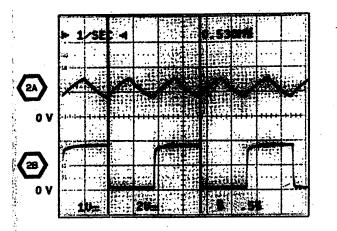

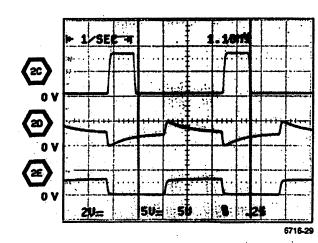

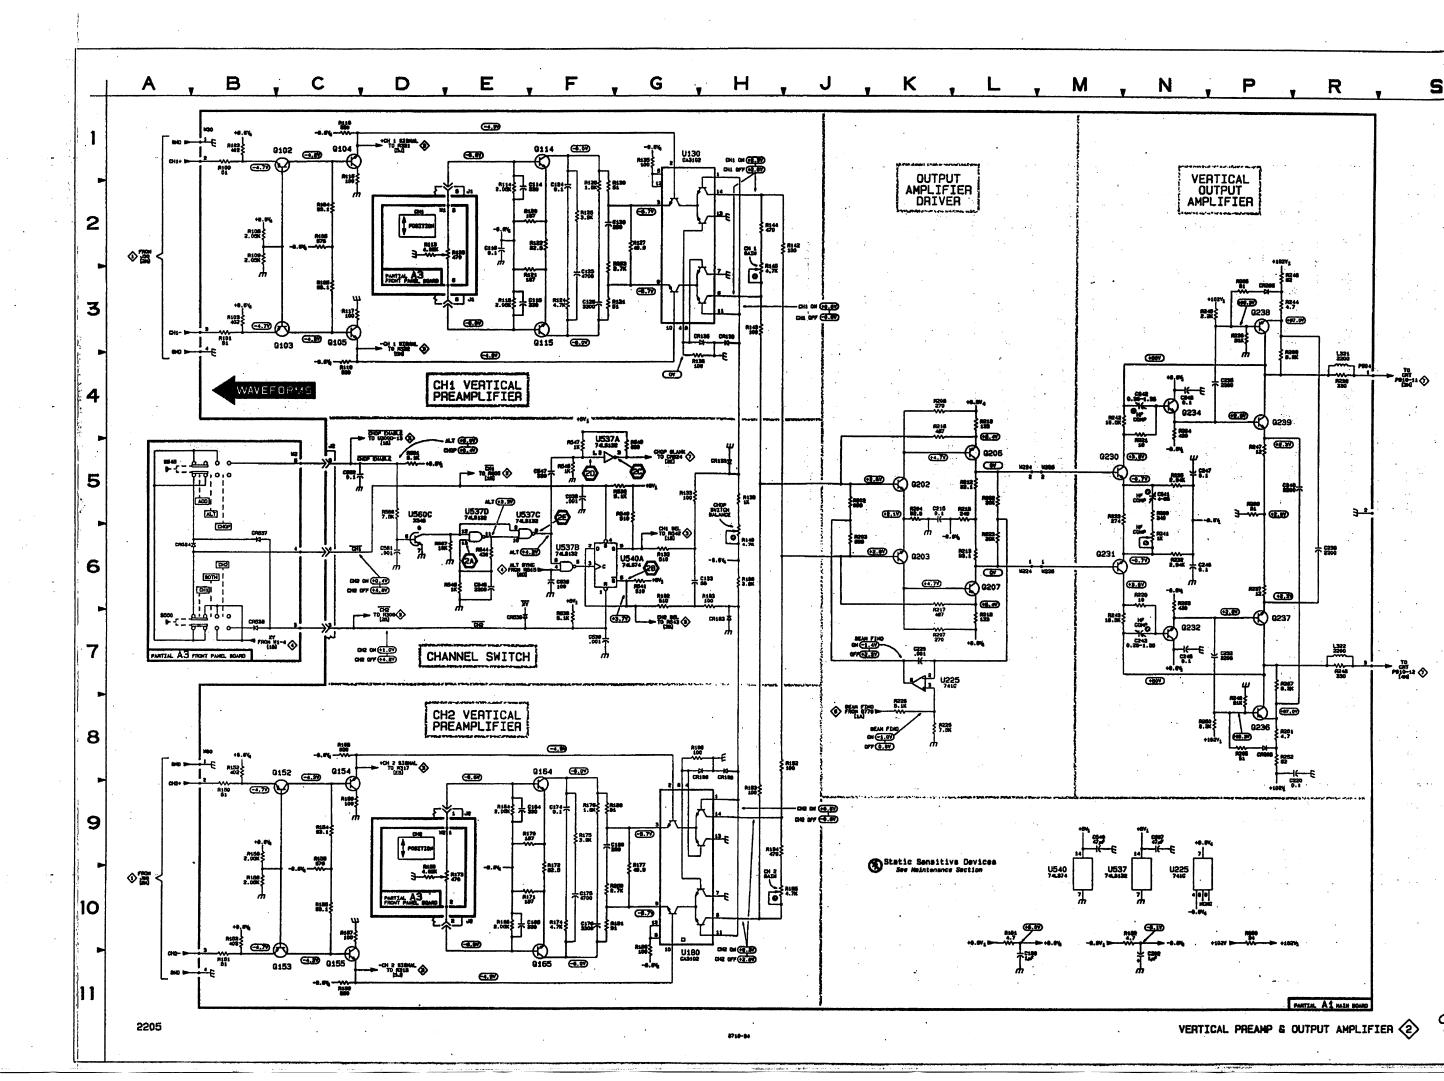


WAVEFORMS FOR DIAGRAM 3


AC Waveforms

VOLTS/DIV AC-GND-DC 0.1 V AC

SEC/DIV

4-division, 50 kHz reference sine wave

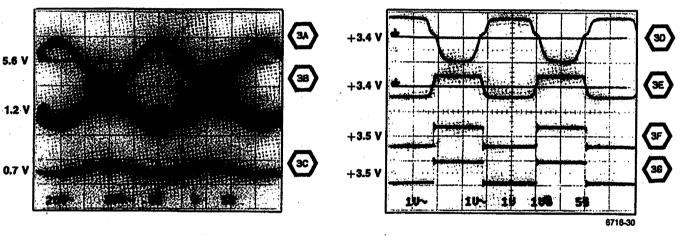

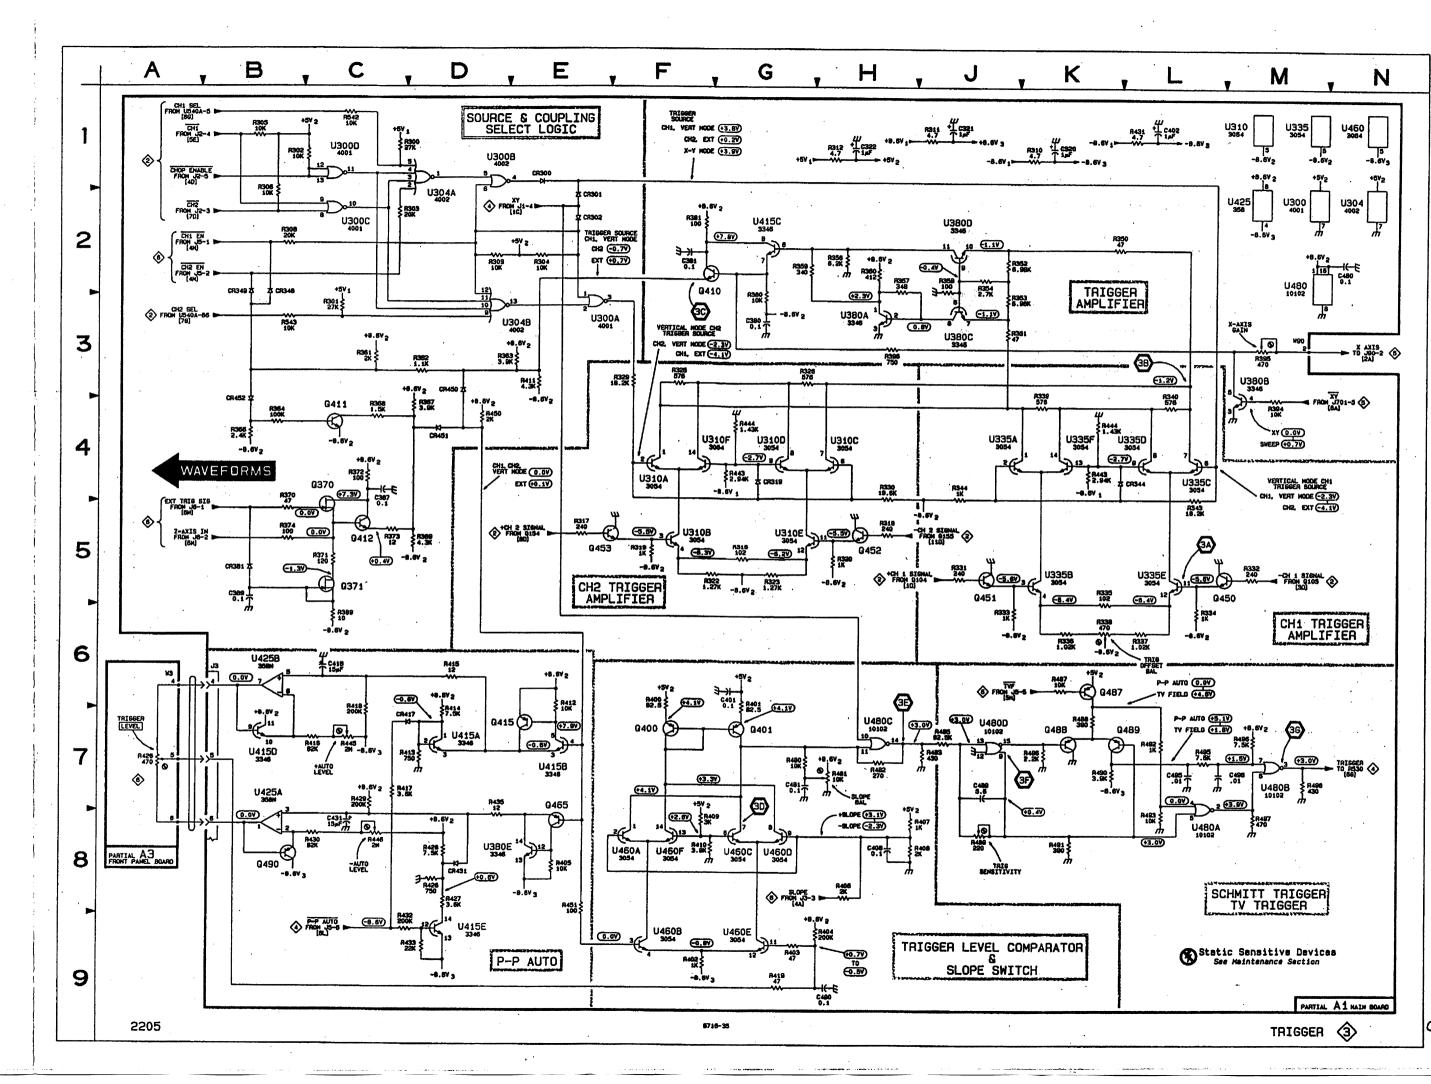

SWEEP LOGIC DIAGRAM 4

ASSEM	BLY A1								•		
CIRCUIT IUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C500 C501 C503 C505 C506 C506 C506 C500 C550 C550 C550	1F 4B 63C 30 1G 77 1H 1J 12D 6L 1K-L 3K 7B 7 4C 22D 4L 8 7K 7L 18 C 6L 6L 6L	子母母子 古生态路径方路 生态路路之态路径它在全垒电路经	G635 G636 R501 R502 R503 R504 R506 R506 R512 R515 R517 R518 R520 R621 R522 R524 R524 R526 R530 R531 R530 R531 R532 R531 R532 R531 R536 R536 R531 R536 R536 R536 R536 R536 R536 R536 R536	23 ************************************	೭೭೬೮೪೮೭೫೭೬೬೪೪೮೪೪೪೪೪೫೫	R552 R553 R554 R555 R556 R557 R560 R562 R562 R563 R564 R571 R572 R573 R574 R579 R581 R579 R581 R582 R583 R584 R586 R587 R586 R587 R588 R586 R587 R588 R588 R588 R589 R580	计计划分码电弧长线公组长电压作作的电压器器指示式长线形式 40	全全主生生生的坚定的企业的企业的企业的企业的企业的企业的企业的企业的企业的企业的企业的企业的企业的	U500 U520A U520B U520C U520C U520C U530A U530B U530B U530A U540B U550A U550B U550A U560D U560C U560C U560C U560C U560C U560C U560C U560A U560B U560B U	1F 4D 4EF 7D 19F 3H 1H 3G 6H 5C 7EG 1J 7J 8 5B 7J 58	らなって 生きたたななななたととためののを生き生きを
8		``	. R551	8G	2.2	U500B	60	6H			

Partial A1 also shown on diagrams 2, 3, 5, 6, 7 and 8.


ASSEMBLY A3

CIRCUIT	SCHEM	BOARD	OIRCUIT	SCHEM	BOARD	CIROUIT	SCHEM	BOARD	OIRCUIT	SCHEM	BOARD
YUMBER	LOCATION	LOCATION	NUMBER	LOCATION	LOCATION	NUMBER	LOCATION	LOCATION	NUMBER	LOCATION	LOCATION
D\$580	вм	2F	S505	28	2F	W1 W5	18 28	4A 4E	W5 W8	6L 6L	4E 4F

Partial A3 also shown on diagrams 1, 2, 3, 6 and 8.

CHASSIS MOUNTED PARTS


								·			
CIRCUIT	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
J590	71.	CHASSIS	-								

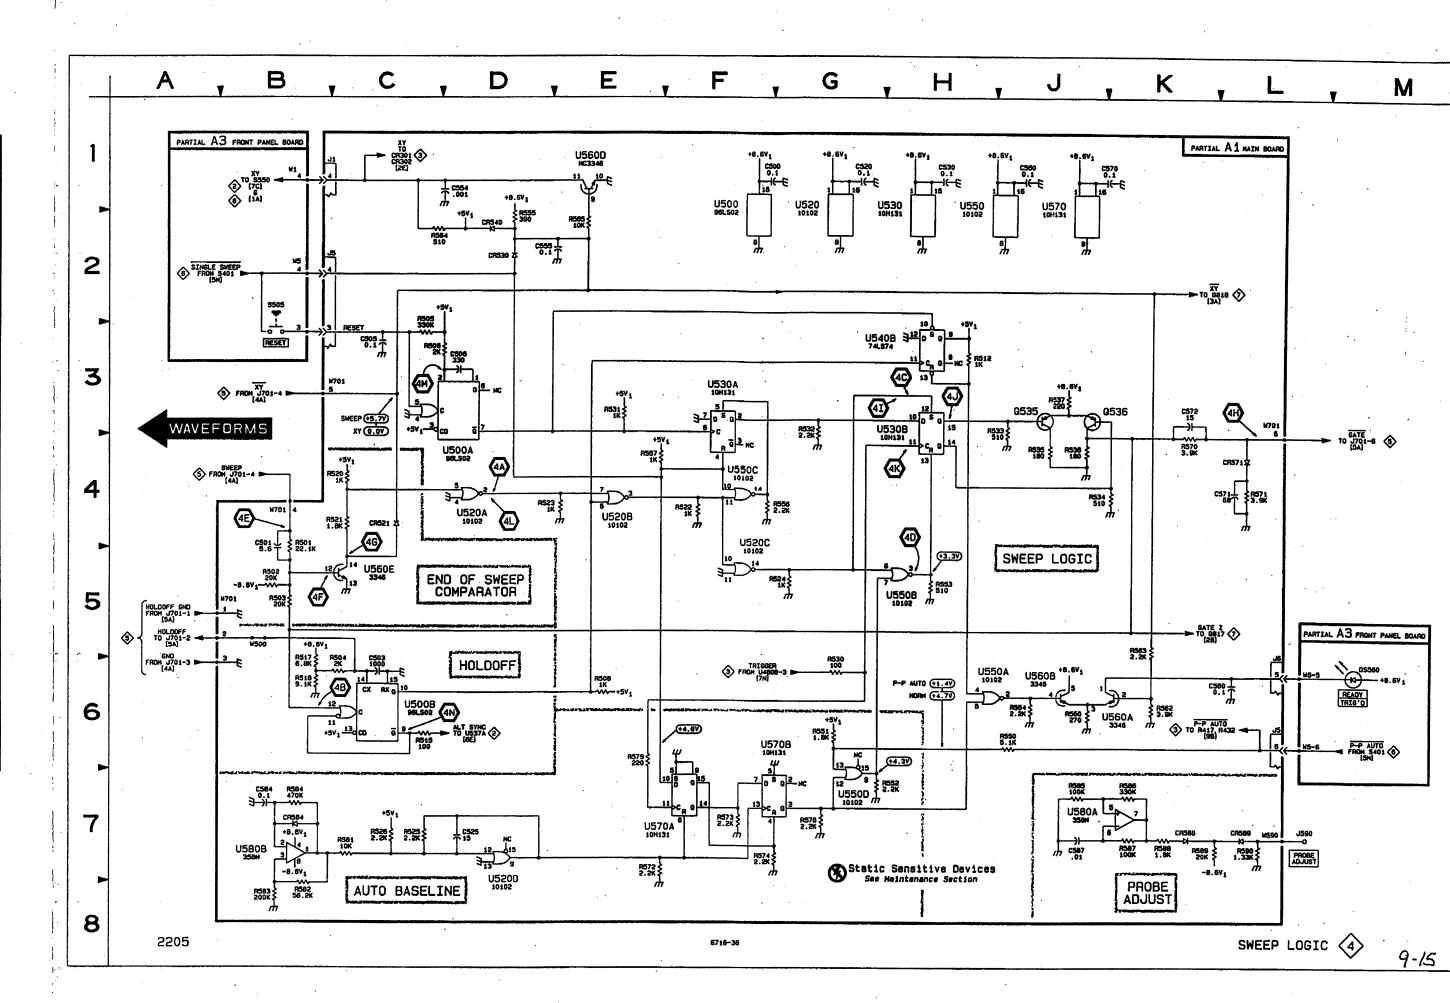


SWEEP GENERATOR & HORIZONTAL AMPLIFIER DIAGRAM 5

ASSEM	BLY A1						,				
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C776	2K	84	P905	2M	11J	R779	2M	11H	R793	4K	9H
C780	2L	9H	1			R780	1K	9H	R794	3L	10H
C782	3L	10H	0770	1L	101	R781	11,	ຍ	R795	3L	10H
C783	21_	10.	Q775	2M 4K	10J	R783	2K	8J 1QJ	R796 R797	4M 4M	9H 11J
C785 C789	1M 1M	13B 11J	Q776 Q779	1M	101	R784 R785	2L 2L	183	R798	3M	113
C794	41.	10H	0780	3L	10H	R786	3L.	l iii	R799	3M	1111
C795	314	100	Q785	4M	10H	R787	2M	111	R828	43	8.1
C799	3M	11H	Q789	3M	10H	R788	1M	110			
					1	R789	2M	111	VR776	2K	9H
CR780 CR781	1K	8H 8H	R262 R775	4K 3K	ย.	R790 R791	3K 3L	9H 9H	VR792	3L	10H
CR790	2L 3K	9H	R778	žĸ žĸ	8H	R792	3L	🖺	W755	1,1	7A
CR791	ŽL.	SH	R778	314	110	1	-	-			l '''
ASSEM	BLY AZ SCHEM	BOARD	CIRCUIT	SCHEM	BOARD	CIRCUIT	SCHEM	BOARD	CIRCUIT	SCHEM	BOARD
UMBER	LOCATION	LOCATION	NUMBER	LOCATION	LOCATION	NUMBER	LOCATION	LOCATION	NUMBER	LOCATION	LOCATION
C701	68	4F	J755	1H	1F	R722	7F	1D	R769	8H	2F
C702 C703	78 4C	4E 6F	L712	1B	1C	R723 R724	7F 7L	1D 2F	R770 R771	8H.	2F 1F
C704	40	5F	L712	1B	16	R725	6M	2F 3F	R772	ະພ	1F
C705	. 4D	5F				R726	2F	3F	R773	ໍ້ລັ	3F
C706	5D	5F	Q701	5B	4F	R727	2F	3F	R774	8L	1F
C708 C709	5D 5C	6F 4E	Q704A Q704B	. 6D	5F 5G	R728 R729	3B 3C	2D 2D	R777	7K	1E
C710	3E	5F	Q708	5D	5G 5F	R732	2D	1D	R780 R782	7M 6K	2F 2F
C712	10	10	Q725	6L	2G	R733	2E	3E		٠,	£1
C713	10	10	Q732	3D	3E	R734	3D	20	S701	8C	2E
C715 C722	8E 6B	· 2E 4E	Q736 Q737	3D 2F	3D 3E	R735	2C 1D	3E		·	
C723	5C	4E	Q750	4G	3G	R736 R737	2F	1D 3E	U715A U745A	8E 8J	1E 2F
C724	2F	3E	Q759	4G	3G	R738	4F '	3E	U745B	8K	2F
C727	203	3E	Q780	7H	2F	R740	4E	3F	U745C	7K	2F
C733 C755	2E 8J	3E .	R701		ar	R741	4F	3G	U745D	7L	2F
C767	% 7K:	2F 1E	R702	6E	4F 6F	R743 R744	7G 4E	3G 3F	U746E U756A	8H 8L	2F 1F
			R703	4C	4F	R745	4G	3F 4G	U7558	8L	1F
CR758	8G	2F	R704	48	· 4F	R758	7G	2E	U755C	ei Ei	1F
CR761	7K	23	R705	5D	5F	R757	5K	23	U755D	6L	1F
CR762 CR769	GK GK	2F 2G	R710 R715	3E 8E	3D 2E	R758 R761	6K 6K	2G 2F	U755E	ຍ	1F
CR773	7K	2G 1E	R716	0E 7E	1D	R762	BK BL	2F	VR710	. 28	1D
CR774	'n.	iE	R717	8F	1E	R763	7K	1E	VR719	8F	1E
J7			R718	. 8E	1E	R765	8G	2E			
	16	20	R719	`8F	2E	R766	8H	2F	W711		
J90	28	10	R720	8F	2E	R767	7K	1E	W742	5D 4D	4G 4G

В C D E G H M X-AXIS AMPLIFIER 2 BEAM FIND **Q737** 8727 \$ 4,32K \$ 9732 9736 7739 6710 9732 9736 11 9739 0.1 3 SWEEP GENERATOR evin F1740 6.81K 8744 2K ₹8738 3.6K +8.6V3 4 HORIZONTAL OUTPUT AMPLIFIER PARTIAL A 1 HAIN BOAR 5 TIMING SWITCH 6 HORIZONTAL PREAMPLIFIER CR761 X1 MAG (-3.6V) R763 X10 MAG (-3.6V) SWEEP REFERENCE Static Sensitive Devices
See Maintenance Section WE BYIN (4.0V) PARTIAL A2 TIMEBASE/ATTENUATOR BOARD 671**8-37** 2205 X-Y AMPLIFIER & HORIZONTAL (5)

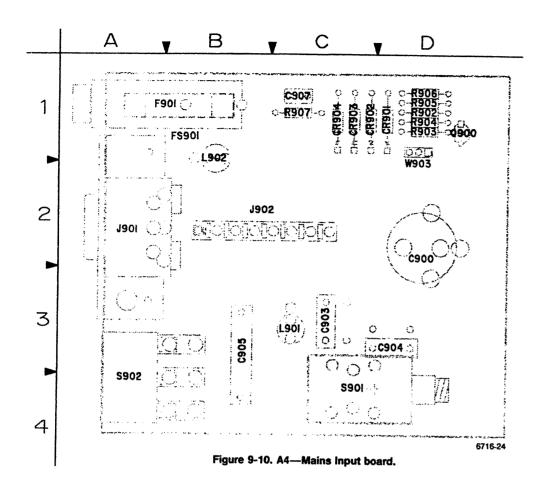

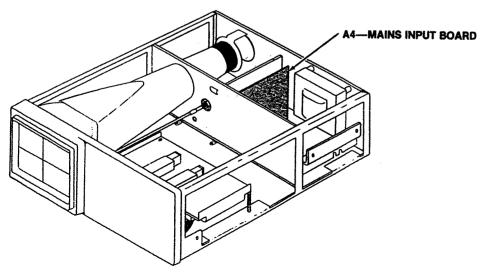




C	omponent Number
<u>a</u>	23 A2 R1234
Assembly	Subassembly Sumber Humber (if used)

	A4-MAINS INPUT BOARD CIRCUIT SCHEM CIRCUIT SCHEM											
CIRCUIT NUMBER	SCHEM NUMBER	CIRCUIT NUMBER	SCHEM NUMBER	CIRCUIT NUMBER	SCHEM NUMBER							
C900 C903 C904 C905 C907	7 7 7 7 7	FS901 J901 J902	7 7 7	R903 R904 R905 R906 R907	7 7 7 7							
CR901 CR902 CR903 CR904	7 7 7 7	L901 L902 C900 R902	7 7 7	S901 S902 W903	7 7 7							

FRONT PANEL CONTROLS DIAGRAM 6

ASSEMI	BLY A1					•					
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
J1 J2	1B 2B	1F 1E	3.5 3.5	3B 3L	128 18	JB	6L	1A			
Partial A1 ai	iso shown on di	agrams 2, 3, 4, 5	7 and 8.								
ASSEMI	BLY A2								•		
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
AT1 AT51	2L 2L	58 5D	J7	58	2D	R3 R53	2L 2L	58 5D			
Partial A2 a	lso shown on di	egrams 1, 5 and	8.								
ASSEM	BLY A3							• •			
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD. LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C2 C52 C377 C378 C383 C392 CR401 CR534 CR537 CR538 DS370 DS370 DS660	1.J 3.J 8.J 8.H 71K 71K 5G 3F 3G 2E 6K 8E 6K	4C 4C 2E 2E 2E 4E 2F 28 28 28 4A 4A 2F	J967*** R2 R4 R52 R54 R84 R89 R92 R94 R113 R123 R163 R173 R385 R376	88 1113336 65 55 55 50 20 20 20 85 81	2A 4B 4C 4C 3C 2C 2D 2C 1B 1C 1C 3A 3F	R377 R378 R379 R383 R426 R800 R800 R802 R986 R987 S90 S101 S201 S380	7J 8H 8H 8C 7C 1E 1E 8E 8D 5E 1K 3K 1C	2F 2E 2E 4F 1F 1E 2A 1A 3A 2A 2C 3B 3C 2A	\$392 \$401 \$400 \$506 \$545 \$550 \$555 \$801 W1 W2 W3 W5 W6	7J 5G 4D 4K 2H 2G 4H 7F 1C 2C 3C 3L 6L 5C	3F 2F 1F 2F 2C 2B 3F 2E 4A 2A 4D 4E 4F 3D
	IS MOUNT	···									
CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
J100 J151	1L, 3L,	CHASSIS CHASSIS	J300	8L	CHASSIS	R1 R51	1K 3K	CHASSIS CHASSIS	R382	7L	CHASSIS

^{**}Not in Electrical Parts List

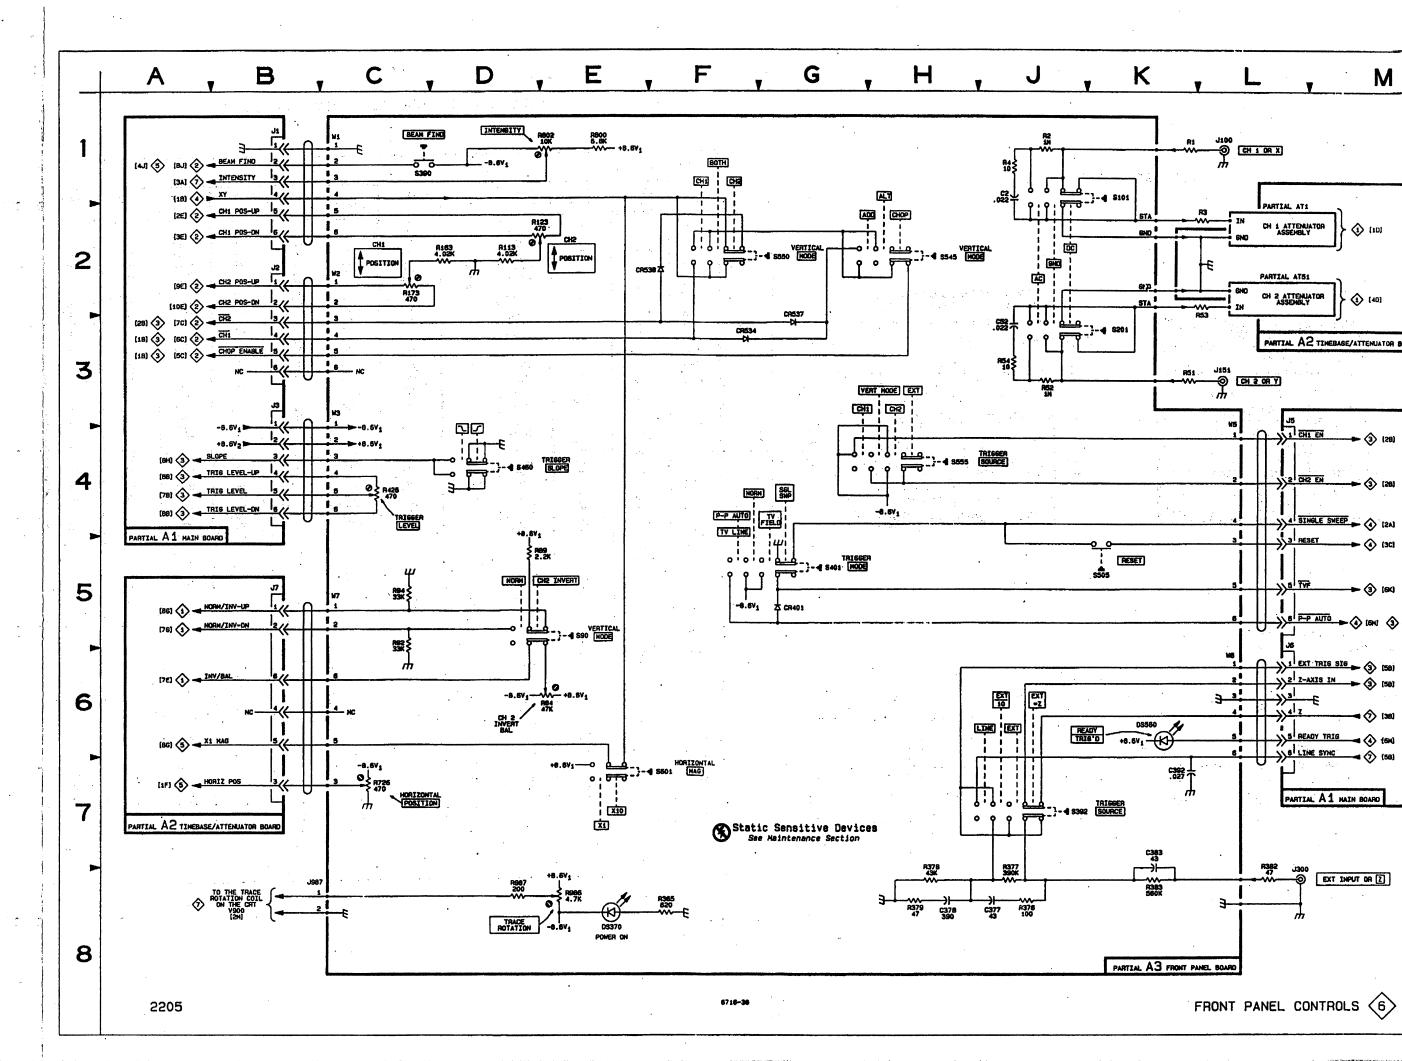


WAVEFORMS FOR DIAGRAM 7

AC Waveforms

SEC/DIV

20 μs

1 VOLT PER DIVISION EQUALS 1 AMP PER DIVISION FOR WAVEFORM 7F 4E) **7**D **7A** +58 V **7B** 0 V **7F 7**C 0 V

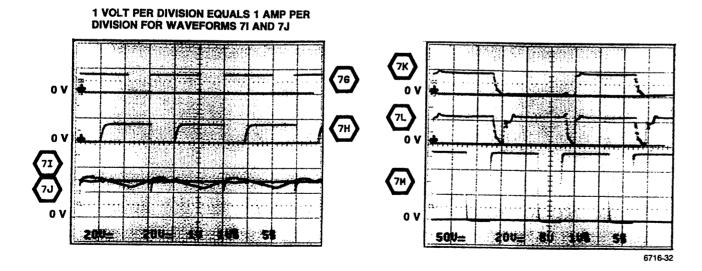

POWER SUPPLY, Z-AXIS, & CRT DIAGRAM 7


CIRCUIT	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOAF
C824	3D	6G	CR942	83	84	R832	1E	. 7н	2010		
C828	3E	7J	CR945	8K	8C	R834	3F	7J	R946 R947	8H	8/
C832 C834	1E	8H	CR946	ผ	A8	R834	4F	7J	R948	9H 7H	91 81
C835	4F 3F	73	CR947	5K	108	R835	3E	7J	R949	6K	10
C845	3F	ย	CR950 CR975	5H 5K	10B	R836	3E	7 J	R955	6F	1
C847	2G	ພິ	CR976	5K	10E	R840	3F	8H	R956	7H	81
C849	1G	EJ	CR980	6F	11E 9D	R841	2F	8H	R957	10H	94
C851	4H	7F	CR981	6E	9D	R842 R843	2G 3F	8G	R958	7G	8
C853	4.1	8G	CR982	7L	9F	R844	2F	7J 8J	R970 R971	6E	10
C854	3.1	8G	CR983	8L	9E	R845	2F	8J	R972	€J 6E	80
C855 C871	2G	9G	CR984	8L	9E	R849	1G	ະມ	R977	5C	90
C875	4L 3K	6F	CR985	8L	9E	R850	3H	8F	R978	41	10
C893	2L	7G 9H	CR986 CR987	8F	8C	R851	3H	6E	R979	3E	73
C901	5B	6A	CR988	9K	8C	R852	4H	6E	R980	ຍ	80
C902	5B	2A	CR989	8F	8C 8C	R853	41	8G	R981	6D	90
C914	8E	110	CR990	7K	9E	R854 R855	3J 3H	8G	R982	6E	90
C915	9G	10D	CR991	7K	9E	R858	3H 2J	6E 10G	R983	5E	90
C920	10F	11D				R860	2H	10G	R984 R984	2.J 5E	90
C925	9E	11C	DS856	2H	10G	R870	4K	6F	R985	6D	90 90
C930 C932	7F	11B	DS858	2H	10G	R871	3K	7G	R986	5D	90
C933	5E 6G	10B	1050			R874	3K	7G	R987	6D	90
C935	6G	10B 10B	L950 L986	5H	98	R875	3K	7G	R988	6D	90
C941	7H	8B	L988	9L 9L	7B	R888	31	8G	R989	70	90
C942	ii l	8C	1990	71.	8C 7E	R889	3.1	8G	R990	10M	68
C943	73	8B			/E	R890 R891	21	8G	R991	10M	86
C945	9H	9B	P900**	5L	9G	R892	2.1 2.1	9G 9G	R992	10M	90
C946	ย]	98	P901**	4L	9G	R894	21	9G	R995	5K	9E
C952	7E	88	P902**	4L	9G	R899	5B	2Ã	T902	5K	90
C974 C976	3E	7J	P903**	4L	7F	R900	5B	2A		~	91.
C979	5J 4J	11G 11G	0004	- 1		R901	5B	6A	U910A	8F	10
C980	5K	10E	Q804 Q817	3C 2C	6G	R910	8H	98	U910B	9F	10
C982	6E	10D	Q818	3C	5H	R911	8G	10C	U920	8D	11
C983	8L	7E	Q825	1D	4G 7H	R912 R913	8F 8F	10C	U930	8F	10
C984	8L	8F	Q829	2E	8H	R914	8E	10C 11C	U940	7G	7A
C985	8L	8E	Q835	3F	8.1	R915	9G	11D	VR915	9G	
C986	9L	7B	Q840	3G	8H	R916	9G	10D	VR925	90	11 10
C987 C988	9M	7B	Q845	2G	8H	R917	9G	10D	VR932	5F	10
C989	9L 9M	7C 7C	Q932 Q933	6F	10A	R918	9G	11D	VR933	5F	10
C890	7L	8E	Q935	5G 7G	10A	R919	10F	10C	VR982	6E	90
C991	'n	7D	Q939	/G 6H	10B	R920	9F	10C	VR985	5D	90
C992	10M	6E	Q941	7,	8C 8A	R922 R926	9F	100	VR988	70	90
	1		Q942	7J	8Â	R927	9D G8	11C 11C		a. I	
CR817	2C	6H	Q943	9H	98	R928	8D	110	W90 W893	9M 2L	60
CR818	20	BG	Q945	ย	9A	R929	8E	110	W903	6B	9G
CR820 CR824	3D	6G	Q946	8 <u>1</u>	8A	R930	7F	11B	W920	9E	10
CR825	1E 1E	7H	Q982	6E	9D	R931	7F	11B	W921	10F	11
CR827	2E	7H 7J	Q985 Q988	6E 6D	90	R932	7F	11B	W925	10E	10
CR828	3E	73	2300	₩	9D	R933	6G	108	W926	10E	10
CR829	2E	7H	R804	3C	5G	R934	5F	108	W947	7K	88
CR840	3F	ผ	R805	žč	8G	R935 R936	7F 7G	118	W948	8K	88
CR845	2F	ย	R818	2D	6G	R939	7G 7H	98 88	W951 W976	5G 5J	10
CR851	3H	8F	R819	1C	6G	R940	61	88	W984	8M	10 6E
CR853	3H	8G	R820	20	6G	R941	ei l	88	W985	8M	6E
CR854 CR855	ᆲ	9G	R822	3D	20	R942	7H	8A	W987	9M	6D
CR933	2H 7G	9G 10B	R823	3D	6G	R943	8H	8 B	W989	9M	60
CR941	8K	8C	R825 R830	1D 2E	6G	R944	ຍ	98	W991	7M	6D
	~,	~	11050		7H	R945	ย	98	1	l	


**Not in Electrical Parts List




POWER SUPPLY, Z-AXIS, & CRT DIAGRAM 7 (CONT)

ASSEM	BĹY A4			•					•		
CIACUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT 'NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
C900 C903 C904 C905 C907 CR901 CR902 CR903	6C 98 9C 8B 7B 7B 7B	20 30 38 10 10 10	CR904 F901 F8901 J901 J902	79 98 98 108 78	1C 1A 1A 2A 2B	L901 L902 0900 R902 R903 R904	98 98 88 78 90 68	3C 1B 1D 1D 1D 1D	R906 R908 R907 S901 S902 W903	68 78 78 9C 8C 68	1D 1D 1C 4C 4A 1D
CHASSI	S MOUNTE	D PARTS									
CIRCUIT IUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEM LOCATION	BOARD LOCATION
P902 P906 P910	7A 3L 2M	CHASSIS CHASSIS CHASSIS	R983	2L	CHASSIS	T901	7A	CHASSIS	V900	1N	CHASSIS

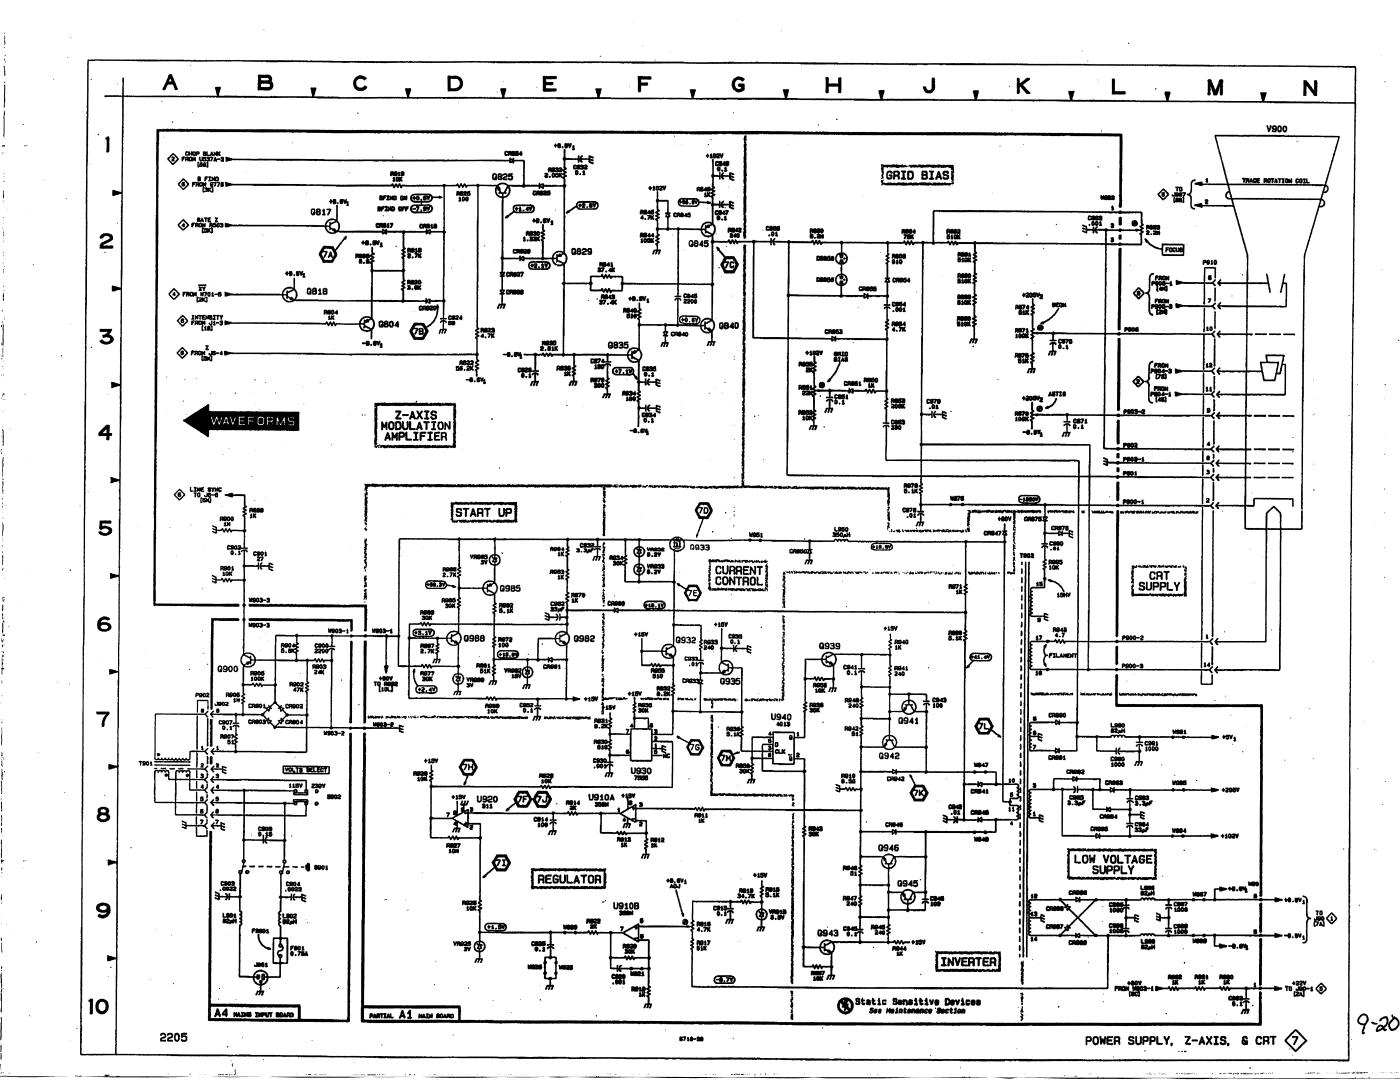

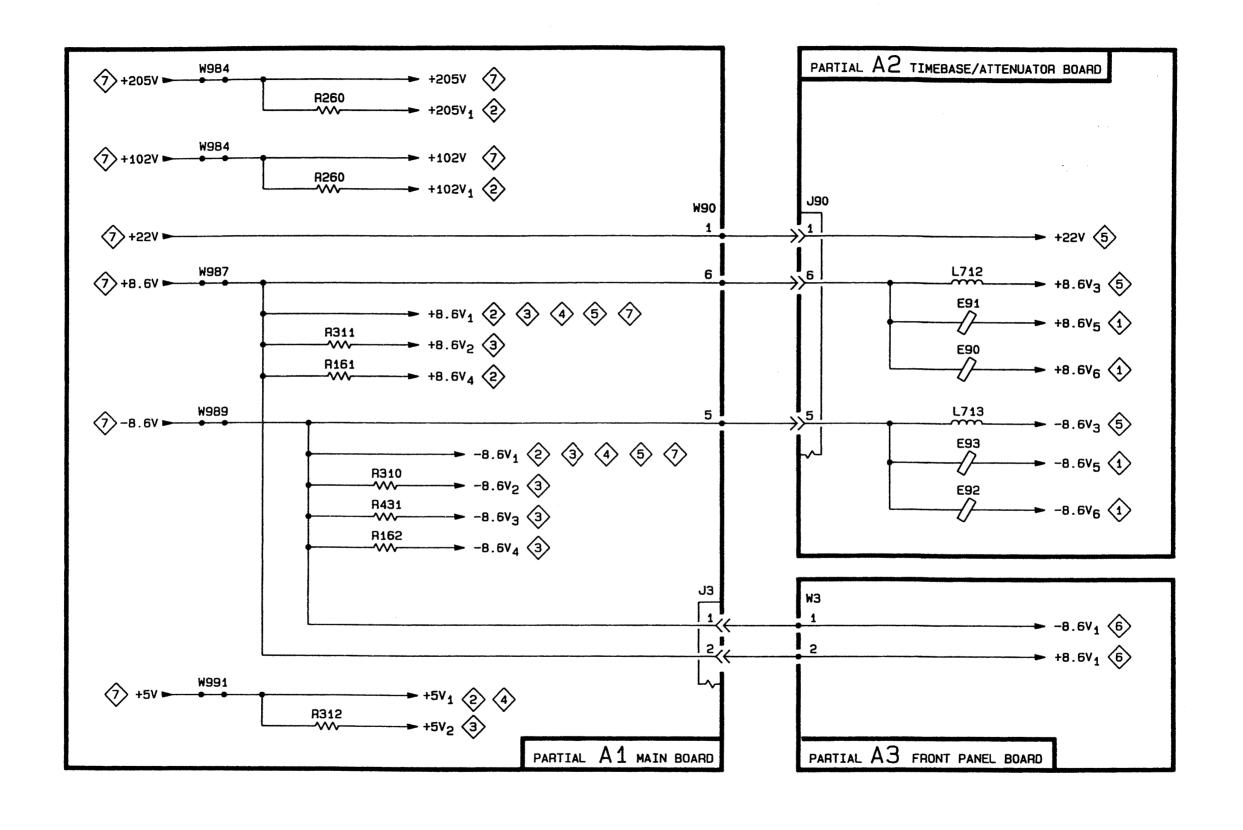

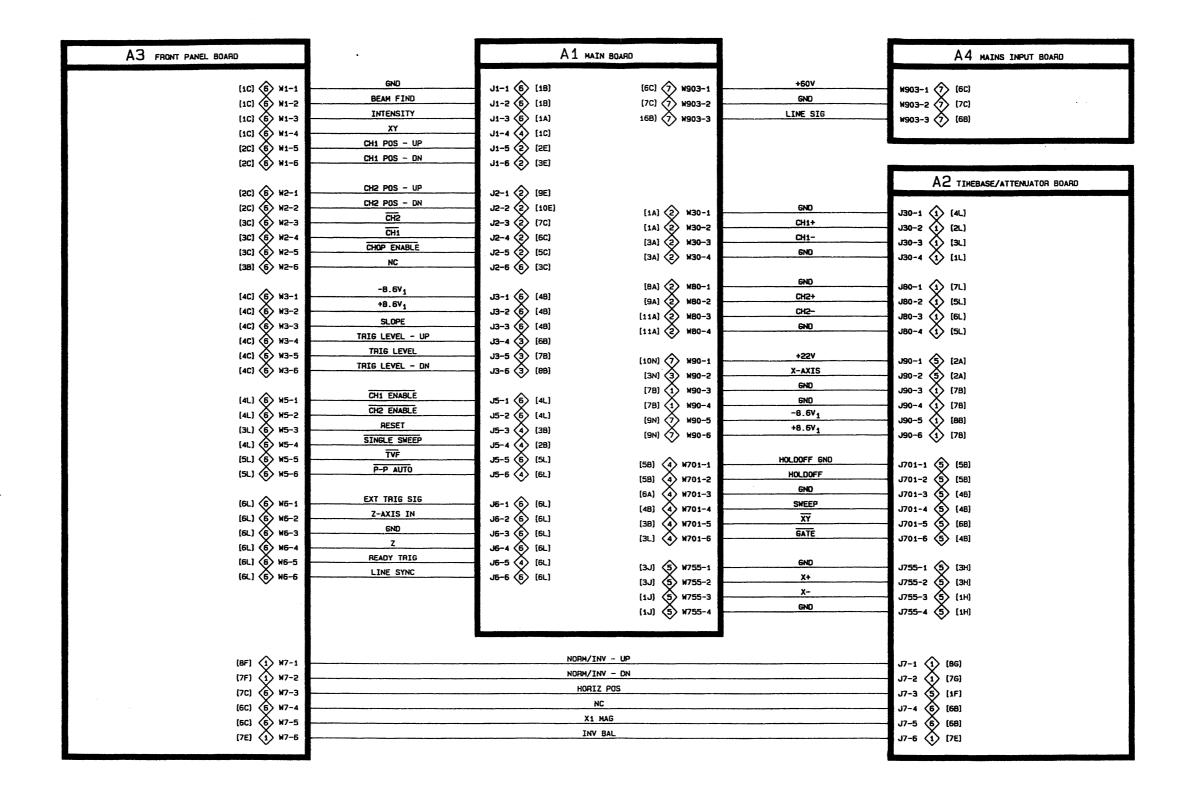

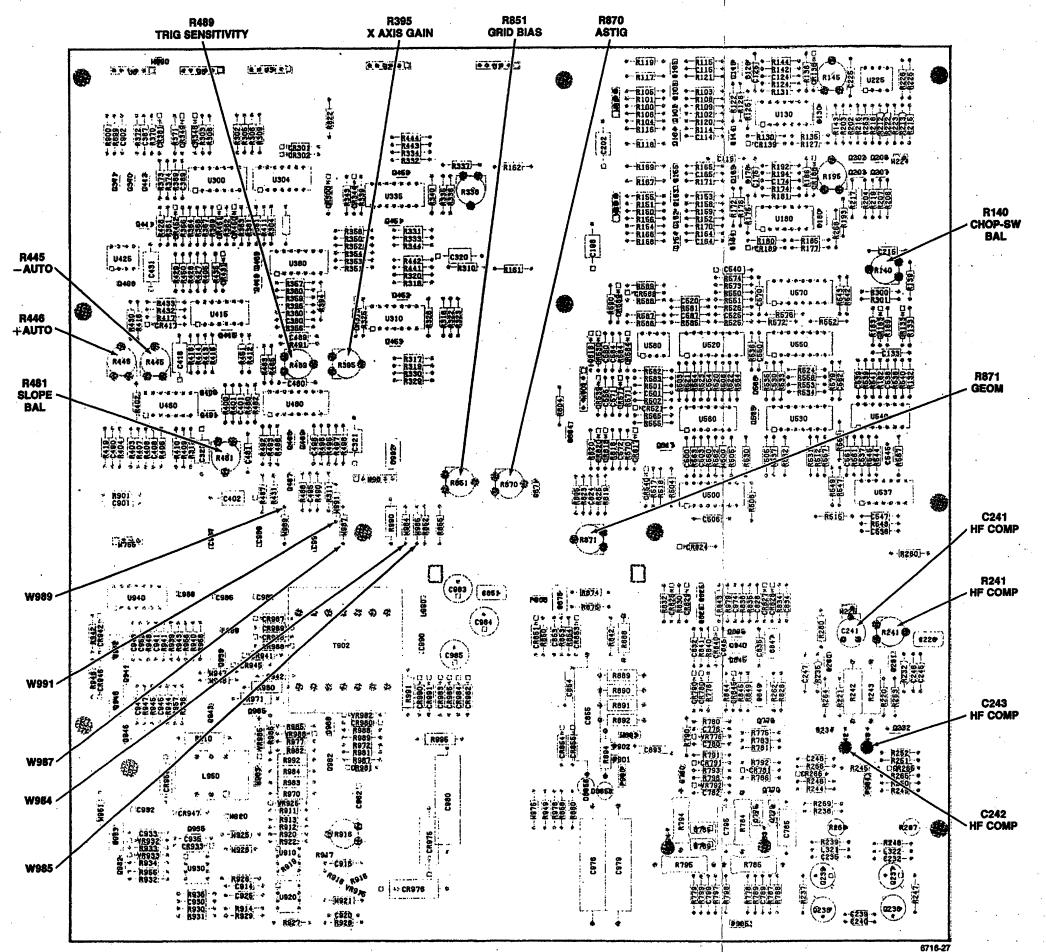
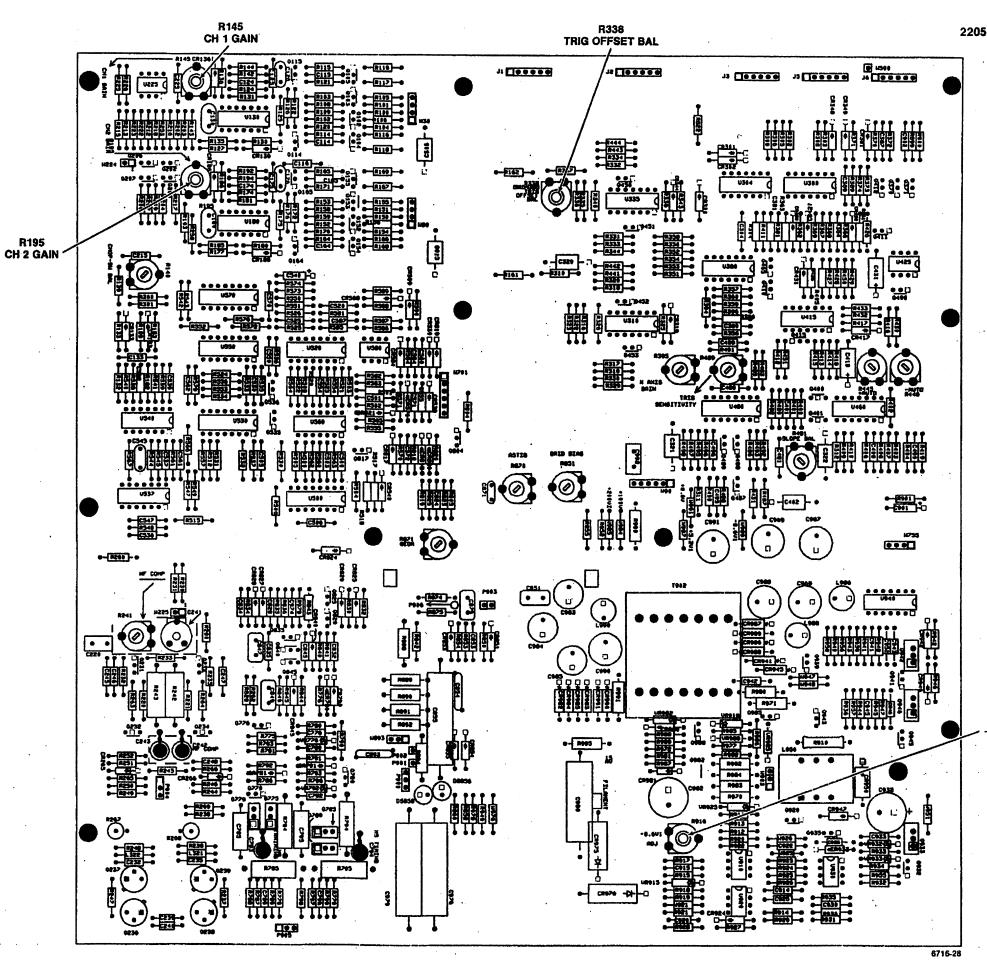


Figure 9-11. Adjustment locations of A1—Main board component view.






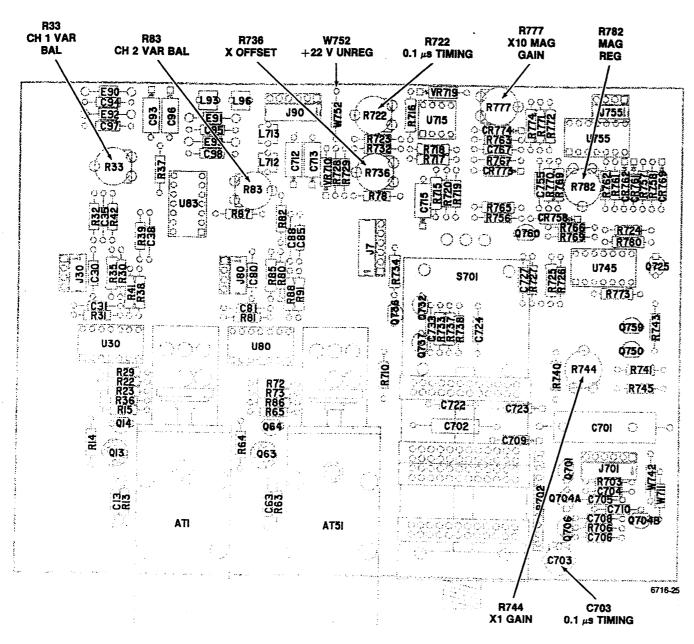


Figure 9-13. A2—Timebase/Attenuator board adjustment locations.

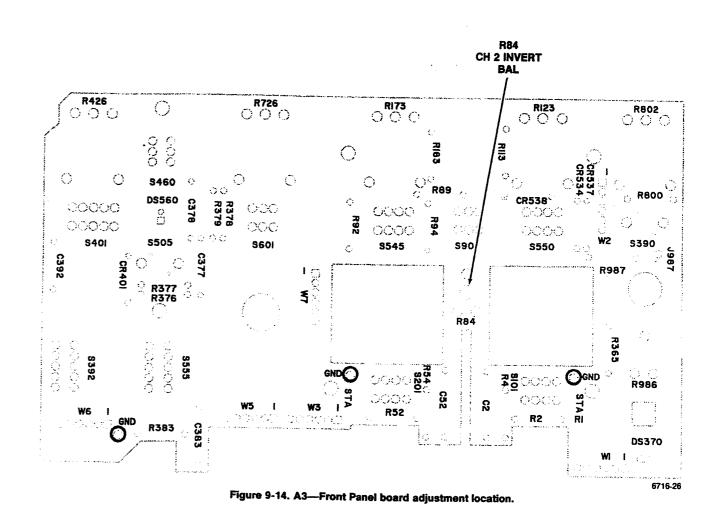

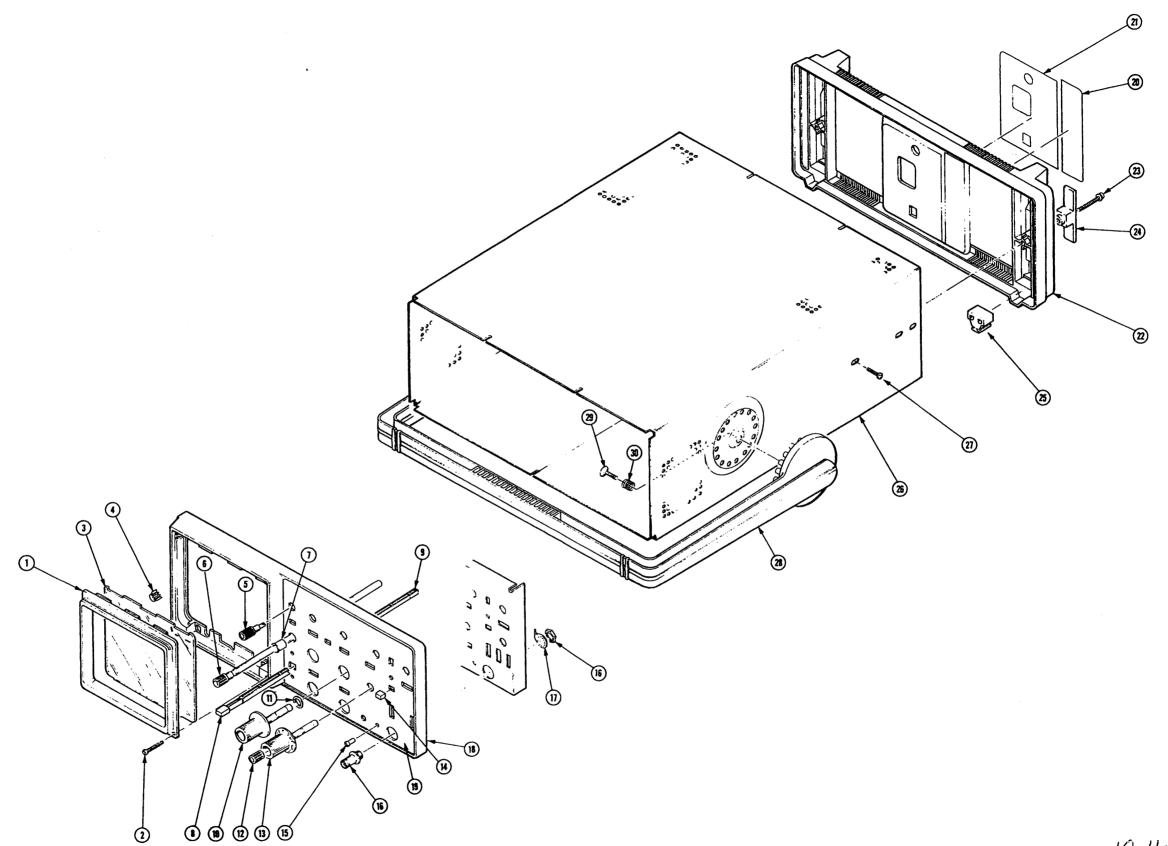

10-49 **2205 Service**

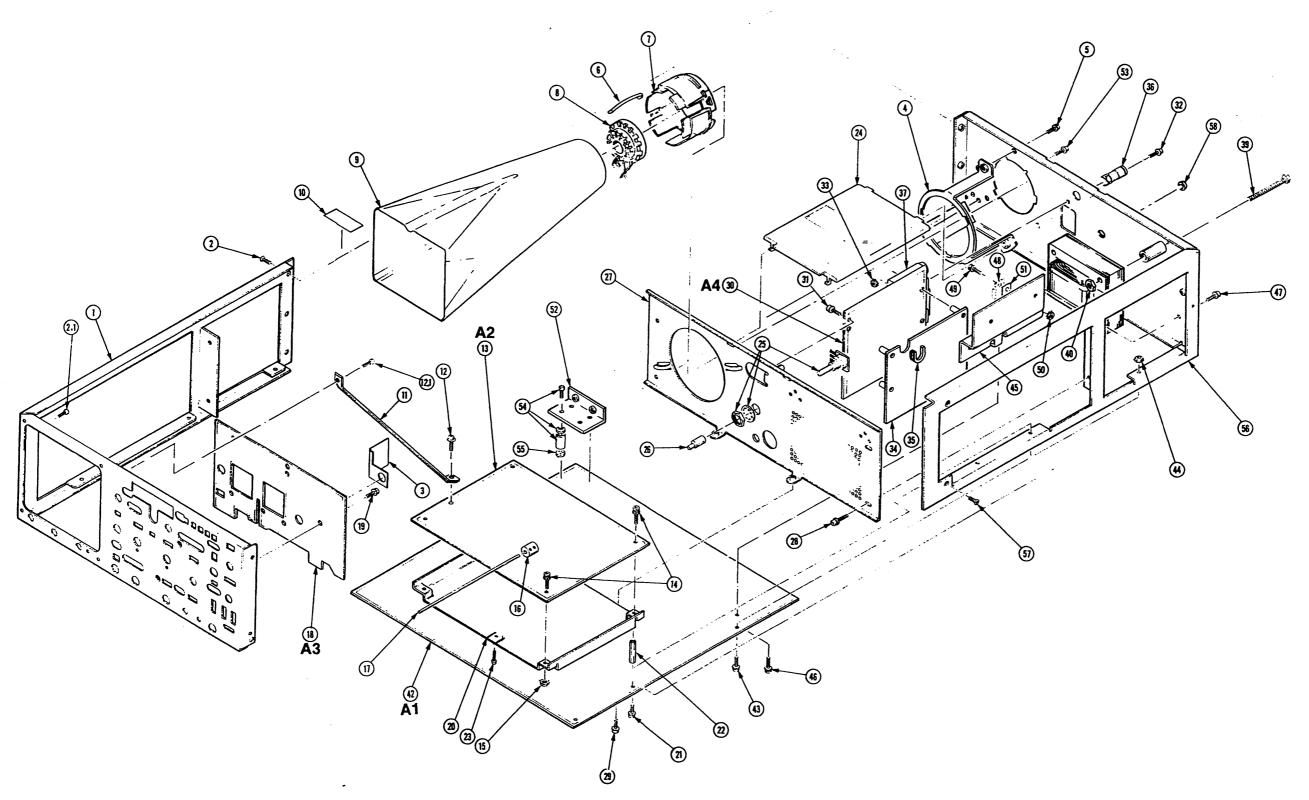

10-46

2205 Service