# INSTRUCTION

Serial Number \_\_\_\_\_

TYPE 3A3

DUAL-TRACE

DIFFERENTIAL AMP

Tektronix, Inc.

S.W. Millikan Way P.O. Box 500 Beaverton, Oregon Phone MI 4-0161 Cables: Tektronix

#### WARRANTY

All Tektronix instruments are warranted against defective materials and workmanship for one year. Tektronix transformers, manufactured in our own plant, are warranted for the life of the instrument.

Any questions with respect to the warranty mentioned above should be taken up with your Tektronix Field Engineer.

Tektronix repair and replacement-part service is geared directly to the field, therefore all requests for repairs and replacement parts should be directed to the Tektronix Field Office or Representative in your area. This procedure will assure you the fastest possible service. Please include the instrument Type and Serial number with all requests for parts or service.

Specifications and price change privileges reserved.

Copyright © 1964 by Tektronix, Inc., Beaverton, Oregon. Printed in the United States of America. All rights reserved. Contents of this publication may not be reproduced in any form without permission of the copyright owner.

# CONTENTS

Warranty

Section 1 Characteristics

Section 2 Operating Instructions

Section 3 Circuit Description

Section 4 Maintenance

Section 5 Calibration and Verification

Section 6 Parts List and Diagrams

A list of abbreviations and symbols used in this manual will be found on page 6-1. Change information, if any, is located at the rear of the manual.



Type 3A3 Dual-Trace Differential Amplifier.

# SECTION 1 CHARACTERISTICS

#### Introduction

The Type 3A3 Dual-Trace Differential Amplifier is designed for use with all Tektronix 560-Series Oscilloscopes except the Type 560 itself. The Type 3A3 contains two independent, high-gain amplifier channels. Either channel may be used to produce a display, or the two channels may be electronically switched to produce dual-trace displays.

The Type 3A3 has high sensitivity with direct-coupled inputs and a high degree of common-mode rejection.

#### Sensitivity

Sixteen calibrated deflection sensitivities in a 1-2-5 sequence from 0.1 mvolt to 10 volts per major graticule division. The front-panel VARIABLE control provides a continuously variable uncalibrated sensitivity range from 0.1 mvolt to at least 25 volts per major graticule division.

#### Accuracy

Calibrated sensitivities are accurate within 3%. Any selected sensitivity of either channel is adjustable to 0% with the front-panel CALIBRATE control.

#### **High-Frequency Response**

500 kc minimum (-3 db) with BANDWIDTH switch set to HI.

 $5\,\mathrm{kc}$  minimum ( $-3\,\mathrm{db}$ ) with BANDWIDTH switch set to LO.

#### Low-Frequency Response

**Dc-Coupled Input**—Dc at all sensitivities when the AC STAB switch is set to OFF. When the AC STAB switch is set to AC STAB, the low-frequency response at the four highest sensitivities changes as follows:

1 mVOLTS	≈0.15 cps (—3 db)
.5 mVOLTS	$\approx$ 0.3 cps ( $-3$ db)
.2 mVOLTS	$\approx$ 0.75 cps ( $-3$ db)
.1 mVOLTS	$\approx$ 1.5 cps ( $-3$ db)

**Ac-Coupled Input**<sup>2</sup>—About 1.6 cps (—3 db) at all sensitivities when the AC STAB switch is set to OFF. When the AC STAB switch is set to AC STAB, the low-frequency response at the two highest sensitivites changes as follows:

.2 mVOLTS	$\approx$ 1.75 cps ( $-3$ db)
.1 mVOLTS	$\approx$ 2.2 cps ( $-3$ db)

#### Common-Mode Rejection<sup>3</sup>

		.1 mVOLTS to 10 mV	'OLTS⁴		
	Referred to	Input Connectors		Input of Properly D P6023 Probes	
	Dc-Coupled Ac-Coupled Input Input With Low-Z Source			Ac-Coupled Input With Low-Z Source	
Dc to 100 kc	50,000:1				
500 kc	1,000:1	1,000:1			
Dc to 10 cps			50,000:1		
15 cps		500:1			
60 cps		2,000:1			
100 cps			10,000:1		
1 kc to 10 kc			1,000:1	1,000:1	
100 kc		50,000:1	500:1	500:1	

#### 20 mVOLTS to 10 VOLTS<sup>5</sup>

Dc to 1 kc	10,000:1		
Dc to 100 kc	1,000:1		
500 kc	500:1	500:1	
15 cps		500:1	
60 cps		2,000:1	

<sup>&</sup>lt;sup>1</sup>When the 10 mvolt/div sensitivity has been calibrated for the crt deflection sensitivity of a particular oscilloscope. See Section 2, "First-Time Operation".

<sup>&</sup>lt;sup>2</sup>When no attenuator probe is used and the signal-source impedance is negligible compared to 1 megohm.

<sup>&</sup>lt;sup>3</sup>For ground-referenced sine-wave common-mode signals.

<sup>&</sup>lt;sup>4</sup>With 10 volts peak-to-peak or less in common mode at input connectors.

 $<sup>^5</sup>$ With common-mode amplitude at input connectors of 100 volts peak-to-peak or less for 20 mVOLTS to .1 VOLTS, and with 600 volts peak-to-peak or less for .2 VOLTS to 10 VOLTS.

#### Characteristcis — Type 3A3

#### Maximum Common-Mode Amplitudes

600 volts peak (input breakdown rating) from 10 VOLTS to .2 VOLTS.

200 volts peak from .1 VOLTS to 20 mVOLTS.

20 volts peak at 10 mVOLTS, increasing to 25 volts peak at .1 mVOLTS.

#### Noise<sup>6</sup>

40  $\mu \text{volts}$  peak-to-peak or less with the BANDWIDTH switch set to HI.

10  $\mu volts$  peak-to-peak or less with the BANDWIDTH switch set to LO.

#### Interchannel Isolation

Electrostatic isolation is 10<sup>6</sup>:1 (120 db) or better referred to input signal levels.

Switching isolation in chopped operation is 100:1 or better referred to centimeters of display. The switching circuit introduces negligible interaction in all other operating modes.

#### Drift<sup>6</sup>

Typically less than 500  $\mu$ volts/hour after 30-minute warmup.

#### **Input Parameters**

**Input Coupling**—Switch provides ac or dc coupling, or grounds the amplifier input without grounding the signal source. The ground position of the switch permits precharging the ac-coupling capacitor. See Section 2.

Input Resistance and Parallel Capacitance—1 megohm  $\pm 1\%$  paralleled by 47 pf  $\pm 3\%$ . The 1 meghom input resistance can be eliminated to provide floating inputs when any of the seven most sensitive ranges are used for dccoupled signals. Removeable wire links are provided for this purpose on the attenuator etched wiring boards. See Section 2.

**Grid Current**—Typically less than 1 nanoampere. An internal calibration control diverts the grid current away from the input connector (except when the floating input provision is used). The range of this control is adequate to divert up to 12 nanomperes.

Ac-Coupling Time Constant—≈0.1 sec when the signal source impedance is negligible compared to 1 megohm. ≈1 sec with a X10 probe.

**Coupling Capacitor Leakage**—Typically less 1 nanoampere at 500 volts after 1 minute.

Nondestructive Differential Voltage Limits— $\pm 600$  volts from 10 VOLTS to 20 mVOLTS, dc coupled.  $\pm 200$  volts from 10 mVOLTS to .1 mVOLTS, dc coupled.

#### **Operating Modes**

Channel 1 only, Channel 2 only, or dual trace with either chapped or alternate switching.

Chopped mode provides alternating samples of the two channels which are of about  $2\,\mu\mathrm{sec}$  duration. The Type 3A3 provides a signal to the oscilloscope crt circuit for display blanking during the switching interval.

Alternate mode displays the two channels alternately, each for the duration of one time-base sweep.

#### X-Y Displays

Two Type 3A3 plug-in units used for X-Y displays exhibit a phase-shift difference of less than 2° up to 100 kc.

Dual-trace X-Y displays can be obtained with two Type 3A3 plug-in units or one Type 3A3 and a Type 3A74. See Section 2.

#### **Output Cathode Followers**

Cathode followers provide a ground-referenced differential signal output at pins 11 and 12 of the interconnecting plug. The output signal can be selected from Channel 1, Channel 2, or the common output amplifier (see Section 2). The signal is available as the internal triggering signal to the companion time-base unit. Jacks can be installed in the oscilloscope for access to these outputs.

Bandwidth-Dc to at least 350 kc.

**Amplitude**—2.5-volt differentially per major graticule division of display with TRIGGER switch at CH 1 or CH 2.

5-volt differentially per major graticule division of display with TRIGGER switch at COMP.

Output Resistance— $\approx$ 500  $\Omega$  per side.

Minimum Load Resistance—100 k.

#### Mechanical

**Construction**—The chassis is aluminum alloy and the front panel is photo-etched anodized aluminum.

**Dimensions** (approx.)— $6^{1}/_{4}$  inches high,  $4^{1}/_{4}$  inches wide,  $14^{3}/_{8}$  inches deep (overall).

Weight—About 55/8 pounds net.

#### **Accessories Included**

	Tektonrix Part Number
4—BNC to binding-post adapters 2—Instruction Manuals	103-033 070-408

<sup>&</sup>lt;sup>6</sup>Measured on the crt display with respect to the selected deflection sensitivity and with the input grounded.

### SECTION 2

### **OPERATING INSTRUCTIONS**

#### **FUNCTION OF CONTROLS**

**VOLTS/DIV** Volts per major graticule division. Sixteen-

position switch used to select the calibrated

deflection factors.

VARIABLE Variable volts per division. Provides con-

tinously variable attenuation between the calibrated deflection factors and extends the attenuation range to at least 25 volts/div. This control has 360° rotation with a detent position for CALIB (cali-

brated) operation.

**POSITION** Provides display positioning

**RANGE** Attenuator balance range. Forty-turn

screwdriver adjustment used in conjunction with the ATTEN BAL control to dc balance the Input Amplifier. Proper adjustment of the two complimentary controls is indicated when the VOLTS/DIV control can be switched throughout its range with-

out moving the trace.

ATTEN BAL Attenuator balance. See RANGE control

description and "First-Time Operation" in

this section.

AC STAB Ac stabilization. Obtainable only when

one of the four most sensitive positions of the VOLTS/DIV switch (marked in blue) is used. The AC STAB position causes attenuation of drift and other low-frequency information, resulting in a more stable dis-

play of ac information.

AC GND DC Ac-coupled input, ground input, or dccoupled input. AC position places a dc-

blocking capacitor in the circuit. GND position grounds the input of the internal attenuator without grounding the input connector. When dc levels are to be blocked by ac coupling, the switch should be set to GND while input connections are made or broken. This will permit the coupling capacitor charge to change without damaging the input circuitry or over-

driving the amplifier (see Section 3). The

DC position provides a straight-through

connection to the attenuator.

Simultaneously controls upper frequencyresponse limit of both channels. The HI

position provides -3 db at about 500 kc: LO position provides —3 db at about 5 kc. The LO position permits attenuation of high-frequency noise while low-frequency

measurements are being made.

MODE Four-position switch which permits selection

> of Channel 1 only, Channel 2 only, Channel 1 and Channel 2 alternating with each successive time base sweep, or Channel 1 and Channel 2 chopped at a rate which provides display segments of about 2 usec

per channel.

**TRIGGER** Three-position switch to permit selection

of the internal triggering signal information from Channel 1 only, Channel 2 only or the channel being displayed (COMP). When the TRIGGER switch is set to COMP. the triagering-signal information will be the same as the display information selected

by the setting of the MODE switch.

**CALIBRATE** Screwdriver adjustment which permits the

operator to calibrate the input deflection sensitivity. This control is the output amplifier gain control and therefore affects both channels equally. See "First-Time

Operation".

FIRST-TIME OPERATION

The following procedure is intended to acquaint the operator with the operational adjustments and basic functions of the Type 3A3.

1. Install the Type 3A3 in an oscilloscope and allow at least a 10-minute warmup.

2. Set the controls as follows:

Channel 1 and Channel 2

**VOLTS/DIV** 10 mVOLTS Slightly clockwise VARIABLE

from the detent position.

**POSITION** Midranae ATTEN BAL Midrange AC STAB OFF AC GND DC, (+) and (-) GND

Common Controls

MODE CH<sub>1</sub> **TRIGGER** COMP **BANDWIDTH** LO

3. Set the companion time-base controls to display a freerunning sweep at 0.5 msec/div.

4. Use the Channel 1 POSITION control to move the trace to the graticule centerline.

5. Turn the Channel 1 VARIABLE control clockwise and recenter the trace by adjusting the RANGE control. The time lag between adjustment and trace movement is normal.

**BANDWIDTH** 

#### Operating Instructions — Type 3A3

- Continue this adjustment until the trace is near the graticule centerline with the VARIABLE control in the detent (CALIB) position and the POSITION control set at midrange.
- Use the POSITION control to center the trace. Then set the VOLTS/DIV switch to 5 mVOLTS and adjust the RANGE control to recenter the trace.
- Using the 10 mVOLTS position to determine the reference trace position, refine the adjustment of the RANGE control for minimum trace movement as the VOLTS/DIV switch setting is changed from 10m VOLTS to 1 mVOLTS.
- When the trace position has stabilized with the VOLTS/ DIV switch set to 1 mVOLTS, again determine the reference trace position with the VOLTS/DIV switch set to 10 mVOLTS.
- 10. Set the VOLTS/DIV switch to .1 mVOLTS and recenter the trace using the ATTEN BAL control. If the adjustment of the RANGE control was adequately refined, the ATTEN BAL control should now be within about 45° of midrange.
- 11. Set the MODE switch to CH 2 and repeat these adjustments
- 12. The next several steps pertain to the operational adjustment of the internal GAIN controls and the front-panel CALIBRATE control. These controls were set at the factory with the Type 3A3 installed in the vertical-axis compartment of a Tektronix Type 561A Oscilloscope. The crt vertical and horizontal deflection sensitivites always differ in any 560-Series oscilloscope. Moreover, the deflection sensitivities of the same axis in any two 560-Series oscilloscopes may also differ. Because of these differences, the input deflection sensitivity of the Type 3A3 should always be checked when it is first installed in an oscilloscope or moved from one compartment to the other in the same oscilloscope.
- 13. Set the MODE switch to CH 1 and the Channel 1 VOLTS/DIV switch to 10 mVOLTS. Apply a 50-mvolt peak-to-peak signal to the Channel 1 (+) input connector from an oscilloscope amplitude calibrator. (The following adjustments will be only as accurate as the voltage accuracy of the amplitude calibrator.) Set the Channel 1 (+) AC GND DC switch to DC.
- 14. Set the POSITION control to obtain two traces separated by several major graticule divisions. If adequate range is available, set the CALIBRATE control for exactly 5 major graticule divisions separation between the traces. Do not include the thickness of the trace in the measurement. If inadequate range is available or if the control is set near either extreme, perform steps 15 and 16. Otherwise, proceed to step 17.
- 15. The Type 3A3 should be in the left-hand compartment of the oscilloscope for this and the next step. (An exception to this is discussed in step 27 of the Calibration Procedure in Section 5 of this manual.) Reset the CALIBRATE control to midrange. Set the internal Channel 1 GAIN control (R175) for exactly 5 major graticule divisions separation between the two traces. Set the

- 1 (+) AC GND DC switch to GND, the MODE switch to CH 2, the Channel 2 (+) AC GND DC switch to DC, and the Channel 2 VOLTS/DIV switch to 10 mVOLTS.
- 16. Move the signal connection to Channel 2 and adjust the Channel 2 internal GAIN control (R375) for exactly 5 major graticule divisions separation between the two traces.
- 17. Step 16 completes the operational adjustments. If you now choose to move the Type 3A3 to the other compartment of the oscilloscope, reset the CALIBRATE control as described in step 14. The following steps are a self-demonstration procedure intended to illustrate some basic concepts pertaining to dual-trace operation of the Type 3A3.
- 18. Set all four AC GND DC switches to GND and the MODE switch to ALTER. There should now be two traces on the crt; one controlled by the Channel 1 POSITION control and the other by the Channel 2 POSITION control. Position one trace about 2 major divisions above the graticule centerline and the other about 2 major divisions below. Set the time-base sweep rates to 50 msec/div. Although the previous sweep rate appeared to present a simultaneous display of the two traces, the slower sweep rate should now make it apparent that the traces are presented alternately (ALTER). This can be a disadvantage when using Alternate mode with slow sweep rates.
- 19. Set the MODE switch to CHOP. Note that the traces now appear to be simultaneous. (If your oscilloscope has a rear-panel CATHODE SELECTOR switch, set it to the CHOPPED BLANKING position.) Set the time-base sweep rate to 2 usec/div and the trigger controls for a triggered display. You should now note that each trace is made up of segments about  $2 \mu \text{sec}$  long. The segmented appearance will rarely be as obvious as it is now since the display will not normally be triggered in this manner. However, when one-shot signals or signals which are harmonically related to the trace-switching rate are involved, the segmented appearance will be a disadvantage when using the Chopped mode with fast sweep rates. Additional information about both modes is included later in this section under "Dual Trace Operation".

#### GENERAL OPERATING INFORMATION

#### Signal Input Connections

Ordinary unshielded test leads can sometimes be used to connect the Type 3A3 to a signal source, particularly when a high-level, low-frequency signal is monitored at a low-impedance point. However, when any of these factors is missing, it becomes increasingly important to use shielded signal cables. In all cases, the signal-transporting leads should be kept as short as practical.

When making single-ended input measurements, be certain to establish a common-ground connection between the instrument under test and the Type 3A3. The shield of a coaxial cable is normally used for this purpose.

Differential measurements require no common-ground connection' and, therefore, are less susceptible to interference by ground-loop currents. Some problems with stray magnetic coupling into the signal-transporting leads can also be minimized by using a differential rather than a single-ended measurement. These considerations are discussed later in this section under "Differential Operation".

It is always important to consider the signal-source loading and the resulting change in the source operating characteristics due to the signal-transporting leads and the input circuit of the Type 3A3. The circuit at the input connectors can normally be represented by a 1-megohm resistance to ground paralleled by 47 pf. A few feet of shielded cable may increase the parallel capacitance to 100 pf or more. In many cases, the effects of these resistive and capacitive loads are not negligible, and it may be desirable to minimize them through the use of an attenuator probe.

Attenuator probes not only decrease the resistive and capacitive loading of a signal source, but also extend the measurement range of the Type 3A3 to include substantially higher voltages. Passive attenuator probes having attenuation factors of X10, X100, and X1000, as well as other special-purpose types, are available through your Tektronix Field Engineer or Field Office.

Some measurement situations require a high-resistance input to the Type 3A3 without the signal loss that would result from the use of a passive attenuator probe. This problem may be solved by using a cathode-follower probe such as the P500CF or the floating input provision of the Type 3A3.

The floating input provision applies only to dc-coupled signals which permit the use of the .1 mVOLTS through 10 mVOLTS positions of the VOLTS/DIV switch. Since no input attenuator is used at these switch positions, the internal grid-return resistor alone establishes the 1-megohm input resistance. This resistor can be disconnected by removing a special wire link from the attenuator etched wiring board (see Fig. 2-1). The signal source must then provide a dc path for the tube grid current.

The grid current is typically less than 1 nanoampere, but may be several times higher depending upon the parameters of the individual tube. The signal-source impedance is therefore an important factor since grid current will produce a dc voltage offset. For example, a 1-nanoampere grid current through 10 megohms produces a 10-mvolt offset; this may result in a significant error where small signal voltages are of concern.

The high-frequency response will also depend upon the signal-source impedance since various shunt capacitances between the source and the input grid must charge and discharge through that impedance.

The grid-return link must be connected when a VOLTS/ DIV switch position other than those mentioned previously is used so that the attenuation factor of the input attenuators will be correct.

<sup>3</sup>However, the dc plus peak ac voltages on the test points with respect to the chassis potential of the Type 3A3 should be limited to the levels listed in Section 1 under "Common-Mode Rejection" and "Maximum Common-Mode Amplitudes". Higher levels will degrade the common-mode rejection ratio.

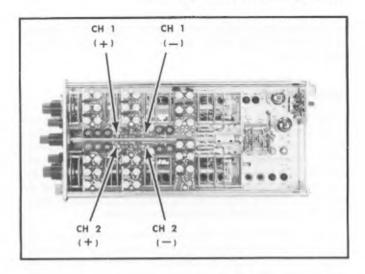


Fig. 2-1 Location of removable wire links for floating input provision.

#### **Display Polarity**

Single-ended signals can be applied to either the (+) or (—) input connector. If the (+) input is chosen, positive-going changes in the input signal will cause the trace to be deflected upward and negative-going changes will cause it to be deflected downward. If the (—) input is chosen, input-to-display polarity relationship will be reversed.

A similar polarity relationship exists for differentially applied signals, but pertains to the direction of voltage change at one input with respect to the other rather than with respect to chassis potential.

#### **Deflection Factor**

The amount of trace deflection produced by a signal is determined by the signal amplitude, the attenuation factor (if any) of a probe, the setting of the VOLTS/DIV switch, and the setting of the VARIABLE control. The calibrated deflection factors indicated by the VOLTS/DIV switch apply only when the VARIABLE control is set in the detent (CALIB) position.

The range of the VARIABLE control is at least 2.5:1 and provides uncalibrated deflection factors covering the full range between the fixed settings of the VOLTS/DIV switch. The control can be set to extend the deflection factor to at least 25 volts/div.

#### **Voltage Comparison Measurements**

Some applications require a set of deflection factors other than the fixed values provided by the VOLTS/DIV switch. One such application is comparison of signal amplitudes by ratio rather than by absolute voltage. To accomplish this, apply a reference signal to either channel of the Type 3A3. Set the VOLTS/DIV switch and VARIABLE control so that the reference display covers the desired number of graticule divisions. Do not change this setting of the VARIABLE control throughout the subsequent comparisons. The setting of the VOLTS/DIV switch can be changed, however, to

#### Operating Instructions — Type 3A3

accomodate large ratios. In doing so, regard the numbers which designate the switch position as ratio factors rather than voltages.

#### **Differential Operation**

The Type 3A3 differential input provisions may be used to eliminate interfering signals such as ac line-frequency hum. Single-ended measurements sometimes yield unsatisfactory information because of hum resulting from ground-loop currents between the oscilloscope and the device under test. In other cases, it may be desirable to eliminate a dc voltage by means other than the use of a dc-blocking capacitor which would limit low-frequency response.

These limitations of single-ended measurements are virtually eliminated in differential measurements. A differential measurement is made by connecting each of the two inputs of one channel to selected points in the test circuit. Since the chassis of the Type 3A3 need not be connected in any way to the test circuit, there are few limitations to the selection of these test points.

The oscilloscope display will indicate only the voltage difference between the two test points. Other signals which may exist between the individual test points and the chassis of the Type 3A3 will be of equal phase and amplitude and therefore do not constitute a difference signal between the test points. Nondifference signals such as this are referred to as "common-mode" signals.

The ability of the Type 3A3 to reject common-mode signals is indicated by the "common-mode rejection ratio". This ratio is at least 50,000:1 at the input connectors for the seven highest sensitivities from dc to 100 kc when the inputs are dc coupled. To show the significance of this characteristic, assume that a single-ended input signal consists of unwanted 60-cps hum at 10 volts peak-to-peak due to ground-loop currents and a desired signal at 10 mvolts peak-to-peak. If the operator attempts to display the desired signal with the VOLTS/DIV switch set at 2 mVOLTS, the 60-cps hum would produce a deflection equivalent to 5000 major graticule divisions and thus no useful information about the 10-mvolt signal could be obtained.

If the same 10-mvolt signal is monitored differentially so that the 60-cps hum signal is in common-mode at the inputs, no greater than one part in 50,000 of the common-mode signal would appear in the display. Thus, the desired signal would produce a display amplitude of 5 major graticule divisions with no more than 0.1 division of interference due to the common-mode signal.

There are a number of factors which can degrade the common-mode rejection ratio of the Type 3A3. The principal requirement for maximum rejection is for a common-mode signal to arrive at the grids of the two input tubes in precisely the same form. For example, a difference of only 0.01% in the attenuation factors of the two input attenuators may reduce the rejection ratio to 10,000:1. Likewise, any difference between the two signal-transporting leads which connect the test circuit to the Type 3A3 will degrade the rejection ratio; ordinary attenuator probes may reduce the rejection ratio to 100:1 or less. However, P6023 Probes have adjustable attenuation factors which permit them to be used with minimum reduction in the common-mode rejection ratio.

Outside influences such as magnetic fields can also degrade the performance, particularly when low-level signals are involved. This type of interference can be minimized by using the same type of signal-transporting lead for each input. Moreover, where an interfering magnetic field cannot be avoided, the two leads should be equally exposed to the field, if possible, by taping or twisting them together throughout most of their length. Low-frequency measurements can be similarly protected by using a shielded cable which contains a twisted pair of conductors.

Differential measurements are also useful for monitoring any push-pull signal regardless of whether interfering signals are present or not.

#### P6023 Probes

The following is recommended when using P6023 Probes for differential measurements:

- Connect one probe for single-ended operation. Obtain a triggered display of an appropriate square-wave signal such as that from the oscilloscope amplitude calibrator. Adjust the probe attenuation for correct deflection sensitivity; then compensate the probe for proper square-wave response.
- 2. Connect the second probe and apply the square-wave signal to both probes at 100 volts peak-to-peak. Obtain a free-running sweep and adjust the attenuation of the second probe for maximum low-frequency cancellation. This is indicated by elimination of the two-trace appearance, resulting in one trace of minimum thickness.
- 3. Adjust the compensation of the second probe to minimize the amplitude of the differentiated pulses on the trace.
- 4. The probes are now ready for use at any sensitivity which employs the particular input attenuator used during steps 2 and 3. Whenever it is necessary to use a different input attenuator, steps 2 and 3 must be repeated for that attenuator. The input sensitivity group associated with each of the four attenuators is listed in Table 2-1.

TABLE 2-1

VOLTS/DIV Switch	Input Attenuator
.1 mVOLTS through 10 mVOLTS	X1
20 mVOLTS through .1 VOLTS	X10
.2 VOLTS through 1 VOLTS	X100
2 VOLTS through 10 VOLTS	X1000

#### **Dual-Trace Operation**

A partial demonstration of dual-trace operation is included in "First-Time Operation" near the beginning of this section. The choice of alternate or chopped dual-trace operation may be made from the following discussions and Table 2-2.

**Displaying Two Nonrepetitive Signals.** The Chopped Mode of operation provides good display resolution of nonrepetitive signals using sweep rates as fast as 0.1 msec/div. At this

sweep rate, each trace will consist of about 250 segments. One-channel operation should be used when faster sweep rates are required.

**Displaying Two Repetitive Signals** Either Chopped or Alternate mode can be used to display repetitive signals. The use of Chopped mode is generally confined to low-frequency signals, but can be used throughout the bandwidth of the

instrument. The only limitation is that the trace segments may become objectionably obvious with high sweep rates when there is a harmonic relationship between the triggering signal and the trace-switching signal. The use of Alternate mode is generally confined to signals of 250 cps or higher, and sweep rates of 5 msec/div or faster. With lower frequencies or slower sweep rates, the alternation of the traces may be objectionably obvious.

TABLE 2-2
Internal Triggering Recommendations

Signals	3A3 MODE Switch	3A3 TRIGGER Switch	Time-Base Trigger Coupling
Two of same or har- monically-related fre- quency, 250 cps and above.	ALTER	CH 1 or CH 2, whichever bears the lower fre- quency.	Ac
Two of the same or harmonically - related frequency, anywhere within full bandwidth. <sup>2</sup>	СНОР	CH 1 or CH 2	Ac, dc, or ac fast, as required.
Two of dissimilar and nonharmonically - related frequency, 1 kc and above.	ALTER	СОМР	Ac fast only.3
Two one-shot signals. Sweep rate limited to 0.1 mesc/div maximum.	СНОР	CH 1 or CH 2, whichever bears signals of earli- est occurrence.	Ac, dc, or ac fast, as required.

<sup>&</sup>lt;sup>2</sup>Occasionally the signals will be harmonically related to the chopping rate so that sweep rates above 0.1 msec/div will make the trace segments objectionably obvious.

#### X-Y Operation

The Type 3A3 can be operated in X-Y configuration with any 2- or 3-Series plug-in unit<sup>4</sup> except sampling units and certain time-base units which have no provisions for externally applied deflection signals. However, in applications involving precise phase-angle measurements between two sine-wave signals of the same frequency, a Type 3A3 should be used only with another Type 3A3. See Fig 2-2.

Two X-Y operated Type 3A3 plug-in units typically exhibit less than 2° output phase difference with in-phase 100-kc input signals (with the BANDWIDTH switch set to HI). Moreover, the two units can be specially calibrated for 0° phase difference at any particular frequency up to 500 kc (see step 27 in the Calibration Procedure, Section 5). If the Type 3A3 is operated with a unit of a different type, an output phase difference of some what more than 2° at 100 kc should be expected.

For many applications, the plug-in unit deflection sensitivities for each axis should be checked and adjusted, if

<sup>4</sup>Does not apply to Tektronix Type 565 and RM565 Oscilloscopes which use only vertical plug-in units. However, external horizontal deflection signals can be applied for applications other than precise phase-angle measurements.

necessary. Among the applications where this is not required is frequency comparison (Lissajous displays).

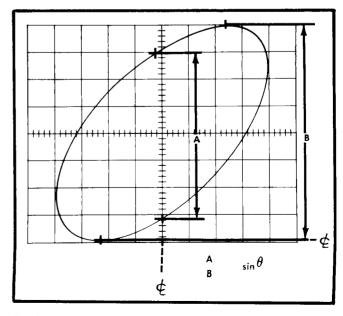


Fig. 2-2. X-Y method of calculating phase difference  $\boldsymbol{\theta}$  of two sine waves,

With time bases which do not provide ac-fast trigger coupling, it may be difficut or impossible to obtain a stable display.

#### Operating Instructions — Type 3A3

Dual-X-Y displays can be obtained using two Type 3A3 plug-in units or one Type 3A3 and two channels of a Type 3A74. The left-hand unit should be set for Chopped operation and the right-hand unit for Alternate operation.

#### **AUXILIARY FUNCTIONS**

#### **Output Cathode Followers**

Pins 11 and 12 of the Type 3A3 interconnecting plug provide a ground-referenced, low-impedance, differential output signal which can be selected from either input amplifier or from the common output amplifier by setting the TRIGGER switch. Jacks may be installed in the rear panel of the oscilloscope for access to these output (BNC jacks recommended: Type UG1094/U, Tektronix part number 131-126.)

The output signals may be used either single-ended or differentially for applications which include driving slave oscilloscopes and X-Y plotters. Load resistance per side must be 100 k or greater and load capacitance should be minimized since the output frequency response decreases as load capacitance increases.

# SECTION 3 CIRCUIT DESCRIPTION

#### Introduction

This portion of the manual contains a description of the Type 3A3 circuitry keyed to the block diagram and schematics in Section 6.

#### INPUT AMPLIFIERS

The following description pertains to both the Channel 1 and Channel 2 Input Amplifiers, but circuit reference numbers for Channel 1 are used.

The (+) input coupling switch (SW101) permits selection of ac or dc signal coupling, or grounding of the attenuator input without grounding the signal source. The GND position provides a ground reference for the unused grid in single-ended input applications. It also permits ac-coupling capacitor C101 to be charged or discharged while the amplifier is insensitive to transients. The output end of C101 is grounded and R101 is placed between the (+) connector and the input side of C101 to limit charging current and source loading.

The VOLTS/DIV switch provides input attenuators ranging from X1 to X1000. Several desirable characteristics are provided by these attenuators:

- 1. The input time constant is established at about 47  $\mu$ sec and equalized at all settings of the VOLTS/DIV switch for both input connectors. In the (+) X1 position, this is accomplished by adjusting C109 with respect to R113. C105A, C106A, and C107A serve the same purpose for the other positions.
- 2. The resistive (low-frequency) attenuation ratios of the (+) and (—) attenuators are equalized by adjusting R105F, R106F, and R107F.
- Attenuator compensation and equalization of the (+) and (—) attenuator compensations are obtained by adjusting C105C, C205C, C106C, C206C, C107C, and C207C.

A V114 grid current of several hundred picoamperes is normal and produces a voltage drop of several hundred µvolts across R113. GRID CURRENT ZERO R110 is set to restore the grid voltage to zero in the presence of the R113 voltage drop. For special applications, the link between the grid of V114 and R113 may be removed to provide a substantially higher input resistance than the 1 megohm of R113 (with sensitivities of 10 mvolts/div and higher). R113 must be connected when the X10, X100, or X1000 attenuators are used so that the attenuation ratios will be correct.

D113 limits V114 grid current during tube warmup.

V114-Q114 and V214-Q214 form a cascode paraphase or cascode differential amplifier, depending on whether one or both inputs are used. For the amplifier to operate in a true differential manner, static and dynamic balances must be closely controlled. The first consideration is dc balance with zero volts on the grid of each tube. This involves two front-panel controls: RANGE and ATTEN BAL.

RANGE control R692 (shown on the Switching and Output Amp diagram) provides a differential adjustment of the V114 and V214 filament voltages. This control is set so that the plate currents (in part, a function of cathode temperature) are approximately equal when the grids are at zero volts.

ATTEN BAL R235 has the same purpose and effect as the RANGE control, but with a narrower range of adjustment and no thermal time lag. Current is added to the Q114 emitter and diverted from the Q214 emitter (or vice versa) so that the collector voltages of these transistors are equalized.

Q128 provides an essentially constant 6 ma; 4 ma is divided between V114 and V214 according to their grid voltages, and the remaining 2 ma passes through R124 to be absorbed by Q118. The voltage drop across R124 is constant because of the constant current; therefore, the Q114-Q214 base voltages are held constant with respect to the tube cathodes.

The dynamic range of the amplifier is limited to grid voltage differences of about 250 mvolts. This limit does not pertain to the grid voltages with respect to chassis potential, but only with respect to one another. Commonmode signal amplitudes (signals of equal amplitude applied in phase to the (+) and (—) inputs) up to ±10 volts peak at the grids will produce essentially no change in the division of the common-cathode current between the tubes. The common-cathode voltage will, however, follow the commonmode signal in the manner of a single cathode follower. This voltage variation causes an essentially equal variation at the Q114-Q214 bases so that the V114 and V214 plate-to-cathode voltages remain constant. This virtually eliminates any change in current division between the tubes due to differences in their parameters.

Since the impedance of the common-cathode current source is finite, a small but significant change in the total common-cathode current will occur. The additional current probably will not divide between the tubes in the same proportions as the basic current because of differences in mutual conductance. The current division is corrected by proper setting of DIFF BAL R131 so that current is inserted or removed (depending on instantaneous common-mode polarity) in the correct proportions at the emitters of Q114 and Q214.

C116 and C216 provide a small amount of positive feedback to neutralize the effects of tube interelectrode capacitances.

C214 supplements the stray capacitances in the V214 plate circuit to provide a predictable load time constant. This time constant is important only in the presence of common-mode signals and must then essentially equal the V114 plate-circuit time constant. Thus, C114 is adjusted to equalize these time constants so that maximum common-mode rejection is maintained as frequency increases.

C115 and C215 equalize the Q114 and Q214 collector time constants at stable values for optimum amplifier characteristics for both common-mode and non common-mode signals.

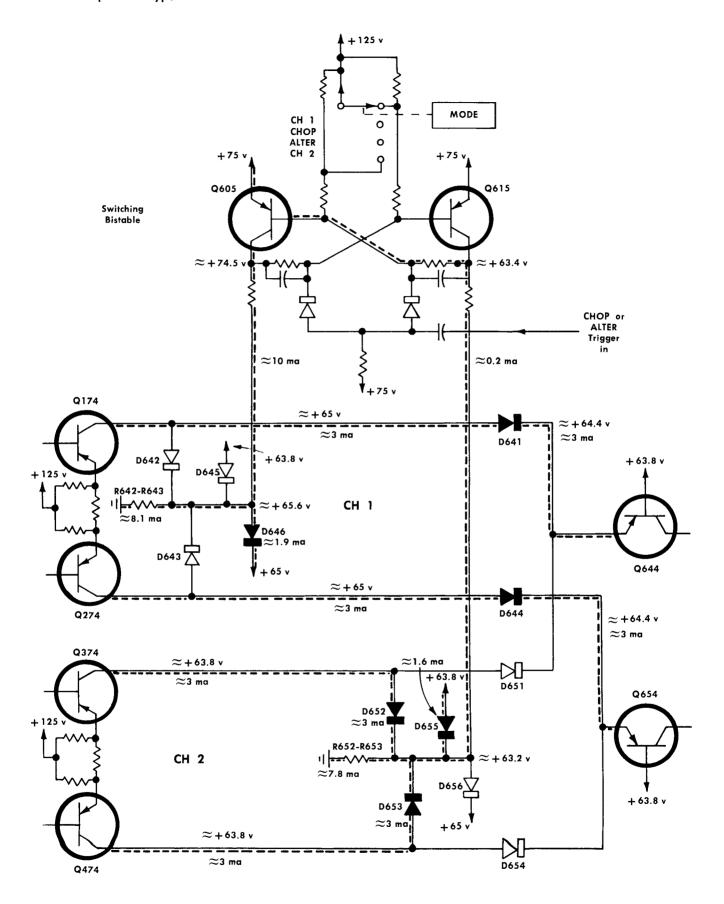


Fig. 3-1. Channel switching voltages and currents.

Emitter followers Q143 and Q243 provide interstage isolation.

The Q154-Q254 stage includes frequency-compensated degenerative common-emitter coupling. VAR DC BAL D159 is set so that the Q154 and Q254 emitter currents will be equal when their emitter voltages are equal. With this balanced condition, there is no current between emitters through the attenuator components.

A signal will have opposite polarities at the Q154 and Q254 bases and the emitters will follow the signal voltages. A potential difference then exists between the emitters, and current is diverted from one to the other through the attenuator elements. The magnitude of the current diversion is determined by the potential difference and the impedance of the attenuator elements according to Ohm's law. The total emitter current change is a combination of the diverted current and the R154-R254 current change.

C151 can be switched into the degenerative network on the four most sensitive ranges. Since the impedance of a capacitor is theoretically infinite at dc, there is essentially no current diversion and low-frequency information such as drift is greatly attenuated.

The common emitter impedance decreases with frequency due to C251 in parallel with the resistive elements of the attenuator. This extends and permits optimizing the amplifier high-frequency response.

C260 shunts some high-frequency current away from the Q163 and Q263 bases to limit the compensation in the common emitter network of the Q154-Q254 stage. When the BANDWIDTH switch is set to LO, C261 parallels C260 and limits the bandwidth to about 5 kc.

Q163 and Q263 are conventional emitter followers. The signal for the Trigger Amplifier is taken from these emitters and, therefore, is essentially unaffected by the POSITION, GAIN, and VARIABLE controls. The signal is available to the Trigger Amplifier at all times regardless of the setting of the MODE switch.

The degenerative common-emitter coupling in the Q174-Q274 stage is similar to that in the Q154-Q254 stage. VARI-ABLE control R275 permits changing the Input Amplifier gain over a range of at least 2.5:1. Internal GAIN control R175 permits matching the gain of the Channel 1 Input Amplifier to that of Channel 2, and at the proper magnitude for the Output Amplifier.

Since the Q174 and Q274 collectors drive low-impedance points in the Output Amplifier, there is essentially no signal voltage at their collectors. The dc portion of the current signal can be altered by resetting the POSITION control. When the dc portions are equal, the trace should be centered on the crt.

#### SWITCHING AND OUTPUT AMPLIFIER

The conduction state of Switching Bistable Q605-Q615 determines which Input Amplifier will be connected to the Output Amplifier.

Fig. 3-1 shows the circuit conditions when the MODE switch is set to CH 1. With Q605 on, the R642-R643 current in Channel 1 is assumed by the transistor and the voltage across the resistors is clamped by D646. This clamped voltage is sufficiently positive with respect to the Q644-Q654

emitters to reverse bias D642-D643 and forward bias D641-D644. Thus, the Channel 1 current signal passes to the Output Amplifier. Conversely, Q615 assumes none of the R652-R653 current in Channel 2 and the voltage across the resistors is clamped by D655. This clamped voltage is sufficiently negative with respect to the Q644-Q654 emitters to forward bias D652-D653. This reduces the Q374-Q474 collector voltages slightly and reverse biases D651-D654. Thus, the Channel 2 current signal is prevented from reaching the Output Amplifier.

When the MODE switch is set to CH 2, the conduction state of the Q605-Q615 Switching Bistable is reversed. The Channel 1 current signal is then diverted by D642 and D643 while the Channel 2 signal passes to the Output Amplifier through D651 and D654.

The CHOP and ALTER positions of the MODE switch permit the Q605-Q615 Switching Bistable to be electronically switched by pulses from the Q625-Q635 Driver Multi.

The Driver Multi is locked in an inoperative state when the MODE switch is set to either CH 1 or CH 2. But in the Chopped mode, the Driver Multi is astable and provides switching pulses to the Switching Bistable through T621 at intervals of 2 to 3  $\mu$ sec. Thus, the Output Amplifier signal alternates between Channel 1 and Channel 2 at a rate sufficiently high to produce a display which appears to consist of simultaneous continuous traces for both channels (with sweep rates of 0.2 msec/div and slower).

The Driver Multi signal from the collector of Q635 is coupled to the Crt Circuit of the oscilloscope to turn off the display for a brief interval while the Type 3A3 switches channels (chopped blanking).

In the Alternate mode, the Diver Multi is monostable; Q625 is normally off and Q635 is on. A pulse is received via pin 3 of the plug-in unit interconnecting plug at the completion of each time-base sweep. This pulse momentarily switches the Driver Multi, causing the Switching Bistable to change states. The display then shifts from one channel to the other for the duration of the next sweep. The Driver Multi reverts to its normal state long before the completion of the subsequent sweep.

The Sync Pulse Output connection at pin 4 of the plug-in unit interconnecting plug permits the Type 3A3 to be used for dual X-Y displays with some other multichannel plug-in units equipped with similar pin 4 connections (e.g. Type 3A74). The left-hand unit would be operated in Chopped mode to provide chopped blanking, and the right-hand unit in Alternate mode. The unit operating in Chopped mode would produce a rate-determining output signal at pin 4 of its connector. This signal would enter the second unit through pin 3 of its connector. Thus, the second unit would alternate between channels at the chopping rate of the first.

The Output Amplifier is driven by common-base stage Q644-Q654. Q644 and Q654 are the output halves of two cascode amplifiers operating differentially. The input halves are either Q174 and Q274 or Q374 and Q474 depending upon which channel is switched on.

The degenerative common-emitter coupling between Q664 and Q674, which includes the CALIBRATE control R665, is similar to that described for the Q154-Q254 stage of the Channel 1 Input Amplifier. V674A and B isolate transistors Q664 and Q674 from the high output dc level of the amplifier.

#### TRIGGER AMPLIFIERS

Q504 and Q514 form a differential amplifier employing degenerative common-emitter coupling. R511 is adjusted so that the output from the cathode followers will be balanced when the Q504-Q514 input is balanced. R509-R523 and

R519-R527 are connected between the collectors and R525 to permit adjustment of the cathode follower output dc level to zero volts. The fixed and variable capacitors such as C508 and C509 compensate for the high-frequency loading effect of the coaxial cables which carry the signal to the output cathode followers.

# SECTION 4 MAINTENANCE

#### PREVENTIVE MAINTENANCE

#### Cleaning the Interior

Internal cleaning should precede calibration since the cleaning process could alter the setting of certain calibration controls.

One way to clean the interior is by vacuum and/or low-pressure compressed air (high-velocity air could damage certain components). Hardened dirt may be removed with a soft paint brush, cotton-tipped swab, or cloth dampened with a water and mild detergent solution.

#### Lubrication

The contacts on the plug-in unit interconnecting jacks and plugs should be lightly lubricated with an oil of the type used on rotary-switch contacts (e.g. Beacon No. 2008-1). To extend the life of the contacts, clean and relubricate if the oil becomes contaminated with abrasive dust.

#### Visual Inspection

The instrument should be inspected occasionally for such defects as poor connections, broken or damaged ceramic terminal strips, imporperly seated tubes or transistors, and heat-damaged parts. The remedy for most visible defects is obvious. But damage from overheating is usually a symptom of less obvious trouble and unless the cause is determined before parts are replaced, the damage may be repeated.

#### **Tube and Transistor Checks**

Periodic preventive maintenance checks on the tubes and transistors used in the instrument are not recommended. The circuits within the instrument generally provide the most satisfactory means of checking tube or transistor useability. Performance of the circuits is thoroughly checked during recalibration so that substandard tubes and transistors will usually be detected at that time.

#### Recalibration

To insure accurate measurements, the instrument calibration should be checked after each 500 hours of operation or every six months if used intermittently. Complete calibration instructions are contained in Section 5.

The calibration procedure can be helpful in isolating major troubles in the instrument. Moreover, minor troubles not apparent during regular operation may be revealed and corrected during calibration.

#### Cleaning the Front Panel

Loose dust may be removed with a cloth and a dry paint brush. Water and mild detergents such as Kelite or Spray White may be used, but abrasive cleansers should not.

#### CORRECTIVE MAINTENANCE

#### General Information

Certain parts in the instrument are best replaced if definite procedures are followed as outlined in the following paragraphs.

Many electrical components are mounted in a particular way and selected for a particular physical size and shape to reduce or control stray capacitance. After repair, portions of the instrument may require recalibration; see Section 5.

#### Standard Parts

Many components in the instrument are standard electronic parts available locally. However, all parts can be obtained through your Tektronix Field Engineer or Field Office. Before purchasing or ordering, consult the parts list to determine the value, tolerance, and rating required.

#### **Special Parts**

Some parts are manufactured or selected by Tektronix to satisfy particular requirements, or are manufactured for Tektronix to our specifications. These and most mechanical parts should be ordered directly from your Tektronix Field Engineer or Field Office. See "Parts Ordering Information" and "Special Notes and Symbols" on the first page of Section 6.

#### Soldering

Special silver-bearing solder is used to establish a bond to the ceramic terminal strips in Tektronix instruments. This bond may be broken by repeated use (especially if ordinary tin-lead solder is used) or by excessive heating. Solder containing about 3% silver is recommended. Solder of this type is usually available locally, but may be purchased in one-pound rolls through your Tektronix Field Engineer or Field Office. Order by part number 251-514.

#### Soldering to Ceramic Strips:

- Use a wedge-shaped soldering-iron tip about ½-inch wide. This will allow you to apply heat directly to the solder in the terminal without touching the ceramic, thereby reducing the amount of heat required.
- 2. Maintain a clean properly tinned tip.
- Use a hot iron for a short time. A 50- to 75-watt iron having good heat storage and transfer properties is adequate.
- 4. Avoid putting pressure on the strip with the soldering iron or other tools. Excess pressure may cause the strip to crack or chip.

#### **Ceramic Terminal Strips**

Fig. 4-1 shows an assembled ceramic terminal strip.

Replacement strips with studs attached are supplied under a single part number and spacers under another number. The original spacers may be reused if undamaged.

Usually, a strip can be pried out of the chassis or pulled out with a pair of pliers. In some cases, you may choose to use a hammer and punch to drive out the studs from the opposite side of the chassis.

When the damaged strip has been removed, place new (or used, but undamaged) spacers in the chassis holes. Then, carefully force the studs of the new strip into the spacers until they are completely seated. If necessary, use a soft-faced mallet, tapping lightly directly over the stud area of the strip.

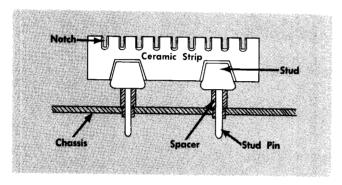


Fig. 4-1. Ceramic terminal strip assembly.

#### Switch Replacement

Individual wafers normally are not replaced in switch assemblies. Replacement switches may be ordered from Tektronix either unwired or with the associated wires and components attached. See the parts list in Section 6.

When soldering leads to a switch, do not let solder flow around and beyond the terminal rivet as this may destroy the contact spring tension.

#### **Tubes and Transistors**

Tubes and transistors should not be replaced unless actually defective. However, temporary substitution is often the fastest and best way to detect a defective tube or transistor. Before substituting a tube or transistor, it is suggested that circuit conditions be checked to be certain that a replacement tube or transistor will not be subject to damage. In some cases, these checks will also show whether or not the tube or transistor is at fault.

When circuit conditions are known to be safe, install a tube or transistor of the same type which is known to be good and check for proper operation. If the original tube or transistor is thus proved acceptable, return it to the socket from which it came to avoid unnecessary recalibration

It may be necessary to select from several tubes to obtain a replacement for the V114, V214, V314 or V414 position. It is recommended that prospective replacement tubes be aged for 50 to 100 hours before the selection is made. Aging may be accomplished in an aging rack or in the Type 3A3. Four factors should then be considered in selecting the replacement tube.

- Dc balance. The input stage should balance with the RANGE control set within the center 50% of its range.
- 2. Grid current. Should be less than 1 nanoampere.
- 3. Minimum microphonics.
- Ac balance. The dynamic characteristics of the two input tubes should be adequately matched to provide the required common-mode rejection ratio.

These characteristics may be verified by completing the following calibration steps in Section 5 for the affected channel: 1, 2, 4, 6, 12, 16, 18, and 20. When an adequate tube has been selected, it is suggested that steps 1 through 25 of the calibration procedure be performed.

#### Troubleshooting Aids

This manual and the instrument contain many features intended to speed and simplify maintenance. A block diagram which provides an overall picture of instrument operation is included with the schematic diagrams in the back of this manual. The schematic diagrams give the circuit reference number for each electrical component as well as important operating voltages, signals, and conditions for their measurement.

The instrument contains a number of stable metal-film resistors identified by their gray background color and color coding. If a resistor has three significant figures and a multiplier, it will be EIA color coded. If it has four significant figures and a multiplier, the value will be printed on the resistor. For example, a 333 k resistor will be color coded, but a 333.5 k resistor will have its value printed on the resistor body. The color coding sequence is shown in Fig. 4-2 and Table 4-1.

TABLE 4-1
Color Code Sequence

Color	1st Sig. Fig.	2nd Sig. Fig.	3rd Sig. Fig.	Multiplier	(±)% Toler- ance
Black	0	0	0	1	-
Brown	1	1	1	10	1
Red	2	2	2	100	2
Orange	ંડ	3	3	1,000	-
Yellow	4	4	4	10,000	-
Green	5	5	5	100,000	0.50
Blue	6	6	6	1,000,000	0.25
Violet	7	7	7	10,000,000	0.10
Grey	8	8	8	100,000,000	0.05
White	9	9	9	1,000,000,000	
Gold	ĺ			0.1	5
Silver				0.01	
No Color					10

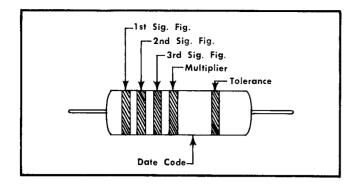


Fig. 4-2. Standard EIA color code for metal-film resistors.

Switch wafers shown on the circuit diagrams are coded to indicate the physical positions of the wafers on a rotary switch. The number portion of the code refers to the wafer position as counted from the front or driven end of the switch shaft. Letters F and R indicate whether the front or rear of the wafer is used to perform the particular switching function.

Fig. 4-3 identifies the polarity of the various diode types used in Tektronix instruments.

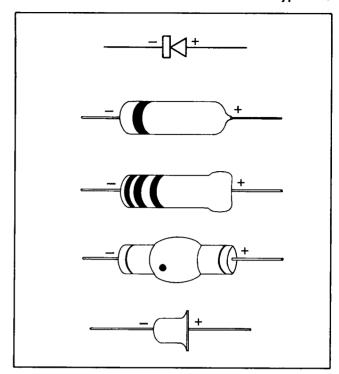


Fig. 4-3. Diode polarities.

#### **NOTES**

	<u></u>	
 	-	
	_	

### **SECTION 5**

## CALIBRATION AND VERIFICATION

#### Introduction

The Type 3A3 is a stable instrument which will provide many hours of trouble-free operation. However, to insure measurement accuracy, it is suggested that you recalibrate the instrument after each 500 hours of operation, or every six months if used intermittently. It will also be necessary to recalibrate certain sections when tubes, transistors, or other components are replaced.

The title of each numbered step in this procedure begins with either "Adjust" or "Check", thereby identifying the step function as calibration or verification. The continuity of the procedure will not be disrupted if you choose to skip the "Check" step or steps between two "Adjust" steps. The "Adjust" steps, however, should be completed in the order given and none should be skipped. Remember that you can be certain of proper overall operation only when all steps in the procedure have been completed.

Many steps in this procedure will be used twice; once for each channel. These steps have the form: "Adjust C116 (C316) for - - - ". This means that only C116 is to be adjusted when the step is used the first time. When the step is performed later for the other channel, only (C316) is to be adjusted.

#### NOTE

The performance standards described in this section of the manual are provided strictly as a guide to calibration and should not be construed as advertised performance specifications. However, if the instrument performs within the guide tolerances given in this procedure, it will also perform as listed in Section 1 of this manual.

#### **Equipment Required**

- Tektronix 560-Series Oscilloscope (except the Type 560). Steps involving X-Y operation of two Type 3A3 plug-in units cannot be performed in the Type 565 or Type RM565 Oscilloscopes. The oscilloscope used must be calibrated.
- Tektronix rigid plug-in unit extension. Tektronix part number 013-034.
- 3. Tektronix 2B- or 3B-Series time-base plug-in unit. This unit must be calibrated. (Not required with Type 565 or Type RM565 Oscilloscopes.)
- Autotransformer such as Variac or Powerstat. Required characteristics: Output voltage range covering the full line-voltage range of the oscilloscope (item 1). Rating of at least 800 volt-amperes.
- Ac voltmeter calibrated in rms for monitoring the autotransformer output. Required characteristics: 2% accuracy over the full line-voltage range of the oscilloscope.

- 6. Amplitude calibrator such as that which is part of a Tektronix Type 561A Oscilloscope. Required characteristics: Square-wave output with amplitudes ranging from at least 0.5 mvolt to 50 volts peak-to-peak in a 1, 2, 5 sequence. The actual calibrator amplitudes should be determined within about 0.25% before use. Calibrators in most Tektronix oscilloscopes can be checked by disabling the multivibrator so that the output will be dc voltages which correspond to the peak level of the various square-wave amplitudes. The output should be loaded by 1 megohm and the voltages checked with a high-impedance dc voltmeter which is accurate to about 0.1% of reading. Most Tektronix amplitude calibrators need be checked only through the range of 0.1 to 100 volts since these values will permit calculation of the accuracy of all lower voltages. Record the accuracy of each voltage as a + or - percentage for use during steps 8 through 13 of the Type 3A3 Calibration Procedure.
- 7. Square-wave generator such as the Tektronix Type 105. Required characteristics: Output frequencies of 100 cps, 1 kc, 2.5 kc, and 25 kc. Output impedance of 600  $\Omega$  or less. Output amplitude of about 100 volts peak-to-peak when unterminated. Risetime of 1  $\mu$ sec or less when unterminated
- 8. Tektronix 50  $\Omega$  termination unit. Tektronix part number 011-049 (BNC) or 011-045 (UHF).
- 9. (3) Tektronix 50  $\Omega$  X10 coaxial attenuators. Tektronix part number 010-314 (BNC) or 011-031 (UHF).
- Sine-wave generator such as the Hewlett-Packard Model 200CD. Required characteristics: Frequency of 100 kc. Output voltage variable from 60 mvolts (using external attenuators, if necessary) to at least 10 volts peak-topeak.
- 11. Tektronix input time constant standardizer 47 pf. Tektronix part number 011-068 (BNC).
- 12. (2) Tektronix X10 attenuator probes such as P6006.
- 13. Test oscilloscope such as the Tektronix Types 561A/2A63/2B67. Required characteristics: Vertical response from dc to at least 100 kc. Vertical sensitivity of at least 50 mvolts to 10 volts/div.
- 14. (Optional) A second Tektronix Type 3A3. Used for checks and adjustments applicable only to two Type 3A3 units which are to be used for X-Y displays.
- 15. Coaxial cables, coaxial adapters, and tools as required.

#### **Preliminary Instructions**

- 1. Remove the side covers from the oscilloscope.
- Install the Type 3A3 on an extension (see "Equipment Required", item 2) in the left-hand compartment of the oscilloscope. Install a time-base unit in the right-hand compartment of the oscilloscope (not applicable to Tektronix Type 565 or Type RM565 Oscilloscopes).

#### Calibration and Verification — Type 3A3

- Connect the oscilloscope and ac voltmeter (see "Equipment Required", item 5) to the autotransformer output (see "Equipment Required", item 4).
- 4. Connect the autotransformer to the appropriate linevoltage source and set for an output near the center of the line-voltage range for which the oscilloscope is wired (see tag on oscilloscope rear panel).
- 5. Set the Type 3A3 front-panel controls as follows:

Channel 1 and Channel 2

VOLTS/DIV 10 mVOLTS

VARIABLE Slightly clockwise from the detent (CALIB) position.

POSITION Midrange
ATTEN BAL Midrange
AC STAB OFF
AC GND DC (all) GND

Common controls

MODE CH 1
TRIGGER COMP
BANDWIDTH LO
CALIBRATE Midrange

- Set the oscilloscope INTENSITY control fully counterclockwise. Turn on the instrument power and allow at least 15 minutes for warmup.
- 7. Set the time-base controls for free running sweeps at 0.5 msec/div. Set the oscilloscope INTENSITY control to obtain a trace on the crt.

#### NOTE

Photographs on foldout pages following the schematics in the back of this manual show the location of each calibration adjustment.

#### **Procedure**

#### 1. Adjust Channel 1 RANGE and ATTEN BAL

#### NOTE

Steps 1 (a) through 1 (i) comprise a detailed description for correcting a severe misadjustment of the RANGE control followed by the related adjustment of the ATTEN BAL control. Since severe misadjustment is seldom encountered, any simplified adjustment method may be used which will provide the same end result; minimum trace movement as the VOLTS/DIV switch is turned throughout its range with the VARIABLE control set to the detent (CALIB) position.

- a. Use the appropriate POSITION control to center the trace.
- While noting the direction of trace movement, turn the appropriate VARIABLE control clockwise until either the control is in the detent (CALIB) position

- or the trace is positioned to the top or bottom of the graticule.
- c. Recenter the trace by turning the RANGE (front panel) control clockwise to move it upward or counterclockwise to move it downward. The time lag between adjustment and trace movement is normal.
- d. If necessary, repeat the adjustment so that the trace is within 1 major division of graticule center with the VARIABLE control in the detent (CALIB) position and with the POSITION control set at midrange.
- e. Use the POSITION control to center the trace.
- f. Set the VOLTS/DIV switch to 5 mVOLTS and adjust the RANGE control to recenter the trace within about one-half major graticule division. Refine this adjustment with the VOLTS/DIV switch set first at 2 mVOLTS and then at 1 mVOLTS.
- g. Set the VOLTS/DIV switch to 10 mVOLTS and repeat steps (e) and (f) until it is possible to change the VOLTS/DIV switch setting from 10 mVOLTS to 1 mVOLTS with a trace shift of less than 1 minor graticule division.
- h. Set the VOLTS/DIV switch to .1 mVOLTS and adjust the ATTEN BAL control to recenter the trace.
- i. Reset the VOLTS/DIV switch to 10 mVOLTS.

#### 2. Adjust VAR DC BAL R159

 Adjust VAR DC BAL R159 (R359) so that there is minimum trace movement as the front-panel VARI-ABLE control is turned throughout its range.

# 3. Adjust Channel 2 RANGE, ATTEN BAL, and VAR DC BAL R359

 a. Set the MODE switch to CH 2 and repeat steps 1 and 2 for the comparable Channel 2 adjustments.

#### 4. Check Channel 2 Noise, Microphonics, and Drift

- a. Set the BANDWIDTH switch to HI and the VOLTS/ DIV switch to .1 mVOLTS.
- b. Check for 0.4 major graticule division or less of noise on the trace.
- c. Set the VOLTS/DIV switch to .2 mVOLTS, the AC STAB switch to AC STAB, and the time-base TIME/DIV switch to 10 mSEC.
- d. Tap the front panel of the Type 3A3 with the end of one finger and check that the trace deflection due to microphonics is 4 major graticule divisions peak-to-peak or less.
- e. Set the VOLTS/DIV switch to 10 mVOLTS, the AC STAB switch to OFF, and the time-base TIME/DIV switch to .5 mSEC.

#### NOTE

Steps "f" through "i" need be completed for only one channel.

- f. Set the power-line autotransformer for 105 vac (or the lower line-voltage limit for which the instrument is wired) and allow about 30 seconds for thermal stabilization.
- g. Use the POSITION control to center the trace.
- h. Set the autotransformer for 125 vac (or the upper line-voltage limit for which the instrument is wired) and allow 45 seconds for thermal stabilization.
- i. Check that the trace is now within one-half major division of graticule center. Failure in this check may indicate improper regulation of the oscilloscope —12.2-volt power supply.
- Reset the autotransformer for the oscilloscope midrange operating voltage.

#### 5. Check Channel 1 Noise, Microphonics, and Drift

 a. Set the MODE switch to CH 1 and repeat step 4 for Channel 1.

## 6. Adjust Channel 1 GRID CURRENT ZERO (+) R110 and (-) R210

- a. Set the MODE switch to CH 1 and the VOLTS/DIV switch to 1 mVOLTS.
- Set (+) GRID CURRENT ZERO R110 (R310) and (-) GRID CURRENT ZERO R210 (R410) fully counterclockwise.
- c. Use the POSITION control to center the trace.
- d. Set the (+) AC GND DC switch to DC and check that the trace is now no greater than two major divisions from graticule center. This is a check on on uncompensated grid current from V114 (V314) where one major graticule division corresponds to 1 nanoampere. If in excess of this amount, the tube should be replaced with one which has been properly aged.
- e. Adjust GRID CURRENT ZERO R110 (R310) so there is essentially no trace movement as the (+) AC GND DC switch is moved back and forth between GND and DC.
- f. Set the (+) AC GND DC switch to GND and repeat steps (c) through (e) using R210 (R410) and the (-) AC GND DC switch to check and compensate for the V214 (V414) grid current.
- g. Reset the (--) AC GND DC switch to GND.

# Adjust Channel 2 GRID CURRENT ZERO (+) R310 and (—) R410

 a. Set the MODE switch to CH 2 and repeat step 6 for Channel 2.

# 8. Adjust Channel 2 GAIN R375 and CALIBRATE (front panel)

 a. Set the VOLTS/DIV switch to 10 mVOLTS and the the BANDWIDTH switch to HI.

- b. Set the amplitude calibrator for 50 mvolts peak-topeak (see "Equipment Required", item 6).
- Use coaxial cable to connect the amplitude calibrator output to the channel 2 (—) input connector.
- d. Set the (—) AC GND DC switch to DC and use the POSITION control to center the display.
- e. Adjust GAIN R375 for 5 major graticule divisions of deflection
- f. Reset the (-) AC GND DC switch to GND.

#### 9. Check Channel 2 Attenuators

 a. Set the (—) AC GND DC switch to DC and check for the correct deflection amplitude at the various VOLTS/DIV switch settings according to Table 5-1.
 Remember to allow for the amplitude calibrator accuracy.

TABLE 5-1

A 120 . 1	VOLTE (DIV	Deflection (Major	Tolerance (Minor
Amplitude Calibrator	VOLTS/DIV Switch	Graticule Divisions)	Graticule Divisions)
0.5 mv	.1 mVOLTS	5	±0.75
1 mv	.2 mVOLTS	5	±0.75
2 mv	.5 mVOLTS	4	±0.6
5 my	1 mVOLTS	5	±0.75
10 mv	2 mVOLTS	5	±0.75
20 mv	5 mVOLTS	4	±0.6
50 mv	10 mVOLTS	5	±0.75
0.1 v	20 mVOLTS	5	±0.75
0.2 v	50 mVOLTS	4	±0.6
0.5 v	.1 VOLTS	5	±0.75
1 v	.2 VOLTS	5	±0.75
2 v	.5 VOLTS	4	±0.6
5 v	1 VOLTS	5	±0.75
10 v	2 VOLTS	5	±0.75
20 v	5 VOLTS	4	±0.6
50 v	10 VOLTS	5	±0.75

b. Reset the (—) AC GND DC switch to GND and disconnect the signal cable.

#### 10. Adjust Channel 1 GAIN R175

- Set the MODE switch to CH 1 and the VOLTS/DIV switch to 10 mVOLTS.
- Set the amplitude calibrator for 50 mvolts peak-topeak.
- c. Use coaxial cable to connect the amplitude calibrator output to the Channel 1 (—) input connector.
- d. Set the (—) AC GND DC switch to DC and center the display.
- e. Adjust GAIN R175 for exactly 5 major divisions of deflection. Remember to allow for the amplitude calibrator accuracy.

#### 11. Check Channel 1 Attenuators

a. Repeat step 9.

#### 12. Adjust Channel 1 DIFF BAL R131

- a. Terminate the square-wave generator output and connect it to both the (+) and the (-) input connectors. (See "Equipment Required", items 7 and 8).
- b. Set the VOLTS/DIV switch to 2 VOLTS and the (—) AC GND DC switch to DC.
- Set the generator frequency to 100 cps and amplitude for about a 2-volt output (1 major graticule division).
- d. Set the (+) AC GND DC switch to DC and the VOLTS/DIV switch to .2 mVOLTS. Use the ATTEN BAL control to center the display. The display should consist of either one or two traces.
- e. Adjust DIFF BAL R131 (R331) for maximum low-frequency cancellation as indicated by the elimination of the two-trace appearance so that only a single trace of minimum thickness remains. Disregard any pulses on the trace. If necessary, use the ATTEN BAL control as a position control to keep the display near the center of the crt.

#### Adjust Channel 1 Attenuator Dc Differential Balance R105F, R106F, and R107F

- a. Set the VOLTS/DIV switch to 10 VOLTS and the (+) AC GND DC switch to GND.
- b. Turn off the square-wave generator output and remove the termination. Reconnect the generator to both the (+) and the (--) input connectors.
- Turn on the generator and set the output to 20 volts (2 major graticule divisions).
- d. Set the (+) AC GND DC switch to DC and the VOLTS/DIV switch to 20 mVOLTS.
- e. Adjust R105F (R305F) for maximum low-frequency cancellation resulting in one trace of minimum thickness. Disregard any differentiated pulses which may be on the trace.
- f. Set the VOLTS/DIV switch to .2 VOLTS.
- g. Set the generator output to about 100 volts. This is the maximum output of a Tektronix Type 105.
- Adjust R106F (R306F) for maximum low-frequecy cancellation resulting in one trace of minimum thickness,
- Set the VOLTS/DIV switch to 2 VOLTS and adjust R107F (R307F) for maximum low-frequency cancellation.
- Turn off the generator output and set both AC GND DC switches to GND.

#### 14. Adjust Channel 2 DIFF BAL R331

a. Set the MODE switch to CH 2 and repeat step 12.

#### Adjust Channel 2 Attenuator Dc Differential Balance R305F, R306F, and R307F

- a. Repeat step 13.
- b. Remove the signal connections from the Type 3A3.

#### Adjust Channel 2 Input Neutralization C316 and C416

- a. Set the VOLTS/DIV switch to 10 mVOLTS and the (+) AC GND DC switch to DC.
- Set the time-base controls for free-running sweeps at about 0.5 msec/div.
- c. Terminate the square-wave generator output and connect it to the (+) input. If a Tektronix Type 105 is used, place one X10 coaxial attenuator between the generator output and the 50-ohm termination.
- d. Set the generator frequency to 1 kc and output amplitude for 5 major divisions of deflection.
- e. Obtain a triggered display.
- f. Move the (—) AC GND DC switch back and forth between the GND and DC positions and adjust C316 (C116) so that the shape of the pulse display is most nearly the same for the two switch settings.
- g. Set the (—) AC GND DC switch to DC and move the signal connection to the (—) input.
- h. Move the (+) AC GND DC switch back and forth between the GND and DC positions and adjust C416 (C216) so that the shape of the pulse display is most nearly the same for the two switch settings.
- i. Reset both AC GND DC switches to GND.

#### Adjust Channel 1 Input Neutralization C116 and C216

a. Set the MODE switch to CH 1 and repeat step 16.

#### 18. Adjust Channel 1 X1 Attenuator Input Constant C109 and C209

- a. Move the square-wave signal connection from the Type 3A3 to the Input Time Constant Standardizer; then connect the standardizer to the (+) input connector.
- b. Set the (+) AC GND DC switch to DC and set the generator amplitude for about 5 major graticule divisions of deflection.
- c. Obtain a triggered display.
- d. Adjust C109 (C309) to make the top of the displayed square wave as straight and flat as possible.
- e. Set the (+) AC GND DC switch to GND and move the signal connection to the (-) input.
- f. Set the (—) AC GND DC switch to DC and adjust C209 (C409) to make the bottom of the displayed square wave as straight and flat as possible.
- g. Reset the (-) AC GND DC switch to GND.

#### Adjust Channel 2 X1 Attenuator Input Time Constants C309 and C409

- a. Set the MODE switch to CH 2 and repeat step 18.
- b. Disconnect the input signal.

# Adjust Channel 2 High-Frequency Differential Balance C314 and C315

- a. Remove the time-base plug-in unit (not applicable to Tektronix Tye 565 and Type RM565 Oscilloscopes) and install any 2A- or 3A-Series plug-in unit in the right-hand compartment.
- b. Connect the sine-wave generator output to both the (+) and the (-) input connectors of the Type 3A3 in the left-hand compartment.
- c. Set the Type 3A3 VOLTS/DIV switch to 2 VOLTS and the (+) AC GND DC switch to DC.
- d. Set the generator frequency to 100 kc and output amplitude to about 10 volts peak-to-peak (5 major graticule divisions of vertical deflection).
- e. Make a single-ended connection between the sine-wave generator output and the input of the plug-in unit in the right-hand compartment. (If a Tektronix Type 565 or Type RM565 Oscilloscope is being used, make the connection to the appropriate EXT. HORIZ. IN connector.)
- f. Set the right-hand unit VOLTS/DIV switch and VARI-ABLE control (EXT. HORIZ. GAIN for Type 565 and Type RM565) for about 10 major graticule divisions of horizontal deflection.
- g. Set the Type 3A3 (—) AC GND DC switch to DC and VOLTS/DIV switch to 1 mVOLTS.
- h. Note that by adjusting C314 (C114) the display can be made to appear as a circle, an elipse, or an essentially straight line. Set the capacitor to obtain the best straight-line appearance.
- i. Note that by adjusting C315 (C115) the display can be made to pivot on its center with a resulting loss of the straight-line appearance. Set the capacitor so that the vertical positions of the right and left ends of the display are most nearly the same.
- Repeat steps (h) and (i) until no further improvement can be made.

#### NOTE

A straight line which is perfectly parallel with the horizontal lines of the graticule and has no vertical amplitude whatsoever would indicate an infinite common-mode rejection ratio.

- k. Set the Type 3A3 VOLTS/DIV switch to .1 mVOLTS.
- Refine the adjustment of C314 (C114) and C315 (C115) to obtain a display which most nearly exhibits the characteristics described in the preceding NOTE. The probable result is a horizontal figure eight having a vertical amplitude of less than 2 major graticule divisions peak-to-peak. Make this figure eight as nearly symmetrical as possible.

#### NOTE

A final vertical peak-to-peak display amplitude of major graticule divisions with 10 volts peak-to-peak applied in common-mode would indicate a common-mode rejection ratio of 50,000:1 (10 volts divided by  $200~\mu$ volts = 50,000). This dynamic test can be used with other frequencies and common-mode amplitudes to evaluate performance with a particular set of circumstances.

m. Set the Type 3A3 VOLTS/DIV switch to .1 VOLTS and both AC GND DC switches to GND. Remove the signal connections.

# 21. Adjust Channel 1 High-Frequency Differential Balance C114 and C115

- a. Set the MODE switch to CH 1 and repeat step 20.
- b. Remove the signal connections and the right-hand plug-in unit. Reinstall the time-base plug-in unit in the right-hand compartment and restore the freerunning sweeps at 0.1 msec/div.

# 22. Adjust Channel 1 Input Attenuator Compensation C105C, C106C, C107C, C205C, C206C, and C207C

- a. Terminate the square-wave generator output and connect it to the (+) input.
- b. Set the (+) AC GND DC switch to DC.
- c. Set the generator frequency to 2.5 kc and the output amplitude for about 5 major graticule divisions of deflection.
- d. Obtain a triggered display.
- e. Adjust C105C (C305C) to make the top leading corner of the square-wave display as square as possible.
- f. Set the VOLTS/DIV switch to 1 VOLTS and increase the generator output amplitude to obtain about 5 major divisions of deflection.
- g. Adjust C106C (C306C) to make the top leading corner of the square-wave display as square as possible.
- h. Set the VOLTS/DIV switch to 2 VOLTS and increase the generator output amplitude to obtain about 5 major divisions of deflection.
- Adjust C107C (C307C) to make the top leading corner of the square-wave display as square as possible.
- j. Set the VOLTS/DIV switch to 10 VOLTS.
- k. Disconnect the square-wave generator and set the time-base controls for free-running sweeps.
- Connect the sine-wave generator to both the (+) and the (-) input connectors.
- m. Set the sine-wave generator frequency to 10 kc and the output amplitude to about 10 volts peakto-peak.

#### Calibration and Verification — Type 3A3

- n. Set the (—) AC GND DC switch to DC and the VOLTS/DIV switch to 20 mVOLTS.
- Adjust C205C (C405C) for minimum display amplitude. Judge the correctness of the adjustment with the tool disengaged from the capacitor.
- p. Set the VOLTS/DIV switch to .2 VOLTS and adjust C206C (C406C) for minimum display amplitude.
- q. Set the VOLTS/DIV switch to 2 VOLTS and adjust C207C (C407C) for minimum display amplitude.
- Reset both AC GND DC switches to GND and disconnect the input signal.

# 23. Adjust Channel 2 Input Attenuator Compensation C305C, C306C, C307C, C405C, C406C, and C407C

a. Set the MODE switch to CH 2 and repeat step 22.

# 24. Adjust Channel 2 Input Time Constant 305A, C306A, C307A, C405A, C406A, and C407A

- a. Connect the Input Time Constant Standardizer to the (+) input.
- b. Connect the terminated square-wave generator output to the standardizer input.
- c. Set the (+) AC GND DC switch to DC and the VOLTS/DIV switch to .1 VOLTS.
- d. Set the generator frequency to 1 kc and output amplitude for about 5 major graticule divisions of deflection.
- Set the time-base controls for a 0.5 msec/div sweep rate and obtain a triggered display.
- f. Adjust C305A (C105A) to make the top of the square-wave display as straight and flat as possible.
- g. Set the VOLTS/DIV switch to 1 VOLTS and increase the generator amplitude for about 5 major divisions of deflection.
- h. Adjust C306A (C106A) to make the top of the squarewave display as straight and flat as possible.
- Set the VOLTS/DIV switch to 2 VOLTS and increase the generator amplitude for 3 to 5 major divisions of deflection.
- Adjust C307A (C107A) to make the top of the squarewave display as straight and flat as possible.
- k. Set the (+) AC GND DC switch to GND and the (-) AC GND DC switch to DC. Move the signal connection to the (-) input.
- I. Adjust C407A (C207A) to make the bottom of the square-wave display as straight and flat as possible.
- m. Set the VOLTS/DIV switch to 1 VOLTS and decrease the generator amplitude for about 5 major divisions of deflection.
- n. Adjust C406A (C206A) to make the bottom of the square-wave display as straight and flat as possible.

- Set the VOLTS/DIV switch to .1 VOLTS and decrease the generator amplitude for about 5 major divisions of deflection.
- p. Adjust C405A (C205A) to make the bottom of the square-wave display as straght and flat as possible.
- q. Set the (—) AC GND DC switch to GND and disconnect the input signal.
- r. Set the time-base controls for free-running sweeps.

#### Adjust Channel 1 Input Time Constant C105A, C106A, C107A, C205A, C206A, and C207A

a. Set the MODE switch to CH 1 and repeat step 24.

# 26. Adjust Channel 1 High-Frequency Compensation C251B and C251M

- a. Move the Type 3A3 to the right-hand compartment of the oscilloscope and do not use the plug-in unit extension. Install the time-base unit in the left-hand compartment (not applicable to Type 565 and Type RM565 Oscilloscopes).
- b. Terminate the square-wave generator output and connect it to the Channel 1 (+) input. If a Tektronix Type 105 is used, place two X10 coaxial attenuators between the generator output and the 50-ohm termination. (See "Equipment Required", item 9.)
- c. Set the VOLTS/DIV switch to 10 mVOLTS and the (+) AC GND DC switch to DC.
- d. Set the generator frequency to 25 kc and output amplitude for about 8 major graticule divisions of horizontal deflection.
- Set the time-base controls for triggered sweeps at a rate that will display about 4 cycles of the squarewave signal.
- f. Adjust C251M (C451M) to make the lower right-hand corner of the square waves as square as possible.
- g. Repeat step (f) for C251L (C451L) through C251B (C451B) using the information in Table 5-2. The adjustment sensitivity decreases with higher deflection sensitivities. It may be necessary to add a third X10 coaxial attenuator for the last one or two adjustments when a Tektronix Type 105 generator is used.

TABLE 5-2

VOLTS/DIV SWITCH	Adjust		
5 mVOLTS	C251L	(C451L)	
2 mVOLTS	C251K	(C451K)	
1 mVOLTS	C251H	(C451H)	
.5 mVOLTS	C251F	(C451F)	
.2 mVOLTS	C251D	(C451D)	
.1 mVOLTS	C251B	(C451B)	

h. Set the (+) AC GND DC switch to GND and set the time-base controls for free-running sweeps.

# Adjust Channel 2 High-Frequency and Phase Compensation C451B and C451M

#### NOTE

There are two methods by which the Channel 2 high-frequency and phase-compensation capacitors may be adjusted. The choice of method depends upon whether you have more than one Type 3A3 and, if so, whether they will be used in the X-Y configuration for precise phase comparisons (not applicable to Type 565 and Type RM565 Oscilloscopes). When two Type 3A3 plugin units have each had both channels adjusted according to step 26, there will generally be less than 2° phase difference between them at 100 kc. If this degree of accuracy is adequate or if you have but one Type 3A3, set the MODE switch to CH 2 and use step 26. Otherwise, the following general procedure is recommended:

- a. Remove the Type 3A3 and tape a label marked "vertical" on the front panel. Set this unit aside and install a second calibrated Type 3A3 on a plug-in unit extension in the right-hand compartment of the oscilloscope. Mark this second unit "horizontal".
- b. Adjust both internal GAIN controls of the horizontal unit for proper horizontal deflection sensitivity with the front-panel CALIBRATE control set to midrange. Then remove the extension and install the horizontal unit in the right-hand compartment.
- c. Remove the time-base unit and install the vertical unit in the left-hand compartment without an extension. Set all four VOLTS/DIV switches to 10 mVOLTS.
- d. Capacitors C251B through C251M in Channel 1 of the vertical unit were adjusted in step 26 for proper high-frequency response and will now provide the starting point for the phasing adjustments. Adjustment of the comparable capacitors in both channels of the horizontal unit and in Channel 2 of the vertical unit for proper phasing will also provide proper high-frequency response in these channels.
- e. If future phase measurements will involve frequencies of 100 kc or below, use a 100-kc sine wave for the phasing adjustments. If the measurements will involve a frequency above 100 kc, but within the bandpass of the instrument, use that sine-wave frequency. Apply the signal to the Channel 1 (+) input of the vertical unit and to the (+) input of either channel of the horizontal unit.
- f. Adjust the appropriate capacitor in the horizontal unit for each VOLTS/DIV switch setting; 10 mVOLTS through .1 mVOLTS to obtain proper phasing. Repeat for the other channel of the horizontal unit.
- g. Transpose the units so that the vertical unit is in the horizontal compartment and the horizontal unit is in the vertical compartment. Do not recalibrate the internal GAIN controls or the front-panel CALI-BRATE controls.

- Adjust the capacitors in Channel 2 of the vertical unit against either channel in the other unit for proper phasing.
- i. Calibration of the horizontal unit is now completed; remove and set it aside. The gain of this unit may be reset for proper vertical-deflection sensitivity whenever it is to be used in the coventional manner with a time-base unit. However, the gain should be set as described in step (b) when it is to be used with the vertical unit for X-Y displays.
- j. Move the vertical unit to the left-hand compartment without an extension. Install a time-base unit in the right-hand compartment. Set the Type 3A3 MODE switch to CH 1 and proceed to step 28.

#### 28. Check Channel 1 Risetime

- a. Terminate the square-wave generator output and connect it to the (+) input. If a Tektronix Type 105 is used, place two X10 coaxial attenuators between the generator output and the 50-ohm termination.
- b. Set the (+) AC GND DC switch to DC and the VOLTS/DIV switch to 10 mVOLTS.
- c. Set the generator frequency to 100 kc and output amplitude for exactly 5 major graticule divisions of deflection.
- d. Set the time-base controls for a 1  $\mu sec/div$  sweep rate and a triggered display.
- e. Check that the risetime between the 10% and 90% levels (one-half major division from top and bottom) is 0.7 µsec or less.
- f. Reduce the generator frequency to 2.5 kc. Set the time-base controls for a 0.1 msec/div sweep rate.
- g. Set the generator amplitude for exactly 5 major divisions of deflection.
- h. Set the bandwidth switch to LO and check that the risetime between the 10% and 90% levels of the display is 70 µsec or less.
- Reset the (+) AC GND DC switch to GND and the BANDWIDTH switch to HI.
- j. Remove the signal connection.

#### 29. Check Channel 2 Risetime

a. Set the MODE switch to CH 2 and repeat step 28.

# 30. Adjust Trigger Amplifier Dc Output Balance and Level R511, R525, R541, R555, and R565

- a. Set the time-base controls for free-running sweeps at 0.5 msec/div.
- b. Touch-up the adjustment of the RANGE and ATTEN BAL controls of both channels.
- c. Connect X10 attenuator probes to each of the Channel 1 input connectors. Connect one probe to pin 3 and the other to pin 8 of the V583 tube socket.

**(A)** 

#### Calibration and Verification — Type 3A3

- d. Set the TRIGGER switch to CH 2, the MODE switch to CH 2, and the Channel 1 VOLTS/DIV switch to 50 mVOLTS.
- e. Set the Channel 2 VOLTS/DIV switch to 10 mVOLTS and the POSITION control to center the trace.
- f. Set the Channel 2 VOLTS/DIV switch to .1 mVOLTS and use the ATTEN BAL control to recenter the trace. Then set the Channel 2 VOLTS/DIV switch to 10 mVOLTS.
- g. Set the MODE switch to CH 1 and use the Channel 1 POSITION control to center the trace.
- h. Set both the Channel 1 AC GND DC switches to DC and adjust Channel 2 TRIG DC BALANCE R541 to recenter the trace.
- Set one of the Channel 1 AC GND DC switches to GND and adjust Channel 2 TRIG DC LEVEL R555 to recenter the trace.
- j. Set both Channel 1 AC GND DC switches to GND.
- k. Leave the probe tips connected to the tube socket, but move them from Channel 1 to Channel 2.
- Set the TRIGGER switch to CH 1, the Channel 2 VOLTS/DIV switch to 50 mVOLTS, and the Channel 1 VOLTS/DIV switch to 10 mVOLTS. Use the Channel 1 POSITION control to center the trace.
- m. Set the Channel 1 VOLTS/DIV switch to .1 mVOLTS and use the Channel 1 ATTEN BAL control to recenter the trace. Then set the Channel 1 VOLTS/DIV switch to 10 mVOLTS.
- n. Set the MODE switch to CH 2 and use the Channel 2 POSITION control to center the trace.
- Set both of the Channel 2 AC GND DC switches to DC and adjust Channel 1 TRIG DC BALANCE R511 to recenter the trace.
- p. Set one of the Channel 2 AC GND DC switches to GND and adjust Channel 1 TRIG DC LEVEL R525 to recenter the trace.
- q. Set both Channel 2 AC GND DC switches to GND and remove the probes.
- Connect a X10 probe to the test oscilloscope and adjust the probe compensation for proper response.
- Connect the probe tip to pin 8 of the V583 tube socket.
- t. Set the test-oscilloscope input coupling switch to AC or GND and position its trace to the center of the araticule.
- u. Set the Type 3A3 TRIGGER switch to COMP and use the Channel 2 POSITION control to center the trace.
- Set the test-oscilloscope input coupling switch to DC and an input sensitivity of 0.2 volts/div (excluding the probe).
- w. Adjust COMP TRIG DC LEVEL R565 to center the trace on the test oscilloscope. Retain this setup for the next step.

# 31. Adjust Trigger Amplifier High-Frequency Compensation C508, C518, C538, C548, C561, and C569

- a. Set both of the Type 3A3 VOLTS/DIV switches to .2 VOLTS.
- b. Connect the terminated output of the square-wave generator to the Channel 2 (+) input connector.
- c. Set the (+) AC GND DC switch to DC.
- d. Set the generator frequency to 2.5 kc and output amplitude for about 5 major divisions deflection on the oscilloscope containing the Type 3A3.
- e. Obtain a triggered display of the square-wave signal on the test oscilloscope.
- f. Adjust C569 for best square-wave response as indicated on the test oscilloscope.
- g. Set the TRIGGER switch to CH 2 and adjust C548 for best square-wave response as indicated on the test oscilloscope.
- h. Move the signal input connection to the Channel 1 (+) connector.
- Set the Channel 1 (+) AC GND DC switch to DC, the TRIGGER switch to CH 1 and the MODE switch to CH 1.
- j. Adjust C518 for best square-wave response as indicated on the test oscilloscope.
- k. Move the probe from pin 8 to pin 3 of the V583 tube socket.
- 1. Adjust C508 for best square-wave response.
- m. Set the TRIGGER switch to COMP and adjust C561 for best square-wave response.
- n. Move the signal input connection to the Channel 2 (+) connector and set the TRIGGER switch to CH 2.
- o. Adjust C538 for best square-wave response.
- p. Remove all connections from the Type 3A3.

#### 32. Check Alternate-Trace Mode

- a. Set the MODE switch to ALTER and the time-base controls for free-running sweeps at 50 msec/div.
- b. Check that the Channel 1 and Channel 2 traces appear alternately on the crt.

#### 33. Check Chopped-Trace Mode

- Set the MODE switch to CHOP and the TRIGGER switch to COMP.
- b. Check for two traces on the crt.

#### 34. Check Chopped-Trace Blanking

a. Set the CRT CATHODE SELECTOR switch on the oscilloscope rear panel (not applicable to Type 565 and Type RM565 Oscilloscopes) to the CATH-ODE BLANKING position.

- b. Set the POSITION controls so that there is about 4 major divisions separation between the two traces.
- c. Set the time-base controls for internally triggered sweeps at  $2\,\mu{\rm sec}/{\rm div}$ .
- d. You should obtain what appears to be a squarewave display. However, the rising and falling portions of the display should not be visible except when the intensity of the top and bottom portions is unnecessarily high.

# 35. Check Dual-Trace X-Y Operation (Optional) NOTE

This step can be performed only if you have more

than one Type 3A3 and an oscilloscope other than the Type 565 or Type RM565.

- a. Install a second Type 3A3 in place of the time-base unit in the right-hand compartment of the oscilloscope. Allow several minutes for warmup.
- b. Set all eight AC GND DC switches to GND and all four VOLTS/DIV switches to 10 mVOLTS.
- c. Set the MODE switch of one unit to CHOP and the MODE switch of the other unit to ALTER.
- d. Check that two spots can be obtained on the crt. Check that each of the four POSITION controls affects only one spot.

#### **NOTES**

,		 		
		 ,		

### SECTION 6

# PARTS LIST AND DIAGRAMS

#### PARTS ORDERING INFORMATION

Replacement parts are available from or through your local Tektronix Field Office.

Changes to Tektronix instruments are sometimes made to accommodate improved components as they become available, and to give you the benefit of the latest circuit improvements developed in our engineering department. It is therefore important, when ordering parts, to include the following information in your order: Part number including any suffix, instrument type, serial number, and modification number if applicable.


If a part you have ordered has been replaced with a new or improved part, your local Tektronix Field Office will contact you concerning any change in part number.

#### ABBREVIATIONS AND SYMBOLS

a or amp	amperes	mm	millimeter
BHS	binding head steel	meg or M	megohms or mega (10 <sup>6</sup> )
C	carbon	met.	metal
cer	ceramic	$\mu$	micro, or 10 <sup>6</sup>
cm	centimeter	n	nano, or 10 <sup>-9</sup>
comp	composition	Ω	ohm
c <b>p</b> s	cycles per second	OD	outside diameter
crt	cathode-ray tube	OHS	oval head steel
CSK	counter sunk	р	pico, or 10 <sup>-12</sup>
dia	diameter	PHS	pan head steel
div	division	piv	peak inverse voltage
EMC	electrolytic, metal cased	plstc	plastic
EMT	electroyltic, metal tubular	PMC	paper, metal cased
ext	external	poly	polystyrene
f	farad	Prec	precision
F & I	focus and intensity	PT	paper tubular
FHS	flat head steel	PTM	paper or plastic, tubular, molded
Fil HS	fillister head steel	RHS	round head steel
g or G	giga, or 10 <sup>9</sup>	rms	root mean square
Ge	germanium	sec	second
GMV	guaranteed minimum value	Si	silicon
h	henry	S/N	serial number
hex	hexagonal	t or T	tera, or 1012
HHS	hex head steel	TD	toroid
HSS	hex socket steel	THS	truss head steel
HV	high voltage	tub.	tubular
ID	inside diameter	v or V	volt
incd	incandescent	Var	variable
int	internal	W	watt
k or K	kilohms or kilo (10³)	w/	with
kc	kilocycle	w/o	without
m	milli, or 10 <sup>-3</sup>	WW	wire-wound
mc	megacycle		

#### SPECIAL NOTES AND SYMBOLS

X000	Part first added at this serial number.
000X	Part removed after this serial number.
*000-000	Asterisk preceding Tektronix Part Number indicates manufactured by or for Tektronix, or reworked or checked components.
Use 000-000	Part number indicated is direct replacement.
	Internal screwdriver adjustment.
	Front-panel adjustment or connector.

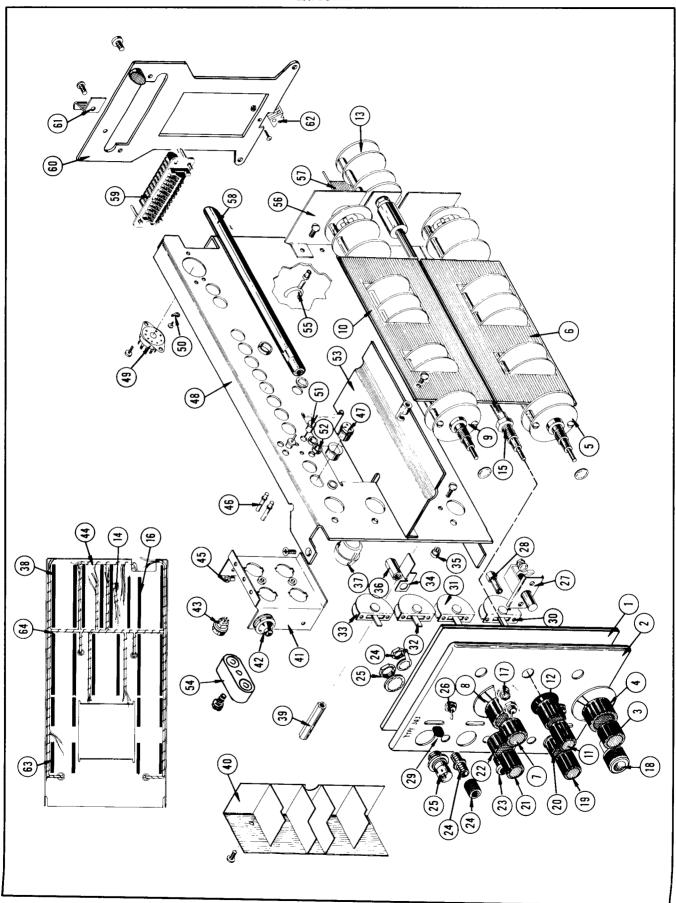

REF.		SERIAL	MODEL NO.	Q	
NO.	PART NO.	EFF.	DISC.	⊢ T Y.	DESCRIPTION
1 2 3	387-0876-00 333-0788-00 366-0081-00			1 1	PLATE, subpanel, front PANEL, front KNOB, VARIABLE, red
4	213-0004-00 366-0230-00			1 1	Includes: SCREW, set, 6-32 x <sup>3</sup> / <sub>16</sub> inch HSS KNOB, VOLTS/DIV, charcoal Includes:
5	213-0004-00 262-0627-00 262-0627-01	100 1130	1129	1 1 1	SCREW, set, 6-32 x <sup>3</sup> /1 <sub>6</sub> inch HSS SWITCH, VOLTS/DIV, Ch 2, wired SWITCH, VOLTS/DIV, Ch 2, wired
	260-0590-00 352-0071-00 166-0025-00 211-0014-00			6 2 2	Includes: SWITCH, VOLTS/DIV, Ch 2, unwired HOLDER, PC BOARD, nylon TUBE, spacer alum. <sup>3</sup> / <sub>16</sub> OD x <sup>1</sup> / <sub>4</sub> inch long SCREW, 4-40 x <sup>1</sup> / <sub>2</sub> inch BHS
6	210-0413-00 210-0012-00 210-0840-00 670-0059-00			1 1 1 1	Mounting Hardware for Switch:  NUT, hex, brass, 3/8-32 x 1/2 inch  LOCKWASHER, steel pot, internal 3/8 x 1/2 inch  WASHER, steel .390 ID x 9/16 inch OD  ASSEMBLY, circuit board, charcoal 2 (wired)
	388-0572-00 388-0603-00	100 140	139	1 1	assembly includes: BOARD, etched circuit (unwired) BOARD, etched circuit (unwired)
	131-0285-00			4	board includes: CONNECTOR, terminal
7	211-0008-00 366-0081-00			6	mounting hardware: (not incl w/assembly) SCREW, 4-40 x 1/4 inch BHS KNOB, VARIABLE, red
8	213-0004-00 366-0230-00			1 1	Includes: SCREW, set, 6-32 x <sup>3</sup> / <sub>16</sub> inch HSS KNOB, VOLTS/DIV, charcoal Includes:
9	213-0004-00 262-0623-00 262-0623-01	100 1130	1129	1 1 1	SCREW, set, 6-32 x <sup>3</sup> / <sub>16</sub> inch HSS SWITCH, VOLTS/DIV, Ch 1, wired SWITCH, VOLTS/DIV, Ch 1, wired
	260-0590-00 352-0071-00 166-0025-00 211-0014-00			1 6 2 2	Includes:  SWITCH, VOLTS/DIV, Ch 1, unwired  HOLDER, PC BOARD, nylon  TUBE, spacer alum. <sup>3</sup> / <sub>16</sub> OD x <sup>1</sup> / <sub>4</sub> inch long  SCREW, 4-40 x <sup>1</sup> / <sub>2</sub> inch BHS
10	210-0413-00 210-0012-00 210-0840-00 670-0046-00			1 1 1 1	Mounting Hardware for Switch:  NUT, hex, brass, ${}^3/_8 \cdot 32 \times {}^1/_2$ inch  LOCKWASHER, steel pot, internal ${}^3/_8 \times {}^1/_2$ inch  WASHER, steel .390 ID x ${}^9/_{16}$ inch OD  ASSEMBLY, circuit board, channel 1 (wired)
	388-0572-00			1	assembly includes: BOARD, etched circuit (unwired)
	131-0285-00			4	board includes: CONNECTOR, terminal
	211-0008-00			6	mounting hardware: (not incl w/assembly) SCREW, 4-40 x 1/4 inch BHS

	Γ	ı — — — — — — — — — — — — — — — — — — —			DDED VIEW
REF. NO.	PART NO.	SERIAL/ <i>I</i> EFF.	DISC.	Q T Y.	DESCRIPTION
11	366-0189-00			1	KNIOD TRICOGR
' '				'-	KNOB, TRIGGER, red Includes:
١.,	213-0020-00			1	SCREW, set, 6-32 x 1/8 inch HSS
12	366-0175-00			1	KNOB, MODE, charcoal
	213-0004-00			;	Includes: SCREW, set, 6-32 x <sup>3</sup> / <sub>16</sub> inch HSS
13	262-0624-00			li	SWITCH, MODE TRIGGER, wired
				-	Includes:
	<b>2</b> 60-0589-00			1	SWITCH, MODE TRIGGER, unwired
	210-0413-00			3	Mounting Hardware for Switch: NUT, hex, brass, 3/8-32 x 1/2 inch
14	179-0888-00			Ĭ	CABLE, Harness Mode Switch
15	358-0029-00			1	BUSHING, brass, hex, $\frac{3}{8}$ -32 x $\frac{13}{32}$ inch
16	124-0146-00			2	STRIP, Ceramic 16 Notches 2 <sup>7</sup> / <sub>16</sub> x <sup>7</sup> / <sub>16</sub> inch
	355-0046-00			2	Includes: STUD, nylon, short
				2	Mounting Hardware for Strip:
	361-0009-00			2	SPACER, nylon, 3/8 inch high
17				-	POT, Mounting Hardware
	210-0467-00			1 !	NUT, hex, 12-28 x <sup>5</sup> / <sub>16</sub> inch
18	210-0971-00 366-0109-00			1	WASHER, flat steel
, , ,				'_	KNOB, Plug-In Securing ¾ inch alum. x ⅓ inch Includes:
	213-0006-00			1	SCREW, set, 8-32 $\times$ $^{3}/_{16}$ inch HSS
19	366-0265-00			1	KNOB, POSITION, red
	213-0022-00			-	Includes:
20	366-0264-00			1 1	SCREW, set, 4-40 x <sup>3</sup> / <sub>16</sub> inch HSS KNOB, ATTEN BAL, charcoal
	,			-	Includes:
	213-0022-00			1	SCREW, set, 4-40 x <sup>3</sup> / <sub>16</sub> inch HSS
21	366-0265-00			ו	KNOB, POSITION, red
	213-0022-00			1 1	Includes:
22	366-0264-00			i	SCREW, set, 4-40 x <sup>3</sup> / <sub>16</sub> inch HSS KNOB, ATTEN BAL, charcoal
				-	Includes:
23	213-0022-00			1	SCREW, set, $4-40 \times \frac{3}{16}$ inch HSS
23	358-0054-00 129-0053-00			1 2	BUSHING, Banana Jack, brass 1/4-32 x 13/32 inch
-					POST, Binding BPN13 Includes:
- 1	200-0103-00			11	CAP, Binding Post Adapter
	355-0507-00			1	STEM, Binding Post Adapter
- 1	210-0455-00			-	Mounting Hardware for each (not included w/post)
	210-0223-00			1 1	NUT, hex, steel $\frac{1}{4}$ -28 x $\frac{3}{8}$ x $\frac{3}{32}$ inch LUG, Solder, $\frac{1}{4}$ inch Hole
25	131-0274-00			4	CONNECTOR, Chassis Mounting BNC insulated
					and the state of t
ļ					
		1			
				]	
	ļ	1			
	İ	ļ			
		i			


REF.	DART NO	SERIAL/	MODEL NO.	Q	
NO.	PART NO.	EFF.	DISC.	1 Y.	DESCRIPTION
26	260-0407-00  210-0562-00			3	SWITCH, Toggle SPDT 2 pos. min. Includes: NUT, hex, brass, ½-40 x 5/16 inch
	210-0046-00			1	LOCKWASHER, steel shakeproof WASHER, flat (not supplied by Tektronix)
27	214-0052-00			1	FASTENER, Right w/Stop  Mounting Hardware for Fastener:
28 29	210-0406-00 220-0413-00 366-0215-00 366-0215-00	100	969	8 4 4	NUT, Switch Mounting <sup>3</sup> / <sub>16</sub> inch hex brass rod KNOB, Lever, charcoal
30 31 32 33 34 35	260-0600-00 260-0600-00 260-0600-00 260-0600-00 337-0613-00 348-0031-00	,,,,		1 1 1 1 18	SWITCH, AC DC, Ch 2 SWITCH, AC DC, Ch 2 SWITCH, AC DC, Ch 1 SWITCH, AC DC, Ch 1 SHIELD, Cross Talk, alum. GROMMET, Polypropylene, Snap-In 1/4 inch dia.
36 37 38	210-0471-00 354-0068-00 124-0145-00			1 4 12	, 5, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1,
39 40	355-0046-00 361-0009-00 361-0068-00 337-0612-00			2 2 1	STUD, nylon, short  Mounting Hardware for Strip:  SPACER, nylon, <sup>3</sup> / <sub>8</sub> inch high  SPACER, Shield <sup>1</sup> / <sub>4</sub> inch hex alum. rod  SHIELD, Input, alum.
41	211-0504-00 211-0542-00 441-0535-00	100 1570	1569	2 2 1	Mounting Hardware for Shield:  SCREW, 6-32 x ½ inch BHS  SCREW, 6-32 x 5/16 inch, THS  CHASSIS, Preamp. alum.  Mounting Hardware for Chassis:
42 43 44 45	210-0406-00 348-0058-00 136-0131-00 179-0881-00 179-0881-01 348-0031-00	100 1130	1129	4 4 1 1 1 6	NUT, hex, brass, 4-40 x <sup>3</sup> / <sub>16</sub> inch SHOCKMOUNT, Rubber SOCKET, 5 pin Solder Mount CABLE, Harness Amph. CABLE, Harness, Amph. GROMMET, Polyproyplene, Snap-In <sup>1</sup> / <sub>4</sub> inch dia.
		ı			

REF.		SERIAL/N	ODEL NO.	Q	DECERTATION
NO.	PART NO.	EFF.	DISC.	T Y.	DESCRIPTION
46 47	426-0225-00 136-0181-00			4 37	MOUNT, Capacitor Molded Polypropylene SOCKET, Transistor 3 Pin
"				-	Mounting Hardware for Socket:
48	354-0234-00 441-0536-00			1	RING, insulator 3/8 inch diameter teflon rod CHASSIS, 3A3, alum.
40				'	Mounting Hardware for Chassis:
	211-0541-00			2	SCREW, 6-32 x 1/4 inch FHS, 100° CSK, phillips
49	211-0507-00 136-0072-00			3 2	SCREW, 6-32 x 5/16 inch BHS SOCKET, 9 pin UHF Miniature
7				-	Mounting Hardware for Socket:
	213-0044-00			2	SCREW, Thread Cutting, 5-32 x $^3/_{16}$ inch Pan H
50	210-0259-00			20	LUG, soder #2 internal  Mounting Hardware for Lug:
	213-0055-00			1	SCREW, Thread Cutting, 2-56 x 3/16 inch PHS
51	131-0157-00		,	8	CONNECTOR, Terminal, Teflon, Stand Off GROMMET, Plastic 1/4 inch diameter mounting hole, delrin
52 53	348-0055-00 337-0610-00			1	SHIELD, Electron Static, alum
					Mounting Hardware for Shield:
E.A.	210-0457-00			2 2	NUT, Keps, steel, 6-32 x ⁵/16 inch COVER, Heat Stabilizer
54	200-0554-00 377-0103-00			4	INSERT, Heat Stabilizer
55	426-0121-00	ļ		1	MOUNT, Toroid, nylon, 15/32 x 1/8 x 9/64 inch
	361-0007-00			1	Mounting Hardware for Mount: SPACER, nylon, molded
56	406-0967-00			i	BRACKET, Switch, alum.
				-	Mounting Hardware for Bracket:
:	211-0029-00 211-0507-00			3	SCREW, 5-40 x <sup>3</sup> / <sub>16</sub> inch Pan HS SCREW, 6-32 x <sup>5</sup> / <sub>16</sub> inch BHS
57	337-0611-00			ĺ	SHIELD, MODE, Switch, alum.
58	384-0615-00			4	ROD, Spacer Plug-In hex tubing 121/4 inches long
	212-0044-00			4	Mounting Hardware for Rod:   SCREW, 8-32 x ½ inch RHS Phillips
59	131-0149-00			ĺ	CONNECTOR, Chassis Mount 24 Contact, male
				-	Mounting Hardware for Connector:
1	211-0008-00 210-0004-00			2 2	SCREW, 4-40 x 1/4 inch BHS LOCKWASHER, steel, internal #4
	210-0406-00			2	NUT, hex, brass, 4-40 x $\frac{3}{16}$ inch
60	387-0647-00			1 2	PLATE, Rear Panel, alum.  SPRING, Ground <sup>29</sup> / <sub>64</sub> x <sup>1</sup> / <sub>2</sub> x 1 <sup>1</sup> / <sub>16</sub> inch
61	214-0276-00				Mounting Hardware for Spring:
	211-0507-00			1	SCREW, 6-32 x 5/16 inch BHS
	210-0006-00 210-0407-00			]	LOCKWASHER, steel, internal #6 NUT, hex, brass, 6-32 x ½ inch
	210-040/-00			'	1401, 110x, bruss, 0-02 x /4 men
ļ					
ŀ					

### **EXPLODED VIEW**

REF.	PART NO.		MODEL NO.	Q	DESCRIPTION
NO.		EFF.	DISC.	Y.	
62	351-0037-00  211-0013-00 210-0406-00 124-0148-00  355-0046-00			1 1 8 - 2	GUIDE, Plug-In, delrin, <sup>5</sup> / <sub>8</sub> x <sup>13</sup> / <sub>16</sub> inch Mounting Hardware for Guide: SCREW, 4-40 x <sup>3</sup> / <sub>8</sub> inch RHS NUT, hex, brass, 4-40 x <sup>3</sup> / <sub>16</sub> inch STRIP, Ceramic 9 Natches 1 <sup>7</sup> / <sub>16</sub> x <sup>7</sup> / <sub>16</sub> inch Includes: STUD, nylon, short Mounting Hardware for Strip:
64	361-0009-00 179-0853-00 179-0853-01	100 1130	1129	2	SPACER, nylon, 3/8 inch high CABLE, harness, chassis CABLE, harness, chassis
			1		

### **ACCESSORIES**

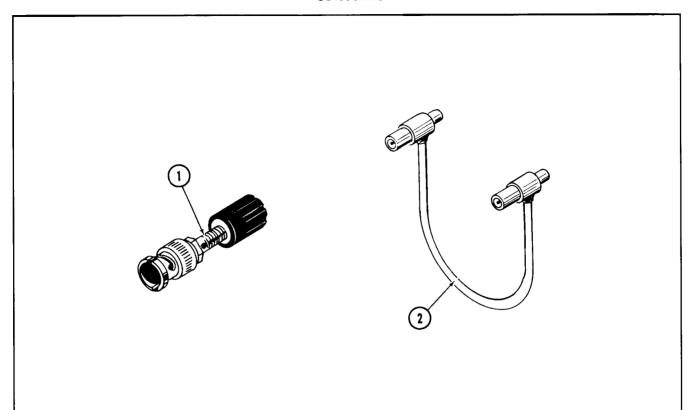

REF.		SERIAL/N	NODEL NO.	Q	Q   T   DESCRIPTION	
NO.	PART NO.	EFF.	DISC.	T Y.	DESCRIPTION	
1 2	103-0033-00 012-0087-00 070-0408-00	X568		4 2 2	ADAPTER, BNC to binding post CORD, patch, BNC to BNC, 18 inch red MANUAL, instruction (not shown)	

## **ELECTRICAL PARTS**

Values are fixed unless marked Variable.

Ckt. No.	Tektronix Part No.	Description	S/N Range

Ckt. No.	Tektronix Part No.		Description	n		s	/N Range
			Capacito	rs			
Tolerance ±	20% unless otherwise	indicated.					
Tolerance of	all electrolytic capac	citors as follows (v	vith exceptions	s}:			
3V — 50V	=-10%, +250%						
51V — 350V	=-10%, +100%						
351V 450V	=-10%, +50%						
C101†	Use *295-081	0.1 μf	MT		600 v	10%	
C102	281-0504-00	10 pf	Cer		500 v	10%	Х930-ир
C105A	281-092	9-35 pf	Cer	Var			100-1209
C105A C105C	281-0093-00 281-091	5.5-18 pf <b>2-8 pf</b>	Cer Cer	Var <b>Var</b>			1210-up
C105E	283-601	22 pf	Mica	Yui	300 v	10%	
<b>6154</b> 4		·				,-	
C106A C106A	281-092	9-35 pf	Cer	Var			100-1209
C106C	281-0093-00 281-091	5.5-18 pf <b>2-8</b> pf	Cer <b>Cer</b>	Var Var			1210-up
C106E	283-597	470 pf	Mica	v ui	300 v	10%	
C107A	281-092	9-35 pf	Cer	Var		/0	100-1209
C107A	281-0093-00	5.5-18 pf	Cer	Var			1210-up
C107 <b>C</b>	281-091	2-8 pf	Cer	Var			
C107E	283-100	$0.0047~\mu f$	Cer		200 v	10%	
C109	281-093	5.5-18 pf	Cer	Var			
C114 C115	281-060 281-060	2-8 pf	Cer	Var Var			
C116	281-053	2-8 pf 0.35-1.37 pf	Cer	Var Var			
		·					
C117 C124	290-0285-00	4 μf	EMT		200 v	+50%-10%	X1130-up
C128	283-065 283-004	0.001 μf 0.0 <b>2</b> μf	Cer Cer		100 v 150 v	5%	X550-up
C151	<b>2</b> 90-210	70 μf	EMT		15 v		7550-бр
C181	Use 285-0622-00	$0.1~\mu f$	PTM		100 V		100-1129
C181	<b>283</b> -007 <b>9</b> -00	0.01 $\mu$ f	Cer		250 v		1130-up
C187	283-057	0.1 μf	Cer		200 v		X491-up
C201†	Use *295-081	$0.1~\mu f$	MT		600 v	10%	•
C202	Use 281-0504-00	10 pf	Cer		5 <b>0</b> 0 v	10%	X930-up
C205A C205A	281-092 281-0093-00	9-35 pf 5.5-18 pf	Cer	Var Var			100-1209 1210-up
C205C	281-091	2-8 pf	Cer Cer	Var Var			1210-up
COOLE	202 (01				200	100/	
C205E C206A	283-601 281-092	22 pf 9-35 pf	Mica Cer	Var	300 v	10%	100-1209
C206A	281-0093-00	5.5-18 pf	Cer	Var			1210-up
C206C	281-091	2-8 pf	Cer	Var			
C206E	283-597	470 pf	Mica		300 v	10%	
C207A	281-092	9-35 pf	Cer	Var			100-1209
C207A	281-0093-00	5.5-18 pf	Cer	Var			1210-up
C207C	281-091	2-8 pf	Cer	Var	0.5	100/	
C207E	283-100 281-093	0.0047 μf 5.5-18 pf	Cer	V	200 ∨	10%	
C209 C214	281-618	5.5-18 pt 4.7 pf	Cer Cer	Var	200 v		
C215	281-618	4.7 pf	Cer		200 v		
	•	•					

 $<sup>\</sup>dagger$ C101 and C201 matched within  $\pm$ 1% of each other, furnished as a unit.

# Parts List — Type 3A3

Carrie	10-11-11
Capacitors	(Cont a)

	Tektronix		Capacitors (C	ont a)			
Ckt. No.	Part No.		Descriptio	n			S/N Range
C216	281-053	0.35-1.37 pf		Var			
C251 A	283-605	678 pf	Mica	,	300 v	1%	
C251B	281-092	9-35 pf	Cer	Var			
C251 <b>C</b>	283-604	304 pf	Mica		300 v	2%	
C251D	281-092	9-35 pf	Cer	Var			
C251E	283-603	113 pf	Mica		300 v	2%	
C251F	281-093	5.5-18 pf	Cer	Var		5	
C251G	283-602	53 pf	Mica	V	300 v	5%	
C251H	Use 281-0093-00	5.5-18 pf	Cer	Var	200	100/	
C251J C251K	283-601 281-091	22 pf 2-8 pf	Mica Cer	Var	300 v	10%	
C251L	281-091	2-8 pf	Cer	Var			
C251M	281-064	0.2-1.5 pf	Tub.	Var			
C260	281-620	21 pf	Cer		500 v	1%	
C261	285-626	0.0015 μf	PTM		100 v	10%	100-1169
	283-0088-00	1100 pf	Cer		500 v	5%	1170-up
C281	Use 285-0622-00	$0.1~\mu f$	PTM		100 v		100-1129
C281	Use 283-0079-00	0.01 $\mu$ f	Cer		250 v		1130-ир
C301†	Use *295-081	0.1 $\mu$ f	MT		600 v	10%	
C305A	281-092	9-35 pf	Cer	Var			100-1209
C305A	281-0093-00	5.5-18 pf	Cer	Var			1210-up
C305 <b>C</b>	281-091	2-8 pf	Cer	Var			
C305E	283-601	22 pf	Mica		300 v	10%	
C302	281-0504-00	10 pf	Cer		50 <b>0</b> v	10%	Х930-ир
C306A	281-092	<b>9</b> -35 pf	Cer	Var			100-1209
C306A	281-0093-00	5.5-18 pf	Cer	Var			1210-up
C306C	281-091	2-8 pf	Cer	Var			
C306E	283-597	470 pf	Mica		300 v	10%	
C307A	<b>2</b> 81-092	9-35 pf	Cer	Var			100-1209
C307A	281-0093-00	5.5-18 pf	Cer	Var			<b>1210</b> -up
C307 <b>C</b>	281-091	2-8 pf	Cer	Var			
C307E	283-100	0.0047 $\mu$ f	Cer		200 v	10%	
C309	281-093	5.5-18 pf	Cer	Var			
C314	281-060	2-8 pf	Cer	Var			
C315	281-060	2-8 pf	Cer	Var			
C316	281-053	0.35-1.37 pf		Var			
C324	283-065	0.001 $\mu$ f	Cer		100 v	5%	
C351	290-210	70 μf	EMT		15 v		100 1100
C381	Use 285-0622-00	$0.1~\mu f$	PTM		100 v		100-1129
C381	283-0079-00	0.01 $\mu$ f	Cer		250 ∨ 200 ∨		1130-up
C387 C401†	283-057 Use *295-081	0.1 μf 0.1 μf	Cer <b>M</b> T		200 ∨ 600 ∨	10%	X491-up
		•					V000
C40 <b>2</b> C4 <b>0</b> 5 <b>A</b>	281-0504-00 281-092	10 pf 9-35 pf	Cer C <b>er</b>	Var	500 ∨	10%	X930-up 100-1209
		5.5-18 pf	Cer	Var			1210-up
C405A C405C	281-0093-00 281-091	2-8 pf	Cer	Var			1210-υμ
C405E	283-601	22 pf	Mica	, <del>.</del> .	300 v	10%	
C406A	281-092	9-35 pf	Cer	Var	<del></del> •	70	100-1209
C406A	281-0093-00	5.5-18 pf	Cer	Var			1210-up
C406C	281-091	2-8 pf	Cer	Var			о ор
C406E	283-597	470 pf	Mica		300 v	10%	
C407A	281-092	9-35 pf	Cer	Var		,-	100-1209
C407A	281-0093-00	5.5-18 pf	Cer	Var			1210-up
+ C201 0 C40	1) نامانان، اماماماس، 1	o/ -f	a franciska at a s	*1			•

<sup>†</sup> C301 & C401 matched within  $\pm 1\,\%$  of each other furnished as a unit.

# Capacitors (Cont'd)

Ckt. No.	Tektronix Part No.		Descriptio	on		;	S/N Range
C407C C407E C409 C414 C415 C416	281-091 283-100 281-093 281-618 281-618 281-053	2-8 pf 0.0047 μf 5.5-18 pf 4.7 pf 4.7 pf 0.35-1.37 pf	Cer Cer Cer Cer	Var Var Var	200 v 200 v 200 v	10%	
C451 A C451 B C451 C C451 D C451 E C451 F	283-605 281-092 283-604 281-092 283-603 281-093	678 pf 9-35 pf 304 pf 9-35 pf 113 pf 5.5-18 pf	Mica Cer Mica Cer Mica Cer	Var Var Var	300 v 300 v 300 v	1% 2% 2%	
C451G C451H C451J C451K C451L C451M	283-602 Use 281-0093-00 283-601 281-091 281-091 281-064	53 pf 5.5-18 pf 22 pf 2-8 pf 2-8 pf 0.2-1.5 pf	Mica Cer Mica Cer Cer Tub.	Var Var Var Var	300 v 300 v	5% 10%	
C460 C461 C461 C481 C481 C508	281-620 285-626 283-0088-00 Use 285-0622-00 283-0079-00 281-094	21 pf 0.0015 μf 1100 pf 0.1 μf 0.01 μf 5.5-18 pf	Cer PTM Cer PTM Cer Cer	Var	500 v 100 v 500 v 100 v 250 v	1% 10% 5%	100-1169 1170-up 100-11 <b>2</b> 9 1130-up
C509 C518 C519 C538 C539 C548	283-601 281-094 283-601 281-094 283-601 281-094	22 pf 5.5-18 pf 22 pf 5.5-18 pf 22 pf 5.5-18 pf	Mica Cer Mica Cer Mica Cer	Var Var Var	300 v 300 v 300 v	10% 10% 10%	
C549 C561 C562 C568 C569 C604	283-601 281-094 281-504 281-504 281-094 281-552	22 pf 5.5-18 pf 10 pf 10 pf 5.5-18 pf 25 pf	Mica Cer Cer Cer Cer Cer	Var Var	300 v 500 v 500 v	10% 10% 10%	
C614 C619 C621 C631 C631 C633	281-552 281-540 281-552 281-504 281-510 281-516	25 pf 51 pf 25 pf 10 pf 22 pf 39 pf	Cer Cer Cer Cer Cer Cer		500 v 500 v 500 v 500 v 500 v	5% 10% 10%	100-156 157-up 100-156
C633 C638 C660 C661 C661	281-513 Use 281-518 281-529 Use *050-0298-00 285-0651-01	27 pf 47 pf 1.5 pf Replacement Kit 0.0017 μf	Cer Cer Cer PTM		500 v 500 v 500 v	±0.25 pf 5%	157-up 100-759 760-up
C671 C671 C683 C687 C695	Use 050-0298-00 285-0651-01 290-0285-00 283-057 283-0059-00	Replacement Kit 0.0017 μf 4 μf 01 μf 1 μf	PTM EMT Cer Cer		100 v 200 v 200 v 25 v	5% +50%-10% +80%-20%	100-759 760-up X1130-up X1130-up

 $\mathbb{P}$ 

	Diodes						
Ckt. No.	Tektronix Part No.	Description	S/N Range				
D113 D213 D313 D413 D604 D614	*152-165 *152-165 *152-165 *152-165 152-141 152-141	Silicon Selected from 1N3579 Silicon Selected from 1N3579 Silicon Selected from 1N3579 Silicon Selected from 1N3579 Silicon 1N3605 Silicon 1N3605					
D622 D625 D630 D632 D635 D641	152-141 152-141 152-141 152-141 152-141 152-141	Silicon 1N3605 Silicon 1N3605 Silicon 1N3605 Silicon 1N3605 Silicon 1N3605	X157-up				
D642 D643 D644 D645 D646 D651	152-141 152-141 152-141 152-141 152-141 152-141	Silicon 1N3605 Silicon 1N3605 Silicon 1N3605 Silicon 1N3605 Silicon 1N3605 Silicon 1N3605					
D652 D653 D654 D655 D656	152-141 152-141 152-141 152-141 152-141	Silicon 1N3605 Silicon 1N3605 Silicon 1N3605 Silicon 1N3605 Silicon 1N3605					
D687 D688 D689 D692 D699	152-149 152-141 152-141 152-148 152-150	Zener 1N961B Silicon 1N3605 Silicon 1N3605 Zener 1N3998A Zener 1N3037B					
		Inductors .					
L143 L174 L243 L261 L274 L343	276-0532-00 276-0541-00 276-0532-00 *108-287 276-0541-00 276-0532-00	Core, Shield Bead Suppressor, Ferrite Core, Shield Bead Reed Drive Suppressor, Ferrite Core, Shield Bead	Х970-ир Х590-ир Х970-ир Х590-ир Х970-ир				
L374 L443 L461 L474 L570 L571	276-0541-00 276-0532-00 *108-287 276-0541-00 276-532 276-532	Suppressor, Ferrite Core, Shield Bead Reed Drive Suppressor, Ferrite Core, Shield Bead Core, Shield Bead	X590-up X970-up X590-up				
L631 L631 L648 L658 L695	*120-183 *120-312 *108-237 *108-237 *120-0202-00	Toroid, 9T Toroid, 15T 80 μh 80 μh Toroid, 15T	100-156 157-up X1130-up				
		Transistors					
Q114† Q118 Q128 Q143	Use *153-0534-00 *151-133 *151-103 *151-103	Checked 2N2219 Selected from 2N3251 Replaceable by 2N2219 Replaceable by 2N2219					

†Q114 and Q214 furnished as a unit.

**6-12** ①i

## Transistors (Cont'd)

Transistors (Cont'd)					
Ckt. No.	Tektronix Part No.	Description	S/N Range		
Q154 Q163 Q174 Q174 Q214† Q243	*151-133 *151-133 151-100 *151-133 Use *153-0534-00 *151-103	Selected from 2N3251 Selected from 2N3251 2N2191 Selected from 2N3251 Checked 2N2219 Replaceable by 2N2219	100-589 590-ир		
Q254 Q263 Q274 Q274 Q314††	*151-133 *151-133 151-100 *151-133 Use *153-0534-00	Selected from 2N3251 Selected from 2N3251 2N2191 Selected from 2N3251 Checked 2N2219	100-589 590-up		
Q318 Q328 Q343 Q354 Q363	*151-133 *151-103 *151-103 *151-133	Selected from 2N3251 Replaceable by 2N2219 Replaceable by 2N2219 Selected from 2N3251 Selected from 2N3251			
Q374 Q374 Q414†† Q443 Q454	151-100 *151-133 Use *153-0534-00 *151-103 *151-133	2N2191 Selected from 2N3251 Checked 2N2219 Replaceable by 2N2219 Selected from 2N3251	100-589 590-ир		
Q463 Q474 Q474 Q504 Q504	*151-133 151-100 *151-133 151-100 *151-133	Selected from 2N3251 2N2191 Selected from 2N3251 2N2191 Selected from 2N3251	100-589 590-up 100-589 590-up		
Q514 Q514 Q534 Q534 Q544	151-100 *151-133 151-100 *151-133 151-100	2N2191 Selected from 2N3251 2N2191 Selected from 2N3251 2N2191	100-589 590-up 100-589 590-up 100-589		
Q544 Q605 Q615 Q625 Q635	*151-133 *151-133 *151-133 *151-103 *151-103	Selected from 2N3251 Selected from 2N3251 Selected from 2N3251 Replaceable by 2N2219 Replaceable by 2N2219	590-up		
Q644 Q654 Q664 Q674 Q684	Use *151-133 Use *151-133 *151-103 *151-103 *151-103	Selected from 2N3251 Selected from 2N3251 Replaceable by 2N2219 Replaceable by 2N2219 Replaceable by 2N2219			
		Resistors			

### Resistors

Resistors are fixed, composition,  $\pm 10\%$  unless otherwise indicated.

R101	315-105	1 meg	⅓ w			5%	
R102	315-101	100 Ω	1/ <sub>4</sub> w			5%	
R105C	323-611	900 k	1/ <sub>2</sub> w		Prec	1%	
R105E	Use 321-640	106 k	1/8 W		Prec	1%	
R105F	311-438	10 k		Var	C	H 1 X10 ATTEN [	OC DIFF BAL

†Q214 and Q114 furnished as a unit.

<sup>††</sup>Q314 and Q414 furnished as a unit.

# Parts List — Type 3A3

## Resistors (Cont'd)

Ckt. No.	Tektronix Part No.		Description	-,			S/N Range
R106C R106E R106F R107C R107E	323-614 Use 321-639 Use 311-393 323-481 321-189	990 k 9.6 k 1 k 1 meg 909 Ω	1/ <sub>2</sub> w 1/ <sub>8</sub> w 1/ <sub>2</sub> w 1/ <sub>8</sub> w	Var	Prec Prec CH Prec Prec	1 % 1 % 1 X100 ATTEN 1 % 1 %	DC DIFF BAL
R107F R110 R111 R112 R113	311-441 311-438 315-104 315-101 323-481	$200~\Omega$ 10 k 100 $\Omega$ 1 meg	1/ <sub>4</sub> w 1/ <sub>4</sub> w 1/ <sub>2</sub> w	Var Var			DC DIFF BAL JRRENT ZERO
R114 R117 R118 R119 R124	322-298 315-0103-00 323-378 315-123 322-344	12.4 k 10 k 84.5 k 12 k 37.4 k	1/ <sub>4</sub> W 1/ <sub>4</sub> W 1/ <sub>2</sub> W 1/ <sub>4</sub> W 1/ <sub>4</sub> W		Prec Prec Prec	1% 5% 1% 5% 1%	Х1130-ир
R125 R127 R128 R129 R130	323-298 322-289 316-105 322-336 322-481	12.4 k 10 k 1 meg 30.9 k 1 meg	1/2 w 1/4 w 1/4 w 1/4 w 1/4 w		Prec Prec Prec Prec	1% 1% 1% 1%	Х550-ир
R131 R133 R134 R143 R144	311-082 319-035 322-385 301-473 315-102	2 meg 5 meg 100 k 47 k 1 k	.1 w 1/4 w 1/4 w 1/2 w 1/4 w	Var	Prec Prec	CH 1 DIFI 2% 1% 5% 5%	- BAL
R150A R150A R150B R150B R150C	321-162 321-0708-00 321-192 321-0709-00 321-231	475 Ω 485 Ω 976 Ω 988 Ω 2.49 k	1/8 W 1/8 W 1/8 W 1/8 W 1/8 W		Prec Prec Prec Prec <b>P</b> rec	1% 1% 1% 1% 1%	100-1129 1130-up 100-1129 1130-up 100-1129
R150C R150D R154 R157 R159	321-0710-00 321-262 322-298 323-385 Use 311-086	2.542 k 5.23 k 12.4 k 100 k 2.5 k	1/8 w 1/8 w 1/4 w 1/2 w	Var	Prec Prec Prec Prec	1% 1% 1% 1% CH 1 VAF	1130-up
R163 R173 R175 R181 R183	301-243 322-310 311-086 315-333 315-473	24 k 16.5 k 2.5 k 33 k 47 k	1/ <sub>2</sub> w 1/ <sub>4</sub> w 1/ <sub>4</sub> w 1/ <sub>4</sub> w	Var	Prec	5% 1% CH 1 GAI 5% 5%	Ν
R185† R187 R201 R202 R205C	311-437 303-753 315-105 315-101 323-611	50 k 75 k 1 meg 100 Ω 900 k	1 w 1/4 w 1/4 w 1/2 w	Var	Prec	CH 1 POS 5% 5% 5% 1%	SITION
R205F R206C R206F R207C R207F	321-617 323-614 321-614 323-481 321-193	111 k 990 k 10.1 k 1 meg 1 k	1/8 W 1/2 W 1/8 W 1/2 W 1/8 W		Prec Prec Prec Prec Prec	1% 1% 1% 1% 1%	

<sup>†</sup>R185 and R235 furnished as a unit.

**6-14** 

			Resistors (Com	u,			
Ckt. No.	Tektronix Part No.		Description				S/N Range
R210 R211 R212 R213 R214	311-438 315-104 315-101 323-481 322-298	10 k 100 k 100 Ω 1 meg 12.4 k	1/4 w 1/4 w 1/2 w 1/4 w	Var	CH 1 Prec Prec	(—) GRID ( 5% 5% 1% 1%	CURRENT ZERO
R230 R233 R234 R235† R239	322-481 319-035 322-385 311-437 321-280	1 meg 5 meg 100 k 100 k 8.06 k	1/ <sub>4</sub> w 1/ <sub>4</sub> w 1/ <sub>4</sub> w 1/ <sub>8</sub> w	Var	Prec Prec Prec	1% 1% 1% CH 1 A	tten bal
R243 R250A R250A R250B R250B	301-473 321-162 321-0708-00 321-192 321-0709-00	47 k 475 Ω 485 Ω 976 Ω 988 Ω	1/2 W 1/8 W 1/8 W 1/8 W 1/8 W		Prec Prec Prec Prec	5% 1% 1% 1% 1%	100-1129 1130-ир 100-1129 1130-ир
R250C R250C R250D R251J R251L	321-231 321-0710-00 321-262 323-322 323-368	2.49 k 2.542 k 5.23 k 22.1 k 66.5 k	1/8 W 1/8 W 1/8 W 1/2 W 1/2 W		Prec Prec Prec Prec Prec	1% 1% <b>1%</b> 1%	100-1129 1130-up 100-1129
R251L R251M R251M R254 R255	323-0713-00 323-413 323-0714-00 322-298 323-298	65.2 k 196 k 192.2 k 12.4 k 12.4 k	1/ <sub>2</sub> w 1/ <sub>2</sub> w 1/ <sub>2</sub> w 1/ <sub>4</sub> w 1/ <sub>2</sub> w		Prec Prec Prec Prec Prec	1% 1% 1% 1%	1130-ир 100-1129 1130-ир
R257 R263 R264 R273 R275	323-385 301-243 301-123 322-310 311-435	100 k 24 k 12 k 16.5 k 7 k	1/ <sub>2</sub> w 1/ <sub>2</sub> w 1/ <sub>2</sub> w 1/ <sub>4</sub> w	Var	Prec Prec	1% 5% 5% 1% CH 1 V	ARIABLE
R277 R281 R283 R301 R302	322-193 315-333 315-473 315-105 315-101	1 k 33 k 47 k 1 meg 100 Ω	1/4 w 1/4 w 1/4 w 1/4 w 1/4 w		Prec	1% 5% 5% 5% 5%	
R305C R305E R305F R306C R306E	323-611 Use 321-640 311-438 323-614 Use 321-639	900 k 106 k 10 k 990 k 9.6 k	1/ <sub>2</sub> w 1/ <sub>8</sub> w 1/ <sub>2</sub> w 1/ <sub>8</sub> w	Var	Prec Prec CH Prec Prec	1% 1% 2 X10 ATTE 1% 1%	en de diff bal
R306F R307C R307E R307F R310	Use 311-393 323-481 321-189 311-441 311-438	1 k 1 meg 909 Ω 200 Ω 10 k	½ w ⅓ w	Var Var Var	Prec Prec	1% 1% X1000 ATTE	EN DC DIFF BAL EN DC DIFF BAL ENT ZERO

# Parts List — Type 3A3

Resistors (C	ont'dl
--------------	--------

			Kesisiois (Com	u,			
Ckt. No.	Tektronix Part No.		Description				S/N Range
R311 R312 R313 R314 R318	315-104 315-101 323-481 322-298 323-378	100 k 100 Ω 1 meg 12.4 k 84.5 k	1/4 w 1/4 w 1/2 w 1/4 w 1/2 w		Prec Prec Prec	5% 5% 1% 1% 1%	
R319 R324 R325 R327 R329	315-123 322-344 323-298 322-289 322-336	12 k 37.4 k 12.4 k 10 k 30.9 k	1/4 w 1/4 w 1/2 w 1/4 w 1/4 w		Prec Prec Prec Prec	5% 1% 1% 1% 1%	
R330 R331 R333 R334 R343	322-481 311-082 319-035 322-385 301-473	1 meg 2 meg 5 meg 100 k 47 k	1/4 w 1/4 w 1/4 w 1/2 w	Var	Prec Prec Prec	1% CH 2 DIF 1% 1% 5%	F BAL
R344 R350A R350A R350B R350B	315-102 321-162 321-0708-00 321-192 321-0709-00	1 k 475 Ω 485 Ω 976 Ω 988 Ω	1/4 w 1/8 w 1/8 w 1/8 w 1/8 w		Prec Prec Prec Prec	5% 1% 1% 1% 1%	100-1129 1130-up 100-1129 1130-up
R350C R350C R350D R354 R357	321-231 321-0710-00 321-262 322-298 323-385	2.49 k 2.542 k 5.23 k 12.4 k 100 k	1/8 w 1/8 w 1/8 w 1/4 w 1/2 w		Prec Prec Prec Prec Prec	1 % 1 % 1 % 1 % 1 %	100-1129 1130-ир
R359 R363 R373 R375 R381	Use 311-086 301-243 322-310 311-086 315-333	2.5 k 24 k 16.5 k 2.5 k 33 k	½ w ¼ w	Var Var	Prec	CH 2 VA 5% 1% CH 2 GA 5%	r dc bal In
R383 R385† R387 R401 R402	315-473 311-437 303-753 315-105 315-101	47 k 50 k 75 k 1 meg 100 Ω	1/4 w 1 w 1/4 w 1/4 w	Var		5% CH 2 PO 5% 5% 5%	SITION
R405C R405E R406C R406E R407C	323-611 321-617 323-614 321-614 323-481	900 k 111 k 990 k 10.1 k 1 meg	1/2 w 1/8 w 1/2 w 1/8 w 1/2 w		Prec Prec Prec Prec Prec	1% 1% 1% 1% 1%	
R407E R410 R411 R412 R413	321-193 311-438 315-104 315-101 323-481	1 k 10 k 100 k 100 Ω 1 meg	1/8 w 1/4 w 1/4 w 1/2 w	Var	Prec CH 2 (—) GRIE Prec	1% CURRENT 5% 5% 1%	ZERO


<sup>†</sup>R385 and R435 furnished as a unit.


**6-16** ©<u>ï</u>


Ckt. No.	Tektronix Part No.		Description	1		s	/N Range
R414 R430 R433 R434 R435†	322-298 322-481 319-035 322-385 311-437	12.4 k 1 meg 5 meg 100 k 100 k	1/4 w 1/4 w 1/4 w 1/4 w	Var	Prec Prec Prec Prec	1% 1% 1% 1% CH 2 ATTEN BA	L
R439 R443 R450A R450A R450B	321-280 301-473 321-162 321-0708-00 321-192	8.06 k 47 k 475 Ω 485 Ω 976 Ω	1/8 W 1/2 W 1/8 W 1/8 W 1/8 W		Prec Prec Prec Prec	1% 5% 1% 1%	100-1129 1130-up 100-1129
R450B R450C R450C R450D R451J	321-0709-00 321-231 321-0710-00 321-262 323-322	988 Ω 2.49 k 2.542 k 5.23 k 22.1 k	1/8 w 1/8 w 1/8 w 1/8 w 1/2 w		Prec Prec Prec Prec Prec	1% 1% 1% 1%	1130-up 100-11 <b>2</b> 9 1130-up
R451L R451L R451M R451M R454	323-368 323-0713-00 323-413 323-0714-00 322-298	66.5 k 65.2 k 196 k 192.2 k 12.4 k	1/2 w 1/2 w 1/2 w 1/2 w 1/4 w		Prec Prec Prec Prec Prec	1% 1% 1% 1%	100-1129 1130-up 100-1129 1130-up
R455 R457 R462 R463 R464	323-298 323-385 315-101 301-243 301-123	12.4 k 100 k 100 Ω 24 k 12 k	1/2 w 1/2 w 1/4 w 1/2 w 1/2 w		Prec Prec	1% 1% 5% 5%	
R473 R475 R477 R481 R483	322-310 311-435 322-193 315-333 315-473	16.5 k 7 k 1 k 33 k 47 k	1/4 w 1/4 w 1/4 w 1/4 w	Var	Prec Prec	1% CH 2 VARIABLE 1% 5% 5%	
R501 R501 R502 R504 R509	315-471 315-0241-00 322-322 322-298 322-610	470 Ω 240 Ω 22.1 k 12.4 k 500 k	1/4 w 1/4 w 1/4 w 1/4 w 1/4 w		Prec Prec Prec	5% 5% 1% 1%	100-1129 1130-up
R511 R512 R514 R515 R519	311-086 322-322 322-298 321-269 322-610	2.5 k 22.1 k 12.4 k 6.19 k 500 k	1/2 <b>w</b> 1/4 w 1/4 w 1/8 w 1/4 <b>w</b>	Var	Prec Prec Prec Prec	CH 1 TRIG DC 1 1% 1% 1% 1%	3AL
R523 R525 R527 R531 R531	322-620 311-110 322-620 315-471 315-0241-00	800 k 100 k 800 k 470 Ω 240 Ω	1/4 w 1/4 w 1/4 w 1/4 w	Var	Prec Prec	1% CH I TRIG DC I 1% 5% 5%	.EVEL 100-1129 1130-up

Ckt. No.	Tektronix Part No.		Description				S/N Range
R532 R534 R539 R541 R542	322-322 322-298 322-610 311-086 322-322	22.1 k 12.4 k 500 k 2.5 k 22.1 k	1/4 w 1/4 w 1/4 w 1/2 w 1/4 w	Var	Prec Prec Prec Prec	1 % 1 % 1 % CH 2 TRIG DO 1 %	C BAL
R544 R545 R549 R553 R555	322-298 321-269 322-610 322-620 311-110	12.4 k 6.19 k 500 k 800 k 100 k	1/ <sub>4</sub> w 1/ <sub>8</sub> w 1/ <sub>4</sub> w 1/ <sub>4</sub> w	Var	Prec Prec Prec Prec	1% 1% 1% 1% CH 2 TRIG DO	CLEVEL
R557 R561 R563 R565 R567	322-620 322-481 321-441 311-110 321-441	800 k 1 meg 383 k 100 k 383 k	1/4 w 1/4 w 1/8 w	Var	Prec Prec Prec	1% 1% 1% COMP TRIG D 1%	C LEVEL
R569 R583 R586 R601 R603	322-481 301-473 301-473 315-474 315-473	1 meg 47 k 47 k 470 k 47 k	1/4 w 1/2 w 1/2 w 1/4 w 1/4 w		Prec	1% 5% 5% 5% 5%	
R604 R605 R611 R613 R614	315-203 322-654 315-474 315-473 315-203	20 k 920 Ω 470 k 47 k 20 k	1/4 w 1/4 w 1/4 w 1/4 w 1/4 w		Prec	5% 1% 5% 5%	
R615 R616 R612 R622 R623	322-654 315-103 308-291 315-473 315-102	920 Ω 10 k 2 k 47 k 1 k	1/4 w 1/4 w 3 w 1/4 w 1/4 w		Prec WW	1% 1% 5% 5%	
R630 R631 R632 R633 R635	315-391 308-291 315-473 315-102 308-292	390 Ω 2 k 47 k 1 k 2.2 k	1/4 w 3 w 1/4 w 1/4 w 3 w		ww	5% 5% 5% 5% 5%	Х157-ир
R638 R642 R643 R648 R649	315-103 323-296 322-606 322-604 323-268	10 k 11.8 k 25.6 k 5.03 k 6.04 k	1/4 w 1/2 w 1/4 w 1/4 w 1/2 w		Prec Prec Prec Prec	5% 1% 1% 1%	
R652 R653 R658 R661 R662	323-296 322-606 322-604 Use 321-0122-00 308-293	11.8 k 25.6 k 5.03 k 182 Ω 4 k	1/ <sub>2</sub> w 1/ <sub>4</sub> w 1/ <sub>4</sub> w 1/ <sub>8</sub> w 3 w		Prec Prec Prec WW	1% 1% 1% 1% 5%	

Ckt. No.	Tektronix Part No.		Description				S/N Range
R665 R671 R672 R673 R674	311-169 Use 321-0122-00 308-293 315-101 308-294	100 Ω 182 Ω 4 k 100 Ω 8 k	1/8 w 3 w 1/4 w 3 w	Var	Prec WW WW	CALIBRATE 1% 5% 5% 5%	
R678 R679 R681 R683 R684	315-101 308-294 308-293 301-0101-00 301-182	100 Ω 8 k 4 k 100 Ω 1.8 k	1/4 w 3 w 3 w 1/2 w 1/2 w		WW WW	5% 5% 5% 5% 5%	Х1130-ир
R685 R686 R689 R691 R692	323-298 323-316 301-163 308-231 311-444	12.4 k 19.1 k 16 k 220 Ω 5 Ω	1/2 w 1/2 w 1/2 w 3 w	Var	Prec Prec WW	1% 1% 5% 5% CH 1 RANGE	
R694 R695 R697 R699	311-444 308-290 315-101 315-223	5 Ω 8 Ω 100 Ω 22 k	5 w 1/4 w 1/4 w	Var	ww	CH 2 RANGE 5% 5% 5%	
			Switches				
SW101 SW105 SW105 SW105 SW151 SW201	Unwired  260-600  260-590  260-0590-00  260-0590-00  260-407  260-600	*262-623 se *050-0276-00 *262-0623-02	Lever Rotary Rotary Rotary Toggle Lever		CH CH CH CH	1 (+) AC GND   1 VOLTS/DIV 10   1 VOLTS/DIV 11   1 VOLTS/DIV 12   1 AC STAB   1 () AC GND	00-1129 30-1209 ?10-ир
SW261 SW301 SW305 SW305 SW305 SW351	260-552 260-600 260-590 260-590 U 260-0590-00 260-407	*262-627 se *050-0277-00 *262-0627-02	Reed Lever Rotary Rotary Rotary Toggle		CH CH CH	2 (+) AC GND 2 VOLTS/DIV 10 2 VOLTS/DIV 11 2 VOLTS/DIV 12 2 AC STAB	0-1129 30-1209
SW401 SW461 SW462 SW570 )	260-600 260-552 260-407		Lever Reed Toggle		BAI	2 (—) AC GND NDWIDTH	DC
SW620 }	Use <b>2</b> 60-589	*262-624	Rotary		MC	GGER DDE	
T621	*120-334	Toroid, 7T Bifilar	Transformer				
Electron Tubes							
V114 } V214 }	Use *157-0110-00	7586 Checked (1					
V314 } V414 } V583 V674	Use *157-0110-00 154-187 154-340	7586 Checked (1 6DJ8 7119	pair)				

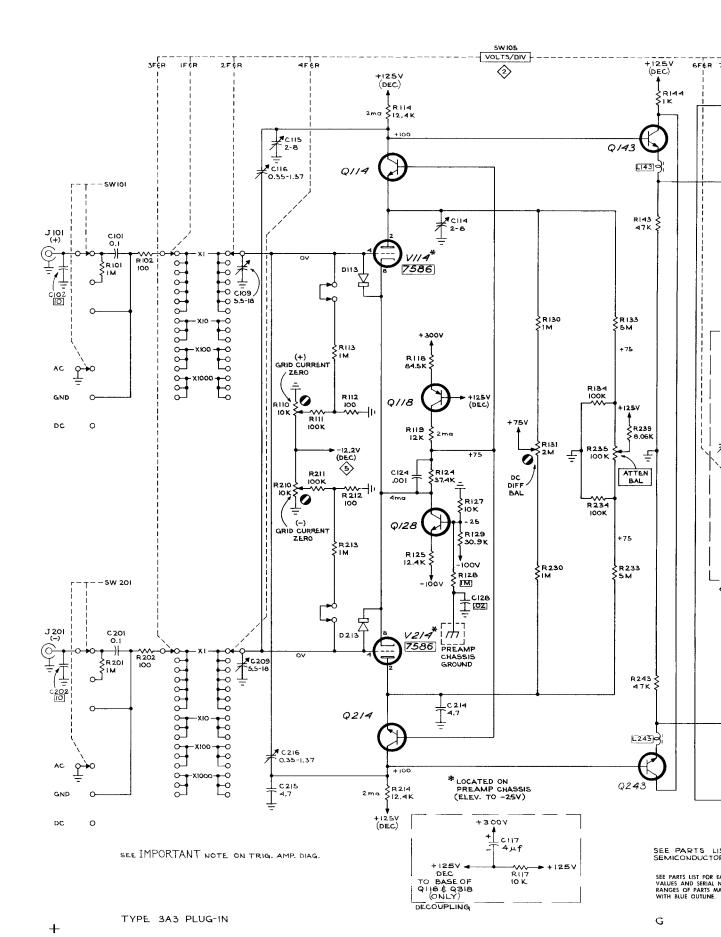

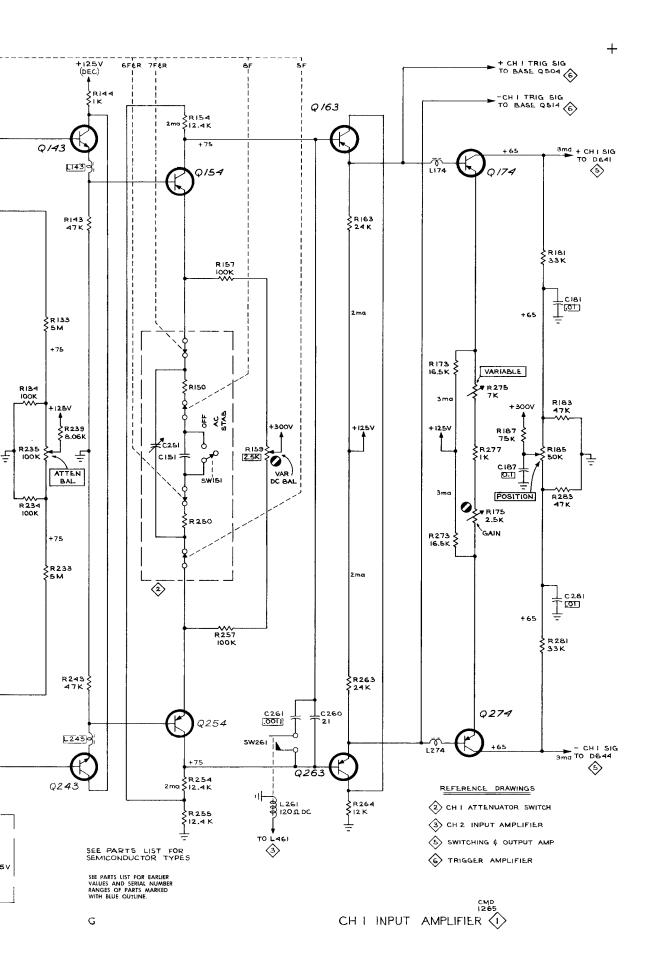


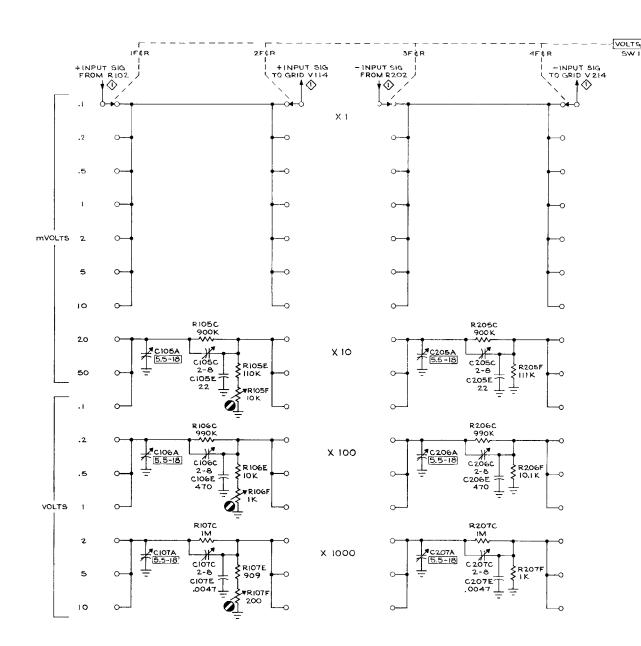


REFERENCE DRAWINGS


CHI INPUT AMPLIFIER


TYPE 3A3 PLUG-IN

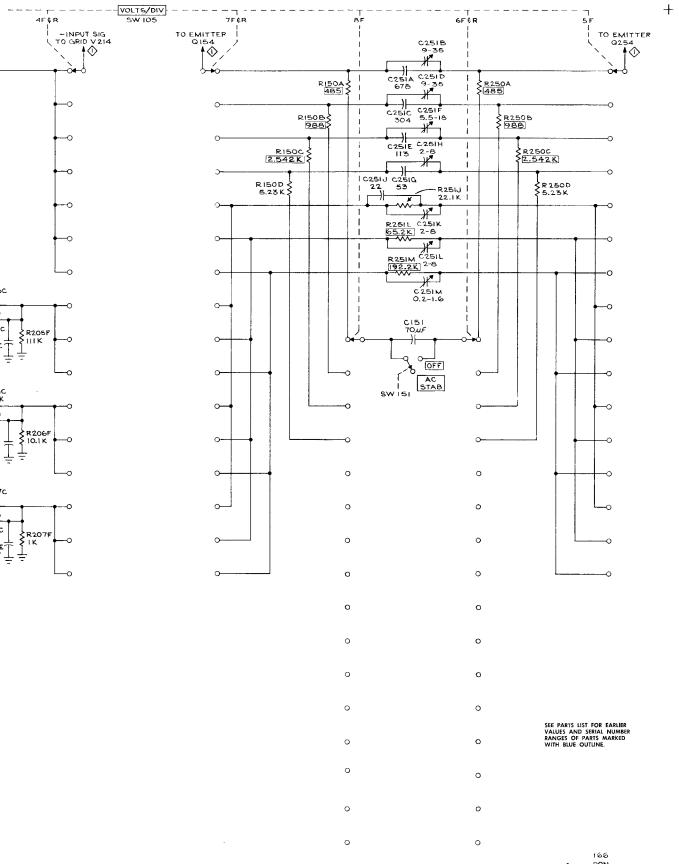

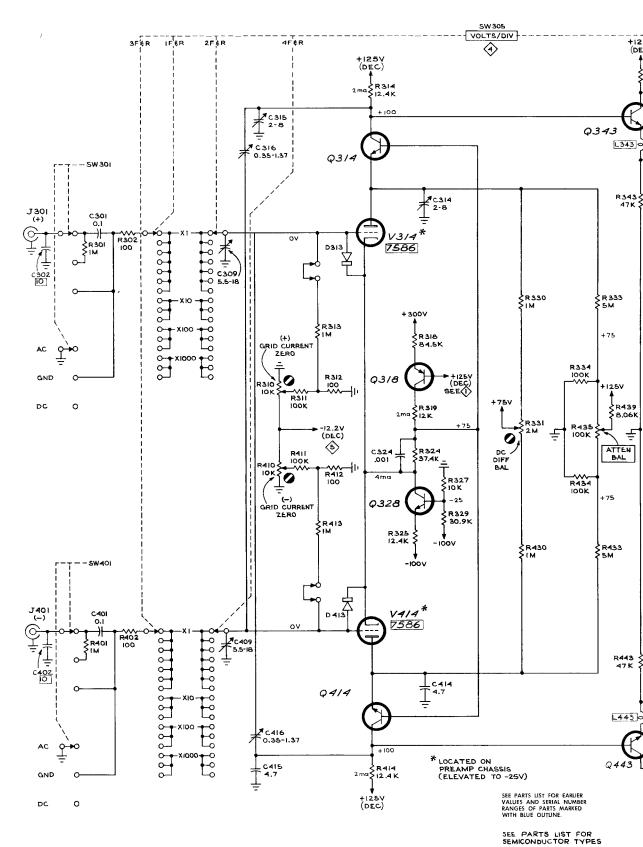


SEE IMPORTANT NOTE ON TRIG, AMP. DIAG.

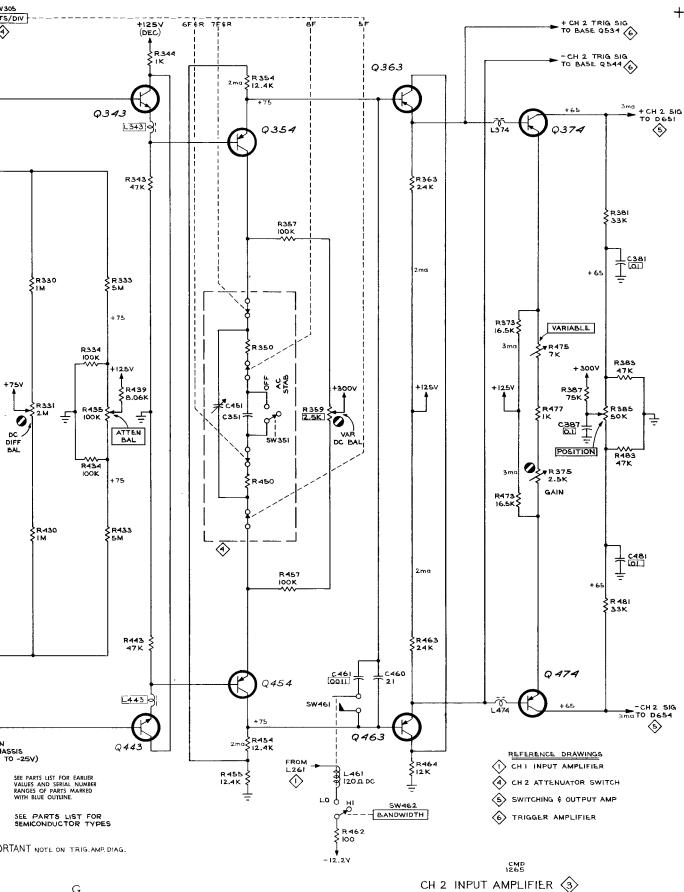


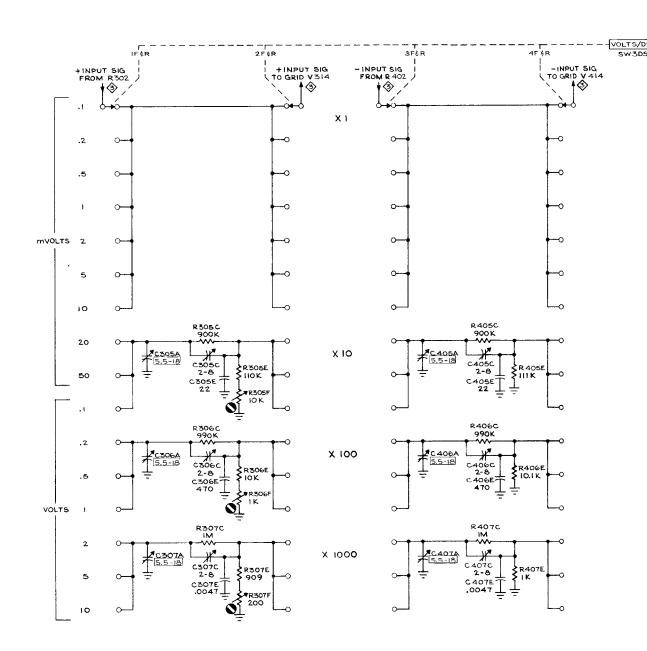



REFERENCE DRAWINGS

CH 2 INPUT AMPLIFIER

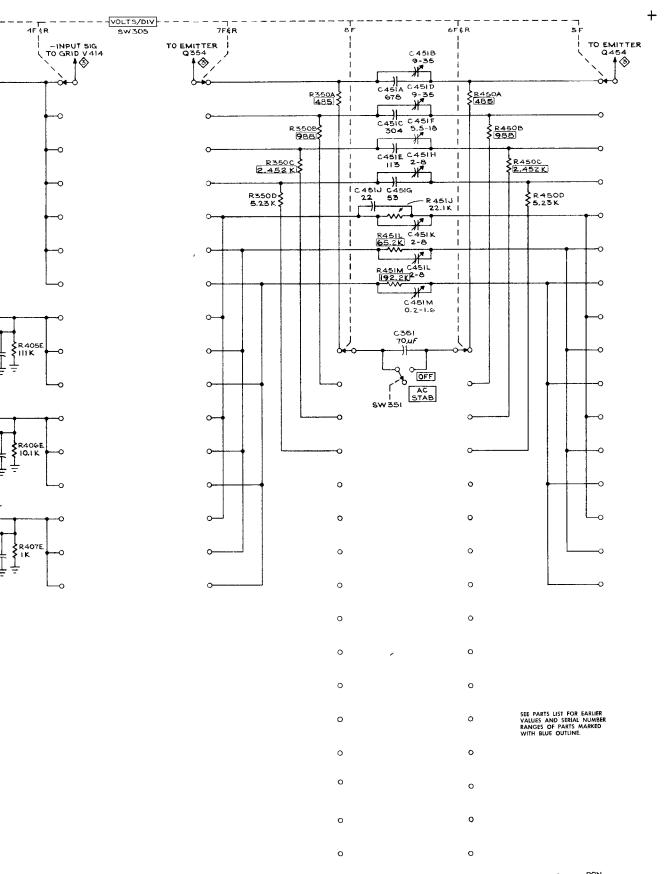

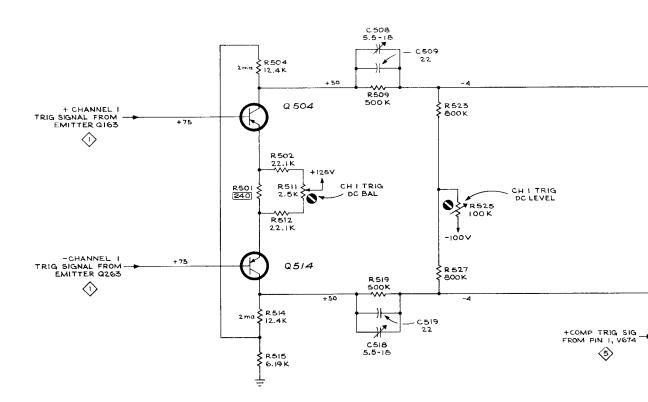

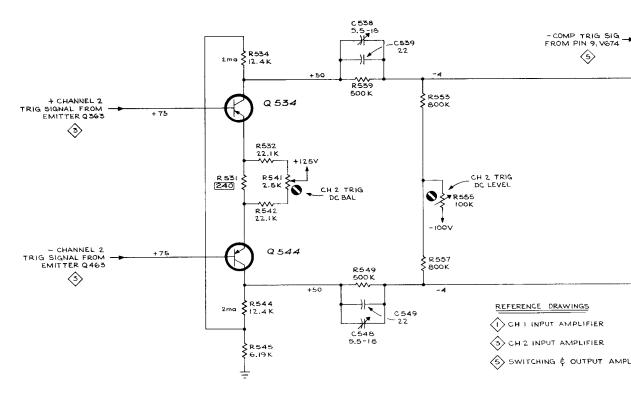

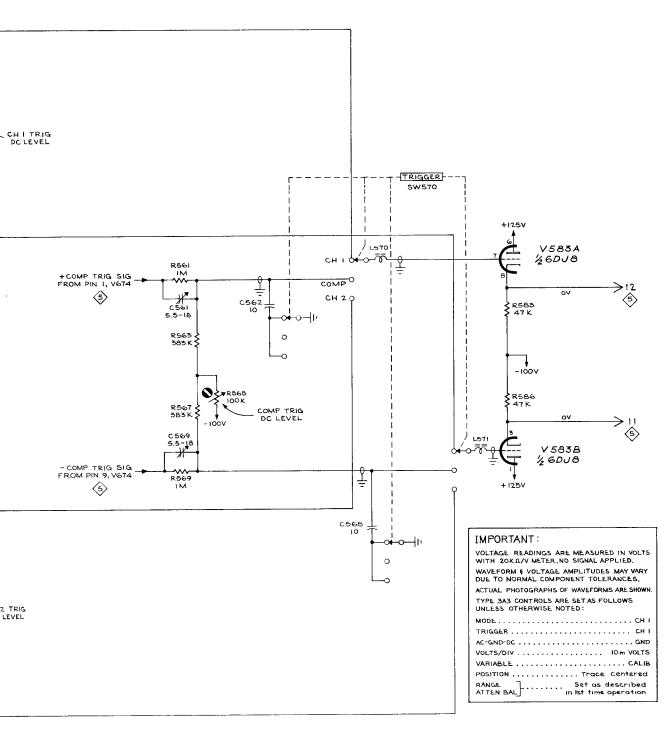


### REFERENCE DRAWINGS

CH I INPUT AMPLIFIER

3 CH 2 INPUT AMPLIFIER

SWITCHING & OUTPUT AMPLIFIER


SEE PARTS LIST FOR EARLIER VALUES AND SERIAL NUMBER RANGES OF PARTS MARKED WITH BLUE OUTLINE.

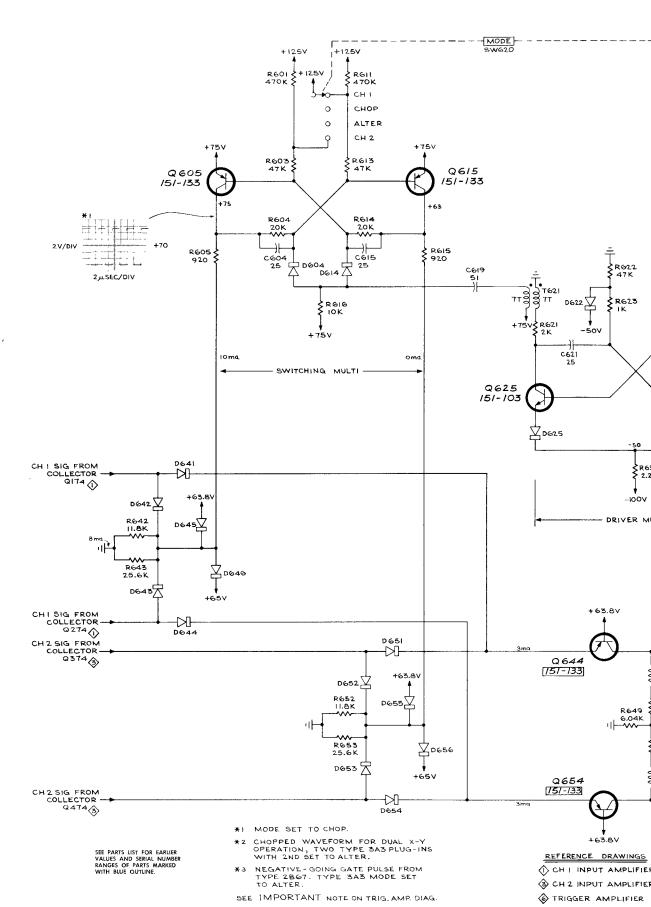



TYPE 3A3 PLUG-IN


+


D

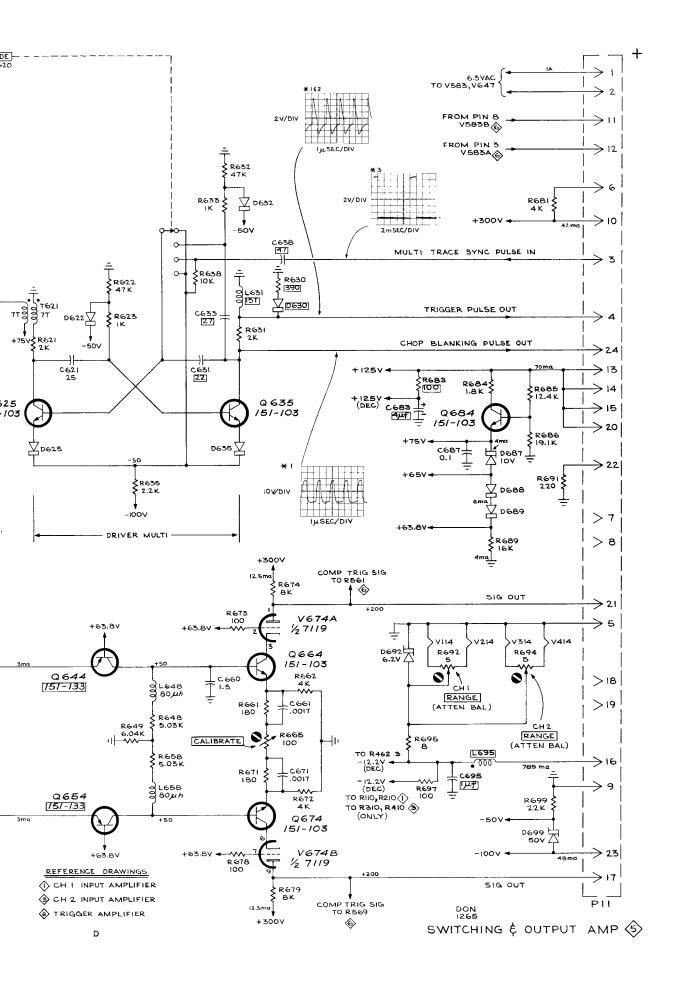


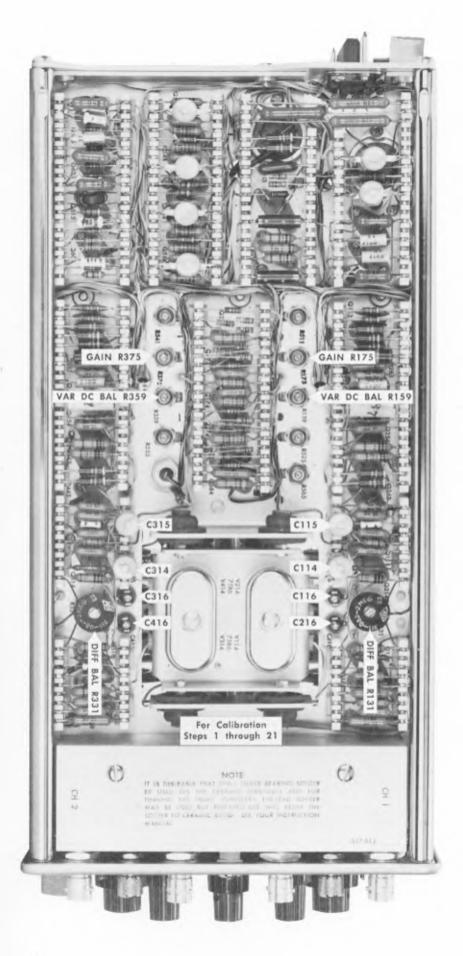


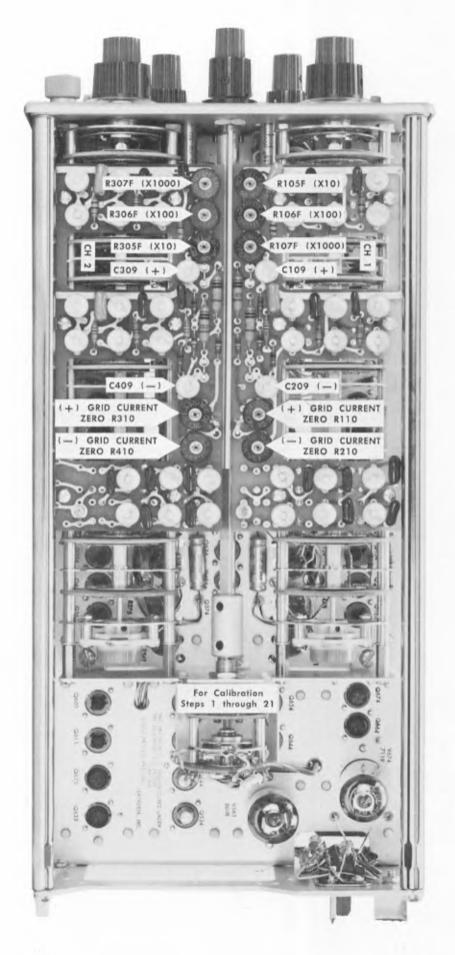

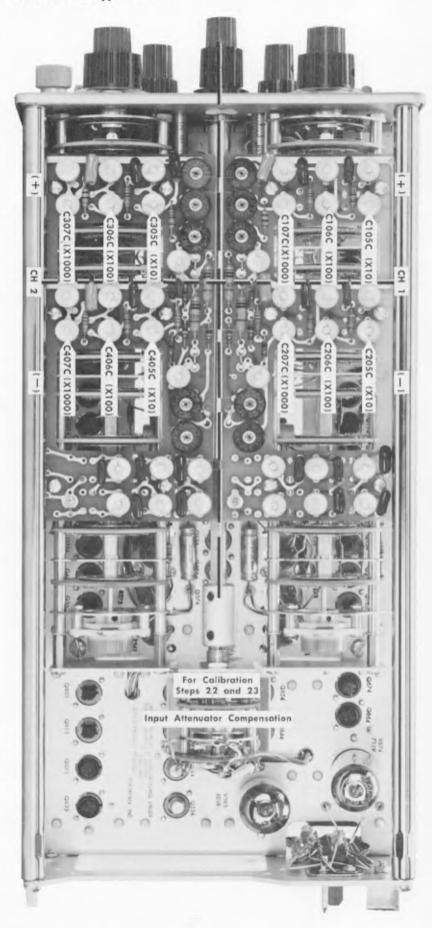

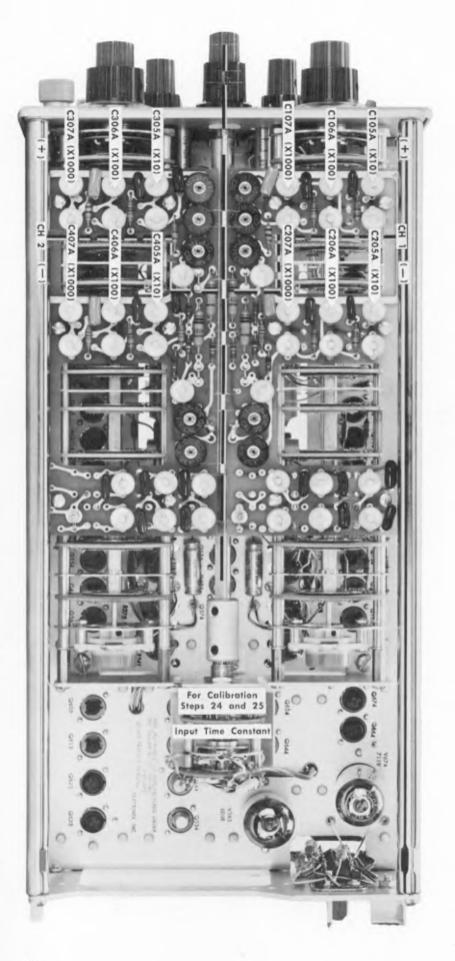

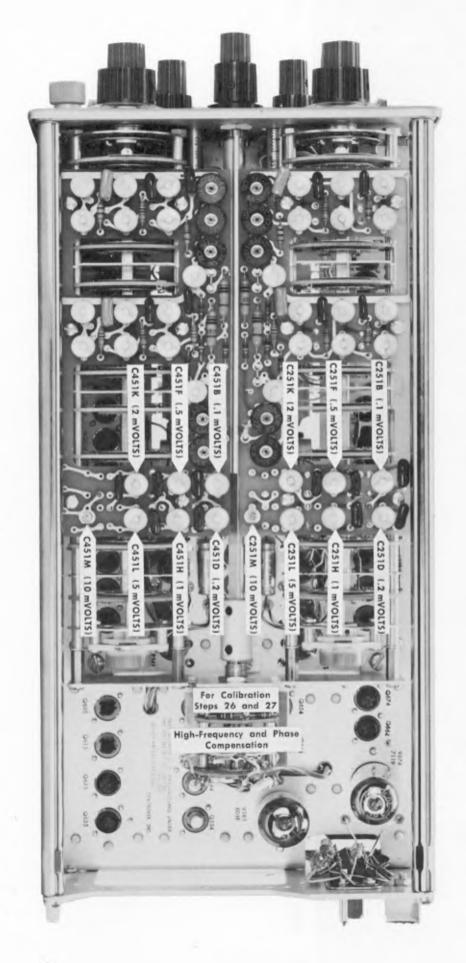

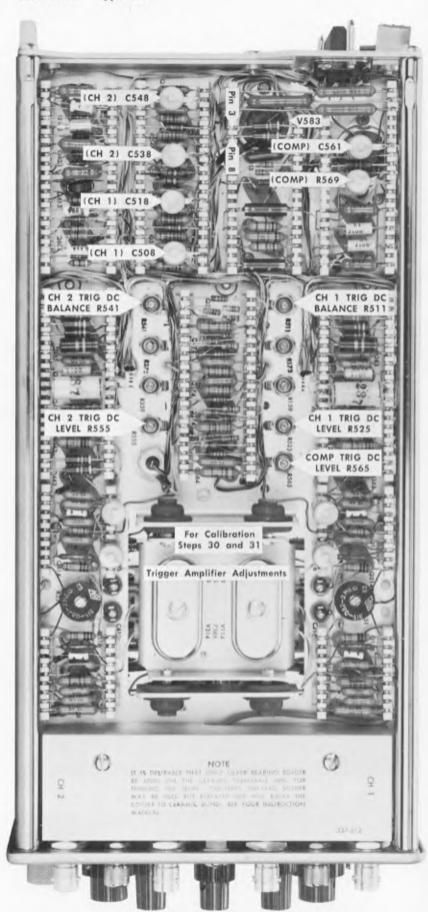

### MANUAL CHANGE INFORMATION

At Tektronix, we continually strive to keep up with latest electronic developments by adding circuit and component improvements to our instruments as soon as they are developed and tested.

Sometimes, due to printing and shipping requirements, we can't get these changes immediately into printed manuals. Hence, your manual may contain new change information on following pages. If it does not, your manual is correct as printed.

## PARTS LIST CORRECTION

CHANGE TO:

**c660** 

281-0529-00

1.5 pF (nominal value)

This is a test selected part and installed only if necessary.

# PARTS LIST CORRECTION

CHANGE TO:

L143, L243, L343, 276-0507-00 Core, Shield Bead

L443, L570, L571